



Figure 13 – Front of Antenna



Figure 14 – Front of Unit





Figure 15 – Back of Unit

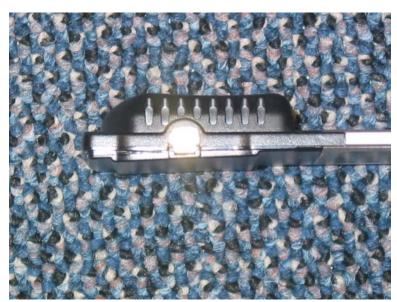


Figure 16 - Side of Unit





Figure 17 – Front of Unit w/External Antenna



Figure 18 – Side of Unit w/External Antenna



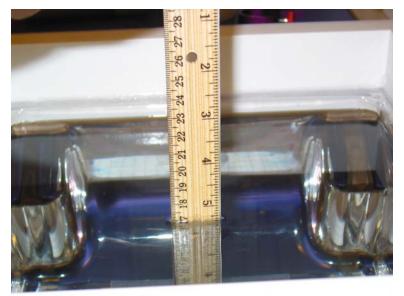


Figure 19 – Body Tissue Depth



## **Appendix D – Probe Calibration Data Sheets**

#### **NCL CALIBRATION LABORATORIES**

Calibration File No.: CP-399

Client.: RFEL

### CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the **NCL CALIBRATION LABORATORIES** by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

Equipment: Miniature Isotropic RF Probe 2450 MHz BODY

Manufacturer: APREL Laboratories

Model No.: E-020

Serial No.: 217

Calibration Procedure: SSI/DRB-TP-D01-032-E020-V2 Project No: RFEB-ALSAS-10U-4087

> Calibrated: 10<sup>th</sup> June 2004 Released on: 11<sup>th</sup> June 2004

This Calibration Certificate is Incomplete Unless Accompanied with the Calibration Results Summary

Released By:



51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6 Division of APREL Lab. TEL: (613) 820-4988 FAX: (613) 820-4161

#### Introduction

This Calibration Report reproduces the results of the calibration performed in line with the SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure. The results contained within this report are for APREL E-Field Probe E-020 217.

#### References

SSI/DRB-TP-D01-032-E020-V2 E-Field Probe Calibration Procedure IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques" SSI-TP-011 Tissue Calibration Procedure

#### **Conditions**

Probe 217 was a new probe taken from stock prior to calibration.

**Ambient Temperature of the Laboratory:** 22 °C +/- 0.5°C **Temperature of the Tissue:** 21 °C +/- 0.5°C

### **Calibration Results Summary**

**Probe Type**: E-Field Probe E-020

Serial Number: 217

Frequency: 2450 MHz

Sensor Offset: 1.56 mm

Sensor Length: 2.5 mm

Tip Enclosure: Ertalyte\*

**Tip Diameter:** <5 mm

Tip Length: 60 mm

Total Length: 290 mm

## Sensitivity in Air

 $\begin{array}{ll} \text{Channel X:} & 1.2 \ \mu\text{V/(V/m)}^2 \\ \text{Channel Y:} & 1.2 \ \mu\text{V/(V/m)}^2 \\ \text{Channel Z:} & 1.2 \ \mu\text{V/(V/m)}^2 \\ \end{array}$ 

**Diode Compression Point:** 95 mV

<sup>\*</sup>Resistive to recommended tissue recipes per IEEE-1528

### **Sensitivity in Body Tissue**

Frequency: 2450 MHz

**Epsilon:** 52.7 (+/-5%) **Sigma:** 1.95 (+/-10%)

ConvF

Channel X: 3.6

Channel Y: 3.6

Channel Z: 3.6

Tissue sensitivity values were calculated using the load impedance of the APREL Laboratories Daq-Paq.


### **Boundary Effect:**

Uncertainty resulting from the boundary effect is less than 2% for the distance between the tip of the probe and the tissue boundary, when less than 2.54mm.


## **Spatial Resolution:**


The measured probe tip diameter is 5 mm (+/- 0.01 mm) and therefore meets the requirements of SSI/DRB-TP-D01-032 for spatial resolution.

## Receiving Pattern 2450 MHz (Air)

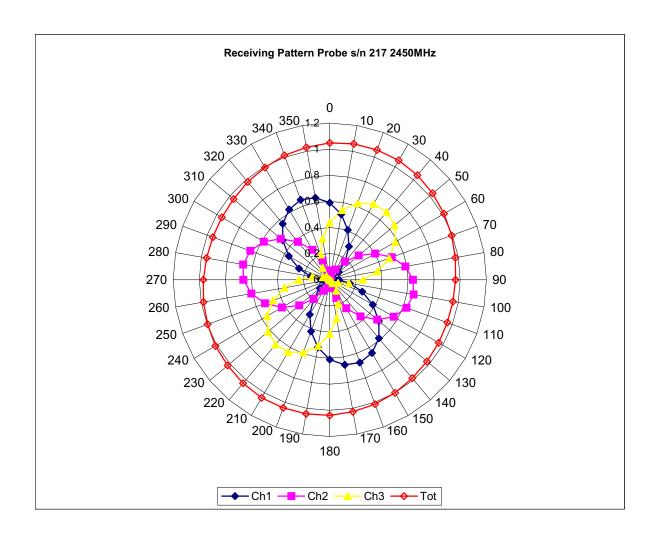


## Isotropy Error 2450 MHz (Air)

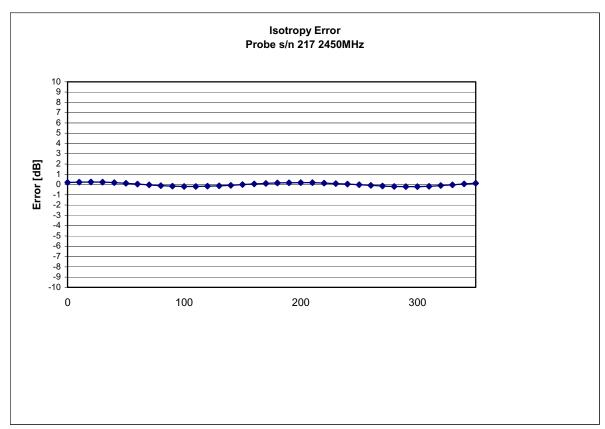

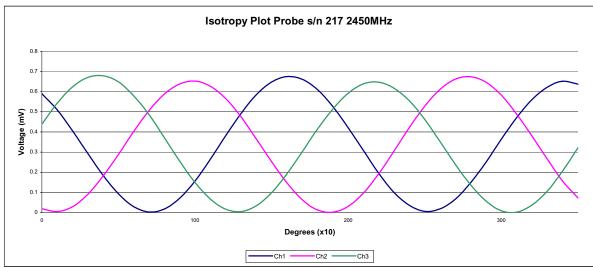


**Isotropicity:** 0.10 dB

## **Dynamic Range**

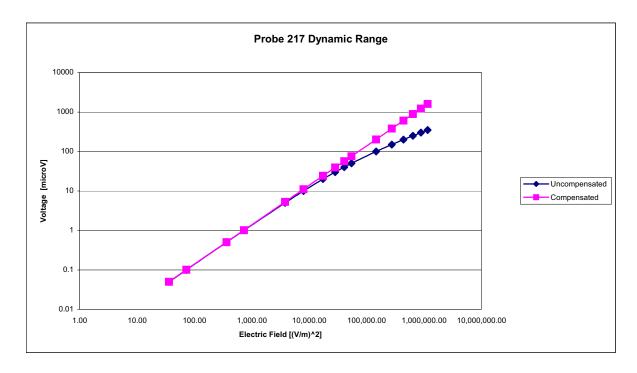

### Video Bandwidth

### **Probe Frequency Characteristics**

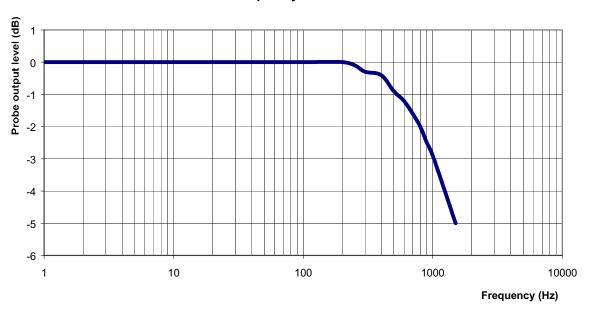

Video Bandwidth at 500 Hz 1 dB Video Bandwidth at 1.02 KHz: 3 dB

### **Conversion Factor Uncertainty Assessment**

Frequency: 2450MHz

**Epsilon:** 52.7 (+/-5%) **Sigma:** 1.95 S/m (+/-10%)

ConvF

**Channel X:** 3.6 7%(K=2)

**Channel Y:** 3.6 7%(K=2)

**Channel Z:** 3.6 7%(K=2)

To minimize the uncertainty calculation all tissue sensitivity values were calculated using a load impedance of 5 M $\Omega$ .

### **Boundary Effect:**

For a distance of 2.4mm the evaluated uncertainty (increase in the probe sensitivity) is less than 2%.

### **Test Equipment**

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List May 2004.



## **Appendix E – Dipole Calibration Data Sheets**

#### NCL CALIBRATION LABORATORIES

Calibration File No: CD-342 Project Number: RFEB-ALSAS-10U-4087

## CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to NRC/NIST.

RFE Validation Dipole

Manufacturer: APREL Laboratories
Part number: ALS-D-2450-S-2

Frequency: 2.45 GHz Serial No: RFE-278

Customer: RFE

Calibrated: 20 February 2004 Released on: 20 February 2004

Released By:

NCL CALIBRATION LABORATORIES

51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6 Division of APREL Lab. TEL: (613) 820-4988 FAX: (613) 820-4161

## **Calibration Results Summary**

The following results relate the Calibrated Dipole and should be used as a quick reference for the user.

#### **Mechanical Dimensions**

Length:

51.5 mm

Height:

30.5 mm

### **Electrical Specification**

SWR:

1.09 U

Return Loss:


-26.8 dB

Impedance:

 $49.0 \Omega$ 

### **System Validation Results**

Frequency	1 Gram	10 Gram	Peak
2.45 GHz	48.07	25.65	95.6

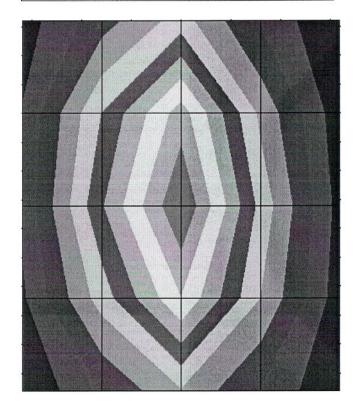

(A)

Approved by:

#### Introduction

This Calibration Report has been produced in line with the SSI Dipole Calibration Procedure SSI-TP-018-ALSAS. The results contained within this report are for Validation Dipole RFE-278. The calibration routine consisted of a three-step process. Step 1 was a mechanical verification of the dipole to ensure that it meets the IEEE/APREL mechanical specifications. Step 2 was an Electrical Calibration for the Validation Dipole, where the SWR, Impedance, and the Return loss were assessed. Step 3 involved a System Validation using the ALSAS-10U, along with Panasonic E-020 130 MHz to 26 GHz E-Field Probe Serial Number 213.

#### References

SSI-TP-018-ALSAS Dipole Calibration Procedure
SSI-TP-016 Tissue Calibration Procedure
IEEE 1528 "Recommended Practice for Determining the Peak Spatial-Average
Specific Absorption Rate (SAR) in the Human Body Due to Wireless
Communications Devices: Experimental Techniques"

#### **Conditions**

Dipole RFE-278 was new taken from stock.

Ambient Temperature of the Laboratory:

22 °C +/- 0.5°C

Temperature of the Tissue:

20 °C +/- 0.5°C

2003

Approved by:

## **Dipole Calibration Results**

#### **Mechanical Verification**

IEEE Length	IEEE Height	Measured Length	Measured Height
51.5 mm	30.4 mm	51.5 mm	30.5 mm

### **Tissue Validation**

Body Tissue 2450 MHz	Measured
Dielectric constant, ε <sub>r</sub>	52.5
Conductivity, σ [S/m]	1.78


203

#### **Electrical Calibration**

Test	Result	
S11 R/L	-26.8 dB	
SWR	1.098 U	
Impedance	49.0 Ω	


The Following Graphs are the results as displayed on the Vector Network Analyzer.

#### **S11 Parameter Return Loss**

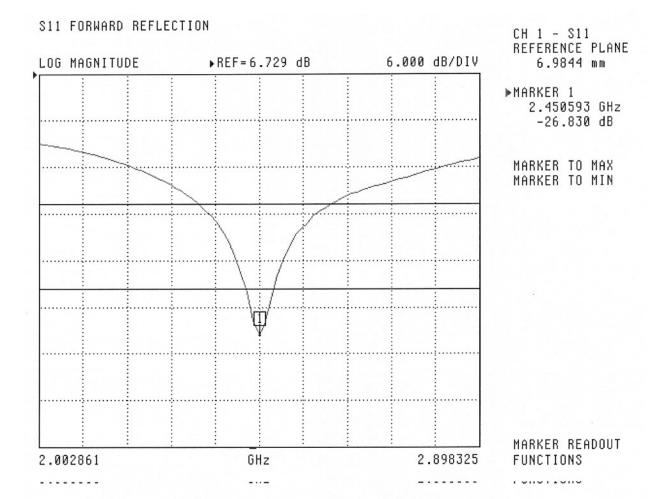


brated by Approved by:

#### **SWR**

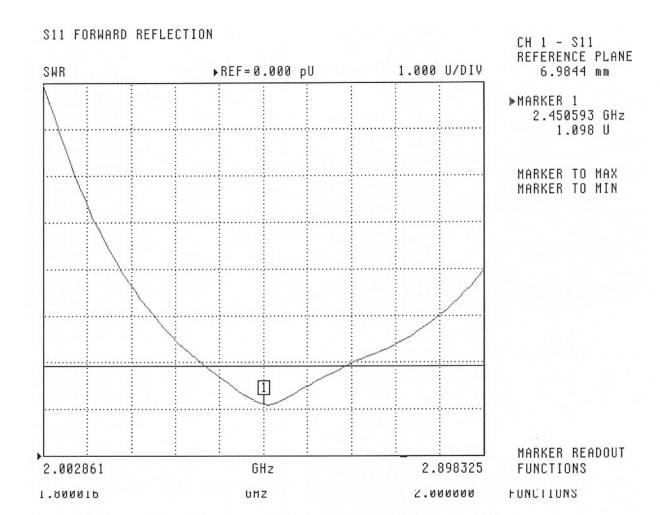


## **Smith Chart Dipole Impedance**

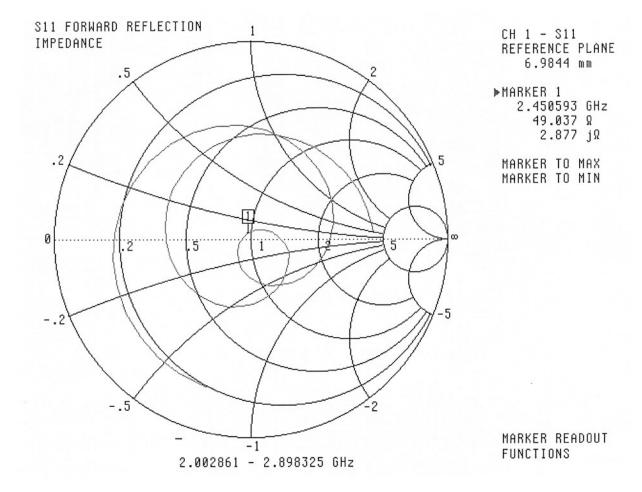

y Appro

## System Validation Results Using the Electrically Calibrated Dipole

Frequency	1 Gram	10 Gram	Peak Above Feed Point
2.45 GHz	48.07	25.65	95.6

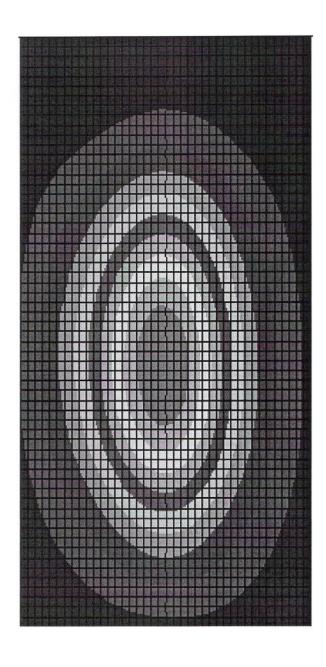

703

## **Test Equipment**

The test equipment used during Probe Calibration, manufacturer, model number and, current calibration status are listed and located on the main APREL server R:\NCL\Calibration Equipment\Instrument List May 2003

Calibrated by

Page 9 of 9



# **Appendix F – Phantom Calibration Data Sheets**

#### NCL CALIBRATION LABORATORIES

Calibration File No.: RFE-273

## CERTIFICATE OF CALIBRATION

It is certified that the equipment identified below has been calibrated in the NCL CALIBRATION LABORATORIES by qualified personnel following recognized procedures and using transfer standards traceable to National Standards.

Thickness of the UniPhantom is 2 mm ± 10% Pinna thickness is 6 mm ± 10%

Resolution:

0.01 mm

Calibrated to: 0.0 mm

Stability:

OK

Accuracy:

< 0.1 mm

Calibrated By: Raven K Feb 17/04.



51 SPECTRUM WAY NEPEAN, ONTARIO CANADA K2R 1E6

Division of APREL Lab. TEL: (613) 820-4988 FAX: (613) 820-4161