Specific Absorption Rate (SAR) Test Report

for

Wistron Corporation

on the

Notebook PC

Model Number: TravelMate C300

Test Report: EME-030975 Date of Report: Aug. 28, 2003 Date of test: Aug. 26, 2003

Total No of Pages Contained in this Report: 97



0597 ILAC MRA

Accredited for testing to FCC Part 15

Tested by:	Kevin Chen	Kenin Ohn
Reviewed by:	Elton Chen	At Ken

Review Date: <u>Aug. 29, 2003</u>

All services undertaken are subject to the following general policy: Reports are submitted for exclusive use of the client to whom they are addressed. Their significance is subject to the adequacy and representative character of the samples and to the comprehensiveness of the tests, examinations or surveys made. This report shall not be reproduced except in full, without written consent of Intertek Testing Services, Taiwan Ltd.



Page 2 of 97

Table of Contents

Table of Contents	2
STATEMENT OF COMPLIANCE	3
1.0 JOB DESCRIPTION	
1.1 Client Information	
1.3 Test plan reference	
1.4 System test configuration	
1.4.1 System block diagram & Support equipment	
1.4.3 Test Condition	6
1.5 Modifications required for compliance	
1.6 Additions, deviations and exclusions from standards	6
2.0 SAR EVALUATION	7
2.1 SAR Limits	7
2.2 Configuration Photographs	
2.3 SAR measurement system	
2.4 SAR measurement system validation	17
3.0 TEST EQUIPMENT	21
3.1 Equipment List	
3.2 Body Tissue Simulating Liquid for evaluation test	
3.3 E-Field Probe Calibration	
3.4 Measurement Uncertainty	
3.5 Measurement Traceability	
4.0 WARNING LABEL INFORMATION - USA	26
REFERENCES	27
DOCUMENT HISTORY	28
APPENDIX A - SAR Evaluation Data	29
APPENDIX B – 2450MHz body liquid Calibration Data	66
Photographs	68
APPENDIX C - E-Field Probe Certificate and Calibration Data	75



Page 3 of 97

STATEMENT OF COMPLIANCE

The Wistron sample device, model # TravelMate C300 was evaluated in accordance with the requirements for compliance testing defined in FCC OET Bulletin 65, Supplement C (Edition 01-01). Testing was performed at the Intertek Testing Services facility in Hsinchu, Taiwan.

For the evaluation, the dosimetric assessment system INDEXSAR SARA2 was used. The phantom employed was the box phantom of 2mm thick in one wall. The total uncertainty for the evaluation of the spatial peak SAR values averaged over a cube of 1g tissue mass had been assessed for this system to be $\pm 27.5\%$.

The device was tested at their maximum output power declared by the Wistron

In summary, the maximum spatial peak SAR value for the sample device averaged over 1g was found to be:

Phantom	Position	SAR_{1g} , mW/g
2mm thick box phantom wall	EUT front to the phantom, 0 mm separation.	0.462 mW/g.

In conclusion, the tested Sample device was found to be in compliance with the requirements defined in OET Bulletin 65, Supplement C (Edition 01-01) for body configurations.



Page 4 of 97

1.0 JOB DESCRIPTION

1.1 Client Information

The TravelMate C300 has been tested at the request of:

Company: Wistron Corporation

No. 10-1, Li-hsin Road I, Science-based Industrial Park

Hsinchu 300, Taiwan

1.2 Equipment under test (EUT)

Product Descriptions:

Equipment	Notebook PC		
Trade Name	Wistron	Model No:	TravelMate C300
FCC ID	PU5MS2140B	S/N No.	Not Labeled
Category	Proble	RF Exposure	Uncontrolled Environment
Frequency Band	2412 – 2462 MHz	System	DSSS

EUT Antenna Description							
Type PIFA Configuration Fixed							
Dimensions	Dimensions 271.5 x 325mm Gain 2.89 dBi						
Location	Embedded						

Use of Product : Wireless Data Communication

Manufacturer: Wistron

Production is planned: [X] Yes, [] No

EUT receive date: Aug. 22, 2003

EUT received condition: Good operating condition prototype.

Test start date: Aug. 26, 2003

Test end date: Aug. 26, 2003



Page 5 of 97

1.3 Test plan reference

FCC Rule: Part 2.1093, FCC's OET Bulletin 65, Supplement C (Edition 01-01)

1.4 System test configuration

1.4.1 System block diagram & Support equipment

	Support Equipment						
Item#	Item # Equipment Model No. S/N						
1	1 N/A N/A N/A						

The RF interface of EUT is mini PCI.

The EUT uses a RF modular, FCC ID: PD9WM3B2100.

There are two antennas embedded in the EUT, one is transmitted only, and the other is received only, and we only measured the transmit antenna for all test items.





Page 6 of 97

1.4.3 Test Condition

During tests the worst-case data (max RF coupling) was determined with following conditions:

Usage	Operates with a portable computer	Distance between antenna axis at the joint and the liquid surface:	Laptop is touching the Phantom in bottom position, separating 0mm in front position	
Simulating human Head/ Body/Hand	Body	EUT Battery	Device is powered from host computer through battery.	
Conducted	Channel	Frequency MHz	Before SAR Test (dBm)	After SAR Test (dBm)
output Power	Low Channel - 1	2412	14.53	14.57
	Mid Channel - 6	2437	14.03	14.23
	High Channel- 11	2462	13.03	13.05

The spatial peak SAR values were assessed for lowest, middle and highest operating channels, defined by the manufacturer.

The conducted output power was measured before and after the test using a diode detector, oscilloscope and signal generator.

Run the test program "shortcut to crtu" under Windows OS. The EUT was transmitted continuously during the test.

After verifying the maximum output power, we found the maximum output power was occurred at 11Mbps data rate.

All the test data were performed under the above transmission rate.

1.5 Modifications required for compliance

Intertek Testing Services implemented no modifications.

1.6 Additions, deviations and exclusions from standards

The phantom employed was the box phantom of 2mm thick in vertical wall.



Page 7 of 97

2.0 SAR EVALUATION

2.1 SAR Limits

The following FCC limits for SAR apply to devices operate in General Population/Uncontrolled Exposure environment:

EXPOSURE	SAR
(General Population/Uncontrolled Exposure environment)	(W/kg)
Average over the whole body	0.08
Spatial Peak (1g)	1.60
Spatial Peak for hands, wrists, feet and ankles (10g)	4.00



Report No.: EME-030975 Page 8 of 97 FCC ID.: PU5MS2140B

2.2 Configuration Photographs

SAR Measurement Test Setup

Test System






Page 9 of 97

SAR Measurement Test Setup

Front side of Laptop facing phantom touching

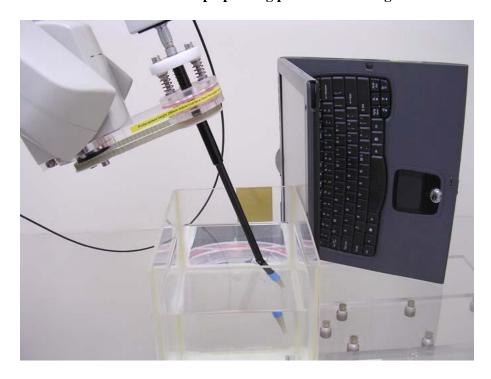

Front side of Laptop facing phantom touching – Zoom In







Page 10 of 97

SAR Measurement Test Setup

Front side of Laptop facing phantom, 15 mm separation

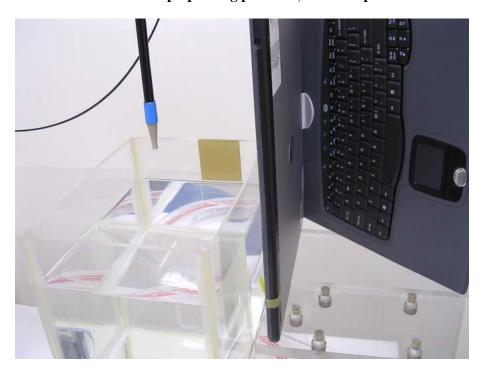


Front side of Laptop facing phantom, 15 mm separation – Zoom In-1

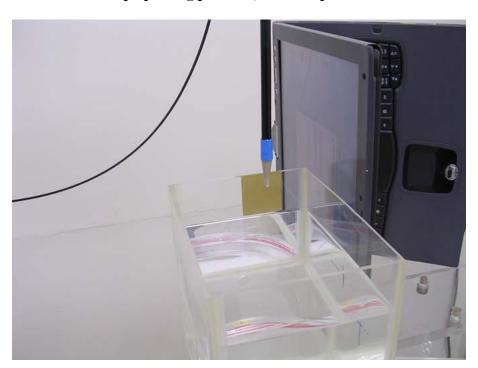



Page 11 of 97

Front side of Laptop facing phantom, 15 mm separation – Zoom In-2

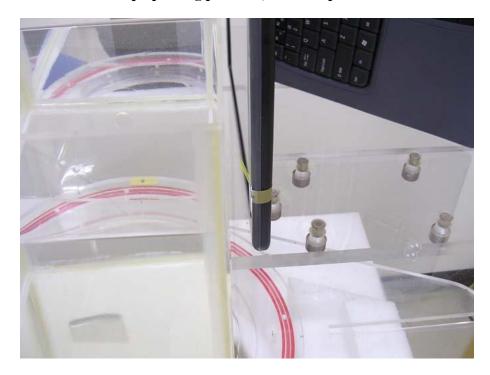




Page 12 of 97

SAR Measurement Test Setup

EUT rear to phantom, 0 mm separation

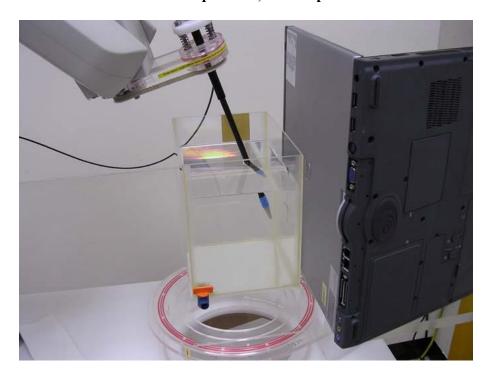

EUT rear to phantom, 0 mm separation – **Zoom** In





Page 13 of 97

SAR Measurement Test Setup

EUT rear to phantom, 15 mm separation



EUT rear to phantom, 15 mm separation – Zoom In






Page 14 of 97

SAR Measurement Test Setup

EUT top to phantom, 0 mm separation

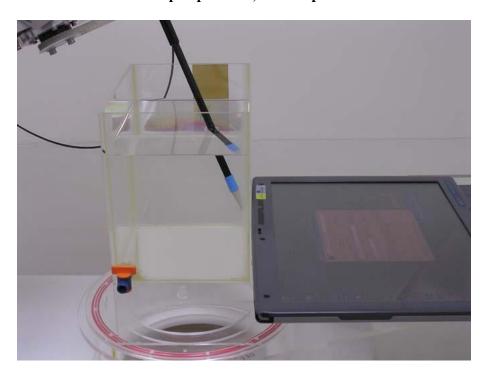

EUT top to phantom, 0 mm separation – **Zoom** In





Page 15 of 97

SAR Measurement Test Setup

EUT top to phantom, 15 mm separation



EUT top to phantom, 15 mm separation – Zoom In





Page 16 of 97

2.3 SAR measurement system

Robot system specification

The SAR measurement system being used is the IndexSAR SARA2 system, which consists of a Mitsubishi RV-E2 6-axis robot arm and controller, IndexSAR probe and amplifier and SAM phantom Head Shape. The robot is used to articulate the probe to programmed positions inside the phantom head to obtain the SAR readings from the DUT.

The system is controlled remotely from a PC, which contains the software to control the robot and data acquisition equipment. The software also displays the data obtained from test scans.

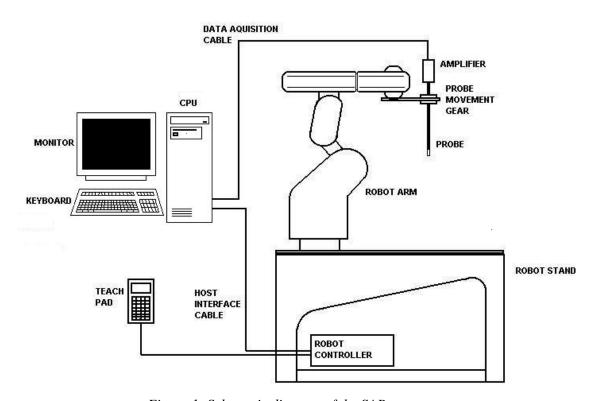


Figure 1: Schematic diagram of the SAR measurement system

The position and digitised shape of the phantom heads are made available to the software for accurate positioning of the probe and reduction of set-up time.

The SAM phantom heads are individually digitised using a Mitutoyo CMM machine to a precision of 0.02mm. The data is then converted into a shape format for the software, providing an accurate description of the phantom shell.

In operation, the system first does an area (2D) scan at a fixed depth within the liquid from the inside wall of the phantom. When the maximum SAR point has been found, the system will then carry out a 3D scan centred at that point to determine volume averaged SAR level.



Page 17 of 97

2.4 SAR measurement system validation

Prior to the assessment, the system was verified to the $\pm 10\%$ of the specifications by using the system validation equipments. The validation was performed at 2450 MHz on the bottom side of box phantom.

Procedures

The SAR evaluation was performed with the following procedures:

- a. The SAR distribution was measured at the exposed side of the bottom of the box phantom and was measured at a distance of 8 mm from the inner surface of the shell. The feed power was 1/4W.
- b. The dimension for this cube is 32 mm x 32 mm x 34 mm was assessed by measuring 5 x 5 x 7 points. On the basis of this data set, the spatial peak SAR value was evaluated with the following procedure:
 - i) The data at the surface were extrapolated, since the center of the dipoles is 3 mm away from the tip of the probe and the distance between the surface and the lowest measurement point is 5 mm. The extrapolation was based on a least square algorithm. A polynomial of the fourth order was calculated through the points in Z-axes. This polynomial was then used to evaluate the points between the surface and the probe tip.
 - ii) The maximum interpolated value was searched with a straightforward algorithm. Around this maximum, the SAR values averaged over the spatial volumes (1g or 10g) were computed using the 3-D spline interpolation algorithm. The 3-D spline is composed of three one-dimensional splines with the "Not a knot" condition (in x, y and z directions). The volume was integrated with the trapezoidal algorithm. 1000 points (10 x 10 x 10) were interpolated to calculate the average.
 - iii) All neighboring volumes were evaluated until no neighboring volume with a higher average value was found.

System Validation (2450 MHz Head)							
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$							
2450	CW	52.4	50.16	-5.92%	19		

Test Results

The results on the following page(s) were obtained when the device was tested in the condition described in this report. Detailed measurement data and plots, which reveal information about the location of the maximum SAR with respect to the device, are reported in Appendix A.



Page 18 of 97

Measurement Results

Trade Name:	Wistron		Mo	odel No.:	TravelMate (C300	
Serial No.:	Not Labl	led Te		st Engineer:	gineer: Kevin Chen		
	TEST CONDITIONS						
Ambient Temperature 20 °C		20 °C		Relative Humidity		55 %	
Test Signal Source		Test Mode		Signal Modulation		DSSS	
Output Power Before		See page 5		Output Power Af	ter SAR	See page 5	
SAR Test				Test			
Test Duration		22 min. each scar	n	Number of Batte	ry Change	1	



Page 19 of 97

	EUT Position						
Channel (MHz)	Operating Mode	Crest Factor	Description	Distance (mm)	Measured SAR _{1g} (mW/g)	Plot Number	
2437	DSSS	1	Front to phantom	0	0.313	1	
2412	DSSS	1	Front to phantom	0	0.462	2	
2462	DSSS	1	Front to phantom	0	0.178	3	
2437	DSSS	1	Front to phantom	15	Note 2	4	
2412	DSSS	1	Front to phantom	15	Note 2	5	
2462	DSSS	1	Front to phantom	15	Note 2	6	
2437	DSSS	1	Rear to phantom	0	0.257	7	
2412	DSSS	1	Rear to phantom	0	0.310	8	
2462	DSSS	1	Rear to phantom	0	Note 2	9	
2437	DSSS	1	Rear to phantom	15	Note 2	10	
2412	DSSS	1	Rear to phantom	15	Note 2	11	
2462	DSSS	1	Rear to phantom	15	Note 2	12	
2437	DSSS	1	Top to phantom	0	0.204	13	
2412	DSSS	1	Top to phantom	0	0.222	14	
2462	DSSS	1	Top to phantom	0	0.150	15	
2437	DSSS	1	Top to phantom	15	Note 2	16	
2412	DSSS	1	Top to phantom	15	Note 2	17	
2462	DSSS	1	Top to phantom	15	Note 2	18	

Note: 1. Configuration at middle channel with more than –3dB of applicable limit.

^{2.} The measurement was only performed in Area Scan due to scanning system couldn't continue performing Zoom Scan with such a low SAR distribution.



Page 20 of 97

System performance check (2450 MHz Head)							
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$							
2450	CW	52.4	47.68	-9.01%	20		

Note: a) Worst case data were reported

b) Uncertainty of the system is not included



Page 21 of 97

3.0 TEST EQUIPMENT

3.1 Equipment List

The Specific Absorption Rate (SAR) tests were performed with the INDEXSAR SARA2 SYSTEM.

The following major equipment/components were used for the SAR evaluations:

8 J	SAR Measurement System		
EQUIPMENT	SPECIFICATIONS	S/N #	LAST CAL. DATE
Balanced Validation dipole	2450MHz	0048	N/A
Controller	Mitsubishi CR-E116	F1008007	N/A
Robot	Mitsubishi RV-E2	EA009002	N/A
	Repeatability: ± 0.04mm; Number of Axes: 6		
E-Field Probe	IXP-050	0114	09/06/2002
	Frequency Range: Probe outer diameter: 5 mm; Leng tip and the dipole center: 3 mm	gth: 350 mm; Distar	nce between the probe
Data Acquisition	SARA2	N/A	N/A
	Processor: Pentium 4; Clock speed: 1.5GHz; OS: V SARA2 ver. 0.401N;	Vindows XP; I/O: t	wo RS232; Software:
Phantom	2mm wall thickness box phantom	N/A	N/A
	Shell Material: clear Perspex; Thickness: 2 ± 0.1 mm mm ³ ; Dielectric constant: less than 2.85 above 500M		00 x 200 (W x L x D)
Device holder	Material: clear Perspex; Dielectric constant: less than 2.85 above 500MHz	N/A	N/A
Simulated Tissue	Mixture	N/A	N/A
	Please see section 3.2 for details		
RF	Boonton 4231A with 51011-EMC power sensor	79401-32482	03/21/2003
Power Meter	Frequency Range: 0.03 to 8 GHz, <24dBm		
RF	INDEXSAR VTL5400	0302	01/23/2003
Power Amplifier	10MHz to 2.5GHz, Gain >30dB		
Directional	INDEXSAR VDC0830-20	0302	05/19/2003
Coupler	0.8 to 3 GHz, Max. Power<500W		
Vector Network Analyzer	HP 8753B HP 85046A	2807J04037 2729A01958	07/04/2003
	300k to 3GHz		
Signal Generator	НР	3847U00403	09/19/2003
	9k to 4GHz, <120dBuV		
Crystal Detector	Agilent 8472B 10MHz to 18GHz	MY42240243	N/A
Two Channel Digital Storage Oscilloscope	Tektronix TDS1012	C031679	Aug. 16, 2003



Page 22 of 97

3.2 Body Tissue Simulating Liquid for evaluation test

The dielectric parameters were verified prior to assessment using the HP 85046A dielectric probe kit and the HP 8753B network Analyzer. The dielectric parameters were:

Frequency (MHz)	Temp. (°C)	e _r / Relative Permittivity			s / Conductivity (mho/m)			r *(kg/m ³)
2450	22.5	measured	target	$\Delta(\pm 5\%)$	measured	target	$\Delta(\pm 5\%)$	1000
2430	22.3	51.38	52.7	-2.5%	1.96	1.95	1.95%	1000

^{*} Worst-case assumption

Test data is included in Appendix B.

Head Tissue Simulating Liquid for System performance Check test

The dielectric parameters were verified prior to assessment using the HP 85046A dielectric probe kit and the HP 8753B network Analyzer. The dielectric parameters were:

Frequency (MHz)	Temp. (°C)	e _r / Relative Permittivity			s / Conductivity (mho/m)			r *(kg/m³)
2450	23.7	measured	target	$\Delta(\pm 5\%)$	measured	target	$\Delta(\pm 5\%)$	1000
2430	23.1	39.02	39.2	-0.46%	1.82	1.80	1.11	1000

^{*} Worst-case assumption



Page 23 of 97

3.3 E-Field Probe Calibration

Probe calibration factors are included in Appendix C.



Page 24 of 97

3.4 Measurement Uncertainty

The uncertainty budget has been determined for the INDEXSAR SARA2 measurement system according to IEEE P1528 documents [3] and is given in the following table. The extended uncertainty (95% confidence level) was assessed to be 27.5%

Uncertainty Component	Sec.	(dB)	Tol.(+/-)	(%)	Prob. Dist.	Divisor (descript	Divisor (value)	c1	Standard Uncertainty (%)	
Measurement System										
Probe Calibration	E 1.1			10	N	1 or k	2	1	5.00	25.00
Axial Isotropy	E 1.2	0.25	5.93	5.93	R	√3	1.73	0	0.00	0.00
Hemispherical Isotropy	E 1.2	0.45	10.92	10.92	R	√3	1.73	1	6.30	39.73
Boundary effects	E 1.3		4	4.00	R	√3	1.73	1	2.31	5.33
Linearity	E 1.4	0.04	0.93	0.93	R	√3	1.73	1	0.53	0.29
System Detection Limits	E 1.5		1	1.00	R	√3	1.73	1	0.58	0.33
Readout Electronics	E 1.6		1	1.00	N	1 or k	1.73	1	1.00	1.00
Response time	E 1.7		0	0.00	R	√3	1.73	1	0.00	0.00
Integration time	E 1.8		1.8	1.80	R	√3	1.73	1	1.04	1.08
RF Ambient Conditions	E 5.1		3	3.00	R	√3	1.73	1	1.73	3.00
Probe Positioner Mechanical Tolerance	E 5.2		0.6	0.60	R	√3	1.73	1	0.35	0.12
Probe Position wrt. Phantom Shell	E 5.3		5	5.00	R	√3	1.73	1	2.89	8.33
SAR Evaluation Algorithms	E 4.2		8	8.00	R	√3	1.73	1	4.62	21.33
Test Sample Related										
Test Sample Positioning	E 3.2.1		10	10.00	R	√3	1.73	1	5.77	33.33
Device Holder Uncertainty	E 3.1.1		10	10.00	R	√3	1.73	1	5.77	33.33
Output Power Variation	E 5.6.2		5	4.00	R	√3	1.73	0.5	2.89	8.33
Phantom and tissue Parameters			- '			•				
Phantom Uncertainty (shape and thickness)	E 2.1		4	4.00	R	√3	1.73	0.5	1.15	1.33
Liquid conductivity (Deviation from target)	E 2.2		5	5.00	R	√3	1.73	0.5	1.44	2.08
Liquid conductivity (Meas. Uncertainty)	E 2.2		10	10.00	R	√3	1.73	0.5	2.89	8.33

Combined standard uncertainty

RSS



Page 25 of 97

3.5 Measurement Traceability

All measurements described in this report are traceable to Chinese National Laboratory Accreditation (CNLA) standards or appropriate national standards.



Page 26 of 97

4.0 WARNING LABEL INFORMATION - USA

See user manual.



Page 27 of 97

REFERENCES

- [1] ANSI, ANSI/IEEE C95.1-1991: IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3kHz to 300 GHz, The Institute of electrical and Electronics Engineers, Inc., New York, NY 10017, 1992
- [2] Federal Communications Commission, "Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields", OET Bulletin 65, FCC, Washington, D.C. 20554, 1997
- [3] IEEE Standards Coordinating Committee 34, "DRAFT Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques", IEEE Std 1528-200X, Draft CD 1.0 September 15, 2002



Page 28 of 97

DOCUMENT HISTORY

Revision/ Job Number	Writer Initials	Date	Change
N/A	J.C	Aug. 28, 2003	Original document
EME-030975	J.C.	Sep. 22, 2003	Zoom Scan



Page 29 of 97

APPENDIX A - SAR Evaluation Data

Power drift is the measurement of power drift of the device over one complete SAR scan.

To assess the drift of the power of the device under test, a SAR measurement was made in the middle of the zoom scan volume at the start of the scan and a measurement at this point was then also made after the measurement scan. The difference between the two measurements should be less than 5%.



Page 30 of 97

Plot #1 (1/2)

Date / Time:2003/8/26Position:front 0mmFilename:c3002437front0Phantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:front.csvPower Level:14.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 \mathbf{X} \mathbf{Y} \mathbf{Z} 532 494 450 Air **Cal Factors:** 20 **DCP** 20 20 .528 .528 Lin .528

Amp Gain: 2 **Averaging:** 3

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor= 1



Page 31 of 97

Plot #1 (2/3)

Date / Time:2003/8/26Position:front 0mmFilename:c3002437front0Phantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:front.csvPower Level:14.03dBm

ZOOM SCAN RESULTS:

Spot SAR (W/kg):	Start Scan	End Scan
Spot SAK (W/kg).	0.076	0.079


Change during 3.92 Scan (%) 15.85


Max SAR (W/kg)


1g	10g
0.313	0.134

Location of Max (mm):

X	Y	Z
75.1	-22.0	-136.1

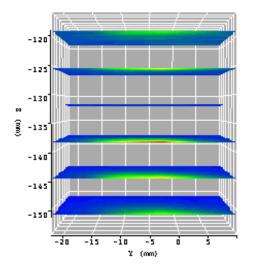

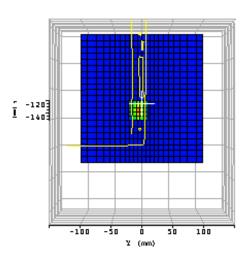





Page 32 of 97

Plot #1 (3/3)

Date / Time:2003/8/26Position:front 0mmFilename:c3002437front0Phantom:HeadBox1.csv


Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:front.csvPower Level:14.03dBm

AREA SCAN:

Scan Extent:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-175.0	-115.0	6.0

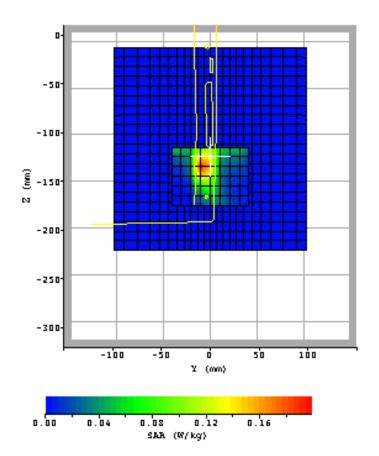



Page 33 of 97

Plot #2 (1/3)

Date / Time:2003/8/26Position:front 0mmFilename:c3002412front0Phantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:front.csvPower Level:14.53dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 \mathbf{X} \mathbf{Y} \mathbf{Z} 532 494 450 Air **Cal Factors:** 20 **DCP** 20 20 .528 .528 Lin .528

Amp Gain: 2 **Averaging:** 3

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor = 1



Page 34 of 97

plot #2 (2/3)

Date / Time:2003/8/26Position:front 0mmFilename:c3002412front0Phantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:front.csvPower Level:14.53dBm

ZOOM SCAN RESULTS:

 Spot SAR (W/kg):
 Start Scan
 End Scan

 0.112
 0.112

Change during

-0.67

Scan (%)

Max E-field (V/m): 19.48


Max SAR (W/kg)


	± v 8
0.462	0.193

Location of Max

(mm):

X	Y	Z
75.1	-24.0	-136.0

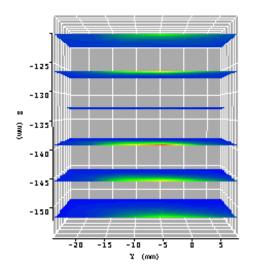

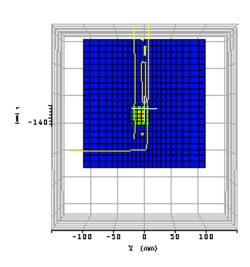



Page 35 of 97

plot #2 (3/3)

Date / Time:2003/8/26Position:front 0mmFilename:c3002412front0Phantom:HeadBox1.csv


Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:front.csvPower Level:14.53dBm

AREA SCAN:

Scan Extent:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-175.0	-115.0	6.0

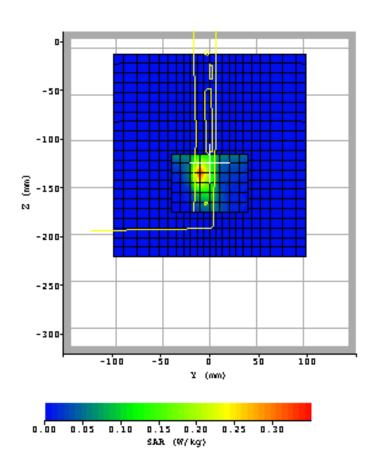



Page 36 of 97

plot #3 (1/3)

Date / Time: 2003/8/26 Position: Filename: c3002462front0 Phantom:

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2462MHzShape File:front.csvPower Level:13.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 \mathbf{X} \mathbf{Y} \mathbf{Z} 532 494 450 Air **Cal Factors:** 20 **DCP** 20 20 .528 .528 Lin .528

Amp Gain: 2 **Averaging:** 3

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

front 0mm

HeadBox1.csv

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1



Page 37 of 97

plot #3 (2/3)

Date / Time:2003/8/26Position:front 0mmFilename:c3002462front0Phantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna: PIFA Test Frequency: 2462MHz
Shape File: front.csv Power Level: 13.03dBm

ZOOM SCAN RESULTS:

 Spot SAR (W/kg):
 Start Scan
 End Scan

 0.037
 0.038


Change during Scan (%) 2.75


Max E-field (V/m): 11.48


Max SAR (W/kg) 1g 10g 0.178 0.074

Location of Max (mm):

X	Y	Z
75.0	-20.0	-136.1

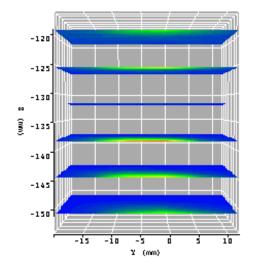

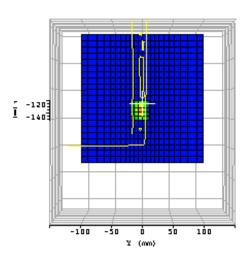





Page 38 of 97

plot #3 (3/3)


Date / Time:2003/8/26Position:front 0mmFilename:c3002462front0Phantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2462MHzShape File:front.csvPower Level:13.03dBm

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-175.0	-115.0	6.0

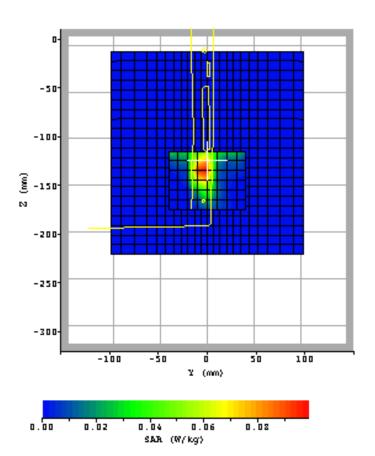



Page 39 of 97

plot #4

Date / Time: 2003/8/26

Filename: c3002437front15a.txt

Device Tested: TravelMate C300

Antenna: PIFA
Shape File: front.csv

Position: front 15mm

Phantom: HeadBox1.csv

Head Rotation: 0

Test Frequency: 2437MHz **Power Level:** 14.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 **Averaging:** 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

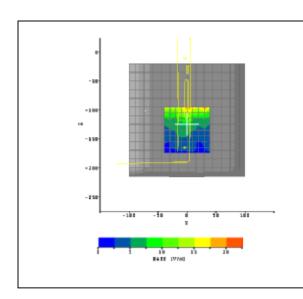

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-175.0	-95.0	8.0



Page 40 of 97

plot #5

Date / Time:2003/8/26Position:front 15mmFilename:c3002412front15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:front.csvPower Level:14.53dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2
Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

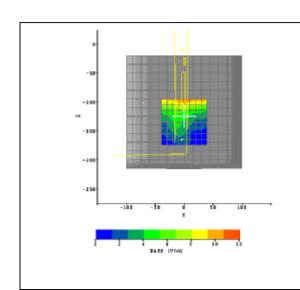

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-175.0	-95.0	8.0



Page 41 of 97

plot #6

Date / Time:2003/8/26Position:front 15mmFilename:c3002462front15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2462MHzShape File:front.csvPower Level:13.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2
Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

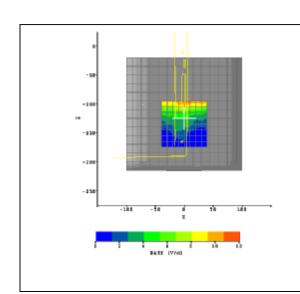

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-175.0	-95.0	8.0



Page 42 of 97

plot #7 (1/3)

Date / Time:2003/8/26Position:back 0mmFilename:c3002437back0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:back.csvPower Level:14.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2
Averaging: 3

Cal Factors:

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1



Page 43 of 97

plot #7 (2/3)

Date / Time:2003/8/26Position:back 0mmFilename:c3002437back0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:back.csvPower Level:14.03dBm

ZOOM SCAN RESULTS:

 Spot SAR (W/kg):
 Start Scan
 End Scan

 0.072
 0.070


Change during Scan (%) -1.60 Max E-field (V/m): 13.59


Max SAR (W/kg)

1g	10g
0.257	0.116

Location of Max (mm):

X	Y	Z
75.0	-12.0	-133.1

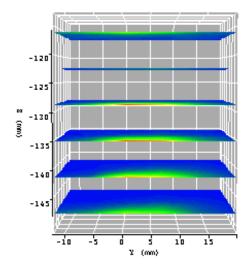

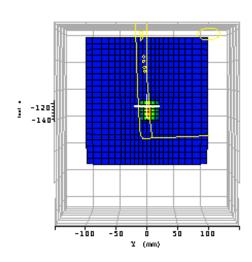



Page 44 of 97

plot #7 (3/3)

Date / Time:2003/8/26Position:back 0mmFilename:c3002437back0.txtPhantom:HeadBox1.csv


Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:back.csvPower Level:14.03dBm

AREA SCAN:

Scan	Extent:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-155.0	-105.0	5.0

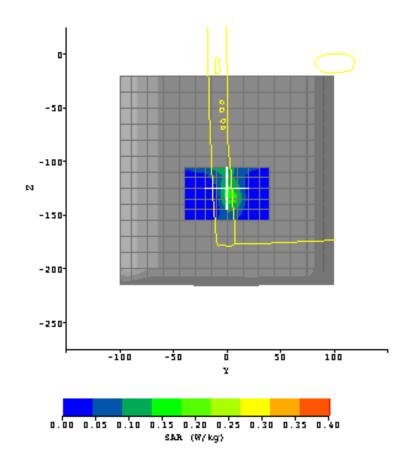



Page 45 of 97

plot #8 (1/3)

Date / Time: 2003/8/26

Filename: c3002412back0.txt

Device Tested: TravelMate C300

Antenna: PIFA Shape File: back.csv **Phantom:** HeadBox1.csv

Position:

Head Rotation: 0

Test Frequency: 2412MHz **Power Level:** 14.53dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 **Averaging:** 3

Cal Factors:

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

back 0mm

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1



Page 46 of 97

plot #8 (2/3)

back 0mm Date / Time: 2003/8/26 **Position:** HeadBox1.csv Filename: c3002412back0.txt **Phantom:**

TravelMate C300 0 **Device Tested: Head Rotation:**

Antenna: PIFA 2412MHz **Test Frequency: Shape File:** back.csv **Power Level:** 14.53dBm

ZOOM SCAN RESULTS:

Start Scan End Scan Spot SAR (W/kg): 0.089 0.089

Change during Scan (%)

-0.86


Max E-field (V/m): 14.90


Max SAR (W/kg)


1g	10g
0.310	0.139

Location of Max (mm):

X	Y	Z
75.0	-12.0	-133.1

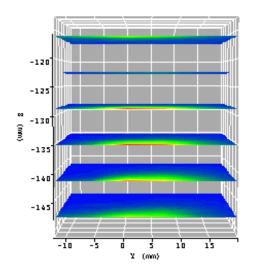

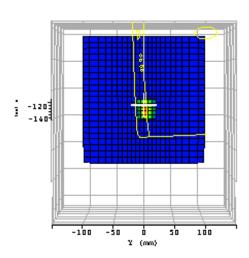





Page 47 of 97

plot #8 (3/3)


Date / Time:2003/8/26Position:back 0mmFilename:c3002412back0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:back.csvPower Level:14.53dBm

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-155.0	-105.0	5.0

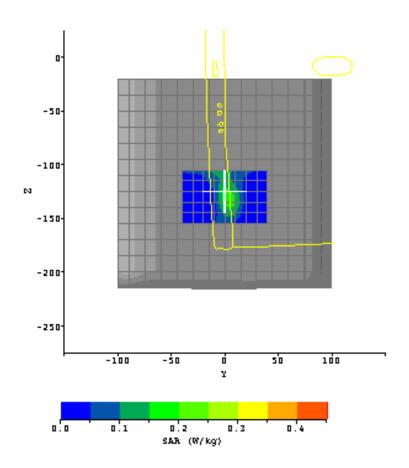



Page 48 of 97

Plot #9

Date / Time:2003/8/26Position:back 0mmFilename:c3002462back0a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2462MHzShape File:back.csvPower Level:13.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 **Averaging:** 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

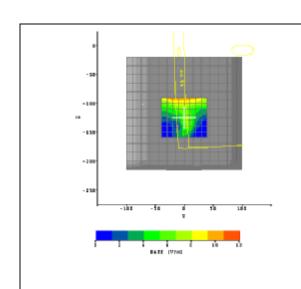

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-160.0	-90.0	7.0



Page 49 of 97

Plot #10

Date / Time:2003/8/26Position:back 15mmFilename:c3002437back15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2437MHzShape File:back.csvPower Level:14.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2
Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

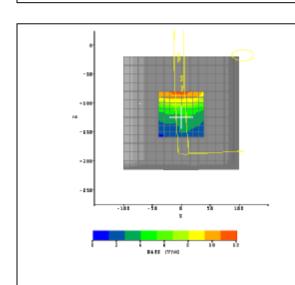

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-160.0	-80.0	8.0



Page 50 of 97

Plot #11

Date / Time:2003/8/26Position:back 15mmFilename:c3002412back15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2412MHzShape File:back.csvPower Level:14.53dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

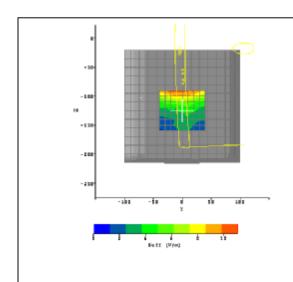

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-160.0	-90.0	7.0



Page 51 of 97

Plot #12

Date / Time:2003/8/26Position:back 15mmFilename:c3002462back15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2462MHzShape File:back.csvPower Level:13.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

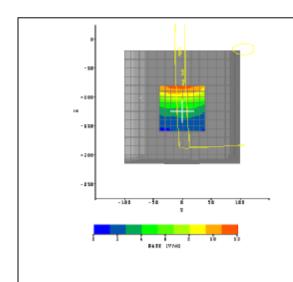

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
7.	-160.0	-80.0	8.0



Page 52 of 97

Plot #13 (1/3)

Date / Time:2003/8/26Position:top 0mmFilename:c3002437top0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:top.csvPower Level:14.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1



Page 53 of 97

Plot #13 (2/3)

Date / Time:2003/8/26Position:top 0mmFilename:c3002437top0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna: PIFA Test Frequency: 2437MHz
Shape File: top.csv Power Level: 14.03dBm

ZOOM SCAN RESULTS:

Spot SAR (W/kg):	Start Scan	End Scan
	0.051	0.052

Change during Scan (%)


Max E-field (V/m): 12.17


Max SAR (W/kg)


1g	10g
0.204	0.095

Location of Max (mm):

X	Y	Z
75.1	-22.0	-142.0

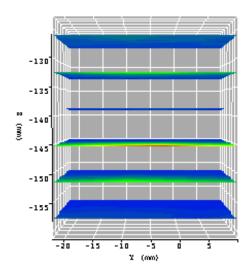

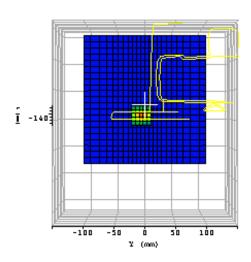





Page 54 of 97

Plot #13 (3/3)


Date / Time:2003/8/26Position:top 0mmFilename:c3002437top0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2437MHzShape File:top.csvPower Level:14.03dBm

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-180.0	-120.0	6.0

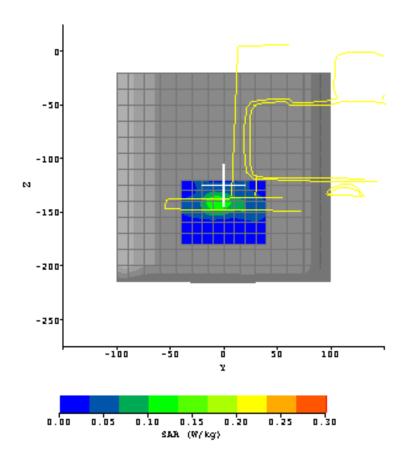



Page 55 of 97

Plot #14 (1/3)

Date / Time:2003/8/26Position:top 0mmFilename:c3002412top0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:top.csvPower Level:14.53dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1



Page 56 of 97

Plot #14 (2/3)

Date / Time: 2003/8/26 Position: top 0mm

Filename: c3002412top0.txt Phantom: HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2412MHzShape File:top.csvPower Level:14.53dBm

ZOOM SCAN RESULTS:

Spot SAR (W/kg):	Start Scan	End Scan
Spot SAR (W/kg):	0.057	0.059


Change during 2.34 Scan (%)
Max E-field (V/m): 12.58


Max SAR (W/kg)

1g	10g
0.222	0.104

Location of Max (mm):

X	Y	Z
75.0	-21.0	-143.1

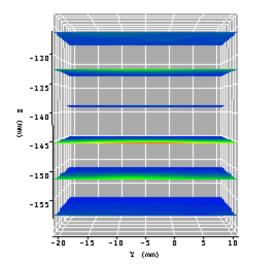

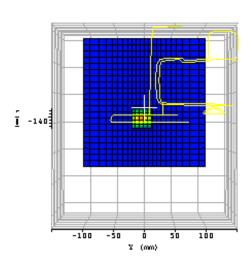



Page 57 of 97

Plot #14 (3/3)


Date / Time:2003/8/26Position:top 0mmFilename:c3002412top0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2412MHzShape File:top.csvPower Level:14.53dBm

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-180.0	-120.0	6.0

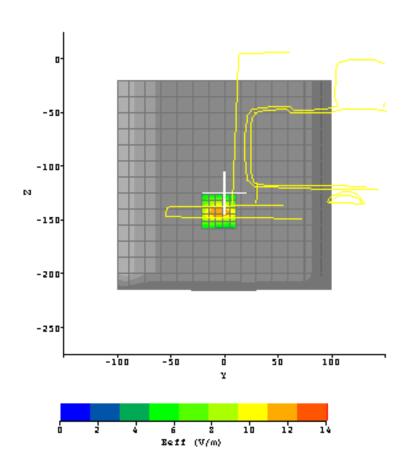



Page 58 of 97

Plot #15 (1/3)

Date / Time:2003/8/26Position:top 0mmFilename:c3002462top0.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2462MHzShape File:top.csvPower Level:13.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:

Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1



Page 59 of 97

Plot #15 (2/3)

Date / Time: 2003/8/26 **Position:** top 0mm

Filename: c3002462top0.txt Phantom: HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna: PIFA Test Frequency: 2462MHz
Shape File: top.csv Power Level: 13.03dBm

ZOOM SCAN RESULTS:

 Spot SAR (W/kg):
 Start Scan
 End Scan

 0.039
 0.041

Change during

2.76

Scan (%)


Max E-field (V/m): 10.60


Max SAR (W/kg)


1 g	10g
0.150	0.072

Location of Max (mm):

X	Y	Z
75.1	-22.0	-141.1

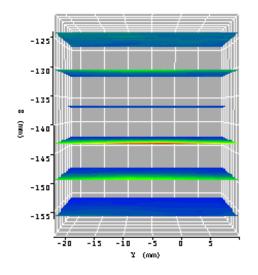

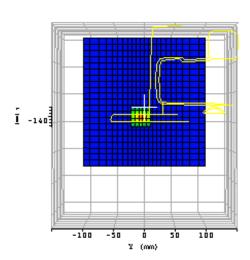





Page 60 of 97

Plot #15 (3/3)

Date / Time:2003/8/26Position:top 0mmFilename:c3002462top0.txtPhantom:HeadBox1.csv


Device Tested: TravelMate C300 **Head Rotation:** 0

Antenna:PIFATest Frequency:2462MHzShape File:top.csvPower Level:13.03dBm

AREA SCAN:

Scan	Extent:
ocali	Extent.

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-180.0	-120.0	6.0

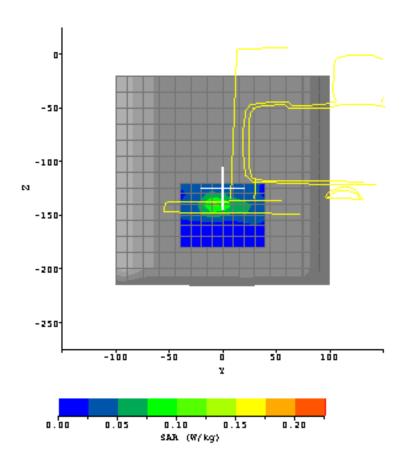



Page 61 of 97

Plot #16

Date / Time:2003/8/26Position:top 15mmFilename:c3002437top15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2437MHzShape File:top.csvPower Level:14.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

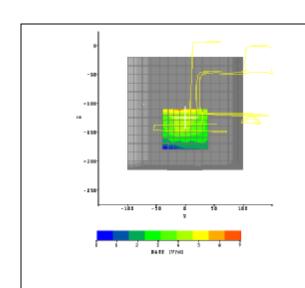

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-180.0	-110.0	7.0



Page 62 of 97

Plot #17

Date / Time:2003/8/26Position:top 15mmFilename:c3002412top15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2412MHzShape File:top.csvPower Level:14.53dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

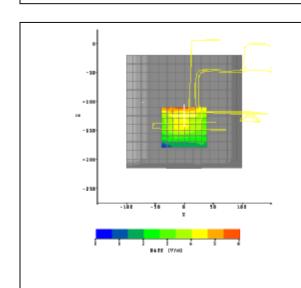

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
Z	-180.0	-110.0	7.0



Page 63 of 97

Plot #18

Date / Time:2003/8/26Position:top 15mmFilename:c3002462top15a.txtPhantom:HeadBox1.csv

Device Tested: TravelMate C300 **Head Rotation:**

Antenna:PIFATest Frequency:2462MHzShape File:top.csvPower Level:13.03dBm

Probe: 0114

Cal File: SN0114_2450_CW_BODY

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .528
 .528
 .528

Amp Gain: 2 Averaging: 3

Cal Factors:


Replaced: Aug. 26

Liquid: 15.3cm

Type: 2450MHz Body

Conductivity: 1.95769
Relative Permittivity: 51.38391
Liquid Temp (deg C): 22.1
Ambient Temp (deg C): 20
Ambient RH (%): 55
Density (kg/m3): 1000
Software Version: 0.421N

Crest Factor=1

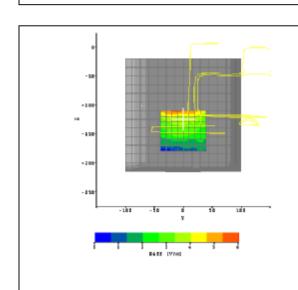

AREA SCAN:

	Min	Max	Steps
Y	-40.0	40.0	8.0
\mathbf{Z}	-180.0	-110.0	7.0



Page 64 of 97

15.1cm

Plot #19

Cal Factors:

Date: 2003/3/7 **Position:** Bottom Filename: 2450val3-7.txt **Phantom:** Box1.csv

Device Tested: SARA2 system **Head Rotation:** 0

Antenna: 2450dipole **Test Frequency:** 2450MHz **Shape File:** none.csv **Power Level:** 24dBm/CW


0114 Liquid: **Probe:**

2450MHz Head Cal File: SN0114_2450_CW_HEAD Type:

> 1.790 **Conductivity:** X Y **Relative Permittivity:** 38.050 Air 532 494 450 **Liquid Temp (deg C):** 23 **DCP** 20 20 20 22.1 **Ambient Temp (deg C):** .495 Lin .495 .495 Ambient RH (%): 63

Amp Gain: 1000 1 Density (kg/m3): Averaging: **Software Version:** 0.421N **Batteries** N/a

Replaced: Crest Factor = 1

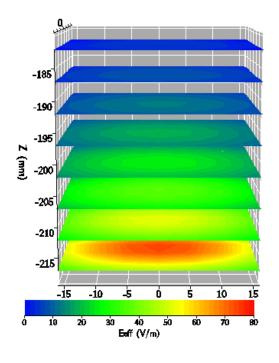

2

ZOOM SCAN RESULTS:

Spot SAR	Start Scan	End Scan
(W/kg):		
Change during		

Change during Scan (%) Max E-field

76.33 (V/m):

Max SAR (W/kg)	lg	10g
wax SAK (W/Kg)	13.9475	6.54

Location of Max	X	Y	Z
(mm):	2.7	1.4	-223.0

Normalized to an input power of 1W Averaged over 1 cm³ (1g) of tissue 55.79 W/kg



Position:

Phantom:

Head Rotation:

Page 65 of 97

Plot #20

Date / Time: 2003/8/25

Filename: 2450 performance-

250mW.txt

Device Tested: 2450 performance check

Antenna: 2450 dipole antenna Test Frequency: Shape File: none.csv Power Level:

Probe: 0114

Cal File: SN0114_2450_CW_HEAD

 X
 Y
 Z

 Air
 532
 494
 450

 DCP
 20
 20
 20

 Lin
 .495
 .495
 .495

Amp Gain: 2
Averaging: 3

Cal Factors:

Replaced: Aug. 25

Liquid: 15.3cm

0

Type: 2450MHz Head

bottom of box


HeadBox1.csv

2450MHz

24dBm

Conductivity: 1.81797 **Relative Permittivity:** 39.01818

Liquid Temp (deg C): 23
Ambient Temp (deg C): 22
Ambient RH (%): 50
Density (kg/m3): 1000
Software Version: 0.421N

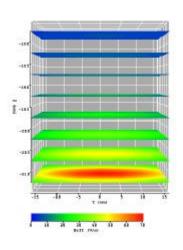

ZOOM SCAN RESULTS:

69.70

Spot SAR Start Scan (W/kg):

Change during Scan (%) Max E-field

(V/m):

Max SAR (W/kg)

1g	10g
11.921	5.612

End Scan

Location of Max (mm):

X	Y	Z
1.3	1.3	-220.5

Normalized to an input power of 1W Averaged over 1 cm³ (1g) of tissue 47.684 W/kg




Page 66 of 97

APPENDIX B – 2450MHz body liquid Calibration Data



Report No.: EME-030975 Page 67 of 97 FCC ID.: PU5MS2140B

Date: 25 Aug.2003	Temperature:22.5°C	Type:2450MHz/body (FCC)	Tested by: Kevin
2410, 50.7367431107, -2.0276 2411, 50.7416128995, -2.0211 2412, 50.73092317, -2.01348) 2413, 50.7296287503, -2.0122 2414, 50.7496192968, -2.0102 2414, 50.7496192968, -2.0102 2415, 50.7184308871, -2.0037 2416, 50.7801748731, -1.9997 2419, 50.7463449448, -1.996 2420, 50.7937170598, -1.9899 2421, 50.7561702984, -1.9919 2422, 50.7748757356, -1.9833 2423, 50.754311911, -1.9836 2424, 50.7451227994, -1.9849 2425, 50.8112209317, -1.9747 2426, 50.7936045379, -1.9747 2427, 50.8359553563, -1.9699 2428, 50.8703398658, -1.9699 2429, 50.8703398658, -1.9699 2430, 50.8727503772, -1.9677 2431, 50.9135340132, -1.9546 2430, 50.9706074008, -1.9556 2432, 50.909527931, -1.9589 2433, 50.9540836818, -1.9566 2434, 50.9706074008, -1.9556 2435, 50.9876382714, -1.9566 2436, 51.0206552946, -1.9529 2437, 51.0182377012, -1.9589 2438, 51.0925644917, -1.9519 2440, 51.1528993521, -1.9548 2441, 51.1579955796, -1.9489 2444, 51.2215034507, -1.9549 2444, 51.2215034507, -1.9549 2444, 51.2341546735, -1.9499 2444, 51.33568616024, -1.9599 24449, 51.3320325013, -1.9546	1785387 83414 8382769 9927242 7228084 \$115393 8220928 \$1101409 9394967 5080106 8273173 \$5538268 817979 8227988 22268043 27721568 \$1185466 \$6408837 2861131 2744276 \$442469 9092828 8633035 \$47759826 2744324 \$113889 \$994932 \$9933025 9000963 83317275 9522861 \$1184123 \$890577 \$2965485 \$725518 \$5548798 87319103	2450, 51.3839088449, -1.957687818 2451, 51.3925871327, -1.955460303 2452, 51.4398124878, -1.9595043191 2453, 51.44134996, -1.959031433 2454, 51.4654159112, -1.95848807 2455, 51.5096410947, -1.9639731589 2456, 51.5759829652, -1.9673538791 2457, 51.5759829652, -1.9673538791 2458, 51.5600430275, -1.9726093563 2459, 51.5752217315, -1.972169132 2460, 51.5985545985, -1.9753022457 2461, 51.6565746434, -1.9806083749 2462, 51.709193729, -1.984235121 2463, 51.6578523662, -1.9847275369 2464, 51.7673698892, -1.9847275369 2464, 51.761690879, -2.0007217892 2467, 51.7913063932, -2.0016279553 2468, 51.833922274, -2.0004195094 2469, 51.8396532228, -2.003252033 2470, 51.8281654221, -2.0058776469 2471, 51.8491558291, -2.0118435455 2472, 51.8701547372, -2.0160661073 2473, 51.8727827933, -2.0239837139 2474, 51.8918997417, -2.0284997038 2475, 51.921115836, -2.0332032992 2476, 51.8879918646, -2.0355190222 2477, 51.9511596595, -2.040364934 2478, 51.9746626026, -2.0433647042 2479, 51.9186414423, -2.0520489931 2480, 51.9459791618, -2.0572742812 2482, 52.0185617373, -2.05953788 2483, 52.0066173499, -2.0709241158 2484, 51.9970763059, -2.0639503427 2485, 51.9963181471, -2.0808431379 2486, 51.9643014863, -2.05709241158 2487, 51.9963181471, -2.0808431379 2488, 51.9963181471, -2.0808431379 2488, 51.9963181471, -2.0808431379 2489, 52.017225488, -2.1027802515 2490, 52.0055708119, -2.1028267641	

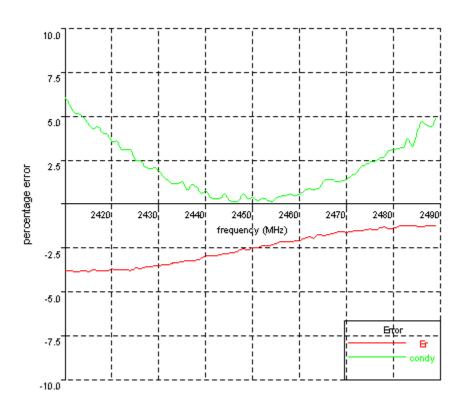



Report No.: EME-030975 Page 68 of 97 FCC ID.: PU5MS2140B

Photographs





Report No.: EME-030975 Page 69 of 97 FCC ID.: PU5MS2140B







Report No.: EME-030975 Page 70 of 97 FCC ID.: PU5MS2140B







Report No.: EME-030975 Page 71 of 97 FCC ID.: PU5MS2140B









Report No.: EME-030975 Page 72 of 97 FCC ID.: PU5MS2140B










Report No.: EME-030975 Page 73 of 97 FCC ID.: PU5MS2140B






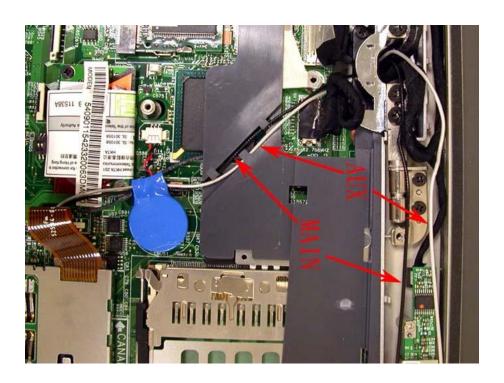



Report No.: EME-030975 Page 74 of 97 FCC ID.: PU5MS2140B

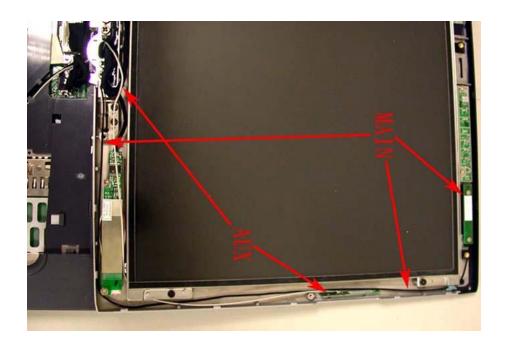



Page 75 of 97

APPENDIX C - E-Field Probe Certificate and Calibration Data Validation dipole certificate and performance measurements





Report No.: EME-030975

Page 76 of 97 **Indexsar Limited**

Oakfield House Cudworth Lane

Newdigate

Surrey RH5 5DR

Fax: +44 (0) 1306 631 834

Tel: +44 (0) 1306 631 233

e-mail: enquiries@indexsar.com

Calibration Certificate Dosimetric E-field Probe

Approved By:

Type:	IXP-050		
Manufacturer:	IndexSAR, UK		
Serial Number:	0114		
Place of Calibration:	IndexSAR, UK		
IndexSAR Limited hereby declares that the IXP-050 Probe named above has been calibrated for conformity to the IEEE 1528 and CENELEC En 50361 standards on the date shown below.			
Date of Initial Calibration:	6 th September 2002		
The probe named above will re	quire a calibration check on the date shown below.		
Next Calibration Date:	September 2003		
The calibration was carried out using the methods described in the calibration document. Where applicable, the standards used in the calibration process are traceable to the UK's National Physical Laboratory.			
Calibrated By:	kmladley		
-			

<u>Please keep this certificate with the calibration document.</u> When the probe is sent for a calibration check, please include the calibration document.



Page 77 of 97



IMMERSIBLE SAR PROBE

CALIBRATION REPORT

Part Number: IXP – 050

S/N 0114

6th September 2002



Indexsar Limited Oakfield House Cudworth Lane Newdigate Surrey RH5 5DR

Tel: +44 (0) 1306 631 233 Fax: +44 (0) 1306 631 834 e-mail: **enquiries@indexsar.com**



Page 78 of 97

INTRODUCTION

This Report presents measured calibration data for a particular Indexsar SAR probe (S/N 0114) and describes the procedures used for characterisation and calibration.

Indexsar probes are characterised using procedures that, where applicable, follow the recommendations of CENELEC [1] and IEEE [2] standards. The procedures incorporate techniques for probe linearisation, isotropy assessment and determination of liquid factors (conversion factors). Calibrations are determined by comparing probe readings with analytical computations in canonical test geometries (waveguides, boxes and spheres) using normalised power inputs.

Each step of the calibration procedure and the equipment used is described in the sections below.

CALIBRATION PROCEDURE

1. Equipment Used

For the first part of the calibration procedure, the probe is placed in a calibration jig as pictured in Figure 1. In this position the probe can be rotated about its axis by a non-metallic belt driven by a stepper motor.

The probe is attached via its amplifier and an optical cable to a PC. A schematic representation of the test geometry is illustrated in Figure 2.

A balanced dipole (900 MHz) is inserted horizontally into the bracket attached to a second belt (Figure 1). The dipole can also be rotated about its axis. A cable connects the dipole to a signal generator, via a directional coupler and power meter. The signal generator feeds an RF amplifier at constant power, the output of which is monitored using the power meter. The probe is positioned so that its sensors line up with the rotation center of the source dipole. By recording output voltage measurements of each channel as both the probe and the dipole are rotated, data are obtained from which the spherical isotropy of the probe can be optimised and its magnitude determined.

The calibration process requires E-field measurements to be taken in air, in 900 MHz simulated brain liquid and at other frequencies/liquids as appropriate. When it is necessary to place the probe in liquid, a rectangular box made from PMMA (200mm internal width, 200mm internal height and 100mm internal depth; wall thickness 4mm) is filled with the appropriate liquid and positioned on the stand so that the probe tip is positioned within the liquid (Figure 1). The box is positioned so that its outer surface is 2mm from the dipole. The procedure follows that described in Ref [2]. Section A.5.2.1.

2. Linearising probe output

The probe channel output signals are linearised in the manner set out in Refs [1] and [2]. The following equation is utilized for each channel:

$$U_{lin} = U_{o/p} + U_{o/p}^{2} / DCP$$
 (1)



Page 79 of 97

where U_{lin} is the linearised signal, $U_{o/p}$ is the raw output signal in voltage units and DCP is the diode compression potential in similar voltage units.

DCP is determined from fitting equation (1) to measurements of $U_{\rm lin}$ versus source feed power over the full dynamic range of the probe. The DCP is a characteristic of the schottky diodes used as the sensors. For the IXP-050 probes with CW signals the DCP values are typically 0.10V (or 20 in the voltage units used by Indexsar software, which are V*200).

3. Selecting channel sensitivity factors to optimise isotropic response

The basic measurements obtained using the calibration jig (Fig 1) represent the output from each diode sensor as a function of the presentation angle of the source (probe and dipole rotation angles). The directionality of the orthogonally-arranged sensors can be checked by analysing the data using dedicated Indexsar software, which displays the data in 3D format as in Figure 3. The left-hand side of this diagram shows the individual channel outputs after linearisation (see above). The program uses these data to balance the channel outputs and then applies an optimisation process, which makes fine adjustments to the channel factors for optimum isotropic response.

The next stage of the process is to calibrate the Indexsar probe to a W&G EMR300 E-field meter in air. The principal reasons for this are to obtain conversion factors applicable should the probe be used in air and to provide an overall measure of the probe sensitivity.

A multiplier is applied to factors to bring the magnitudes of the average E-field measurements as close as possible to those of the W&G probe.

The following equation is used (where linearised output voltages are in units of V*200):

$$E_{air}^{2} (V/m) = U_{linx} * Air Factor_{x} + U_{liny} * Air Factor_{y} + U_{linz} * Air Factor_{z}$$
(2)

It should be noted that the air factors are not separately used for normal SAR testing. The IXP-050 probes are optimised for use in tissue-simulating liquids and do not behave isotropically in air.

4. 900 MHz Liquid Calibration

Conversion factors for use when the probes are immersed in tissue-simulant liquids at 900 MHz are determined either using a waveguide or by comparison to a reference probe that has been calibrated by NPL. Waveguide procedures are described later. The summary sheet indicates the method used for the probe S/N 0114.

The conversion factor, referred to as the 'liquid factor' is also applied to the measurements of each channel. The following equation is used (where output voltages are in units of V*200):



Page 80 of 97

$$E_{liq}^{2} (V/m) = U_{linx} * Air Factor_{x} * Liq Factor_{x} + U_{liny} * Air Factor_{y} * Liq Factor_{y} + U_{linz} * Air Factor_{z} * Liq Factor_{z}$$
(3)

A 3D representation of the spherical isotropy for probe S/N 0114 using these factors is shown in Figure 3.

The rotational isotropy can also determined from the calibration jig measurements and is reported as the 900MHz isotropy in the summary table. Note that waveguide measurements can also be used to determine rotational isotropy (Fig. 5).

For other frequencies, probe conversion factors are determined using waveguide cells as shown in Figure 4. The cells consist of a coax to waveguide transition and an open-ended section of waveguide containing a dielectric separator. Each waveguide cell stands in the upright positition and is filled with liquid within 10 mm of the open end. The seperator provides a liquid seal and is designed for a good electrical transition from air filled guide to liquid filled guide. The choice of cell depends on the portion of the frequency band to be examined and the choice of liquid used. The depth of liquid ensures there is negligible radiation from the waveguide open top and that the probe calibration is not influenced by reflections from nearby objects. The return loss at the coaxial connector of the filled waveguide cell is measured initially using a network analyser and this information is used subsequently in the calibration procedure. The probe is positioned in the centre of the waveguide and is adjusted vertically or rotated using stepper motor arrangements. The signal generator is connected to the waveguide cell and the power is monitored with a coupler and a power meter. A fuller description of the waveguide method is given below.

The liquid dielectric parameters used for the probe calibrations are listed in the Tables below. The final calibration factors for the probe are listed in the summary chart.

WAVEGUIDE MEASUREMENT PROCEDURE

The calibration method is based on setting up a calculable specific absorption rate (SAR) in a vertically-mounted WG8 (R22) waveguide section [1]. The waveguide has an air-filled, launcher section and a liquid-filled section separated by a matching window that is designed to minimise reflections at the liquid interface. A TE₀₁ mode is launched into the waveguide by means of a N-type-to-waveguide adapter. The power delivered to the liquid section is calculated from the forward power and reflection coefficient measured at the input to the waveguide. At the centre of the cross-section of the waveguide, the local spot SAR in the liquid as a function of distance from the window is given by functions set out in IEEE1528 as below:

Because of the low cutoff frequency, the field inside the liquid nearly propagates as a TEM wave. The depth of the medium (greater than three penetration depths) ensures that reflections at the upper surface of the liquid are negligible. The power absorbed in the liquid is determined by measuring the waveguide forward and reflected power. Equation (4) shows the relationship between the SAR at the cross-sectional center of the lossy waveguide and the longitudinal distance (z) from the dielectric separator

$$SAR(z) = \frac{4(P_f - P_b)}{rapd}e^{-2z/d}$$
(4)



Page 81 of 97

where the density r is conventionally assumed to be 1000 kg/m³, ab is the cross-sectional area of the waveguide, P_f and P_b are the forward and reflected power inside the lossless section of the waveguide, respectively. The penetration depth d, which is the reciprocal of the waveguide-mode attenuation coefficient, is determined from a scan along the z-axis and compared with the theoretical value determined from Equation (5) using the measured dielectric properties of the lossy liquid.

$$d = \left[\text{Re} \left\{ \sqrt{\left(p / a \right)^2 + j w m_o \left(s + j w e_o e_r \right)} \right\} \right]^{-1}.$$
 (5)

Table A.1 of [1] can be used for designing calibration waveguides with a return loss greater than 30 dB at the most important frequencies used for personal wireless communications. Values for the penetration depth for these specific fixtures and tissue-simulating mixtures are also listed in Table A.1.

According to [1], this calibration technique provides excellent accuracy, with standard uncertainty less than 3.6% depending on the frequency and medium. The calibration itself is reduced to power measurements traceable to a standard calibration procedure. The practical limitation to the frequency band of 800 to 2500 MHz because of the waveguide size is not severe in the context of compliance testing.

CALIBRATION FACTORS MEASURED FOR PROBE S/N 0114

The probe was calibrated at 1800, 1900 and 2450MHz MHz in liquid samples representing both brain liquid and body fluid at these frequencies. The calibration was for CW signals only, and the axis of the probe was parallel to the direction of propagation of the incident field i.e. end-on to the incident radiation. The axial isotropy of the probe was measured by rotating the probe about its axis in 10 degree steps through 360 degrees in this orientation.

The reference point for the calibration is in the centre of the probe's cross-section at a distance of 2.5 mm from the probe tip in the direction of the AD converter. A value of 2.5 mm should be used for the tip to sensor offset distance in the software.

It is important that the diode compression point and air factors used in the software are the same as those quoted in the results tables, as these are used to convert the diode output voltages to a SAR value.

DIELECTRIC PROPERTIES OF LIQUIDS

The dielectric properties of the brain and body tissue-simulant liquids employed for calibration are listed in the tables below. The measurements were performed using an Indexsar DiLine measurement kit, which uses the TEM method as recommended in [2].



Page 82 of 97

AMBIENT CONDITIONS

Measurements were made in the open laboratory laboratory at 23 ± 0.5 °C. The temperature of the liquids in the waveguide used was measured using a mercury thermometer.

GSM RESPONSE

SAR probes are required to measure the effective value (RMS value) of the electric field strength. The averaging time is defined in the standards as being over 6 minutes but with most of the signals that occur in the real world, such a long averaging time is unnecessary since the fluctuations are eliminated with significantly shorter averaging times. With most signals, a much shorter averaging time is sufficient. For example the GSM frame rate is 120mS and averaging over this time period will remove the fluctuations.

In diode probes, a single Schottky diode is used as the detector for each of the three channels (X, Y and Z). For small field strengths, these offer a very good approximation to a true RMS rectifier. For higher field strengths, higher or lower values than the RMS value can be displayed - depending on the modulation frequency.

The theoretical maximum deviation from the RMS value can be derived based on the behavior of the two extremes [4]:

An average-value rectifier

• displays a value proportional to the average value of the magnitude of a measured quantity.

A peak-value rectifier

• displays a value proportional to the peak value of the magnitude of a measured quantity

The proportionality factor for a practical probe is chosen so that the probe reads the true RMS value for a continuous (CW) signal.

For pulsed signals, a diode rectifier must deliver a value lying somewhere between the two extremes of an average value rectifier and a peak value rectifier. By way of example, for a GSM signal with a 1 in 8 duty cycle (ratio of 'on' time to total time), the power measurement at higher powers can vary between being a factor of 8 too low (average value extreme) and a factor of 8 too high (peak-value extreme).

The actual behaviour is complex as it depends on the period of the modulation in relation to various time constants in the measuring system. These include the holding time of the diode (typically 50 uS), the time constant of the high-resistance leads and the time constant and integration periods of the measurement electronics. Also, the modulation periods are complex – GSM has a basic burst rate of 4.615mS, but the full modulation scheme only repeats every 120mS.



Page 83 of 97

To correct for the errors due to the diode response to pulsed signals, a multiplier can be added to the second term of Equation 1 (see earlier). In principle, this multiplier can have a range for a GSM signal of between 8 and 1/8. The correction scheme will

$$U_{lin} = U_{o/p} + U_{o/p}^{2} * PCF/DCP$$
 (4)

Where PCF is a pulse correction factor ranging between the duty cycle and the reciprocal of the duty cycle.

Indexsar SAR probes show a qualitatively similar behaviour in response to GSM signals, but with a much lesser degree of over or underestimation than indicated by the possible ranges above. Indeed, for many Indexsar probes, the PCF has been established by measurement to be close to unity. A probe with a unity PCF reads true RMS for a pulsed signal without correction.

The PCF has the effect of altering the effective diode compression potential and a modification to the DCP value is how the GSM correction is implemented in the Indexsar probe calibration scheme.

The modified DCP values for GSM are included in the summary page. The value has been determined by finding the modified DCP required to linearise the probe response as indicated in Figure 7.

Non-amplitude modulated carriers can be considered as CW as far as the probe calibration is concerned.


The effects of amplitude modulation of the CDMA signal on SAR measurements has been considered in a draft paper [see ref. 4] submitted to IEEE SCC-34.



Page 84 of 97

SUMMARY OF CALIBRATION FACTORS FOR PROBE IXP-050 S/N 0114

IXP-050 S/N0114 06/08/2002

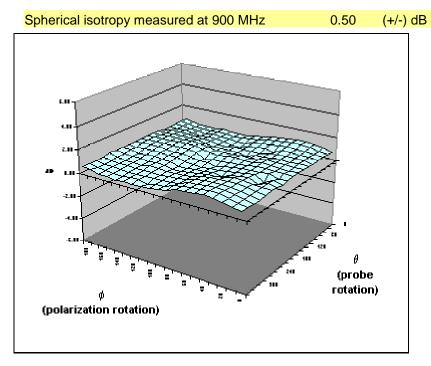

	Χ	Υ	Z	
Air factors	532	494	450	(V*200)
DCPs CW	20	20	20	(V*200)
DCPs GSM	7	7	7	(V*200)

f (MHz	•	Axial isotr (+/- dB)	ору	SAR conv (lig/air)	version factors	Notes
		BRAIN	BODY	BRAIN	BODY	
	900	0.10	0.10	0.340	0.374	3, 1
	1800	0.08	0.08	0.381	0.417	
	1900	0.09	0.08	0.387	0.417	
	2450	0.08	0.08	0.495	0.528	

Notes	
1)	Extrapolated values in italics
2)	Calibrations done at 22C +/- 2C
3)	Probe calibration by substitution against NPL-calibrated probe
	(Probe IXP-050 S/N0071; NPL Cal Rept. No: EF07/2002/03/IndexSAR
4)	Waveguide calibration
5)	Checked using box-phantom validation test

(the graph shows a simple, spreadsheet representation of surface shown in 3D in Figure 3 below)



Page 85 of 97

PROBE SPECIFICATIONS

Indexsar probe 0106, along with its calibration, is compared with CENELEC and IEEE standards recommendations (Refs [1] and [2]) in the Tables below. A listing of relevant specifications is contained in the tables below:

e tables below:				
Dimensions	S/N 0114	CENELEC [1]	IEEE [2]	
Overall length (mm)	350	[-]		
Tip length (mm)	10			
Body diameter (mm)	12			
Tip diameter (mm)	5.2	8	8	
Distance from probe tip to dipole centers (mm)	3.0			
Dynamic range	S/N 0114	CENELEC [1]	IEEE [2]	
Minimum (W/kg)	0.01	< 0.02	0.01	
Maximum (W/kg) N.B. only measured to 35 W/kg	>35	>100	100	
Linearity of response	S/N 0114	CENELEC [1]	IEEE [2]	
Over range 0.01 – 100 W/kg (+/- dB)	0.125	0.50	0.25	
Isotropy (measured at 900MHz)	S/N 0114	CENELEC [1]	IEEE [2]	
Axial rotation with probe normal to source (+/- dB) at 900, 1800, 1900 and 2450 MHz	Max. 0.10 (see summary table)	0.5	0.25	
Spherical isotropy covering all orientations to source (+/- dB)	0.50	1.0	0.50	
Construction	Each probe contains three orthogonal dipole sensors arranged on a triangular prism core, protected against static charges by built-in shielding, and covered at the tip by PEEK cylindrical enclosure material. No adhesives are used in the immersed section. Outer case materials are PEEK and heat-shrink sleeving.			
Chemical resistance		Tested to be resistant to glycol and alcohol containing simulant liquids but probes should		

use.

be removed, cleaned and dried when not in




Page 86 of 97

REFERENCES

- [1] CENELEC, EN 50361, July 2001. Basic Standard for the measurement of specific absorption rate related to human exposure to electromagnetic fields from mobile phones.
- [2] IEEE 1528, Recommended practice for determining the spatial-peak specific absorption rate (SAR) in the human body due to wireless communications devices: Experimental techniques.
- [3] Calibration report on SAR probe IXP-050 S/N 0071 from National Physical Laboratory. Test Report EF07/2002/03/IndexSAR. Dated 20 February 2002.
- [4] The response of Indexsar SAR probes to amplitude modulated (pulsed) RF signals, Indexsar Support document IXS211.



Page 87 of 97

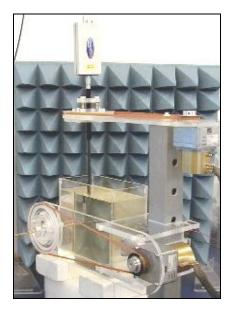

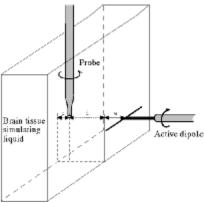


Figure 1. Calibration jig showing probe, dipole and box filled with simulated brain liquid (see Ref [2], Section A.5.2.1)

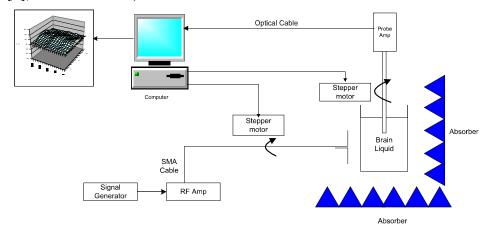


Figure 2. Schematic diagram of the test geometry used for isotropy determination



Page 88 of 97

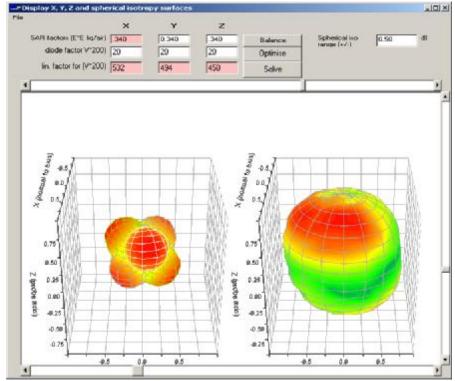


Figure 3. Graphical representation of the probe response to fields applied from each direction. The diagram on the left shows the individual response characteristics of each of the three channels and the diagram on the right shows the resulting probe sensitivity in each direction. The colour range in the figure images the lowest values as blue and the maximum values as red. For the probe S/N 0114, this range is (+/-) 0.50 dB. The probe is more sensitive to fields parallel to the axis and less sensitive to fields normal to the probe axis.


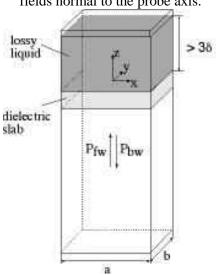


Figure 4. Geometry used for waveguide calibration (after Ref [2]. Section A.3.2.2)

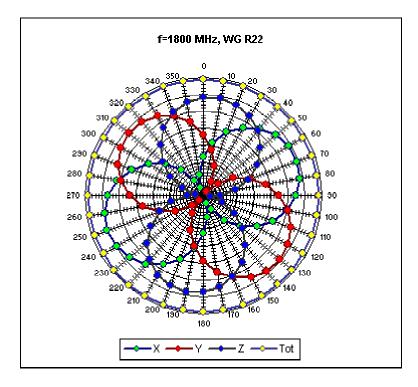

Page 89 of 97



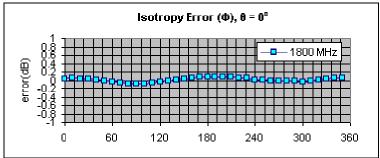


Figure 5. Example of the rotational isotropy of probe S/N 0114 obtained by rotating the probe in a liquid-filled waveguide at 1800 MHz. Similar distributions are obtained at the other test frequencies (1900 and 2450 MHz) both in brain liquids and body fluids (see summary table)



Page 90 of 97

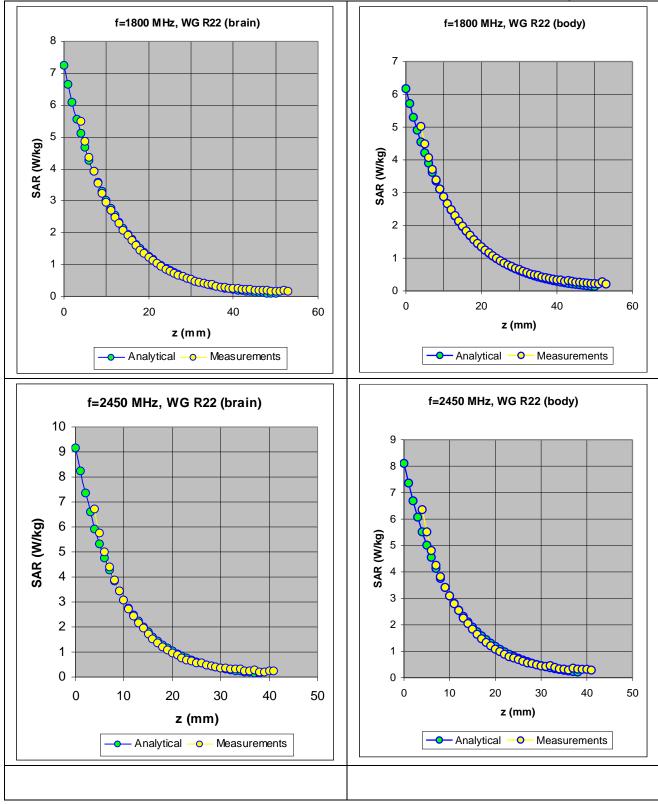


Figure 6. The measured SAR decay function along the centreline of the R22 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension. frequency, power and liquid properties employed.



Page 91 of 97

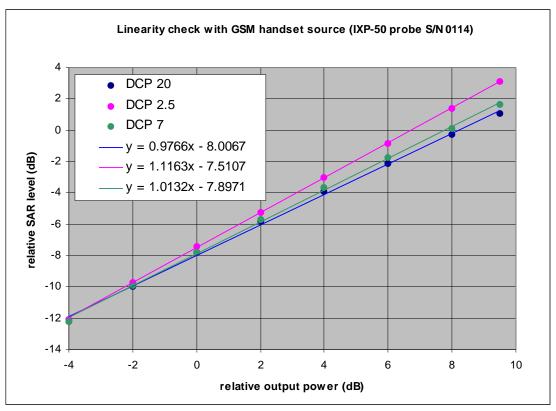


Figure 7. The GSM response of IXP-050 probe S/N 0114 at 1800MHz (max. SAR level 1.6 W/kg)

Table indicating the dielectric parameters of the liquids used for calibrations at each

frequency

Liquid used	Relative permittivity	Conductivity (S/m)
	(measured)	(measured)
835 MHz BRAIN	42.85	0.90
900 MHz BRAIN	42.43	1.01
1800 MHz BRAIN	39.09	1.37
1800 MHz BODY	52.53	1.49
1900 MHz BRAIN	38.6	1.48
1900 MHz BODY	52.21	1.60
2450 MHz BRAIN	38.13	1.82
2450 MHz BODY	55.28	1.92



Page 92 of 97




Report No. SN0048_2450 26th March 2003

INDEXSAR 2450MHz validation Dipole Type IXD-245 S/N 0048

Performance measurements

• MI Manning

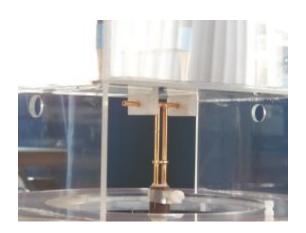

Indexsar, Oakfield House, Cudworth Lane, Newdigate, Surrey RH5 5DR. UK.

Tel: +44 (0) 1306 631233 Fax: +44 (0) 1306 631834 e-mail: enquiries@indexsar.com



FCC ID.: PU5MS2140B

Report No.: EME-030975

Page 93 of 97

Indexsar Limited
Oakfield House
Cudworth Lane
Newdigate
Surrey RH5 5DR

Tel: +44 (0) 1306 631 233 Fax: +44 (0) 1306 631 834

e-mail: enquiries@indexsar.com

Calibration / Conformance statement Balanced Validation dipole

Type:	IXD-245 2450MHz		
N. C.	I I CAD III		
Manufacturer:	IndexSAR, UK		
Serial Number:	0048		
Place of Calibration:	IndexSAR, UK		
	ares that the IXD series dipole named above has been checked for given in the draft IEEE 1528 and CENELEC En 50361 standards on the		
Date of Calibration/Check:	26 th March 2003		
•	be periodically re-checked using the procedures set out in the dipole ortant that the cautions regarding handling of the dipoles (given in the ed to.		
Next Calibration Date:	March 2005		
The calibration measurements were carried out using the methods described in the calibration document. Where applicable, the standards used in the calibration process are traceable to the UK's National Physical Laboratory.			
Calibrated By:			
Approved By:	M.J. Marie		



Page 94 of 97

1. Tests on Validation Dipole

Tests have been performed on a balanced dipole made for 2450MHz application according to the construction guidelines, dimensions and tolerances given in the draft IEEE1528 standard [1]. Measurements have been made of the impedance and return loss when positioned against the liquid-filled phantom and a validation test has been performed according to the procedures set out in IEEE 1528 [1].

2. Measurement Conditions

Measurements were performed using a box-shaped phantom made of PMMA with dimensions designed to meet the accuracy criteria for reasonably-sized phantoms that do not have liquid capacities substantially in excess of the volume of liquid required to fill the Indexsar upright SAM phantoms used for SAR testing of handsets against the ear.

An HP 8753B vector network analyser was used for the return loss measurements. The dipole was placed in a special holder made of low-permittivity, low-loss materials. This holder enables the dipole to be positioned accurately in the centre of the base of the Indexsar box-phantom used for flat-surface testing and validation checks.

The validation dipoles are supplied with special spacers made from a low-permittivity, low-loss foam material. These spacers are fitted to the dipole arms to ensure that, when the dipole is offered up to the phantom surface, the spacing between the dipole and the liquid surface is accurately aligned according to the guidance in the relevant standards documentation. The spacers are rectangular with a central hole equal to the dipole arm diameter and dimensioned so that the longer side can be used to ensure a spacing of 15mm from the liquid in the phantom (for tests at 900MHz and below) and the shorter side can be used for tests at 1800MHz and above to ensure a spacing of 10mm from the liquid in the phantom. The spacers are made on a CNC milling machine with an accuracy of $1/40^{th}$ mm but they may suffer wear and tear and need to be replaced periodically. The material used is Rohacell, which has a relative permittivity of approx. 1.05 and a negligible loss tangent.

The apparatus supplied by Indexsar for dipole validation tests thus includes:

Balanced dipoles for each frequency required are dimensioned according to the guidelines given in IEEE 1528 [1]. The dipoles are made from semi-rigid 50 Ohm co-ax, which is joined by soldering and is gold-plated subsequently. The constructed dipoles are easily deformed, if mis-handled, and periodic checks need to be made of their symmetry.

Rohacell foam spacers designed for presenting the dipoles to 2mm thick PMMA box phantoms. These components also suffer wear and tear and should be replaced when the central hole is a loose-fit on the dipole arms or if the edges are too worn to ensure accurate alignment. The standard spacers are dimensioned for use with 2mm wall thickness (additional spacers are available for 4mm wall thickness).

3. SAR Validation Measurement

A SAR validation check was performed with the box-phantom located on the SARA2 phantom support base on the SARA2 robot system. Tests were then conducted at a feed power level of approx. 0.25W. The actual power level was recorded and used to normalise the results obtained to the standard input power conditions of 1W (forward power). The ambient temperature was 24°C.

The phantom was filled with a 2450MHz brain liquid using a recipe from [1], which was measured using an Indexsar DiLine kit at 2450MHz. Measurements were taken at 23°C and 30°C and interpolation was used to find the properties at 24°C which were as below:




Page 95 of 97

Relative Permittivity 39.221 Conductivity 1.8714 S/m

The SARA2 software version 0.420N was used with an Indexsar probe previously calibrated using waveguide techniques.

The 3D measurement made using the dipole at the bottom of the phantom box is shown below:

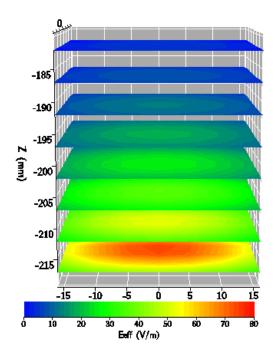

The volume-averaged SAR results, normalised to an input power of 1W (forward power) are:

Averaged over 1 cm³ (1g) of tissue 51.376 W/kg Averaged over 10cm³ (10g) of tissue 23.888 W/kg

These results can be compared with Table 8.1 in [1]. The agreement is within 10%.

4. Dipole impedance and return loss

The dipoles are designed to have low return loss ONLY when presented against a lossy-phantom at the specified distance. A Vector Network Analyser (VNA) was used to perform a return loss measurement on the specific dipole when in the measurement-location against the box phantom. The distance was as specified in the standard i.e. 10mm from the liquid (for 2450MHz). The Indexsar foam spacers (described above) were used to ensure this condition during measurement.

The impedance was measured at the SMA-connector with the network analyser. The following parameters were measured:


Dipole impedance at 2450 MHz Re{Z} = **44.814** Ω



Page 96 of 97

 $Im{Z} = -5.3359 \Omega$

Return loss at 2450MHz -22.122 dB

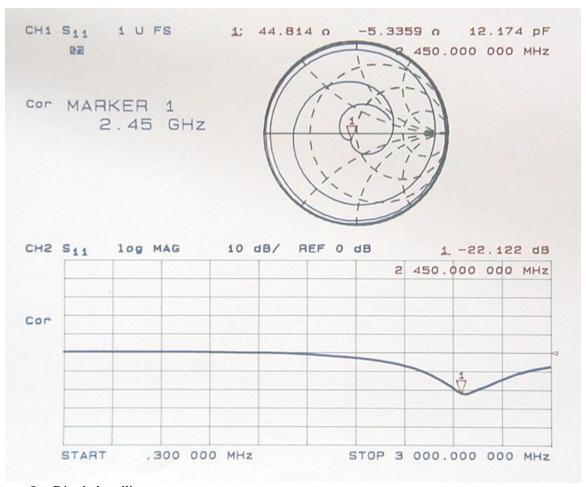

5. Dipole handling

The dipoles are made from standard, copper-sheathed coaxial cable. In assembly, the sections are joined using ordinary soft-soldering. This is necessary to avoid excessive heat input in manufacture, which would destroy the polythene dielectric used for the cable. The consequence of the construction material and the assembly technique is that the dipoles are fragile and can be deformed by rough handling. Conversely, they can be straightened quite easily as described in this report.

If a dipole is suspected of being deformed, a normal workshop lathe can be used as an alignment jig to restore the symmetry. To do this, the dipole is first placed in the headstock of the lathe (centred on the plastic or brass spacers) and the headstock is rotated by hand (do NOT use the motor). A marker (lathe tool or similar) is brought up close to the end of one dipole arm and then the headstock is rotated by 0.5 rev. to check the opposing arm. If they are not balanced, judicious deformation of the arms can be used to restore the symmetry.

If a dipole has a failed solder joint, the dipole can be fixed down in such a way that the arms are co-linear and the joint re-soldered with a reasonably-powerful electrical soldering iron. Do not use gas soldering irons. After such a repair, electrical tests must be performed as described below.



Page 97 of 97

Please note that, because of their construction, the dipoles are short-circuited for DC signals.

6. Tuning the dipole

The dipole dimensions are based on calculations that assumed specific liquid dielectric properties. If the liquid dielectric properties are somewhat different, the dipole tuning will also vary. A pragmatic way of accounting for variations in liquid properties is to 'tune' the dipole (by applying minor variations to its effective length). For this purpose, Indexsar can supply short brass tube lengths to extend the length of the dipole and thus 'tune' the dipole. It cannot be made shorter without removing a bit from the arm. An alternative way to tune the dipole is to use copper shielding tape to extend the effective length of the dipole. Do both arms equally.

It should be possible to tune a dipole as described, whilst in place in the measurement position as long as the user has access to a VNA for determining the return loss.

7. Reference

[1] Draft recommended practice for determining the peak spatial-average specific absorption rate (SAR) in the human body due to wireless communications devices: Measurement Techniques. Draft CD1.1 – December 29, 2002.