
Bluetooth USB Adapter

Connect your peripherals and computing devices without cables



Quick Installation Guide Widcomm 1.4.2.10

Printed in Taiwan

Introduction

PC System Requirements

- PC-compatible computer, CPU speed of 200MHz or above
 Memory: 64MB or above, 128MB recommended
- One available USB port, USB 1.1 standard
- · Windows 98 SE, Me, 2000, and XP

Mac® System Requirements

- One available USB port, USB 1.1 standard
 Mac OS X v10.2 and higher*

Product Contents

- · Bluetooth USB Adapter
- CD-ROM for installation software and documentation
- · Quick Installation Guide

*Mac OS X driver and software provided by Apple®.

Step 1: Software Setup

Software Setup for Windows 98 SE, Me, 2000, and XP

To install the software for the USB Adapter, follow the instructions below:
Note: The installation process for Windows XP may look slightly different from
Windows 98 SE, Me, and 2000.
Note: Do not insert the USB Adapter into the USB port prior to software

- Insert the software installation CD-ROM into the PC's CD-ROM drive.

 The "Software InstallShield"
- Wizard" window appears.
 Click on "Next" to begin the installation process.



Step 1: Software Setup

3. Choose "I accept the terms in the license agreement" to accept the license agreement. Click on "Next" to continue.



4. Specify the location where the software files will be installed on your hard drive. It is recommended that you install the software in the default directory "C:\Program Files\WIDCOMM\
Bluetooth Software\". Click on "Next"
to continue.



Step 1: Software Setup

5. Confirm that the device software is ready to be installed and click on "Install". 6. The InstallShield Wizard will begin to install the Bluetooth Software.
This may take several minutes.





7. During the installation process you may be prompted to insert your USB Adapter. If your USB Adapter is not plugged into your computer at this time, you may insert it into an available USB 1.1-compliant port on your desktop or notebook computer, then click "OK" to continue. Click on "Cancel" to continue installation without the Bluetooth device inserted. Refer to the "Hardware Installation" section of this User Manual for instructions for installing the hardware.



Note: If at any time during the installation process you receive a "Driver Signature Notice", click "OK" to continue the installation process.

5



8. Confirm the completion of the software installation; click "Finish" and restart the system if prompted to do so.



6

Step 2: Hardware Setup

Hardware Setup for Windows 98 SE, Me, 2000, and XP

Follow these instructions to install your USB Adapter on your PC. Note: Your USB Adapter is sensitive to static electricity, which can damage its delicate electrical components. To protect your device, always touch the metal chassis of your computer before handing the USB Adapter. This will ground any potential electrostatic discharge. Avoid touching the metal connector when handling the USB Adapter. Dry weather conditions or walking across carpeted floors may cause you to acquire an electrostatic charge.

- 1. Connect the USB Adapter directly to an available USB A-type connector on your desktop or notebook computer. Your system should register a new USB device found.
- 2. Choose "Install from a list or specific location" then click "Next".

Step 2: Hardware Setup

3. Browse for the location of the device driver ":\Program Files\WIDCOMM\ Bluetooth\Software\bin\" then click "Next".


4. If you receive the following "Hardware installation notice", click on "Continue Anyway" to continue with the installation process.





Step 2: Hardware Setup

5. A window will appear that confirms the completion of the hardware installation; click on "Finish" to complete the installation process.

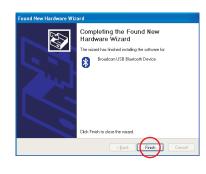

Step 2: Hardware Setup

Uninstalling the Software for Windows 98 SE, Me, 2000, and XP

Follow these instructions to uninstall your USB Adapter on your PC.

- Insert the CD-ROM included with your USB Adapter.
 This "InstallShield Wizard" should automatically load. If it does not load, explore the CD and run the "Setup.exe" file.
- 3. The "InstallShield" window should now appear. Click "Next" to continue with the uninstall process.

10