

PMR/GMRS
G-006
OPERATING
Manual

Welcome to Use G-006


Please read carefully this user's Manual in order to have a better understanding of all functions of CHK-077E double-way watch talkers.

Principal Characteristics of this Unit

- Watch type with adjustable watchband;
- This unit can make simultaneous one-to-one and one-to-more communication;
- With 22 channels for you to select;
- With effective communicative distance of 2.5 kilometers;
- With automatic noise removal function;
- With automatic electricity saving function;
- With internal acoustic control communication (VOX) function;
- With channel playing function;
- With 12-hour system (am/pm time display);
- With backlighting display;
- Using lithium ionic cells; and
- With automatic protection functions in battery charging.

Liquid Crystal Display Screen

1. Channel numbers (1-8): Display the current channel;
2. Transmission indicator (TX): Indicator in the time of sending messages;
3. Receiving indicator (RX): indicator in the time of receiving messages;
4. Select volume (8 levels): Display the current volume setup;
5. Call dispatch (call): Indicator in the time of calling;
6. Battery capacity display: Indicator when battery is insufficient or low;
7. Acoustic control (VOX): indicator when the unit is in the voice operation dispatch (VOX);
8. 12-hour system time (12:00);




Battery Installation

One lithium ionic cell (attached with the unit) is applied to this talker.

The installation and replacement of cells are described as follows:


1. Press down the fixed button on the side of the battery cover of this unit to open the battery cover;
2. In the time of installing the lithium ionic cells, please place the lithium ionic cell into the cell compartment. In installation, please note the polarity within the compartment and the cell itself; and
3. Put the cell compartment where it is and lock tightly the fixed button for the cell cover.



! Special Caution: No inserting charger if this unit is not installed with cell !!!

This talker has an AC charger and can charge the lithium cell in the following manner:

1. Lift up the earphone /charger jack cover on the side of this unit;
2. Connect the AC charger to the AC jack of the outlet;
3. Connect the AC charger to the earphone/charger jack. In the charging process, the cell volume icon is shown on the display screen, after battery charging, such icon will automatically disappear.

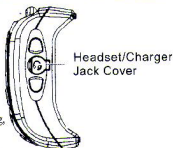

Note: If it is the battery charging for the first time, please charge the cell for as long as solid 12 hours or so.

Battery Volume and Low Battery Operation


When the battery volume is detected as insufficient in the mode of communication and watch, the icon of battery volume will appear. When the battery volume is detected as insufficient in the communication mode, and approximately 15 seconds later, the icon will automatically transferred to the watch. At this time it is necessary to charge the cell on a

Battery Installation

One lithium ionic cell (attached with the unit) is applied to this talker.

The installation and replacement of cells are described as follows:


1. Press down the fixed button on the side of the battery cover of this unit to open the battery cover;
2. In the time of installing the lithium ionic cells, please place the lithium ionic cell into the cell compartment. In installation, please note the polarity within the compartment and the cell itself; and
3. Put the cell compartment where it is and lock tightly the fixed button for the cell cover.



! Special Caution: No inserting charger if this unit is not installed with cell !!!

This talker has an AC charger and can charge the lithium cell in the following manner:

1. Lift up the earphone /charger jack cover on the side of this unit;
2. Connect the AC charger to the AC jack of the outlet;
3. Connect the AC charger to the earphone/charger jack. In the charging process, the cell volume icon is shown on the display screen, after battery charging, such icon will automatically disappear.

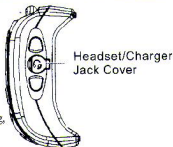

Note: If it is the battery charging for the first time, please charge the cell for as long as solid 12 hours or so.

Battery Volume and Low Battery Operation

When the battery volume is detected as insufficient in the mode of communication and watch, the icon of battery volume will appear. When the battery volume is detected as insufficient in the communication mode, and approximately 15 seconds later, the icon will automatically transferred to the watch. At this time it is necessary to charge the cell on a