





BUREAU VERITAS

Reference No.: W7L-P24040002RF01

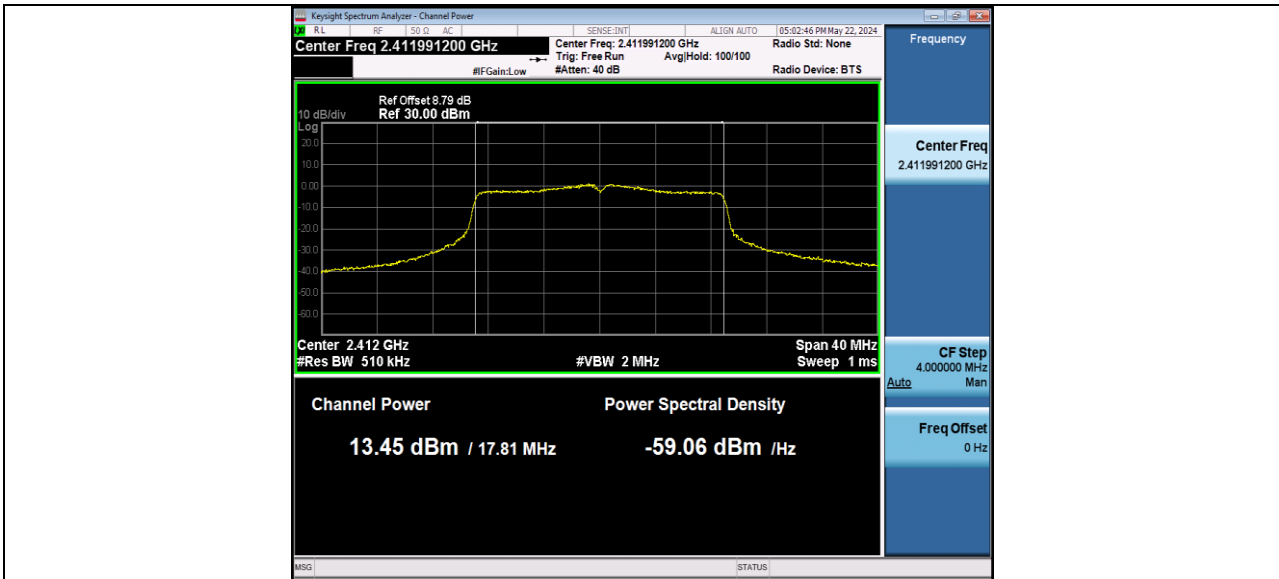

11N/AC 20MIMO_Ant2_2412

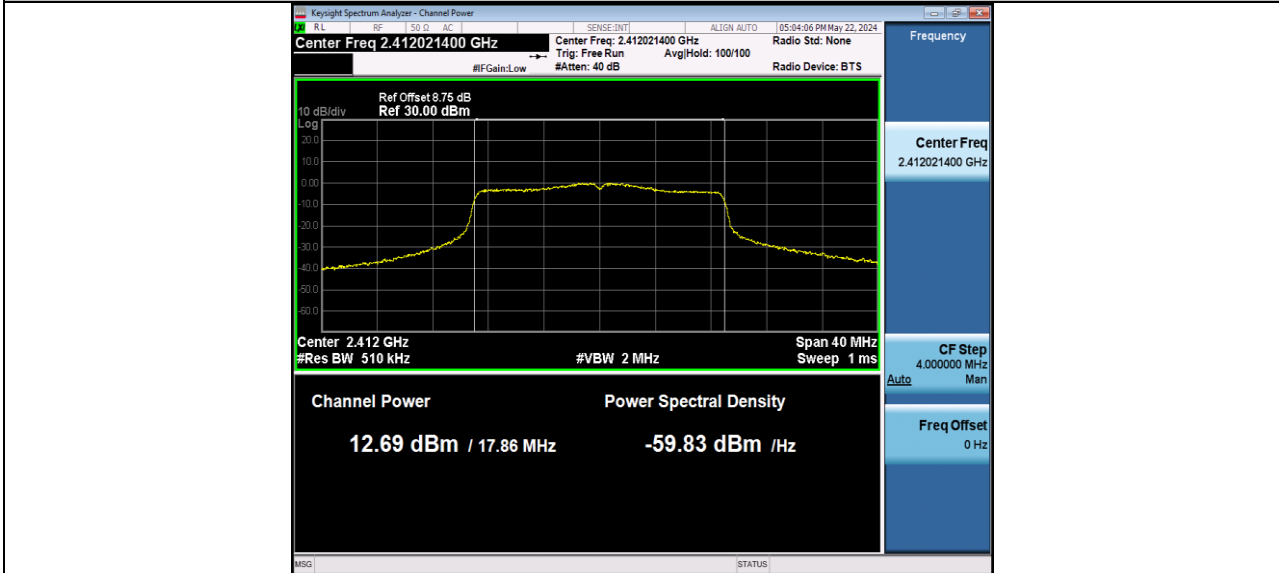


11N/AC 20MIMO_Ant1_2437




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

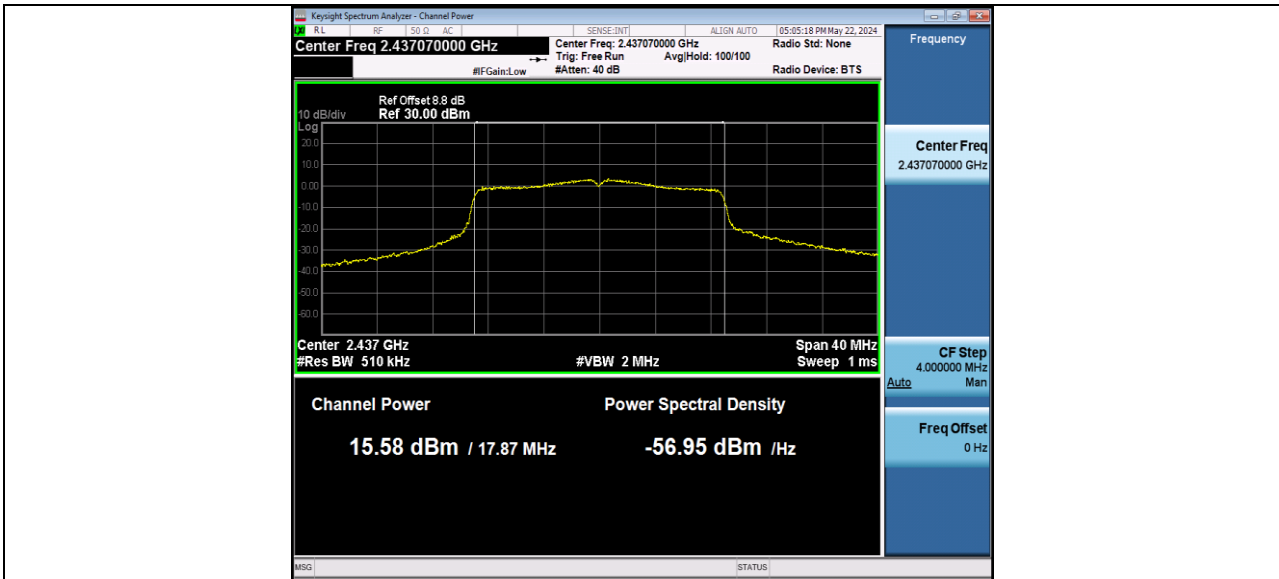

11N/AC 20MIMO_Ant2_2437


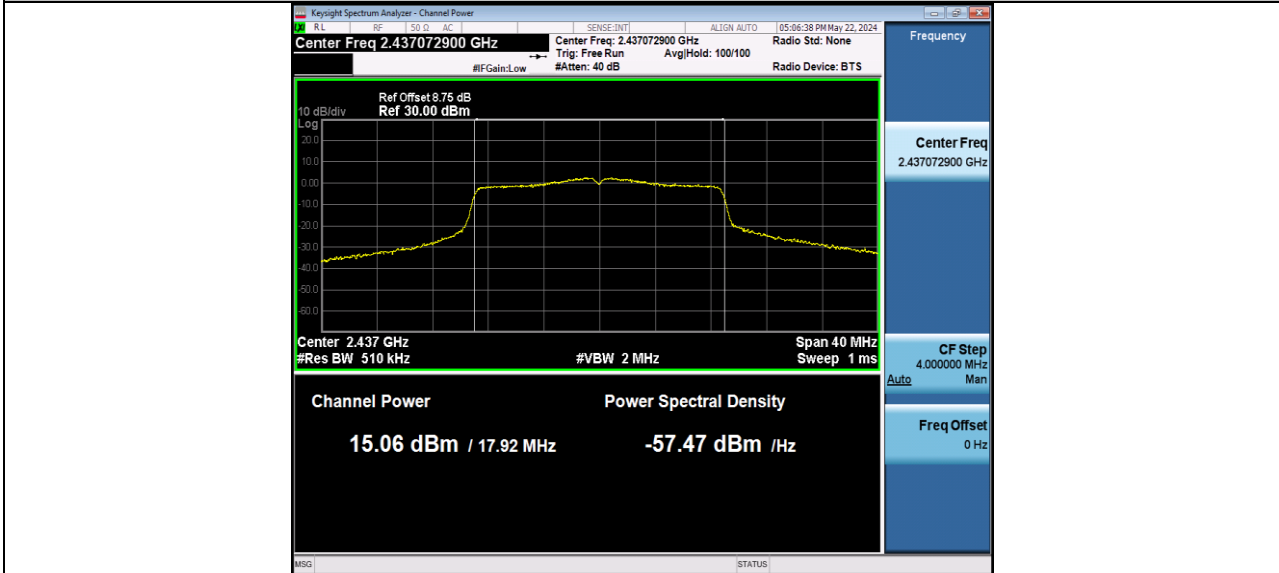


11N/AC 20MIMO_Ant1_2462



BUREAU VERITAS


Reference No.: W7L-P24040002RF01

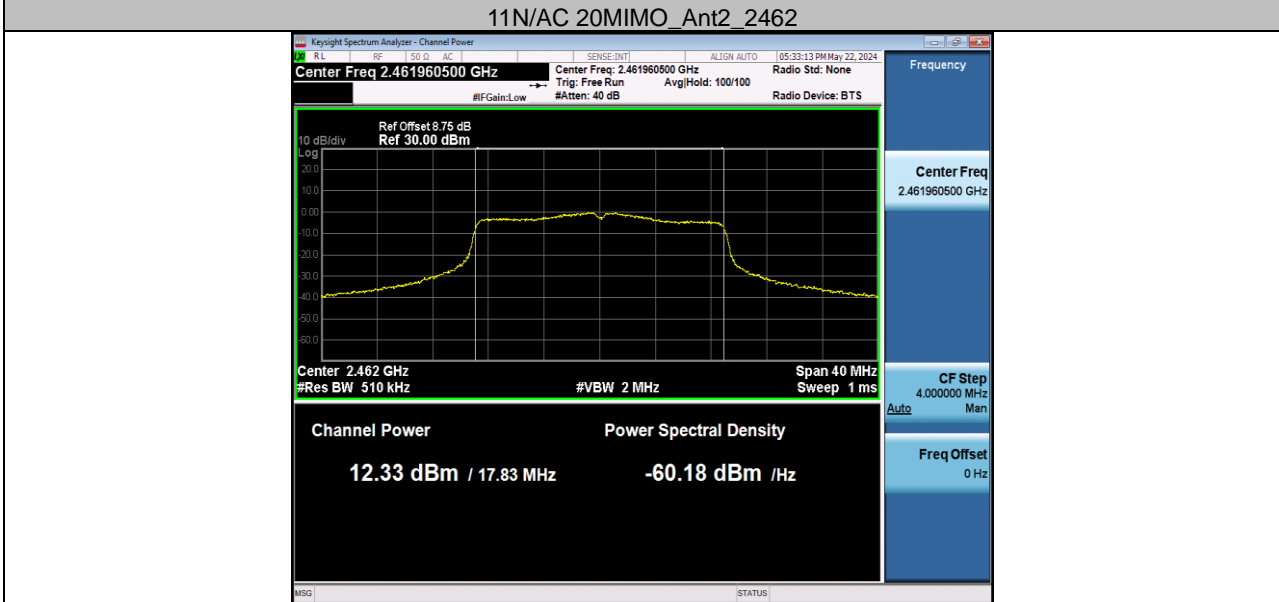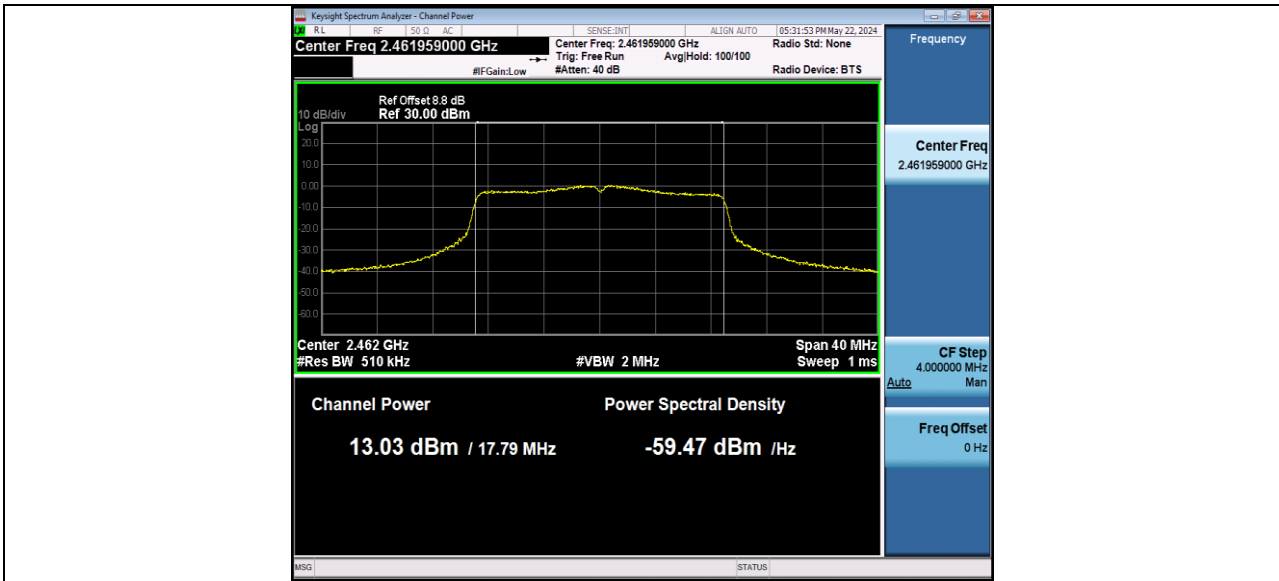




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

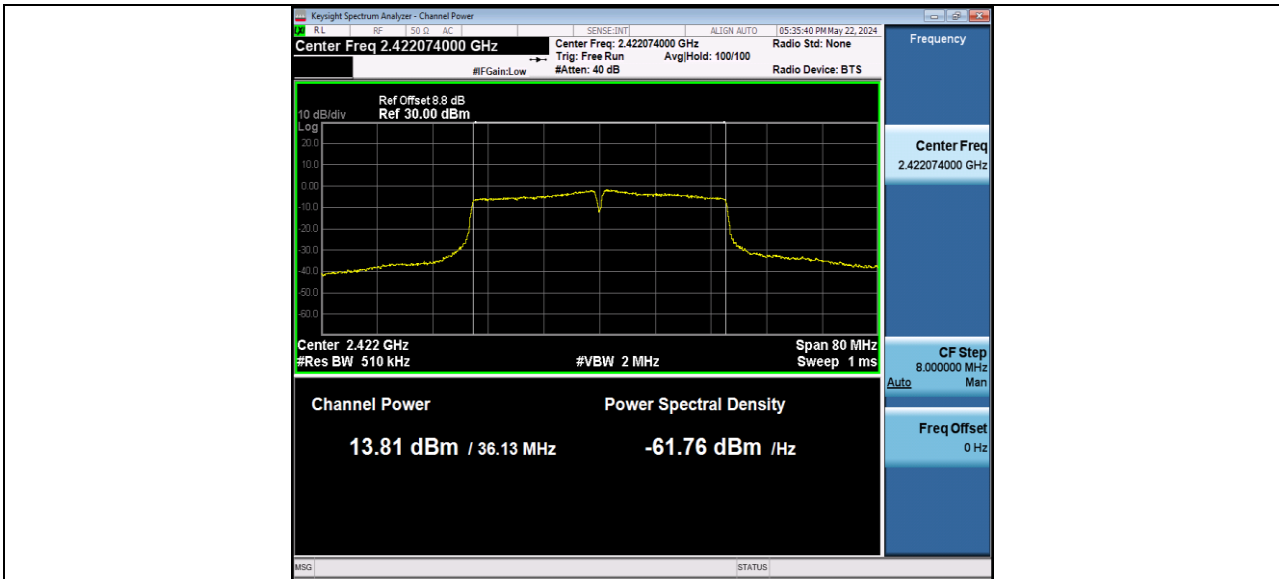

11N/AC 40MIMO_Ant2_2422

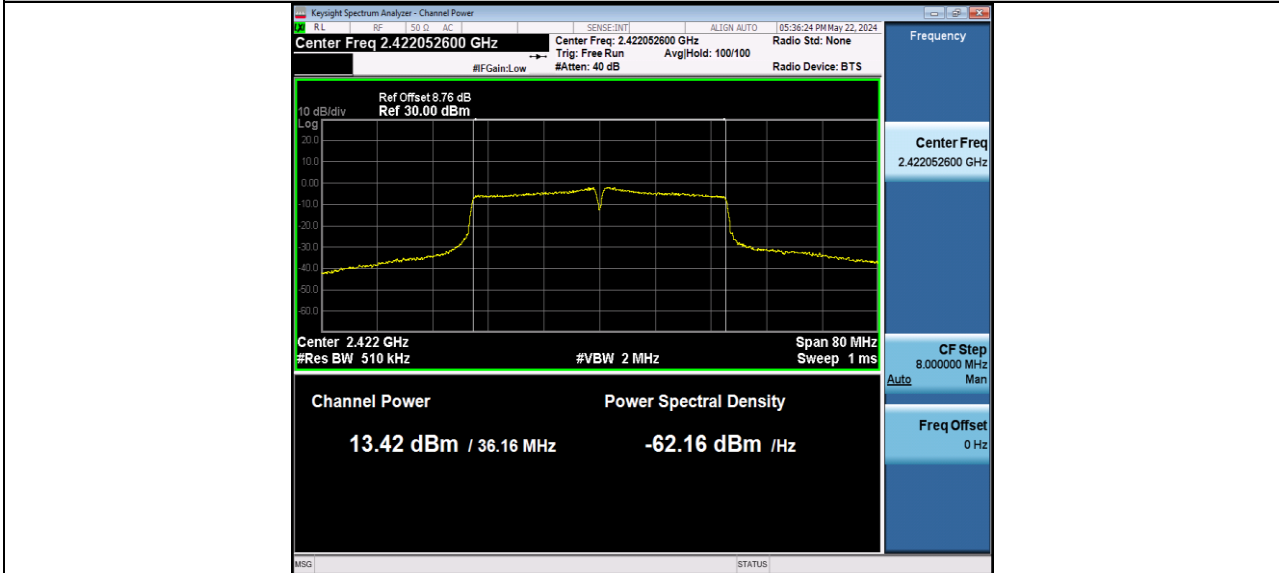


11N/AC 40MIMO_Ant1_2437




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

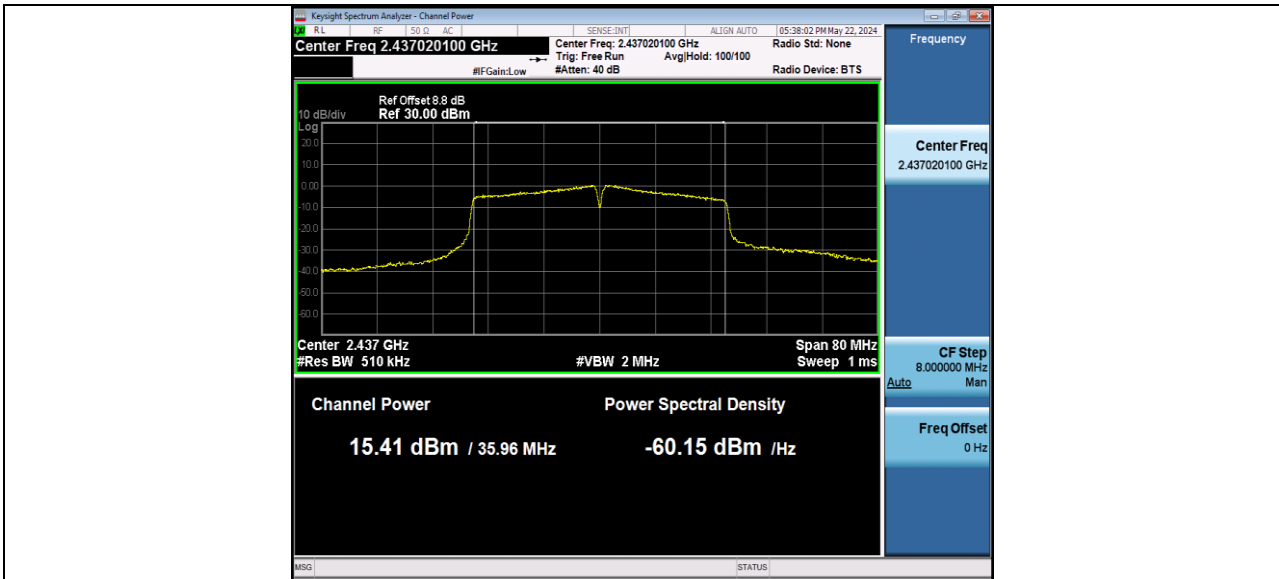

11N/AC 40MIMO_Ant2_2437

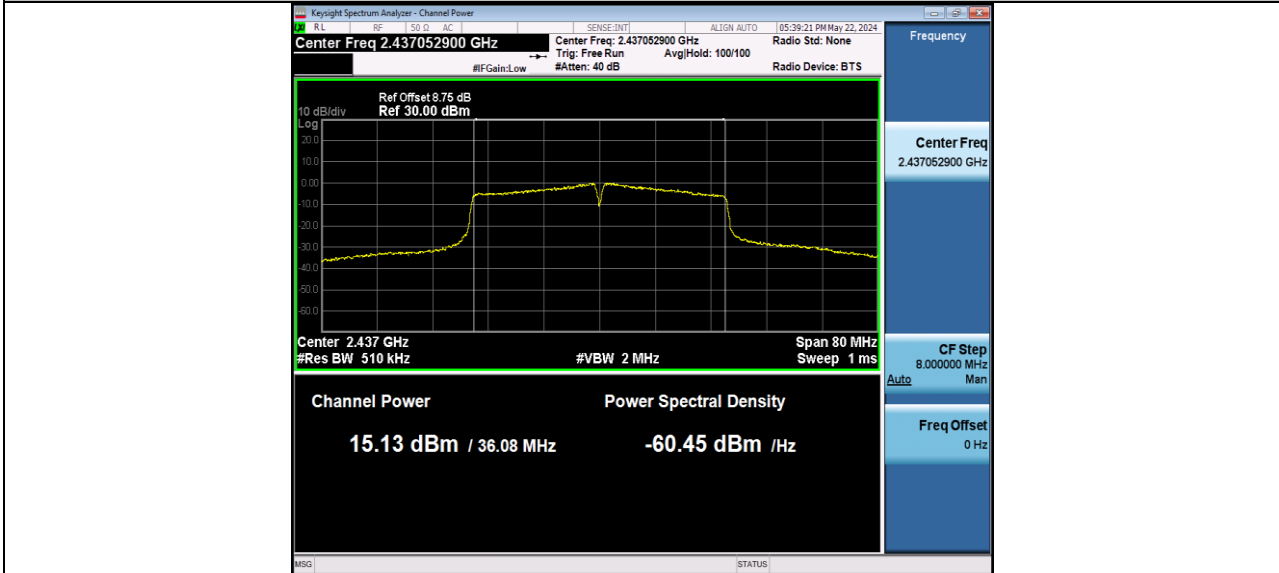


11N/AC 40MIMO_Ant1_2452




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

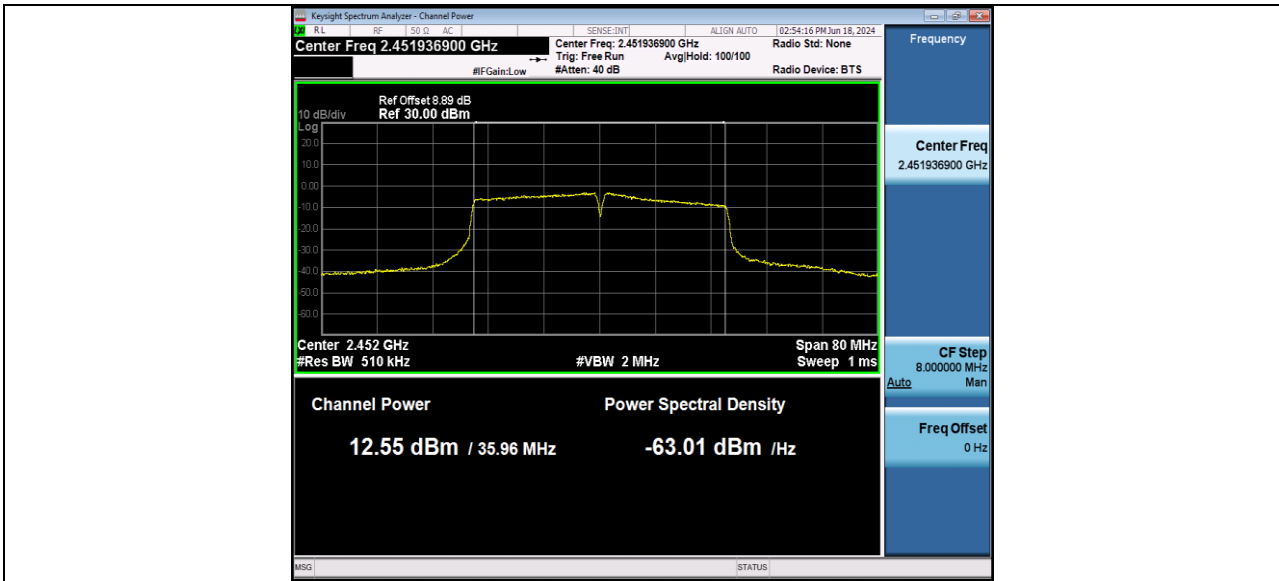

11N/AC 40MIMO_Ant2_2452

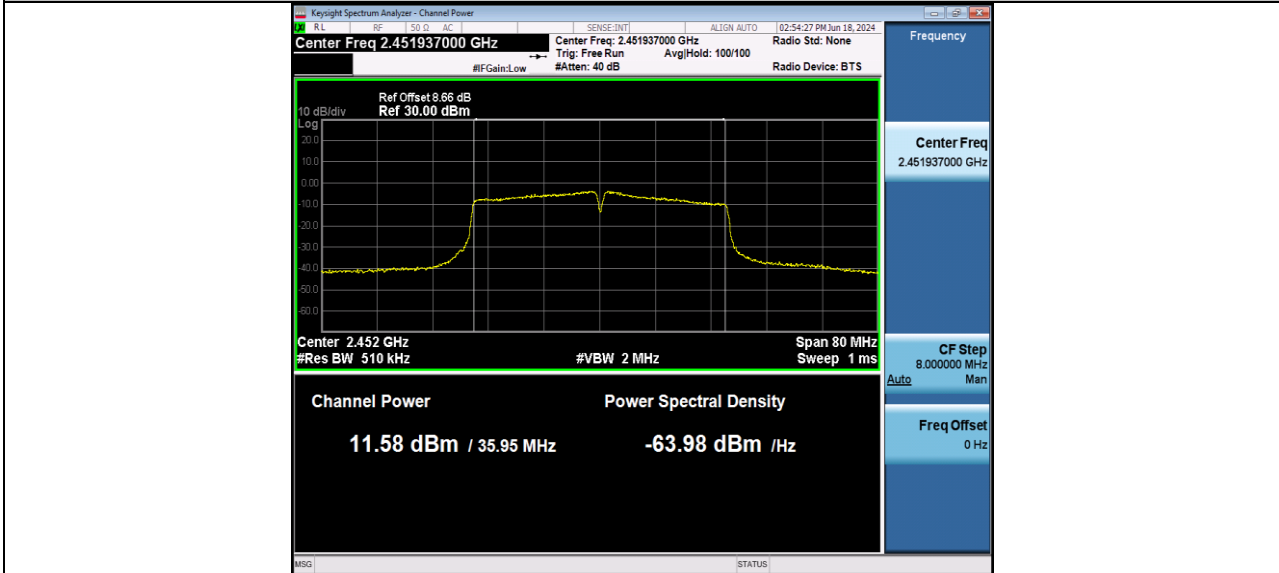


11AX20MIMO_Ant1_2412




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

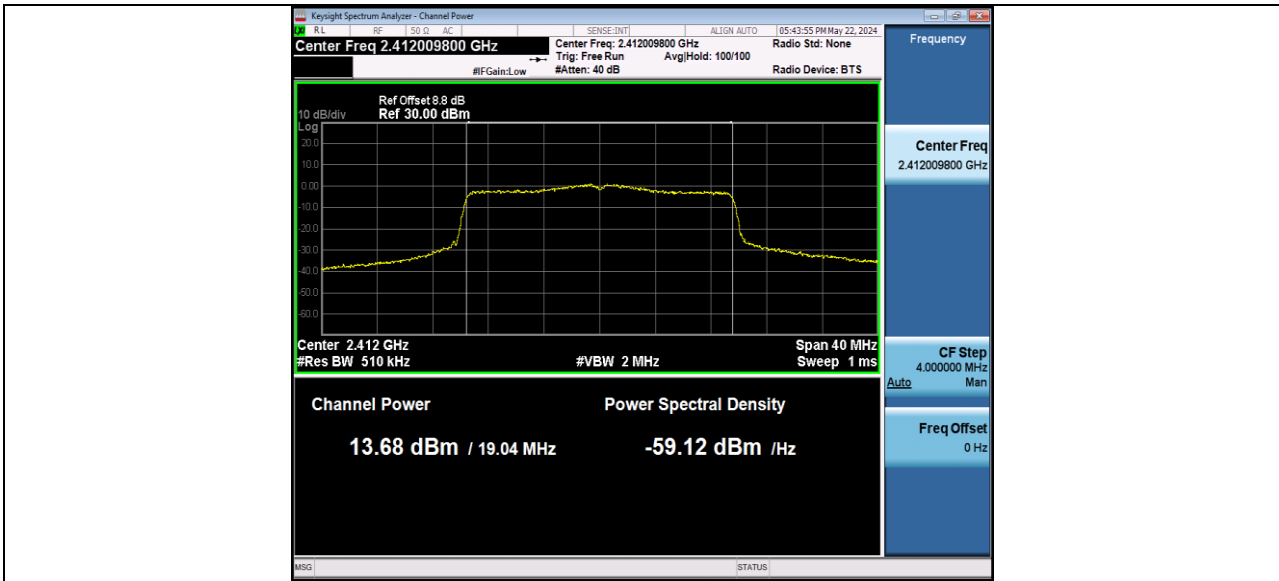

11AX20MIMO_Ant2_2412

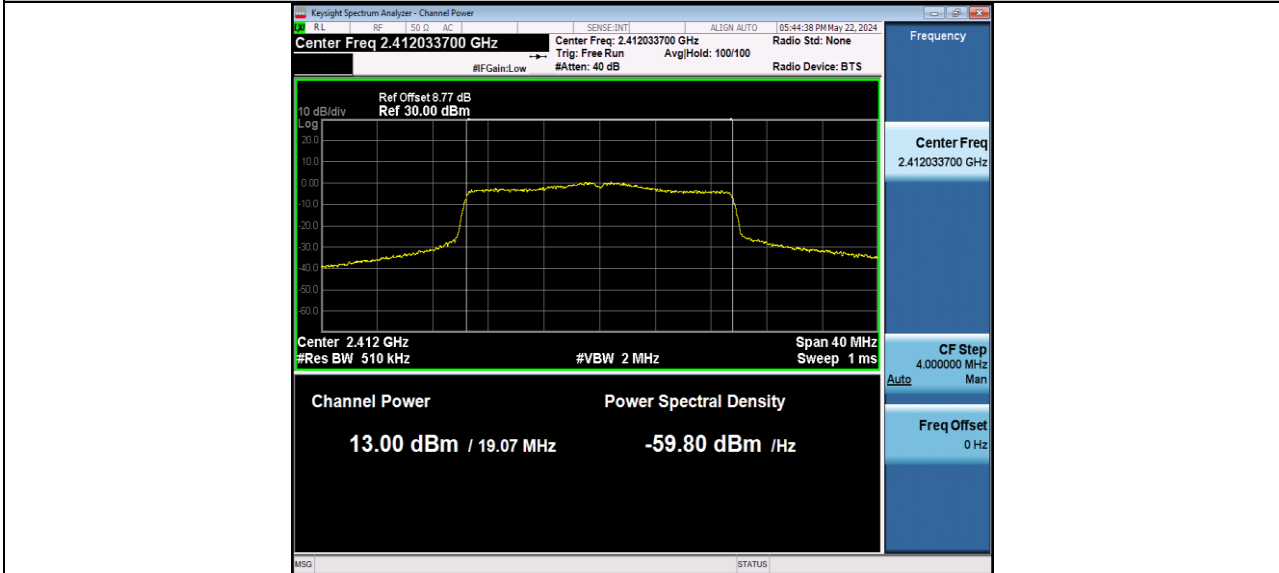


11AX20MIMO_Ant1_2437




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

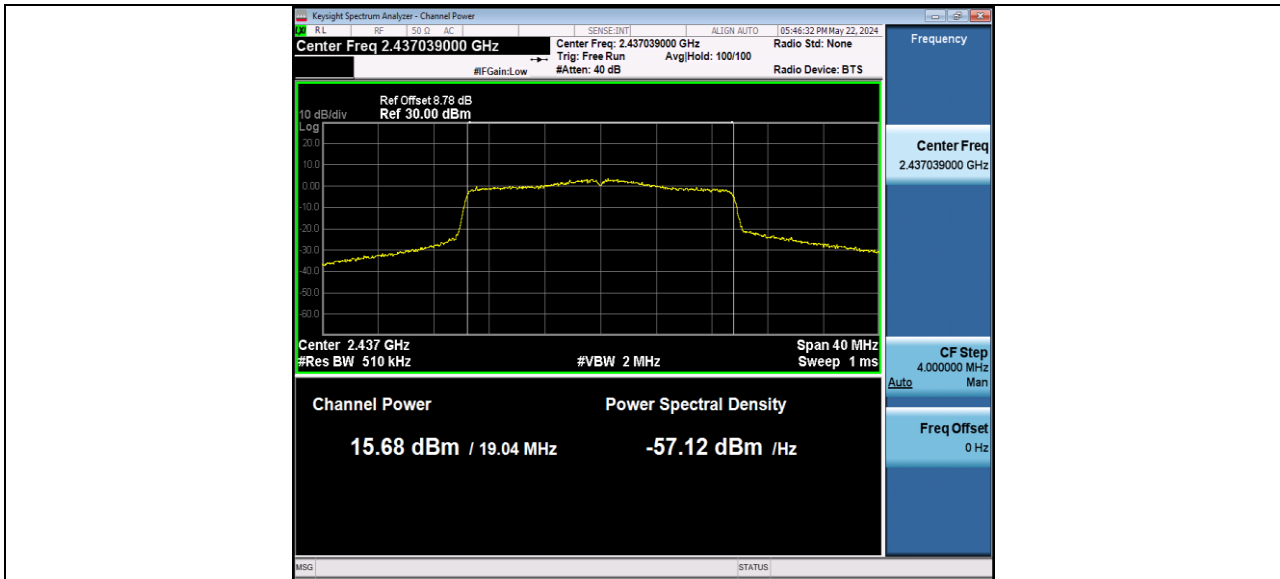

11AX20MIMO_Ant2_2437

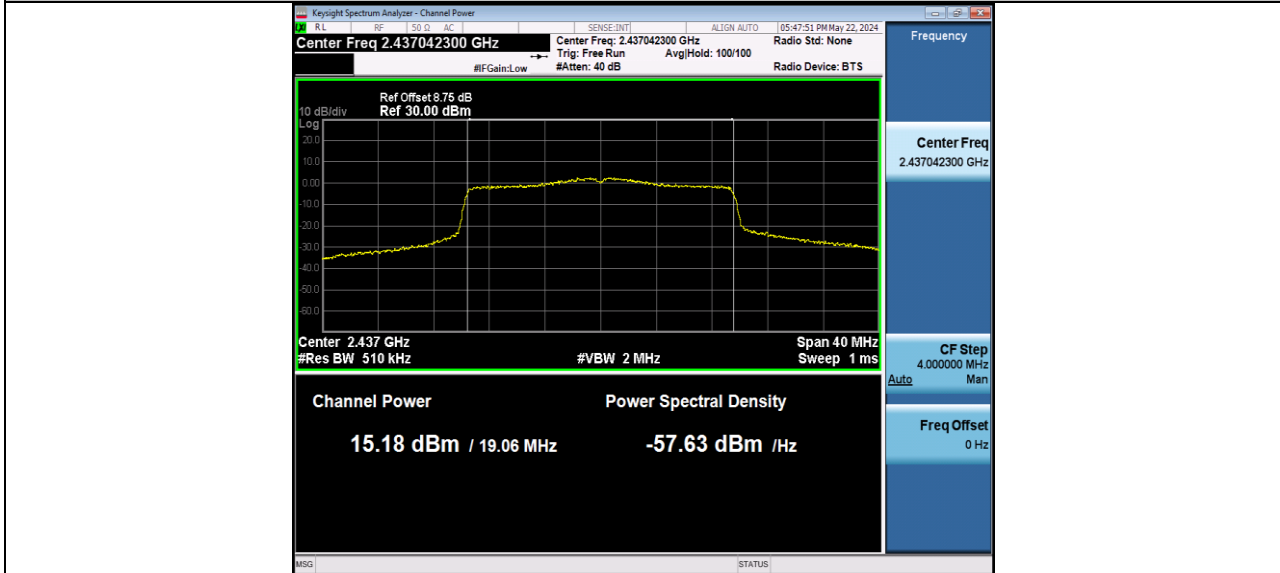


11AX20MIMO_Ant1_2462




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

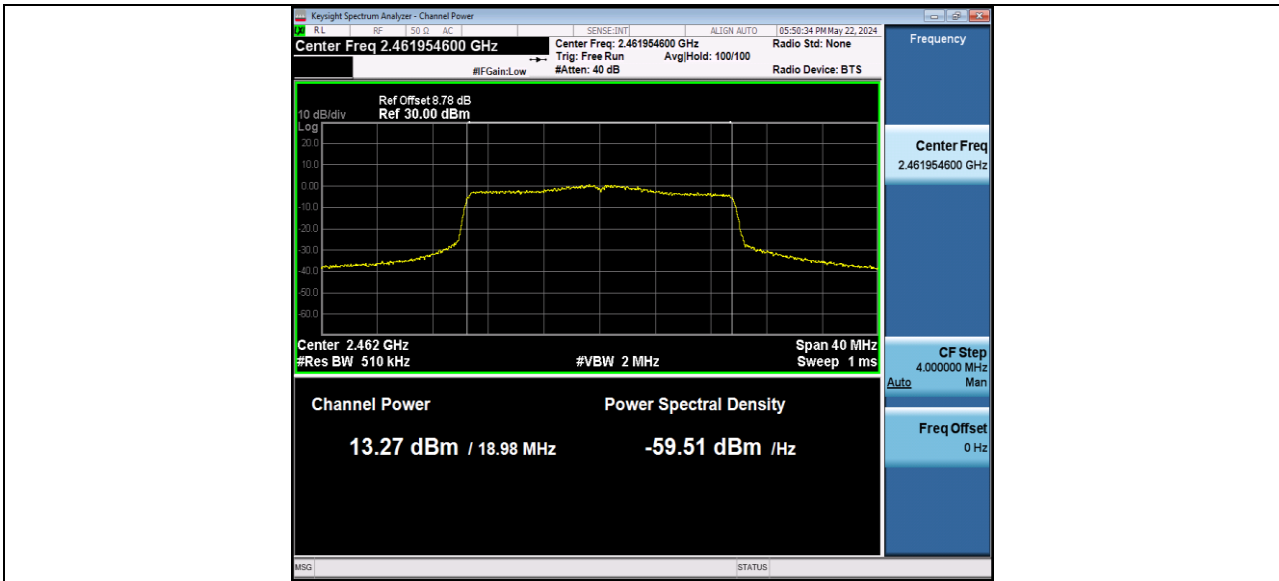

11AX20MIMO_Ant2_2462

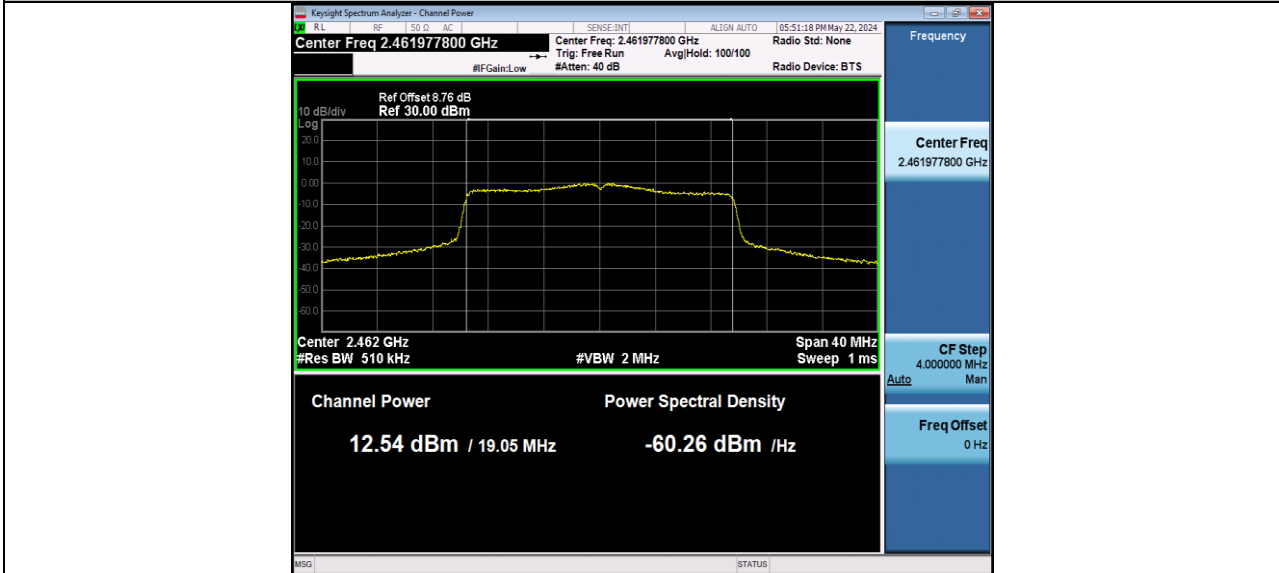


11AX40MIMO_Ant1_2422




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

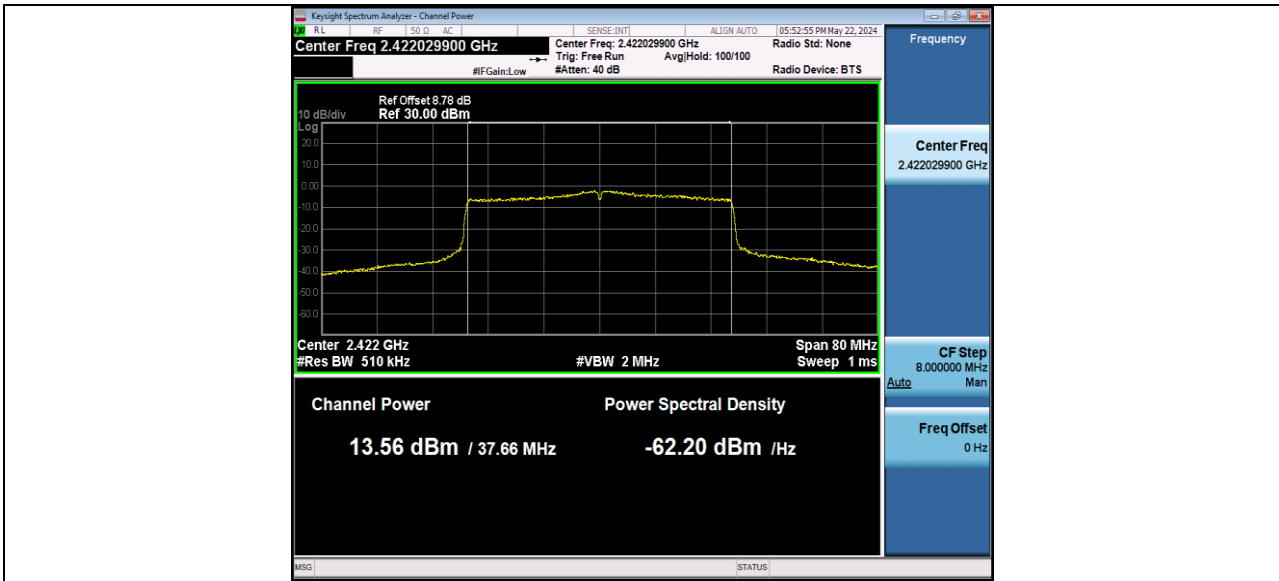

11AX40MIMO_Ant2_2422

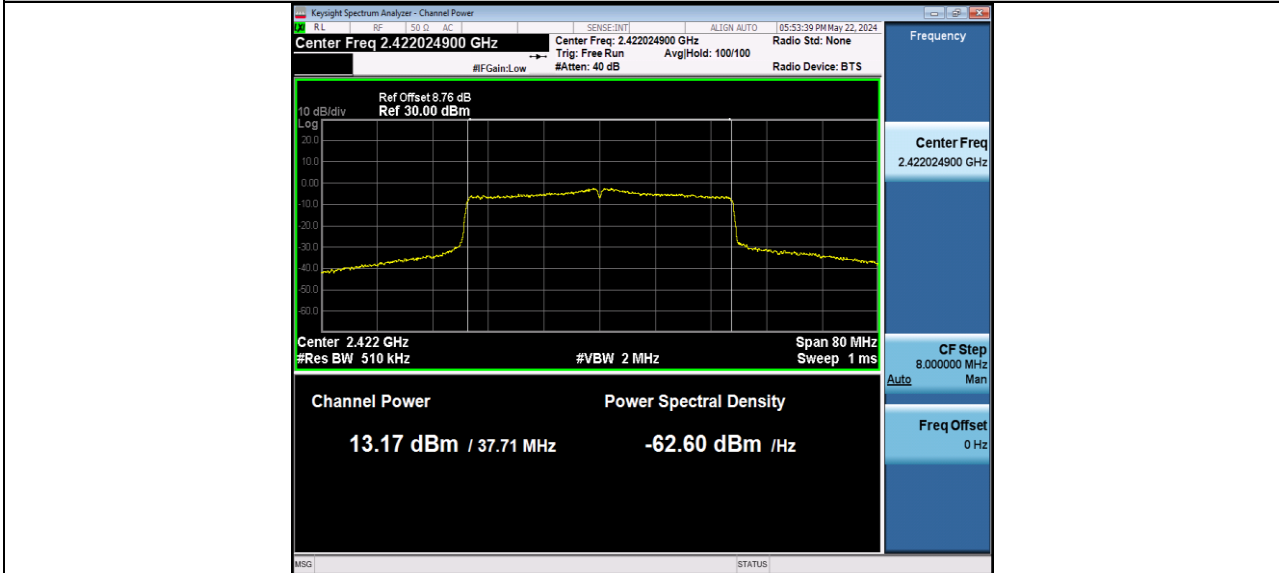


11AX40MIMO_Ant1_2437




BUREAU
VERITAS

Reference No.: W7L-P24040002RF01

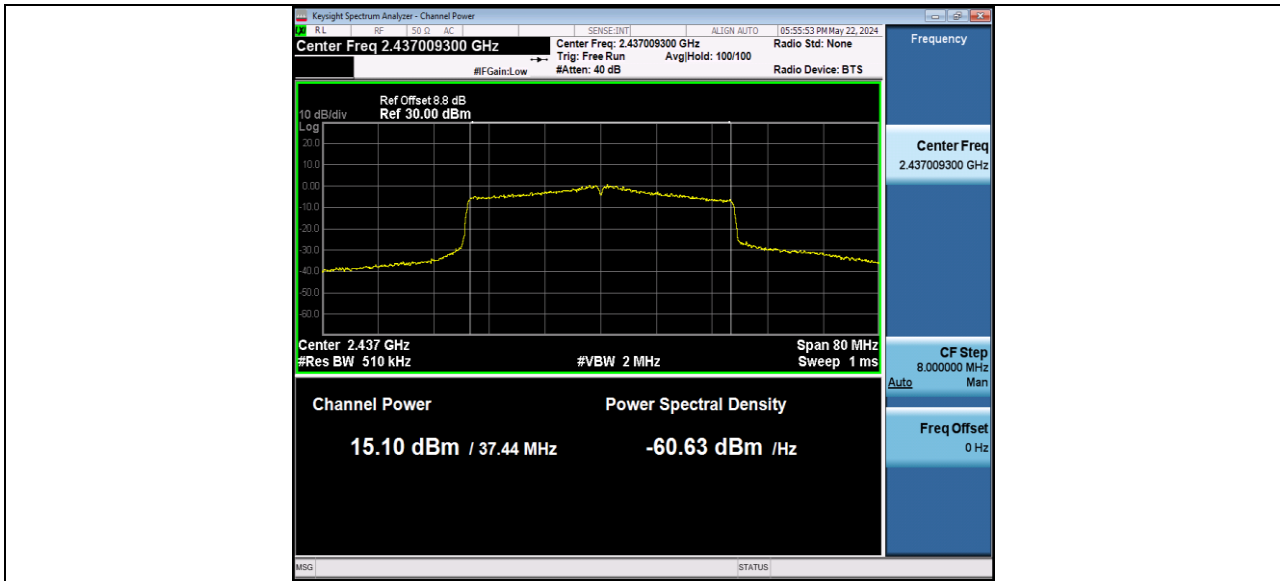

11AX40MIMO_Ant2_2437

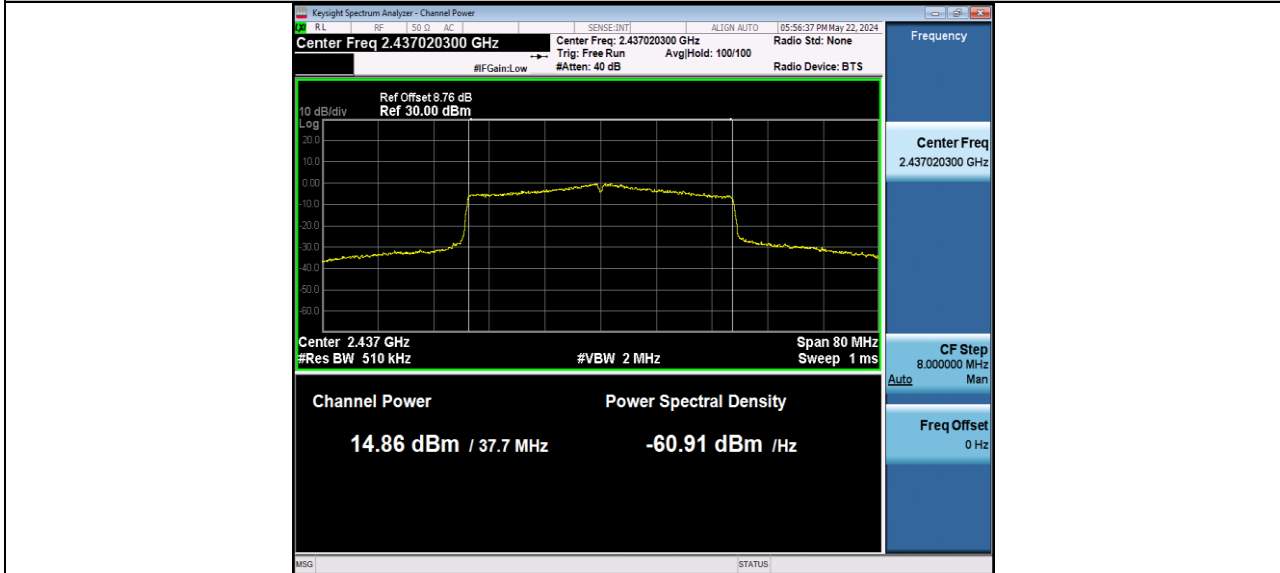


11AX40MIMO_Ant1_2452




BUREAU
VERITAS

Reference No.: W7L-P24040002RF01

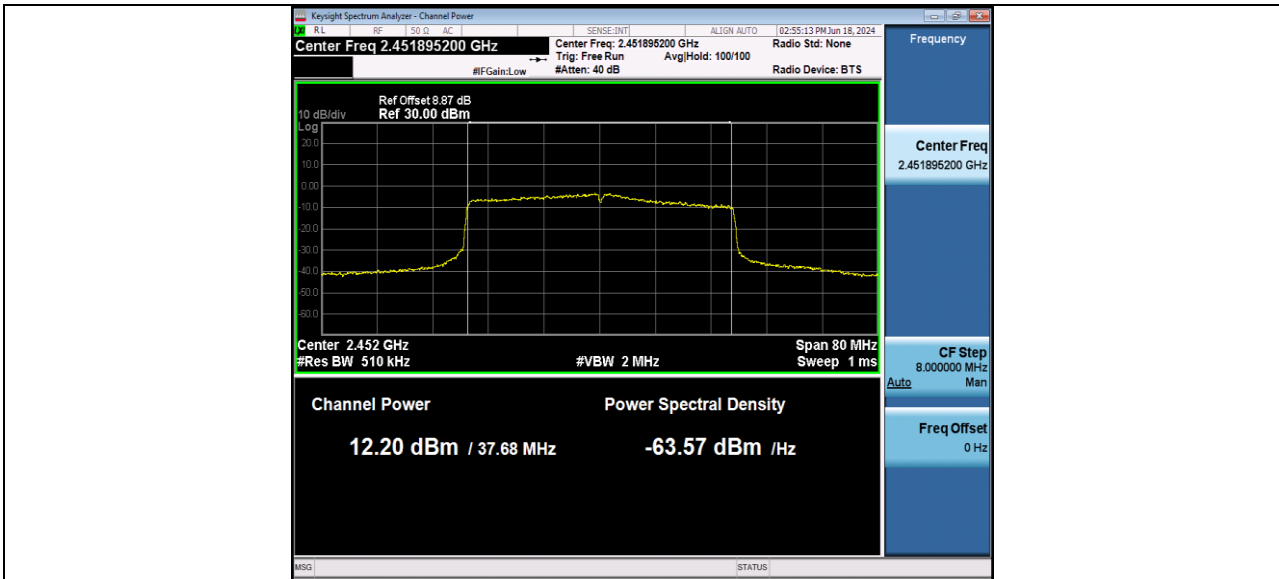

11AX40MIMO_Ant2_2452

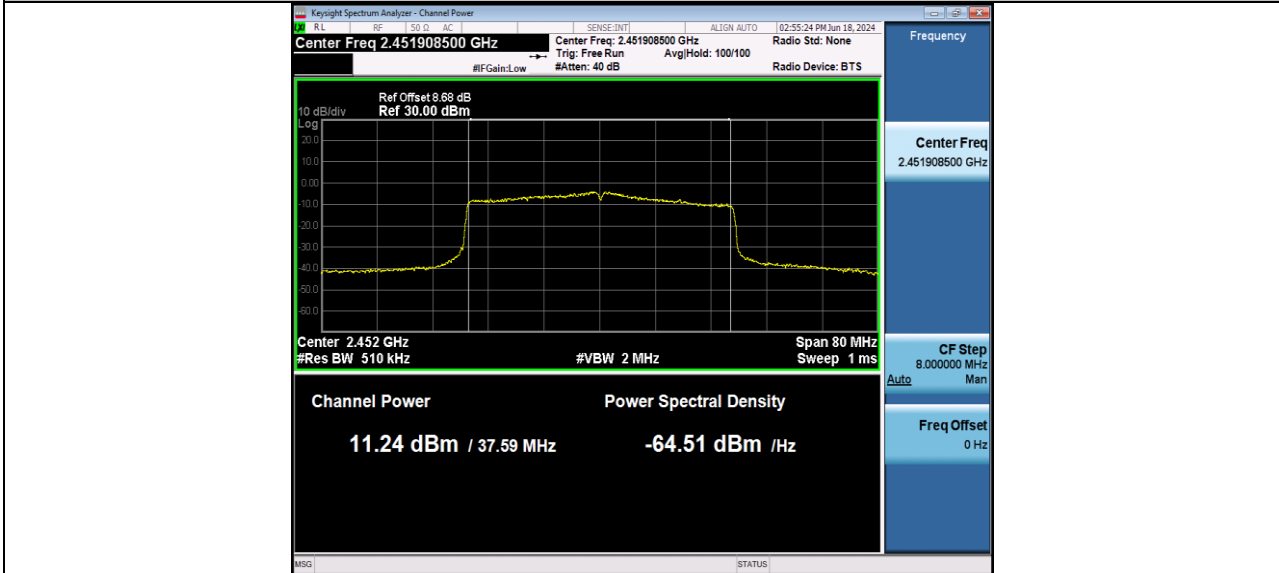



Reference No.: W7L-P24040002RF01

MAXIMUM POWER SPECTRAL DENSITY TEST RESULT

TestMode	Antenna	Frequency [MHz]	Result [dBm/30kHz]	Result [dBm/3kHz]	Limit [dBm/3kHz]	Verdict
11B-CDD	Ant1	2412	-7.74	-17.74	≤8.00	PASS
	Ant2	2412	-8.51	-18.51	≤8.00	PASS
	total	2412	-5.10	-15.1	≤8.00	PASS
	Ant1	2437	-5.59	-15.59	≤8.00	PASS
	Ant2	2437	-6.16	-16.16	≤8.00	PASS
	total	2437	-2.86	-12.86	≤8.00	PASS
	Ant1	2462	-8.14	-18.14	≤8.00	PASS
	Ant2	2462	-9.23	-19.23	≤8.00	PASS
	total	2462	-5.64	-15.64	≤8.00	PASS
11G-CDD	Ant1	2412	-9.27	-19.27	≤8.00	PASS
	Ant2	2412	-9.65	-19.65	≤8.00	PASS
	total	2412	-6.45	-16.45	≤8.00	PASS
	Ant1	2437	-6.51	-16.51	≤8.00	PASS
	Ant2	2437	-7.10	-17.1	≤8.00	PASS
	total	2437	-3.78	-13.78	≤8.00	PASS
	Ant1	2462	-9.40	-19.4	≤8.00	PASS
	Ant2	2462	-9.64	-19.64	≤8.00	PASS
	total	2462	-6.51	-16.51	≤8.00	PASS
11N/AC 20MIMO	Ant1	2412	-13.74	-23.74	≤8.00	PASS
	Ant2	2412	-13.83	-23.83	≤8.00	PASS
	total	2412	-10.77	-20.77	≤8.00	PASS
	Ant1	2437	-11.77	-21.77	≤8.00	PASS
	Ant2	2437	-11.69	-21.69	≤8.00	PASS
	total	2437	-8.72	-18.72	≤8.00	PASS
	Ant1	2462	-14.86	-24.86	≤8.00	PASS
	Ant2	2462	-12.97	-22.97	≤8.00	PASS
	total	2462	-10.80	-20.8	≤8.00	PASS
11N/AC 40MIMO	Ant1	2422	-12.41	-22.41	≤8.00	PASS
	Ant2	2422	-12.61	-22.61	≤8.00	PASS
	total	2422	-9.50	-19.5	≤8.00	PASS
	Ant1	2437	-9.71	-19.71	≤8.00	PASS
	Ant2	2437	-10.27	-20.27	≤8.00	PASS
	total	2437	-6.97	-16.97	≤8.00	PASS
	Ant1	2452	-13.70	-23.70	≤8.00	PASS
	Ant2	2452	-14.28	-24.28	≤8.00	PASS
	total	2452	-10.97	-20.97	≤8.00	PASS
11AX20MIMO	Ant1	2412	-10.49	-20.49	≤8.00	PASS
	Ant2	2412	-11.32	-21.32	≤8.00	PASS
	total	2412	-7.87	-17.87	≤8.00	PASS
	Ant1	2437	-8.49	-18.49	≤8.00	PASS
	Ant2	2437	-9.22	-19.22	≤8.00	PASS
	total	2437	-5.83	-15.83	≤8.00	PASS
	Ant1	2462	-11.34	-21.34	≤8.00	PASS
	Ant2	2462	-11.92	-21.92	≤8.00	PASS



BUREAU
VERITAS


Reference No.: W7L-P24040002RF01

	total	2462	-8.61	-18.61	≤8.00	PASS
11AX40MIMO	Ant1	2422	-14.07	-24.07	≤8.00	PASS
	Ant2	2422	-14.23	-24.23	≤8.00	PASS
	total	2422	-11.14	-21.14	≤8.00	PASS
	Ant1	2437	-11.57	-21.57	≤8.00	PASS
	Ant2	2437	-11.85	-21.85	≤8.00	PASS
	total	2437	-8.70	-18.7	≤8.00	PASS
	Ant1	2452	-15.06	-25.06	≤8.00	PASS
	Ant2	2452	-15.53	-25.53	≤8.00	PASS
	total	2452	-12.28	-22.28	≤8.00	PASS



Reference No.: W7L-P24040002RF01

TEST GRAPHS

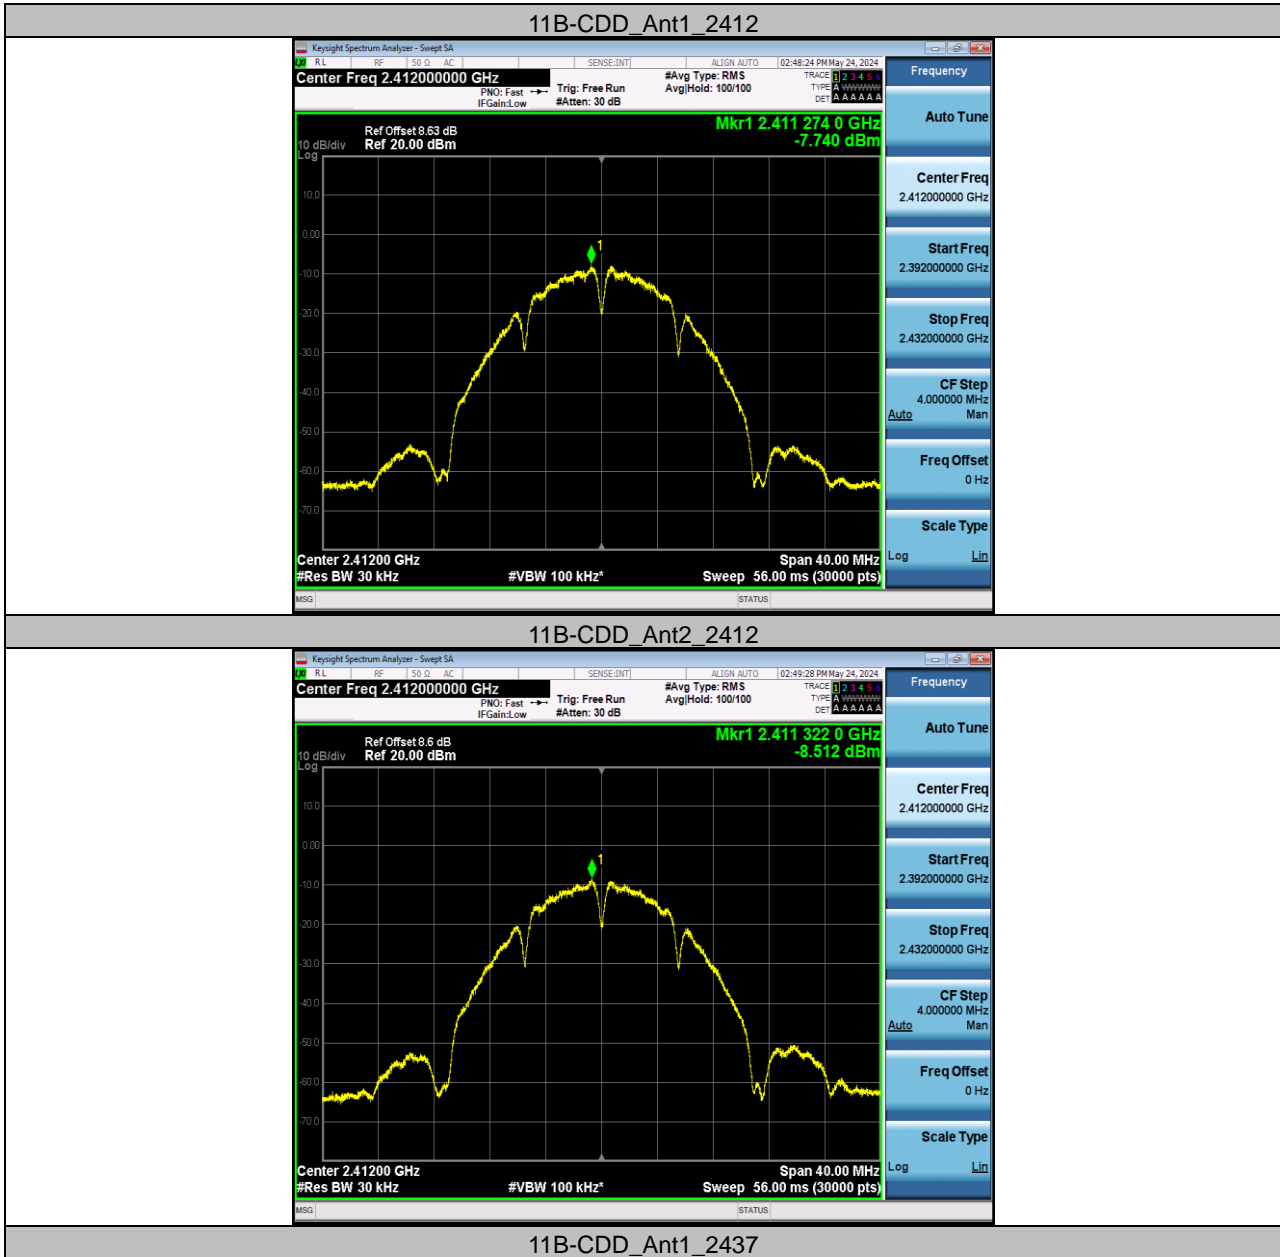




BUREAU VERITAS

Reference No.: W7L-P24040002RF01



11B-CDD_Ant2_2437

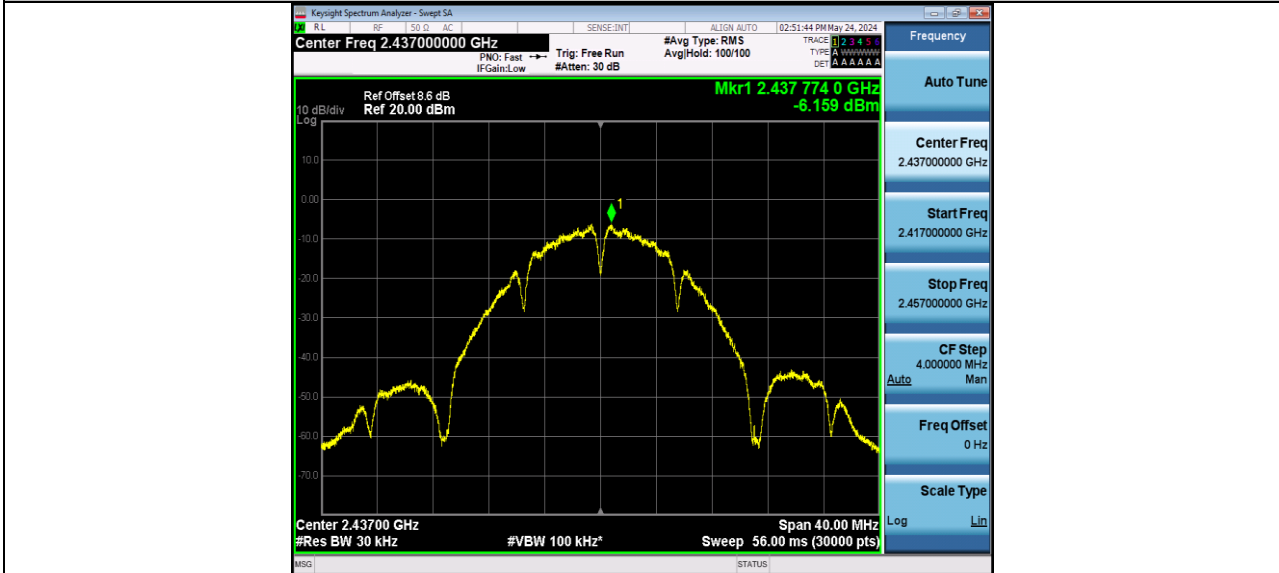

11B-CDD_Ant1_2462



BUREAU VERITAS

Reference No.: W7L-P24040002RF01



11B-CDD Ant2 2462




11G-CDD Ant1 2412




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

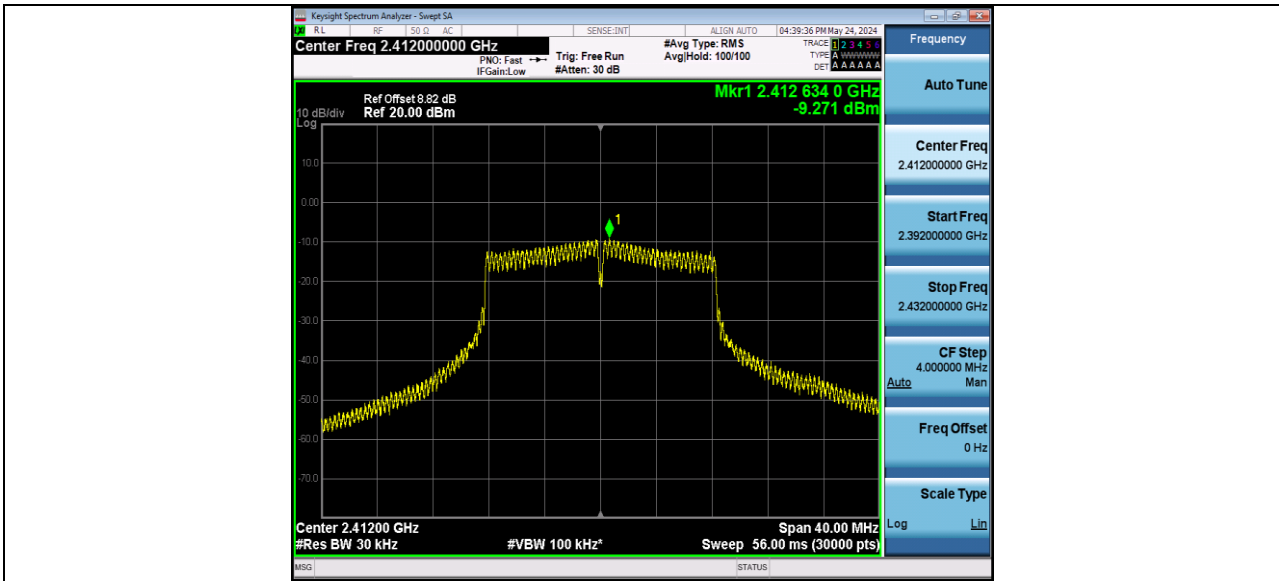

11G-CDD_Ant2_2412

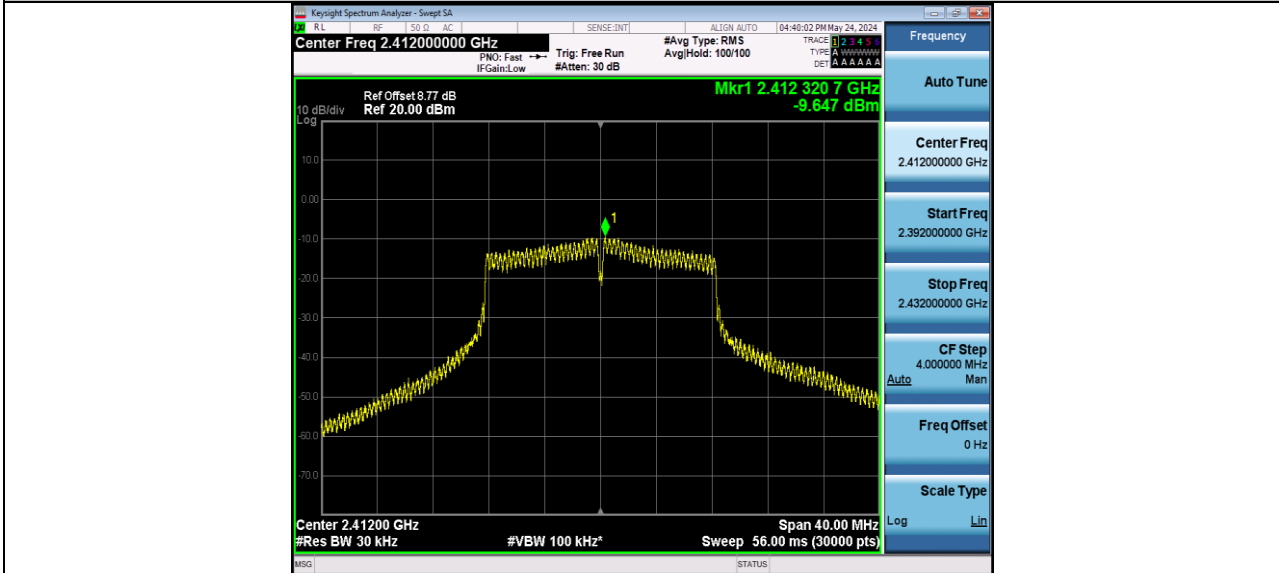


11G-CDD_Ant1_2437




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

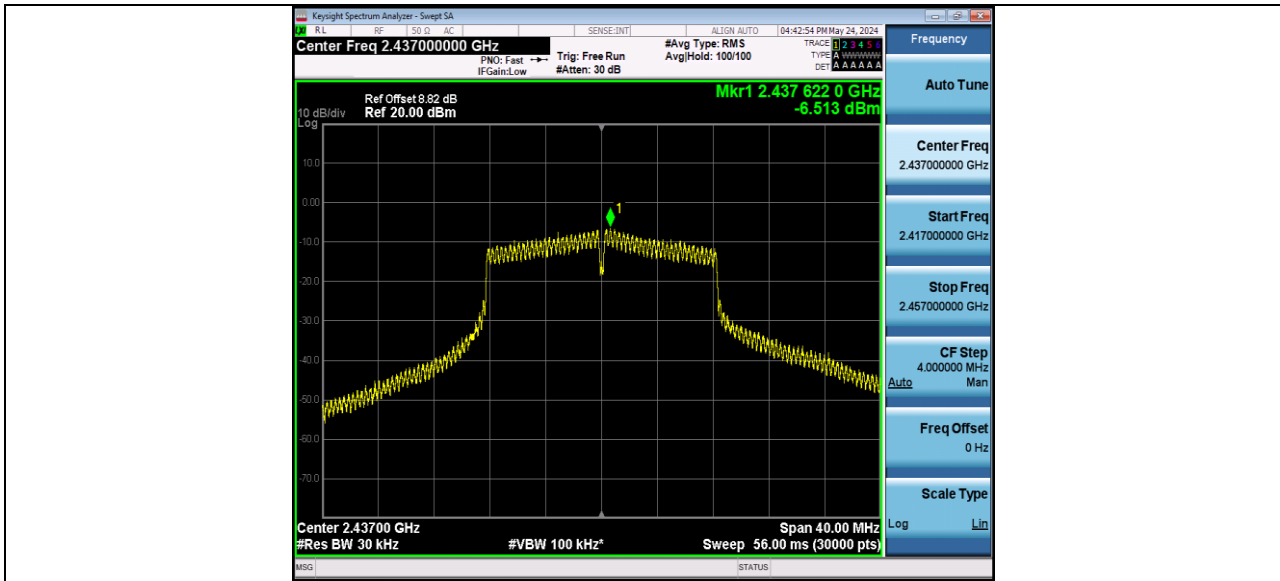

11G-CDD_Ant2_2437

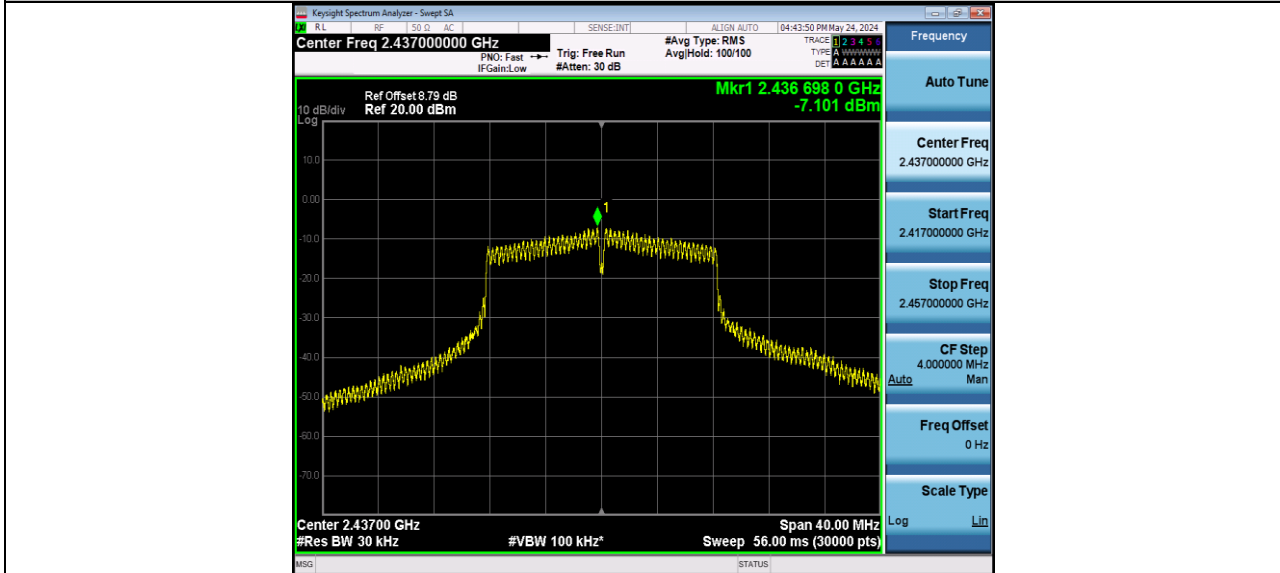


11G-CDD_Ant1_2462




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

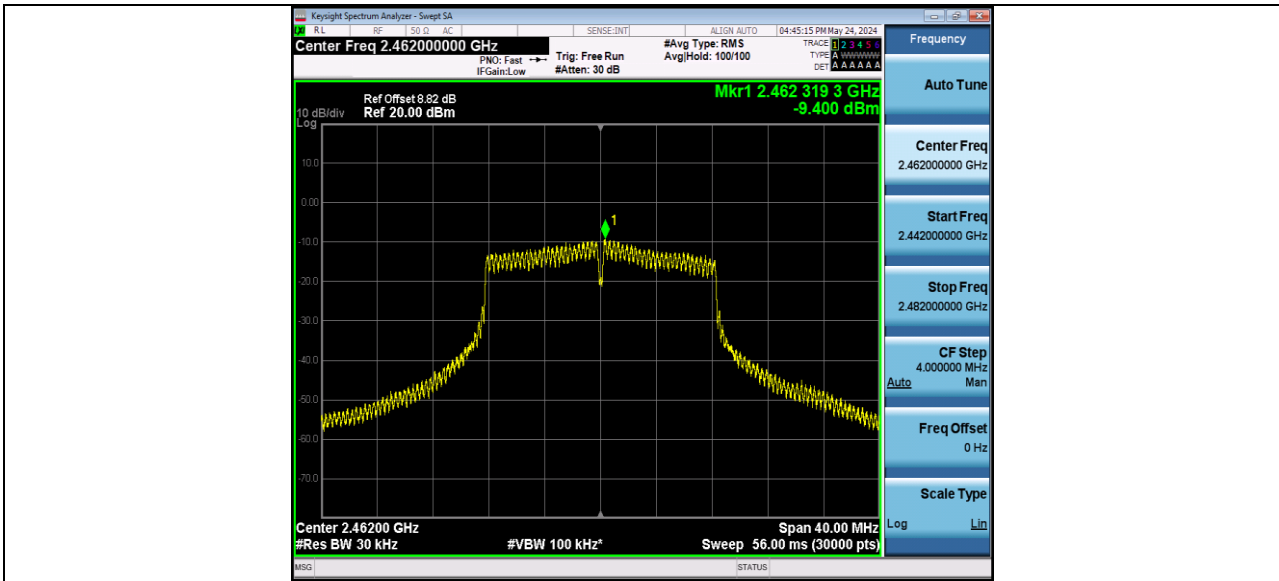

11G-CDD_Ant2_2462

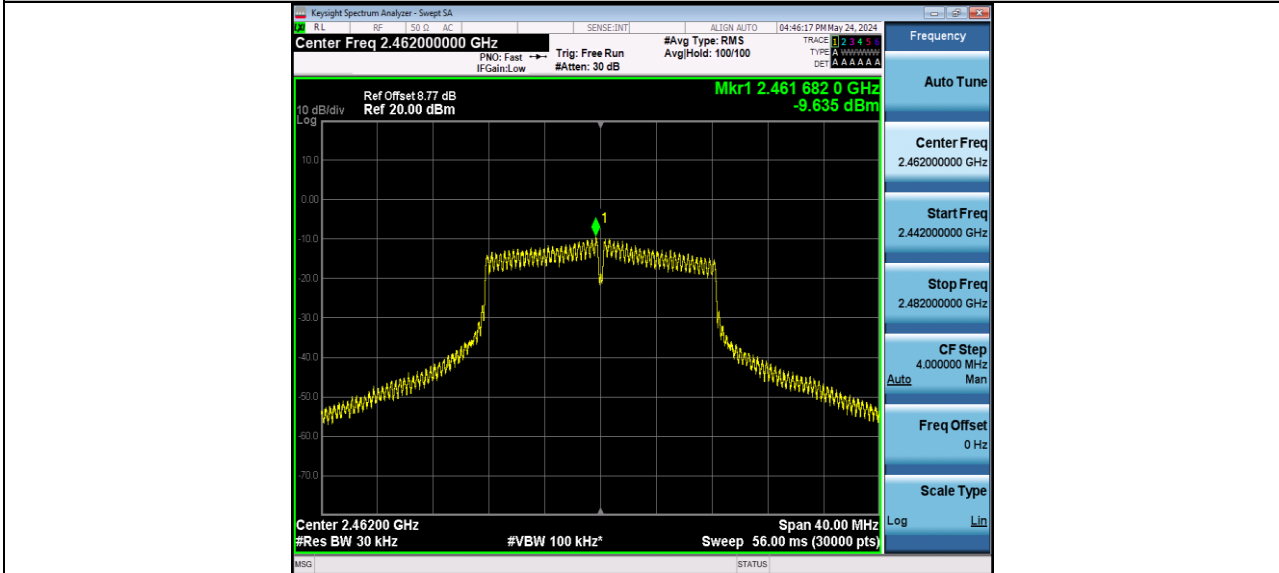


11N/AC 20MIMO_Ant1_2412




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

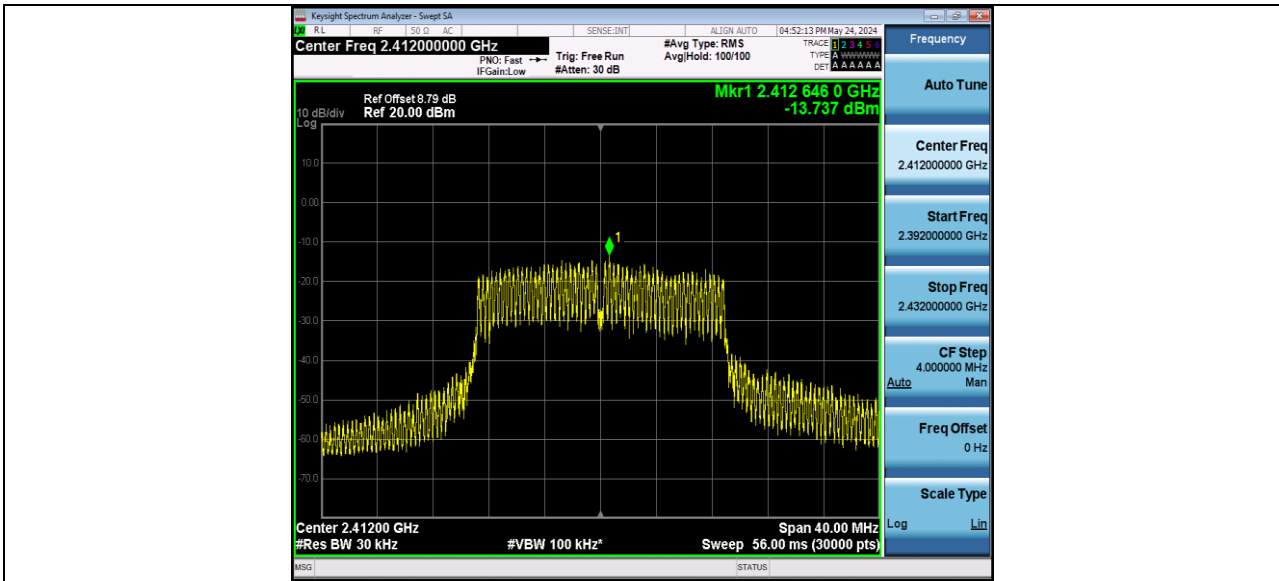

11N/AC 20MIMO_Ant2_2412

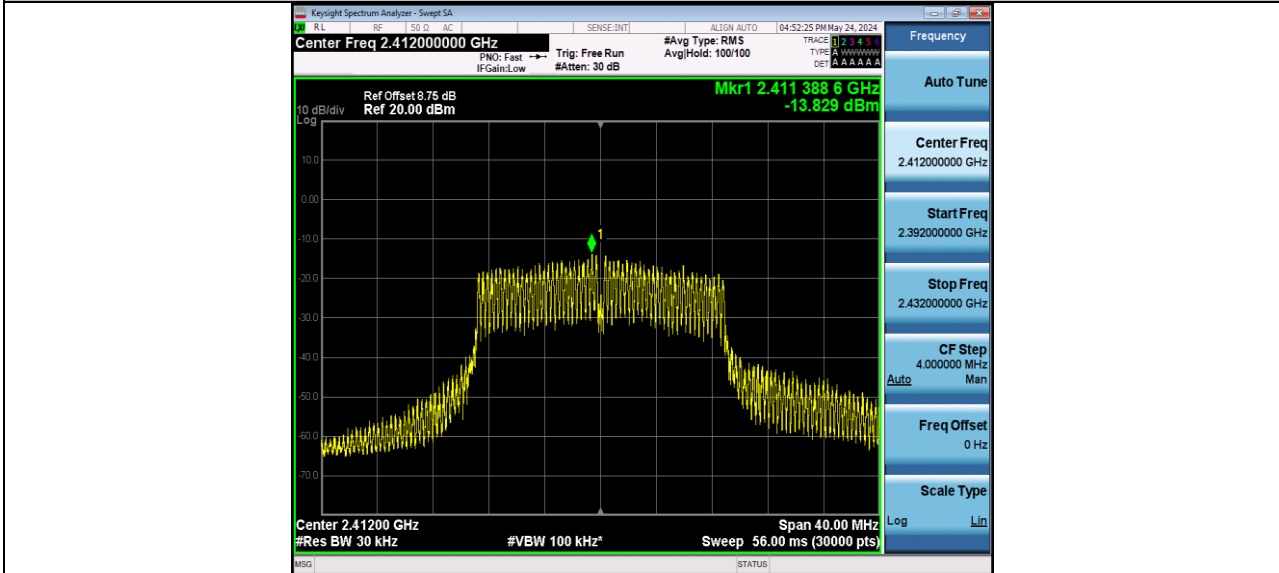


11N/AC 20MIMO_Ant1_2437




BUREAU VERITAS

Reference No.: W7L-P24040002RF01

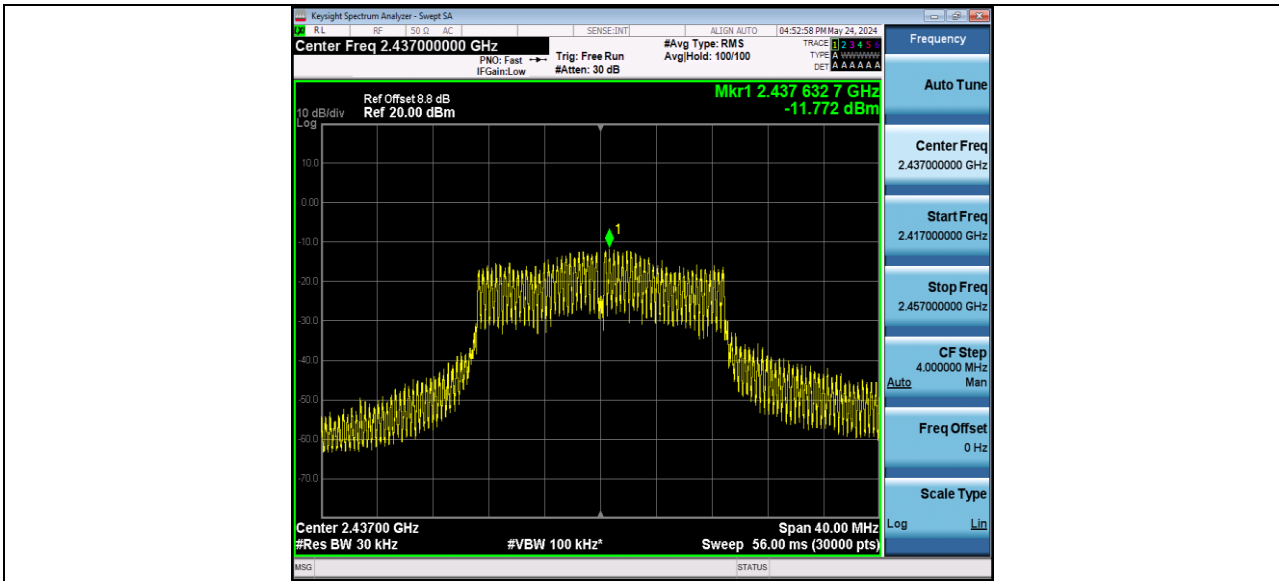

11N/AC 20MIMO_Ant2_2437

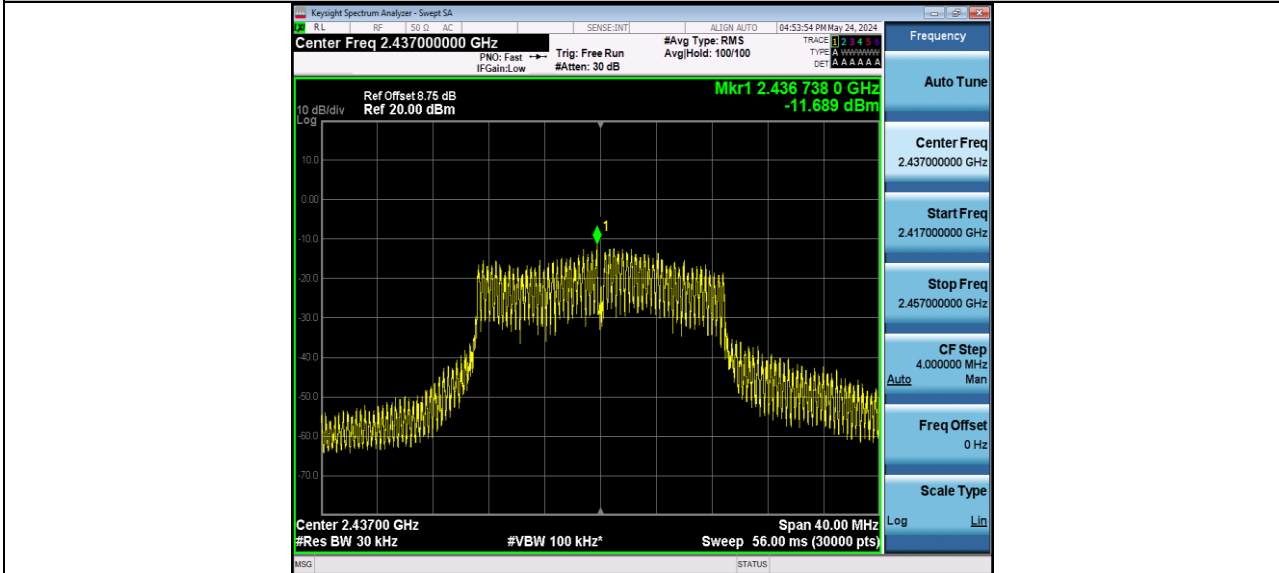

11N/AC 20MIMO_Ant1_2462



BUREAU VERITAS

Reference No.: W7L-P24040002RF01

