


Trusted every day Internal Part of ASSA ABLOY





# 1/9 Install your Matter Smart Module

The next steps will guide you through properly installing the module into your smart lock.

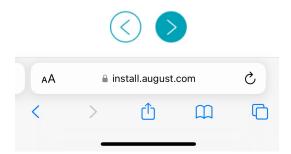




2/9

#### Remove battery cover

Using a Phillips-head Screwdriver, loosen the battery cover screw. Slide the cover up and away from the lock.

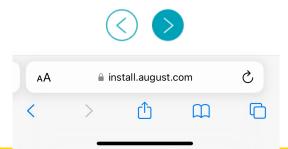





Remove a battery

Remove at least one of the batteries from your lock to power it off.










#### Insert the module

With the logo facing up, insert the module. Make sure it is properly seated in the lock.

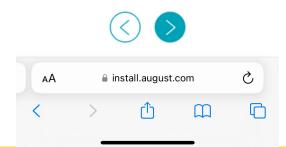







5/9

Replace the battery


Restore power to the lock by replacing any removed batteries.

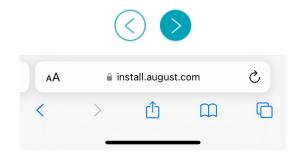

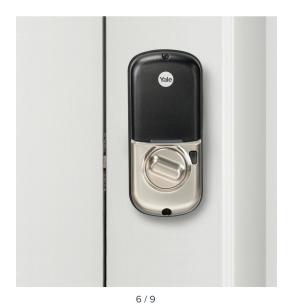

Replace the cover

Slide the battery cover down, and tighten the screw.

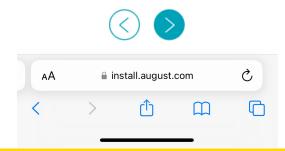








#### 7/9

#### Enroll module

The following steps will allow your device to be added to an external Matter system. We recommend that you have your smart home system app open and ready to enroll your lock.

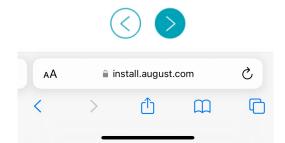





#### Enroll module (continued)

Follow these instructions to begin the enrollment process:

- 1) Wake up the keypad by pressing the Yale logo or any key.
- 2) Enter your master entry code and then the gear icon.

  3) Press 7 followed by the gear icon.
- 4) Press 1 followed by the gear icon. This step will begin the 15 minute enrollment period. 5) Go to your smart system app and complete
- enrollment there.





install.august.com



9/9

#### Set-Up Complete

Your Yale Assure lock is now set up with your Matter module.

To control your lock, you will need to use the smart home system app that you enrolled with. If you need to enter enrollment mode again, you can access the instructions below.

**EXIT AND CLOSE BROWSER** 

**VIEW INSTRUCTIONS AGAIN** 

install.august.com



