


# lenntek







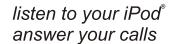



User's Guide

#### Contents

1.Intro	1
2.Quick Start Guide	2
3.Features	4
4.Using your Lenntek hookup	6
5.Troubleshooting	14
6.Warranty Coverage	18

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

of the following measures:

- --Reorient or relocate the receiving antenna.
- --Increase the separation between the equipment and receiver.
- --Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

### Introduction

Congratulations on purchasing your new Lenntek<sup>tm</sup> **hookup**<sup>tm</sup> for your iPod<sup>tm</sup>, featuring high quality audio and Bluetooh Technology for the convenience of receiving mobile phone calls within the same system.

Lenntek **hookup** is an unique system that offers comfort and versatility for use with your iPod and mobile phones with Bluetooth technology.

Copyright 2006 Lenntek Corporation, All rights reserved. iPod is a registered trademark of Apple Computer, Inc. Bluetooth is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners.



### **Quick Start Guide**

#### Charging the battery.

1. Connect the USB cable and charge your hookup with your PC



Note: The **red light** under the center button will be lit until the battery is fully charge.

## Connecting to the iPod

1. Plug the Adapter into iPod



2. Turn on your **hookup** by pressing and holding for 5 seconds (long press) the play/pause button




Note: Once on, a **red** and **blue light** will flash.

### **Quick Start Guide**

## Connecting to iPod

- 3. Pairing iPod with receiver
- Make sure iPod is playing and not on pause
- Make sure the indicator light on the Adapter is blinking
- Make sure the light on your **hookup** are alternating between blue and red

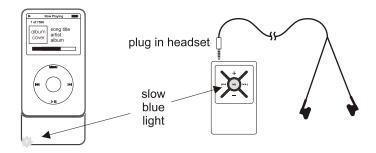

Note: Once light flash slowly in blue, you are ready to enjoy your Lenntek **hookup**.

#### **Features**



hookup - LTK101RX01 Volume Up / Down; Forward / Back Buttons Play / Pause / Power Button 3.5mm Audio Phone Jack mini USB jack for recharging Li-lon battery



Adapter for the iPod - LTK101TX02 30 pin connector for the iPod 30 pin female jack for charging iPod and downloading songs



**Protective cover -** for your iPod and Bluetooth adapter.

#### **Features**

## hookup

1. Remote functions during music streaming



- ► Play/Pause (Long press 5 seconds for turning On/Off)
- + Volume Up- Volume Down
  - ►►I Forward / Next Song
- I◄ Back / Previous Song

## 2. Remote functions during mobile phone calls



- Answer / Disconnect (Long press for turning the receiver On/Off)
- + Volume Up
- Volume Down
- ►►I There are multiple operations with this button. Only available if your mobile phone connects via hands free setting:
  - Long press for last number redial (music must be on pause and no calls in progress)
  - Long press to reject calls
  - (while the phone is ringing during incoming calls)
  - Long press to switch conversation from headset to phone (in the middle of a phone call)
- I◄
  No function for phone use

## **Using your Lenntek Hookup**

## Charging your hookup.

Charge **hookup** with the USB cable included. When charging, the play/pause button will be lit by a red indicator light. When fully charged (about 180 minutes) the red light will disappear.

Make sure your computer is on and the red indicator light on **hookup** is lit.




 Note: At the beginning of the charging process the indicator light will be red. When charging is complete the light will turn off.

## **Using your Lenntek hookup**

## Turning on and off hookup.

To turn on **hookup**, press and hold the play/pause button for 5 secs or until the indicator light on the play/pause button flashes blue and red.

To turn off **hookup**, press and hold the play/pause button for 5 secs or until you hear indicator tones through your headphones and the lights are all turned off.

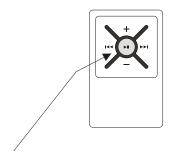

Note: Press and hold (long press) the center button for 5 seconds.

## **Using your Lenntek Hookup**

## Connecting your hookup with iPod.

Make sure there are no other Bluetooth devices in the vicinity in search or pairing mode.

Plug the Adapter (LTK101TX01) into the iPod, change your iPod to play (not on pause) and make sure the blue indicator light on the adapter is flashing. If this is your first attempt at pairing or if the iPod has not been played for a long period of time, you may be required to reset your iPod. (See Resetting your iPod below).

Once the adapter light is flashing, turn on **hookup** (LTK101RX01). Initially, the indicator lights on **hookup** will flash red and blue. Once the two units are paired (about 5 to 10 secs), the indicator light on both units will flash a slow blue light. Now, enjoy your Lenntek **hookup**.

Note: Refer to the illustration in the Quick Start Guide section.

#### Resetting your iPod

To reset your iPod, toggle the Hold switch on and off (slide it to hold, then off hold again).

## Using your Lenntek hookup

Press and hold the Menu and Select buttons on the iPod until the Apple logo appears, about 6 to 10 seconds. This step may need to be repeated.

If you are having trouble with resetting your iPod, please refer to your iPod manual for further instructions.

## Pairing hookup with your mobile phone

With the Adapter (LTK101TX01) for the iPod off, or unplugged from the iPod, turn on **hookup**.

From your mobile phone menu, set to search for new devices. Your mobile should discover a new device named *LTK101*. Select this device.

Enter the PIN code 0000 for *LTK101*. And set the device as your preferred handsfree device (headset device if handsfree is not available) for your mobile phone.

Once your mobile phone and **hookup** are paired, you can turn on your iPod and plug the Adapter into iPod and enjoy your music.

Note: May not work with all mobile phones.

## **Using your Lenntek Hookup**

## Making calls / answering calls

**hookup** is equipped with a built in microphone. Depending upon the noise level of your surrounding, the microphone on your **hookup** is effective up to 6" to 10" from your mouth.

Note: Microphone location

