



表格编号：TCLAV-C4-4075001
版本：V 6.9
表格修订日期：2019-09-06

物 料 编 号：	72-P0KSUB-DFUB1
内 容：	快速操作指南
型 号：	polkReact SUB
图 纸 版 本 号：	1.0
是否含美国走向：	含
日 期：	2020-10-29
美 工 制 作 人：	吴琳

此文件及附页属公司机密文件，版权属通力电子控股有限公司所有，任何人未经允许不得复制、抄袭。任何部门如有需求，须向通力电子研发申请。
These files are confidential documents in company, The copyright totally belongs to Tonly electronic holdings Limited, Anybody who are unauthorized is forbidden to copy and plagiarize the files. Any Department must get permission from the Tonly R&D if they need to use them.

ART WORK FORM

(密级：C级)

品牌名称（BRAND NAME）： polk

文档提供（FROM）： polk

工艺说明（尺寸单位：毫米（mm））：

02/49/54/55/56/57/59/67/79 类：

部品	XXXX
工艺、颜色	
成型及颜色 (直接注塑颜色)	N/A
喷油及颜色	N/A
丝印颜色 /移印颜色	N/A
电镀/真空镀 及颜色	N/A
烫金及颜色	N/A
镭 雕	N/A
其他工艺	N/A
备 注	N/A

74/89 类：

印刷方式	XXXX
备 注	N/A

76 类：

印刷方式	XXXX
表面工艺	N/A
样板需求	签正式样板 ☐
	签彩稿样板 ☐ 基础机型彩盒样板参考料号： 76-XXXXXX-XXXXX
备 注	N/A

制作要求（★ FOR ALL）：

- ☒ 条码扫描等级达到C级以上；
- ☒ 美国走向必须满足CP65要求；
- ☒ 必须满足RoHS2.0、REACH要求；
- ☒ 必须符合TCL通力《公司环境管理物质标准》要求；
- ☒ QR Code的制作或打印过程中需选择模型2（M2）；
- ☒ 所用油墨必须达到TCL质量部门检测标准；
- ☒ 胶袋材质、胶袋上透气孔的大小、位置以结构认可书为准；
- ☒ PE材质的胶袋其上面的丝印内容整体长度可允许3mm误差；
- ☒ 珍珠棉等材质的胶袋其上面的丝印内容整体长度可允许5mm误差；

70/72/99（说明书光盘）类：

语言种类	1种
材 质	封面：120g双胶纸 内页：100g双胶纸
尺 寸	长： 168mm 宽： 124mm
印刷方式	四色印刷
表面工艺	XXXX
装订方式	钉装
页 数	8 P
备 注	

71 类：

表纸材质	型号： XXXX 厚度： XXXX
胶水材质	型号： XXXX 是否可移： XXXX
尺 寸	长： XXXX 宽： XXXX
印刷方式	XXXX
表面工艺	XXXX
打印方式	XXXX
粘贴位置	XXXX
材质库编码	N/A
样板需求	需要签样 ☐
	不需要签样 ☐ 参考料号： 71-XXXXXX-XXXXX
☐ UPC / ☐ EAN / ☐ JAN	N/A
备 注	N/A

★ FOR HUAWEI:

- ☒ 满足无卤要求；
- ☒ 满足不含有邻苯二甲酸盐要求。

★ FOR SAMSUNG:

- ☒ VD类产品需满足三星的SS要求，AI类产品需满足三星SA要求。

★ FOR SONY:

- ☒ 禁止使用SS-00259中规定的1级环境管理物质。
- ☒ 再生树脂、被覆线材必须从索尼的绿色伙伴认定供应商处采购。



POLK REACT SUB™



Quick Start Guide

Thank you for your Polk® purchase! If you have a question or comment, please feel free to contact us.

TECHNICAL ASSISTANCE

North America: 800-377-POLK(7655)

United Kingdom and Ireland: +44 2890279830

Netherlands customers: +31 402507800

Other countries: +1-410-358-3600



Email: polkcs@polkaudio.com

Polk FAQs: polk.custhelp.com

In all other countries, refer to **polk-eu@mailmw.custhelp.com** for support contact details.


Polk Audio is a DEI Holdings, Inc. company. Polk Audio and Polk are registered trademarks of Polk Audio, LLC. All other trademarks, product names, logos, and brands referenced herein are the property of their respective owners.

WHAT'S IN THE BOX

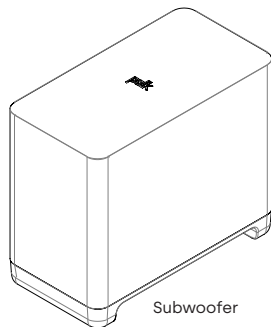


POSITION YOUR SUBWOOFER

1. Unpack the subwoofer and power cable.

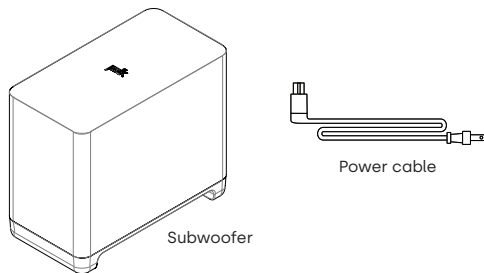


2. Place the subwoofer along the same wall as the TV, no more than 30 ft (10m) from the sound bar.
3. Connect the power cord to the back of the subwoofer.
4. Connect the other end of the power cord into an AC power outlet.

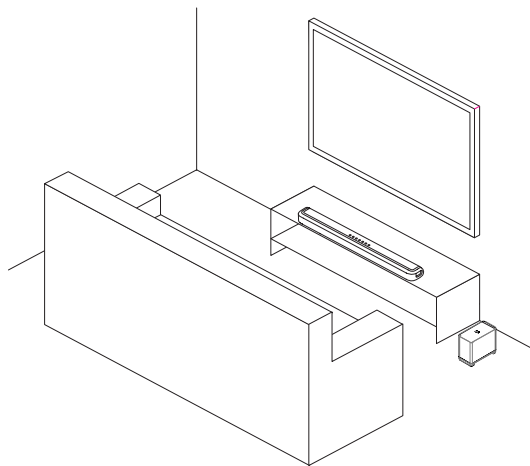

CONNECT YOUR SUBWOOFER


Enter pairing mode on the sound bar

1. Press and hold the CONNECT button on the back of the sound bar for about four seconds.

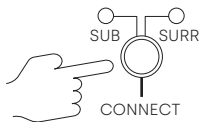

Connect the subwoofer

2. Press and hold the CONNECT button on the back of the subwoofer for about four seconds.

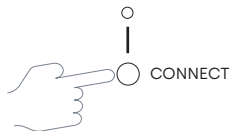

3. Press and release the CONNECT button on the back of the sound bar to complete pairing.

I DO NOT HEAR SOUND FROM MY SUBWOOFER

- Check that the sound bar is powered on and playing audio.
- Turn up the bass using the provided Polk remote.
- Check that the power cable is secure in the back of the subwoofer and wall outlet.
- Check that a solid green light is visible on the back of the subwoofer.
- Unplug power from the subwoofer for 30 seconds and then plug back in.
- If the light on the back of the subwoofer is flashing green, you will need to reconnect the subwoofer to the sound bar using the instructions below.

UPDATING YOUR SUBWOOFER

The subwoofer is automatically updated whenever your sound bar is connected to the Internet and receives an update. Refer to your sound bar's Quick Start Guide and make sure your sound bar is properly connected to your home network.

For more troubleshooting and information, please visit polkaudio.com/support.

POLK. EXPECT GREAT SOUND.®

5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

www.polkaudio.com
800-377-7655(POLK)

D&M Europe B.V.
Beemdstraat 11,
5653 MA Eindhoven,
The Netherlands



72-P0KSUB-DFUB1
HBP4440