

MRT Technology (Suzhou) Co., Ltd Phone: +86-512-66308358 Web: www.mrt-cert.com Report No.: 2111RU076-U1 Report Version: V01 Issue Date: 02-26-2022

# SAR MEASUREMENT REPORT

FCC ID:	WVTWOUXUN30
Applicant:	Quanzhou Wouxun Electronics Co., Ltd.
Product:	Two-way Radio (business radio)
Model No.:	KG-S84B
Serial Model No.:	KG-S85B, KG-S84BX, KG-S84B Plus, KG-S84B Limited Edition, KG-S86B, KG-S87B, KG-S86BX, KG-S86B Plus, KG-S86B Limited Edition
Brand Name:	WOUXUN
FCC Rule Part(s):	FCC 47 CFR Part 2.1093
Test Procedure(s): Test Date:	IEEE 1528:2013; IEEE C95.1- 2005; KDB 447498 D01v06; KDB 865664 D01v01r04
TEST DALE.	December 29, 2021

**Reviewed By:** 

Jame Yuan

**Approved By:** 

Robin Wu



The test results relate only to the samples tested.

This equipment has been shown to be capable of compliance with the applicable technical standards as indicated in the measurement report and was tested in accordance with the measurement procedures specified in IEEE1528, KDB 447498 and KDB 865664. Test results reported herein relate only to the item(s) tested.

The test report shall not be reproduced except in full without the written approval of MRT Technology (Suzhou) Co., Ltd.



## **Revision History**

Report No.	Version	Description	Issue Date	Note
2111RSU076-U1	Rev. 01	Initial Report	02-26-2022	Valid



## CONTENTS

Des	cription		Page
1.	Gene	ral Information	5
	1.1.	Applicant	5
	1.2.	Manufacturer	5
	1.3.	Testing Facility	5
	1.4.	Product Information	6
	1.5.	Radio Specification	6
2.	Sumr	nary of Test Result	7
	2.1.	Test Standards	7
	2.2.	Environment Condition	7
	2.3.	RF Exposure Limits	7
	2.4.	Test Result Summary	8
3.	Speci	ific Absorption Rate (SAR)	9
	3.1.	Introduction	9
	3.2.	Definition	9
4.	DASY	/6 Measurement System	10
	4.1.	Introduction	10
	4.2.	DASY6 Measurement System Diagram	10
	4.3.	System Components Details	11
5.	The S	SAR Measurement Procedure	22
	5.1.	Measurement Process Diagram	22
	5.2.	Test Position Definition	23
	5.3.	Test Procedure	26
6.	Syste	em Verificaiton	28
	6.1.	Tissue Check	28
	6.2.	System Check	31
7.	Analy	/sis and Results	33
	7.1.	Antenna Location	33
	7.2.	Conducted Power	34
	7.3.	SAR Exclusion Analysis	35
	7.4.	SAR Test Results	36
	7.5.	Estimated SAR Calculation	37
8.	Simu	Itaneous Transmission Analysis	38



9.	Test Equipment Used	39
10.	Measurement Uncertainty	40
Ann	ex A - System Check Result	42
Ann	ex B - Test Data Plots	43
Ann	ex C - SAR Test Setup Photos	45
Ann	ex D - EUT External Photos	46
Ann	ex E - Equipment Calibration Report	47



#### 1. General Information

#### 1.1. Applicant

Quanzhou Wouxun Electronics Co., Ltd.

Jiangnan High Technology Industry Park, No.928 Nanhuan Road, Quanzhou, Fujian, China

#### 1.2. Manufacturer

Quanzhou Wouxun Electronics Co., Ltd.

Jiangnan High Technology Industry Park, No.928 Nanhuan Road, Quanzhou, Fujian, China

#### 1.3. Testing Facility

$\boxtimes$	Test Site – MRT	Test Site – MRT Suzhou Laboratory				
	Laboratory Location (Suzhou - Wuzhong)					
	D8 Building, No.2 Tian'edang Rd., Wuzhong Economic Development Zone, Suzhou, China					
	Laboratory Loca	ation (Suzhou - SIF	<b>?</b> )			
	4b Building, Liand	do U Valley, No.200	) Xingpu Rd., Shengp	u Town, Suzhou Indi	ustrial Park, China	
	Laboratory Acc	reditations				
	A2LA: 3628.01		CNAS	S: L10551		
	FCC: CN1166		ISED:	CN0001		
	VCCI:	<b>R</b> -20025	□G-20034	C-20020	□T-20020	
	VCCI.	<b>R</b> -20141	□G-20134	C-20103	□T-20104	
	Test Site – MRT	Shenzhen Labora	tory			
	Laboratory Loca	ation (Shenzhen)				
	1G, Building A, Junxiangda Building, Zhongshanyuan Road West, Nanshan District, Shenzhen, China Laboratory Accreditations				strict, Shenzhen, China	
	A2LA: 3628.02	CNAS: L10551				
	FCC: CN1284 ISED: CN0105					
	Test Site – MRT Taiwan Laboratory					
	Laboratory Location (Taiwan) No. 38, Fuxing 2nd Rd., Guishan Dist., Taoyuan City 333, Taiwan (R.O.C.)					
	Laboratory Acc	reditations				
	TAF: L3261-1907	/25				
	FCC: 291082, TV	V3261	ISED:	TW3261		



#### 1.4. Product Information

Product Name	Two-way Radio (business radio)	
Model No.	KG-S84B	
Serial Model No.	KG-S85B, KG-S84BX, KG-S84B Plus, KG-S84B Limited Edition, KG-S86B,	
	KG-S87B, KG-S86BX, KG-S86B Plus, KG-S86B Limited Edition	
Brand Name	WOUXUN	
Serial Number	U11BR0040	
EUT Type	Portable Device	
Exposure Category	General Population/Uncontrolled Exposure	
Accessories		
Adapter	Model No.: DSX-120050L-US	
	Input Power: 100 - 240V ~ 50-60Hz, 0.3A	
	Output Power: 12VDC 0.5A	
Rechargeable Li-ion Battery	Model No.: 1A20KG-15	
	Capacitance: 2000mAh 14.80Wh	
	Rated Voltage: 7.4V	
Li-ion Battery Charger	Input Power: 12VDC	
	Output Power: 8.4VDC 450mA	
Remark:		

1. The information of EUT was provided by the manufacturer, and the accuracy of the information shall be the responsibility of the manufacturer.

2. The difference between the above models is plastic enclosure with different colors and shapes.

#### 1.5. Radio Specification

PTT Specification		
Frequency Range	461.0375~ 461.2125MHz	
	464.5000~ 464.5500MHz	
	467.7625~ 467.9250MHz	
Type of Modulation	FM	
Antenna Type	SMA-Male	
Antenna Gain	2.15 dBi	



## 2. Summary of Test Result

#### 2.1. Test Standards

No.	Identity	Document Title	
1	47 CFR Part 2.1093	Radiofrequency radiation exposure evaluation: portable devices	
2	IEEE 1528-2013	IEEE Recommended Practice for Determining the Peak Spatial-Average	
		Specific Absorption Rate (SAR) in the Human Head from Wireless	
		Communications Devices: Measurement Techniques	
3	IEEE C95.1-2005	IEEE Standard for Safety Levels with Respect to Human Exposure to	
		Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz	
4	KDB 447498 D01 v06	General RF Exposure Guidance	
5	KDB 865664 D01 v01r04	SAR Measurement 100 MHz to 6 GHz	
6	KDB 865664 D02 v01r02	RF Exposure Reporting	
7	KDB 648474 D04v01r03	SAR Evaluation Considerations for Wireless Handsets	
8	KDB 248227 D01 v02r02	SAR Guidance for IEEE 802.11 (Wi-Fi) Transmitter	

#### 2.2. Environment Condition

Ambient Temperature	20.5°C~24.0°C
Temperature of Simulant	20.0°C~23.5°C
Relative Humidity	38%RH ~55%RH

#### 2.3. RF Exposure Limits

Human Exposure	Basic restrictions for electric, magnetic and electromagnetic fields. (Unit in mW/g or W/kg)
Spatial Peak SAR <sup>1</sup> (Head and Body)	1.60
Spatial Average SAR <sup>2</sup> (Whole Body)	0.08
Spatial Peak SAR <sup>3</sup> (Arms and Legs)	4.00

#### Notes:

1. The Spatial Peak value of the SAR averaged over any 1gram of tissue (defined as a tissue volume in the shape of a cube) and over the appropriate averaging time.

2. The Spatial Average value of the SAR averaged over the whole body.

3. The Spatial Peak value of the SAR averaged over any 1 gram of tissue (defined as a tissue volume in the shape of a cube) and over appropriate averaging time.



## 2.4. Test Result Summary

#### Worst SAR List

Highest Reported SAR	Front of Face 1g SAR (W/kg)	Body-worn 1g SAR (W/kg)
PTT	0.14	0.29

#### Highest Simultaneous SAR

N/A



## 3. Specific Absorption Rate (SAR)

#### 3.1. Introduction

SAR is related to the rate at which energy is absorbed per unit mass in an object exposed to a radio field. The SAR distribution in a biological body is complicated and is usually carried out by experimental techniques or numerical modeling. The standard recommends limits for two tiers of groups, occupational /controlled and general population/uncontrolled, based on a person's awareness and ability to exercise control over his or her exposure. In general, occupational/controlled exposure limits are higher than the limits for general population/uncontrolled.

#### 3.2. Definition

The SAR in the tissue-equivalent liquid can be determined by the rate of temperature increase or by E-field measurements, according to Formulas (1) or (2):

$$SAR = \frac{\sigma E^2}{\rho} \tag{1}$$

$$SAR = c_{\rm h} \frac{{\rm d}T}{{\rm d}t} \Big|_{t=0}$$
<sup>(2)</sup>

where

SAR is the specific absorption rate in W/kg;

E is the rms value of the electric field strength in the tissue medium in V/m;

 $\sigma$  is the electrical conductivity of the tissue medium in S/m;

 $\rho$  is the mass density of the tissue medium in kg/m<sup>3</sup>;

ch is the specific heat capacity of the tissue medium in J/(kg K);



is the initial time derivative of temperature in the tissue medium in K/s.




## 4. DASY6 Measurement System

#### 4.1. Introduction

DASY6 is the latest generation of the Dosimetric Assessment System optimized for specific absorption rate (SAR) measurements, SAR compliance. DASY6 builds on the power of our industry - leading dosimetric and near-field evaluation system, DASY52. Running on a significantly more robust platform and a more powerful measurement server, DASY6 offers much faster scanning with no sacrifice of measurement precision. All hardware and software are fully compatible with DASY52. The new system seamlessly integrates two software solutions, the novel cDASY V6.6 - optimized for SAR compliance testing to significantly reduce SAR assessment costs - and the widely used DASY V5.2 for generalized near-field evaluations with maximized flexibility.

#### 4.2. DASY6 Measurement System Diagram

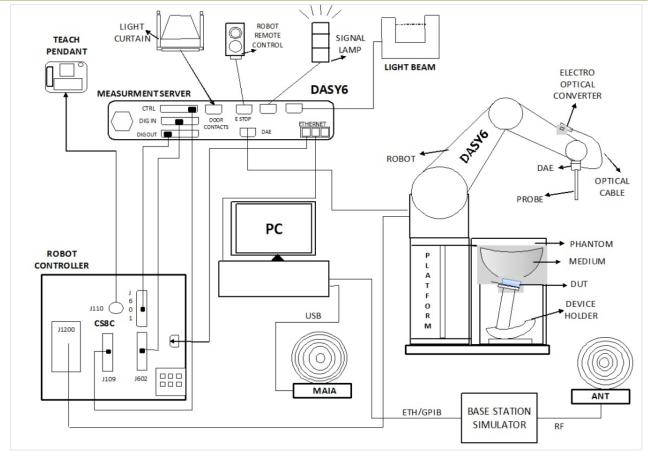

The DASY6 system in cDASY6/DASY5 V5.2 SAR Configuration is shown below:

The System consist of the following components:

DASY6 Measurement Server, Data Acquisition Electronics (DAE), Probes, Light-Beam Unit, Phantoms, Media, Device Holder for SAM-Twin Phantom, Laptop Extension Kit to Mounting Device, Robot System Platform & Pedestal, Verification of the Parameters with the Dielectric Assessment Kit (DAK), Modulation and Interference Analyzer (MAIA), Omni-Directional Ultra-Wideband Antenna (ANT), cDASY6 software, DASY5 NEO software and SEMCAD data evaluation software.




#### 4.3. System Components Details

#### DASY6 Platforms MP6E-TX60L

MP6E-TX60L platform is a compact cost-effective platform based on TX60L. It consists of:

- a stable non-metalic platform for the TX60L robot
- a frame for two standard-size phantoms (1.0 × 0.5 m)
- a frame for one half-size phantom (0.5 × 0.5 m)

It includes two easily moveable trolleys for the phone and tablet/computer positioner and two platforms for positioning dipoles and other antennas.

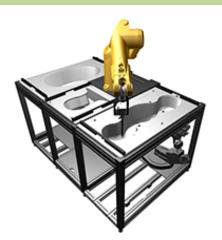

Material The beams consist of a composite of wood and epoxy (permittivity of 3.3 and loss tangent of <0.07)

Size The footprint of the platform is 1590 mm × 1060 mm.

#### Robots -TX60L

The MRT DASY6 system uses the high-precision industrial robots TX60L from Staubli SA (France). The TX robot family - the successor of the well-known RX robot family - continues to offer the features important for DASY6 applications:

- High precision (repeatability 0.02mm)
- High reliability (industrial design)
- Low maintenance costs (virtually maintenance-free as all gears are direct drive, no belt drives)
- Jerk-free straight movements (brushless synchron motors, no stepper motors)

 Low extremely low frequency (ELF) interference (motor control fields are shielded by the closed metallic construction)

The robots are controlled by the Staubli CS8c robot controllers. All information regarding the use and maintenance of the robot arm and the robot controller is provided on CDs delivered with the robot. Paper manuals are available directly from Staubli upon request.







#### DASY6 Measurement Server

The DASY6 measurement server is based on a PC/104 CPU board with a 400MHz intel ULV Celeron, 128MB chip-disk and 128MB RAM. The necessary circuits for communication with the DAE4 electronics box, as well as the 16-bit AD converter system for optical detection and digital I/O interface are contained on the DASY6 I/O board, which is directly connected to the PC/104 bus of the CPU board. The measurement server performs all real-time data evaluations of field measurements and surface detection, controls robot movements, and handles safety operations.



#### Data Acquisition Electronics (DAE)

The data acquisition electronics (DAE4) consist of a highly sensitive electrometer-grade preamplifier with auto-zeroing, a channel and gain-switching multiplexer, a fast 16-bit AD-converter, and a command decoder with a control logic unit. Transmission to the measurement server is accomplished through an optical downlink for data and status information, as well as an optical uplink for commands and the clock.





#### Probes

#### E-Field Probe(EX3DV4)

The SAR measurement is conducted with the dosimetric probe manufactured by SPEAG. The probe is specially designed and calibrated for use in liquid with high permittivity. The dosimetric probe has special calibration in liquid at different frequency. SPEAG conducts the probe calibration in compliance with international and national standards (e.g. IEEE 1528, EN 62209-1, IEC 62209, etc.) under ISO 17025. Construction:

Symmetric design with triangular core Built-in shielding against static charges PEEK enclosure material (resistant to organic solvents, e.g., DGBE)

Frequency: 4 MHz ~ 10 GHz

Linearity: ±0.2 dB (30 MHz ~ 10 GHz)

Directivity:

±0.1 dB in TSL (rotation around probe axis)

±0.3 dB in TSL (rotation normal to probe axis)

Dynamic Range: 10  $\mu$ W/g to 100 mW/g; Linearity: ± 0.2 dB (noise: typically < 1  $\mu$ W/g)

Dimensions:

Overall length: 337 mm (Tip: 20 mm)

Tip diameter: 2.5 mm (Body: 12 mm)

Typical distance from probe tip to dipole centers: 1 mm

Applications:

High precision dosimetric measurements in any exposure scenario (e.g., very strong gradient fields); the only probe that enables compliance testing for frequencies up to 6 GHz with precision of better than 30%.

S/N:7524	

MSTV1 (Mother Scan Teaching V1) Electronics & TP6V2 (Teaching Probe 6V2) Probe

MSTV1 (Mother Scan Teaching V1) electronics together with the TP6V2 (Teaching Probe 6V2) probe is used for mother scan of DASY6 system. This probe uses a 3D Renishaw LP2 sensor which ensures accurate detection of any shape and a measurement repeatability of 8 µm.





#### Light-Beam Unit

The light beam switch allows automatic "tooling" of the probe. During the process, the actual position of the probe tip with respect to the robot arm, as well as the probe length and the horizontal probe offset, are measured. The software then corrects all movements within the measurement jobs, such that the robot coordinates are valid for the probe tip.



The repeatability of this process is better than 0.1 mm. If a position has been taught with an aligned probe, the same position will be reached with another aligned probe within 0.1 mm, even if the other probe has different dimensions. During probe rotations, the probe tip will keep its actual position.



#### Phantoms

#### SAM-Twin Phantom

The shell corresponds to the specifications of the Specific Anthropomorphic Mannequin (SAM) phantom defined in IEEE 1528 and IEC 62209-1. It enables the dosimetric evaluation of left and right hand phone usage as well as body-mounted usage at the flat phantom region. A cover prevents evaporation of the liquid. Reference markings on the phantom allow the complete setup of all predefined phantom positions and measurement grids by teaching three points with the robot.

SAM-Twin V5.0 and higher has the same shell geometry and is manufactured from the same material as SAM-Twin V4.0, but with the top structure reinforced.

Material	Vinyl ester, fiberglass reinforced (VE-GF)	
Liquid Compatibility	The phantom shell is compatible with SPEAG tissue simulating liquids (sugar and oil based). Use of other liquids may render the phantom warranty void (see note or consult SPEAG support).	
Shell Thickness	2 ± 0.2 mm (6 ± 0.2 mm at ear point)	
Dimensions (incl. Wooden Support)	Length: 1000 mm Width: 500 mm Height: adjustable feet	
Filling Volume	approx. 25 liters	
Support	DASY6: standard-size platform slot DASY52 stand-alone: SPEAG standard phantor	n table




#### ELI phantom

The ELI phantom is used for compliance testing of handheld and body-mounted wireless devices in the frequency range of 30 MHz to 6 GHz. ELI is fully compatible with the IEC 62209-2 standard and all known tissue simulating liquids. ELI has been optimized regarding its performance and can be integrated into our standard phantom tables. A cover prevents evaporation of the liquid. Reference markings on the phantom allow installation of the complete setup, including all predefined phantom positions and measurement grids, by teaching three points. The phantom is compatible with all SPEAG dosimetric probes and dipoles.

ELI V5.0 and higher has the same shell geometry and is manufactured from the same material as ELI V4.0, but has reinforced top structure. ELI V6.0, released in August 2014, has the same shell geometry as ELI V4.0 but offers increased longterm stability.

Material	Vinyl ester, fiberglass reinforced (VE-GF)
Liquid Compatibility	The phantom shell is compatible with SPEAG
	tissue simulating liquids (sugar and oil based).
	Use of other liquids may render the phantom
	warranty void (see note or consult SPEAG
	support).
Shell Thickness	2.0 ± 0.2 mm (bottom plate)
Dimensions	Major axis: 600 mm
	Minor axis: 400 mm
Filling Volume	approx. 30 liters
Support	DASY6: standard-size platform slot
	DASY52 stand-alone: SPEAG standard
	phantom table

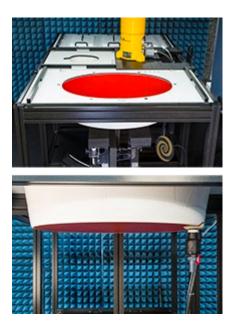




#### SAM Face Down Phantom

The SAM Face Down Phantom V10 allows assessment of the exposure of the face and in particular the eyes for handheld devices operated in front of the face. e.g., video phones, cameras, organizers, etc. It is manufactured from high precision injection molded polypropylene. The Mounting Device for Transmitters including extensions kit can be used to position the device.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible with
	SPEAG tissue simulating liquids (sugar
	and oil based). Use of other liquids may
	render the phantom warranty void (see
	note or consult SPEAG support).
Shell Thickness	$2 \pm 0.2$ mm (6 mm at ear point)
Head Shape	Standard compatible SAM head.

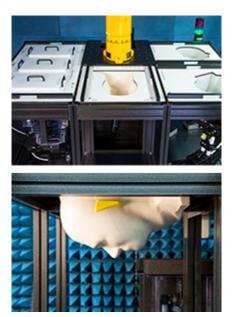

#### SAM Head Stand Phantom

The SAM Head Stand Phantom V10 allows assessment of the exposure of the top-head or around-the-head wireless accessories, e.g., head-belts, etc. It is manufactured from high precision injection molded polypropylene. The Mounting Device for Transmitters including extensions kit can be used to position the device.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible with
	SPEAG tissue simulating liquids (sugar
	and oil based). Use of other liquids may
	render the phantom warranty void (see
	note or consult SPEAG support).
Shell Thickness	2 ± 0.2 mm (6 mm at ear point)
Head Shape	Standard compatible SAM head.






#### Wrist Phantom

The Wrist Phantom V10 is shape-compatible with the CTIA approved OTA GFPC-V1 and optimized for SAR evaluation of watches and other wireless hand accessories.

Material	Epoxy based
Liquid Compatibility	The phantom shell is compatible
	with SPEAG tissue simulating
	liquids (sugar and oil based). Use of
	other liquids may render the
	phantom warranty void (see note or
	consult SPEAG support).
Shell Thickness	Shell Thickness
Wrist Shape	Design compatible with CTIA
	forearm.

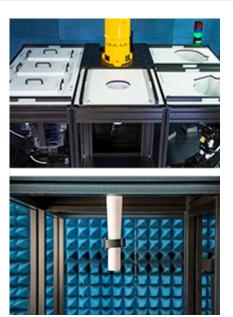



#### Device Holder for SAM-Twin Phantom

The SAR in the phantom is approximately inversely proportional to the square of the distance between the source and the liquid surface. For a source at 5mm distance, a positioning uncertainty of  $\pm 0.5$ mm would produce uncertainty in the SAR of  $\pm 20\%$ . Accurate device positioning is therefore crucial for accurate and repeatable measurements. The positions at which the devices must be measured are defined by the standards.

#### MD4HHTV5 - Mounting Device for Hand-Held Transmitters

In combination with the Twin SAM V5.0/V5.0c or ELI phantoms, the Mounting Device for Hand-Held Transmitters enables rotation of the mounted transmitter device to specified spherical coordinates. At the heads, the rotation axis is at the ear opening. Transmitter devices can be easily and accurately positioned according to IEC 62209-1, IEEE 1528, FCC, or other specifications. The device holder can be locked for positioning at different phantom sections (left head, right head, flat).

Material: Polyoxymethylene (POM)








## **MDA4WTV5 - Mounting Device Adaptor for Ultra Wide Transmitters** An upgrade kit to Mounting Device to enable easy mounting of wider devices like big smart-phones, e-books, small tablets, etc. It holds devices with width up to 140 mm.

Material: Polyoxymethylene (POM)

#### MDA4SPV6 - Mounting Device Adaptor for Smart Phones

The solid low-density MDA4SPV6 adaptor assuring no impact on the DUT radiation performance and is conform with any DUT design and shape.

Material: ROHACELL



## MD4LAPV5 - Mounting Device for Laptops and other Body-Worn Transmitters

In combination with the Twin SAM V5.0/V5.0c or ELI phantoms, the Mounting Device (Body-Worn) enables testing of transmitter devices according to IEC 62209-2 specifications. The device holder can be locked for positioning at a flat phantom section.

Material: Polyoxymethylene (POM), PET-G, Foam

### MDA4LAP - Mounting Device Adaptor for Laptops


A simple but effective and easy-to-use extension for the Mounting Device; facilitates testing of larger devices (e.g., laptops, cameras, etc.) according to IEC 62209-2; lightweight and fits easily on the upper part of the Mounting Device in place of the phone positioner. The extension is fully compatible with the Twin SAM as well as ELI and other Flat Phantoms.

Material: Polyoxymethylene (POM), PET-G, Foam

#### Modulation and Interference Analyzer(MAIA)

MAIA is a hardware interface used to evaluate the modulation and audio interference characteristics of RF signals in the frequency range 698 -6000 MHz. DASY6 evaluates the time-domain and frequency domain properties of the uplink signal transmitted by the DUT during SAR measurement with MAIA. MAIA uses USB powered active electronics to identify the modulation of the DUT. It can be operated over the air interface using the built-in ultra-broadband planar log spiral antenna (698 - 6000 MHz) or in conducted mode using the coaxial SMA 50 Ohm connector (300 - 6000 MHz).

To prevent damage in conducted mode due to high peak power, an external RF attenuator may be mounted. The LED on the MAIA hardware also indicates whether it is connected.

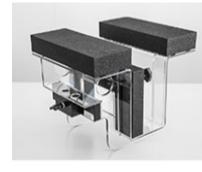









#### DAK-3.5 (200MHz - 20GHz)

This precision dielectric measurement system is designed to cover the 200MHz – 20GHz frequency range with a single open-ended coaxial dielectric probe. The system uses advanced algorithms and novel hardware to measure the dielectric properties of liquids, solids, and semi-solids over a broad range of parameters. The measurement method is fast and non-destructive to the material under test.



Evaluation of reference liquids over a broad frequency range for specific absorption rate (SAR) measurements, in accordance with IEC 62209, IEEE 1528, and several federal regulations.

Evaluating Software: DAK software version 2.0

MRT simulating liquid		
Product	Test Frequency (MHz)	Main Ingredients
HSL450	400 – 500	Water, Sucrose, NaCl
MSL450	400 – 500	Water, Sucrose, NaCl

Speag Broad-Band simulating liquid				
Product	Test Frequency (MHz)	Main Ingredients		
HBBL600-10000V6	600 – 10000	Water, Oil		
MBBL600-6000V6	600 – 6000	Water, Oil		






## 5. The SAR Measurement Procedure

#### 5.1. Measurement Process Diagram

#### **General Procedure**

#### For IEEE1528-2013 Head SAR

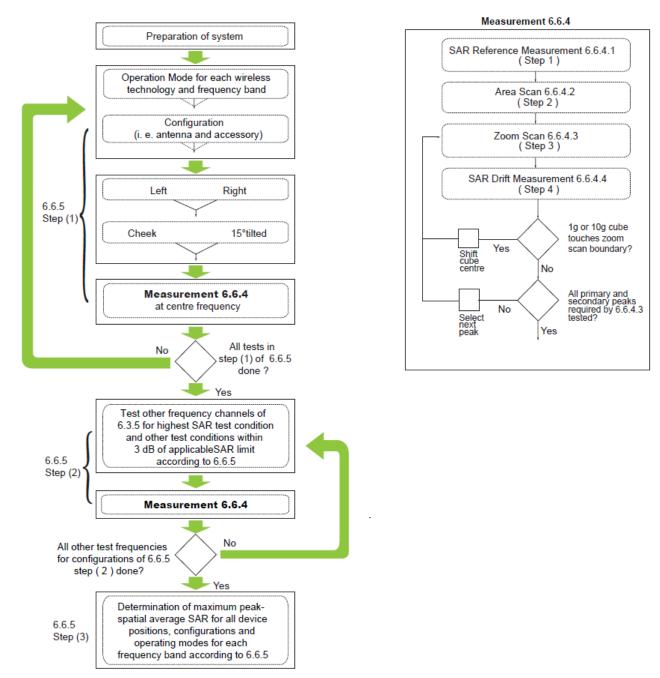

#### For Body SAR


SAR scan procedures described in section 2.7 of KDB 865664 D01 v01r04 should be applied to body SAR test.




#### 5.2. Test Position Definition

#### Head SAR Test Position

Define two imaginary lines on the handset—the vertical centerline and the horizontal line. The vertical centerline passes through two points on the front side of the handset—the midpoint of the width wt of the handset at the level of the acoustic output [point A in Fixed case and Clamshell case], and the midpoint of the width w<sub>b</sub> at the bottom of the handset (point B). The horizontal line is perpendicular to the vertical centerline and passes through the center of the acoustic output [see Fixed case]. The horizontal line is also tangential to the face of the handset at point A. The two lines intersect at point A. Note that for many handsets, point A coincides with the center of the acoustic output; however, the acoustic output may be located elsewhere on the horizontal line. Also note that the vertical centerline is not necessarily parallel to the front face of the handset [see Clamshell case], especially for clamshell handsets, handsets with flip covers, and other irregularly-shaped handsets, the vertical centerline passes through point A but not the tip edge of the phone.

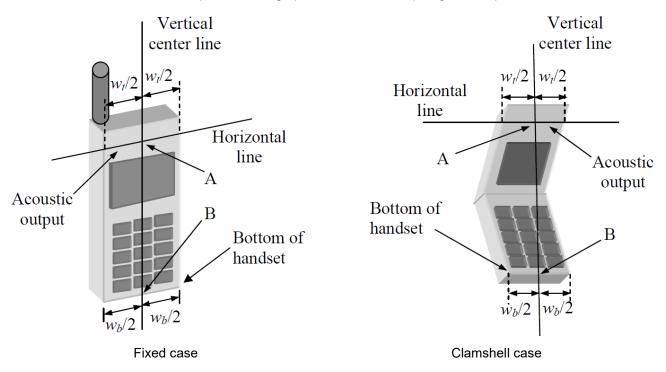




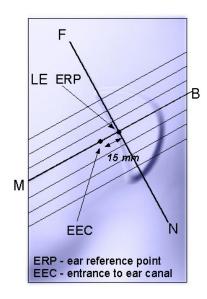

#### Key

- B Direction of B-M line back endpoint
- F Direction of N-F line front endpoint
- N Direction of N-F line neck endpoint
- M Mouth reference point
- LE Left ear reference point (ERP)

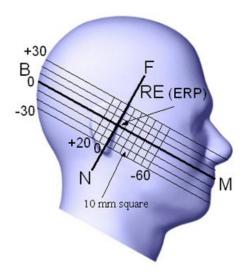


#### Key

- B Line B-M back endpoint
- M Line B-M front endpoint
- N Line N-F neck endpoint
- F Line N-F front endpoint
- RE Right ear reference point (ERP)

#### **Cheek Position**

The cheek position has the following characteristics, based on the geometrical lines described above:

- The N-F line (see above) is in the plane defined by the handset vertical centerline and horizontal line
- Handset touches the pinna
- The handset vertical centerline is aligned with the Reference Plane.

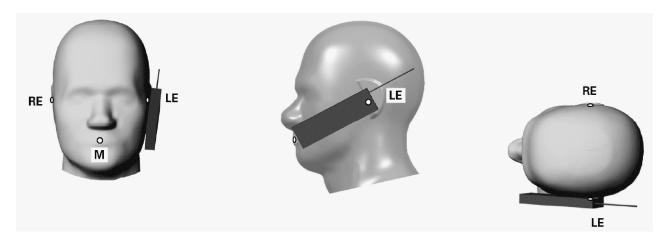

#### Key

- M Mouth reference point
- LE Left ear reference point
- RE Right ear reference point




#### Tilt Position

The tilt position is established as follows:

-Repeat the steps to place the device in the cheek position.

-While maintaining the orientation of the handset, move the handset away from the pinna along the line passing through RE and LE far enough to allow a rotation of the handset away from the cheek by 15°. -Rotate the handset around the horizontal line by 15°.

-While maintaining the orientation of the handset, move the handset towards the phantom on the line passing through RE and LE until any part of the handset touches the ear. The tilt position is obtained when the contact point is on the pinna. If contact occurs at any location other than the pinna, e.g., the antenna at the back of the phantom head, the angle of the handset shall be reduced. In this case, the tilt position is obtained if any point on the handset is in contact with the pinna and a second point on the handset is in contact with the pinna and a second point on the handset is in contact with the pinna and a second point on the handset is in contact with the phantom, e.g., the antenna with the back of the head.

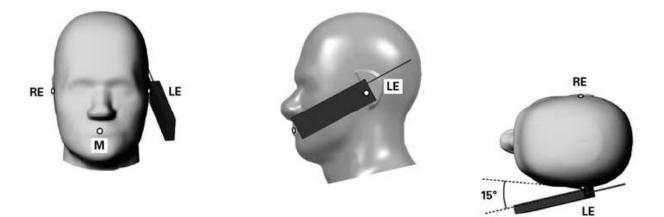

#### Key

nt

LE Left ear reference point

RE Right ear reference point

Body SAR Test Position

For body-worn accessory, hotspot mode and other exposure conditions to human body should be conducted pursuant to the test position requirements of SAR KDBs for certain product.



#### 5.3. Test Procedure

#### Step 1 Setup a Connection

First, engineer should record the conducted power before the test. Then establish a call in handset at the maximum power level with a base station simulator via air interface, or make the EUT establish transmission by itself in testing band. Place the EUT to certain test position.

#### **Step 2 Power Reference Measurements**

To measure the local E-field value at a fixed location which value will be taken as a reference value for calculating a possible power drift.

#### Step 3 Area Scan

1528-2013 for details.

The Area Scan is used as a fast scan in two dimensions to find the area of high field values, before doing a fine measurement around the hot spot. The sophisticated interpolation routines implemented in DASY software can find the maximum locations even in relatively coarse grids. When an Area Scan has measured all reachable points, it computes the field maximal found in the scanned area, within a range of the global maximum. The range (in dB) is specified in the standards for compliance testing. For example, a 2 dB range is required in IEEE Standard 1528 and IEC 62209 standards, whereby 3 dB is a requirement when compliance is assessed in accordance with the ARIB standard (Japan). If only one Zoom Scan follows the Area Scan, then only the absolute maximum will be taken as reference. For cases where multiple maximums are detected, the number of Zoom Scans has to be increased accordingly.

	≤ 3 GHz	> 3 GHz		
Maximum distance from closest measurement				
point (geometric center of probe sensors) to	5 mm ± 1 mm	½·δ·ln(2) mm ± 0.5 mm		
phantom surface				
Maximum probe angle from probe axis to				
phantom surface normal at the measurement	30° ± 1°	20° ± 1°		
location				
	≤ 2 GHz: ≤ 15 mm	3 - 4 GHz: ≤ 12 mm		
	2 - 3 GHz: ≤ 12 mm	4 - 6 GHz: ≤ 10 mm		
Maximum area scan spatial resolution:	When the x or y dimension of the test device, in the			
$\Delta X_{Area}, \Delta Y_{Area}$	measurement plane orientation, is smaller than the			
$\Delta$ Area, $\Delta$ yArea	above, the measurement resolution must be $\leq$ the			
	corresponding x or y dimension of the test device with at			
	least one measurement point on the test device.			
Note: $\delta$ is the penetration depth of a plane-wave at normal incidence to the tissue medium; see IEEE Std				

#### Area Scan Parameters extracted from KDB 865664 D01v01r04



#### Step 4 Zoom Scan

Zoom Scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The Zoom Scan measures points (refer to table below) within a cube whose base faces are centered on the maxima found in a preceding area scan job within the same procedure. When the measurement is done, the Zoom Scan evaluates the averaged SAR for 1 g and 10 g and displays these values next to the job's label.

≤ 3 GHz > 3 GHz						
nm*						
nm*						
mm						
mm						
mm						
mm						
mm						
mm						
nm						
nm						
nm						
Note: * When zoom scan is required and the reported SAR from the area scan based 1-g SAR estimation						
procedures of KDB Publication 447498 is ≤ 1.4 W/kg, ≤ 8 mm, ≤ 7 mm and ≤ 5 mm zoom scan resolution may						
be applied, respectively, for 2 GHz to 3 GHz, 3 GHz to 4 GHz and 4 GHz to 6 GHz.						
procedures of KDB Publication 447498 is $\leq$ 1.4 W/kg, $\leq$ 8 mm, $\leq$ 7 mm and $\leq$ 5 mm zoom scan resolution						

#### Zoom Scan Parameters extracted from KDB 865664 D01 v01r04

#### Step 5 Power Drift Measurements

Repetition of the E-field measurement at the fixed location mentioned in Step 1 to make sure the two results differ by less than ± 0.2 dB.

#### Step 6 Test Data


After the test, SAR test data should be exported by SEMCAD.



## 6. System Verificaiton

#### 6.1. Tissue Check

■ Refer to KDB 865664 D01 v01r04, the depth of tissue-equivalent liquid in a phantom must be ≥ 15.0 cm with ≤ ± 0.5 cm variation for SAR measurements ≤ 3 GHz and ≥ 10.0 cm with ≤ ± 0.5 cm variation for measurements > 3 GHz.

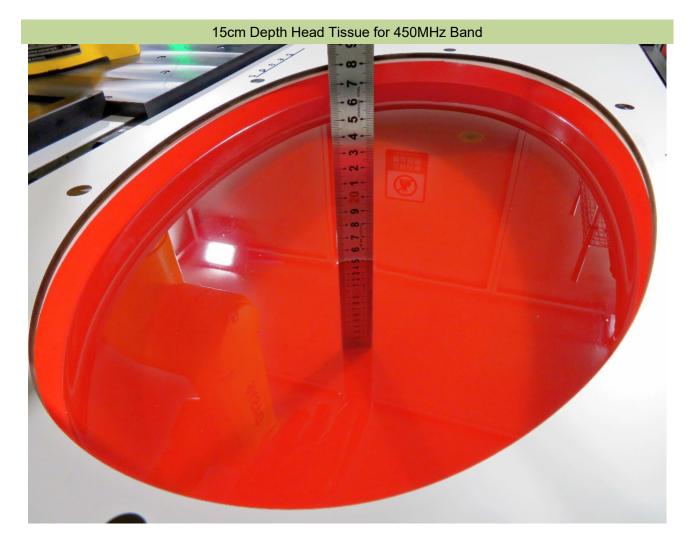



#### Dielectric properties of the head tissue-equivalent liquid

Frequency	Relative Permittivity	Conductivity (σ)	
MHz	٤r	S/m	
300	45.3	0.87	
450	43.5 0.87		
750	41.9	0.89	
835	41.5	0.90	
900	41.5	0.97	
1 450	40.5	1.20	
1 500	40.4	1.23	
1 640	40.2	1.31	
1 750	40.1	1.37	
1 800	40.0	1.40	
1 900	40.0	1.40	
2 000	40.0	1.40	
2 100	39.8	1.49	
2 300	39.5	1.67	
2 450	39.2	1.80	
2 600	39.0	1.96	
3 000	38.5	2.40	
3 500	37.9	2.91	
4 000	37.4	3.43	
4 500	36.8	3.94	
5 000	36.2	4.45	
5 200	36.0	4.66	
5 400	35.8	4.86	
5 600	35.5	5.07	
5 800	35.3	5.27	
6 000	35.1	5.48	

original data provided by Drossos et al. [33] or the extension to 5800MHz are provided (i.e. the values shown in italics). These values were linearly interpolated between the values in this table that are immediately above and below these values, except the values at 6000MHz that were linearly extrapolated from the values at 3000MHz and 5800MHz.



#### Tissue Calibration Result

The dielectric parameters of the liquids were verified prior to the SAR evaluation using DASY6 Dielectric Assessment Kit and keysight PNA-L Network Analyzer N5234B.

Tissue parameter for Head								
Freq.	Dorm	Cand	Target	Target	Deviation	Deviation	Tissue	Test Date
(MHz)	lz) Perm. Cond.	Perm.	Cond.	Perm. %	Cond. %	Temperature	Test Date	
450	42.13	0.84	43.50	0.87	-3.15	-3.45	22.5°C	2021.12.29


Note: The  $\pm 5\%$  deviation of tissue parameter is recommended.



#### 6.2. System Check

#### Purpose

The purpose of the system check is to verify that the system operates within its specifications at the device test frequencies. System check verifies the measurement repeatability of a SAR system before compliance testing and is not a validation of all system specifications. The latter is not required for testing a device but is mandatory before the system is deployed.

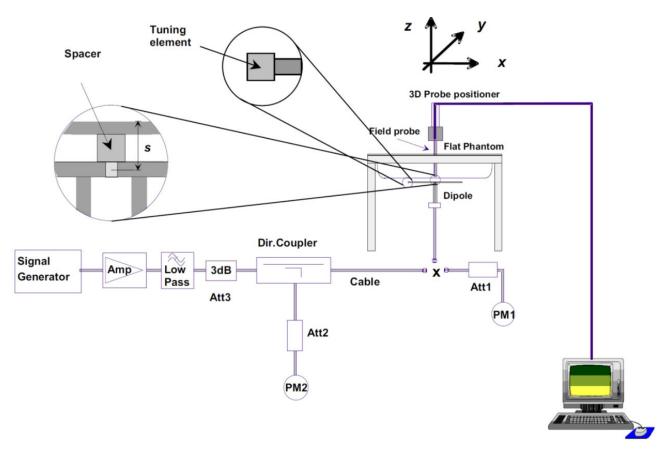

System Performance Check Setup Diagram

System Check Procedure

The system check procedure is a complete 1g and 10g peak spatial-average SAR measurement using a source having a previously determined system check target value. The measured 1g and 10g SAR are normalized to the target input power of the specific source and compared to their respective target values.

A description of the different measurement tasks to be performed is given below, together with the information that can be deduced from their results:

a. The Power Reference Measurement and Power Drift Measurement are located at the beginning and end of the batch process. They measure the field drift at one single point in the liquid over the complete procedure. The indicated drift is mainly the variation of the amplifier output power. If it is too high (above  $\pm 0.1$  dB), the system check should be repeated; some amplifiers have very high drift during warm-up. A stable amplifier gives drift results in the DASY6 system below  $\pm 0.02$  dB.



b. The second step is optional. For probes with integrated optical surface detection sensor this step must be conducted, otherwise the step can be skipped. The Surface Check tests the optical surface detection system of the DASY6 system by repeatedly detecting the surface with the optical and mechanical surface detector and comparing the results. The output gives the detecting heights of both systems, the difference between the two systems and the standard deviation of the detection repeatability. Air bubbles or refraction in the liquid due to separation of the sugar-water mixture gives poor repeatability (above ±0.1 mm). In that case it is better to abort the system check and stir the liquid.

c. The Area Scan measures the SAR above the dipole on a plane parallel to the surface. It is used to locate the approximate location of the peak SAR. The proposed scan uses large grid spacing for faster measurement; due to the symmetric field, the peak detection is reliable. If a finer graphic is desired, the grid spacing can be reduced. Grid spacing and orientation have no influence on the SAR result.

d. The Zoom Scan measures the field in a volume around the peak SAR value assessed in the previous Area Scan.

If the system check gives reasonable results, the SAR peak, 1 g and 10 g spatial average SAR values normalized to 1 W dipole input power give reference data for comparisons. The next sections analyze the expected uncertainties of these values, as well as additional checks for further information or troubleshooting.

System check for Head												
Freq. (MHz)	1g SAR (W/kg)	10g SAR (W/kg)	Target 1g SAR (W/kg)	Target 10g SAR (W/kg)	Deviation 1g SAR (%)	Deviation 10g SAR (%)	Tissue Temp.	Test Date				
450	4.64	3.10	4.60	3.08	0.87	0.78	22.5°C	2021.12.29				

#### Result of System Performance Check

Note:


1. The ±10% deviation of system check result is required.

2. System check value listed above has been harmonized to 1W.



### 7. Analysis and Results

#### 7.1. Antenna Location

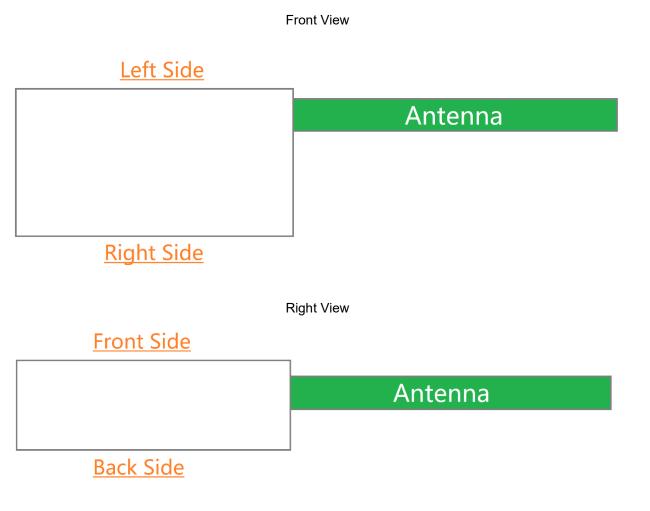

Antenna Distance to Surfaces/Edges (mm)							
Position	Back side						
Distance	11	22					

Note: The accessory is body worn using, the thickness is 10mm, and contain metallic components in it.



#### 7.2. Conducted Power

	Frequency	Power	(dBm)
Channel	(MHz)	Measured Power	Tune-up Power
1	464.5500	31.98	33.0
2	467.9250	31.87	33.0
3	461.0375	32.30	33.0
4	461.0625	32.27	33.0
5	461.0875	32.26	33.0
6	461.1125	32.27	33.0
7	461.1375	32.25	33.0
8	461.1625	32.24	33.0
9	464.5000	31.95	33.0
10	467.7625	31.84	33.0
11	467.8125	31.83	33.0
12	467.8500	31.79	33.0
13	467.8750	31.80	33.0
14	467.9000	31.78	33.0
15	461.1875	32.21	33.0
16	461.2125	32.20	33.0

Note: The power above is conducted power tested via RF cable.



#### 7.3. SAR Exclusion Analysis

Per FCC KDB 447498 D01v06, the SAR exclusion threshold for distances<50mm is defined by the following equation:

 $\frac{\textit{Max Power of Channel(mW)}}{\textit{Test Separation Distance(mm)}} \times \sqrt{\textit{Frequency(GHz)}} \le 3.0$ , for head and boy SAR;

For 100 MHz to 6 GHz and test separation distances > 50 mm, the 1-g and 10-g SAR test exclusion thresholds are determined by the following:

- {[Power allowed at numeric threshold for 50 mm in step a)] + [(test separation distance 50 mm) \* (f(MHz)/150)]} mW, for 100 MHz to 1500 MHz
- 2) {[Power allowed at numeric threshold for 50 mm in step a)] + [(test separation distance 50 mm)\*10]} mW, for > 1500 MHz and ≤ 6 GHz
- Required Configurations of SAR Test

Test Mode	In Front of Face	Body Back		
PTT	Yes	Yes		



#### 7.4. SAR Test Results

#### Head

CH.	Freq. (MHz)	Test Position	Dist. (mm)	Cond. Power (dBm)	Max. Tune-up Power (dBm)	Scaling Factor	Duty Cycle Factor	Meas. SAR-1g (W/kg)	Reported SAR-1g (W/kg)	SAR Plot #
3	461.0375	Front of Face	25	32.30	33.0	1.17	0.75	0.16	0.14	1
9	464.5000	Front of Face	25	31.95	33.0	1.27	0.75	0.14	0.13	
2	467.9250	Front of Face	25	31.87	33.0	1.30	0.75	0.14	0.14	

Note: A duty factor of 50% should be applied to determine compliance for radios with a mechanical PTT button.

#### Body-worn

CH.	Freq. (MHz)	Test Position	Dist. (mm)	Cond. Power (dBm)	Max. Tune-up Power (dBm)	Scaling Factor	Duty Cycle Factor	Meas. SAR-1g (W/kg)	Reported SAR-1g (W/kg)	SAR Plot #
3	461.0375	Back	0	32.30	33.0	1.17	0.75	0.32	0.28	
9	464.5000	Back	0	31.95	33.0	1.27	0.75	0.30	0.29	2
2	467.9250	Back	0	31.87	33.0	1.30	0.75	0.27	0.26	

Note: A duty factor of 50% should be applied to determine compliance for radios with a mechanical PTT button.



#### 7.5. Estimated SAR Calculation

Per FCC KDB 447498 D01v06 section 4.3.2 b) 1), when an antenna qualifies for the standalone SAR test exclusion of 4.3.1 and also transmits simultaneously with other antennas, the standalone SAR value was estimated according to the following formula to result in substantially conservative SAR values of  $\leq 0.4$ W/kg for test separation distance  $\leq 50$ mm to determine the simultaneous transmission SAR test exclusion criteria:

Estimated 
$$SAR = \frac{\sqrt{f(GHz)}}{7.5} * \frac{(Max Power of channel, mW)}{Min. Separation, mm}$$
, for 1-g SAR

Estimated 
$$SAR = \frac{\sqrt{f(GHz)}}{18.75} * \frac{(Max Power of channel, mW)}{Min. Separation, mm}$$
, for 10-g SAR

When the test separation distance is > 50 mm, estimated 1g-SAR 0.4W/kg/10g-SAR 1.0W/kg is used for simultaneous evaluation.

N/A



## 8. Simultaneous Transmission Analysis

N/A



## 9. Test Equipment Used

SR3 - SAR					
Instrument	Manufacturer	Туре No.	Asset No.	Cali. Interval	Cali. Due Date
Stäubli Robot TX60L	Stäubli	TX60L	MRTSUE06412	only once	only once
Robot Controller	Stäubli	CS8C	MRTSUE06412	only once	only once
ELI Phantom Shell	Speag	V8	MRTSUE06420	N/A	N/A
DAK	Speag	DAK-3.5	MRTSUE06435	N/A	N/A
Dipole Validation Kits	Speag	D450V3	N/A	3 year	2024/01/19
DAE4	Speag	1552	MRTSUE06414	1 year	2022/05/16
E-Field Probe	Speag	EX3DV4	MRTSUE06438	1 year	2022/06/23
Network Analyzer	Keysight	N5234B	MRTSUE06454	1 year	2022/06/24
Directional Coupler	Agilent	778D	MRTSUE06083	1 year	2022/03/24
Directional Coupler	Agilent	87301D OPT 292	MRTSUE06082	1 year	2022/03/08
Signal Generator	Keysight	N5183B	MRTSUE06197	1 year	2022/08/08
Power Sensor	Keysight	U2021XA	MRTSUE06447	1 year	2022/06/08
Thermohygrometer	Testo	622	MRTSUE06361	1 year	2022/05/18

Software	Version	Function
DASY NEO	52.10.4.1527	SAR Test Software



## 10. Measurement Uncertainty

	Uncert.	Prob.		(ci)	(ci)	Std. Unc.	Std. Unc.	(vi)
Error Description	value	Dist.	Div.	1g	10g	(1g)	(10g)	veff
Measurement System					-		,	
Probe Calibration	±6.0 %	N	1	1	1	±6.0 %	±6.0 %	∞
Axial Isotropy	±4.7 %	R	$\sqrt{3}$	0.7	0.7	±1.9 %	±1.9 %	∞
Hemispherical Isotropy	±9.6 %	R	$\sqrt{3}$	0.7	0.7	±3.9 %	±3.9 %	∞
Boundary Effects	±1.0 %	R	$\sqrt{3}$	1	1	±0.6 %	±0.6 %	∞
Linearity	±4.7 %	R	$\sqrt{3}$	1	1	±2.7 %	±2.7 %	∞
System Detection Limits	±1.0 %	R	$\sqrt{3}$	1	1	±0.6 %	±0.6 %	∞
Modulation Response	±2.4 %	R	$\sqrt{3}$	1	1	±1.4 %	±1.4 %	∞
Readout Electronics	±0.3 %	N	1	1	1	±0.3 %	±0.3 %	∞
Response Time	±0.8 %	R	$\sqrt{3}$	1	1	±0.5 %	±0.5 %	∞
Integration Time	±2.6 %	R	$\sqrt{3}$	1	1	±1.5 %	±1.5 %	∞
RF Ambient Noise	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
RF Ambient Reflections	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
Probe Positioner	±0.02 %	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Probe Positioning	±0.4 %	R	$\sqrt{3}$	1	1	±0.2 %	±0.2 %	∞
Max. SAR Eval.	±2.0 %	R	$\sqrt{3}$	1	1	±1.2 %	±1.2 %	∞
Test Sample Related		•						
Device Positioning	±2.9%	N	1	1	1	±2.9 %	±2.9 %	145
Device Holder	±3.6%	N	1	1	1	±3.6 %	±3.6 %	5
Power Drift	±5.0%	R	$\sqrt{3}$	1	1	±2.9 %	±2.9 %	∞
Power Scaling	±0%	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Phantom and Setup					•			
Phantom Uncertainty	±6.1%	R	$\sqrt{3}$	1	1	±3.5 %	±3.5 %	∞
SAR correction	±1.9%	N	1	1	0.84	±1.9 %	±1.6 %	∞
Liquid Cond. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.78	0.71	±2.0 %	±1.8 %	∞
Liquid Perm. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.23	0.26	±0.6 %	±0.7 %	∞
Temp. unc. – Conductivity	±3.4%	R	√3	0.78	0.71	±1.5 %	±1.4 %	∞
Temp. unc. – Permittivity	±0.4%	R	$\sqrt{3}$	0.23	0.26	±0.1 %	±0.1 %	∞
Combined Std. Uncertainty						±11.3%	±11.2%	459
Expanded STD Uncertainty						±22.6%	±22.4%	



	Uncert.	Prob.	Div	(ci)	(ci)	Std. Unc.	Std. Unc.	(vi)
Error Description	value	Dist.	Div.	1g	10g	(10g)	(10g)	veff
Measurement System								
Probe Calibration	±6.55 %	Ν	1	1	1	±6.55 %	±6.55 %	∞
Axial Isotropy	±4.7 %	R	$\sqrt{3}$	0.7	0.7	±1.9 %	±1.9 %	∞
Hemispherical Isotropy	±9.6 %	R	$\sqrt{3}$	0.7	0.7	±3.9 %	±3.9 %	∞
Boundary Effects	±2.0 %	R	$\sqrt{3}$	1	1	±1.2 %	±1.2 %	∞
Linearity	±4.7 %	R	√3	1	1	±2.7 %	±2.7 %	∞
System Detection Limits	±1.0 %	R	√3	1	1	±0.6 %	±0.6 %	∞
Modulation Response	±2.4 %	R	$\sqrt{3}$	1	1	±1.4 %	±1.4 %	∞
Readout Electronics	±0.3 %	N	1	1	1	±0.3 %	±0.3 %	∞
Response Time	±0.8 %	R	√3	1	1	±0.5 %	±0.5 %	∞
Integration Time	±2.6 %	R	√3	1	1	±1.5 %	±1.5 %	∞
RF Ambient Noise	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
RF Ambient Reflections	±3.0 %	R	$\sqrt{3}$	1	1	±1.7 %	±1.7 %	∞
Probe Positioner	±0.04 %	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Probe Positioning	±0.8 %	R	$\sqrt{3}$	1	1	±0.5 %	±0.5 %	∞
Max. SAR Eval.	±4.0 %	R	$\sqrt{3}$	1	1	±2.3 %	±2.3 %	∞
Test Sample Related		•	1				•	
Device Positioning	±2.9%	N	1	1	1	±2.9 %	±2.9 %	145
Device Holder	±3.6%	N	1	1	1	±3.6 %	±3.6 %	5
Power Drift	±5.0%	R	$\sqrt{3}$	1	1	±2.9 %	±2.9 %	∞
Power Scaling	±0%	R	$\sqrt{3}$	1	1	±0.0 %	±0.0 %	∞
Phantom and Setup		1	1			1		
Phantom Uncertainty	±6.6%	R	$\sqrt{3}$	1	1	±3.8 %	±3.8 %	∞
SAR correction	±1.9%	N	1	1	0.84	±1.9 %	±1.6 %	∞
Liquid Cond. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.78	0.71	±2.0 %	±1.8 %	∞
Liquid Perm. (mea.) <sup>DAK</sup>	±2.5%	N	1	0.23	0.26	±0.6 %	±0.7 %	∞
Temp. unc. – Conductivity	±3.4%	R	√3	0.78	0.71	±1.5 %	±1.4 %	∞
Temp. unc. – Permittivity	±0.4%	R	$\sqrt{3}$	0.23	0.26	±0.1 %	±0.1 %	∞
Combined Std. Uncertainty			•	•	•	±11.9%	±11.8%	569
Expanded STD Uncertainty						±23.8%	±23.6%	



### Annex A - System Check Result

Test Date: 12/29/2021

#### SystemPerformanceCheck-SAM2-D450HSL

#### DUT: Dipole 450 MHz D450V2; Type: D450V2

Communication System: CW; Frequency: 450 MHz; Duty Cycle: 1:1 Medium parameters used: f = 450 MHz;  $\sigma$  = 0.84 S/m;  $\epsilon_r$  = 42.13;  $\rho$  = 1000 kg/m<sup>3</sup> Phantom section: Flat Section

DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(10.89, 10.89, 10.89) @ 450 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: SAM2; Type: QD OVA 004 AA; Serial: 2089
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

#### configuration/d=15mm, Pin=250mW, dist=1.4mm (EX-Probe)/Area Scan (5x22x1): Measurement grid:

dx=15mm, dy=15mm; Maximum value of SAR (measured) = 1.58 W/kg

configuration/d=15mm, Pin=250mW, dist=1.4mm (EX-Probe)/Zoom Scan (5x5x7)/Cube 0: Measurement

grid: dx=8mm, dy=8mm, dz=5mm; Reference Value = 41.71 V/m; Power Drift = 0.01 dB


Peak SAR (extrapolated) = 1.83 W/kg

#### SAR(1 g) = 1.16 W/kg; SAR(10 g) = 0.776 W/kg

Smallest distance from peaks to all points 3 dB below: Larger than measurement grid

Ratio of SAR at M2 to SAR at M1 = 63.4%

Maximum value of SAR (measured) = 1.58 W/kg

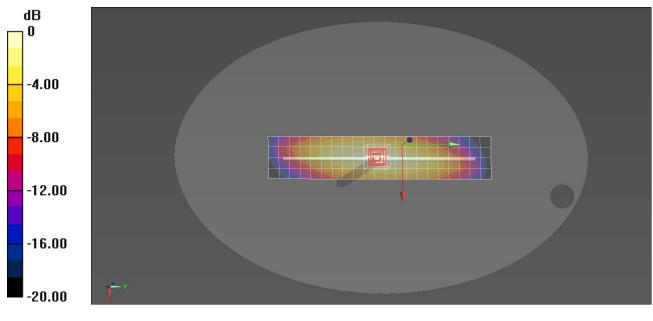

0 dB = 1.58 W/kg = 1.99 dBW/kg



### Annex B - Test Data Plots

Plot 1#

Test Date: 12/29/2021

DUT: Two-way Radio(business radio); Type: KG-S84B Procedure Name: PTT 450MHz Channel 3 Front of Face Communication System: PTT; Frequency: 461.038 MHz; Duty Cycle: 1:1 Medium parameters used: f = 461.038 MHz;  $\sigma$  = 0.85 S/m;  $\varepsilon_r$  = 41.91;  $\rho$  = 1000 kg/m<sup>3</sup>; Tissue Temp (celsius)-22.5°C; Phantom section: Flat Section DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(10.89, 10.89, 10.89) @ 461.038 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: SAM2; Type: QD OVA 004 AA; Serial: 2089
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

Configuration/PTT 450MHz Channel 3 Front of Face/Area Scan (8x17x1): Measurement grid: dx=15mm,

dy=15mm; Maximum value of SAR (measured) = 0.210 W/kg

Configuration/PTT 450MHz Channel 3 Front of Face/Zoom Scan (5x5x7)/Cube 0: Measurement grid:

dx=8mm, dy=8mm, dz=5mm; Reference Value = 14.97 V/m; Power Drift = -0.10 dB


Peak SAR (extrapolated) = 0.238 W/kg

#### SAR(1 g) = 0.162 W/kg; SAR(10 g) = 0.118 W/kg

Smallest distance from peaks to all points 3 dB below: Larger than measurement grid

Ratio of SAR at M2 to SAR at M1 = 68.4%

Maximum value of SAR (measured) = 0.208 W/kg

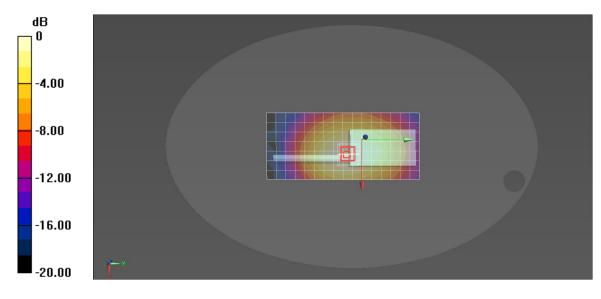

0 dB = 0.208 W/kg = -6.82 dBW/kg



Plot 2#

Test Date: 12/29/2021

#### DUT: Two-way Radio(business radio); Type: KG-S84B

#### Procedure Name: PTT 450MHz Channel 9 Body Back

Communication System: PTT; Frequency: 464.5 MHz; Duty Cycle: 1:1

Medium parameters used: f = 464.5 MHz;  $\sigma$  = 0.86 S/m;  $\epsilon_r$  = 41.85;  $\rho$  = 1000 kg/m<sup>3</sup>; Tissue Temp

(celsius)-22.5°C; Phantom section: Flat Section

DASY5 Configuration:

- Probe: EX3DV4 SN7524; ConvF(10.89, 10.89, 10.89) @ 464.5 MHz; Calibrated: 6/24/2021
- Sensor-Surface: 1.4mm (Mechanical Surface Detection)
- Electronics: DAE4 Sn1552; Calibrated: 5/17/2021
- Phantom: SAM2; Type: QD OVA 004 AA; Serial: 2089
- Measurement SW: DASY52, Version 52.10 (4); SEMCAD X Version 14.6.14 (7483)

#### Configuration/PTT 450MHz Channel 9 Body Back/Area Scan (8x17x1): Measurement grid: dx=15mm,

dy=15mm; Maximum value of SAR (measured) = 0.401 W/kg

Configuration/PTT 450MHz Channel 9 Body Back/Zoom Scan (5x5x7)/Cube 0: Measurement grid: dx=8mm,

dy=8mm, dz=5mm; Reference Value = 21.69 V/m; Power Drift = -0.15 dB


Peak SAR (extrapolated) = 0.487 W/kg

#### SAR(1 g) = 0.300 W/kg; SAR(10 g) = 0.211 W/kg

Smallest distance from peaks to all points 3 dB below: Larger than measurement grid

Ratio of SAR at M2 to SAR at M1 = 59.3%

Maximum value of SAR (measured) = 0.401 W/kg

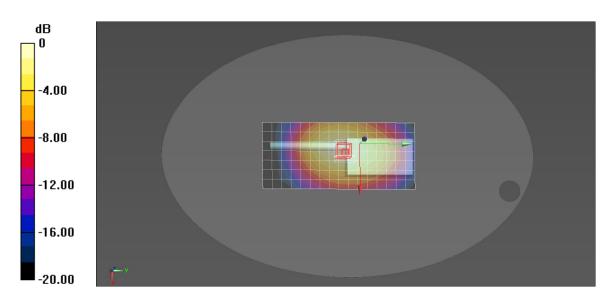

0 dB = 0.401 W/kg = -3.97 dBW/kg



## Annex C - SAR Test Setup Photos

Please refer to document "2111RSU076-UT".



## Annex D - EUT External Photos

Please refer to document "2111RSU076-UE".



## Annex E - Equipment Calibration Report

Please refer to document "Annex E - Equipment Calibration Report.pdf".

The End