

Choose certainty.
Add value.

# Report On

Specific Absorption Rate Testing of the Sepura plc STP9040 TETRA Portable

COMMERCIAL-IN-CONFIDENCE

FCC ID: XX6STP9040 IC ID: 8739A-STP9040

Document 75924414 Report 01 Issue 2

**July 2014** 



#### **Product Service**

TÜV SÜD Product Service, Octagon House, Concorde Way, Segensworth North, Fareham, Hampshire, United Kingdom, PO15 5RL Tel: +44 (0) 1489 558100. Website: <a href="www.tuv-sud.co.uk">www.tuv-sud.co.uk</a>

COMMERCIAL-IN-CONFIDENCE

**REPORT ON** Specific Absorption Rate Testing of the

Sepura plc

STP9040 TETRA Portable

Document 75924414 Report 01 Issue 2

July 2014

PREPARED FOR Sepura plc

Radio House St Andrews Road

Cambridge CB4 1GR

PREPARED BY

Nigel Grigsby SAR Engineer

**APPROVED BY** 

**Mark Jenkins** 

**Authorised Signatory** 

**DATED** 18 July 2014

This report has been up issued for the following reasons: Testing has been carried out according to KDB 643646 D01 against a 2mm body phantom where it was previously carried out against a 6mm phantom.





### **CONTENTS**

Section		Page No
1	REPORT SUMMARY	3
1.1	Introduction	4
1.2	Brief Summary of Results	
1.3	Test Results Śummary	5
1.4	PTT Duty cycle Measurments / Power Measurements	
1.5	Product Information	20
2	TEST DETAILS	22
2.1	SARA 2 SAR Measurement System	
2.2	STP9040 - Case 300-00233 - Test Results and Course Area Scans - 2D	
2.3	STP9040 - Case 300-00439 - SAR Test Results and Course Area Scans - 2D	
2.4	STP9040 - Case 300-00440 - SAR Test Results and Course Area Scans - 2D	
2.5	STP9040 - Belt Clip - SAR Test Results and Course Area Scans – 2D	31
2.6	STP9040 - RSM - SAR Test Results and Course Area Scans – 2D	32
2.7	STP9040 - Case 300-00440 - SAR Test Results and Course Area Scans - 2D	
2.8	STP9040 - Front of face - SAR Test Results and Course Area Scans – 2D	
2.9	STP9040 - RSM Front of face - SAR Test Results and Course Area Scans – 2D	
2.10	STP9040 - Case 300-00233 - SAR Test Results and Course Area Scans - 2D	
2.11	STP9040 - Case 300-00439 - SAR Test Results and Course Area Scans – 2D	
2.12	STP9040 - Case 300-00440 - SAR Test Results and Course Area Scans – 2D	
2.13	STP9040 - Belt Clip - SAR Test Results and Course Area Scans – 2D	
2.14	STP9040 - RSM - SAR Test Results and Course Area Scans – 2D	
2.15	STP9040 - Case 300-00440 - SAR Test Results and Course Area Scans – 2D	
2.16	STP9040 - Front of face SAR Test Results and Course Area Scans – 2D	
2.17	STP9040 - RSM Front of face - SAR Test Results and Course Area Scans – 2D	43
3	TEST EQUIPMENT USED	44
3.1	Test Equipment Used	45
3.2	Test Software	46
3.3	Dielectric Properties of Simulant Liquids	47
3.4	Test Conditions	
3.5	Measurement Uncertainty	49
4	ACCREDITATION, DISCLAIMERS AND COPYRIGHT	50
4.1	Accreditation, Disclaimers and Copyright	51
ANNEX	A Probe Calibration Report	A.2
ANNEY	R Dipole Calibration Information	R 2



### **SECTION 1**

### **REPORT SUMMARY**

Specific Absorption Rate Testing of the Sepura plc STP9040 TETRA Portable



#### 1.1 INTRODUCTION

The information contained in this report is intended to show verification of the Specific Absorption Rate Testing of the Sepura plc STP9040 TETRA Portable to the requirements of KDB 447498 – D01 v05 General RF Exposure Guidance and RSS-102 Issue 4 March 2010.

Objective To perform Specific Absorption Rate Testing to determine

the Equipment Under Test's (EUT's) compliance with the requirements specified of KDB 447498 – D01 v05 General RF Exposure Guidance and RSS-102 Issue 4 March 2010

for the series of tests carried out.

Applicant Sepura plc
Manufacturer Sepura plc
Manufacturing Description TETRA Portable

Power Output 32.5 dBm

Serial Number(s) IPR201327G8099J

Model Number STP9040

Hardware Version 0

Test Specification/Issue/Date

Software Version 1 (1693 004 02937)

Antenna Type & Model(s) 300-00663 and 300-00662

Battery Cell Manufacturer Sepura plc
Battery Model Number 300-00634
High Capacity Battery Model 300-00635

Number

KDB 447498 – D01 v05 General RF Exposure Guidance

and RSS-102 Issue 4 March 2010

Start of Test 02 July 2014 Finish of Test 02 July 2014

Related Document(s) KDB 643646 D01 v01r01

KDB 865664 – D01 v01 KDB 865664 – D02 v01 IEEE 1528 - 2001

Name of Engineer(s) Nigel Grigsby



#### 1.2 BRIEF SUMMARY OF RESULTS

The measurements shown in this report were made in accordance with the procedures specified KDB  $865664 - D01\ v05$  and RSS-102.

The maximum 1g volume averaged SAR found during this Assessment

Max 1g SAR (W/kg) Body	0.75 (Measured)	0.85 (Scaled)					
Max 1g SAR (W/kg) Front of Face	0.61 (Measured)	0.65 (Scaled)					
The maximum 1g volume averaged SAR level measured for all the tests performed did not exceed the 8.0 W/kg Limit for Occupational (Controlled Exposure).							

#### 1.3 TEST RESULTS SUMMARY

### 1.3.1 System Performance / Validation Check Results

Prior to formal testing being performed a System Check was performed in accordance with KDB 865665 and the results were compared against published data in Standard IEEE 1528-2003. The following results were obtained: -

System performance / Validation results

Date	Dipole Used	Frequency (MHz)	Max 1g SAR (W/kg)*	Percentage Drift on Reference
01/07/2014	450	450	4.66	2.46%
02/07/2014	450	450	4.79	5.26%

<sup>\*</sup>Normalised to a forward power of 1W



### 1.3.2 Results Summary Tables

Tetra Band 407MHz to 430MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00233. Antenna 300-00662. Battery 300-00634.

Pos	ition			Measured						
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)		
0mm	Rear Facing	Т	430	32.22	32.5	0.67	0.71	Figure 3		
Limit for C	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 407MHz to 430MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00439. Antenna 300-00662. Battery 300-00634.

Pos	ition			Measured					
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)	
0mm	Rear Facing	Т	430	32.22	32.5	0.45	0.48	Figure 4	
Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 407MHz to 430MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00440. Antenna 300-00662. Battery 300-00634.

Pos	ition			Measured						
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)		
0mm	Rear Facing	Т	430	32.22	32.5	0.75	0.80	Figure 5		
Limit for O	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 407MHz to 430MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Belt Clip. Antenna 300-00662. Battery 300-00634.

Pos	ition		Frequency (MHz)	Measured Conducted Power (dBm)	Tune Up limit (dBm)					
Spacing	Position	Channel Number				Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)		
0mm	Rear Facing	Т	430	32.22	32.5	0.71	0.76	Figure 6		
Limit for O	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									



**Product Service** 

Tetra Band 407MHz to 430MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Remote Speaker Microphone (RSM). Antenna 300-00662. Battery 300-00635.

Pos	ition			Measured					
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)	
0mm	Rear Facing	Т	430	32.22	32.5	0.31	0.33	Figure 7	
Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 407MHz to 430MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00440. Antenna 300-00662. Battery 300-00635.

Pos	ition		Frequency (MHz)	Measured Conducted Power (dBm)				Area scan (Figure number)		
Spacing	Position	Channel Number			Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)			
0mm	Rear Facing	Т	430	32.22	32.5	0.55	0.59	Figure 8		
Limit for O	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 407MHz to 430MHz Body Phantom Head Fluid Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Antenna 300-00662. Battery 300-00635.

Pos	ition			Measured Conducted Power (dBm)	Tune Up limit (dBm)			Area scan (Figure number)		
Spacing	Position	Channel Number	Frequency (MHz)			Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)			
25mm	Front Facing	Т	430	32.22	32.5	0.61	0.65	Figure 9		
Limit for O	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 407MHz to 430MHz Body Phantom Head Fluid Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Remote Speaker Microphone (RSM). Antenna 300-00662. Battery 300-00635.

Pos	ition			Measured Conducted Power (dBm)						
Spacing	Position	Channel Number	Frequency (MHz)		Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)		
25mm	Front Facing	Т	430	32.22	32.5	0.12	0.13	Figure 10		
Limit for O	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									



**Product Service** 

Tetra Band 450MHz to 470MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00233. Antenna 300-00663. Battery 300-00634.

Pos	ition			Measured				Aros soon		
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)		
0mm	Rear Facing	В	450	31.97	32.5	0.73	0.82	Figure 11		
Limit for O	Limit for Occupation (controlled Exposure) 8 W/kg (1g)									

Tetra Band 450MHz to 470MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00439. Antenna 300-00663. Battery 300-00634.

Pos	ition			Measured					
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)	
0mm	Rear Facing	В	450	31.97	32.5	0.45	0.51	Figure 12	
Limit for C	Limit for Occupation (controlled Exposure) 8 W/kg (1g)								

Tetra Band 450MHz to 470MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00440. Antenna 300-00663. Battery 300-00634.

Pos	ition			Measured				
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)
0mm	Rear Facing	В	450	31.97	32.5	0.75	0.85	Figure 13
Limit for O	ccupation (	controlled Ex	kposure) 8 W/I	kg (1g)				

Tetra Band 450MHz to 470MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Belt Clip. Antenna 300-00663. Battery 300-00634.

Pos	ition			Measured				_	
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)	
0mm	Rear Facing	В	450	31.97	32.5	0.63	0.71	Figure 14	
Limit for C	occupation (	Limit for Occupation (controlled Exposure) 8 W/kg (1g)							



**Product Service** 

Tetra Band 450MHz to 470MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Remote Speaker Microphone (RSM). Antenna 300-00663. Battery 300-00635.

Pos	ition			Measured						
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)		
0mm	Rear Facing	В	450	31.97	32.5	0.23	0.26	Figure 15		
Limit for O	occupation (	Limit for Occupation (controlled Exposure) 8 W/kg (1g)								

Tetra Band 450MHz to 470MHz Body Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Case 300-00440. Antenna 300-00663. Battery 300-00635.

Pos	ition			Measured	Tune Un			
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)
0mm	Rear Facing	В	450	31.97	32.5	0.50	0.56	Figure 16
Limit for O	occupation (	controlled Ex	kposure) 8 W/ł	kg (1g)				

Tetra Band 450MHz to 470MHz Body Phantom Head Fluid Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Antenna 300-00663. Battery 300-00635.

Pos	ition			Measured	Tuno Un			Aroa scan
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)
25mm	Front Facing	В	450	31.97	32.5	0.54	0.61	Figure 17
Limit for O	ccupation (	controlled Ex	kposure) 8 W/l	(g (1g)				

Tetra Band 450MHz to 470MHz Body Phantom Head Fluid Specific Absorption Rate (Maximum SAR) 1g Results for the Sepura STP9040. Remote Speaker Microphone (RSM). Antenna 300-00663. Battery 300-00635.

Pos	ition			Measured				
Spacing	Position	Channel Number	Frequency (MHz)	Conducted Power (dBm)	Tune Up limit (dBm)	Measured 1g SAR (W/kg)	Scaled 1g SAR (W/kg)	Area scan (Figure number)
25mm	Front Facing	В	450	31.97	32.5	0.07	0.08	Figure 18
Limit for O	occupation (	controlled Ex	kposure) 8 W/l	kg (1g)				



**Product Service** 

	Body SAR - Sepura STP9240 in case 300-00233								
Antenna (MHz)	Measured	Fraguanay (MHz)	Battery						
Antenna (MHZ)	Measured	Frequency (MHz)	Standard	Hi-Capacity					
300-00662	Power (W)	430	32.22	32.22					
(407 – 430)	SAR (W/Kg)	430	0.71	-					
300-00663	Power (W)	450	31.97	31.97					
(450 - 470)	(450 – 470) SAR (W/Kg) 450 0.82 -								
Default audio accesso	ory: 300-00428 Personal	handsfree Kit	_						

	Body SAR	- Sepura STP9240 in	case 300-00439	)			
Antonno (MIII)	Measured	Fraguency (MIII-)	Battery				
Antenna (MHz)	Measureu	Frequency (MHz)	Standard	Hi-Capacity			
300-00662	Power (W)	430	32.22	32.22			
(407 - 430)	SAR (W/Kg)	430	0.48	-			
300-00663	Power (W)	450	31.97	31.97			
(450 – 470) SAR (W/Kg) 450 0.51 -							
Default audio access	ory: 300-00428 Perso	onal handsfree Kit					

	Body SAR - Se	epura STP9240 in	case 300-00440		
Antonno (MILIT)	Magazirad	Fraguesay (MILIT)	Battery		
Antenna (MHz)	Measured	Frequency (MHz)	Standard	Hi-Capacity	
300-00662	Power (W)	430	32.22	32.22	
(407 – 430)	SAR (W/Kg)	430	0.80	0.59	
300-00663	Power (W)	450	31.97	31.97	
(450 - 470)	SAR (W/Kg)	430	0.85	0.56	
Default audio accesso	ry: 300-00428 Personal	handsfree Kit			

	Body SAR - Sepura STP9240 in case Belt Clip							
Antenna (MHz)	Measured	Fraguency (MHz)	Battery					
Antenna (MHZ)	ivieasureu	Frequency (MHz)	Standard	Hi-Capacity				
300-00662	Power (W)	430	32.22	32.22				
(407 – 430)	SAR (W/Kg)	430	0.76	-				
300-00663	Power (W)	450	31.97	31.97				
(450 – 470)	SAR (W/Kg)	450	0.71	-				
Default audio access	sory: 300-00428 Perso	onal handsfree Kit						

	Body SAR - Sepura STP9240 With RSM 300-00388								
Antonno (MIII-)	Measured	Fraguescy (MIIII)	Battery						
Antenna (MHz)	Measured	Frequency (MHz)	Standard	Hi-Capacity					
300-00662	Power (W)	420	32.22	32.22					
(407 - 430)	SAR (W/Kg)	430	-	0.33					
300-00663	Power (W)	450	31.97	31.97					
(450 – 470) SAR (W/Kg) 450 - 0.26									
Default audio acces	sory: 300-00428 Perso	onal handsfree Kit							

Note: Part Number 300-00388 was fully tested as it was deemed to be the worst case for body SAR assessment of the supplied accessories (ref accessory list part numbers: 300-00562, 300-00563, 300-00564, 300-00579, 300-580, 300-581, 300-389, 300-733, 300-734). Based on assessment of the accessory construction and similar operating configurations.



Front of Face SAR - Sepura STP9240				
Antonno (AMI) Battery				
Antenna (MHz)	Measured	Frequency (MHz)	Standard	Hi-Capacity
300-00662	Power (W)	420	32.22	32.22
(407 - 430)	SAR (W/Kg)	430	-	0.65
300-00663	Power (W)	450	31.97	31.97
(450 - 470)	SAR (W/Kg)	450	-	0.61

Front of Face SAR - Sepura STP9240 With RSM 300-00388					
Antonno (Allin) Managed Factoria Battery					
Antenna (MHz)	Measured	Frequency (MHz)	Standard	Hi-Capacity	
300-00662	Power (W)	430	32.22	32.22	
(407 - 430)	SAR (W/Kg)	430	-	0.13	
300-00663	Power (W)	450	31.97	31.97	
(450 - 470)	SAR (W/Kg)	450	-	0.08	
	·				



### 1.4 PTT DUTY CYCLE MEASURMENTS / POWER MEASUREMENTS

#### 1.4.1 Requirement


If a device has push-to-talk capability, a minimum duty cycle of 50% (on-time) shall be used in the evaluation. A lower duty cycle is permitted only if the transmission duty cycle is an inherent property of the technology or of the design of the equipment and not under user control. Proof of the various on-off durations and a detailed method of calculation of the average power shall be included in the SAR evaluation.

The EUT was operated in continuous transmit (100% PTT on). However, due to the characteristics of the EUT's TETRA technology the transmitter is only active for 25% of the time.

#### STP9040

Measurement Parameter	EUT Test Frequency (MHz)					
ivieasurement Farameter	407.000	418.500	430.000	450.000	460.000	470.000
Burst Average Power (dBm)	31.99	31.87	32.22	31.97	32.15	32.17
Frame Average Power (dBm)	25.84	25.81	26.09	25.87	25.37	25.59
Transmit On Time (ms)	13.19	13.35	13.35	13.19	13.19	13.19
Transmit On+Off Time (ms)	56.78	56.78	56.78	56.78	56.78	56.78
Transmission Burst Cycle (%)	23.23	23.51	23.51	23.23	23.23	23.23


### Duty Cycle 407.000MHz

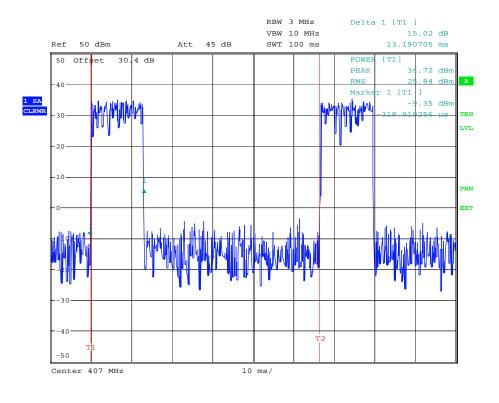

Date: 25.OCT.2013 14:55:55




### Burst Power 407.000MHz

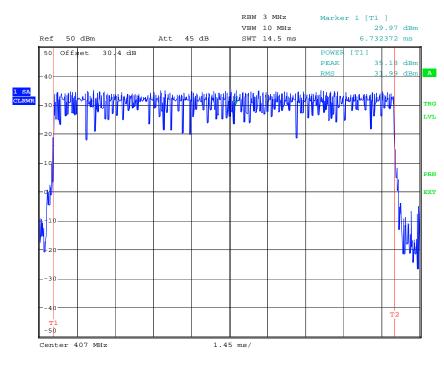

Date: 25.OCT.2013 13:53:25


### Duty Cycle 418.500MHz

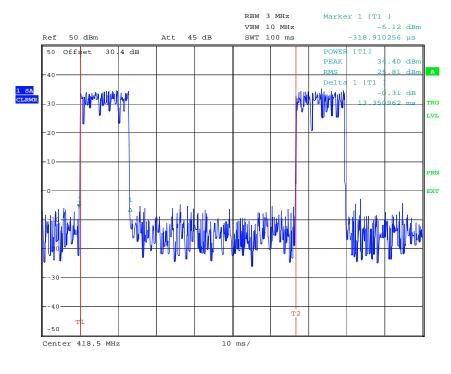

Date: 25.OCT.2013 14:50:46




### Burst Power 418.500MHz

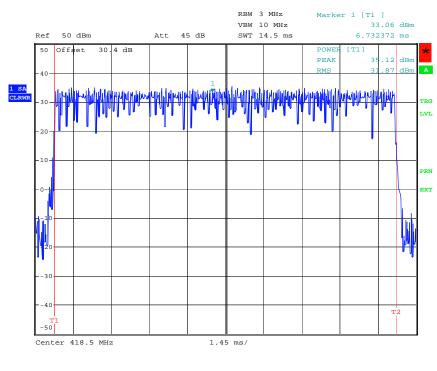

Date: 25.OCT.2013 13:56:51


### Duty Cycle 430.000MHz

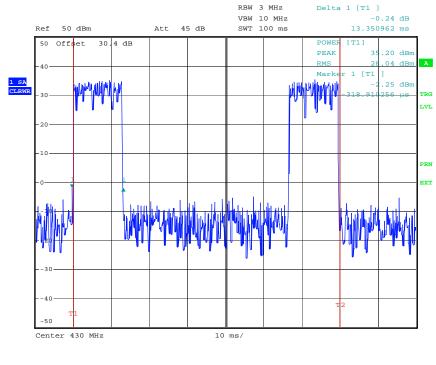

Date: 25.OCT.2013 14:48:40




### Burst Power 430.000MHz

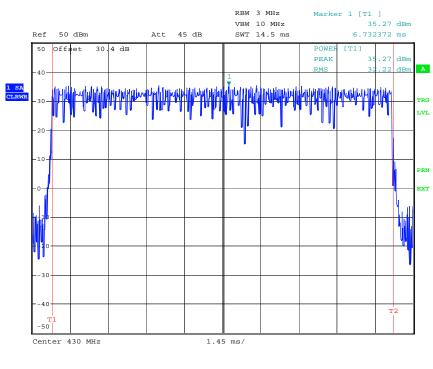

Date: 25.OCT.2013 13:58:57


### Duty Cycle 450.000MHz

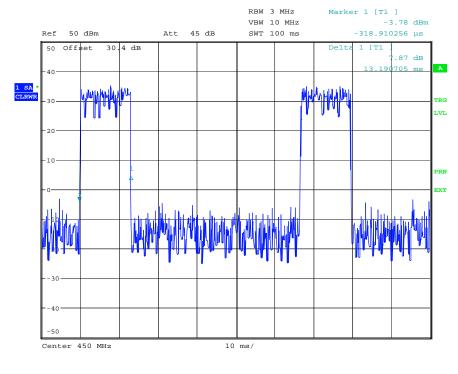

Date: 25.OCT.2013 14:35:13




### Burst Power 450.000MHz

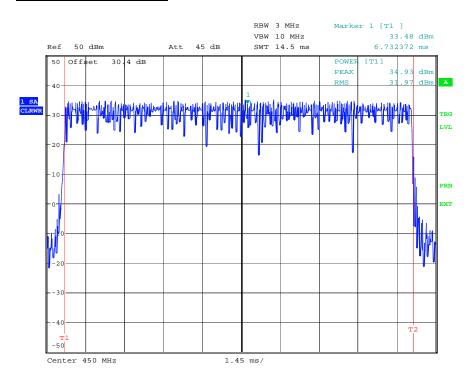

Date: 25.OCT.2013 14:00:14


### Duty Cycle 460.000MHz

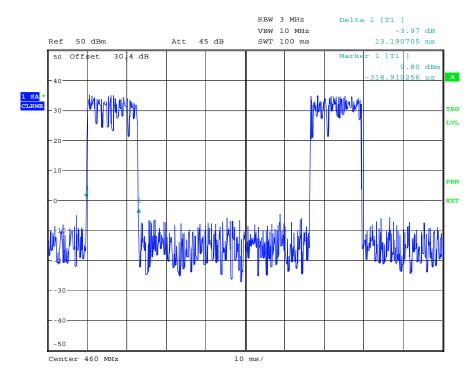

Date: 25.OCT.2013 14:29:23




### Burst Power 460.000MHz

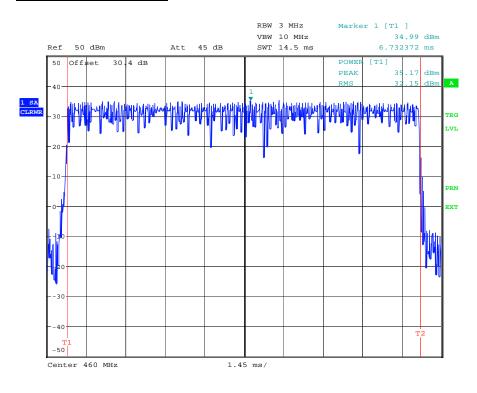

Date: 25.OCT.2013 14:01:22


### Duty Cycle 470.000MHz

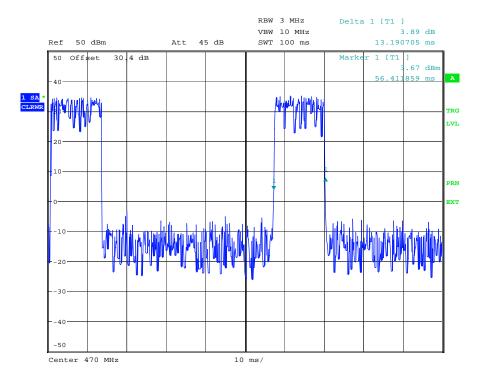

Date: 25.OCT.2013 14:17:11



### Burst Power 470.000MHz

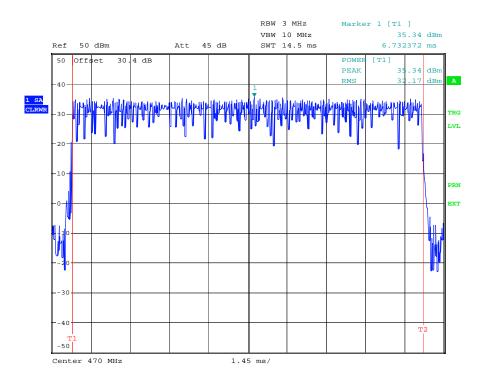

Date: 25.OCT.2013 14:02:51



### 1.4.2 Standalone SAR Test Exclusion Considerations (KDB 447498 D01)

The 1g SAR Test exclusion thresholds for 100 MHz to 6 GHz test separation distances  $\leq$  50 mm are determined by:

[(max power of channel, including tune-up tolerance, mW) / (min. test separation distance, mm)]  $[\sqrt{f}(_{GHz})] \le 3.0$ , where

- f (GHz) is the RF channel transmit frequency in GHz.
- Power and distance are rounded to the nearest mW and mm before calculation.
- The result is rounded to one decimal place for comparison.
- When the maximum test separation distance is < 5 mm, a distance of 5 mm is applied.</li>

Band	Frequency Max		Power Test		Distance	Threshold	Test
Ballu	(MHz)	(dBm)	(mW)	Position	(mm)	Tillesilolu	Exclusion
407-430 430	32.5 1778.28	1778.28	Front of Face	25	46.6	No	
				Body	< 5	233.2	No
450-470 450	450	32.5	1778.28	Front of Face	25	47.7	No
				Body	< 5	236.6	No
Bluetooth	2402	3.98	2.5	Front of Face	25	0.2	Yes
				Body	< 5	0.8	Yes



#### 1.5 PRODUCT INFORMATION

#### 1.5.1 Technical Description

The equipment under test (EUT) was a Sepura STP9040. A full technical description can be found in the manufacturer's documentation.

#### 1.5.2 Test Configuration and Modes of Operation

The Sepura STP9040 portable device supplied for Specific Absorption Rate (SAR) testing was a TETRA portable operating in the frequency range 407MHz to 430MHz and 450MHz to 470MHz. The portable was supplied with two antennas, part numbers 300-00663 and 300-00632

The STP9040 was tested in each position at the frequency that gave the highest output power for the band. The frequencies and positions that yielded the worst case SAR were then tested with various accessories which included Remote Speaker Microphone (RSM), various cases, belt clip and a standard headset.

The testing was performed with batteries supplied by Sepura Limited and manufactured by Sepura Limited. Two battery types were supplied; standard battery, part number 300-00634 and High Capacity battery, part number 300-00635.

Each battery was fully charged before each measurement and there were no external connections.

Testing was carried out with the STP9040 in various cases, Model numbers, 300-00233, 300-00439, 0300-00440 and Belt Clip Model number 300-00442. Based on assessment of the accessory construction and similar operating configurations for RSMs supplied, Model number 300-00388 was fully tested as it was deemed to be the worst case for body SAR assessment of the supplied accessories (ref accessory list part numbers: 300-00562, 300-00563, 300-00564, 300-00579, 300-580, 300-581, 300-389, 300-733, 300-734). Based on assessment of the accessory construction and similar operating configurations.

The following accessories were not tested (ref accessory list part numbers: 300-00512, 300-00322, 300-00323, 300-00718, 300-580) as these 'Klick fast' parts are made of a plastic material and used on the radio as a body-worn aid which means the radio and antenna will be held further away from the body than it would be when used with a belt clip or leather case, both of which have been included in assessment, therefore resulting in a lower SAR figure.

For front of face SAR assessment, testing was performed with the device in the intended normal position of operation for frequency bands at maximum power. The Handset was placed at a distance of 25mm from the bottom of the flat phantom for all front of face testing. Flat phantom dimensions are 245mm x 195mm x 200mm and with a sidewall thickness of 2.0mm. The phantom was filled to a depth of 150mm with the appropriate body simulant liquid. Dielectric properties were in accordance with the requirements specified in KDB 865664 D01.

For body SAR assessment, the device was tested for intended use, body-worn operation in accordance with the requirements of the applied specifications. Testing was achieved using the devices internal software, customer supplied software and settings supplied by the customer. The Handset was placed at a distance of 0mm from the bottom of the flat phantom for all body testing. Flat phantom dimensions are 245mm x 195mm x 200mm and with a sidewall thickness of 2.0mm. The phantom was filled to a depth of 150mm with the appropriate body simulant liquid. Dielectric properties were in accordance with the requirements specified in KDB 865664 D01.



**Product Service** 

Included in this report are descriptions of the test method; the equipment used and an analysis of the test uncertainties applicable and diagrams indicating the locations of maximum SAR for each test position of the handset against the body as appropriate.



### **SECTION 2**

### **TEST DETAILS**

Specific Absorption Rate Testing of the Sepura plc STP9040 TETRA Portable



#### 2.1 SARA 2 SAR MEASUREMENT SYSTEM

#### 2.1.1 Robot System Specification

The SAR measurement system being used is the IndexSAR SARA-C system, which consists of a cartestian 6-axis robot jig, a dedicated robot controller, a straight IndexSAR probe, an L-shaped Indexsar probe, a fast amplifier, and two phantoms: an upside-down SAM phantom, and a rectangular box phantom,

Figure 1. The L-probe is used in connection with measurements on DUTs held against the SAM phantom, while the straight probe is used exclusively in the box phantom. The robot is used to articulate the probe to programmed positions inside the phantom head to obtain SAR readings from the DUT.

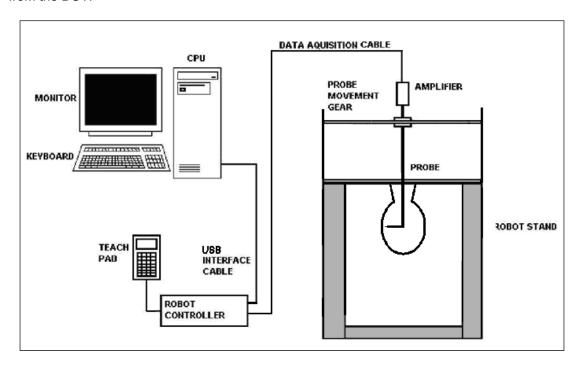


Figure 1 Schematic diagram of the SARA-C measurement system showing the L-probe and upside-down SAM phantom

The system is controlled remotely from a PC, which contains the software to drive the robot and data acquisition equipment. The software also displays the data obtained from test scans.

The position and digitised shape of the phantom heads are made available to the software for accurate positioning of the probe and reduction of set-up time. The SAM phantom heads are individually digitised using a Mitutoyo CMM machine to a precision of 0.001mm. The data is then converted into a shape format for the software, providing an accurate description of the phantom shell. Even with this accuracy, registration errors and deformation of the phantom when filled with 7 litres of fluid, can lead to probe placement errors of 1mm or more. For this reason, the L-probes house a 2-axis strain gauge unit, which allow the actual phantom wall position to be sensed to an accuracy of 0.3mm during probe movements.

In operation, the system first does an area (2D) scan within the liquid following the curve of the phantom wall at a fixed distance. When the maximum SAR point has been found, the system will then carry out a 3D scan centred at that point to determine volume averaged SAR level.



#### 2.1.2 Probe and Amplifier Specification

#### IndexSAR isotropic immersible straight SAR probes

Straight probes are constructed using three orthogonal dipole sensors arranged on an interlocking, triangular prism core. The probes have built-in shielding against static charges and are contained within a PEEK cylindrical enclosure material at the tip. The tips come in either 5mm (typically for use up to 3GHz) or 2.5mm (above 3GHz) versions, model types IXP-050 and IXP-025 respectively.

Straight probes are calibrated by NPL in the UK.

Straight probes are used exclusively in the box phantom, to measure SAR from DUTs placed against the phantom base. In SARA2, straight probes were also used in the SAM phantom, but this is forbidden in SARA-C, where L-probes are demanded. NB the reverse is not true: L-probes can be used in the box phantom.

#### IndexSAR L-probes

The L-shaped probe is so designed to ensure the probe tip can remain perpendicular to the SAM phantom wall during scans. To allow for greater probe articulation freedom, the SAM phantom head has been turned upside down and the probe is inserted through the throat aperture, rather than through a small hole at the top of the head in the old SARA2 SAR measurement system.

Like the straight probes, L-probes also come in the same two tip sizes: IXP-020 (5mm) and IXP-021 (2.5mm).

L-probes are calibrated to national standards in-house by IndexSAR.

L-probes can be used either in the SAM head, or against the side wall of the box phantom.



#### IFA-020 Fast Amplifier

A block diagram of the fast probe amplifier electronics is shown below.

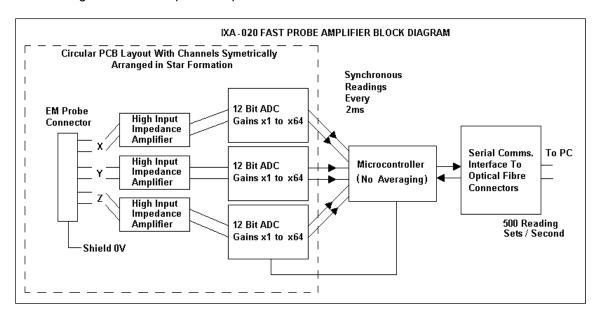


Figure 2 Schematic diagram of the fast amplifier

This amplifier has a time constant of approx. 50µs, which is much faster than the SAR probe response time. The overall system time constant is therefore that of the probe (<1ms) and a reading containing data for all three channels is returned to the PC every 2ms. The conversion period is approx. 1 µs at the start of each 2ms period. This enables the probe to follow pulse modulated signals of periods >>2ms. The PC software applies the linearisation procedure separately to each reading, so no linearisation corrections for the averaging of modulated signals are needed in this case.

The fast amplifier sampling rate can be adjusted via the SARA-C user interface from 1.7ms to 2.3ms. When not measuring CW signals, it is important to ensure that this probe reading rate and the modulated signal's pulse repetition rate are not unintentionally synchronised since this can lead to aliasing and a gross reduction in accuracy. For GSM signals, the default amplifier sampling rate of 2ms is entirely satisfactory, whereas changing it to 2.3ms (almost exactly half the GSM frame rate) could mean GSM bursts are always missed.

When aggregating 2ms samples to reduce the stochastic noise, it is equally important to match the number of samples with the longer-term timing structure of the modulation scheme. Taking GSM as an example again, since 120ms is the precise length of a GSM traffic channel multiframe, best practice would dictate that aggregated samples should cover exact multiples of this timescale. In this case, setting the number of samples to be aggregated to 120 (2 multiframes), or 240 samples (4 multiframes) should be ideal. Other signalling protocols would require changing these numbers as appropriate.



#### **Phantoms**

The Flat phantom used is a rectangular Perspex Box IndexSAR item IXB-2HF, dimensions 240  $\times$  190  $\times$  195mm (w x d x h). The base and one side wall are made of FR4 material which has specific dielectric properties and a tightly-controlled thickness. The base is used in tandem with straight probes, measuring either a DUT or a validation dipole, while the side wall is for performing validations with the L-probe. It is also feasible to perform measurements on bodyworn devices with the L-probe against the side window, but only if the L-probe is suitably calibrated (ie if the measurement standard demands body and head fluids have the same dielectric properties).

The Specific Anthropomorphic Mannequin (SAM) Upright Phantom is fabricated using moulds generated from the CAD files as specified by CENELEC EN 62209-1: 2006.

#### 2.1.3 SAR Measurement Procedure

Detailed measurement procedures for SARA-C are set out in a separate IndexSAR technical document ("SARA-C Operational Procedures"

A test set and dipole antenna control the handset via an air link and a low-mass phone holder can position the phone at either ear. Graduated scales are provided to set the phone in the 15 degree position. The upright phantom head holds approx. 7 litres of simulant liquid. The phantom is filled and emptied through the 110mm diameter penetration hole in the neck.

An area scan is performed inside the head at a fixed distance of 5mm from the curved surface on the source side. An algorithm presents the user with the location of any local hotspots and allows one to be selected for a follow-up 3D scan, looking at how the signal absorption varies with depth. A comparison between the start and end readings at a fixed distance from the DUT also enables the power drift during measurement to be assessed.

#### SARA-C Interpolation and Extrapolation schemes

SARA-C software contains support for both 2D cubic B-spline interpolation as well as 3D cubic B-spline interpolation. In addition, for extrapolation purposes, a proprietary curve-fitting routine is implemented as a weighted average of 3 different polynomial fits. The polynomial fitting procedures have been extensively tested by comparing the fitting coefficients generated by the SARA-C procedures with those obtained using the polynomial fit functions of Microsoft Excel when applied to the same test input data.

#### Interpolation of 2D area scan

The 2D cubic B-spline interpolation is used after the initial area scan at fixed distance from the phantom shell wall. The initial scan data are collected with approx. 115mm spatial resolution and spline interpolation is used to find the location of the local maximum to within a 1mm resolution for positioning the subsequent 3D scanning.

#### Extrapolation of 3D scan

For the 3D scan, data are collected on a spatially regular, but conformal, 3D grid having (by default) 6.4 mm steps in the lateral dimensions and 3.5 mm steps in the depth direction (away from the source). SARA-C enables full control over the selection of alternative step sizes in all directions.



**Product Service** 

The overall accuracy of the 1g and 10g SAR volume average depends largely on the accuracy with which the probe can be re-positioned in the head. Although the digitised shape of the head is available to the SARA-C software, a better positioning solution is to use strain gauges attached to the L-probe to feel for the actual surface and to base all movements relative to this positive detection. An even more precise, but time-consuming, method is to place the probe tip in positive contact against the phantom wall, then step backwards 0.01mm at a time while monitoring the recorded SAR reading. At the exact moment that the probe detaches from contact, the SAR reading will suddenly fall.

After the data collection, the data are extrapolated up to the shell wall in the depth direction to assign values to points in the 3D array which cannot be measured in practice because of the finite size of the sensor tip. For automated measurements inside the head, the distance of the closest plane from the wall cannot be less than 2.7mm (for 5mm probes) and 1.39mm (for 2.5mm probes), this being the distance of the probe sensors behind the front edge of the probe tip.

#### Interpolation of 3D scan and volume averaging

The procedure used in SARA-C for defining the volumes used in SAR averaging follow the method of adapting the surface of the 'cube' to conform with the curved inner surface of the phantom (see Appendix C.2.2.1 in EN 62209-1: 2006). This is called, here, the conformal scheme.

For each row of data in the depth direction, the data are extrapolated to the phantom wall, and interpolated to less than 1mm spacing and average values are calculated from the phantom surface for the row of data over distances corresponding to the requisite depth for 10g and 1g cubes. This results in two 2D arrays of data, one for 1g and the other for 10g masses, which are then cubic B-spline interpolated to sub mm lateral resolution. A search routine then moves an averaging square around through the 2D array and records the maximum value of the corresponding 1g and 10g volume averages.

The default step size is 3.5mm, but this is under user-control. The compromise is with time of scan, so it is not practical to make it much smaller or scan times become long and power-drop influences become larger.

The robot positioning system specification for the repeatability of the positioning (dss in EN 62209-1: 2006) is +/- 0.04mm.



### 2.2 STP9040 - CASE 300-00233 - TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-14:07:01	DUT BATTERY MODEL/NO:	300-00634
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-53.90mm
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-16.90mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	26.111
TEST FREQUENCY:	430MHz	SAR 1g:	0.671 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.634 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.629 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-0.700 %

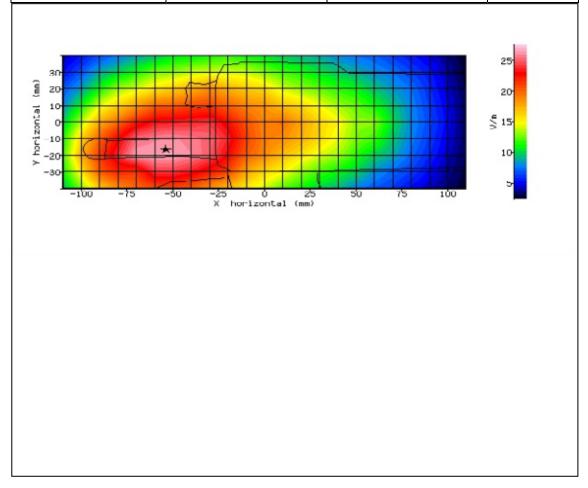


Figure 3: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



### 2.3 STP9040 - CASE 300-00439 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-14:22:13	DUT BATTERY MODEL/NO:	300-00634
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-33.80mm
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-4.80mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	21.725
TEST FREQUENCY:	430MHz	SAR 1g:	0.445 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.415 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.410 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-1.100 %

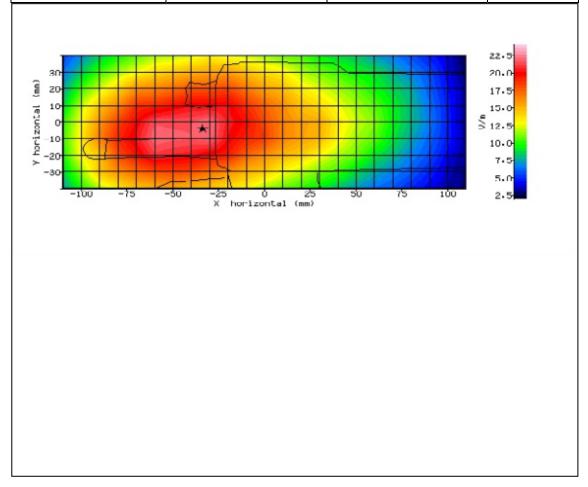


Figure 4: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



### 2.4 STP9040 - CASE 300-00440 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-14:39:51	DUT BATTERY MODEL/NO:	300-00634
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-31.70mm
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-10.60mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	27.847
TEST FREQUENCY:	430MHz	SAR 1g:	0.752 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.690 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.719 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	4.300 %

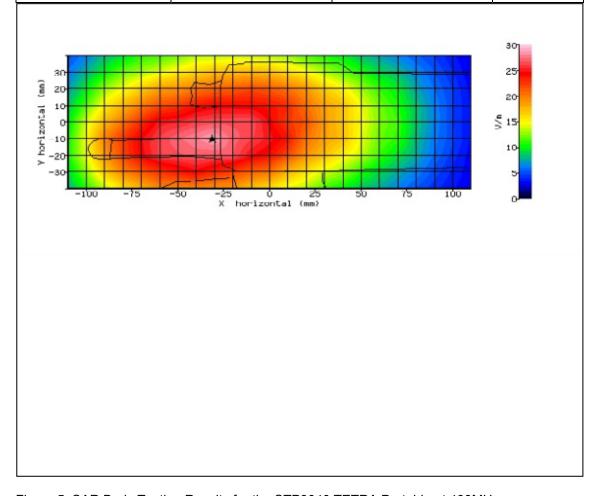


Figure 5: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.

.



### 2.5 STP9040 - BELT CLIP - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-14:55:23	DUT BATTERY MODEL/NO:	300-00634
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-29.90mm
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-12.30mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	27.111
TEST FREQUENCY:	430MHz	SAR 1g:	0.707 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.696 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.678 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-2.700 %

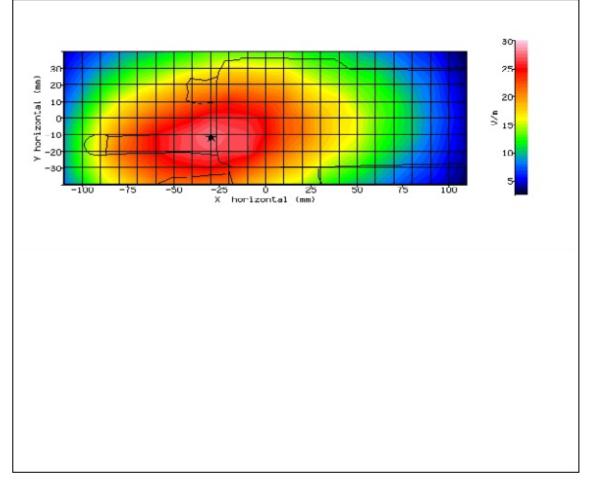


Figure 6: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



### 2.6 STP9040 - RSM - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-15:13:36	DUT BATTERY MODEL/NO:	300-00635
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-7.30mm
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-7.20mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	17.940
TEST FREQUENCY:	430MHz	SAR 1g:	0.306 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.312 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.315 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	0.900 %

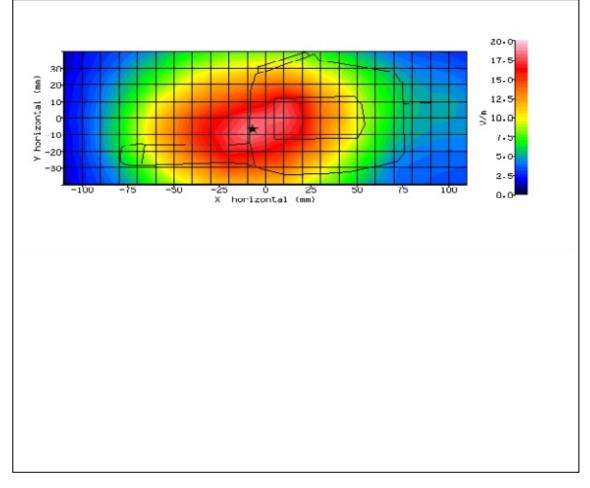


Figure 7: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



### 2.7 STP9040 - CASE 300-00440 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-15:30:16	DUT BATTERY MODEL/NO:	300-00635
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-47.50mm
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-16.20mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	24.264
TEST FREQUENCY:	430MHz	SAR 1g:	0.553 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.552 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.510 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-7.700 %

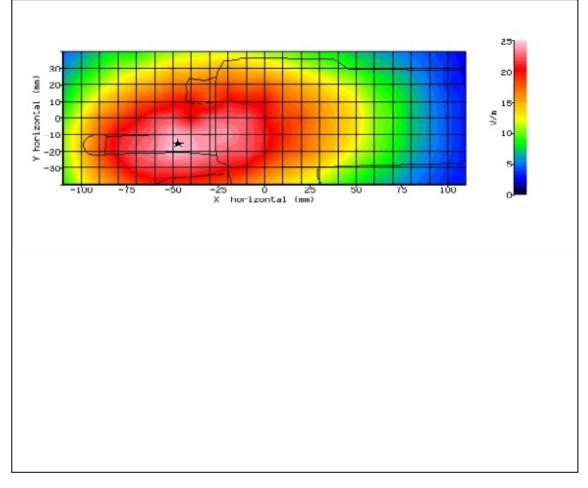


Figure 8: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



### 2.8 STP9040 - FRONT OF FACE - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-12:30:23	DUT BATTERY MODEL/NO:	300-00635
AMBIENT TEMPERATURE:	23.10°C	LIQUID SIMULANT:	450Head
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	42.01
RELATIVE HUMIDITY:	43.90%	CONDUCTIVITY:	0.833
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-31.20mm
DUT POSITION:	25mm-Front Facing	MAX SAR Y-AXIS LOCATION:	6.60mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	26.339
TEST FREQUENCY:	430MHz	SAR 1g:	0.614 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.636 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.582 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-8.500 %

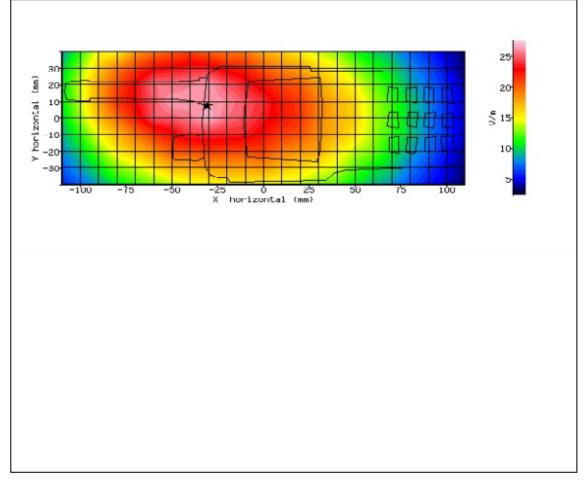


Figure 9: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



## 2.9 STP9040 - RSM FRONT OF FACE - SAR TEST RESULTS AND COURSE AREA SCANS – 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB
DATE / TIME:	02/07/2014-12:47:17	DUT BATTERY MODEL/NO:	300-00635
AMBIENT TEMPERATURE:	23.10°C	LIQUID SIMULANT:	450Head
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	42.01
RELATIVE HUMIDITY:	43.90%	CONDUCTIVITY:	0.833
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-18.90mm
DUT POSITION:	25mm-Front Facing	MAX SAR Y-AXIS LOCATION:	14.80mm
ANTENNA CONFIGURATION:	300-00662	MAX E FIELD:	11.118
TEST FREQUENCY:	430MHz	SAR 1g:	0.117 W/kg
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A
MODN. DUTY CYCLE:	25%	SAR START:	0.112 W/kg
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.109 W/kg
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-2.700 %

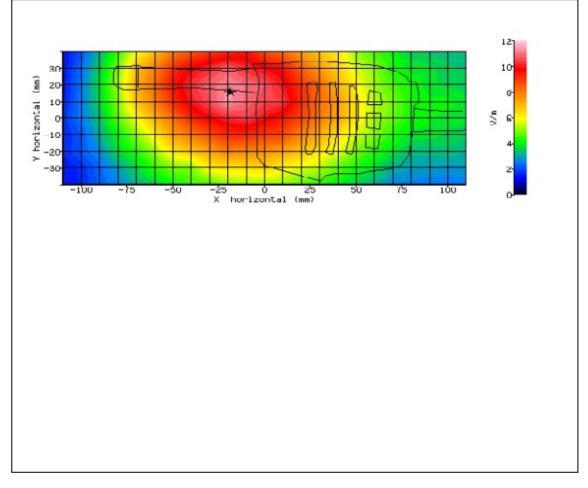


Figure 10: SAR Body Testing Results for the STP9040 TETRA Portable at 430MHz.



# 2.10 STP9040 - CASE 300-00233 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB		
DATE / TIME:	02/07/2014-15:57:41	DUT BATTERY MODEL/NO:	300-00634		
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body		
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84		
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903		
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C		
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-46.30mm		
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-11.60mm		
ANTENNA CONFIGURATION:	300-00663	MAX E FIELD:	27.531		
TEST FREQUENCY:	450MHz	SAR 1g:	0.729 W/kg		
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A		
MODN. DUTY CYCLE:	25%	SAR START:	0.744 W/kg		
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.692 W/kg		
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-6.900 %		

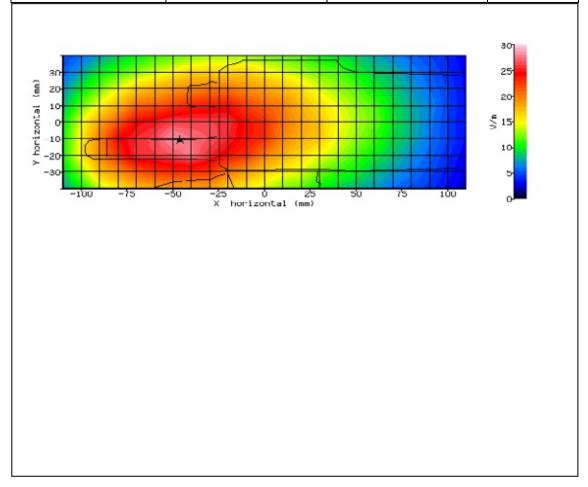


Figure 11: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.11 STP9040 - CASE 300-00439 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB			
DATE / TIME:	02/07/2014-16:14:46	DUT BATTERY MODEL/NO:	300-00634			
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body			
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84			
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903			
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C			
PHANTOM ROTATION:	N/A	-30.30mm				
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-6.50mm			
ANTENNA CONFIGURATION:	300-00663	MAX E FIELD:	21.871			
TEST FREQUENCY:	450MHz	SAR 1g:	0.445 W/kg			
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A			
MODN. DUTY CYCLE:	25%	SAR START:	0.422 W/kg			
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.424 W/kg			
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	0.300 %			

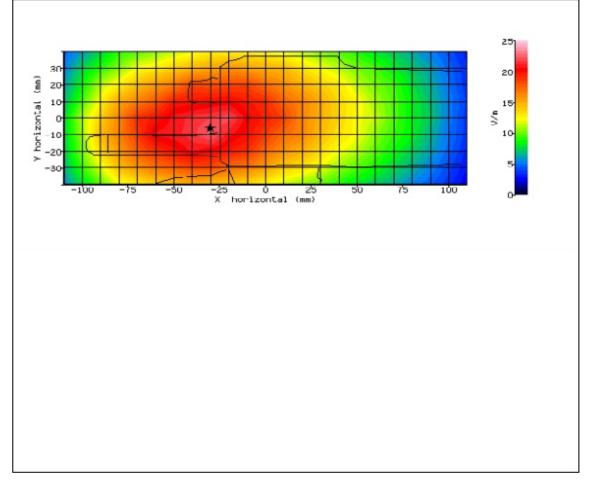


Figure 12: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.12 STP9040 - CASE 300-00440 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB			
DATE / TIME:	02/07/2014-16:34:25	DUT BATTERY MODEL/NO:	300-00634			
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body			
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84			
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903			
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C			
PHANTOM ROTATION:	ATION: N/A MAX SAR X-AXIS LOCATION					
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-4.90mm			
ANTENNA CONFIGURATION:	300-00663	MAX E FIELD:	27.748			
TEST FREQUENCY:	450MHz	SAR 1g:	0.753 W/kg			
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A			
MODN. DUTY CYCLE:	25%	SAR START:	0.726 W/kg			
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.687 W/kg			
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-5.400 %			

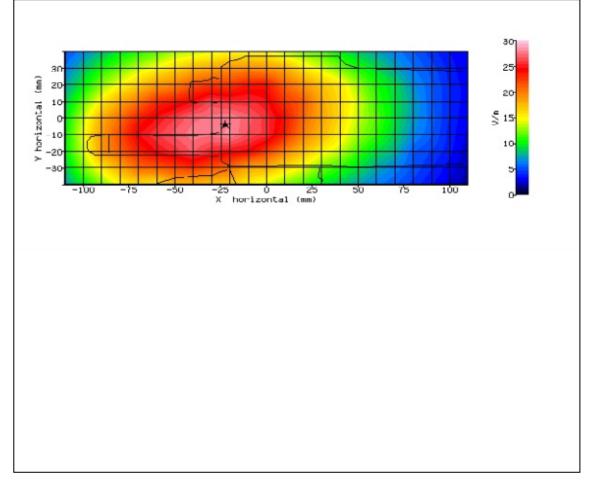


Figure 13: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.13 STP9040 - BELT CLIP - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB			
DATE / TIME:	02/07/2014-16:50:03	DUT BATTERY MODEL/NO:	300-00634			
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body			
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84			
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903			
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C			
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-15.20mm			
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-9.20mm			
ANTENNA CONFIGURATION:	300-00663	MAX E FIELD:	25.140			
TEST FREQUENCY:	450MHz	SAR 1g:	0.626 W/kg			
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A			
MODN. DUTY CYCLE:	25%	SAR START:	0.593 W/kg			
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.556 W/kg			
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-6.200 %			

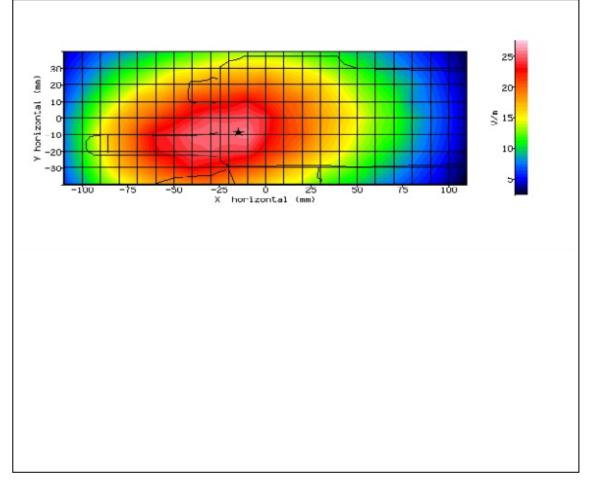


Figure 14: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.14 STP9040 - RSM - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB			
DATE / TIME:	02/07/2014-17:15:23	DUT BATTERY MODEL/NO:	300-00634			
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body			
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84			
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903			
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C			
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	4.30mm			
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-6.10mm			
ANTENNA CONFIGURATION:	300-00663	MAX E FIELD:	14.989			
TEST FREQUENCY:	450MHz	SAR 1g:	0.225 W/kg			
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A			
MODN. DUTY CYCLE:	25%	SAR START:	0.211 W/kg			
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.229 W/kg			
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	8.700 %			

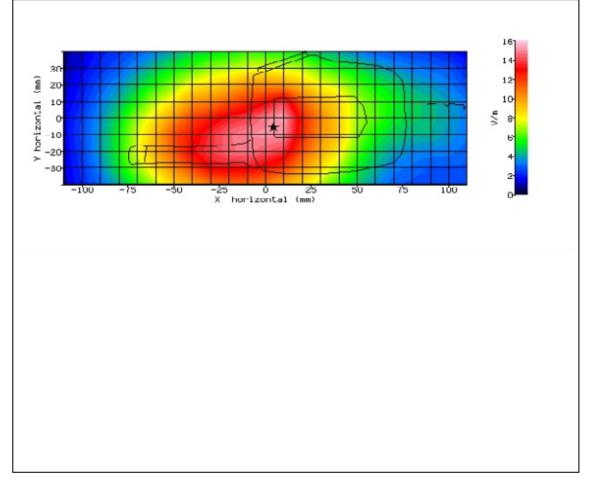


Figure 15: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.15 STP9040 - CASE 300-00440 - SAR TEST RESULTS AND COURSE AREA SCANS - 2D

	1	1			
SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB		
DATE / TIME:	02/07/2014-17:32:12	DUT BATTERY MODEL/NO:	300-00635		
AMBIENT TEMPERATURE:	22.70°C	LIQUID SIMULANT:	450Body		
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	55.84		
RELATIVE HUMIDITY:	49.80%	CONDUCTIVITY:	0.903		
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C		
PHANTOM ROTATION:	N/A	-42.10mm			
DUT POSITION:	0mm-Rear Facing	MAX SAR Y-AXIS LOCATION:	-9.00mm		
ANTENNA CONFIGURATION:	300-00663	MAX E FIELD:	22.884		
TEST FREQUENCY:	450MHz	SAR 1g:	0.497 W/kg		
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A		
MODN. DUTY CYCLE:	25%	SAR START:	0.464 W/kg		
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.459 W/kg		
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-1.000 %		

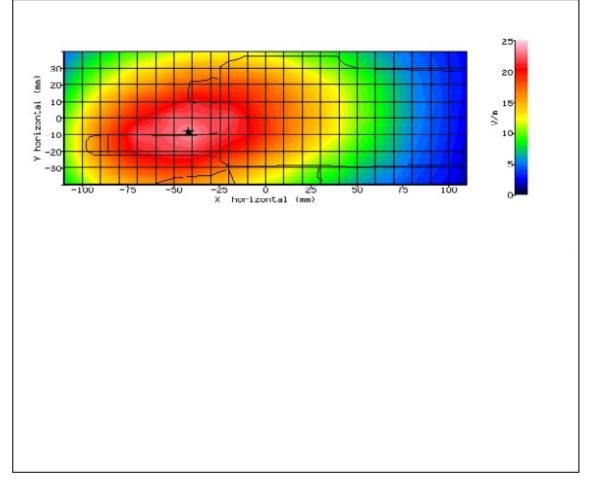


Figure 16: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.16 STP9040 - FRONT OF FACE SAR TEST RESULTS AND COURSE AREA SCANS - 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB			
DATE / TIME:	02/07/2014-13:28:55	DUT BATTERY MODEL/NO:	300-00635			
AMBIENT TEMPERATURE:	23.10°C	LIQUID SIMULANT:	450Head			
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	42.01			
RELATIVE HUMIDITY:	43.90%	CONDUCTIVITY:	0.833			
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C			
PHANTOM ROTATION:	OTATION: N/A MAX SAR X-AXIS LOCATION					
DUT POSITION:	25mm-Front Facing	MAX SAR Y-AXIS LOCATION:	5.10mm			
ANTENNA CONFIGURATION:	300-0063	MAX E FIELD:	24.236			
TEST FREQUENCY:	450MHz	SAR 1g:	0.539 W/kg			
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A			
MODN. DUTY CYCLE:	25%	SAR START:	0.516 W/kg			
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.484 W/kg			
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-6.200 %			

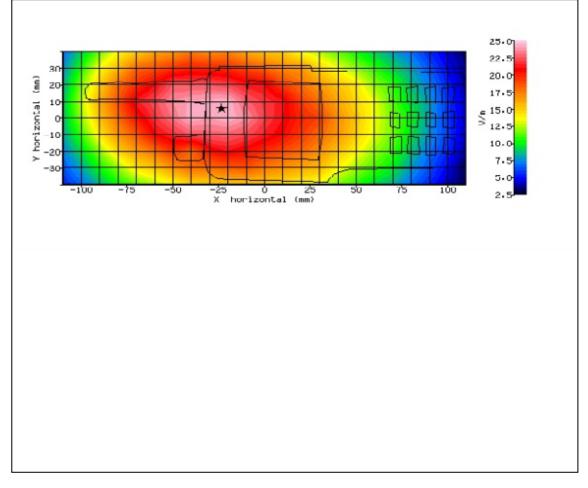


Figure 17: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# 2.17 STP9040 - RSM FRONT OF FACE - SAR TEST RESULTS AND COURSE AREA SCANS – 2D

SYSTEM / SOFTWARE:	SARA-C / v6.08.11	INPUT POWER DRIFT:	0 dB			
DATE / TIME:	E: 02/07/2014-13:10:36 DUT BATTERY MODEL/					
AMBIENT TEMPERATURE:	23.10°C	LIQUID SIMULANT:	450Head			
DEVICE UNDER TEST:	STP9040	RELATIVE PERMITTIVITY:	42.01			
RELATIVE HUMIDITY:	43.90%	CONDUCTIVITY:	0.833			
PHANTOM S/NO:	IXB-2HF	LIQUID TEMPERATURE:	22.90°C			
PHANTOM ROTATION:	N/A	MAX SAR X-AXIS LOCATION:	-12.50mm			
DUT POSITION:	25mm-Front Facing	MAX SAR Y-AXIS LOCATION:	11.00mm			
ANTENNA CONFIGURATION:	300-0063	MAX E FIELD:	8.829			
TEST FREQUENCY:	450MHz	SAR 1g:	0.069 W/kg			
TYPE OF MODULATION:	DQPSK (TETRA)	SAR 10g:	N/A			
MODN. DUTY CYCLE:	25%	SAR START:	0.067 W/kg			
INPUT POWER LEVEL:	32.5dBm	SAR END:	0.066 W/kg			
PROBE BATTERY LAST CHANGED:	02/07/2014	SAR DRIFT DURING SCAN:	-1.600 %			

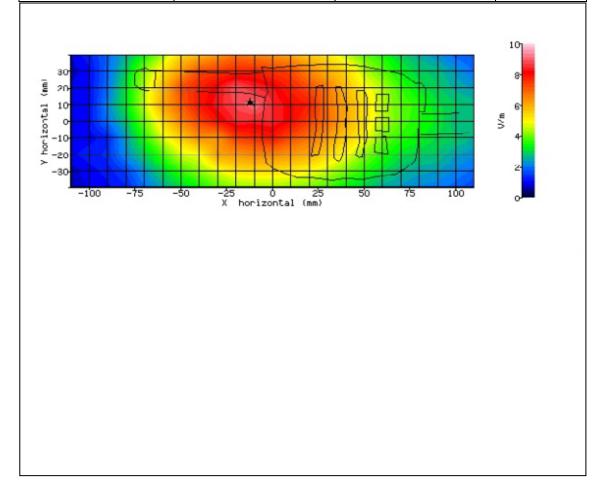


Figure 18: SAR Body Testing Results for the STP9040 TETRA Portable at 450MHz.



# **SECTION 3**

# **TEST EQUIPMENT USED**



# 3.1 TEST EQUIPMENT USED

The following test equipment was used at TÜV SÜD Product Service:

Instrument Description	Manufacturer	Model Type	TE Number	Cal Period (months)	Calibration Due Date		
Power Sensor	Rohde & Schwarz	NRV-Z1	3563	12	20-May-15		
Signal Generator	Hewlett Packard	ESG4000A	38	12	22-May-15		
Antenna (Dipole, 450MHz)	Sartest	D450	67	-	TU		
Attenuator (20dB, 20W)	Narda	766F-20	483	12	04-Jun-15		
410x270x200mm Side Bench Phantom	IndexSar Ltd	IXB-020	1567	-	TU		
Bi-directional Coupler	IndexSar Ltd	7401 (VDC0830- 20)	2414	-	TU		
Validation Amplifier (10MHz - 2.5GHz)	IndexSar Ltd	VBM2500-3	2415	-	TU		
Power Sensor	Rohde & Schwarz	NRV- Z5	178	12	20-May-15		
Dual Channel Power Meter	Rohde & Schwarz	NRVD	3259	12	20-May-15		
Part of SARAC System	IndexSar Ltd	Cartesian Leg Extension	4078	-	TU		
Cartesian 4-axis Robot	IndexSar Ltd	SARAC	4079	-	TU		
Part of SARAC System	IndexSar Ltd	White Benchtop	4080	-	TU		
Part of SARAC System	IndexSar Ltd	Wooden Bench	4081	-	TU		
Part of SARAC System	IndexSar Ltd	5th & 6th Axis Supplementary Controller	4082	-	TU		
Part of SARAC System	IndexSar Ltd	Robot Controller	4267	-	TU		
Digital thermo Hygrometer	Radio Spares	1260	3068	12	10-Sep-16		
Immersible SAR Probe	IndexSar Ltd	IPX-050	4312	24	07-Mar-15		
450 MHz Head Fluid	TÜV Product Service	Batch 3	N/A	1	01-Aug-14		
450 MHz Body Fluid	TÜV Product Service	Batch 7	N/A	1	01-Aug-14		

TU - Traceability Unscheduled



# 3.2 TEST SOFTWARE

The following software was used to control the TÜV SÜD Product Service SARAC System.

Instrument	Version Number	Date			
SARA-C system	v.6.08.11 06 June 2013				
IFA-10 Probe amplifier	Version 2	-			



## 3.3 DIELECTRIC PROPERTIES OF SIMULANT LIQUIDS

The fluid properties of the simulant fluids used during routine SAR evaluation meet the dielectric properties required by KDB 865664 D01

# OET 65(c) Recipes

Ingredients	Frequency (MHz)												
(% by weight)	45	50	83	35	9	15	19	00	2450				
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body			
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2			
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04			
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0			
HEC	0.98	0.52	1.0	1.0 1.0		1.21	0.0	1.0	0.0	0.0			
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0			
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0			
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7			
Dielectric Constant	43.42 58.0		42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5			
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78			

# IEEE 1528 Recipes

Frequency (MHz)	300	4	50	835		900			1450 1800		1900 1950 20		1950 2000 2100		00	2450		3000			
Recipe#	1	1	3	1	1	2	3	1	1	2	2	3	1	2	4	1	1	2	2	3	2
								Ing	redient	s (% by	weight							•	•		
1, 2-Pro- panediol						64.81															
Bactericide	0.19	0.19	0.50	0.10	0.10		0.50													0.50	
Diacetin			48.90				49.20													49.45	
DGBE								45.41	47.00	13.84	44.92		44.94	13.84	45.00	50.00	50.00	7.99	7.99		7.99
HEC	0.98	0.96		1.00	1.00																
NaCl	5.95	3.95	1.70	1.45	1.48	0.79	1.10	0.67	0.36	0.35	0.18	0.64	0.18	0.35				0.16	0.16		0.16
Sucrose	55.32	56.32		57.00	56.50																
Triton X-100										30.45				30.45				19.97	19.97		19.97
Water	37.56	38.56	48.90	40.45	40.92	34.40	49.20	53.80	52.64	55.36	54.90	49.43	54.90	55.36	55.00	50.00	50.00	71.88	71.88	49.75	71.88
								Measu	ired die	lectric p	paramet	ers									
ε',	46.00	43.40	44.30	41.60	41.20	41.80	42.70	40.9	39.3	41.00	40.40	39.20	39.90	41.00	40.10	37.00	36.80	41.10	40.30	39.20	37.90
σ (S/m)	0.86	0.85	0.90	0.90	0.98	0.97	0.99	1.21	1.39	1.38	1.40	1.40	1.42	1.38	1.41	1.40	1.51	1.55	1.88	1.82	2.46
Temp (°C)	22	22	20	22	22	22	20	22	22	21	22	20	21	21	20	22	22	20	20	20	20
							Ta	arget die	electric	parame	eters (Ta	able 2)									
ε̈́r	45.30	43	.50	41.5		41.50		40.50		40.00				39.	80	39	9.20	38.50			
σ (S/m)	0.87	0.	87	0.9		0.97		1.20		1.40					1.4	19	1	.80	2.40		

NOTE – Multiple columns for any single frequency are optional recipe #, reference: 1 (Kanda et al. [B185]), 2 (Vigneras [B143]), 3 (Peyman and Gabriel [B119]), 4 (Fukunaga et al [B50])



The dielectric properties of the tissue simulant liquids used for the SAR testing at TÜV SÜD Product Service are as follows:-

Fluid Type and Frequency	Relative Permittivity εR (ε') Target	Relative Permittivity εR (ε') Measured	Conductivity σ Target	Conductivity σ Measured
450 MHz Head	43.5	43.22	0.87	0.863
450 MHz Body	56.7	55.84	0.94	0.903

#### 3.4 TEST CONDITIONS

# 3.4.1 Test Laboratory Conditions

Ambient temperature: Within +15°C to +35°C.

The actual temperature during the testing ranged from 22.7  $^{\circ}\text{C}$  to 23.1  $^{\circ}\text{C}$  .

The actual humidity during the testing ranged from 43.9% to 49.8% RH.

#### 3.4.2 Test Fluid Temperature Range

Frequency	Body / Head Fluid	Min Temperature °C	Max Temperature °C	
450 MHz	Head	23.0	23.0	
450 MHz	Body	22.9	22.9	

#### 3.4.3 SAR Drift

The SAR Drift was within acceptable limits during scans. The maximum SAR Drift, drift due to the handset electronics, was recorded as 8.700% (0.920 dB) for all of the testing. The measurement uncertainty budget for this assessment includes the maximum SAR Drift figures for Head and/or Body as applicable.



# 3.5 MEASUREMENT UNCERTAINTY

Body SAR Measurements.

Source of Uncertainty	Description	Tolerance / Uncertainty ± %	Probability distribution	Div	c <sub>i</sub> (1g)	Standard Uncertainty ± % (1g)	V <sub>i</sub> or V <sub>eff</sub>
Measurement System							
Probe calibration	7.2.1	8.73	N	1	1	8.73	8
Isotropy	7.2.1.2	3.18	R	1.73	1	1.84	8
Boundary effect	7.2.1.5	0.49	R	1.73	1	0.28	8
Linearity	7.2.1.3	1.00	R	1.73	1	0.58	8
Detection limits	7.2.1.4	0.00	R	1.73	1	0.00	8
Readout electronics	7.2.1.6	0.30	N	1	1	0.30	8
Response time	7.2.1.7	0.00	R	1.73	1	0.00	∞
Integration time (equiv.)	7.2.1.8	1.38	R	1.73	1	0.80	8
RF ambient conditions	7.2.3.6	3.00	R	1.73	1	1.73	∞
Probe positioner mech. restrictions	7.2.2.1	0.60	R	1.73	1	0.35	8
Probe positioning with respect to phantom shell	7.2.2.3	2.00	R	1.73	1	1.15	∞
Post-processing	7.2.4	7.00	R	1.73	1	4.04	8
Test sample related							
Test sample positioning	7.2.2.4	1.50	R	1.73	1	0.87	8
Device holder uncertainty	7.2.2.4.2	1.73	R	1.73	1	1.00	8
Drift of output power	7.2.3.4	8.7	R	1.73	1	5.02	∞
Phantom and set-up							
Phantom uncertainty (shape and thickness tolerances)	7.2.2.2	2.01	R	1.73	1	1.16	∞
Liquid conductivity (target)	7.2.3.3	5.00	R	1.73	0.64	1.85	∞
Liquid conductivity (meas.)	7.2.3.3	5.00	N	1	0.64	3.20	∞
Liquid permittivity (target)	7.2.3.4	5.00	R	1.73	0.6	1.73	∞
Liquid permittivity (meas.)	7.2.3.4	3.00	N	1	0.6	1.80	8
Combined standard uncertainty			RSS			11.64	
Expanded uncertainty (95% confidence interval	ıl)		K=2			23.27	



# **SECTION 5**

ACCREDITATION, DISCLAIMERS AND COPYRIGHT



## 4.1 ACCREDITATION, DISCLAIMERS AND COPYRIGHT



This report relates only to the actual item/items tested.

Our UKAS Accreditation does not cover opinions and interpretations and any expressed are outside the scope of our UKAS Accreditation.

Results of tests not covered by our UKAS Accreditation Schedule are marked NUA (Not UKAS Accredited).

This report must not be reproduced, except in its entirety, without the written permission of TÜV SÜD Product Service Limited

© 2014 TÜV SÜD Product Service Limited



# **ANNEX A**

# PROBE CALIBRATION REPORT






#### **IMMERSIBLE SAR PROBE**

#### **CALIBRATION REPORT**

Part Number: IXP - 050

S/N 0231

April 2013

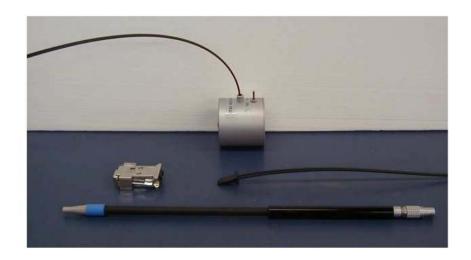

Indexsar Limited
Oakfield House
Cudworth Lane
Newdigate
Surrey RH5 5BG
Tel: +44 (0) 1306 632 870

Fax: +44 (0) 1306 632 870 Fax: +44 (0) 1306 631 834 e-mail: <u>enquiries@indexsar.com</u>

Reproduction of this report is authorized by Indexsar Ltd provided the report is reproduced in its entirety

Page 1 of 23





Indexsar Limited Oakfield House Cudworth Lane Newdigate Surrey RH5 5BG Tel: +44 (0) 1306 632 870

Fax: +44 (0) 1306 632 870 Fax: +44 (0) 1306 631 834 e-mail: <u>enquiries@indexsar.com</u>

### Calibration Certificate 1304/0231 Date of Issue: 25 April 2013 Immersible SAR Probe

Туре:	IXP-050	
Manufacturer:	IndexSAR, UK	
Serial Number:	0231	
Place of Calibration:	IndexSAR, UK	
Date of Receipt of Probe:	N/A	
Calibration Dates:	14 <sup>th</sup> January – 7 <sup>th</sup> March	12013
Customer:	TUV Sud	
calibrated for conformity to 2, and FCC OET65 standard	res that the IXP-050 Probe named the current versions of IEEE 152 s using the methods described i	8, IEC 62209-1, IEC 62209- n this calibration
calibrated for conformity to 2, and FCC OET65 standard document. Where applicabl traceable to the UK's Nation	the current versions of IEEE 152 s using the methods described i le, the standards used in the cali nal Physical Laboratory.	8, IEC 62209-1, IEC 62209- n this calibration
calibrated for conformity to 2, and FCC OET65 standard document. Where applicable	the current versions of IEEE 152 s using the methods described i le, the standards used in the cali	28, IEC 62209-1, IEC 62209- n this calibration bration process are
calibrated for conformity to 2, and FCC OET65 standard document. Where applicabl traceable to the UK's Nation	the current versions of IEEE 152 s using the methods described i le, the standards used in the cali nal Physical Laboratory.	28, IEC 62209-1, IEC 62209- n this calibration bration process are

Page 2 of 23



#### INTRODUCTION

Straight probes can work on either SARA-C (to measure SAR values in flat phantoms containing Body tissue simulant fluid) or on SARA2 (where they can measure either in a flat phantom with Body fluid, or in a SAM phantom containing Head fluid).

This Report presents measured calibration data for a particular Indexsar SAR probe (S/N 0231) for use on SARA-C only. The calibration factors do not apply to, and will not give correct readings on, the IndexSAR SARA2 system.

Indexsar probes are characterised using procedures that, where applicable, follow the recommendations of IEC 62209-1 [Ref 1], IEEE 1528 [Ref 2], IEC 62209-2 [Ref 3] and FCC OET65 [Ref 4] standards. The procedures incorporate techniques for probe linearisation, isotropy assessment and determination of liquid factors (conversion factors). Calibrations are determined by comparing probe readings with analytical computations in canonical test geometries (waveguides) using normalised power inputs.

Each step of the calibration procedure and the equipment used is described in the sections below.

#### CALIBRATION PROCEDURE

#### 1. Objectives

The calibration process comprises the following stages

- Determination of the channel sensitivity factors which optimise the probe's overall axial isotropy in 900MHz brain fluid
- 2) Measure the incidental spherical isotropy using these derived channel sensitivity factors.
- 3) Since isotropy and channel sensitivity factors are frequency independent, these channel sensitivity factors can be applied to model the exponential decay of SAR in a waveguide fluid cell at each frequency of interest, and hence derive the liquid conversion factors at that frequency.

#### 2. Probe output

The probe channel output signals are linearised in the manner set out in Refs [1] - [4]. The following equation is utilized for each channel:

$$U_{lin} = U_{o/p} + U_{o/p}^{2} / DCP$$
 (1)

where  $U_{lin}$  is the linearised signal,  $U_{o/p}$  is the raw output signal in mV and DCP is the diode compression potential, also in mV.

Page 3 of 23



DCP is determined from fitting equation (1) to measurements of  $U_{lin}$  versus source feed power over the full dynamic range of the probe. The DCP is a characteristic of the Schottky diodes used as the sensors. For the IXP-020 probes with CW signals the DCP values are typically 100mV.

For this value of DCP, the typical linearity response of IXP-050 probes to CW and to GSM modulation is shown in Figure 7, along with departures of this same dataset from linearity.

In turn, measurements of E-field are determined using the following equation:

$$E_{liq}^{2} (V/m) = U_{linx} * Air Factor_{x} * Liq Factor_{x} + U_{liny} * Air Factor_{y} * Liq Factor_{y} + U_{linz} * Air Factor_{z} * Liq Factor_{z}$$
 (3)

Here, "Air Factor" represents each channel's sensitivity, while "Liq Factor" represents the enhancement in signal level when the probe is immersed in tissue-simulant liquids at each frequency of interest.

#### 3. Selecting channel sensitivity factors to optimise isotropic response

Within SARA-C, an L-probe's predominant mode of operation is with the tip pointing directly towards the source of radiation. Consequently, optimising the probe's response to boresight signals ("axial isotropy") is far more important than optimising its spherical isotropy (where the direction, as well as the polarisation angle, of the incoming radiation must be taken into account).

The setup for measuring the probe's axial isotropy is shown in **Error! Reference source not found.**. Since isotropy is frequency-independent, measurements are normally made at a frequency of 900MHz as lower frequencies are more tolerant of positional inaccuracies.

A 900MHz waveguide containing head-fluid simulant is selected. Like all waveguides used during probe calibration, this particular waveguide contains two distinct sections: an air-filled launcher section, and a liquid cell section, separated by a dielectric matching window designed to minimise reflections at the air-liquid interface.

The waveguide stands in an upright position and the liquid cell section is filled with 900MHz brain fluid to within 10 mm of the open end. The depth of liquid ensures there is negligible radiation from the waveguide open top and that the probe calibration is not influenced by reflections from nearby objects.

During the measurement, a TE<sub>01</sub> mode is launched into the waveguide by means of an N-type-to-waveguide adapter. The probe is then lowered vertically into the liquid until the tip is exactly 10mm above the centre of the dielectric window. This particular separation ensures that the probe is operating in a part of the waveguide where boundary corrections are not necessary.

Care must also be taken that the probe tip is centred while rotating.

Page 4 of 23



The exact power applied to the input of the waveguide during this stage of the probe calibration is immaterial since only relative values are of interest while the probe rotates. However, the power must be sufficiently above the noise floor and free from drift.

The dedicated Indexsar calibration software rotates the probe in 10 degree steps about its axis, and at each position, an Indexsar 'Fast' amplifier samples the probe channels 500 times per second for 0.4 s. The raw  $U_{\text{o/p}}$  data from each sample are packed into 10 bytes and transmitted back to the PC controller via an optical cable.  $U_{\text{linx}}$ ,  $U_{\text{liny}}$  and  $U_{\text{linz}}$  are derived from the raw  $U_{\text{o/p}}$  values and written to an Excel template.

Once data have been collected from a full probe rotation, the Air Factors are adjusted using a special Excel Solver routine to equalise the output from each channel and hence minimise the axial isotropy. This automated approach to optimisation removes the effect of human bias.

Figure 2 represents the output from each diode sensor as a function of probe rotation angle.

#### 4. Measurement of Spherical Isotropy

As mentioned earlier, in SARA-C a straight probe is always positioned so as to be end-on to the incoming signal source. The probe's axial isotropy response is therefore far more important than its spherical isotropy, which is included here for completeness only.

The setup for assessing the probe's spherical isotropy is shown in Figure 1.

A box phantom containing 900MHz head fluid is irradiated by a tuned dipole, mounted to the side of the phantom on the SARA2 robot's seventh axis. During calibration, the spherical response is generated by rotating the probe about its axis in 15 degree steps and changing the dipole polarisation in 10 degree steps.

The relative channel sensitivities are fixed by the earlier measurement of, and optimisation for, axial isotropy. The effect on spherical isotropy is shown in Figure 3.

#### Determination of Conversion ("Liquid") Factors at each frequency of interest

A lookup table of conversion factors for a probe allows a SAR value to be derived at the measured frequencies, and for either brain or body fluid-simulant.

The method by which the conversion factors are assessed is based on the comparison between measured and analytical rates of decay of SAR with height above a dielectric window. This way, not only can the conversion factors for that frequency/fluid combination be determined, but an allowance can also be made for the scale and range of boundary layer effects.

The theoretical relationship between the SAR at the cross-sectional centre of the lossy waveguide as a function of the longitudinal distance (z) from the

Page 5 of 23



dielectric separator is given by Equation 4:

$$SAR(z) = \frac{4(P_f - P_b)}{\rho ab \delta} e^{-2z/\delta}$$
(4)

Here, the density  $\rho$  is conventionally assumed to be 1000 kg/m³, ab is the cross-sectional area of the waveguide, and  $P_f$  and  $P_b$  are the forward and reflected power inside the lossless section of the waveguide, respectively. The penetration depth  $\delta$  (which is the reciprocal of the waveguide-mode attenuation coefficient) is a property of the lossy liquid and is given by Equation (5).

$$\delta = \left[ \operatorname{Re} \left\{ \sqrt{(\pi / a)^2 + j\omega \mu_o (\sigma + j\omega \varepsilon_o \varepsilon_r)} \right\} \right]^{-1}$$
 (5)

where  $\sigma$  is the conductivity of the tissue-simulant liquid in S/m,  $\varepsilon_r$  is its relative permittivity, and  $\omega$  is the radial frequency (rad/s). Values for  $\sigma$  and  $\varepsilon_r$  are obtained prior to each waveguide test using an Indexsar DiLine measurement kit, which uses the TEM method as recommended in [2].  $\sigma$  and  $\varepsilon_r$  are both temperature- and fluid-dependent, so are best measured using a sample of the tissue-simulant fluid immediately prior to the actual calibration.

Wherever possible, all DiLine and calibration measurements should be made in the open laboratory at  $22 \pm 2.0^{\circ}\text{C}$ ; if this is not possible, the values of  $\sigma$  and  $\varepsilon_r$  should reflect the actual temperature. Values employed for calibration are listed in the tables below.

By ensuring the liquid height in the waveguide is at least three penetration depths, reflections at the upper surface of the liquid are negligible. The power absorbed in the liquid is therefore determined solely from the waveguide forward and reflected power.

Different waveguides are used for 700MHz, 835/900MHz, 1450MHz, 1800/1900MHz, 2100/2450/2600MHz and 5200/5800MHz measurements. Table A.1 of [1] can be used for designing calibration waveguides with a return loss greater than 20 dB at the most important frequencies used for personal wireless communications, and better than 15dB for frequencies greater than 5GHz. Values for the penetration depth for these specific fixtures and tissue-simulating mixtures are also listed in Table A.1.

According to [1], this calibration technique provides excellent accuracy, with standard uncertainty of less than 3.6% depending on the frequency and medium. The calibration itself is reduced to power measurements traceable to a standard calibration procedure. The practical limitation to the frequency band of 800 to 5800 MHz because of the waveguide size is not severe in the context of compliance testing.

During calibration, the probe is lowered carefully until it is just touching the cross-sectional centre of the dielectric window. 200 samples are then taken and written to an Excel template file before moving the probe vertically

Page 6 of 23



upwards. This cycle is repeated 150 times. The vertical separation between readings is determined from practical considerations of the expected SAR decay rate, and range from 0.2mm steps at low frequency, through 0.1mm at 2450MHz, down to 0.05mm at 5GHz.

Once the data collection is complete, a Solver routine is run which optimises the measured-theoretical fit by varying the conversion factor, and the boundary correction size and range.

For calibrations at 450MHz, where waveguide calibrations become unfeasible, a full 3D SAR scan over a tuned dipole is performed, and the conversion factor adjusted to make the measured 1g and 10g volume-averaged SAR values agree with published targets.

#### CALIBRATION FACTORS MEASURED FOR PROBE S/N 0231

The probe was calibrated at 450, 835, 900, 1800, 2100, 2450 and 2600MHz in liquid samples representing brain and body liquid at these frequencies.

The calibration was for CW signals only, and the axis of the probe was parallel to the direction of propagation of the incident field i.e. end-on to the incident radiation. The axial isotropy of the probe was measured by rotating the probe about its axis in 10 degree steps through 360 degrees in this orientation.

The reference point for the calibration is in the centre of the probe's cross-section at a distance of 2.7 mm from the probe tip in the direction of the probe amplifier. A value of 2.7 mm should be used for the tip to sensor offset distance in the software. The distance of 2.7mm for assembled probes has been confirmed by taking X-ray images of the probe tips (see Figure 8).

It is important that the diode compression point and air factors used in the software are the same as those quoted in the results tables, as these are used to convert the diode output voltages to a SAR value.

# CALIBRATION EQUIPMENT

The table on page 20 indicates the calibration status of all test equipment used during probe calibration.

Page 7 of 23



#### MEASUREMENT UNCERTAINTIES

A complete measurement uncertainty analysis for the SARA-C measurement system has been published in Reference [6]. Table 17 from that document is re-created below, and lists the uncertainty factors associated just with the calibration of probes.

Source of uncertainty	Uncertainty value ± %	Probability distribution	Divisor	ci	Standard uncertainty ui ± %	V <sub>i</sub> OI V <sub>eff</sub>
Forward power	3.92	N	1.00	1	3.92	80
Reflected power	4.09	N	1.00	1	4.09	10
Liquid conductivity	1.308	N	1.00	1	1.31	*0
Liquid permittivity	1.271	N	1.00	1	1.27	*0
Field homgeneity	3.0	R	1.73	1	1.73	***
Probe positioning	0.22	R	1.73	1	0.13	80
Field probe linearity	0.2	R	1.73	1	0.12	10
Combined standard uncertainty		RSS			6.20	

At the 95% confidence level, therefore, the expanded uncertainty is  $\pm 12.4\%$ 



# SUMMARY OF CAL FACTORS FOR PROBE IXP-020 S/N 0231

		Channel Sen mise Axial Is		
	X	Υ	Z	
Air Factors	75.38	86.20	78.42	$(V/m)^2/mV$
DCPs	100	100	100	mV

Measured Isotropy	(+/-) dB
Axial Isotropy	0.02
Spherical Isotropy	0.63

Physical Information				
Sensor offset (mm) 2.7				
Elbow – Tip dimension (mm) 0.0				



		Head Fluid	Body Fluid		Body Fluid		
Frequency* (MHz)	SAR Conv Factor	Boundary Correction f(0)	Boundary Correction d(mm)	SAR Conv Factor	Boundary Correction f(0)	Boundary Correction d(mm)	Notes
450	0.288	0	1	0.286	0	1	3
700	-		-	-	-	-	
835	0.300	1.04	1.36	0.317	0.62	1.85	1,2
900	0.301	0.72	1.58	0.317	1.09	1.34	1,2
1450	-	-	-		-	-	- 1
1800	0.360	0.66	1.89	0.386	0.58	2.29	1,2
1900	0.359	0.61	1.94	0.395	0.60	2.27	1,2
2100	0.400	0.63	2.01	0.424	0.72	1.94	1,2
2450	0.405	1.08	1.44	0.456	1.03	1.56	1,2
2600	0.414	1.13	1.38	0.468	1.09	1.51	1,2
Notes				1			
1)	Calibrations	done at 22°C +	+/-2°C				
2)	Waveguide o	alibration	7-2 0				
3)	By validation						

The valid frequency of SARA-C probe calibrations are ±100MHz (F<300MHz) and ±200MHz (F>300MHz).



# PROBE SPECIFICATIONS

Indexsar probe 0231, along with its calibration, is compared with BSEN 62209-1 and IEEE standards recommendations (Refs [1] and [2]) in the Tables below. A listing of relevant specifications is contained in the tables below:

Dimensions	S/N 0231	BSEN [1]	IEEE [2]
Overall length (mm)	350	13012302	4-2-2-2-2-2-2-2-2-2-2-2-2-2-2-2-2-2-2-2
Tip length (mm)	10		
Body diameter (mm)	12		
Tip diameter (mm)	5.2	8	8
Distance from probe tip to dipole centers (mm)	2.7		

Typical Dynamic range	S/N 0231	BSEN [1]	IEEE [2]
Minimum (W/kg)	0.01	<0.02	0.01
Maximum (W/kg) N.B. only measured to > 100 W/kg	>100	>100	100
on representative probes			

Isotropy (measured at 900MHz)	S/N 0231	BSEN [1]	IEEE [2]
Axial rotation with probe normal to source (+/- dB)	0.02	0.5	0.25
Spherical isotropy covering all orientations to source (+/- dB)	0.63	N/A	N/A

NB Isotropy is frequency independent

Construction	Each probe contains three orthogonal dipole sensors arranged on a triangular prism core, protected against static charges by built-in shielding, and covered at the tip by PEEK cylindrical enclosure material. No adhesives are used in the immersed section. Outer case materials are PEEK and heat-shrink sleeving.
Chemical resistance	Tested to be resistant to TWEEN20 and sugar/salt-based simulant liquids but probes should be removed, cleaned and dried when not in use.  NOT recommended for use with glycol or soluble oil-based liquids.

Page 11 of 23



#### REFERENCES

References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.

For a specific reference, subsequent revisions do not apply.

For a non-specific reference, the latest version applies.

#### [1] IEC 62209-1.

Human exposure to radio frequency fields from hand-held and body-mounted wireless communication devices — Human models, instrumentation, and procedures — Part 1: Procedure to determine the specific absorption rate (SAR) for hand-held devices used in close proximity to the ear (frequency range of 300 MHz to 3 GHz)

#### [2] IEEE 1528

Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques

#### [3] IEC 62209-2

Human exposure to radio frequency fields from hand-held and body-mounted wireless communication devices – Human models, Instrumentation, and procedures – Part 2: Procedure to determine the specific absorption rate (SAR) for wireless communication devices used in close proximity to the human body (frequency range of 30 MHz to 6 GHz)

#### [4] FCC OET65

Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields

- [5] Indexsar Report IXS-0300, October 2007. Measurement uncertainties for the SARA2 system assessed against the recommendations of BS EN 62209-1:2006
- [6] SARA-C SAR Testing System: Measurement Uncertainty, v1.0.3. October 2011.



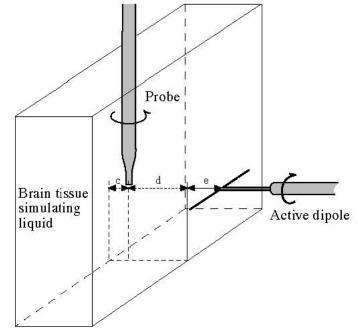


Figure 1. Spherical isotropy jig showing probe, dipole and box filled with simulated brain liquid (see Ref [2], Section A.5.2.1)

Page 13 of 23



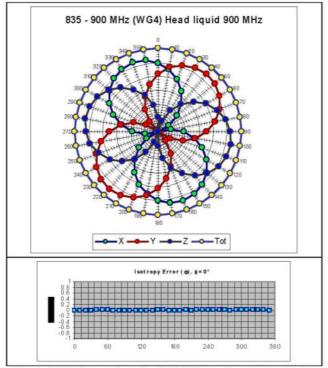


Figure 2. The axial isotropy of probe S/N 0231 obtained by rotating the probe in a liquid-filled waveguide at 900 MHz. (NB Axial Isotropy is frequency independent)

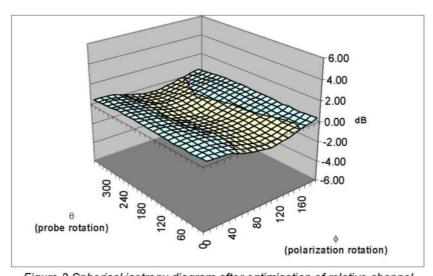


Figure 3 Spherical isotropy diagram after optimisation of relative channel sensitivities for axial isotropy

Page 14 of 23



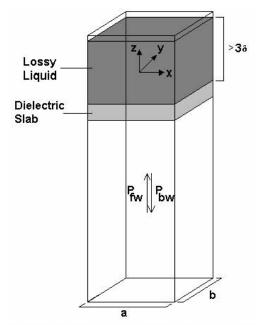


Figure 4. Geometry used for waveguide calibration (after Ref [2]. Section A.3.2.2)

Page 15 of 23




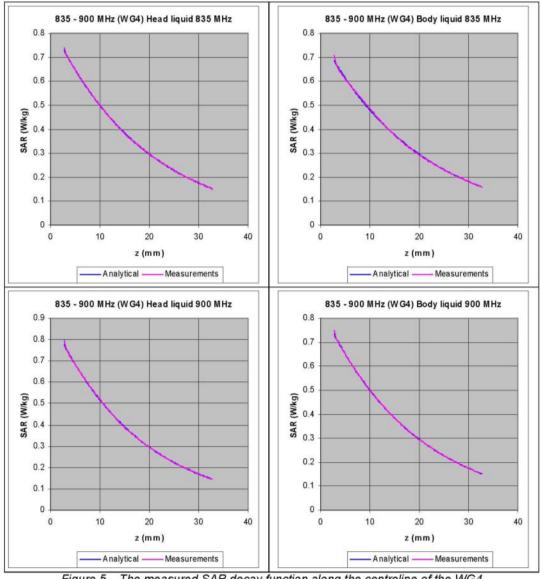


Figure 5. The measured SAR decay function along the centreline of the WG4 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension, frequency, power and liquid properties employed.


Page 16 of 23



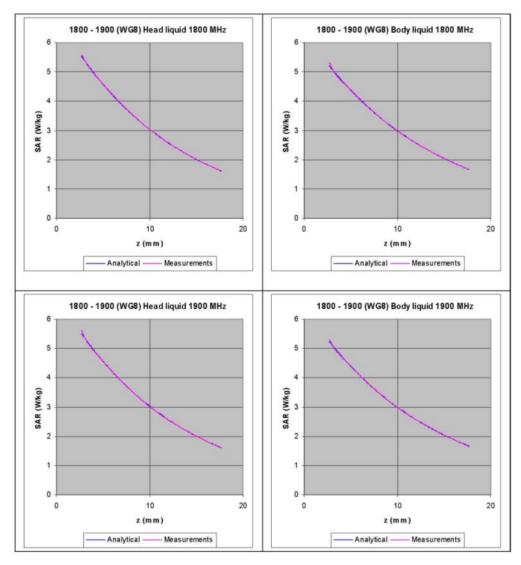

Page 17 of 23



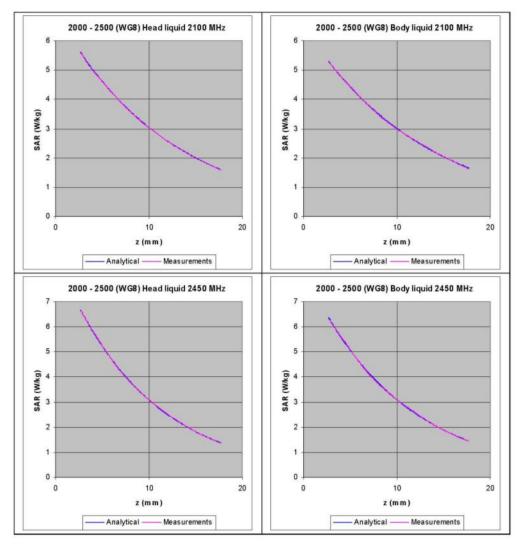

Page 18 of 23



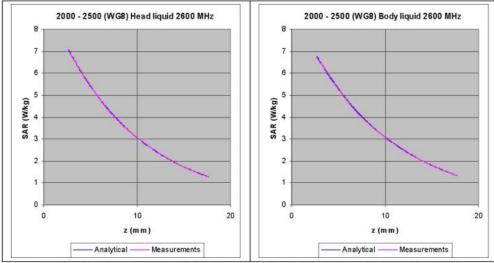
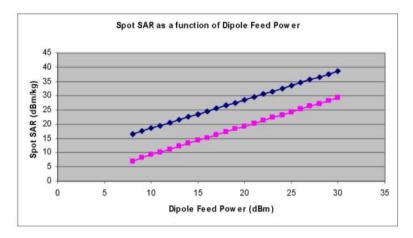


Figure 6. The measured SAR decay function along the centreline of the R22 waveguide with conversion factors adjusted to fit to the theoretical function for the particular dimension, frequency, power and liquid properties employed.





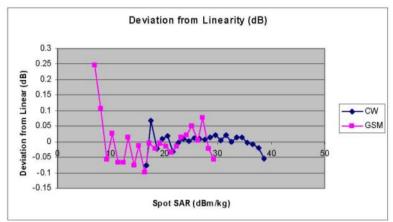


Figure 7: The typical linearity response of IXP-050 probes to both CW (blue) and GSM (pink) modulation in close proximity to a source dipole. The top diagram shows the SAR reading as a function of dipole feed power, with GSM modulation being approx a factor of 8 (ie 9dB) lower than CW. The lower diagram shows the departure from linearity of the same two datasets.

Page 20 of 23



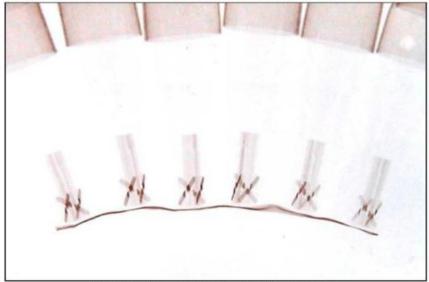


Figure 8 : X-ray positive image of 5mm probes

Page 21 of 23



Table indicating the dielectric parameters of the liquids used for calibrations at each frequency

Frequency (MHz) Fluid Type	Florid	Measured		Target		% Deviation		Verdict	
	322	Relative Permittivity	Conductivity (S/m)	Relative Permittivity	Conductivity (S/m)	Relative Permittivity	Conductivity	Relative Permittivity	Conductivity
450		44.33	0.835	43.5	0.87	1.9	-4.0	Pass	Pass
835		42.50	0.902	41.5	0.90	2.4	0.2	Pass	Pass
900		41.90	0.965	41.5	0.97	1.0	-0.5	Pass	Pass
1800	Head	39.92	1.395	40.0	1.40	-0.2	-0.4	Pass	Pass
1900	neau	39.60	1.400	40.0	1.40	-1.0	0.0	Pass	Pass
2100	1	41.02	1.481	39.8	1.49	3.1	-0.6	Pass	Pass
2450		39.79	1.828	39.2	1.80	1.5	1.6	Pass	Pass
2600		39.37	1.948	39.0	1.96	0.9	-0.6	Pass	Pass
450	- 1	57.33	0.902	56.7	0.94	1.1	-3.7	Pass	Pass
835		55.13	0.958	55.2	0.97	-0.1	-1.2	Pass	Pass
900		54.53	1.023	55	1.05	-0.9	-2.6	Pass	Pass
1800	Dardy.	53.06	1.520	53.3	1.52	-0.5	0.0	Pass	Pass
1900	Body	52.85	1.532	53.3	1.52	-0.8	0.8	Pass	Pass
2100		53.94	1.574	53.2	1.62	1.4	-2.8	Pass	Pass
2450		52.91	1.964	52.7	1.95	0.4	0.7	Pass	Pass
2600		52.47	2.132	52.5	2.16	-0.1	-1.3	Pass	Pass



# Table of test equipment calibration status

Instrument description	Supplier / Manufacturer	Model	Serial No.	Last calibration date	Calibration due date
Power sensor	Rohde & Schwarz	NRP-Z23	100063	09/08/2012	09/08/2014
Dielectric property measurement	Indexsar	DiLine (sensor lengths: 160mm, 80mm and 60mm)	N/A	(absolute) – checked against NPL values using reference liquids	N/A
Vector network analyser	Anritsu	MS6423B	003102	17/01/2013	17/01/2014
SMA autocalibration module	Anritsu	36581KKF/1	001902	17/01/2013	17/01/2014



# **ANNEX B**

# **DIPOLE CALIBRATION INFORMATION**



# 450 MHz Validation Dipole Type IXD-450

# 1. Measurement Conditions

Measurements were performed using a Flat phantom with dimensions of 410mmx270mmx200mm with a sidewall thickness of 6.0mm. The phantom was filled to a depth of 150mm with the appropriate simulant liquid.

A 450MHz reference dipole was used to perform a system validation. The dipole-under-test was then substituted for the reference dipole and the validation repeated. Spacers made from a low-permittivity, low-loss foam material, were fitted to the dipoles' arms to ensure that the spacing between the dipole and the liquid surface is accurately aligned according to the guidance in the relevant standards. The material used is Rohacell, which has a relative permittivity of approx. 1.05 and a negligible loss tangent.

TÜV SÜD Product Service Ltd probe Serial Number 0190 was used.

An Anritsu MS4623B vector network analyser was used for the return loss measurements. The dipole-under-test was placed in a special holder made of low-permittivity, low-loss materials. Balanced dipoles for each frequency required are dimensioned according to the guidelines given in IEEE 1528 [1]. The dipoles are made from semi-rigid 50 Ohm co-ax, which is joined by soldering and is gold-plated subsequently.



## 2. SAR Validation

SAR validation checks have been performed using a 450MHz dipole (Serial Number SN0014) with the box-phantom located on the SARA C phantom support base on the SARA C cartesian robot system. Tests were then conducted at a feed power level of 0.25W, with an allowance for the transmission loss of the dipole. The ambient temperature was 22C +/- 1oC and the relative humidity was 32%.


The phantom was filled with a 450MHz brain liquid using a recipe from [1], which has the following electrical parameters (measured using an Indexsar DiLine kit) at 450MHz at 19°C:

	Measured Value	Target Value	Deviation
Relative	44.3	43.5	+1.8%
Permittivity			
Conductivity	0.83	0.87	-4.6%

Derived by interpolation from Table I.1 EN62209-1[Ref 2]

The SARA C software version 5.002 (current version number) was used with Indexsar IXP\_050 probe Serial Number 0190 previously calibrated by the National Physical Laboratory using waveguides.

The 3D measurement made using the dipole at the bottom of the phantom box is shown below:

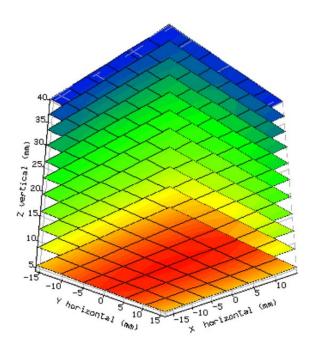

The results, normalised to an input power of 1W (forward power) were:

	Measured SAR (W/kg)	Target SAR (W/kg)	Deviation
1g	5.16	4.9	+5.2%
10g	3.57	3.3	+8.1%

†Derived by interpolation from Table D.1 EN62209-1[Ref 2]



# 3. Patch Antenna impedance and return loss

A Vector Network Analyser (VNA) was used to perform a return loss measurement on the dipoleunder-test when in the measurement location against the box phantom.


The following parameters were measured:

Patch antenna impedance at 450 MHz Re  $Im\{Z\} = -18 \Omega$ 

 $Re{Z} = 52 \Omega$ 

Return loss at 450MHz

-15.3 dB

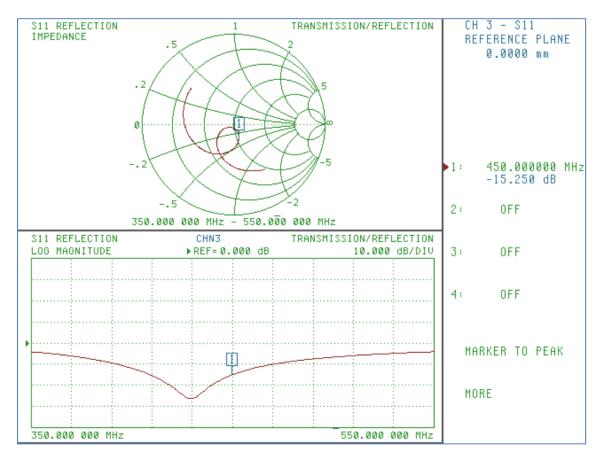

## 4. References

- [1] IEEE Std 1528-2003. IEEE recommended practice for determining the peak spatial-average specific absorption rate (SAR) in the human body due to wireless communications devices: Measurement Techniques Description.
- [2] BS EN 62209-1:2006. Human exposure to radio frequency fields from hand-held and body-mounted wireless communication devices Human models, instrumentation, and procedures.