spider user manual (WIP april 1)

- safety and damage precautions
 setup and charging
- 3. placement4. interface
- 5. modes
- 6. shift functions7. orthoplay

safety and damage precautions

do not expose spider to rain or moisture. clean with a dry cloth.

place spider on a flat and level surface to prevent it from falling.

protect your hearing. be careful when turning up the volume and do not listen too close to the speaker on high volume for a long time.

to prevent malfunction or damage, turn off the power to all devices before connecting spider with other units.

spider has a very low idle power consumption. if you are not going to use it for a longer period of time we recommend unplugging.

operating temperature 10°C to 35°C (50°F to 95°F). storage temperature -10°C to 45°C (14°F to 113°F). relative humidity 20% to 80% non-condensing.

setup and charging

we recommend 3 to 4 hours of charging the first time you use spider. the internal battery already has some charge out of the box.

to charge, insert the power cord into the inlet in the back. while charging the line input led will be red. when charging is complete the red led will turn off.

to power on turn the volume knob clockwise.

check the battery status on the display by holding the input button.

placement

spider is designed to sound fantastic anywhere in the room. for the best listening experience place spider on a table, windowsill or shelf. place the back panel about 10 cm from a wall or window to make the bass response richer.

interface

input

press the input button to select audio source. hold the input button to activate shift functions.

play

in bluetooth mode, press the play button to play/pause/skip/go back. in radio mode, press the play button to search for the next station.

<u>volume</u>

the volume knob controls the volume level. at the beginning of the volume knob is the power switch.

tape

spider records all playback on a rolling 2-hour tape.

line input/output

3.5mm line level analog audio input. line level output for headphone use.

power inlet

100-240 VAC

modes

use the input button to select between line in, bluetooth, FM radio or disk mode.

line in

turn down the volume on spider before connecting. connect your audio device with a 3-pole audio cable.

bluetooth

a flashing blue led shows spider is ready to pair.

pair with your desired device.

when connected the led will turn solid blue.

press the play button to play/pause. double tap to skip track. triple tap to return to the previous track.

the volume knob is motorized and will react to adjustments made over bluetooth.

radio

press the play button to search for the next available FM station.

hold input and tap play to search backwards – down the FM band.

to fine tune, use the tune wheel while holding the input button.

disk

spider comes with a bunch of mantras and other recordings.

light some incense.

skip to the next mantra using the play button.

pro tip: to change mantra speed, hold input and use volume knob.

headphone listening

connect a headset or headphones to the line in jack.

with a microphone headset plugged in, press the button on the headset to activate mic.

in line in mode spider will act as a megaphone. great for protest rallies!

in bluetooth/FM/mantra mode the microphone is mixed with the playback material. the mix will be recorded onto the tape.

for headphones without microphone – with 3-pole cables – press play button after plugging in. spider automatically recognizes headsets with 4-pole cables.

scrub

scrub back and forth using the tape reel. the tape will keep recording in the background as you scrub. press play button again to skip to realtime.

shift

hold the input button as a shift key for extra functions. the best way to understand these functions is to play around with them!

loop

hold input and play buttons to record a loop
the loop starts when you hold both buttons and ends when you release them.
to trim the end point of the loop, hold play and use the volume knob.
to divide or multiply the loop length, hold input and use the volume knob.
press play button to exit the loop.
press play button again to skip to realtime.
the loop works in all modes.

tape transport

hold the input button to use the volume knob as a tape transport. turn back and forth to fast forward or rewind the tape or to listen at half speed. release input button while using the tape transport to lock playback to the new speed. the tape always keeps recording for two hours.

fine tune FM

hold the input button to fine tune the FM radio using the tune wheel.

battery status

when holding the input button the display will show battery level.

orthoplay

orthoplay is software designed to control and configure spider and other TE devices. use orthoplay to organize speakers in groups, set equalizer, queue playlists, upgrade the speaker OS and more.

access orthoplay

for iOS devices use the orthoplay iOS app. for android devices use the orthoplay android app. an other devices and computers use a chrome browser and go to orthoplay.com

rename your speaker

tap the name below the speaker and enter the name you want to use.

connect the ortho remote

select bluetooth mode to pair with your ortho remote. a flashing blue led shows spider is ready to connect. once connected the led will turn solid blue. see the ortho remote guide for further instructions.

important safety instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarised or grounding-type plug. A polarised plug has two blades with one wider than the other.

A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.

WARNING: The mains plug/appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the constitute a risk of electric shock.



WARNING: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

No naked flame sources, such as lighted candles should be placed on the product. Follow instructions to ensure correct and safe installation and interconnection of equipment in multimedia systems.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



Electrical and electronic equipment, parts and batteries marked with this symbol must not be disposed of with normal household wastage, it must be collected and disposed of separately to protect the environment.



FCC statement

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

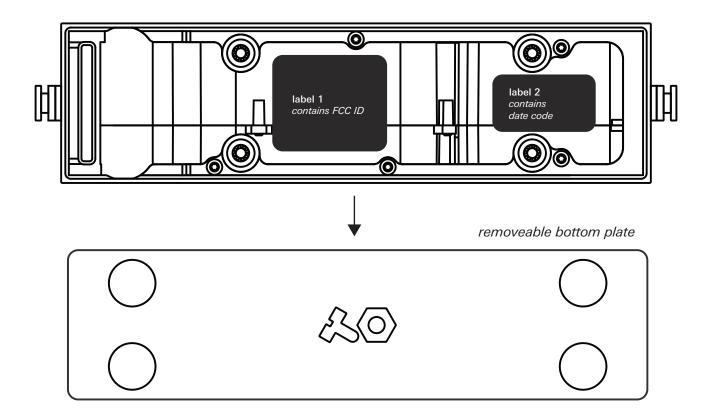

IC warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, meme si le brouillage est susceptible d'en compromettre le fonctionnement."

Frequency Band and RF Power

Frequency Range (MHz)	Max. Transmit Power (dBm)	
2402~2480 MHz	≤10 dBm	

EU Importer List

Teenage Engineering AB, Textilgatan 31 12030 Stockholm, Sweden

产品中有害物质的名称及含量							
部件名称	有害物质						
	铅 (Pb)	汞(Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
电路板	Х	0	0	0	0	0	
线材	X	0	0	0	0	0	
附件	0	0	0	0	0	0	
喇叭	0	0	0	0	0	0	
箱体框	0	0	0	0	0	0	
金属件	Х	0	0	0	0	0	

本表格依据SJ/T 11364 的规定编制。

O:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。

X:表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572 规定的限量要求。