



NSI/IEEE Std. C95.1-1992

In accordance with the requirements of
FCC Report and Order: ET Docket 93-62, and OET Bulletin 65 Supplement C

FCC SAR TEST REPORT

For

Product Name : Mobile Phone

Brand Name : B-mobile

Model Name: K107, P30D

FCC ID: ZFT-K107

Report No.: KS110407B02-SF

Issued for

Global Mobile Communication (HK) Ltd.,

**7/F, Kin On Commercial Building, 49-51 Jervois Street, Sheung
Wan, HongKong, China**

Issued by

Compliance Certification Services Inc.

Kun shan Laboratory

**No.10 Weiye Rd., Innovation park, Eco&Tec,
Development Zone, Kunshan City, Jiangsu, China**

TEL: 86-512-57355888

FAX: 86-512-57370818

Issued Date: April 13, 2011



Note: This report shall not be reproduced except in full, without the written approval of Compliance Certification Services Inc. This document may be altered or revised by Compliance Certification Services Inc. personnel only, and shall be noted in the revision section of the document. The client should not use it to claim product endorsement by A2LA, NIST or any government agencies. The test results in the report only apply to the tested sample.



Revision History

Rev.	Issue Date	Revisions	Effect Page	Revised By
00	April 13, 2011	Initial Issue	ALL	Hadiif Hoo



TABLE OF CONTENTS

- 1. CERTIFICATE OF COMPLIANCE (SAR EVALUATION).....4**
- 2. EUT DESCRIPTION5**
- 3. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC6**
- 4. TEST METHODOLOGY6**
- 5. Test Configuration6**
- 6. DOSIMETRIC ASSESSMENT SETUP.....6**
 - 6.1 MEASUREMENT SYSTEM DIAGRAM7
 - 6.2 SYSTEM COMPONENTS8
- 7. EVALUATION PROCEDURES10**
- 8. MEASUREMENT UNCERTAINTY13**
- 9. EXPOSURE LIMIT14**
- 10. EUT ARRANGEMENT.....14**
 - 10.1 ANTHROPOMORPHIC HEAD PHANTOM14
 - 10.2 DEFINITION OF THE "CHEEK/TOUCH" POSITION15
 - 10.3 DEFINITION OF THE "TILTED" POSITION16
- 11. MEASUREMENT RESULTS.....17**
 - 11.1 TEST LIQUIDS CONFIRMATION17
 - 11.2 SYSTEM PERFORMANCE CHECK18
 - 11.3 EUT TUNE-UP PROCEDURES AND TEST MODE.....20
 - 11.4 CONDUCTED OUTPUT POWER21
 - SAR MEASUREMENT RESULTS22
- EUT PHOTO26**
- 12. EQUIPMENT LIST & CALIBRATION STATUS30**
- 13. FACILITIES.....31**
- 14. REFERENCES.....31**
- 15. ATTACHMENTS32**
- CONTENT32



1. CERTIFICATE OF COMPLIANCE (SAR EVALUATION)

Product name:	Mobile Phone
Model No.:	K107, P30D
Trade name:	B-mobile
Device Category:	PORTABLE DEVICES
Exposure Category:	GENERAL POPULATION/UNCONTROLLED EXPOSURE
Date of Test:	April 13, 2011
Applicant:	Global Mobile Communication (HK) Ltd., 7/F, Kin On Commercial Building, 49-51 Jervois Street, Sheung Wan, Hong Kong, China
Manufacturer:	Water World Technology Co., Ltd 6 Floor, Block B, Digital Building, Garden City, No. 1079, Nanshan Road, Nanshan District, Shenzhen, Guangdong, China
Application Type:	Certification

APPLICABLE STANDARDS AND TEST PROCEDURES

STANDARDS AND TEST PROCEDURES	TEST RESULT
47 CFR Part 2 (2.1093) Radiofrequency Radiation Exposure Evaluation: Portable Devices FCC OET Bulletin 65 (Edition 97-01), Supplement C (Edition 01-01) Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields IEEE 1528 - 2003 IEEE Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Technique and the following specific Test Procedures: o KDB 248227 D01 SAR measurement procedures for 802.11 a/b/g transmitters o KDB 648474 D01 SAR evaluation considerations for handsets with multiple transmitters and antennas	Pass
Deviation from Applicable Standard	
None	

The device was tested by Compliance Certification Services Inc. in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C (Edition 01-01). The test results in this report apply only to the tested sample of the stated device/equipment. Other similar device/equipment will not necessarily produce the same results due to production tolerance and measurement uncertainties.

Approved by:

Reviewed by:

Hadiif Hoo
RF Manager
Compliance Certification Service Inc.

Sean Yu
Test Engineer
Compliance Certification Service Inc.

**2. EUT DESCRIPTION**

Product	Mobile Phone
Model Number	K107, P30D
Trade Name	B-mobile
Description	Only a market differentiation
Frequency Range	GSM 850: 824.2 ~ 848.8 MHz GSM 1900: 1850.2 ~ 1909.8 MHz
Operating Mode	Maximum continuous output
Transmit Power(Average)	GSM850 Band: GSM 850: 3F.GGdBm GSM1900 Band: GSM 1900: G .€Í dBm
Max. SAR	GSM 850: 0.88W/kg GSM 1900: 0.56W/kg
Network Support	GSM only
Modulation Technique	GSM: GMSK,
Accessories	Li-ion Battery: 3.7V 600mAh



3. REQUIREMENTS FOR COMPLIANCE TESTING DEFINED BY THE FCC

The US Federal Communications Commission has released the report and order "Guidelines for Evaluating the Environmental Effects of RF Radiation", ET Docket No. 93-62 in August 1996. The order requires routine SAR evaluation prior to equipment authorization of portable transmitter devices, including portable telephones. For consumer products, the applicable limit is 1.6 mW/g for an uncontrolled environment and 8.0 mW/g for an occupational/controlled environment as recommended by the ANSI/IEEE standard C95.1-1992. According to the Supplement C of OET Bulletin 65 "Evaluating Compliance with FCC Guidelines for Human Exposure to Radio frequency Electromagnetic Fields", released on Jun 29, 2001 by the FCC, the device should be evaluated at maximum output power (radiated from the antenna) under "worst-case" conditions for normal or intended use, incorporating normal antenna operating positions, device peak performance frequencies and positions for maximum RF energy coupling.

4. TEST METHODOLOGY

The Specific Absorption Rate (SAR) testing specification, method and procedure for this Mobile Phone is in accordance with the following standards:

47 CFR Part 2 (2.1093)

IEEE C95.1-1999

IEEE 1528 – 2003 IEEE Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Technique

KDB 248227 D01 SAR measurement procedures for 802.11 a/b/g transmitters

KDB 648474 D01 SAR evaluation considerations for handsets with multiple transmitters and antennas

OET Bulletin 65 Supplement C (Edition 01-01)

5. TEST CONFIGURATION

The device was controlled by using a base station emulator R&S CMU200. Communication between the device and the emulator was established by air link. The distance between the DUT and the antenna of the emulator is larger than 50 cm and the output power radiated from the emulator antenna is at least 30 dB smaller than the output power of DUT. The DUT was set from the emulator to radiate maximum output power during all tests.

Measurements were performed on the lowest, middle, and highest channel for each testing position.

For SAR testing, EUT is in GSM/GPRS link mode. In GSM link mode, its crest factor is 8, In GPRS link mode, its crest factor is 2, because EUT is set in GPRS multi-slot class 12 with 4 uplink slots. EUT is in WIFI link mode, its crest factor is 1.

6. DOSIMETRIC ASSESSMENT SETUP


These measurements were performed with the automated near-field scanning system OPENSAR from ATTENNESSA. The system is based on a high precision robot (working range greater than 0.9 m), which positions the probes with a positional repeatability of better than ± 0.02 mm. Special E- and H-field probes have been developed for measurements close to material discontinuity, the sensors of which are directly loaded with a Schottky diode and connected via highly resistive lines to the data acquisition unit. The SAR measurements were conducted with the dosimetric probe EP100 1109 (manufactured by SATIMO), designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe has been calibrated according to the procedure described in [7] with accuracy of better than $\pm 10\%$. The spherical isotropy was evaluated with the procedure described in [8] and found to be better than ± 0.25 dB. The phantom used was the SAM Twin Phantom as described in FCC supplement C, IEEE1528 and CENELEC EN50361.



The Tissue simulation liquid used for each test is in according with the FCC OET65 supplement C as listed below.

Ingredients (% by weight)	Frequency (MHz)									
	450		835		915		1900		2450	
Tissue Type	Head	Body	Head	Body	Head	Body	Head	Body	Head	Body
Water	38.56	51.16	41.45	52.4	41.05	56.0	54.9	40.4	62.7	73.2
Salt (NaCl)	3.95	1.49	1.45	1.4	1.35	0.76	0.18	0.5	0.5	0.04
Sugar	56.32	46.78	56.0	45.0	56.5	41.76	0.0	58.0	0.0	0.0
HEC	0.98	0.52	1.0	1.0	1.0	1.21	0.0	1.0	0.0	0.0
Bactericide	0.19	0.05	0.1	0.1	0.1	0.27	0.0	0.1	0.0	0.0
Triton X-100	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	36.8	0.0
DGBE	0.0	0.0	0.0	0.0	0.0	0.0	44.92	0.0	0.0	26.7
Dielectric Constant	43.42	58.0	42.54	56.1	42.0	56.8	39.9	54.0	39.8	52.5
Conductivity (S/m)	0.85	0.83	0.91	0.95	1.0	1.07	1.42	1.45	1.88	1.78

6.1 MEASUREMENT SYSTEM DIAGRAM

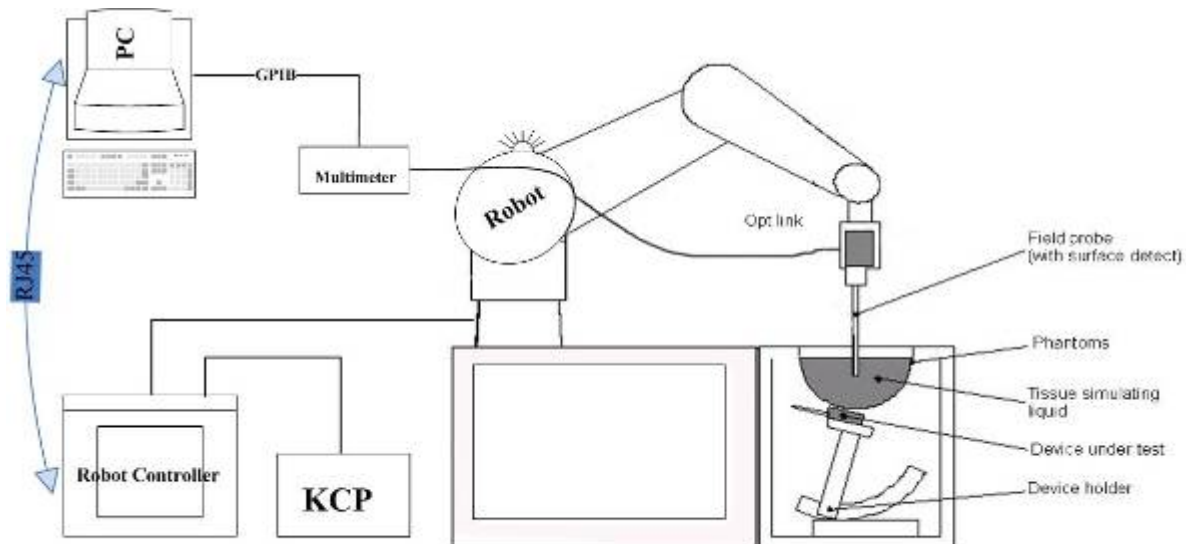

The OPENSAR system for performing compliance tests consist of the following items:

1. A standard high precision 6-axis robot (KUKA) with controller and software.
2. KUKA Control Panel (KCP).
3. A dosimetric probe, i.e., an isotropic E-field probe optimized and calibrated for usage in tissue simulating liquid. The probe is equipped with an optical surface detector system.
4. The functions of the PC plug-in card are to perform the time critical task such as signal filtering, surveillance of the robot operation fast movement interrupts.
5. A computer operating Windows 95.
6. OPENSAR software.
7. Remote control with teaches pendant and additional circuitry for robot safety such as warning lamps, etc.
8. The SAM phantom enabling testing left-hand right-hand and body usage.



9. The Position device for handheld EUT.
10. Tissue simulating liquid mixed according to the given recipes (see Application Note).
System validation dipoles to validate the proper functioning of the system.

6.2 SYSTEM COMPONENTS

SN11/09 EP100 Probe Specification

Construction Symmetrical design with triangular core

Built-in optical fiber for surface detection System

Built-in shielding against static charges

Calibration in air from 100 MHz to 2.5 GHz

In brain and muscle simulating tissue at frequencies of 835 MHz, 897MHz, 1747 MHz, 1880 MHz, 1950 MHz and 1.8 GHz (accuracy of $\pm 8\%$)

Frequency 100 MHz to > 30GHz; Linearity: ± 0.25 dB (100 MHz to 30 GHz)

Directivity ± 0.25 dB in brain tissue (rotation around probe axis)

± 0.5 dB in brain tissue (rotation normal probe axis)

Dynamic 0.001W/kg to > 100 W/kg;

Range Linearity: ± 0.25 dB

Surface ± 0.2 mm repeatability in air and clear liquids

Detection over diffuse reflecting surfaces

Dimensions Overall length: 330 mm

Tip length: 16 mm

Body diameter: 8 mm

Tip diameter: 6.5 mm

Distance from probe tip to dipole centers: <2.7 mm

Application General dosimetric up to 3 GHz

Compliance tests of mobile phones


Fast automatic scanning in arbitrary phantoms

The SAR measurements were conducted with the dosimetric probe SN11/09 EP100 designed in the classical triangular configuration and optimized for dosimetric evaluation. The probe is constructed using the thick film technique, with printed resistive lines on ceramic substrates. The probe is equipped with an optical multi-fiber line ending at the front of the probe tip. It is connected to the KRC box on the robot arm and provides an automatic detection of the phantom surface.

Half of the fibers are connected to a pulsed infrared transmitter, the other half to a synchronized receiver. As

the probe approaches the surface, the reflection from the surface produces a coupling from the transmitting to the receiving fibers. This reflection increases first during the approach, reaches maximum and then decreases. If the probe is flatly touching the surface, the coupling is zero. The distance of the coupling maximum to the surface is independent of the surface reflectivity and largely independent of the surface to probe angle. The OPENSAR software reads the reflection during a software approach and looks for the maximum using a 2nd order fitting. The approach is stopped when reaching the maximum.

Photograph of the Probe

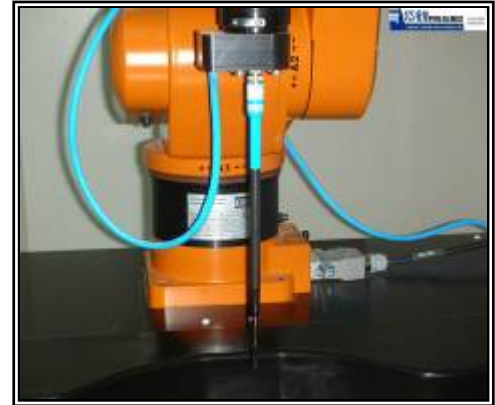

Inside View of SN11/09 EP100 E-field Probe





E-Field Probe Calibration Process

Each probe is calibrated according to a dosimetric assessment procedure described in [6] with accuracy better than +/- 10%. The spherical isotropy was evaluated with the procedure described in [7] and found to be better than +/-0.25dB. The sensitivity parameters (NormX, NormY, NormZ), the diode compression parameter (DCP) and the conversion factor (ConvF) of the probe are tested.

The free space E-field from amplified probe outputs is determined in a test chamber. This is performed in a TEM cell for frequencies bellow 1 GHz, and in a waveguide above 1 GHz for free space. For the free space calibration, the probe is placed in the volumetric center of the cavity and at the proper orientation with the field. The probe is then rotated 360 degrees.

E-field temperature correlation calibration is performed in a flat phantom filled with the appropriate simulated brain tissue. The measured free space E-field in the medium correlates to temperature rise in dielectric medium. For temperature correlation calibration a RF transparent thermistor-based temperature probe is used in conjunction with the E-field probe.

SAM Phantom

The SAM Phantom SAM29 is constructed of a fiberglass shell integrated in a wooden table. The shape of the shell is in compliance with the specification set in IEEE P1528 and CENELEC EN62209-1. The phantom enables the dosimetric evaluation of left and right hand phone usage as well as body mounted usage at the flat phantom region. A cover prevents the evaporation of the liquid. Reference markings on the Phantom allow the complete setup of all predefined phantom positions and measurement grids by manually teaching three points in the robot.

Shell Thickness: 2 ± 0.2 mm

Filling Volume: Approx. 25 liters

Dimensions (H x L x W): 810 x 1000 x 500 mm



Device Holder for Transmitters

In combination with the Generic Twin Phantom V3.0, the Mounting Device enables the rotation of the mounted transmitter in spherical coordinates whereby the rotation points is the ear opening. The devices can be easily, accurately, and repeatedly positioned according to the FCC and CENELEC specifications. The device holder can be locked at different phantom locations (left head, right head, flat phantom).

Note: A simulating human hand is not used due to the complex anatomical and geometrical structure of the hand that may produced infinite number of configurations [10]. To produce the worst-case condition (the hand absorbs antenna output power),

the hand is omitted during the tests.





7. EVALUATION PROCEDURES

DATA EVALUATION

The OPENSAR4 post processing software automatically executes the following procedures to calculate the field units from the microvolt readings at the probe connector. The parameters used in the evaluation are stored in the configuration modules of the software:

Probe parameters:	- Sensitivity	$Norm_i, a_{i0}, a_{i1}, a_{i2}$
	- Conversion factor	$ConvF_i$
	- Diode compression point	dcp_i
Device parameters:	- Frequency	f
	- Crest factor	cf
Media parameters:	- Conductivity	σ
	- Density	ρ

These parameters must be set correctly in the software. They can be found in the component documents or be imported into the software from the configuration files issued for the OPENSAR components. In the direct measuring mode of the multi-meter option, the parameters of the actual system setup are used. In the scan visualization and export modes, the parameters stored in the corresponding document files are used.

The first step of the evaluation is a linearization of the filtered input signal to account for the compression characteristics of the detector diode. The compensation depends on the input signal, the diode type and the DC-transmission factor from the diode to the evaluation electronics. If the exciting field is pulsed, the crest factor of the signal must be known to correctly compensate for peak power. The formula for each channel can be given as:

$$V_i = U_i + U_i^2 \cdot \frac{cf}{dcp_i}$$

with	V_i	= Compensated signal of channel i	(i = x, y, z)
	U_i	= Input signal of channel i	(i = x, y, z)
	cf	= Crest factor of exciting field	(OPENSAR parameter)
	dcp_i	= Diode compression point	(OPENSAR parameter)

From the compensated input signals the primary field data for each channel can be evaluated:

E-field probes:

$$E_i = \sqrt{\frac{V_i}{Norm_i \cdot ConvF}}$$

H-field probes:

$$H_i = \sqrt{V_i} \cdot \frac{a_{i10} + a_{i11}f + a_{i12}f^2}{f}$$

with	V_i	= Compensated signal of channel i	(i = x, y, z)
	$Norm_i$	= Sensor sensitivity of channel i	(i = x, y, z)
		$\mu V/(V/m)^2$ for E0field Probes	
	$ConvF$	= Sensitivity enhancement in solution	
	a_{ij}	= Sensor sensitivity factors for H-field probes	
	f	= Carrier frequency (GHz)	
	E_i	= Electric field strength of channel i in V/m	
	H_i	= Magnetic field strength of channel i in A/m	

The RSS value of the field components gives the total field strength (Hermitian magnitude):

$$E_{tot} = \sqrt{E_x^2 + E_y^2 + E_z^2}$$

The primary field data are used to calculate the derived field units.



$$SAR = E_{tot}^2 \cdot \frac{\sigma}{\rho \cdot 1000}$$

- with SAR = local specific absorption rate in mW/g
 E_{tot} = total field strength in V/m
 σ = conductivity in [mho/m] or [Siemens/m]
 ρ = equivalent tissue density in g/cm³

Note that the density is normally set to 1 (or 1.06), to account for actual brain density rather than the density of the simulation liquid.

The power flow density is calculated assuming the excitation field as a free space field.

$$P_{pwe} = \frac{E_{tot}^2}{3770} \quad \text{or} \quad P_{pwe} = H_{tot}^2 \cdot 37.7$$

- with P_{pwe} = Equivalent power density of a plane wave in mW/cm²
 E_{tot} = total electric field strength in V/m
 H_{tot} = total magnetic field strength in A/m

SAR EVALUATION PROCEDURES

The procedure for assessing the peak spatial-average SAR value consists of the following steps:

- **Power Reference Measurement**

The reference and drift jobs are useful jobs for monitoring the power drift of the device under test in the batch process. Both jobs measure the field at a specified reference position, at a selectable distance from the phantom surface. The reference position can be either the selected section's grid reference point or a user point in this section. The reference job projects the selected point onto the phantom surface, orients the probe perpendicularly to the surface, and approaches the surface using the selected detection method.

- **Area Scan**

The area scan is used as a fast scan in two dimensions to find the area of high field values, before doing a finer measurement around the hot spot. The sophisticated interpolation routines implemented in OPENSAR software can find the maximum locations even in relatively coarse grids. The scan area is defined by an editable grid. This grid is anchored at the grid reference point of the selected section in the phantom. When the area scan's property sheet is brought-up, grid was at to 15 mm by 15 mm and can be edited by a user.

- **Zoom Scan**

Zoom scans are used to assess the peak spatial SAR values within a cubic averaging volume containing 1 g and 10 g of simulated tissue. The default zoom scan measures 5 x 5 x 7 points within a cube whose base faces are centered around the maximum found in a preceding area scan job within the same procedure. If the preceding Area Scan job indicates more than one maximum, the number of Zoom Scans has to be enlarged accordingly (The default number inserted is 1).

- **Power Drift measurement**

The drift job measures the field at the same location as the most recent reference job within the same procedure, and with the same settings. The drift measurement gives the field difference in dB from the reading conducted within the last reference measurement. Several drift measurements are possible for one reference measurement. This allows a user to monitor the power drift of the device under test within a batch process. In the properties of the Drift job, the user can specify a limit for the drift and have OPENSAR software stop the measurements if this limit is exceeded.



SPATIAL PEAK SAR EVALUATION

The procedure for spatial peak SAR evaluation has been implemented according to the IEEE1529 standard. It can be conducted for 1 g and 10 g.

The OPENSAR4 system allows evaluations that combine measured data and robot positions, such as:

- maximum search
- extrapolation
- boundary correction
- peak search for averaged SAR

During a maximum search, global and local maximum searches are automatically performed in 2-D after each Area Scan measurement with at least 6 measurement points. It is based on the evaluation of the local SAR gradient calculated by the Quadratic Shepard's method. The algorithm will find the global maximum and all local maxima within -2 dB of the global maxima for all SAR distributions.

Extrapolation

Extrapolation routines are used to obtain SAR values between the lowest measurement points and the inner phantom surface. The extrapolation distance is determined by the surface detection distance and the probe sensor offset. Several measurements at different distances are necessary for the extrapolation.

Extrapolation routines require at least 10 measurement points in 3-D space. They are used in the Cube Scan to obtain SAR values between the lowest measurement points and the inner phantom surface. The routine uses the modified Quadratic Shepard's method for extrapolation. For a grid using 5x5x7 measurement points with 5mm resolution amounting to 343 measurement points, the uncertainty of the extrapolation routines is less than 1% for 1 g and 10 g cubes.

Boundary effect

For measurements in the immediate vicinity of a phantom surface, the field coupling effects between the probe and the boundary influence the probe characteristics. Boundary effect errors of different dosimetric probe types have been analyzed by measurements and using a numerical probe model. As expected, both methods showed an enhanced sensitivity in the immediate vicinity of the boundary. The effect strongly depends on the probe dimensions and disappears with increasing distance from the boundary. The sensitivity can be approximately given as:

$$S \approx S_o + S_b \exp\left(-\frac{z}{a}\right) \cos\left(\pi \frac{z}{\lambda}\right)$$

Since the decay of the boundary effect dominates for small probes ($a \ll \lambda$), the cos-term can be omitted. Factors S_b (parameter Alpha in the OPENSAR software) and a (parameter Delta in the OPENSAR software) are assessed during probe calibration and used for numerical compensation of the boundary effect. Several simulations and measurements have confirmed that the compensation is valid for different field and boundary configurations.

This simple compensation procedure can largely reduce the probe uncertainty near boundaries. It works well as long as:

- the boundary curvature is small
- the probe axis is angled less than 30° to the boundary normal
- the distance between probe and boundary is larger than 25% of the probe diameter
- the probe is symmetric (all sensors have the same offset from the probe tip)

Since all of these requirements are fulfilled in a OPENSAR system, the correction of the probe boundary effect in the vicinity of the phantom surface is performed in a fully automated manner via the measurement data extraction during post processing.



8. MEASUREMENT UNCERTAINTY

Uncertainty Component	Sec.	Tol (+-%)	Prob. Dist.	Div.	Ci (1g)	Ci (10g)	1g Ui (+-%)	10g Ui (+-%)	Vi
Measurement System									
Probe calibration	E.2.1	4.7	N	1.0	1.0	1.0	4.7	4.7	∞
Axial Isotropy	E.2.2	2.5	R	$\sqrt{3}$	$(1-C_p)^{1/2}$	$(1-C_p)^{1/2}$	1.0	1.0	∞
Hemispherical Isotropy	E.2.2	4.0	R	$\sqrt{3}$	$\sqrt{C_p}$	$\sqrt{C_p}$	1.6	1.6	∞
Boundary effect	E.2.3	1.0	R	$\sqrt{3}$	1.0	1.0	0.6	0.6	∞
Linearity	E.2.4	5.0	R	$\sqrt{3}$	1.0	1.0	2.9	2.9	∞
System detection limits	E.2.5	1.0	R	$\sqrt{3}$	1.0	1.0	0.6	0.6	∞
Readout Electronics	E.2.6	1.0	N	1	1.0	1.0	1.0	1.0	∞
Reponse Time	E.2.7	0.8	R	$\sqrt{3}$	1.0	1.0	0.5	0.5	∞
Integration Time	E.2.8	2.0	R	$\sqrt{3}$	1.0	1.0	1.2	1.2	∞
RF ambient Conditions-Noise	E.6.1	3.0	R	$\sqrt{3}$	1.0	1.0	1.7	1.7	∞
RF ambient Conditions-Reflections	E.6.1	3.0	R	$\sqrt{3}$	1.0	1.0	1.7	1.7	∞
Probe positioner Mechanical Tolerance	E.6.2	2.0	R	$\sqrt{3}$	1.0	1.0	1.2	1.2	∞
Probe positioning with respect to Phantom Shell	E.6.3	0.4	R	$\sqrt{3}$	1.0	1.0	0.2	0.2	∞
Extrapolation, interpolation and integration Algorithms for Max. SAR Evaluation	E.5	1.0	R	$\sqrt{3}$	1.0	1.0	0.6	0.6	∞
Test sample Related									
Test Sample Positioning	E.4.2	1.1	N	1.0	1.0	1.0	1.1	1.1	N-1
Device Holder Uncertainty	E.4.1	5.0	N	1.0	1.0	V	5.0	5.0	N-1
Output Power Variation - SAR drift measurement	6.6.2	1.0	R	$\sqrt{3}$	1.0	1.0	1.7	1.7	∞
Phantom and Tissue Parameters									
Phantom Uncertainty (Shape and thickness tolerances)	E.3.1	4.0	R	$\sqrt{3}$	1.0	1.0	2.3	2.3	∞
Liquid conductivity - deviation from target value	E.3.2	5.0	R	$\sqrt{3}$	0.6	0.4	1.8	1.2	∞
Liquid conductivity - measurement uncertainty	E.3.3	5.0	N	1.0	0.6	0.4	3.2	2.2	M
Liquid permittivity - deviation from target value	E.3.2	3.0	R	$\sqrt{3}$	0.6	0.5	1.0	0.9	∞
Liquid permittivity - measurement uncertainty	E.3.3	2.5	N	1.0	0.6	0.5	1.5	1.2	M
Combined Standard Uncertainty			RSS				9.8	9.5	
Expanded Uncertainty (95% Confidence interval)			K=2				19.6	19.0	



9. EXPOSURE LIMIT

(A). Limits for Occupational/Controlled Exposure (W/kg)

Whole-Body	Partial-Body	Hands, Wrists, Feet and Ankles
0.4	8.0	20.0

(B). Limits for General Population/Uncontrolled Exposure (W/kg)

Whole-Body	Partial-Body	Hands, Wrists, Feet and Ankles
0.08	1.6	4.0

Note: *Whole-Body SAR* is averaged over the entire body, *partial-body SAR* is averaged over any 1 gram of tissue defined as a tissue volume in the shape of a cube. **SAR for hands, wrists, feet and ankles** is averaged over any 1 grams of tissue defined as a tissue volume in the shape of a cube.

Population/Uncontrolled Environments are defined as locations where there is the exposure of individuals who have no knowledge or control of their exposure.

Occupational/Controlled Environments are defined as locations where there is exposure that may be incurred by people who are aware of the potential for exposure, (i.e. as a result of employment or occupation).

NOTE
GENERAL POPULATION/UNCONTROLLED EXPOSURE
PARTIAL BODY LIMIT
1.6 W/kg

10. EUT ARRANGEMENT

Please refer to IEEE P1528 illustration below.

10.1 ANTHROPOMORPHIC HEAD PHANTOM

Figure 7-1a shows the front, back and side views of SAM. The point "M" is the reference point for the center of mouth, "LE" is the left ear reference point (ERP), and "RE" is the right ERP. The ERPs are 15 mm posterior to the entrance to ear canal (EEC) along the B-M line (Back-Mouth), as shown in Figure 7-1b. The plane passing through the two ear reference points and M is defined as the Reference Plane. The line N-F (Neck-Front) perpendicular to the reference plane and passing through the RE (or LE) is called the Reference Pivoting Line (see Figure 7-1c). Line B-M is perpendicular to the N-F line. Both N-F and B-M lines should be marked on the external phantom shell to facilitate handset positioning. Posterior to the N-F line, the thickness of the phantom shell with the shape of an ear is a flat surface 6 mm thick at the ERPs. Anterior to the N-F line, the ear is truncated as illustrated in Figure 7-1b. The ear truncation is introduced to avoid the handset from touching the ear lobe, which can cause unstable handset positioning at the cheek.

Figure 7-1a
Front, back and side view of SAM (model for the phantom shell)



Figure 7-1b

Close up side view of phantom showing the ear region

Figure 7-1c

Side view of the phantom showing relevant markings and the 7 cross sectional plane locations

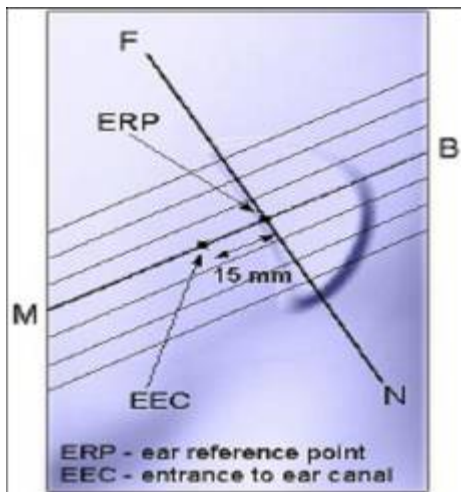


Figure 7-1b

Close up side view of phantom showing the ear region

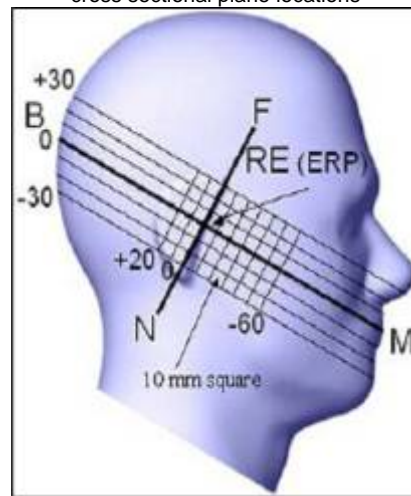


Figure 7-1c

Side view of the phantom showing relevant markings and the 7 cross sectional plane locations

10.2 DEFINITION OF THE “CHEEK/TOUCH” POSITION

The “cheek” or “touch” position is defined as follows:

- Ready the handset for talk operation, if necessary. For example, for handsets with a cover piece, open the cover. (If the handset can also be used with the cover closed both configurations must be tested.)
- Define two imaginary lines on the handset: the vertical centerline and the horizontal line. The vertical centerline passes through two points on the front side of the handset: the midpoint of the width w_t of the handset at the level of the acoustic output (point A on Figures 7-2a and 7-2b), and the midpoint of the width w_b of the bottom of the handset (point B). The horizontal line is perpendicular to the vertical centerline and passes through the center of the acoustic output (see Figure 7-2a). The two lines intersect at point A. Note that for many handsets, point A coincides with the center of the acoustic output. However, the acoustic output may be located elsewhere on the horizontal line. Also note that the vertical centerline is not necessarily parallel to the front face of the handset (see Figure 7-2b), especially for clamshell handsets, handsets with flip pieces, and other irregularly-shaped handsets.
- Position the handset close to the surface of the phantom such that point A is on the (virtual) extension of the line passing through points RE and LE on the phantom (see Figure 7-2c), such that the plane defined by the vertical center line and the horizontal line of the handset is approximately parallel to the sagittal plane of the phantom.
- Translate the handset towards the phantom along the line passing through RE and LE until the handset touches the pinna.



- e. While maintaining the handset in this plane, rotate it around the LE-RE line until the vertical centerline is in the plane normal to MB-NF including the line MB (called the reference plane).
- f. Rotate the handset around the vertical centerline until the handset (horizontal line) is symmetrical with respect to the line NF.
- g. While maintaining the vertical centerline in the reference plane, keeping point A on the line passing through RE and LE and maintaining the handset contact with the pinna, rotate the handset about the line NF until any point on the handset is in contact with a phantom point below the pinna (cheek). See Figure 7-2c. The physical angles of rotation should be noted.

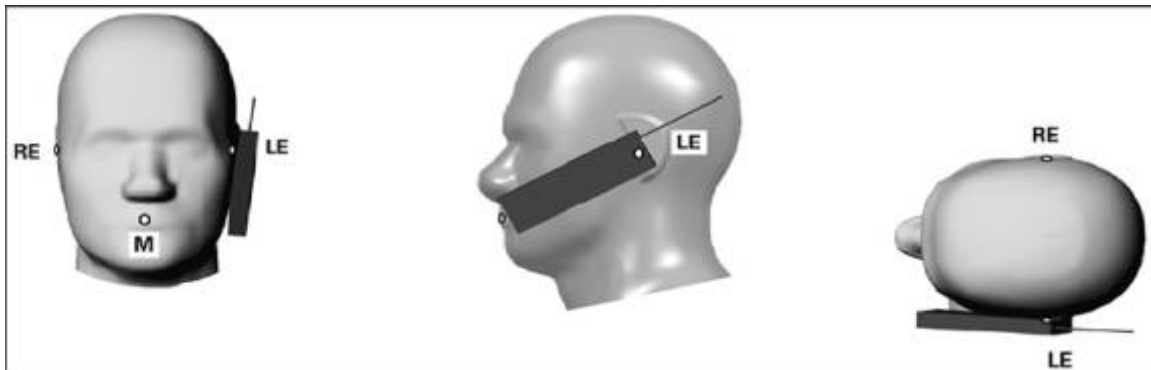


Figure 7.2c

Phone “cheek” or “touch” position. The reference points for the right ear (RE), left ear (LE) and mouth (M), which define the reference plane for handset positioning, are indicated.

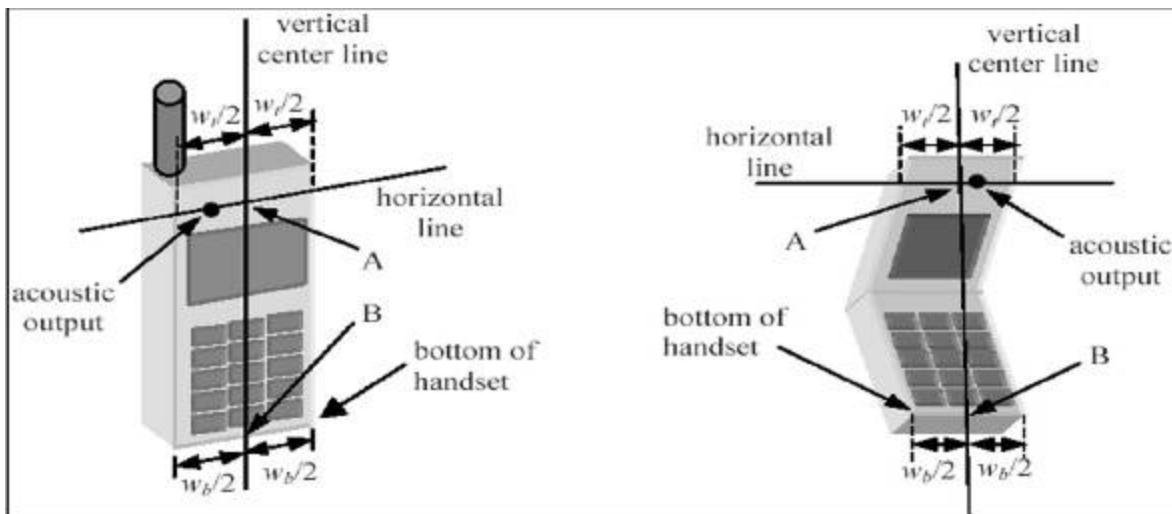


Figure 7.2a

Figure 7.2b

10.3 DEFINITION OF THE “TILTED” POSITION

The “tilted” position is defined as follows:

- a. Repeat steps (a) – (g) of 7.2 to place the device in the “cheek position.”
- b. While maintaining the orientation of the handset move the handset away from the pinna along the line passing through RE and LE in order to enable a rotation of the handset by 15 degrees.
- c. Rotate the handset around the horizontal line by 15 degrees.
- d. While maintaining the orientation of the handset, move the handset towards the phantom on a line passing through RE and LE until any part of the handset touches the ear. The tilted position is obtained when the contact is on the pinna. If the contact is at any location other than the pinna (e.g., the antenna with the back of the phantom head), the angle of the handset should be reduced. In this case, the tilted position is obtained if any part of the handset is in contact with the pinna as well as a second part of the handset is contact with the phantom (e.g., the antenna with the back of the head).

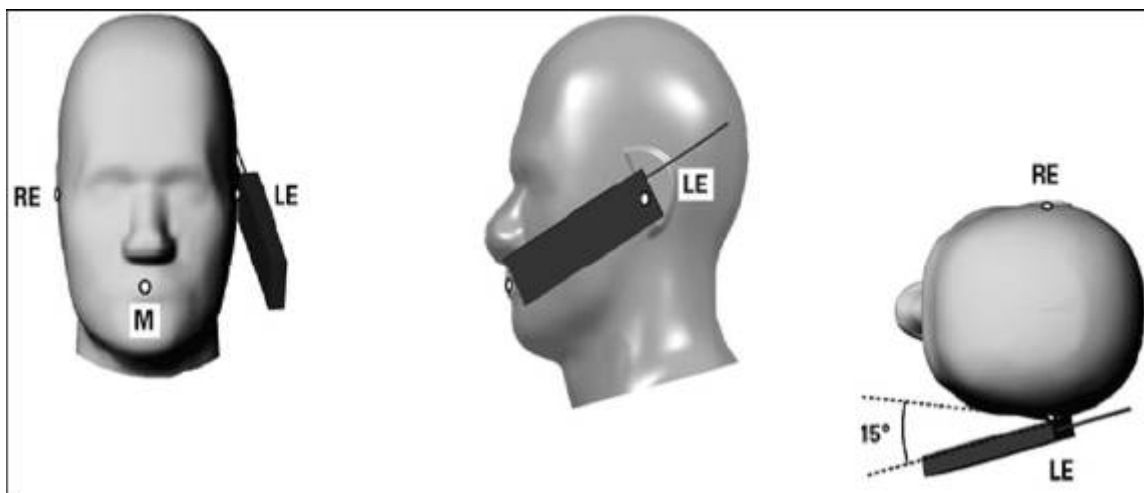


Figure 7-3

Phone “tilted” position. The reference points for the right ear (RE), left ear (LE) and mouth (M), which define the reference plane for handset positioning, are indicated.

11. MEASUREMENT RESULTS

11.1 TEST LIQUIDS CONFIRMATION

SIMULATED TISSUE LIQUID PARAMETER CONFIRMATION

The dielectric parameters were checked prior to assessment using the Agilent E5071B dielectric probe kit. The dielectric parameters measured are reported in each correspondent section.

IEEE SCC-34/SC-2 P1528 RECOMMENDED TISSUE DIELECTRIC PARAMETERS

The head tissue dielectric parameters recommended by the IEEE SCC-34/SC-2 in P1528 have been incorporated in the following table. These head parameters are derived from planar layer models simulating the highest expected SAR for the dielectric properties and tissue thickness variations in a human head. Other head and body tissue parameters that have not been specified in P1528 are derived from the tissue dielectric parameters computed from the 4-Cole-Cole equations and extrapolated according to the head parameters specified in IEEE1528

Target Frequency (MHz)	Head		Body	
	ϵ_r	σ (S/m)	ϵ_r	σ (S/m)
150	52.3	0.76	61.9	0.80
300	45.3	0.87	58.2	0.92
450	43.5	0.87	56.7	0.94
835	41.5	0.90	55.2	0.97
900	41.5	0.97	55.0	1.05
915	41.5	0.98	55.0	1.06
1450	40.5	1.20	54.0	1.30
1610	40.3	1.29	53.8	1.40
1800-2000	40.0	1.40	53.3	1.52
2450	39.2	1.80	52.7	1.95
3000	38.5	2.40	52.0	2.73
5800	45.3	5.27	48.2	6.00

(ϵ_r = relative permittivity, σ = conductivity and $\rho = 1000 \text{ kg/m}^3$)



LIQUID MEASUREMENT RESULTS

Ambient condition: Temperature: 21 °C Relative humidity: 58% **Date:** April 13,2011

Liquid Type	Frequency	Temp. [°C]	Depth [cm]	Parameters	Target	Measured	Deviation[%]	Limited[%]
Head850	835 MHz	20	15	Permittivity	41.50	41.42	-0.19	± 5
		20	15	Conductivity	0.90	0.94	4.44	± 5
Body850	835 MHz	20	15	Permittivity	55.20	57.51	4.18	± 5
		20	15	Conductivity	0.97	1.01	4.12	± 5
Head1900	1900 MHz	20	15	Permittivity	40.00	40.33	0.82	± 5
		20	15	Conductivity	1.40	1.4	0.00	± 5
Body1900	1900 MHz	20	15	Permittivity	53.30	52.23	-2.01	± 5
		20	15	Conductivity	1.52	1.48	-2.63	± 5

11.2 SYSTEM PERFORMANCE CHECK

The system performance check is performed prior to any usage of the system in order to guarantee reproducible results. The system performance check verifies that the system operates within its specifications of $\pm 10\%$. The system performance check results are tabulated below. And also the corresponding SAR plot is attached as well in the SAR plots files.

SYSTEM PERFORMANCE CHECK MEASUREMENT CONDITIONS

- The measurements were performed in the flat section of the SAM twin phantom filled with head and body simulating liquid of the following parameters.
- The OPENSAR system with an E-field probe EP_100 SN:1109 was used for the measurements.
- The dipole was mounted on the small tripod so that the dipole feed point was positioned below the center marking of the flat phantom section and the dipole was oriented parallel to the body axis (the long side of the phantom). The standard measuring distance was 15 mm (below 1 GHz) and 10 mm (above 1 GHz) from dipole center to the simulating liquid surface.
- The coarse grid with a grid spacing of 10mm was aligned with the dipole.
- Special 7x7x7 fine cube was chosen for cube integration (dx= 5 mm, dy= 5 mm, dz= 5 mm).
- Distance between probe sensors and phantom surface was set to 2.5 mm.
- The dipole input power was $1W \pm 3\%$.
- The results are normalized to 1 W input power.

Reference SAR values

The reference SAR values were using measurement results indicated in the dipole calibration document (see table below)

Frequency (MHz)	1g SAR	10g SAR	Local SAR at Surface (Above Feed Point)	Local SAR at Surface (y = 2cm offset from feed point)
835 Head	9.41	6.27	14.1	4.9
835 Body	9.79	6.63		
1950 Head	41.35	21.39	67.6	6.6
1950 Body	38.95	20.51		



SYSTEM PERFORMANCE CHECK RESULTS

Ambient conduction

Temperature: 21 °CRelative humidity: 58%**System Validation Dipole:** DIPOLE850 SN:SN 48/05 DIPC32 **Date:** April 13,2011

Medium			Parameter	Target	Measured	Deviation (%)	Limit (%)
Type	Temp (°C)	Depth (± 0.5 cm)					
Head 835 MHz	20.00	15.00	1g SAR	9.41	9.54	1.38	± 10
			10g SAR	6.27	6.33	1.75	± 10

Temperature: 21 °CRelative humidity: 58%**System Validation Dipole:** DIPOLE850SN:SN 48/05 DIPC32 **Date:** April 13,2011

Medium			Parameter	Target	Measured	Deviation (%)	Limit (%)
Type	Temp (°C)	Depth (± 0.5 cm)					
Body 835 MHz	20.00	15.00	1g SAR	9.79	10.17	3.88	± 10
			10g SAR	6.63	6.85	3.31	± 10

Temperature: 21 °CRelative humidity: 58%**System Validation Dipole:** DIPOLE1900 SN:SN 48/05 DIPG35 **Date:** April 13,2011

Medium			Parameter	Target	Measured	Deviation (%)	Limit (%)
Type	Temp (°C)	Depth (± 0.5 cm)					
Head 1900 MHz	20.00	15.00	1g SAR	41.35	39.89	-3.53	± 10
			10g SAR	21.39	21.24	-0.71	± 10

Temperature: 21 °CRelative humidity: 58%**System Validation Dipole:** DIPOLE1900 SN: SN 48/05 DIPG35 **Date:** April 13,2011

Medium			Parameter	Target	Measured	Deviation (%)	Limit (%)
Type	Temp (°C)	Depth (± 0.5 cm)					
Body 1900 MHz	20.00	15.00	1g SAR	38.95	38.56	-1.00	± 10
			10g SAR	20.51	20.32	-0.93	± 10



11.3 EUT TUNE-UP PROCEDURES AND TEST MODE

The following procedure had been used to prepare the EUT for the SAR test.

a. To setup the desire channel frequency and the maximum output power. A Radio Communication Tester “CMU200 ” was used to program the EUT.

GSM 850 :


Main Service: Circuit Switched
Power Setting: 33dBm

GSM 1900:

Main Service: Circuit Switched
Power Setting: 30dBm

b. Maximum conducted power was measured by replacing the antenna with an adapter for conductive measurement.

The depth of Liquid must above 15cm.

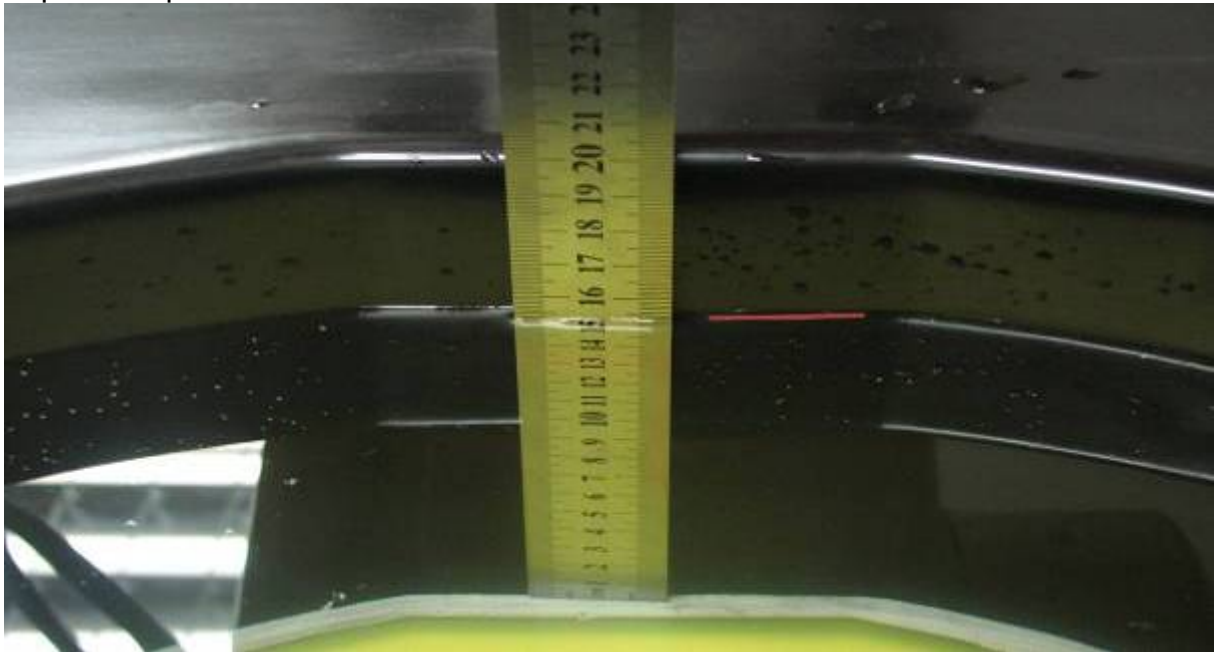



11.4 CONDUCTED OUTPUT POWER


Conducted output power (Average):

Band Channel Mode	GSM850 (dBm)			GSM1900 (dBm)		
	Ch 128	Ch 190	Ch 251	Ch 512	Ch 661	Ch 810
GSM	30.9%	31.1	31.6	28.1	28.0	27.1



SAR MEASUREMENT RESULTS


Left head / Right Head mode:

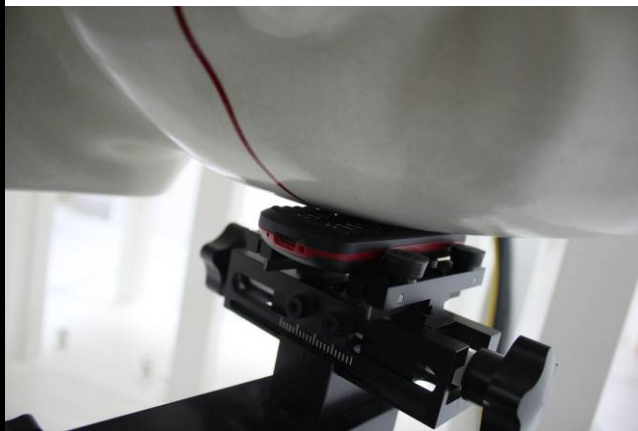

Left Cheek position



Right Cheek position

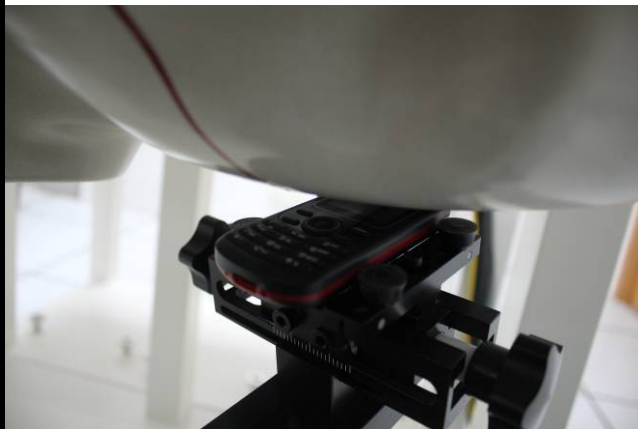

Left Tilted position



Right Tilted position

Test mode: **GSM 850**, Duty Cycle: 12.5%, Crest Factor: 8

Depth of liquid: 15.0 cm

EUT Position	Antenna	Frequency		Liquid Temp_°C	SAR (1g) (W/kg)	Limit (W/kg)
		Channel	MHz			
Right Cheek	Fixed	128	824.2	20.0	0.85	1.6
Right Cheek	Fixed	190	836.6	20.0	0.88	
Right Cheek	Fixed	251	848.8	20.0	0.84	
Right Tilted	Fixed	128	824.2	20.0	0.54	
Right Tilted	Fixed	190	836.6	20.0	0.51	
Right Tilted	Fixed	251	848.8	20.0	0.62	
Left Cheek	Fixed	128	824.2	20.0	0.83	
Left Cheek	Fixed	190	836.6	20.0	0.84	
Left Cheek	Fixed	251	848.8	20.0	0.81	
Left Tilted	Fixed	128	824.2	20.0	0.45	
Left Tilted	Fixed	190	836.6	20.0	0.54	
Left Tilted	Fixed	251	848.8	20.0	0.52	

Notes: 1) Please refer to attachment for the result presentation in plot format.



Left head / Right Head mode:



Left Cheek position

Right Cheek position



Left Tilted position


Right Tilted position

Test mode: GSM1900 , Duty Cycle: 12.5%, Crest Factor: 8				Depth of liquid: 15.0 cm		
EUT Position	Antenna	Frequency		Liquid Temp_°C	SAR (1g) (W/kg)	Limit (W/kg)
		Channel	MHz			
Right Cheek	Fixed	512	1850.2	20.0	0.44	1.6
Right Cheek	Fixed	661	1880.0	20.0	0.48	
Right Cheek	Fixed	810	1910.0	20.0	0.56	
Right Tilted	Fixed	512	1850.2	20.0	0.47	
Right Tilted	Fixed	661	1880.0	20.0	0.46	
Right Tilted	Fixed	810	1910.0	20.0	0.51	
Left Cheek	Fixed	512	1850.2	20.0	0.38	
Left Cheek	Fixed	661	1880.0	20.0	0.44	
Left Cheek	Fixed	810	1910.0	20.0	0.42	
Left Tilted	Fixed	512	1850.2	20.0	0.44	
Left Tilted	Fixed	661	1880.0	20.0	0.43	
Left Tilted	Fixed	810	1910.0	20.0	0.42	

Notes: 1) Please refer to attachment for the result presentation in plot format.




Body position mode:

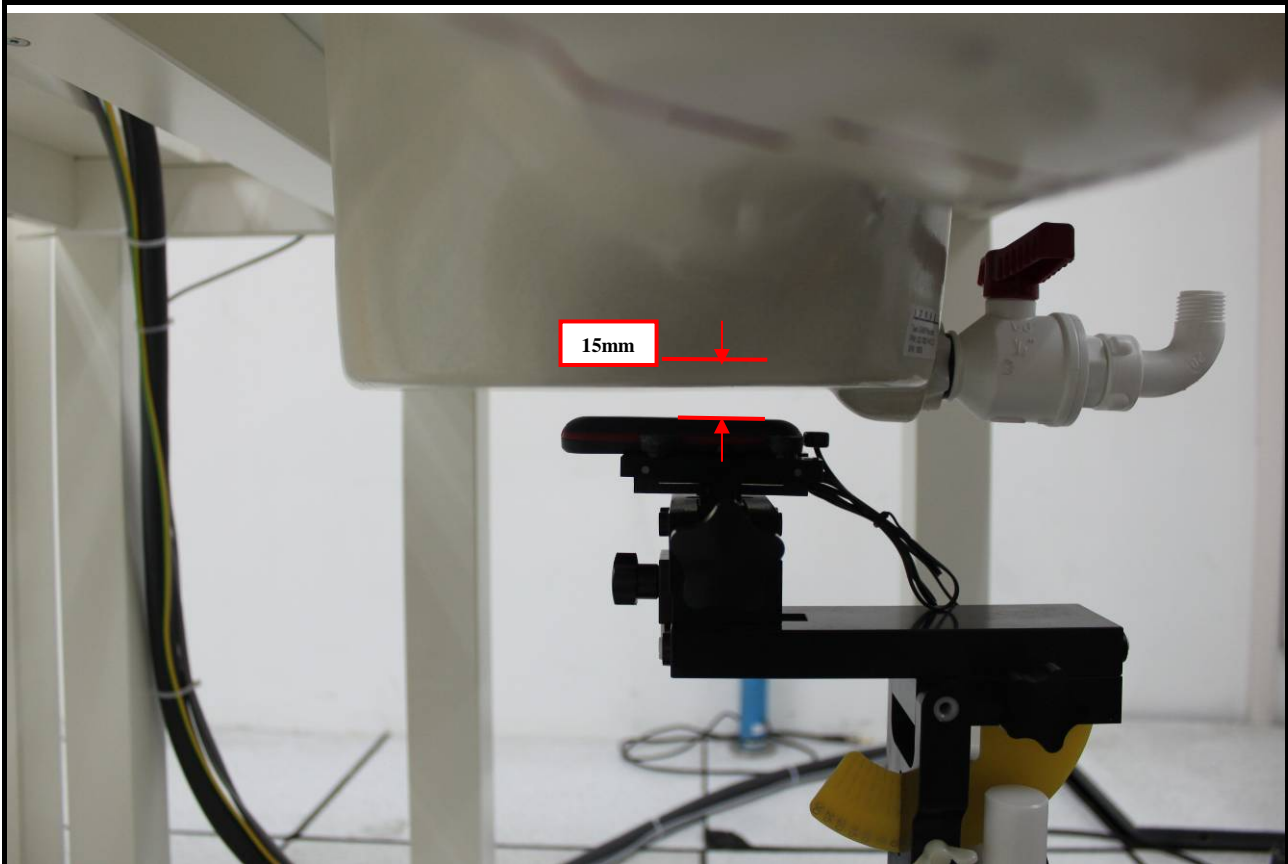

Body position face down(Bottom)

EUT Position	Antenna	Frequency		Liquid Temp_°C	SAR (1g) (W/kg)	Limit (W/kg)
		Channel	MHz			
Test mode: GSM 850 , Duty Cycle: 12.5%, Crest Factor: 8				Depth of liquid: 15.0 cm		
Face Down	Fixed	190	836.6	20.0	0.39	1.6
Test mode: GSM 1900 , Duty Cycle: 12.5%, Crest Factor: 8				Depth of liquid: 15.0 cm		
Face Down	Fixed	661	1880.0	20.0	0.40	1.6

Notes: 1) Please refer to attachment for the result presentation in plot format.

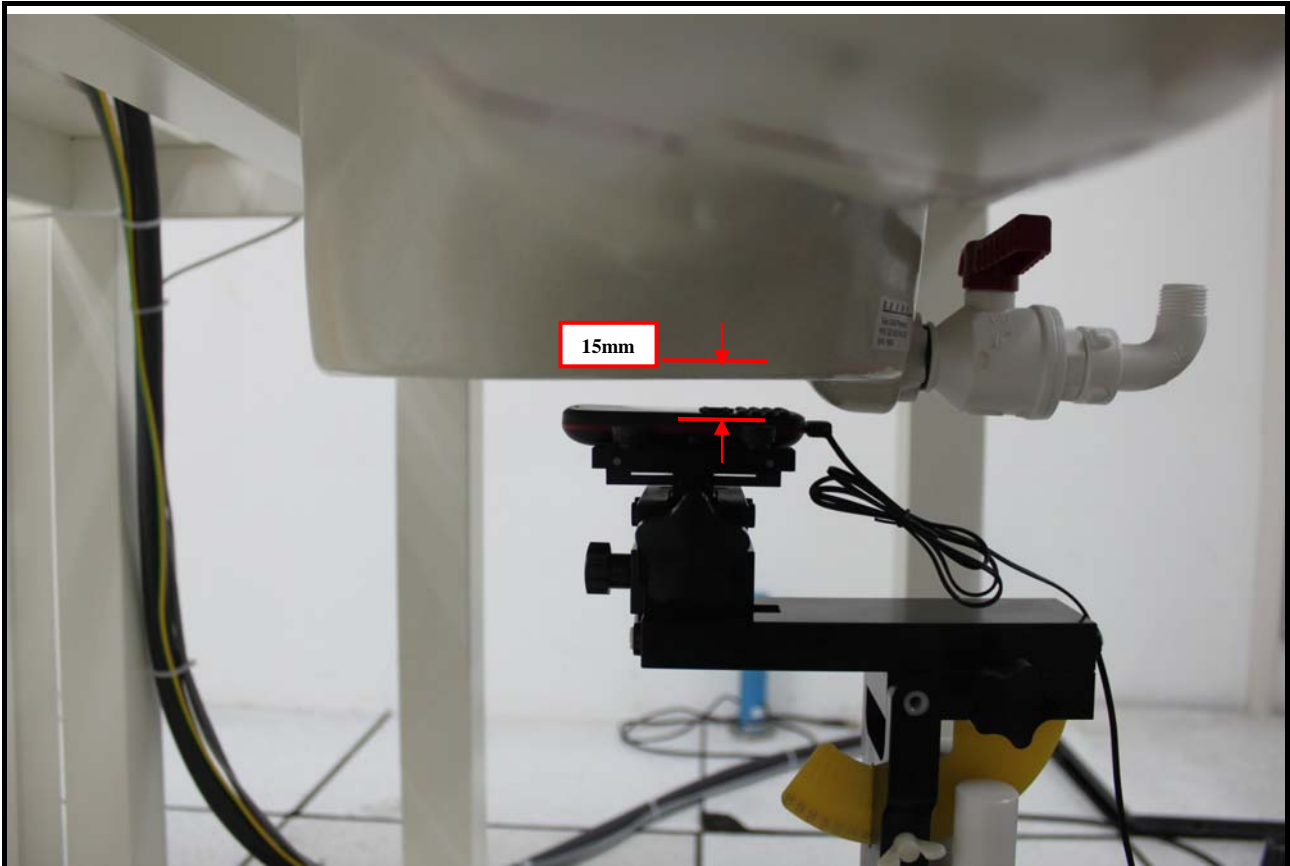

Body position face up(Top)

EUT Position	Antenna	Frequency		Liquid Temp_°C	SAR (1g) (W/kg)	Limit (W/kg)
		Channel	MHz			
Test mode: GSM 850 , Duty Cycle: 12.5%, Crest Factor: 8				Depth of liquid: 15.0 cm		
Face Down	Fixed	190	836.6	20.0	0.28	1.6
Test mode: GSM 1900 , Duty Cycle: 12.5%, Crest Factor: 8				Depth of liquid: 15.0 cm		
Face Down	Fixed	661	1880.0	20.0	0.26	1.6

Notes: 1) Please refer to attachment for the result presentation in plot format.



EUT PHOTO











12. EQUIPMENT LIST & CALIBRATION STATUS

Name of Equipment	Manufacturer	Type/Model	Serial Number	Calibration Due
P C	HP	PV 3.06GHz	375052-AA1	N/A
Signal Generator	Agilent	E8257C	MY43321570	03/24/2012
MultiMeter	Keithley	2000	1015843	05/25/2011
S-Parameter Network Analyzer	Agilent	E5071B	MY42301382	03/24/2012
Wireless Communication Test Set	R&S	CMU200	SN:B23-03291	05/25/2011
Power Meter	Agilent	E4416A	QB41292714	03/24/2012
E-field PROBE	ANTENNESSA	EP_100	SN1109	05/04/2011
DIPOLE 835	ANTENNESSA	DIPC32	SN 48/05	02/09/2012
DIPOLE 900	ANTENNESSA	DIPD33	SN 48/05	02/09/2012
DIPOLE 1800	ANTENNESSA	DIPF34	SN 48/05	02/09/2012
DIPOLE 1900	ANTENNESSA	DIPG35	SN 48/05	02/09/2012
DIPOLE 2450	ANTENNESSA	DIPJ37	SN 48/05	10/09/2011
POSITIONING DEVICE	ANTENNESSA	MSH_14	SN 41_05	N/A
DUMMY PROBE	ANTENNESSA	DP_12	SN 39_05	N/A
SAM PHANTOM	ANTENNESSA	SAM29	SN 41_05	N/A
PHANTON WOOD TABLE	ANTENNESSA	N/A	N/A	N/A
6 AXIS ROBOT	KUKA	KR3	846428	N/A
ROBOT KRC	KUKA	KCP2	01436	N/A
CHANELS SCAN CARD	KEITHLEY	2000	2000-172-01B	N/A
PROBE/ROBOT POSITIONING DEVICE	ANTENNESSA	MSH14	SN 41_05	N/A
LIQUID CALIBRATION KIT	ANTENNESSA	41/05 OCP9	00425167	N/A



13. FACILITIES

All measurement facilities used to collect the measurement data are located at

- No.10, Weiye Rd., Innovation Park, Eco & Tec. Development Part, Kunshan City, Jiangsu Province, China.

14. REFERENCES

- [1] FCC 47 CFR Part 2 “Frequency Allocations and Radio Treaty Matters; General Rules and Regulations”
- [2] IEEE Std. C95.1-1999, “IEEE Standard for Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz”, 1999
- [3] IEEE Std. 1528-2003, “Recommended Practice for Determining the Peak Spatial-Average Specific Absorption Rate (SAR) in the Human Head from Wireless Communications Devices: Measurement Techniques”, December 2003
- [4] FCC OET Bulletin 65 (Edition 97-01) Supplement C (Edition 01-01), “Evaluating Compliance with FCC Guidelines for Human Exposure to Radiofrequency Electromagnetic Fields”, June 2001
- [5] SATIMO ANTENNESSA System Handbook
- [6] FCC KDB 248227 D01 v01r02, “SAR Measurement Procedures for 802.11 a/b/g Transmitters”, May 2007
- [7] FCC KDB 447498 D01 v04, “Mobile and Portable Device RF Exposure Procedures and Equipment Authorization Policies”, November 2009
- [8] FCC KDB 447498 D02 v02, “SAR Measurement Procedures for USB Dongle Transmitters”, November 2009
- [9] FCC KDB 616217 D01 v01r01, “SAR Evaluation Considerations for Laptop Computers with Antennas Built-in on Display Screens”, November 2009
- [10] FCC KDB 616217 D03 v01, “SAR Evaluation Considerations for Laptop/Notebook/Notebook and Tablet Computers”, November 2009
- [11] FCC KDB 648474 D01 v01r05, “SAR Evaluation Considerations for Handsets with Multiple Transmitters and Antennas”, September 2008
- [12] FCC KDB 941225 D01 v02, “SAR Measurement Procedures for 3G Devices – CDMA 2000 / Ev-Do / WCDMA / HSDPA / HSPA”, October 2007
- [13] FCC KDB 941225 D03 v01, “Recommended SAR Test Reduction Procedures for GSM / GPRS / EDGE”, December 2008
- [14] FCC KDB 941225 D04 v01, “Evaluating SAR for GSM/(E)GPRS Dual Transfer Mode”, January 27 2010



15. ATTACHMENTS

Exhibit	Content
1	System Validation Plots
2	SAR Test Plots
3	Dipole calibration report (850MHz/1900MHz)
4	E-field calibration report

END OF REPORT