

User's Manua

Data Collector

PI-XXXX, AP-XXXX,SP-XXXX,PE-XX (X=0-9, A-Z, a-z, dash, or blank)



Regulatory Compliance

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/ TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

RF exposure warning

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

To ensure that RF exposure levels remain at or below the tested levels, use a belt clips, holsters or similar accessories that have no metallic component in the assembly and must provide a minimum separation distance of 5mm between the device and the body.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/eot/ea/fccid after searching on FCCID:NBF-PI-1X30

CAUTION: EXPLOSION HAZARD

Do not disassemble, short circuit, heat the battery or dispose of in fire. Store battery pack in a proper place. Do not expose to temperature above 60°C/140°F. Use specified charger only. Please dispose of the used batteries following the rules or laws issued by the local government.

警告:電池若未妥善處理,可能會導致爆炸。



請勿拆卸電池,或用火銷毀電池。請將電池放置於兒童拿不到的地方。 請使用專用充電器充電,並請依照當地政府或法律規定妥善處理廢棄 電池。

經型式認證合格之低功率射頻電機,非經許可,公司,商號或使用者 均不得擅自變更頻率,加大功率或變更原設計之特性及功能 低功率射頻電機之使用不得影響飛航影響安全及干擾合法通信,經發 現有干擾現象時,應立即停用,並改善至無干擾時方得繼續 使用前項合法通信,指一電信法規定作業之無線電通信低功率射頻電 機需忍受合法通信或工業,科學及醫療用電波輻射性電機設備之干擾

Release Note

Version	Date	Note
V1.0	02/22 2017	Initial release

Content

1	Introd	uction.		1
	1.1	Unpad	cking	2
	1.2	Under	rstand your terminal	4
		1.2.1	Terminal	4
		1.2.2	Holder(Option)	5
	1.3	Indica	tors	6
		1.3.1	LED	6
		1.3.2	Buzzer	8
		1.3.3	Vibration	8
	1.4	Кеура	d	9
	1.5	Power	r source	14
		1.5.1	Inserting or replacing battery .	15
		1.5.2	Charge the battery	18
2	Get st	arted		20
	2.1	Set up	your terminal	20
	2.2	User i	nterface	21
	2.3	Conne	ection	23
	2.3.	1 Remo	te link connection	24
	2.4	Attach	n the hand strap	27
3	Contro	ols and	settings	29
	3.1	User N	Menu	29
		3.1.1	Run Program	30
		3.1.2	Remote Link	30
		3.1.3	Scanner(HID)	31

		3.1.4	Information	32
	3.2	Systen	n Menu	33
		3.2.1	Remote Link	33
		3.2.2	Disk info	33
		3.2.3	Timer setting	34
		3.2.4	Environment	35
		3.2.5	Test	36
		3.2.6	System info	38
	3.3	Super	visor Menu	39
		3.3.1	Remote Link	40
		3.3.2	Format disk	43
		3.3.3	Setting	44
		3.3.4	Information	49
4	Applic	ations.		50
5	Troubl	eshoot	ing	51
	5.1	Hardw	vare issues	51
	5.2	Comm	nunication issues	52
	5.3	Barco	de scanning issues	53
6	Specif	ications	š	54
Αŗ	pendix	(A		58

1 Introduction


PI series is a lightweight, portable data terminal (PDT) for data capture and collection. This manual will help you to get to know PI series and utilize it well.

Features

- Scratch-resistant keypad Coated with PC (polycarbonate), the letters and numbers on the keys won't wear off between uses.
- Battery cover open detection When the switch of the battery cover is up, the system automatically saves your files and shut down.
- Large flash memory PI series offers more flash memory than the rivals on the same level. The standard is 20 MB, and the optional is 60 MB.
- Wi-Fi connectivity You can exchange data over a Wi-Fi network.(PI-1030)
- **Backup battery** The backup battery gives you additional 15 minutes to finish your job if the primary batteries wear out.

1.1 Unpacking

Make sure all of the following items are included in your package.

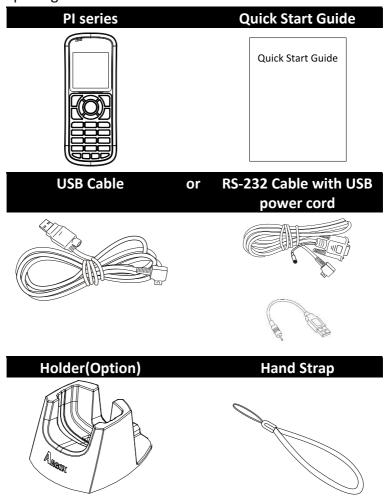

Plug and Power Supply (Option)






When you receive your terminal, open the package immediately and inspect for shipping damage. If you discover any damage, contact the shipping company and file a claim. Argox is not responsible for any damage incurred during shipping. Save all package materials for the shipping company to inspect.



Note If any item is missing, please contact your local dealer.

1.2 Understand your terminal

1.2.1 Terminal

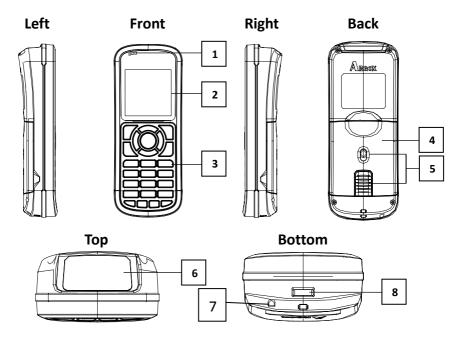

1	LED	Three LEDs.
2	LCD Display	A mono LCD.
3	Keypad	A 25-key keypad.
4	Battery Cover	The battery cover.
5	Battery Cover Switch	Open and close the battery cover.
6	Reading Window	The bar code reading beam is emitted through this window.
7	Speaker	Buzzer sound

1.2.2 Holder(Option)

The holder is used to hold your terminal in its standing position.



In the bottom of holder, make sure cable wire is installed as below.




1.3 Indicators

PI series has three LEDs and a buzzer to indicate its current status.

1.3.1 LED

Your terminal has three LEDs on the upper-left corner. They have different behavior. The table below gives information about the status they indicate.

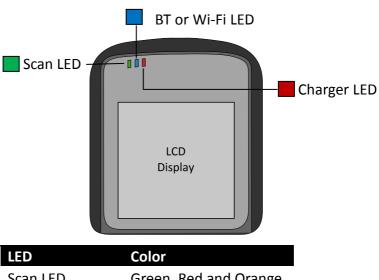

Scan LED Green, Red and Orange
BT or Wi-Fi LFD Blue

Charger LED	Red
-------------	-----

LED	Behavior	Status	Note
Scan	Solid green	User defined	Use SDK.
LED	Solid red	User defined.	Use SDK.
	Solid orange	User defined.	Use SDK.
	Flashing	Transmitting data or	Use SDK.
	green	user defined.	
	Flashing red	User defined.	Use SDK.
	Flashing	User defined.	Use SDK.
	orange		
	Off	No data transmission	Use SDK.
		or user defined.	
BT &	Solid blue	Your terminal is	
Wi-Fi		connected through	
LED		Bluetooth or Wi-Fi.	
	Flashing	Your terminal is ready	
	blue	to be connected	
		through Bluetooth or	
		Wi-Fi.	
	Off	Bluetooth or Wi-Fi is	Default
		turned off.	
Charger	Solid red	Your terminal is fully	Controlled
LED		charged or connected	by
		to a power source.	hardware.
	Flashing red	Charging.	Controlled

LED	Behavior	Status	Note
			by
			hardware.
	Off	Your terminal is not	Controlled
		connected to any	by
		power source.	hardware.

1.3.2 Buzzer

You can define the status the vibration indicates using the SDK.


Sound	Status
1 Short Beep	A key is pressed.
	A good scan.
	An error occurred.
2 Short Beep	The battery is low.
4 Short Beep	Battery is too low to turn off
	terminal.

1.3.3 Vibration

You can define the status the vibration indicates using the SDK.

Vibration	Status
Vibrate	A good scan.

1.4 Keypad

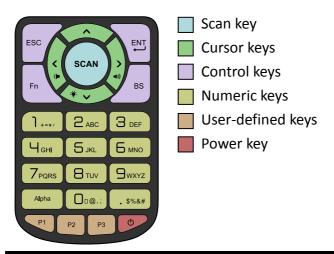

Scan key

Scan a bar code.

Cursor keys	
Up	Move the highlight bar up.
Fn+Up	Open Message Menu.
Down	Move the highlight bar down.
Fn+Down	Adjust the backlight brightness. The
	brightness repeats the sequence
	0→1→2→3.
Left	Move the highlight bar to the top.
Fn+Left	Reduce the volume.
Right	Move the highlight bar to the bottom

Cursor keys

Fn+Right Increase the volume.

Contr	ol keys	
ESC	The Escape	1. Go up one level in a menu.
	key.	2. Give up changing a setting.
		3. Exit a program.
Fn	The Function	Use with other keys. Ex:
	key.	"Fn+Down Arrow" is to adjust
		the backlight brightness. The
		function of F0 - F9 (Fn+0 - 9)
		can be defined using an SDK.
ENT	The Enter key.	1. Enter a menu.
		2. Select an option.
BS	The Backspace	1. Delete a character to the
	key.	left of the cursor.

Numeric keys

You can use the keypad to enter numbers or English characters, depending on the mode you're using.

Enter the number one.
 Enter these signs: plus (+), minus (-), star (*) and slash (/).
 Enter the number two.
 Enter the letters A, B, C.

Numer	kovs	
3	Enter the number three.	
3		
	2. Enter the letters D, E, F.	
4	1. Enter the number four.	
	2. Enter the letters G, H, I.	
5	1. Enter the number five.	
	2. Enter the letters J, K, L.	
6	1. Enter the number six.	
	2. Enter the letters M, N, O.	
7	1. Enter the number seven.	
	2. Enter the letters P, Q, R, S.	
8	1. Enter the number eight.	
	2. Enter the letters T, U, V.	
9	1. Enter the number nine.	
	2. Enter the letters W, X, Y, Z.	
0	1. Enter the number zero.	
	2. Enter these characters: space (), at (@),	
	comma (,) and semicolon (;).	
Alpha	Switch the input method between numbers,	
	uppercase and lowercase characters.	
	1. Enter a period (.).	
	2. Enter these symbols: dollar sign (\$),	
	percent sign (%), ampersand (&) and	
	number sign (#).	
	- 0 ()	

User-defined keys		
P1	User-defined key.	
P2	User-defined key.	
P3	User-defined key.	

Power key

Turn on or turn off your terminal.

Power combination key

You can use the key combinations to enter different menus or modes. Press and hold the combination of keys, until your terminal responds.

3 + 9 + Power	System Menu.
1 + 3 + 0 + Power	Supervisor Menu.
1 + 3 + Power	Force mode.
P1 + P2 + P3 + Power	BIOS reset.
SCAN + Power	Warm reset.
SCAN + Power (5 sec)	Cold reset. You need to press
	the keys for 5 seconds.

- System Menu Enter System Menu.
- **Supervisor Menu** Enter Supervisor Menu.
- Force mode It updates all firmware files and restores all system parameters to factory settings.

 This mode needs to be used with an SDK or computer software. You can use this mode when you encounter the problem that can't be resolved in any other way.
- BIOS reset it is the same as BIOS default (see Supervisor Menu). It resets all your terminal settings, including the password of Supervisor Menu.
- Warm reset It restarts your terminal without changing any settings. You can use it when your program stops responding.
- **Cold reset** It forces your terminal to restart. The data stored in the DRAM may be removed. You can use it when your terminal crashes, or when you can't turn on your terminal by pressing the Power key.

1.5 Power source

There are three ways to supply power to PI series:

- Two AA batteries. Recommended alkaline rechargeable type.
- 2. Use the USB cable with computer.
- 3. Use the power supply with the USB or RS-232 cable.

Cable Type	Charge your batteries	Supply power without batteries	Need to use with a power supply
USB	Yes	Yes	No
RS-232	No	No	Yes



Warn Do not collect data while plug the connector. It could cause damage to RS-232 and USB port function.



Note It's not necessary to use a USB cable with the power supply, but the battery charging time is shorter with it.


1.5.1 Inserting or replacing battery

When you see the battery icon shows low. You need to change new battery or charge It immediately. If there is no power, the back up battery can hold the data about 15 minutes. Therefore, always upload your important data after work or keep two AA batteries in case.




Caution Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries. Remove batteries if product is not to be used with for a long time. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. DO NOT RECHARGE DIFFERENT TYPES OF BATTERIES.


 Press and slide two release latch at the same time to open the battery cover.

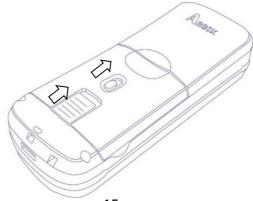


2. Inserting two batteries as indicated inside battery compartment.

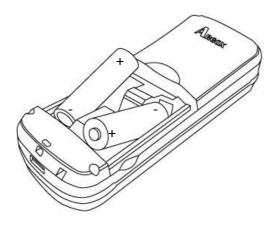

3. Close the battery cover as follow.

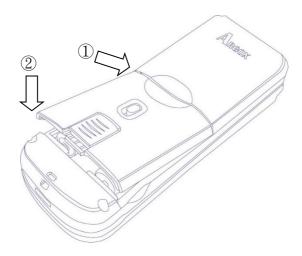

4. Make sure cover is closed and slide two latch back.

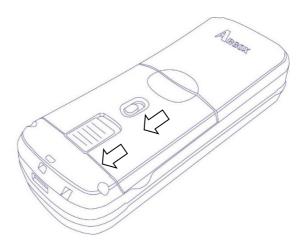

1.5.2 Charge the battery

If you're using rechargeable batteries to supply power to your terminal, you can charge them by

- (1) connecting the USB cable to your terminal and computer.
- (2) Using a battery charger to charge batteries in advance.
- (3) Connecting the USB cable to your terminal and use a power supply.

When your batteries are fully charged, the Charger LED turns to solid red.

Charging by	Full Charge Time
Power Supply	5-6 hours
USB Cable	7-8 hours



Important Before using PI series, we recommend to charge PT-10 series 1 day to make sure backup battery is fully charged.



Important To protect power source, PI series can not be powered on unless battery cover back are closed correctly.






Note The triangle mark should be face up when you want to plug connecter in to PI series.

2 Get started


This chapter provides information about how to work with your terminal and make connection to computer.

2.1 Set up your terminal

- 1. Choose one to power on your terminal
 - Open the battery cover and Install two AA batteries.
 - Connect your terminal to your computer using
 USB or RS-232 cable with adapter.
- 2. Press the Power key to turn on your terminal.

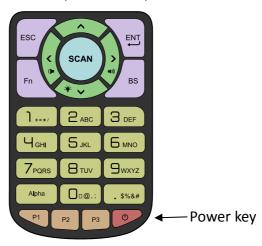

2.2 User interface

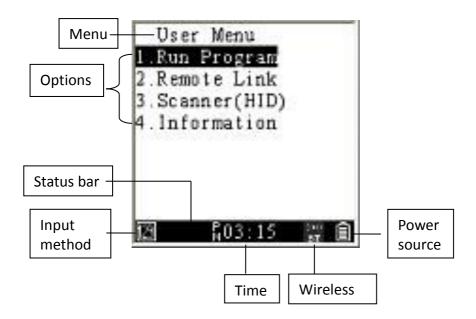

Item	Description
Menu	Current menu title
Options	Items in the menu.
Status bar	It displays the information about your
	terminal.
Input method	The way you enter data. You can enter
	numbers, lowercase or uppercase
	characters.
Time	The current time.

Item	Description
Wireless	When you open Bluetooth or Wi-Fi
communication	function, it displays an icon without
	waves. If connection is successful, the
	icon will show waves.
Power source	If your terminal is connected to a direct
	power supply (USB or RS-232), it displays
	a plug icon; if it is running on batteries, it
	displays a battery icon.

2.3 Connection

PI series have four interfaces to connect: **USB**, **RS232**, **Bluetooth** and **WI-FI**. Each one can choose two ways as below.

Remote link: It is a unique protocol from Argox development. Visit Argox website below to download application.

http://www.argox.com/content2011.php?sno=0000033

Linking port: Transmit raw data 1 Byte a time. Developer can set four interfaces to their own connection.



Important Remote link has to use Argox application, such as PhoenixVoler or Everlink from Argox.

2.3.1 Remote link connection

This section will show how to link PI series to PC with "Remote link" and enter "Message menu" to send message when the connection successful.


Use Remote link to connect PC with USB

Step 1. After link USB cable between PI series and PC, press "Power" key to open PI series.


Step 2. Move curse to "Remote Link" and press "ENT" key.



Step 3. Enter "Remote I/F Select" and Choose "USB". It will automatically go back

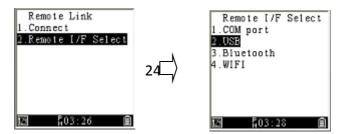

Step 4. Choose "Connect".

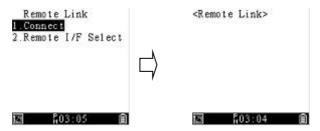

Step 5. In PhoenixVoler or Everlink, Click Comm setup will show the model number. Successfully connected to PC.

Message Menu

Everlink, ControlCenter and PI series can send message to PI series. Press "Fn"+"^" key to enter



Message Menu.

- Read priority Msg.: It shows the priority message you receive.
- Read Msg.: It shows the message you sent.
- Send Msg.:
 - ♦ To Everlink: "Send to" is 9000
 - ♦ To ControlCenter: "Send to" is 9001
 - → To otherPI series device: "Send to" default depends on SN last four number. To change ID, refer to "Equipment ID" in System menu.




Important Sending message rely on Everlink. PI series must connect to Everlink then the message will start to send and receive.

2.4 Attach the hand strap


Sometimes you may need to do something and can't hold your terminal on your hand. Or, you might accidentally drop your terminal between uses. Attach the hand strap is a useful way to resolve these issues. You can wrap the strap around your hand to secure it to your hand, or hang it on your hand to have both hands free to do other things.

To attach the hand strap, do this:

 Pinch the small loop and thread it into the two square holes under the battery cover.

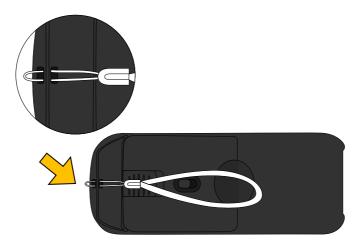

2. Thread the big loop into the small loop, and pull the big loop to tie a knot.

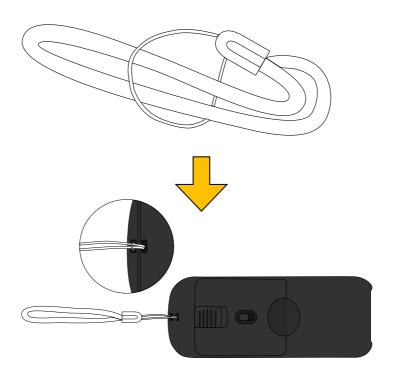



Important Use hand strap when you collect barcode in case drop accident. PI series might shut down to protect data after drop.

3 Controls and settings

PI series offers three different layer menus. **User Menu** is for general users, **System Menu** is for supervisors or managers, and **Supervisor Menu** is for system administrators or engineers. Besides, press Fn+^ can enter **Message Menu** This chapter provides information about these menus.

3.1 User Menu




User Menu includes three frequently used settings. You can use them to run your program, connect your terminal to a computer or other device, or display your terminal's information.

3.1.1 Run Program

It shows the program you download from your computer. To run a program, just select it and press **ENT**. If there's no program, it will tell you "No program file." For more information about how to connect to a computer and download programs from it, see PhoenixVoler or Everlink User guide.

3.1.2 Remote Link

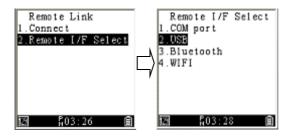

It is for you to connect your terminal with Everlink or PhoenixVoler to computer.

■ **Connect** It connects your terminal to computer after you select an interface.

Remote I/F Select It provides interfaces, including COM port, USB, Bluetooth and WI-FI.


To connect your terminal, do this:

- Select Remote Link > Remote I/F Select > COM port/USB/Bluetooth/WI-FI.
- 2. Go up one level in the menu and select **Connect**.



Note If you want to connect via Bluetooth or WI-FI, you need to enter Supervisor Menu and set up Bluetooth connection or WI-FI connection first. After completing the setting, you can connect your terminal from User Menu **Connect**.

3.1.3 Scanner(HID)

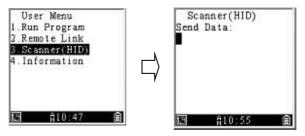

It is for you to read and upload barcode data easily.

Once you have connection to computer. Press "SCAN" key to read barcode and it will upload data. Go to CH 4 Application. see more in Everlink user guide.



Note Make sure you turn on the decode function(barcode default).

3.1.4 Information

It displays your terminal's information.

IPL The IPL version.

BOOT The boot version.

Kernal The kernel version.

Scanner The scanner's firmware version.

SN The serial number.

DefLang The display language.

3.2 System Menu


Under System Menu, you can change system settings to meet your need and run some tests to see if your terminal is working properly. Press key 3 + 9 + Power to enter system menu.

3.2.1 Remote Link



See the description in Remote Link in User Menu.


3.2.2 Disk info

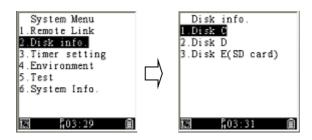

It provides the disk information, including the free, used and total disk space. By default, your terminal has two disks: C and D.


- C RAM For data memory
- D Flash For system and user's application

3.2.3 Timer setting

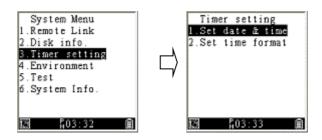

- **Set date & time** You can set date and time here.
- **Set time format** You can set the time format here. It provides the 12-hour or 24-hour clock and only display in Status Bar.

3.2.4 Environment

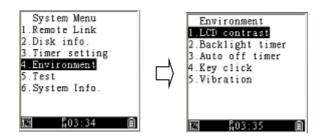


It provides settings for you to adjust different workplace or match your preference.

- LCD contrast It determines the contrast ratio. The bigger the number, the lower the contrast (the darker the screen).1~10
- Backlight timer It determines how long the backlight stays on after you press a key.1~65535. Set 0 will always on.
- Auto off timer It turns off your terminal after a certain amount of time elapsed. The unit of time is the second. If you set it 0, your terminal is always turned on.30~65535
- Always on if DC in It will always on when you plug DC power. Default is disable.

- Key click You can turn on or turn off the sound of keypad.
- **Vibration** It determines how long your terminal vibrates. The unit is 0.1 second, range is 1~255. Set 0 will turn it off.

3.2.5 Test

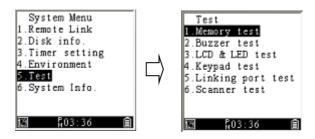

It provides various tests for you to check your terminal system.

- Memory test It checks if the memory can be written and read properly. Note that this test removes all data stored in the memory, so remember to save your files in advance.
- Buzzer test It checks if the buzzer can make sound properly. You'll hear the sound repeatedly plays from

high to low and from low to high. If the sound is played smoothly, it means the buzzer works properly, otherwise the buzzer may have some issues.

- LCD & LED test It checks if the LCD display has bad pixels.
- **Keypad test** It checks if the keypad works properly when you press it.
- Linking port test It checks if the port works properly. You need to set a port to run this test. For more information about the port setting, see the description in Setting in Supervisor Menu.


After you set a port, do this:

- 1. Select the port you want to test, and press ENT.
- 2. Your terminal will show if the test is successful or failed after the test is complete.
- Scanner test It checks if your terminal can read bar codes when you press SCAN to scan bar codes. If the scan is successful, your terminal will vibrate and display the bar code data.




Note When you do scanner test to barcode, turn on the function in **Barcode config** (Supervisor Menu).

3.2.6 System info

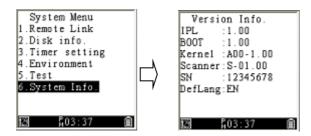

See the description in <u>Information</u> in User Menu.


3.3 Supervisor Menu

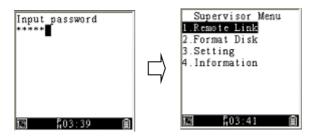

(1+3+0+PWR)Supervisor Menu provides advanced settings for you to configure. To protect the settings from being changed easily, you need to enter a password to access the menu. By default, the password is five zeros (00000).

3.3.1 Remote Link



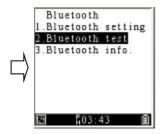

It is for you to connect your terminal with Everlink or PhoenixVoler to computer.

- **Connect** It connects your terminal to computer after you select an interface.
- Remote I/F Select It provides interfaces, including COM port, Bluetooth and WI-FI.
- Remote I/F Set It has three options:
- COM port You can select a baud here.

• Bluetooth It has three options:

- 1. Bluetooth setting:
 - Device name: Your terminal's name. By default, the name is the serial number.
 - (2) PIN code: The passkey for a Bluetooth connection. By default, the code is four zeros (0000).
 - (3) Security mode: It has two options.
 - Security: Your terminal will ask other devices to enter a PIN code when they try to connect to your terminal.
 - b. Encryption: It encrypts the connection to prevent data theft.
 - (4) Inquiry timeout: It determines how long your terminal stops searching other devices after a certain amount of time elapses.
 - (5) Max response: It determines the maximum number of connectable devices your terminal lists.
 - (6) Set peer device: It has two options.
 - Set by search: Search other devices in the neighborhood.
 - b. Set by keyin: Search another device by


entering its Bluetooth MAC address.

- 2. Bluetooth test: You can use this option to test the Bluetooth connection after your terminal connects to a device.
- Bluetooth info: It displays Bluetooth information, including the local address, device name and link address.
- WI-FI It has three options
 - 1. Setting
 - (1) WI-FI SSID:
 - a. Set by search: Search WI-FI signal in the neighborhood.
 - b. Set by keyin: Type New SSID to connect the WI-FI you prefer.
 - (2) Network: It is the same as computer network. The Default is "Enable" DHCP to auto get IP Address, Subnet Mask and Gateway. Or you can "Disable" DHCP to set your WI-FI data.
 - (3) Connect setting: Type "New IP" and "New Port" to get connection.
 - (4) System Scale: There are 3 Level to choose.

 The default is "High"

- (5) Power Saving: If Disable, WI-FI module will always awake to transmit data. Otherwise, WI-FI will automatically turn off.
- TCP Test: Test WI-FI connection, the process need to wait about 3~15 seconds. PI series will show the connect success of fail on the screen.
- 3. Information: It displays WI-FI information.
 - (1) Remote port: show the page is under remote port.
 - (2) MAC: Show MAC address after you connect.
 - (3) DHCP: The status is Enable or Disable.
 - (4) rIP: Current remote IP Address.
 - (5) rPort: Current remote Port.

3.3.2 Format disk

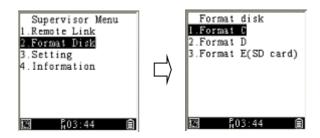

It formats a disk in your terminal. The system will ask you to confirm if you want to format, because it will remove all data stored in the disk.

- Format C Format the C disk.
- Format D Format the D disk.

3.3.3 Setting



It offers a variety of settings that you can change to meet your need.

- Equipment ID Your terminal's ID. The default ID is four zeros (0000). You can replace it with a new ID. The ID needs to be a 4-digit number.
- **BIOS Password** It is the password of Supervisor Menu. The password needs to be a 5-digit number.
- **BIOS default** It resets all your terminal settings, including the password of Supervisor Menu.

- **Environment** It provides settings for you to adjust to adapt to different workplaces or match your preference. For the first five options, see the description in Environment in System Menu.
- **Power on** It determines the screen displayed in User Menu after you turn on your terminal.
 - Resume: The system displays the last screen you visited in User Menu every time you turn on your terminal.
 - 2. Reset: The system displays the default screen in User Menu every time you turn on your terminal.
- **Status bar** You can choose if you want to display the status bar.
- Scanner It provides several settings for the scanning functionality.
- Reading test See the description in <u>Test</u> in System Menu.
- Indication It has two options:
 - 1. LED: You can turn on or turn off the LED.
 - 2. Beep: You can turn on or turn off beeps.
- Code ID Code ID is an identifier for a bar code. It has two options:

- Transmission: It has two modes: Proprietary ID or AIM ID. You can choose either of them.
 Proprietary ID is defined by Argox. AIM ID is defined by the AIM organization.
- 2. Position: You can insert the code ID before or after the bar code data.
- **Invert Image** When you turn on this feature, you can scan both regular and inverted bar codes.
- **Preamble** Add a character or characters before a bar code.
- **Postamble** Add a character or characters after a bar code.
- **Barcode config** It provides several settings for each bar code type. Change them to meet your need.

The list below shows the bar code types system default setting.

Bar Code Type	ON	OFF
1. Code-11		\bigcirc
2. Code-39	0	
3. Code-93		\bigcirc
4. Code-128	0	
5. EAN-8	0	
6. EAN-13	0	
7. UPC-A		

8. UPC-E		
9. Industrial 25		\bigcirc
10. Interleaved 25	\circ	
11. Standard 25		\bigcirc
12. MSI-Plessey		\bigcirc
13. UK-Plessey		\bigcirc
14. RSS 14		\bigcirc
15. RSS Limited		\bigcirc
16. RSS Expanded		\bigcirc
17. CODABAR		\bigcirc
18. Telepen		\bigcirc
19. Matrix 2 of 5		\bigcirc
20. China Post		\bigcirc
21. Pharmacode		\bigcirc

- Language You can change the language for the system to display items in the user interface. It has two options: English, TC (Traditional Chinese) and SC(Simple Chinese).
- **Linking port** You can decide which port you want to use and configure its settings. To set a port, do this:
 - 1. In **Port IF select**, select a port and its interface.
 - 2. In **Port IF setup**, select the port you choose in the previous step, and configure the settings of its


interface.

- Port IF select It has four ports. Select one of them and choose its interface. You can choose COM, USB, Bluetooth and WI-FI. If you don't want to use interface, choose None.
- Port IF setup It provides the settings of COM,
 Bluetooth and WI-FI. For more information about the settings, see Remote Link in Supervisor Menu.
- Port info It displays the port information. Press Up
 Arrow and Down Arrow to check different ports.



重要 **Linking port** is for development usage and transmit raw data. See more information, go to CH 2.3 <u>Connection</u>

3.3.4 Information

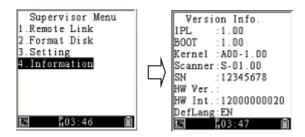

It displays your terminal's information.

IPL The IPL version.

BOOT The boot version.

Kernal The kernel version.

Scanner The scanner's firmware version.

SN The serial number.

HW Ver. The PCBA (Printed Circuit Board

Assembly) version.

HW Int. The hardware version.

DefLang The display language.

4 Applications

Argox provides multiple applications for communication and developments as below:

Communication

PhoenixVoler Upload and Download firmware or

application easily. Recommend developer.

Everlink Manage multiple PI series with files

transmission, message sending and history

data function.

Control center Remote-end of manage program can link

multiple Everlink and provide Cloud

operation.

Development application

Skywalker User friendly software development kit

Go to Argox website to get more applications and user guide

http://www.argox.com/content2011.php?sno=0000033



Note PI Series accept ".bas" and ".bin" file from Basic and C compiler.

5 Troubleshooting

5.1 Hardware issues

Speaker is not working or volume is too low.

- Make sure the speaker hole is not blocked.
- Test is in the system menu, use <u>Test</u> to check speaker.

Keypad does not response.

- Test is in the system menu, use <u>Test</u> to check keypad.
- The system might be crush. Use Scan + Power key to warm reset or cold reset (hold 5 seconds).

My terminal keeps turning itself off or can not open.

- If you're using batteries, check them and see if they need to be charged.
- If your terminal is connected using USB or RS-232 cable, make sure the cable is tightly plugged.
- The duration of Auto off Timer is too short. Set it a longer duration from Auto off timer in Environment

5.2 Communication issues

Receive or transmit problem on USB

- Check USB connector is plugged correctly.
- Check Remote Link set is USB and select the right PI series name on computer.
- Restart PI series and unplug the USB and try again.

Receive or transmit problem on RS-232

- Check RS-232 connector is plugged correctly.
- Check Remote Link set is COM port and select the same port on computer.
- Restart PI series and unplug the RS-232 and try again.

Receive or transmit problem on Bluetooth

- Check Remote Link set is Bluetooth port and Bluetooth setting is correct.
- Be sure PI series is in the Bluetooth range

5.3 Barcode scanning issues

Barcode can not be read

- Change the angle between the bar code and the terminal.
- Change the distance between the bar code and the terminal.
- Clean the scanning window slightly of the terminal(make sure without scratch).
- Enabled the bar code symbology in supervisor menu >
 3.Setting > 5.Scanner > 7.Barcode config.

6 Specifications

General Characteristics		
OS	Argox Proprietary	
СРИ	ARM926EJ-S	
RAM	16 / 32 MB DRAM	
ROM	20 / 60 MB Flash	
Display	White gray mono STN LCD 160*160	
Indicator	LED Blue, Green and Red; Beeper;	
	Vibration Motor	
Keypad	25 Alpha-Numeric keys (Including 10	
	function keys, 3 programmable hot	
	keys)	
Accessory	Holder (Standard), Power Supply	
Dimensions	145.0mm (L) x 55.0mm (W) x 26.0mm	
	(H)	
Weight	230g with battery	

Scanner			
	PI-10x0	PI-11x0	PI-12x0
			(coming soon)
Scanner	CCD	Laser	2D Area imager
system			
Resolution	5 mil at PCS	4 mil	5 mil (optional
	90%		3 mil)
Depth of field	350mm	254 mm (13	390 mm (13
	(Code 39, 13	mil)	mil)
	mil, PCS		
	90%)		
Scanning rate	200 scan/sec	100 scan/sec	
Decode	1D barcode: C	ode-11 · Code	-39 、Code-93 、
Decode capability			-39 、Code-93 、 UPC-A 、UPC-E 、
	Code-128 \ EA	N-8 • EAN-13 •	
	Code-128 \ EA	N-8 • EAN-13 •	UPC-A、UPC-E、
	Code-128 \ EA Industrial 25 \ MSI-Plessey \	N-8 · EAN-13 · Interleaved 25 UK-Plessey · R	UPC-A、UPC-E、
	Code-128 \ EA Industrial 25 \ MSI-Plessey \ Limited \ RSS I	N-8 · EAN-13 · Interleaved 25 UK-Plessey · R	UPC-A \ UPC-E \ S \ Standard 25 \ SS 14 \ RSS OABAR \ Telepen \
	Code-128 \ EA Industrial 25 \ MSI-Plessey \ Limited \ RSS I	NN-8 · EAN-13 · Interleaved 25 UK-Plessey · R Expanded · COD	UPC-A \ UPC-E \ S \ Standard 25 \ SS 14 \ RSS OABAR \ Telepen \
	Code-128 \ EA Industrial 25 \ MSI-Plessey \ Limited \ RSS I	NN-8 · EAN-13 · Interleaved 25 UK-Plessey · R Expanded · COD	UPC-A \ UPC-E \ S \ Standard 25 \ SS 14 \ RSS OABAR \ Telepen \ Charmacode
	Code-128 \ EA Industrial 25 \ MSI-Plessey \ Limited \ RSS I	NN-8 · EAN-13 · Interleaved 25 UK-Plessey · R Expanded · COD	UPC-A \ UPC-E \ S \ Standard 25 \ SS 14 \ RSS OABAR \ Telepen \ Pharmacode 2D bar code:

Communication

Communication			
	PI-1x00	PI-1x10	PI-1x30
WPAN		Bluetooth	Bluetooth
		Class2,	Class2,
		BT2.1+EDR	BT2.1+EDR
WLAN			Wi-Fi
			802.11b/g/n
I/O Interface	USB 2.0 /	USB 2.0 /	USB 2.0 /
	RS-232	RS-232	RS-232

Expansion

Storage Micro SD (up to 16 GB)

Devel	oping	Tools

Software Software Development Kit (SDK),

Skywalker (Proprietary application

software generator)

Programming C language, BASIC language

Language

Power

Battery 2 AA Alkaline or NIMH Battery (charged by

USB or optional power supply)

Rating 5Vdc 2A

Physical and E	nvironment
Operating	-10°C ~60°C /14F ~140F
Temperature	
Storage	-20°C ~ 70°C /-4F ~ 158F
Temperature	
Humidity	1) Operating: Non-condensed 10 ~ 90%
	2) Storage: Non-condensed 5 ~ 95%
Impact	1) Terminal 1.5M/5ft, Holder 0.9M / (4
Resistance	drops per 6 sides) 2) IP54
Electrostatic	1) +/- 15 KV air discharge 2) +/- 8 KV
Discharge	direct discharge
EMC	FCC, CE
Regulation	

Appendix A

Skywalker Reader Default (*)

Command1	Command2	Option/Limitation
	LED indication	Disable
la dia atia a		Enable *
Indication	Buzzer indication	Disable
		Enable *
	Preamble	Disable *
	transmission	Enable
	Postamble	Disable *
	transmission	Enable
	Code ID position	Before code data *
		After code data
	Code ID transmission	Disable *
Transmission		Proprietary ID
Transmission		AIM ID
	Code length	Disable *
	transmission	Enable
	Code name	Disable *
	transmission	Enable
		Disable *
	Case conversion	Upper case
		Lower case

		0 0
		0 ~ 9
Scan	Double confirm	0 *
		0 ~ 99
	Global min. code	4 *
	length	
		0 ~ 99
	Global max. code	63 *
	length	
		Disable *
	Inverted image scan	Enable
		0 *
String setting	Prefix characters	0x00 ~ 0xff ASCII
	setting	code
		12 characters.
		0 *
	Suffix characters	0x00 ~ 0xff ASCII
	setting	code
		12 characters.
		0 *
	Preamble characters	0x00 ~ 0xff ASCII
	settings	code
		12 characters.
		0 *
	Postamble characters	0x00 ~ 0xff ASCII
	settings	code
		12 characters.

		Disable *
Code 11	Read	Enable
Oode 11	Redu	Disable/Disable
		Disable/Disable
	Check-sum transmit /verify	Disable/One digit *
		Disable/Two digits
		Enable/One digit
		Enable/Two digits
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<0>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
Code 39	Read	Disable
		Enable *
	Check-sum transmit	Disable/Disable *
	/verify	Disable/Enable
		Enable /Enable
	Max. code length	0 ~ 64

		0 *
	Min. code length	0 ~ 64
		1 *
	Truncate leading	0 ~ 20
		0 *
	Truncate ending	0 ~ 15
		0 *
		<*>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Standard *
	Format	Full ASCII
		Disable *
	Start/stop	Enable
	transmission	
		Disable *
Code 93	Read	Enable
		Disable/Disable
	Check-sum transmit /verify	Disable/Enable *
	/ Verify	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15

	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<&>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable
Code 128	Read	Enable *
		Disable/Disable
	Check-sum transmit /verify	Disable/Enable *
	, , , , , ,	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	1 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<#>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Standard *
	Format	UCC.EAN 128
		<#>

	UCC/EAN 128 ID	0x00 ~ 0xff ASCII
	setting	code(1 bytes)
		0x1D *
	Concatenation code	0x00 ~ 0xff ASCII
		code(1 bytes)
Codabar		Disable *
	Read	Enable
		Disable/Disable *
	Check-sum transmit /verify	Disable/Enable
	/ voiling	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<%>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		ABCD/ABCD *
	Start/stop type	abcd/abcd
		ABCD/TN*E
		abcd/tn*e

		Disable *
	Start/stop	Enable
	transmission	
		Disable
EAN 8	Read	Enable *
		Disable
	Check-sum	Enable *
	transmission	
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<ff></ff>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		None *
	Supplement digits	2 digits
		5 digits
		2, 5 digits
		UCC/EAN 128
		2, UCC/EAN 128
		5, UCC/EAN 128
		All
		None *
	Truncation/expansion	Truncate leading
		zero

		Expand to EAN 13
		Disable *
	Expansion	Enable
		Disable
EAN 13	Read	Enable *
		Disable
	Check-sum	Enable *
	transmission	
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<f></f>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		None *
	Supplement digits	2 digits
		5 digits
		2, 5 digits
		UCC/EAN 128
		2, UCC/EAN 128
		5, UCC/EAN 128
		All
		Disable *
	ISBN/ISSN	Enable
	conversion	

		Disable *
Industrial 2 of	Read	Enable
5		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<i>></i>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
	Read	Disable
Interleaved 2		Enable *
of 5		Disable/Disable *
	Check-sum transmit /verify	Disable/Enable
	,,,,,,	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15

	Truncate ending	0 *
		<i>></i>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
Standard 2 of	Read	Enable
5		Disable/Disable *
	Check-sum transmit /verify	Disable/Enable
	/voilly	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<i>>i></i>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
MSI Plessey	Read	Enable
		N/disable *
	Check-sum transmit /verify	N/MOD 10

		N/Mod 10,10
		N/mod 11,10
		Y/ Mod10
		Y/ Mod 10,10
		Y/ Mod 11/10
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<@>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
UK Plessey	Read	Enable
		Disable/Disable
	Check-sum transmit /verify	Disable/Enable *
	/verify	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64

	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<@>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
Telepen	Read	Enable
		Disable/Disable *
	Check-sum transmit /verify	Disable/Enable
	, , , , , ,	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<\$>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Numeric *

	Format	Full ASCII
		Disable
UPCA	Read	Enable *
		Disable
	Check-sum	Enable *
	transmission	
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<a>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		None *
	Supplement digits	2 digits
		5 digtis
		2, 5 digits
		UCC/EAN 128
		2, UCC/EAN 128
		5, UCC/EAN 128
		All
		None
	Truncate/expansion	Truncate leading
		zero *
		Expand to EAN 13
		Disable

UPCE	Read	Enable *
		Disable
	Check-sum	Enable *
	transmission	
		0 ~ 15
	Truncate ending	0 *
		<e></e>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		None *
	Supplement digits	2 digits
		5 digits
		2, 5 digits
		UCC/EAN 128
		2, UCC/EAN 128
		5, UCC/EAN 128
		All
		None *
	Truncate/expansion	Truncate leading
		zero
		Expand to EAN 13
		Expand to UPCA
		Disable *
	Expansion	Enable
		Disable *
	UPCE-1	Enable

		Disable *
Matrix 25	Read	Enable
		Disable/Disable *
	Check-sum transmit /verify	Disable/Enable
	, voiny	Enable /Enable
		0 ~ 64
	Max. code length	0 *
		0 ~ 64
	Min. code length	0 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
China post	Read	Enable
		0 ~ 64
	Max. code length	11 *
		0 ~ 64
	Min. code length	11 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15

	Truncate ending	0 *
		<t></t>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
RSS 14	Read	Enable
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<r4></r4>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
	UCC/EAN 128	Enable
	emulation	
		Disable *
RSS Limited	Read	Enable
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<rl></rl>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *

	UCC/EAN 128	Enable
	emulation	
		Disable *
RSS	Read	Enable
Expanded		0 ~ 99
	Max. code length	99 *
		0 ~ 99
	Min. code length	1 *
		0 ~ 15
	Truncate leading	0 *
		0 ~ 15
	Truncate ending	0 *
		<rx></rx>
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
	UCC/EAN 128	Enable
	emulation	
		Disable *
Italian	Read	Enable
Pharmacode		0 ~ 64
39	Max. code length	12 *
		0 ~ 64
	Min. code length	9 *
		0 ~ 15
	Truncate leading	0 *

		0 ~ 15
	Truncate ending	0 *
		<
	Code ID setting	0x00 ~ 0xff ASCII
		code(1 or 2 bytes)
		Disable *
	Leading "A"	Enable