

## Safety Instructions and Attentions

**First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:**

1. Before use, please read and understand these instructions and attentions.
2. Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
3. This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
6. If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
7. This product is only suitable for use in -10 C to 40 C operating environment and normal humidity environment.
8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use.
9. During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.
12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.

13. This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the lamp or let liquid flow into the lamp to avoid accidents.
14. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
15. Before storing, make sure that the equipment has cooled down completely. For storage, unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.
16. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
17. Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
18. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
19. Please take off the protective cover before using.
20. This product complies with ROHS, CE, KC, PSE and FCC certification, please refer to the relevant national standards for use and operation.
21. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
22. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
23. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
24. One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
25. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
26. Machine failures caused by non-standard operation are not covered by the warranty.

**keep these instructions!**

SAVE THESE INSTRUCTIONS

## Foreword

Thank you for purchasing!

Godox M200Bi/M300Bi is a LED Light product with superior performance. It has a separation design of light body and controller, wide color temperature range, high brightness, low consumption, high power, ultra-high CRI and various dimming curves functions, quite suitable for large photo studios, broadcast studios, outdoor or large-scale field scenes.

### Features:


- Strong power to create bright light output.
- 0%-100% stepless brightness adjustment controls the brightness in subtle scenes.
- Wide color temperature range from 2800K-6500K
- 4 dimming curves: linear, S-curve, exponential, and logarithmic.
- Bowens mount is perfectly compatible with more optical accessories.
- Various professional control methods: Bluetooth control/DMX512 remote control/2.4G wireless control.
- Super high color rendering index: CRI≥96, TLCI≥97
- 21 simulated light effects: flash, lightning, TV, broken bulb, candle, fire, firework, etc.
- Two power supply methods: AC power supply (100V~240V) and V-mount battery power supply (14.8V or 26V).
- The side with yellow battery removal button supports unilateral power supply.
- 2.4 inches TFT panel, 4 buttons, 1 knob, clear UI interface.

## Warning

- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Keep out of reach of children.
- ⚠ As this product do not have waterproof function, please take measures of waterproof in rainy or damp environment.
- ⚠ Do not leave or store the product if the ambient temperature reads over 40°C.
- ⚠ Do not use the product in the presence of flammable gases, chemicals and other similar materials.
- ⚠ CAUTION: Hot parts! When the product is always on and flickering, please do not touch the high temperature part of the LED head.
- ⚠ When replacing product accessories, please turn off the LED light and perform a cold cut.
- ⚠ The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.
- ⚠ The lamp shall be changed if it has become damaged or thermally deformed.
- ⚠ The luminaire is intended for professional use only.


## Name of Body

### Light Body

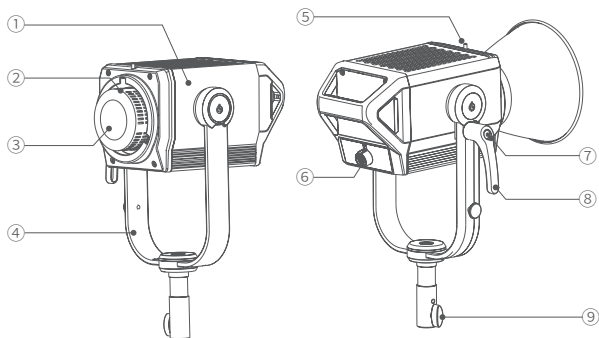


- |                            |                        |                                       |
|----------------------------|------------------------|---------------------------------------|
| 1. Light Body Screen Print | 4. Metal U-bracket     | 7. Handle Direction Adjustment Button |
| 2. Bowsen Mount            | 5. Mount Fixing Pusher | 8. Locking handle                     |
| 3. LED Bead                | 6. DC INPUT Port       | 9. Sleeve Knob                        |

### Controller

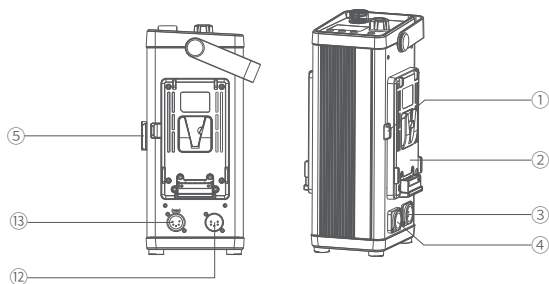


- |    |   |
|----|---|
| 5  | 1 |
| 13 | 2 |
| 12 | 3 |
|    | 4 |

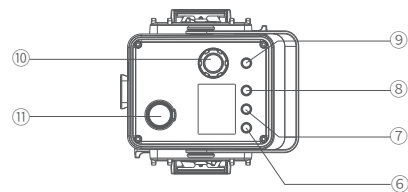


- |                                  |                         |
|----------------------------------|-------------------------|
| 1. Black Battery Removal Button  | 7.  /FX Button          |
| 2. V-mount Battery Box           | 8. Menu Button          |
| 3. AC INPUT Port                 | 9. Power Switch Button  |
| 4. 48V DC Port                   | 10. SET Adjustment Knob |
| 5. Yellow Battery Removal Button | 11. DC OUTPUT Port      |
| 6. Fan Switch Button             | 12. DMX IN XLR Port     |
|                                  | 13. DMX OUT XLR Port    |

### Remote Control (Separately Sold Accessory)

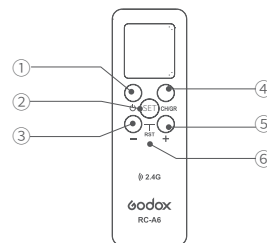


- |                        |                    |  |
|------------------------|--------------------|--|
| 1. Power Switch Button | 4. CH/GR Button    | 6. RST- Reset Mark(Press Reduction Button and Increase Button simultaneously to reset) |
| 2. SET Setting Button  | 5. Increase Button |  |
| 3. Reduction Button    |                    |  |

## What's in the Box (M200Bi/M300Bi)

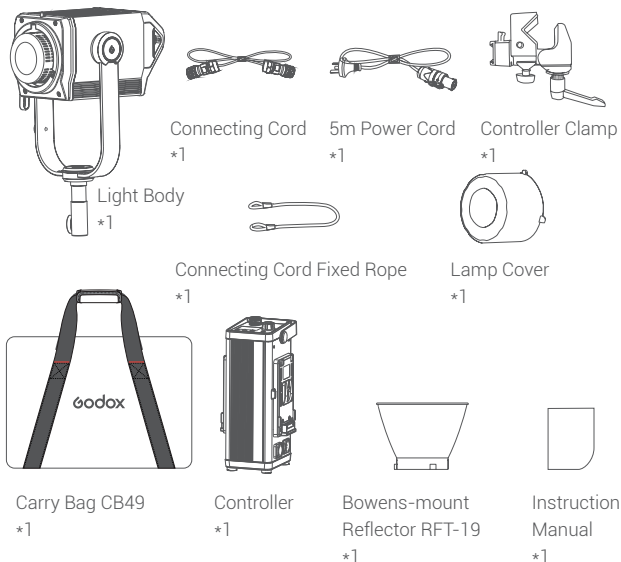

## Separately Sold Accessories


Better shooting effects and using experience matched with following accessories: Fresnel Attachment for COB LED lights, RC-A6 Remote Control, Safety Wire Rope and SpotLight Attachment.

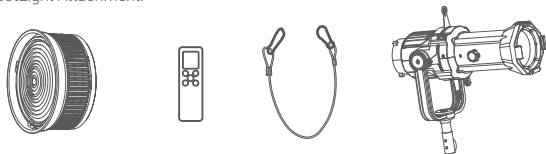

## Installation and Disassembly Guide

### 1. Connect the Controller and Light Body

Press and hold the spring latch button of the connecting cord, insert the connecting cord into the DC INPUT Port of the light body, insert the other end of the connecting cord into the DC OUTPUT Port of the controller to complete the connection.

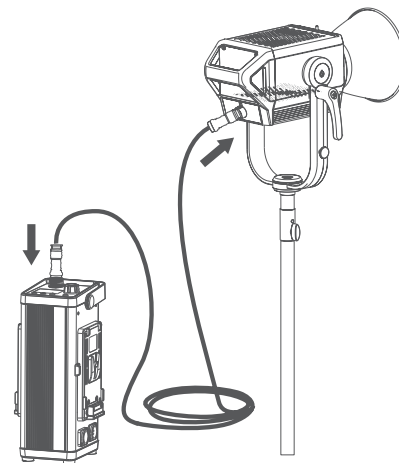


### 2. Mount on the tripod

Adjust the light body to a proper angle, rotate the screw of sleeve knob to install the light body on the tripod, then rotate the screw of sleeve knob to fix the light body on the tripod.

The inclination angle of the light body could be adjusted by loosening the bracket angle adjustment handle and then screwing down the handle afterwards.

**Note:** The tripod belongs to separately sold accessories.


**Tips:** Press the handle direction adjustment button to adjust the handle by 360°.

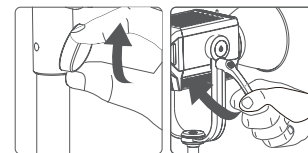

### 3. Mount on the light stand

Loosen the handle of the controller clamp, then insert the light stand and rotate the handle to tighten. Finally, insert the V port of the controller into the clamp slot.

**Tip:** Press and hold the mount fixing pusher can easily remove the controller.

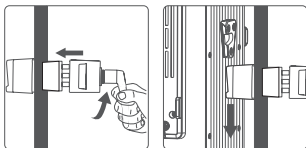


### 4. Installation and disassembly the lamp cover

**Installation:** Press the Mount Fixing pusher top-down, put the lamp cover on BOWENS Mount, and rotate clockwise to tighten it.

**Disassembly:** Press the Mount Fixing pusher top-down, then rotate counter-clockwise to remove it.


**Note:** Make sure to remove the lamp cover before use to avoid overheating damage. Put on the lamp cover to protect the lamp when not in use.

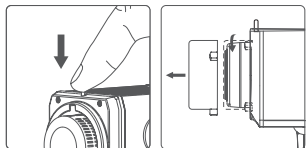

### 5. Installation and disassembly the standard reflector


**Installation:** Press the Mount Fixing pusher top-down, put the reflector on BOWENS Mount, and rotate clockwise to tighten it.

**Disassembly:** Press the Mount Fixing pusher top-down, then rotate counter-clockwise to remove it.

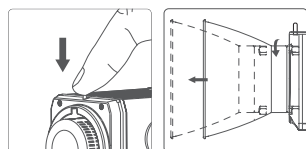

### Connect to DMX Controller


The Connection operation diagram of Controller and DMX Controller is as follows:

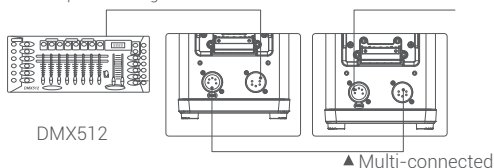

31


### Power Supply

#### 1. AC Power Supply

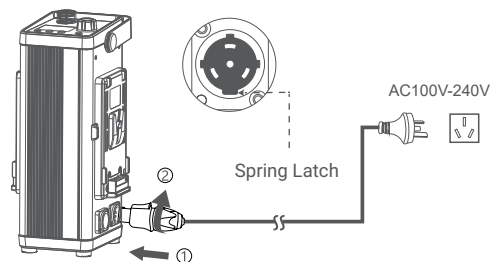

**Note:** Please press the latch button when installing or disassembling the power cord and connecting cord.


#### 2.V-mount battery power supply

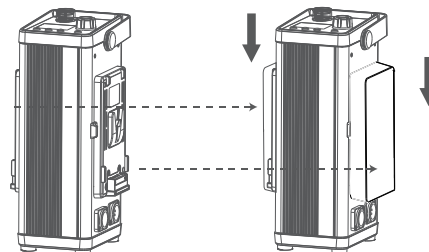

**Note:** The light can be supplied by 14.8V or 26V V-mount battery. Only the side with yellow battery removal button supports unilateral charging, one with. When it is powered by two batteries and one of which is low, the device still can't work normally even if the other one is full. The corresponding battery icon will blink in low battery mode. It is recommended to check whether both batteries have sufficient power when using two batteries.

32


## Display Screen

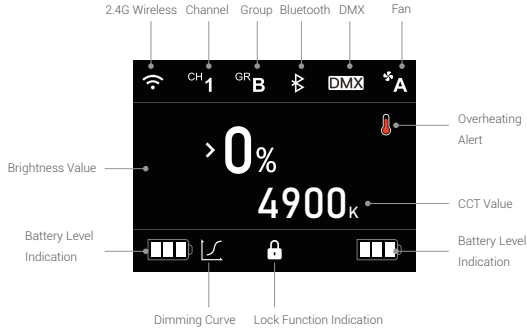

## Controller Operation Instruction


### 1. Turn On/Off

Press the controller <⏻> Button for 1 second after connecting to the power supply to turn on or off.

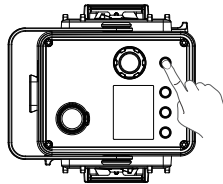


### 2. Brightness Adjustment

Turn the SET adjustment knob on the main interface to adjust brightness from 0% to 100%, with an increment of 1% in each level. Rotate clockwise to increase brightness, and counterclockwise to decrease brightness. The brightness will increase or decrease by 1% unit in normal rotation speed; and increase or decrease by 10% unit in rapid rotation speed.

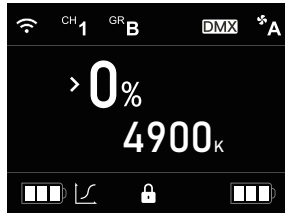

### 3. CCT Adjustment

Short press the SET adjustment knob on the main interface to make the arrow aimed at CCT value, then turn it to adjust CCT from 2800K to 6500K, with the increase or decrease of 100K in normal speed and 500K in fast speed.

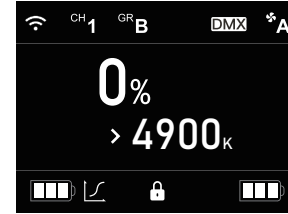


### 4. Menu Setting

Short press <MENU> Menu Button to enter the menu interface, displayed in order with Wireless, Bluetooth, DMX, Fan, Dimmer, Screen Bright, Language, Reset, Version & Upgrade.

Turn and short press the SET adjustment knob on the menu interface to select and enter the corresponding setting options interface.

#### 4.1 Wireless


The Wireless interface is displayed in order with Wireless Switch, Channel, Group and ID. Short press & turn the SET adjustment knob to complete the settings of Wireless Switch, Channel, Group and ID.

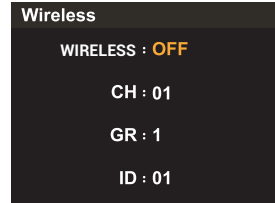

#### 4.2 Bluetooth

The Bluetooth interface is displayed in order with Bluetooth Switch, Reset and MAC Code.

Short press & turn the SET adjustment knob to complete the settings of Bluetooth Switch and Bluetooth Reset.

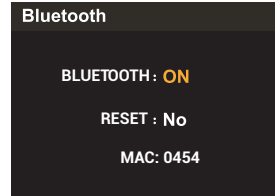


For more smartphone APP operations, please open the "help" in "GodoxLight"APP to gain detailed guidance.



**Note:** the APP can be used directly on the firstly installed device (smartphone or tablet). When changing to other mobile device, the light shall be reset before the normal usage of APP.

### 4.3 DMX

The DMX Setting interface is displayed with Address. Turn the SET adjustment knob to choose address from OFF or 1-512, the light will be in DMX OFF or ON mode respectively. Afterwards, short press the SET adjustment knob to return to the previous menu interface.

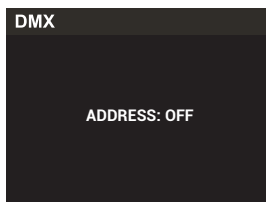


### DMX Practical Form

Address Code	Operation Mode	CCT	FX	Note
n(Mode)		0-51	52-255	
n+1		DMX*(100/255) Integer 0-100% Brightness Adjustment	DMX*(100/255) Integer 0-100% Brightness Adjustment	
n+2		CCT=28+DMX*(Total CCT/255) CCT 2800K-6500K	DMX*(Total FX/255)	1. For example: Total FX 8, DMX=160, FX No.=160*8/255=5
n+3			0-85: FX Level I 86-171: FX Level II 172-255: FX Level III	
n+4				
n+5				

### 4.4 Fan


Turn the SET adjustment knob on the Fan interface to choose from AUTO, OFF, LOW, HIGH modes.

**Note:** Enter mute mode when turning off the fan. Short press the fan switch button to turn on or turn off the fan.

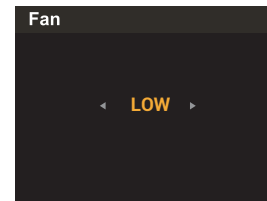


### 4.5 Dimmer

Turn the SET adjustment knob on the Dimmer interface to choose linear/S-curve/exponential/logarithmic dimming curve.

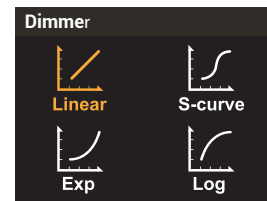


### 4.6 Screen Bright

Turn the SET adjustment knob on the Screen Bright interface to choose 1, 2, 3 levels of screen brightness.

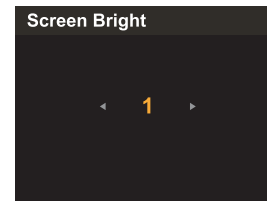


### 4.7 Language

Turn the SET adjustment knob on the Language interface to choose English or Simplified Chinese.

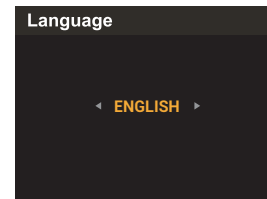

#### 4.8 Reset

Turn the SET adjustment knob on the Reset interface to choose "Yes" or "No" and short press to confirm. If you choose "Yes", the system will initiate resetting program and resetting progress bar is displayed on the screen, after which it will return to the main interface.

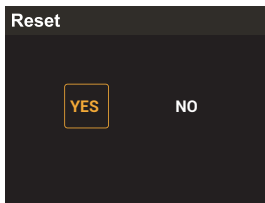

#### 4.9 Version & Upgrade


The Version Code displayed on the Version & Upgrade interface is the firmware version of the product.




### 5. Light Effect Setting

Short press < ⏏/FX > button to enter FX Light Effect interface, turn the SET adjustment knob to choose among 21 effects: flash, lightning, broken bulb, TV, candle, fire, firework, etc, short press again to exit FX mode.

**Note:** Short press the SET adjustment knob to change the rate and adjust brightness after choosing one of the above Light Effects.

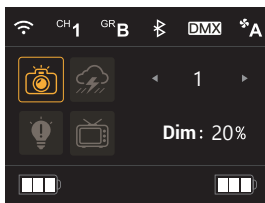

Flash Mode

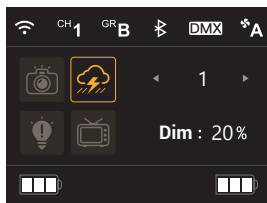


Lightning Mode




Broken Bulb Mode




TV Mode

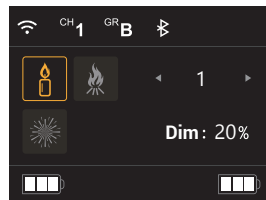

Candle Mode

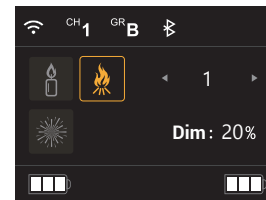

Fire Mode

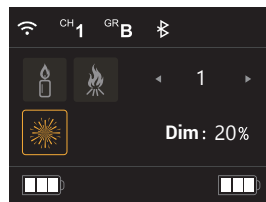


Firework Mode

**Tip:** Long press the < ⏏/FX > Button for 3 seconds to lock/unlock the panel.

#### Connecting Cord Issue


When the connecting cord is not correctly connected to the light or controller, a separated icon of connecting cord and device is displayed on the panel. Please check the connecting ports of the controller and light.



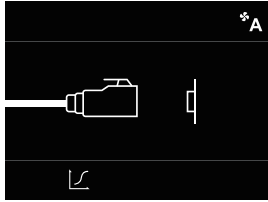

## Switch from AC Power Supply to V-Mount Battery Power Supply

Unplug the power cord and install V-mount battery then turn on the product.

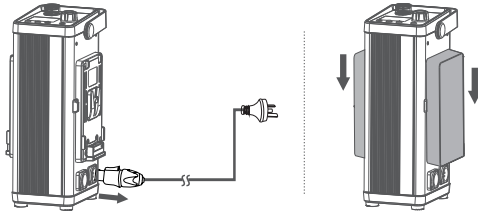

**Note:** If you install the V-mount battery before unplugging the power cord, and the brightness value is set higher than the maximum brightness that the battery can be turned on, then you switch to V-mount battery power supply by unplugging the power cord, the light and the controller will automatically power off. The machine can only resume normal operation after reboot.

## Maximum Brightness of M200Bi in Different States

**CCT mode:** Maximum Brightness (%) in Auto Cooling Mode or High-Speed Cooling Mode when supplied by V-mount battery

V-mount battery	linear	S-curve	exponential	logarithmic
14.8V(single)	40%	42%	70%	10%
14.8V(double)	80%	55%	90%	30%
26V(single)	80%	55%	90%	30%
14.8V+26V	100%	100%	100%	100%
26V(double)	100%	100%	100%	100%

**CCT mode:** Maximum Brightness (%) in Fan Off Mode when supplied by V-mount battery

V-mount battery	linear	S-curve	exponential	logarithmic
14.8V(single)	20%	35%	55%	6%
14.8V(double)	20%	35%	55%	6%
26V(single)	20%	35%	55%	6%
14.8V+26V	20%	35%	55%	6%
26V(double)	20%	35%	55%	6%

**CCT mode:** Maximum Brightness (%) in Low-Speed Cooling Mode when supplied by V-mount battery

V-mount battery	linear	S-curve	exponential	logarithmic
14.8V(single)	40%	42%	70%	10%
14.8V(double)	60%	48%	80%	18%
26V(single)	60%	48%	80%	18%
14.8V+26V	60%	48%	80%	18%
26V(double)	60%	48%	80%	18%

**CCT mode:** Maximum Brightness (%) in different Fan Mode when supplied by AC power

Fan Mode	linear	S-curve	exponential	logarithmic
Auto Cooling	100%	100%	100%	100%
Off	20%	35%	55%	6%
Low-Speed Cooling	60%	48%	80%	18%
High-Speed Cooling	100%	100%	100%	100%

**FX mode:** Maximum Brightness (%) in different Fan Mode when supplied by AC power

Auto Cooling	100%
Off	20%
Low-Speed Cooling	60%
High-Speed Cooling	100%

**FX mode:** Maximum Brightness (%) in different Fan Mode when supplied by V-mount battery

V-mount battery	Auto Cooling	Off	Low-Speed Cooling	High-Speed Cooling
14.8V(single)	40%	20%	40%	40%
14.8V(double)	80%	20%	60%	80%
26V(single)	80%	20%	60%	80%
14.8V+26V	100%	20%	60%	100%
26V(double)	100%	20%	60%	100%

## Maximum Brightness of M300Bi in Different States

**CCT mode:** Maximum Brightness (%) in Auto Cooling Mode or High-Speed Cooling Mode when supplied by V-mount battery

V-mount battery	linear	S-curve	exponential	logarithmic
14.8V(single)	30%	40%	65%	8%
14.8V(double)	60%	48%	80%	20%
26V(single)	60%	48%	80%	20%
14.8V+26V	90%	65%	95%	50%
26V(double)	100%	100%	100%	100%

**CCT mode:** Maximum Brightness (%) in Fan Off Mode when supplied by V-mount battery

V-mount battery	linear	S-curve	exponential	logarithmic
14.8V(single)	25%	38%	60%	7%
14.8V(double)	25%	38%	60%	7%
26V(single)	25%	38%	60%	7%
14.8V+26V	25%	38%	60%	7%
26V(double)	25%	38%	60%	7%

**CCT mode:** Maximum Brightness (%) in Low-Speed Cooling Mode when supplied by V-mount battery

V-mount battery	linear	S-curve	exponential	logarithmic
14.8V(single)	30%	40%	65%	8%
14.8V(double)	60%	48%	80%	20%
26V(single)	60%	48%	80%	20%
14.8V+26V	60%	48%	80%	20%
26V(double)	60%	48%	80%	20%

**CCT mode:** Maximum Brightness (%) in different Fan Mode when supplied by AC power

Fan Mode	linear	S-curve	exponential	logarithmic
Auto Cooling	100%	100%	100%	100%
Off	25%	38%	60%	7%
Low-Speed Cooling	60%	48%	80%	20%
High-Speed Cooling	100%	100%	100%	100%

**FX mode:** Maximum Brightness (%) in different Fan Mode when supplied by AC power

Auto Cooling	100%
Off	25%
Low-Speed Cooling	60%
High-Speed Cooling	100%

**FX mode:** Maximum Brightness (%) in different Fan Mode when supplied by V-mount battery

V-mount battery	Auto Cooling	Off	Low-Speed Cooling	High-Speed Cooling
14.8V(single)	30%	25%	30%	30%
14.8V(double)	60%	25%	60%	60%
26V(single)	60%	25%	60%	60%
14.8V+26V	90%	25%	60%	90%
26V(double)	100%	25%	60%	100%

**Note:** The dimming curve is not adjustable in FX mode, it is linear in default. The above data is based on 26V 270Wh 10.5Ah battery and 14.8V 150Wh 10.2Ah battery.

## Software Upgrade


1. Download the new firmware to the U disk from the official website (<http://www.godox.com.cn/Downloads.html>).
2. Turn off the LED light. Insert the U disk with new firmware into the USB upgrade port.
3. Turn on the LED Light, and it will automatically enter the upgrading interface..
4. It will return to main interface after completion.

### Notes:


1. New firmware must be downloaded from the official website, and keep only one BIN file in the root directory of the USB disk.
2. The USB port can only support firmware upgrade function.


## Over-Temperature Protection

If the temperature of the light body is too high, the Over-Temperature Protection icon flashes on the main interface, the light body can be used normally. If the temperature of the light body exceeds the limit of Over-Temperature Protection, the Over-Temperature Protection icon flashes on the main interface and the screen works properly after the light goes out in 3 seconds. When the temperature decreases to 50°C, the Over-Temperature Protection icon disappears, then the light body can resume working.

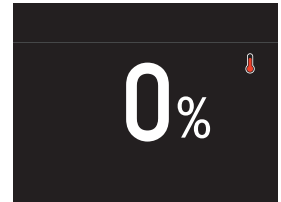

## Fan Troubleshooting

If  icon appeared and blinking and fan off icon is also displayed on the display, it might be a fan failure. Please contact with customer service.

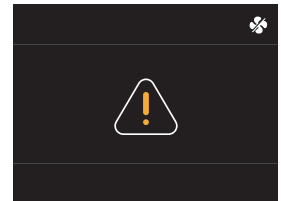

## Maintenance

- This product, except consumables e.g. adapter and power cable, is supported with a one-year warranty.
- Maintenance of the light must be performed by our authorized maintenance department which can provide original accessories.
- Unauthorized service will void the warranty.
- If the product breaks down or gets wet, please do not use it until repaired by professionals.
- If there is anything abnormal during LED light's working, please turn it off immediately and identify the reasons.

## Illuminance Testing Data



M200Bi					
CCT	Testing Conditions	Illuminance Unit	1m	2m	3m
2800K	bare lamp	lux	4000	1000	530
		fc	370	97.9	49.6
	with reflector	lux	53000	11200	4300
		fc	4900	1000	400
3200K	bare lamp	lux	4800	1300	640
		fc	450	120	59.7
	with reflector	lux	64000	14000	5200
		fc	6000	1300	480
4300K	bare lamp	lux	6200	1600	830
		fc	570	150	76.8
	with reflector	lux	83000	17000	6700
		fc	7700	1600	620
5600K	bare lamp	lux	6300	1700	840
		fc	580	160	78.4
	with reflector	lux	86000	18000	6900
		fc	8000	1700	640
6500K	bare lamp	lux	5500	1500	740
		fc	510	140	70
	with reflector	lux	76000	16000	6100
		fc	7000	1500	560

All the above tests are based on the condition of 100% brightness.

M300Bi					
CCT	Testing Conditions	Illuminance Unit	1m	2m	3m
2800K	bare lamp	lux	4000	1000	530
		fc	370	97.9	49.6
	with reflector	lux	53000	11200	4300
		fc	4900	1000	400
3200K	bare lamp	lux	4800	1300	640
		fc	450	120	59.7
	with reflector	lux	64000	14000	5200
		fc	6000	1300	480
4300K	bare lamp	lux	6200	1600	830
		fc	570	150	76.8
	with reflector	lux	83000	17000	6700
		fc	7700	1600	620
5600K	bare lamp	lux	6300	1700	840
		fc	580	160	78.4
	with reflector	lux	86000	18000	6900
		fc	8000	1700	640
6500K	bare lamp	lux	5500	1500	740
		fc	510	140	70
	with reflector	lux	76000	16000	6100
		fc	7000	1500	560

All the above tests are based on the condition of 100% brightness.

## Technical Data

Mode	M200Bi	M300Bi
Power	230W (Max)	330W(Max)
Light Head Input	48V  4.6A	48V  7A
Controller AC Power Input	100-240V~50/60Hz	
Controller Power Input	DC48V	
V-mount battery (optional) Specifications	14.8V, 150Wh / 26V, 270Wh	
Channel	32(1~32)	
Group	16(0~9, A~F)	
ID	1~99, OFF	
Color Temperature	2800-6500K	
CRI	≥96	
TLCI	≥97	
Working Environment Temperature	-10°C ~40°C	
FX Light Effect	21 kinds within 7 types	
Controlling Method	Support DMX512 , 2.4G Wireless Control, Bluetooth APP	
Dimming Curve	4 types: linear/S-curve/ exponential/logarithmic	
Mute Mode	YES	
2.4G Wireless Control Distance	≈60m	
Bluetooth Transmission Distance	≈30m	
Display Screen	2.4 inches	
Light Body Dimension	425.3*232.3*141.7mm	
Controller Dimension	270.4*123.6*132mm	
Light Body net	≈3.2kg	≈3.5kg
Controller net	≈2.7kg	≈2.7kg
Bluetooth Transmission Frequency	2402.00-2480.00MHz	
Maximum Transmit Power	5dbm	

\* Product design and specifications are subject to change without notice.

## Maintenance

This product, except consumables e.g. cable, is supported with a one-year warranty. Avoid sudden impacts and the product should be dedusted regularly.

Maintenance of the flash must be performed by our authorized maintenance department which can provide original accessories.

Unauthorized service will void the warranty.

If the product had failures or was wetted, do not use it until it is repaired by professionals.

Changes made to the specifications or designs may not be reflected in this manual.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

## Declaration of Conformity:

GODOX Photo Equipment Co,Ltd. hereby declares that the This equipment are in compliance with the essential requirements and other relevant provisions of EU Directive 2014/53/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

[http://www.godox.com/DOC/Godox\\_M200Bi\\_M300Bi\\_DOC.pdf](http://www.godox.com/DOC/Godox_M200Bi_M300Bi_DOC.pdf)

## 产品保修

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配合销售商填写并妥善保管,谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注:此表应由销售商盖章确认。

### 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

### 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算,购买日以购买产品时保修卡登记日期为准。

### 如何获得保修服务

您可直接与产品销售商或授权服务机构联系,也可拨打神牛产品售后服务电话,与我们联系,由我们的服务人员为您安排服务。申请保修时,您应提供有效的保修卡作为保修凭证,方可获得保修。如您不能提供有效的保修卡,则在我们确认产品或部件属于保修范围的情况下,也可以为您提供保修,但这不作为我们的义务。

### 不适用保修的情况

如产品存在下列情况,本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期;②错误或不当使用、维护或保管导致的故障或损坏,如:不当搬运;非按产品合理预期用途使用;不当插拔外接设备;跌落或外力挤压;接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境;③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏;④产品或部件原有识别信息被修改变更或除去;⑤无有效保修卡;⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏;⑦因不可抗力或意外事件造成的故障或损坏;⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况,您应向相关责任方寻求解决,神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的,不是保修范围内的故障。产品使用过程中正常的脱色,磨损和消耗,不是保修范围内的故障。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线,同步线等带电性能的部件。	12	客户送修
其他	如闪光灯管、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话:0755-29609320-8062

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.