

Table of contents

1	About this document	4	8.2	Switching on the transmitter	31
1.1	Document function	4	8.3	Configuring the measuring device	31
1.2	Safety Instructions (XA)	4	8.4	Protecting settings from unauthorized access	33
1.3	Symbols used	4	9	Diagnostics and troubleshooting ...	35
1.4	Tool symbols	5	9.1	General troubleshooting	35
1.5	Documentation	6	9.2	Diagnostic information on local display	37
1.6	Registered trademarks	6	9.3	Diagnostic information via communication interface	38
2	Basic safety instructions	7	9.4	Diagnostic list	38
2.1	Requirements for the personnel	7	9.5	Event logbook	38
2.2	Designated use	7	9.6	Overview of diagnostic events	39
2.3	Operational safety	7	9.7	Firmware history	40
3	Incoming acceptance and product identification	8	10	Maintenance	41
3.1	Incoming acceptance	8	11	Repair	41
3.2	Product identification	8	11.1	General information	41
3.3	Scope of delivery	9	11.2	Spare parts	41
3.4	Certificates and approvals	9	11.3	Return	41
3.5	Transport and storage	9	11.4	Disposal	41
4	Installation	10	12	Accessories	41
4.1	Installation conditions	10	12.1	Device-specific accessories	42
4.2	Installation	10	12.2	Communication-specific accessories	42
4.3	Post-installation check	14	12.3	Service-specific accessories	43
5	Electrical connection	15	12.4	System components	44
5.1	Connection conditions	15	13	Technical data	45
5.2	Quick wiring guide	15	13.1	Input	45
5.3	Connecting the sensor cables	16	13.2	Output	46
5.4	Connecting the transmitter	16	13.3	Power supply	47
5.5	Special connection instructions	16	13.4	Performance characteristics	48
5.6	Post-connection check	17	13.5	Environment	55
6	Operation options	18	13.6	Mechanical construction	56
6.1	Overview of operation options	18	13.7	Certificates and approvals	58
6.2	Structure and function of the operating menu	21	13.8	Supplementary documentation	60
6.3	Access to the operating menu via the operating tool	23	14	Operating menu and parameter description	61
6.4	Access to the operating menu via the SmartBlue App	26	14.1	Menu: Diagnostics	65
7	System integration	28	14.2	Menu: Application	71
7.1	Overview of device description files	28	14.3	Menu: System	81
7.2	Measured variables via HART protocol	28			
7.3	Supported HART® commands	28			
8	Commissioning	31			
8.1	Post-installation check	31			

2 Basic safety instructions

2.1 Requirements for the personnel

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

The device is a universal and user-configurable temperature transmitter with one sensor input for a resistance thermometer (RTD), thermocouples (TC), resistance and voltage transmitters. The head transmitter version of the device is intended for mounting in a terminal head (flat face) as per DIN EN 50446. It is also possible to mount the device on a DIN rail using the optional DIN rail clip.

The manufacturer is not liable for damage caused by improper or non-designated use.

2.3 Operational safety

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection or safety equipment):


- ▶ Based on the technical data on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area. The nameplate can be found on the side of the transmitter housing.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

Electromagnetic compatibility

The measuring system complies with the general safety requirements as per EN 61010-1, the EMC requirements as per the IEC/EN 61326 series and the NAMUR recommendations NE 21.

NOTICE

- ▶ The device must only be powered by a power unit that operates using an energy-limited electric circuit according to IEC 61010-1, "SELV or Class 2 circuit".

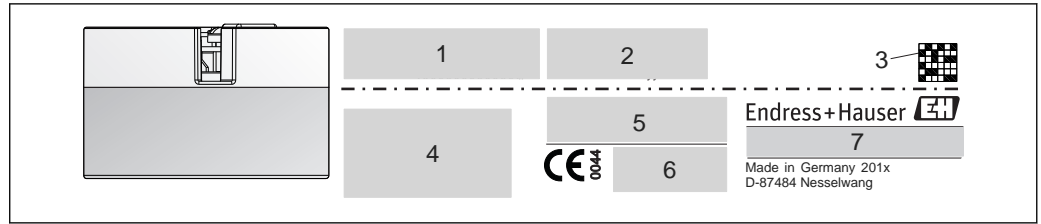


A0014561

1 Nameplate of the head transmitter (example, Ex version)

- 1 Power supply, current consumption and radio approval (Bluetooth)
- 2 Serial number, device revision, firmware version and hardware version
- 3 Data Matrix 2D code
- 4 2 lines for the TAG name and extended order code
- 5 Approval in hazardous area with number of the relevant Ex documentation (XA...)
- 6 Approvals with symbols
- 7 Order code and manufacturer ID

3.3 Scope of delivery

The scope of delivery of the device comprises:

- Temperature transmitter
- Mounting material (head transmitter), optional
- Hard copy of multi-language Brief Operating Instructions
- Additional documentation for devices which are suitable for use in the hazardous area (0 ) , such as Safety Instructions (XA...), Control or Installation Drawings (ZD...).

3.4 Certificates and approvals

The device left the factory in a safe operating condition. The device complies with the requirements of the standards EN 61 010-1 "Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use" and with the EMC requirements as per the IEC/EN 61326 series.

3.4.1 CE/EAC mark, declaration of conformity

The device meets the legal requirements of the EU/EEU guidelines. The manufacturer confirms that the device is compliant with the relevant guidelines by applying the CE/EAC mark.

3.4.2 HART® protocol certification

The temperature transmitter is registered by the HART® FieldComm Group. The device meets the requirements of the HART Communication Protocol Specifications, Revision 7 (HCF 7.6).

3.5 Transport and storage

Carefully remove all the packaging material and protective covers that are part of the transported package.


 Dimensions and operating conditions: →  56

When storing (and transporting) the device, pack it so that it is reliably protected against impact. The original packaging offers the best protection.

Storage temperature

Head transmitter: -50 to +100 °C (-58 to +212 °F)

4.2.1 Mounting the head transmitter

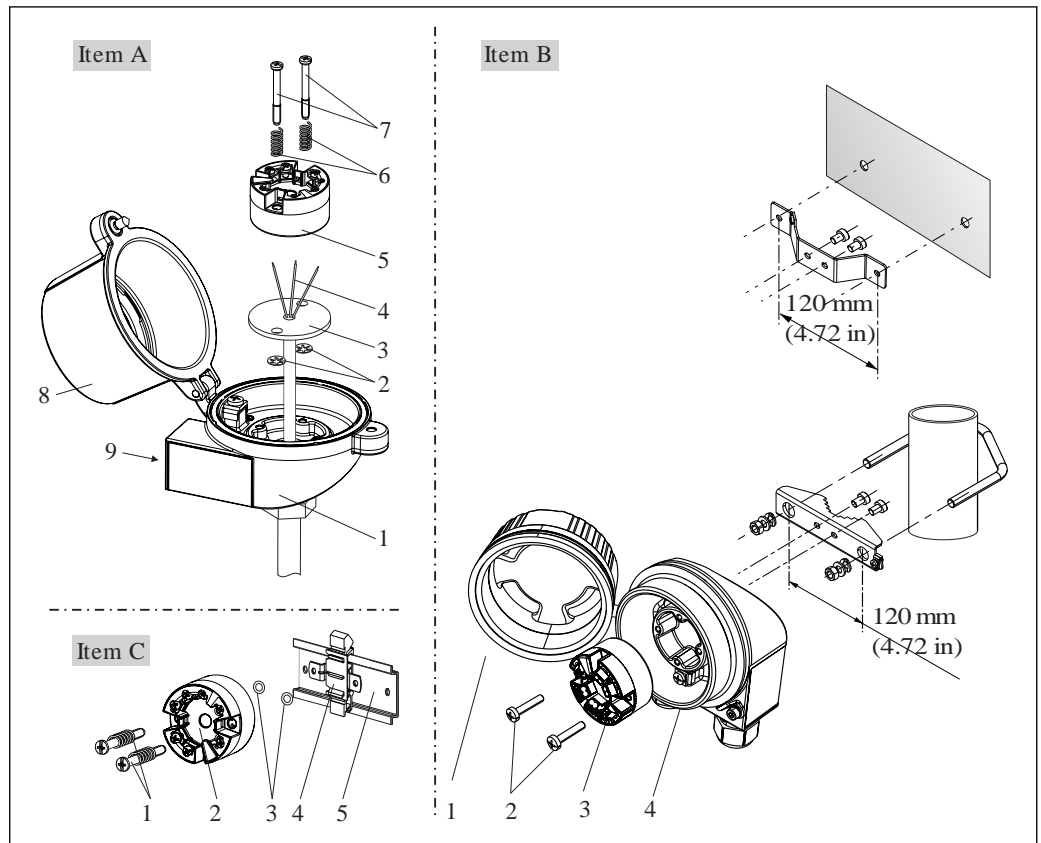


2 Head transmitter mounting (three versions)

Item A	Mounting in a terminal head (terminal head flat face as per DIN 43729)
1	Terminal head
2	Circlips
3	Insert
4	Connection wires
5	Head transmitter
6	Mounting springs
7	Mounting screws
8	Terminal head cover
9	Cable entry

Procedure for mounting in a terminal head, pos. A:

1. Open the terminal head cover (8) on the terminal head.
2. Guide the connection wires (4) of the insert (3) through the center hole in the head transmitter (5).
3. Fit the mounting springs (6) on the mounting screws (7).
4. Guide the mounting screws (7) through the side boreholes of the head transmitter and the insert (3). Then fix both mounting screws with the snap rings (2).
5. Then tighten the head transmitter (5) along with the insert (3) in the terminal head.
6. After wiring → 15, close the terminal head cover (8) tightly again.

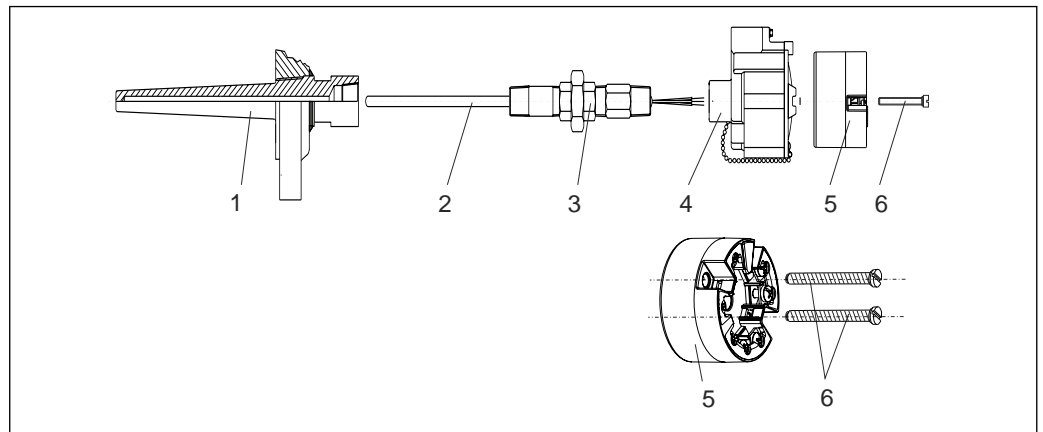Mounting typical of North America

A0008520

4 Head transmitter mounting

- 1 Thermowell
- 2 Insert
- 3 Adapter, coupling
- 4 Terminal head
- 5 Head transmitter
- 6 Mounting screws

Thermometer design with thermocouples or RTD sensors and head transmitter:

1. Fit the thermowell (1) on the process pipe or the container wall. Secure the thermowell according to the instructions before the process pressure is applied.
2. Fit the necessary neck tube nipples and adapter (3) on the thermowell.
3. Make sure sealing rings are installed if such rings are needed for harsh environmental conditions or special regulations.
4. Guide the mounting screws (6) through the lateral bores of the head transmitter (5).
5. Position the head transmitter (5) in the terminal head (4) in such a way that the bus cable (terminals 1 and 2) point to the cable entry.
6. Using a screwdriver, screw down the head transmitter (5) in the terminal head (4).
7. Guide the connection wires of the insert (3) through the lower cable entry of the terminal head (4) and through the middle hole in the head transmitter (5). Wire the connection wires up to the transmitter → 15.
8. Screw the terminal head (4), with the integrated and wired head transmitter, onto the ready-mounted nipple and adapter (3).

NOTICE

The terminal head cover must be secured properly to meet the requirements for explosion protection.

- ▶ After wiring, securely screw the terminal head cover back on.

5 Electrical connection

5.1 Connection conditions

CAUTION

- ▶ Switch off the power supply before installing or connecting the device. Failure to observe this may result in the destruction of parts of the electronics.
- ▶ When connecting Ex-certified devices, please take special note of the instructions and connection schematics in the Ex-specific supplement to these Operating Instructions. Your supplier is available for assistance if required.
- ▶ Do not occupy the display connection. An incorrect connection can destroy the electronics.

NOTICE

Do not overtighten the screw terminals, as this could damage the transmitter. Use a suitable screwdriver.


- ▶ Maximum torque for securing screws = 1 Nm ($\frac{3}{4}$ foot-pound), screwdriver: Pozidriv Z2
- ▶ Maximum torque for screw terminals = 0.35 Nm ($\frac{1}{4}$ foot-pound), screwdriver: Pozidriv Z1

Proceed as follows to wire a mounted head transmitter:

1. Open the cable gland and the housing cover on the terminal head or the field housing.
2. Feed the cables through the opening in the cable gland.
3. Connect the cables as shown in → 15.
4. Tighten the cable gland again and close the housing cover.

In order to avoid connection errors always follow the instructions in the post-connection check section before commissioning!


5.2 Quick wiring guide

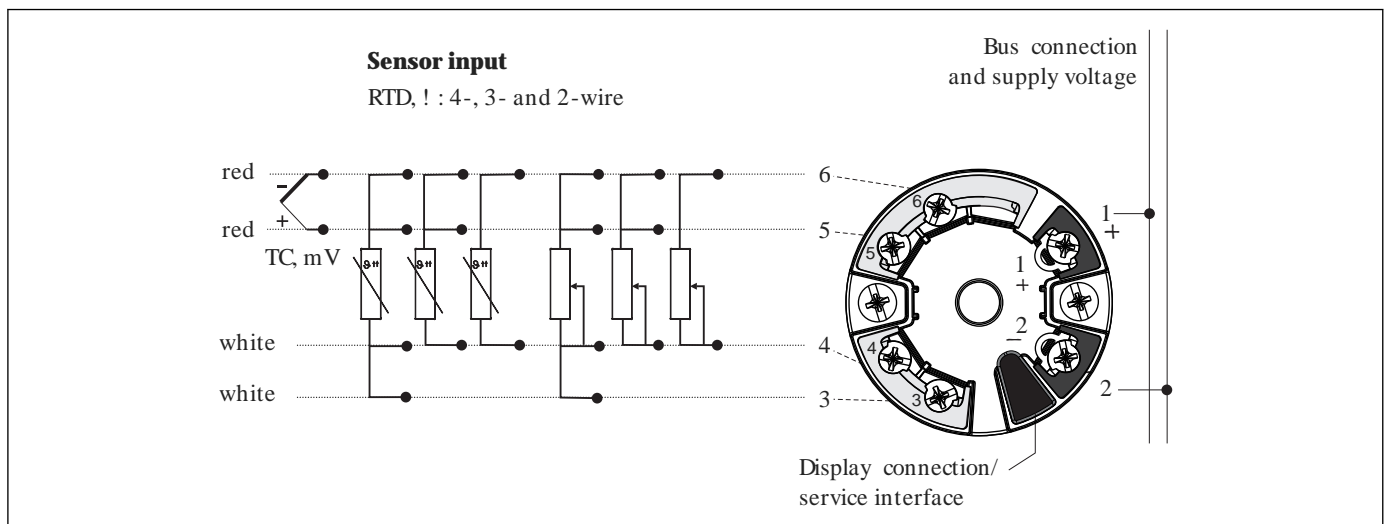

6 Terminal assignment of head transmitter

To operate the device via the HART® protocol (terminals 1 and 2), a minimum load of 250 Ω is required in the signal circuit.

The specifications of the HART FieldComm Group must be observed during installation.

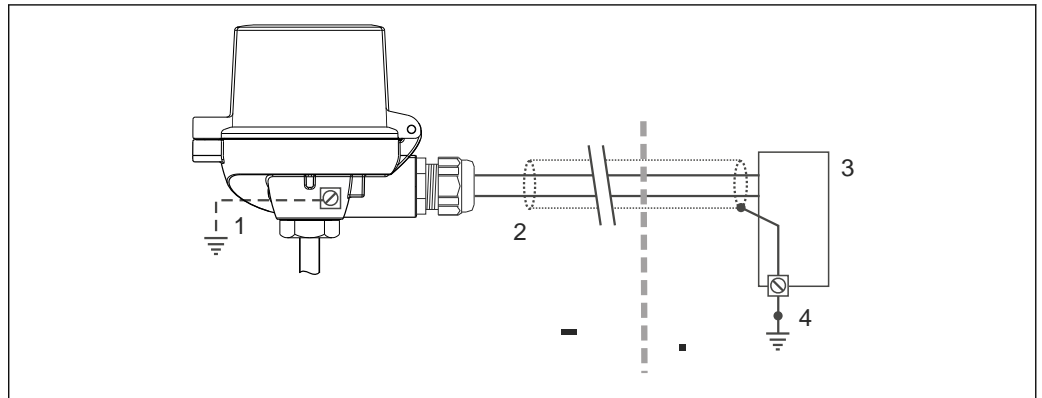

A0014463

8 Shielding and grounding the signal cable at one end with HART® communication


- 1 Optional grounding of the field device, isolated from cable shielding
- 2 Grounding of the cable shield at one end
- 3 Supply unit
- 4 Grounding point for HART® communication cable shield

5.6 Post-connection check

Device condition and specifications	Notes
Is the device or cable undamaged (visual check)?	--
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	<ul style="list-style-type: none"> • Head transmitter: $U = \text{e.g. } 10 \text{ to } 36 \text{ V}_{\text{DC}}$ • Other values apply in the hazardous area, see the corresponding Ex Safety Instructions (XA).
Do the cables have adequate strain relief?	--
Are the power supply and signal cables correctly connected?	→ 15
Are all the screw terminals well tightened?	--
Are all the cable entries installed, tightened and sealed?	--
Are all housing covers installed and firmly tightened?	--

Display elements

Head transmitter

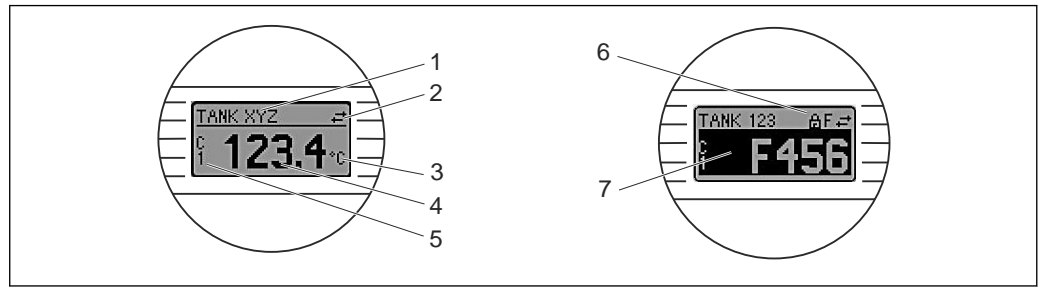

A0008549

11 Optional LC display for head transmitter

Item No.	Function	Description
1	Displays the TAG	TAG, 32 characters long.
2	'Communication' symbol	The communication symbol appears when read and write-accessing via the fieldbus protocol.
3	Unit display	Unit display for the measured value displayed.
4	Measured value display	Displays the current measured value.
5	Value/channel display DT, PV, I, %	e.g. PV for a measured value from channel 1 or DT for the device temperature
6	'Configuration locked' symbol	The 'configuration locked' symbol appears when configuration is locked via the hardware.
7	Status signals	
	Symbols	Meaning
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid. The display alternates between the error message and "- - -" (no valid measured value present), see "Diagnostics events" section → 37. The display alternates between the error message and "- - -" (no valid measured value present). Detailed information on the error messages can be found in the Operating Instructions.
	C	"Service mode" The device is in service mode (e.g. during a simulation).
	S	"Out of specification" The device is being operated outside its technical specifications (e.g. during warm-up or cleaning processes).
	M	"Maintenance required" Maintenance is required. The measured value is still valid. The display alternates between the measured value and the status message.

Local operation

You can make hardware settings for the fieldbus interface using miniature switches (DIP switches) on the rear of the optional display .


i The user has the option of ordering the display with the head transmitter, or as an accessory for subsequent mounting. → 41

NOTICE

- ▶ **ESD** - electrostatic discharge. Protect the terminals from electrostatic discharge. Failure to observe this may result in the destruction or malfunction of parts of the electronics.

6.2 Structure and function of the operating menu

6.2.1 Structure of the operating menu

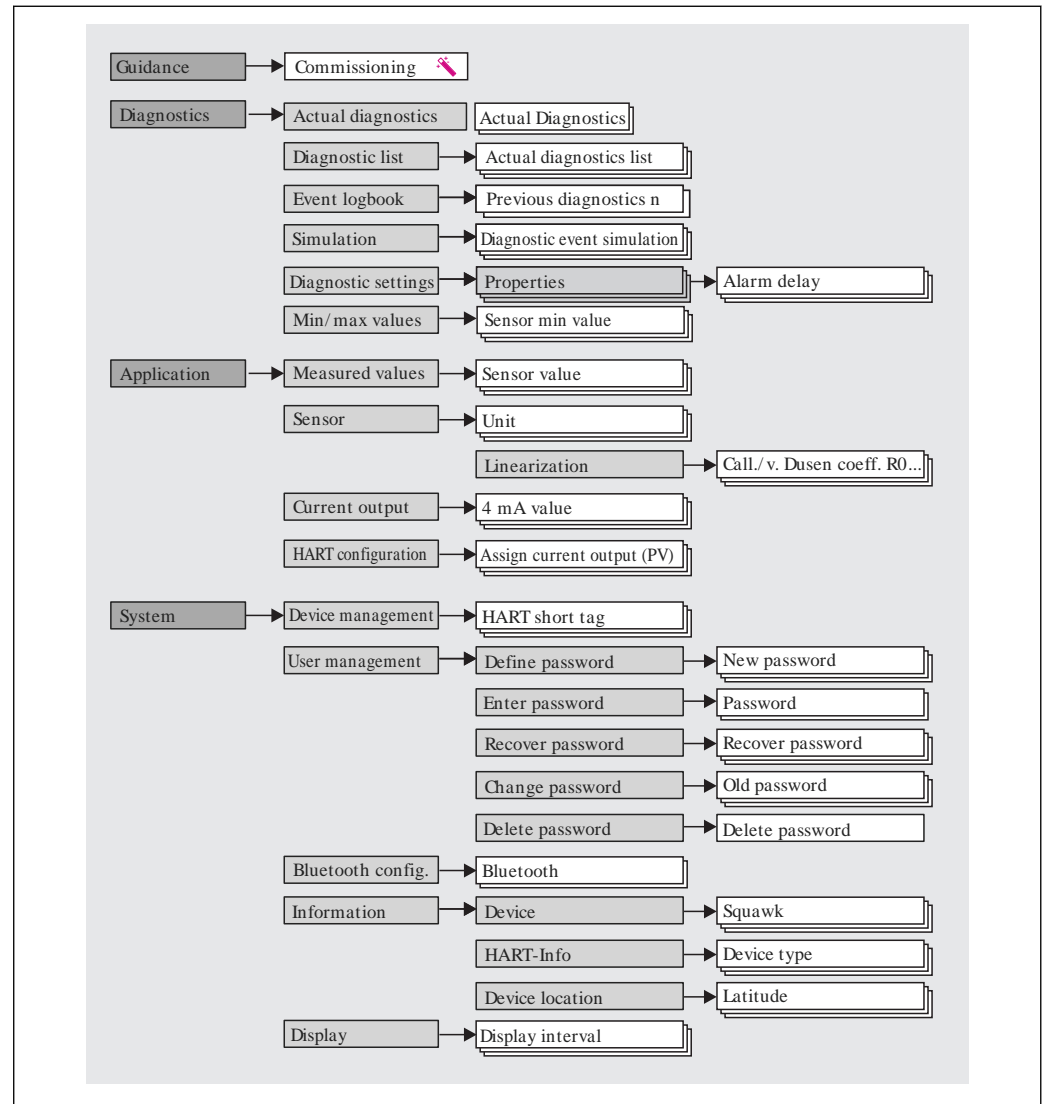

A0037574-EN

User roles

Endress+Hauser's role-based access concept consists of two hierarchical levels for the user and presents the various user roles with defined read/write authorizations, derived from the NAMUR shell model.

Submenus

Menu	Typical tasks	Content/meaning
"Diagnostics"	Fault elimination: <ul style="list-style-type: none"> • Diagnosing and eliminating process errors. • Error diagnostics in difficult cases. • Interpretation of device error messages and correcting associated errors. 	Contains all parameters for detecting and analyzing errors: <ul style="list-style-type: none"> • Diagnostic list Contains up to 3 error messages currently pending • Event logbook Contains the last 10 error messages (no longer pending) • "Simulation" submenu Used to simulate measured values, output values or diagnostic messages • "Diagnostic settings" submenu Contains all the parameters for configuring error events • "Min/max values" submenu Contains the minimum/maximum indicator and the reset option
"Application"	Commissioning: <ul style="list-style-type: none"> • Configuration of the measurement. • Configuration of data processing (scaling, linearization, etc.). • Configuration of the analog measured value output. Tasks during operation: Reading measured values.	Contains all parameters for commissioning: <ul style="list-style-type: none"> • "Measured values" submenu Contains all the current measured values • "Sensor" submenu Contains all the parameters for configuring the measurement • "Output" submenu Contains all the parameters for configuring the analog current output • "HART configuration" submenu Contains the settings and the most important parameters for HART communication
"System"	Tasks that require detailed knowledge of the system administration of the device: <ul style="list-style-type: none"> • Optimum adaptation of the measurement for system integration. • Detailed configuration of the communication interface. • User and access administration, password control • Information concerning the device identification, HART information and display configuration 	Contains all the higher-level device parameters that are assigned for system, device and user management, including Bluetooth configuration. <ul style="list-style-type: none"> • "Device management" submenu Contains parameters for general device management • "Bluetooth configuration" submenu (option) Contains the function for enabling/disabling the Bluetooth interface • "Device and user management" submenus Parameters for access authorization, password assignment, etc. • "Information" submenu Contains all the parameters for the unique identification of the device • "Display" submenu Configuration of the display

6.3 Access to the operating menu via the operating tool

6.3.1 DeviceCare

Function scope

DeviceCare is a free configuration tool for Endress+Hauser devices. It supports devices with the following protocols, provided a suitable device driver (DTM) is installed: HART, PROFIBUS, FOUNDATION Fieldbus, Ethernet/IP, Modbus, CDI, ISS, IPC and PCP. The tool is aimed at customers without a digital network in plants and workshops and Endress +Hauser service technicians. The devices can be connected directly via a modem (point-to-point) or a bus system. DeviceCare is fast, easy and intuitive to use. It can run on a PC, laptop or tablet with a Windows operating system.

Source for device description files

See information →  28

System requirements


- Devices with iOS:
 - iPhone 4S or higher, from iOS9.0
 - iPad2 or higher, from iOS9.0
 - iPod Touch 5th generation or higher, from iOS9.0
- Devices with Android:
 - Android 4.4 KitKat or higher

Download the SmartBlue App:


1. Install and start the SmartBlue App.
 - ↳ A Live List shows all the devices available.
2. Select the device from the Live List.
 - ↳ The Login dialog box opens.

Logging in:

3. Enter the user name: **admin**
4. Enter the initial password: serial number of the device.
5. Confirm your entry.
 - ↳ The device information opens.

 Navigate through the various items of information about the device: swipe the screen to the side.



- The range under reference conditions is:
 - 10 m (33 ft) when installed in the terminal head or field housing with a display window
 - 5 m (16.4 ft) when installed in the terminal head or field housing
- Incorrect operation by unauthorized persons is prevented by means of encrypted communication and password encryption.
- The Bluetooth® wireless technology interface can be deactivated

 The transmitter's optional Bluetooth interface is only active if a display unit is not attached or the CDI interface is not used for device configuration.

8 Commissioning



8.1 Post-installation check

Before commissioning the measuring point make sure that all final checks have been carried out:


- "Post-installation check" checklist →  14
- "Post-connection check" checklist →  17

8.2 Switching on the transmitter

Once you have completed the post-connection checks, switch on the supply voltage. The transmitter performs a number of internal test functions after power-up. As this procedure progresses, the following sequence of messages appears on the display:

Step	Display
1	"Display" text and firmware version of the display
2	Firm logo
3	Device name with firmware version, hardware version and device revision
4	Displays the sensor configuration (sensor type and type of connection) along with the configured measuring range
5a	Current measured value or
5b	Current status message  If the switch-on procedure is not successful, the relevant diagnostic event, depending on the cause, is displayed. A detailed list of diagnostic events and the corresponding troubleshooting instructions can be found in the "Diagnostics and troubleshooting" section →  35.

The device operates in normal mode after approx. 7 seconds, including the attached display. Normal measuring mode commences as soon as the switch-on procedure is completed. Measured values and status values appear on the display.



-  If the display is attached when the Bluetooth interface is activated, display initialization is performed twice and Bluetooth communication is disabled simultaneously.

8.3 Configuring the measuring device

Wizards

The **Guidance** menu contains various wizards. Wizards not only query individual parameters but also guide the user through the configuration and/or verification of entire sets of parameters with step-by-step instructions, including questions, that are comprehensible for the user. The "Start" button can be disabled for wizards that require specific access authorization (keyhole symbol appears on the screen).

In the third section, the settings are made for the analog output and the output's alarm response. The following parameters can be configured:

Navigation  **Guidance → Commissioning → Current output** 



A0037390-EN

4 mA value
20 mA value
Failure mode
Failure current

In the final section, a password can be defined for the "Maintenance" user role. This is strongly recommended to protect the device against unauthorized access. The following steps describe how to configure a password for the "Maintenance" role for the first time.

Navigation  **Guidance → Commissioning → User management** 



A0037391-EN


Access status
New password
Confirm new password

1. The **Maintenance** role appears in the "Access status" picklist. The **Maintenance** user role must first be selected when operating with the SmartBlue App.
 - ↳ Afterwards, the **New password** and **Confirm new password** input boxes appear.
2. Enter a user-defined password that meets the password rules indicated in the online help.
3. Enter the password again in the **Confirm new password** input box.


Once the password has been entered successfully, parameter changes, particularly those that are needed for commissioning, process adaptation/optimization and troubleshooting, can only be implemented in the **Maintenance** user role and if the password is entered successfully.



8.4 Protecting settings from unauthorized access

8.4.1 Hardware locking

The device can be protected against unauthorized access by hardware locking. In the locking and access concept, hardware locking always has top priority. The device is write-protected if the keyhole symbol appears in the header of the measured value display. To disable write protection, switch the write protection switch on the back of the display to the "OFF" position (hardware write protection). →  19

8.4.2 Software locking

By assigning a password for the **Maintenance** user role, it is possible to restrict access authorization and protect the device against unauthorized access. See the Commissioning wizard →  32


 Commissioning wizard →  32



Application errors without status messages for TC sensor connection

Problem	Possible cause	Remedy
Measured value is incorrect/ inaccurate	Incorrect sensor orientation.	Install the sensor correctly.
	Heat conducted by sensor.	Observe the face-to-face length of the sensor.
	Device programming is incorrect (scaling).	Change scaling.
	Incorrect thermocouple type (TC) configured.	Change the Sensor type device function.
	Incorrect reference measuring point set.	Set the correct reference measuring point .
	Interference via the thermocouple wire welded in the thermowell (interference voltage coupling).	Use a sensor where the thermocouple wire is not welded.
	Offset incorrectly set.	Check offset.
Failure current (≤ 3.6 mA or ≥ 21 mA)	Faulty sensor.	Check the sensor.
	Sensor is connected incorrectly.	Connect the connecting cables correctly (terminal diagram).
	Incorrect programming.	Incorrect sensor type set in the Sensor type device function. Set the correct sensor type.

9.2 Diagnostic information on local display

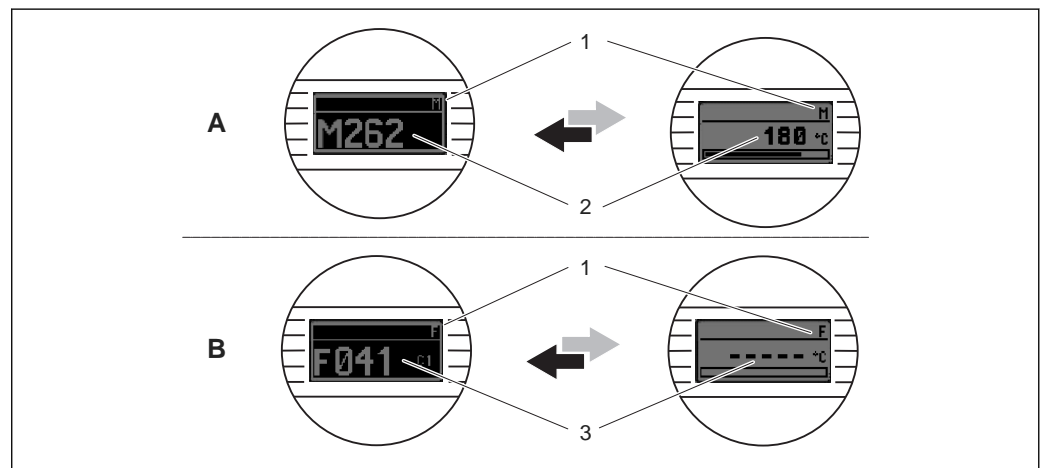

A0014837

- A Display in the event of a warning
- B Display in the event of an alarm
- 1 Status signal in the header
- 2 The display alternates between the primary measured value and the status - indicated by the appropriate letter (M, C or S) - plus the defined error number.
- 3 The display alternates between "---" (no valid measured value) and the status - indicated by the appropriate letter (F) - plus the defined error number.









9.6 Overview of diagnostic events

Each diagnostic event is assigned a certain event behavior at the factory. The user can change this assignment for certain diagnostic events.

Example:

Configuration examples	Diagnostic number	Settings		Device behavior			
		Status signal	Diagnostic behavior from the factory	Status signal (output via HART® communication)	Current output	PV, status	Display
1. Default setting	047	S	Warning	S	Measured value	Measured value, UNCERTAIN	S047
2. Manual setting: status signal S changed to F	047	F	Warning	F	Measured value	Measured value, UNCERTAIN	F047
3. Manual setting: Warning diagnostic behavior changed to Alarm	047	S	Alarm	S	Configured failure current	Measured value, BAD	S047
4. Manual setting: Warning changed to Disabled	047	S ¹⁾	Disabled	- ²⁾	Last valid measured value ³⁾	Last valid measured value, GOOD	S047

- 1) Setting is not relevant.
- 2) Status signal is not displayed.
- 3) The failure current is output if no valid measured value is available.

Diagnostic number	Short text	Corrective measure	Status signal from the factory		Diagnostic behavior from the factory	
				Customizable ¹⁾		Not customizable
Diagnostics for the sensor						
41	Sensor interrupted	1. Check electrical wiring. 2. Replace sensor. 3. Check connection type.	F		Alarm	
42	Sensor corroded	1. Check sensor. 2. Replace sensor.	M		Warning	
43	Short-circuit	1. Check electrical connection. 2. Check sensor. 3. Replace sensor or cable.	F		Alarm	
047	Sensor limit reached sensor n	1. Check sensor. 2. Check process conditions.	S		Warning	
145	Compensation reference point	1. Check terminal temperature. 2. Check external reference point.	F		Alarm	
Diagnostics for the electronics						
201	Electronics faulty	1. Restart device. 2. Replace electronics.	F		Alarm	
221	Reference sensor defective	Replace device.	M		Alarm	
Diagnostics for the configuration						
401	Factory reset active	Factory reset active, please wait.	C		Warning	


Date	Firmware version	Changes	Documentation
11/2018	01.01.zz	Original firmware	BA01854T/09/en/01.18

10 Maintenance

In general, no specific maintenance is required for this device.

11 Repair

11.1 General information

 Repairs that are not described in these Operating Instructions must only be carried out directly by the manufacturer or by the service department.

11.2 Spare parts

Spare parts currently available for the device can be found online at: http://www.products.endress.com/spareparts_consumables. Always quote the serial number of the device when ordering spare parts!

Type	Order number
Standard - DIN securing set (2 screws and springs, 4 shaft lock-down rings, 1 plug for the display interface)	71044061
US - M4 securing set (2 screws and 1 plug for the display interface)	71044062
Commbobox FXA195 HART®, For intrinsically safe HART® communication with FieldCare via the USB interface.	FXA195-.....

11.3 Return

The measuring device must be returned if it is need of repair or a factory calibration, or if the wrong measuring device has been delivered or ordered. Legal specifications require Endress+Hauser, as an ISO-certified company, to follow certain procedures when handling products that are in contact with the medium.

To ensure safe, swift and professional device returns, please refer to the procedure and conditions for returning devices provided on the Endress+Hauser website at <http://www.endress.com/support/return-material>

11.4 Disposal

The device contains electronic components and must, therefore, be disposed of as electronic waste in the event of disposal. Pay particular attention to the local regulations governing waste disposal in your country.

12 Accessories

Various accessories, which can be ordered with the device or subsequently from Endress +Hauser, are available for the device. Detailed information on the order code in question is

13 Technical data

13.1 Input

Measured variable Temperature (temperature-linear transmission behavior), resistance and voltage.

Resistance thermometer (RTD) as per standard	Designation	α	Measuring range limits	Min. span
IEC 60751:2008	Pt100 (1) Pt200 (2) Pt500 (3) Pt1000 (4)	0.003851	-200 to +850 °C (-328 to +1 562 °F) -200 to +850 °C (-328 to +1 562 °F) -200 to +500 °C (-328 to +932 °F) -200 to +250 °C (-328 to +482 °F)	10 K (18 °F)
JIS C1604:1984	Pt100 (5)	0.003916	-200 to +510 °C (-328 to +950 °F)	10 K (18 °F)
DIN 43760 IPTS-68	Ni100 (6) Ni120 (7)	0.006180	-60 to +250 °C (-76 to +482 °F) -60 to +250 °C (-76 to +482 °F)	10 K (18 °F)
GOST 6651-94	Pt50 (8) Pt100 (9)	0.003910	-185 to +1 100 °C (-301 to +2 012 °F) -200 to +850 °C (-328 to +1 562 °F)	10 K (18 °F)
OIML R84: 2003, GOST 6651-2009	Cu50 (10) Cu100 (11)	0.004280	-180 to +200 °C (-292 to +392 °F) -180 to +200 °C (-292 to +392 °F)	10 K (18 °F)
	Ni100 (12) Ni120 (13)	0.006170	-60 to +180 °C (-76 to +356 °F) -60 to +180 °C (-76 to +356 °F)	10 K (18 °F)
OIML R84: 2003, GOST 6651-94	Cu50 (14)	0.004260	-50 to +200 °C (-58 to +392 °F)	10 K (18 °F)
-	Pt100 (Callendar van Dusen) Nickel polynomial Copper polynomial	-	The measuring range limits are specified by entering the limit values that depend on the coefficients A to C and R0.	10 K (18 °F)
	<ul style="list-style-type: none"> • Type of connection: 2-wire, 3-wire or 4-wire connection, sensor current: ≤ 0.3 mA • With 2-wire circuit, compensation of wire resistance possible (0 to 30 Ω) • With 3-wire and 4-wire connection, sensor wire resistance up to max. 50 Ω per wire 			
Resistance transmitter	Resistance Ω		10 to 400 Ω 10 to 2 000 Ω	10 Ω 10 Ω

Thermocouples as per standard	Designation	Measuring range limits		Min. span
IEC 60584, Part 1	Type A (W5Re-W20Re) (30)	0 to +2 500 °C (+32 to +4 532 °F)	Recommended temperature range: 0 to +2 500 °C (+32 to +4 532 °F)	50 K (90 °F)
	Type B (PtRh30-PtRh6) (31)	+40 to +1 820 °C (+104 to +3 308 °F)	+500 to +1 820 °C (+932 to +3 308 °F)	50 K (90 °F)
	Type E (NiCr-CuNi) (34)	-270 to +1 000 °C (-454 to +1 832 °F)	-150 to +1 000 °C (-238 to +1 832 °F)	50 K (90 °F)
	Type J (Fe-CuNi) (35)	-210 to +1 200 °C (-346 to +2 192 °F)	-150 to +1 200 °C (-238 to +2 192 °F)	50 K (90 °F)
	Type K (NiCr-Ni) (36)	-270 to +1 372 °C (-454 to +2 501 °F)	-150 to +1 200 °C (-238 to +2 192 °F)	50 K (90 °F)
	Type N (NiCrSi-NiSi) (37)	-270 to +1 300 °C (-454 to +2 372 °F)	-150 to +1 300 °C (-238 to +2 372 °F)	50 K (90 °F)
	Type R (PtRh13-Pt) (38)	-50 to +1 768 °C (-58 to +3 214 °F)	+50 to +1 768 °C (+122 to +3 214 °F)	50 K (90 °F)
	Type S (PtRh10-Pt) (39)	-50 to +1 768 °C (-58 to +3 214 °F)	+50 to +1 768 °C (+122 to +3 214 °F)	50 K (90 °F)
Type T (Cu-CuNi) (40)	-260 to +400 °C (-436 to +752 °F)	-150 to +400 °C (-238 to +752 °F)	50 K (90 °F)	
IEC 60584, Part 1; ASTM E988-96	Type C (W5Re-W26Re) (32)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
ASTM E988-96	Type D (W3Re-W25Re) (33)	0 to +2 315 °C (+32 to +4 199 °F)	0 to +2 000 °C (+32 to +3 632 °F)	50 K (90 °F)
DIN 43710	Type L (Fe-CuNi) (41)	-200 to +900 °C (-328 to +1 652 °F)	-150 to +900 °C (-238 to +1 652 °F)	50 K (90 °F)
	Type U (Cu-CuNi) (42)	-200 to +600 °C (-328 to +1 112 °F)	-150 to +600 °C (-238 to +1 112 °F)	50 K (90 °F)
GOST R8.8585-2001	Type L (NiCr-CuNi) (43)	-200 to +800 °C (-328 to +1 472 °F)	-200 to +800 °C (+328 to +1 472 °F)	50 K (90 °F)

Standard	Designation	Measuring range	Measured error (\pm)		D/A ²⁾
			Digital ¹⁾		
JIS C1604:1984	Pt100 (5)	-200 to +510 °C (-328 to +950 °F)	≤ 0.09 °C (0.16 °F)	ME = $\pm (0.05$ °C (0.09 °F) + 0.006% * (MV - LRV))	0.03 % (\cong 4.8 μ A)
GOST 6651-94	Pt50 (8)	-185 to +1 100 °C (-301 to +2 012 °F)	≤ 0.18 °C (0.32 °F)	ME = $\pm (0.07$ °C (0.13 °F) + 0.008% * (MV - LRV))	
	Pt100 (9)	-200 to +850 °C (-328 to +1 562 °F)	≤ 0.11 °C (0.2 °F)	ME = $\pm (0.05$ °C (0.09 °F) + 0.006% * (MV - LRV))	
DIN 43760 IPTS-68	Ni100 (6)	-60 to +250 °C (-76 to +482 °F)	≤ 0.04 °C (0.07 °F)	ME = $\pm (0.04$ °C (0.07 °F) - 0.004% * (MV - LRV))	
	Ni120 (7)				
OIML R84: 2003 / GOST 6651-2009	Cu50 (10)	-180 to +200 °C (-292 to +392 °F)	≤ 0.06 °C (0.11 °F)	ME = $\pm (0.08$ °C (0.14 °F) + 0.006% * (MV - LRV))	
	Cu100 (11)	-180 to +200 °C (-292 to +392 °F)	≤ 0.04 °C (0.07 °F)	ME = $\pm (0.04$ °C (0.07 °F) + 0.003% * (MV - LRV))	
	Ni100 (12)	-60 to +180 °C (-76 to +356 °F)	≤ 0.10 °C (0.18 °F)	ME = $\pm (0.04$ °C (0.07 °F) - 0.004% * (MV - LRV))	
	Ni120 (13)		≤ 0.05 °C (0.09 °F)		
OIML R84: 2003, GOST 6651-94	Cu50 (14)	-50 to +200 °C (-58 to +392 °F)	≤ 0.11 °C (0.2 °F)	ME = $\pm (0.09$ °C (0.16 °F) + 0.004% * (MV - LRV))	
Resistance transmitter	Resistance Ω	10 to 400 Ω	29.5m Ω	ME = $\pm (17$ m Ω + 0.0034 % * (MV - LRV))	0.03 % (\cong 4.8 μ A)
		10 to 2000 Ω	179.4m Ω	ME = $\pm (60$ m Ω + 0.006 % * (MV - LRV))	

- 1) Measured value transmitted via HART®.
- 2) Percentages based on the configured span of the analog output signal.
- 3) Maximum measured error for the specified measuring range.
- 4) Deviations from maximum measured error possible due to rounding.

Measured error for thermocouples (TC) and voltage transmitters

Standard	Designation	Measuring range	Measured error (\pm)		D/A ²⁾
			Digital ¹⁾		
			Maximum ³⁾	In relation to measured value ⁴⁾	
IEC 60584-1	Type A (30)	0 to +2 500 °C (+32 to +4 532 °F)	≤ 1.65 °C (2.97 °F)	ME = $\pm (1.0$ °C (1.8 °F) + 0.018% * (MV - LRV))	0.03 % (\cong 4.8 μ A)
	Type B (31)	+500 to +1 820 °C (+932 to +3 308 °F)	≤ 2.1 °C (3.8 °F)	ME = $\pm (2.1$ °C (3.8 °F) - 0.055% * (MV - LRV))	
IEC 60584-1 / ASTM E988-96	Type C (32)	0 to +2 000 °C (+32 to +3 632 °F)	≤ 0.86 °C (1.55 °F)	ME = $\pm (0.75$ °C (1.35 °F) + 0.0055% * (MV - LRV))	
ASTM E988-96	Type D (33)		≤ 0.78 °C (1.4 °F)	ME = $\pm (1.1$ °C (1.98 °F) - 0.008% * (MV - LRV))	
IEC 60584-1	Type E (34)	-150 to +1 000 °C (-238 to +1 832 °F)	≤ 0.16 °C (0.29 °F)	ME = $\pm (0.3$ °C (0.54 °F) - 0.006% * (MV - LRV))	
	Type J (35)	-150 to +1 200 °C (-238 to +2 192 °F)	≤ 0.23 °C (0.41 °F)	ME = $\pm (0.36$ °C (0.65 °F) - 0.005% * (MV - LRV))	
	Type K (36)		≤ 0.37 °C (0.67 °F)	ME = $\pm (0.5$ °C (0.9 °F) - 0.005% * (MV - LRV))	
	Type N (37)	-150 to +1 300 °C (-238 to +2 372 °F)	≤ 0.34 °C (0.61 °F)	ME = $\pm (0.7$ °C (1.26 °F) - 0.014% * (MV - LRV))	
	Type R (38)	+50 to +1 768 °C (+122 to +3 214 °F)	≤ 0.9 °C (1.62 °F)	ME = $\pm (1.6$ °C (2.88 °F) - 0.026% * (MV - LRV))	

Measured error digital value (HART): $\sqrt{(\text{Measured error digital})^2 + \text{Influence of ambient temperature (digital)}^2 + \text{Influence of supply voltage (digital)}^2}$	0.10 °C (0.18 °F)
Measured error analog value (current output): $\sqrt{(\text{Measured error digital})^2 + \text{Measured error D/A}^2 + \text{Influence of ambient temperature (digital)}^2 + \text{Influence of ambient temperature (D/A)}^2 + \text{Influence of supply voltage (digital)}^2 + \text{Influence of supply voltage (D/A)}^2}$	0.13 °C (0.23 °F)

The measured error data correspond to 2σ (Gaussian distribution).

MV = Measured value

LRV = Lower range value of relevant sensor

Physical input measuring range of sensors	
10 to 400 Ω	Cu50, Cu100, polynomial RTD, Pt50, Pt100, Ni100, Ni120
10 to 2 000 Ω	Pt200, Pt500, Pt1000
-20 to 100 mV	Thermocouples type: A, B, C, D, E, J, K, L, N, R, S, T, U

Sensor adjustment

Sensor transmitter matching

RTD sensors are one of the most linear temperature measuring elements. Nevertheless, the output must be linearized. To significantly improve temperature measurement accuracy, the device allows the use of two methods:

- Callendar-Van-Dusen coefficients (Pt100 resistance thermometer)

The Callendar-Van-Dusen equation is described as:

$$R_T = R_0[1 + AT + BT^2 + C(T - 100)T^3]$$

The coefficients A, B and C are used to match the sensor (platinum) and transmitter in order to improve the accuracy of the measuring system. The coefficients for a standard sensor are specified in IEC 751. If no standard sensor is available or if greater accuracy is required, the coefficients for each sensor can be determined specifically with the aid of sensor calibration.

- Linearization for copper/nickel resistance thermometers (RTD)

The polynomial equation for copper/nickel is as follows:

$$R_T = R_0(1 + AT + BT^2)$$

The coefficients A and B are used for the linearization of nickel or copper resistance thermometers (RTD). The exact values of the coefficients derive from the calibration data and are specific to each sensor. The sensor-specific coefficients are then sent to the transmitter.

Sensor transmitter matching using one of the methods explained above significantly improves the temperature measurement accuracy of the entire system. This is because the transmitter uses the specific data pertaining to the connected sensor to calculate the measured temperature, instead of using the standardized sensor curve data.

1-point adjustment (offset)

Shifts the sensor value

Current output adjustment

Correction of 4 or 20 mA current output value.

Designation	Standard	Ambient temperature: Influence (±) per 1 °C (1.8 °F) change		Supply voltage: Influence (±) per V change		
		Digital ¹⁾	D/A ²⁾	Digital	D/A	
Type C (32)	IEC 60584-1 / ASTM E988-96	≤ 0.04 °C (0.072 °F)	0.0021% * (MV - LRV), at least 0.012 °C (0.022 °F)	0.003 %	≤ 0.02 °C (0.036 °F)	0.0012% * (MV - LRV), at least 0.013 °C (0.023 °F)
Type D (33)	ASTM E988-96	≤ 0.04 °C (0.072 °F)	0.0019% * (MV - LRV), at least 0.016 °C (0.029 °F)		≤ 0.02 °C (0.036 °F)	0.0011% * (MV - LRV), at least 0.0 °C (0.0 °F)
Type E (34)	IEC 60584-1	≤ 0.02 °C (0.036 °F)	0.0014% * (MV - LRV), at least 0.005 °C (0.009 °F)		≤ 0.01 °C (0.018 °F)	0.0008% * (MV - LRV), at least 0.0 °C (0.0 °F)
Type J (35)			0.0014% * (MV - LRV), at least 0.01 °C (0.018 °F)			0.0008% * MV, at least 0.0 °C (0.0 °F)
Type K (36)		≤ 0.02 °C (0.036 °F)	0.0015% * (MV - LRV), at least 0.007 °C (0.013 °F)		≤ 0.01 °C (0.018 °F)	0.0009% * (MV - LRV), at least 0.0 °C (0.0 °F)
Type N (37)			0.0014% * (MV - LRV), at least 0.010 °C (0.018 °F)			0.0008% * MV, at least 0.0 °C (0.0 °F)
Type R (38)		≤ 0.03 °C (0.054 °F)	-		≤ 0.02 °C (0.036 °F)	-
Type S (39)			-			-
Type T (40)			-			0.0 °C (0.0 °F)
Type L (41)	DIN 43710	≤ 0.01 °C (0.018 °F)	-		≤ 0.01 °C (0.018 °F)	-
Type U (42)			-		0.0 °C (0.0 °F)	-
Type L (43)	or GOST R8.8585-2001		-		≤ 0.01 °C (0.018 °F)	-
Voltage transmitter (mV)					0.003 %	
-20 to 100 mV	-	≤ 1,5 µV	0.0015% * MV	≤ 0,8 µV		0.0008% * MV

- 1) Measured value transmitted via HART®.
2) Percentages based on the configured span of the analog output signal

MV = Measured value

LRV = Lower range value of relevant sensor

Total measured error of transmitter at current output = $\sqrt{(\text{Measured error digital}^2 + \text{Measured error D/A}^2)}$


Long-term drift, resistance thermometers (RTD) and resistance transmitters

Designation	Standard	Long-term drift (±) ¹⁾				
		after 1 month	after 6 months	after 1 year	after 3 years	after 5 years
based on measured values						
Pt100 (1)	IEC 60751:2008	≤ 0.039% * (MV - LRV) or 0.01 °C (0.02 °F)	≤ 0.061% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.007% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0093% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0102% * (MV - LRV) or 0.03 °C (0.05 °F)
Pt200 (2)		0.05 °C (0.09 °F)	0.05 °C (0.09 °F)	0.09 °C (0.17 °F)	0.12 °C (0.27 °F)	0.13 °C (0.24 °F)
Pt500 (3)		≤ 0.048% * (MV - LRV) or 0.01 °C (0.02 °F)	≤ 0.0075% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.068% * (MV - LRV) or 0.03 °C (0.06 °F)	≤ 0.011% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.0124% * (MV - LRV) or 0.04 °C (0.07 °F)
Pt1000 (4)		≤ 0.0077% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0088% * (MV - LRV) or 0.02 °C (0.04 °F)	≤ 0.0114% * (MV - LRV) or 0.03 °C (0.05 °F)	≤ 0.013% * (MV - LRV) or 0.03 °C (0.05 °F)	


Configuration counter

Navigation
 System → Device management → Configuration counter
Description

Displays the counter reading for changes to device parameters.

 Static parameters, whose values change during optimization or configuration, cause this parameter to increment by 1. This support parameter version management. If several parameters change, e.g. as a result of loading parameters from FieldCare etc. to the device, the counter can show a higher value. The counter cannot be reset and is also not reset to the default value when the device is reset. If the counter overflows, (16 bit), it starts again at 1.

Configuration changed

Navigation
 System → Device management → Configuration changed
Description

Displays whether the configuration of the device has been changed by a master (primary or secondary).

14.3.2 User management submenu

Define password → Maintenance	New password
	Confirm new password
	Status password entry
Change user role → Operator	Password ¹⁾
	Status password entry
Recover password → Operator	Recover password
	Status password entry
Change password → Maintenance	Old password
	New Password
	Confirm new password
	Status password entry
Delete password → Maintenance	Delete password

1) The preferred user role must be chosen here in the operating menu via the SmartBlue App.

