

# Thermostat User Manual

Many thanks for your selection of our products and services, and also for your trust and support to us.



Search for "Smart RM" Download the Wifi App with the following icon



- Turn on the thermostat, press and hold the key combination "SET" and "OK" Activate WIFI distribution network icon
- The App advanced password is 123456

## Features

### Appearance

- (1) Standard total Size is 86\*86mm
- (2) Touch buttons to make simple operation
- (3) The visible thickness above the wall is only 15mm
- (4) 86mm hidden box and 60mm European box
- (5) Flat mounting, it is easy to install
- (6) Display size : 64\*64mm
- (7) Color: white, black

### Functions

- (A) Including built-in sensor and external sensor
- (B) 0.5°C accuracy keeps temperature within the level you set.
- (C) Children lock to prevent misoperation by children
- (D) Data memory when power is off.
- (E) Holiday mode make you enjoy more comfortable temperature in holiday
- (F) The temperature of external sensor can be checked

### Product Specifications

- ☆ Power: 90-240Vac 50/60HZ
- ☆ Display accuracy: 0.5°C
- ☆ Probe sensor: NTC(10k)1%
- ☆ Contact capacity: 3A/250V(WW);16A/250V(WE)
- ☆ Working environment temperature: 0~90°C
- ☆ Range of temperature adjustment: 5~35°C
- ☆ Range of temperature display: 0~40°C
- ☆ Insulating condition: Normal environment
- ☆ Running program: Set per 1 week as a cycle
- ☆ Output: Switch relay
- ☆ Installation: Wall mounted or on battery seat
- ☆ Size(mm): 86\*86\*27

### Before wiring and installing




1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the produce is suitable for your application.
3. Installer must be a trained experienced service technician.
4. After installation is complete. check out produce operation as provided in these instructions

**CAUTION**

**Electrical shock or equipment Damage Hazard. or short equipment circuitry.**


**Disconnect power supply before installation**

### Wiring Diagram

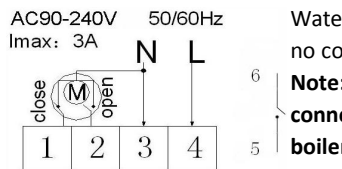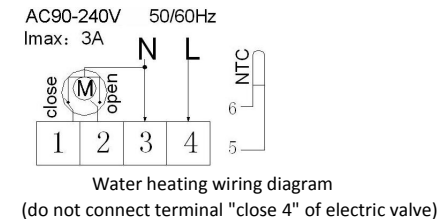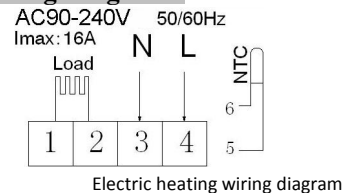

**Note: 3 & 4 connect with power, 5 & 6 connect with gas boiler, 1 & 2 connect with thermal actuator, please do not connect 1 & 2 to gas boiler, if you connect it wrongly, there will be Short circuit, our gas boiler board will be damaged.**

### Displays

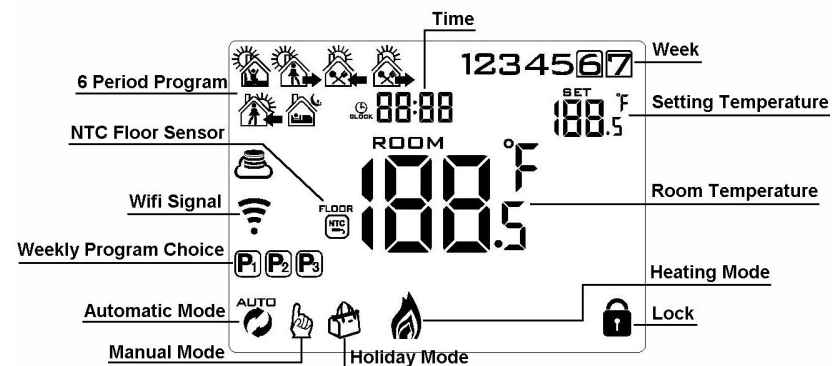

### Description of icon

- Auto mode; run preset program
- Temporary manual mode
- Holiday mode, Holiday days and temperature can be set to run in countdown mode
- Heating, icon disappears to stop heating
- WIFI connection, flashing EZ distribution mode
- WIFI status: Disconnection
- Manual mode
- Clock
- External NTC sensor
- Child lock
- Cloud icon: flashing AP distribution network mode

### Operation key

NO	symbols	represent
A		Turn ON/OFF: Short press to turn on/ turn off

<b>B</b>		1 Short press  to switch automatic mode and manual mode 2 Turn on thermostat, long press  for 3-5 seconds to enter into programmable setting 3. Turn off thermostat, long press  for 3-5 seconds to enter into advanced setting
<b>C</b>		1 Confirm key: use it with  key 2 Only short press it to set time 3 Turn on thermostat, long press it for 3-5seconds to holiday mode setting. Appear <b>OFF</b> , press  or  change to ON, then press  to confirm opening holiday mode
<b>B</b>		1 Decrease key 2 Long press to lock /unlock
<b>D</b>		1 Increase key : 2 Long press to inquire external sensor temperature  3 In the Auto model, press  or  enter to temporary manual mode

### Programmable

5+2 (factory default), 6+1 and 7 models 6 times period setting for user choose. In the advanced options choose model of you need, under power on state, long press for 3-5 seconds enter into programming mode setting, then short press choose: hour, minute, time period, and press and to adjust data, finished setting, about 10 seconds will automatic save and exist.

Wake up	Out door	Back home	Out door	Back home	Sleep
6: 00	20°C	8: 00	15°C	11: 30	15°C
		13: 30	15°C	17: 00	15°C
				22: 00	15°C

The optimum comfort temperature is 18°C-22°C.

### Advanced options

Under turn off state, long press for 3-5 seconds to access advanced setting.

From A1 to AD, short press to choose the option, and adjust data by , , short press to switch next option. Remain about 5 seconds after finish setting will quit setting.

NO	Setting Options	Data Setting Function	Factory Default
<b>A1</b>	Measure Temperature Calibration	-9-+9°C	0.5°C Accuracy Calibration
<b>A2</b>	Temperature control return difference setting	0.5-2.5°C	1°C
<b>A3</b>	External sensors limit temperature control return difference	1-9°C	2°C
<b>A4</b>	Options of sensor control	N1:Built-in sensor (high temperature protection close)	NI

		N2:External sensor (high temperature protection close) N3:Built-in sensor control temperature ,external sensor limit temperature (external sensor detect the temperature is higher than highest temperature of external sensor, thermostat will disconnect relay, turn off load)	
<b>A5</b>	Children lock setting	0:half lock 1:full lock	0
<b>A6</b>	Limit value of high temperature for external sensor	1. 35°C-70°C 2. Under 35°C, screen display <b>【--】</b> , high temperature protection was cancelled	45°C
<b>A7</b>	Limit value of low temperature for external sensor(anti-freeze protection)	1. 1-10°C 2. Exceed 10°C, screen display <b>【--】</b> , Low temperature protection was cancelled.	5°C
<b>A8</b>	<b>Setting temperature lowest limit</b>	1-10°C	5°C
<b>A9</b>	<b>Setting temperature highest Limit</b>	20-70°C	35°C
<b>AA</b>	Descaling function	0:Close descaling function 1:Open descaling function ( valve is continuously closed over 100 hours , it will be opened for 3 minutes automatically)	0:Close descaling function
<b>AB</b>	Power with memory function	0:Power with memory function 1:Shutdown power after power off 2:Shutdown power after power on	0:Power with memory function
<b>AC</b>	Weekly programming selection	0: 5+2 1: 6+1 2: 7	0: 5+2
<b>AD</b>	Restore factory defaults	Display A o, press  key whole show	

**Return difference** : limit valve of external sensor is 45°C for factory default (A6), value of external sensor control return difference (A3) is 2. when temperature rise to 45°C, then relay stop working and will remind high temperature production alarm. If temperature decline to 43°C relay continue to work and heating alarm will be relieved. (it can be operated ,only when indoor temperature is lower than setting temperature )

**Sensor fault display**: please choose correct working way of built-in and external sensor, if choose wrongly or sensor fault (breakdown), “E1” or “E2” will be displayed on the screen. Thermostat will stop heating until the fault is eliminated

### Warranty:

We offer the warranty of 18 months, from the sales day. The products of our company can have lifetime warranty ,if it is not the quality problems, or beyond the warranty period, we will charge for the after-sale service.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference

received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.