

Starwin

uSat Flat-Panel Portable (Manual) Terminal

Name: Flat Panel Integrated Satellite Communication Terminal

Model Number: FL30P-M/FL30P-E



FL30P-E/FL30P-M uSat Flat Terminal

Make Satellite Simple & Easy
Make Antenna of the future

Legal Rights

© Copyright 2019 China Starwin Science & Technology Co., Ltd. All rights reserved.

The material contained herein is proprietary, privileged, confidential and owned by China Starwin or its third party licensors. No disclosure thereof shall be made to third parties without the express written permission of China Starwin Science & Technology Co., Ltd.

China Starwin Science & Technology Co., Ltd. reserves the right to alter the equipment specifications and descriptions in this publication without prior notice. No part of this publication shall be deemed to be part of any contract or warranty unless specifically incorporated by reference into such contract or warranty.

Statement of Conditions

The information contained in this manual is subject to change without prior notice.

China Starwin Science & Technology Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or equipment supplied with it.

Warranties and Disclaimers

All China Starwin Science & Technology Co., Ltd. ("China Starwin") products purchased from China Starwin or through any of its authorized by China Starwin distributors, resellers and agents are subject to the following warranty and product liability terms and conditions.

Exclusive Warranty

China Starwin warrants that the Product hardware it supplies and the tangible media on which any software is installed, under normal use and conditions, will be free from significant defects in materials and workmanship for a period of twelve (12) months from the date of delivery of a given Product to Purchaser (the "Warranty Period"). China Starwin will, at its sole option and as Purchaser's sole remedy, repair or replace any defective Product in accordance with China Starwin standard R&R procedure.

CHINA STARWIN SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY PURCHASER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR IMPROPER TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING OR OTHER HAZARD.

Disclaimer

(a) THE PRODUCT IS SOLD ON AN "AS IS" BASIS. CHINA STARWIN, ITS AFFILIATES OR ITS LICENSORS MAKE NO WARRANTIES, WHATSOEVER, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE AND THE ACCOMPANYING DOCUMENTATION. CHINA STARWIN SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT WITH RESPECT TO THE SOFTWARE. UNITS OF PRODUCT (INCLUDING ALL THE SOFTWARE) DELIVERED TO PURCHASER HEREUNDER ARE NOT FAULT-TOLERANT AND ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE IN

APPLICATIONS WHERE THE FAILURE, MALFUNCTION OR INACCURACY OF PRODUCTS CARRIES A RISK OF DEATH OR BODILY INJURY OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE ("HIGH RISK ACTIVITIES"). HIGH RISK ACTIVITIES MAY INCLUDE, BUT ARE NOT LIMITED TO, USE AS PART OF ON-LINE CONTROL SYSTEMS IN HAZARDOUS ENVIRONMENTS REQUIRING FAIL-SAFE PERFORMANCE, SUCH AS IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL, LIFE SUPPORT MACHINES, WEAPONS SYSTEMS OR OTHER APPLICATIONS REPRESENTING A SIMILAR DEGREE OF POTENTIAL HAZARD. CHINA STARWIN SPECIFICALLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR HIGH RISK ACTIVITIES.

(b) PURCHASER'S SOLE REMEDY FOR BREACH OF THE EXPRESS WARRANTIES ABOVE SHALL BE REPLACEMENT OR REFUND OF THE PURCHASE PRICE AS SPECIFIED ABOVE, AT CHINA STARWIN'S OPTION. TO THE FULLEST EXTENT ALLOWED BY LAW, THE WARRANTIES AND REMEDIES SET FORTH IN THIS AGREEMENT ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES, TERMS OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, NON-INFRINGEMENT, AND ACCURACY OF INFORMATION GENERATED. ALL OF WHICH ARE EXPRESSLY DISCLAIMED. CHINA STARWIN' WARRANTIES HEREIN RUN ONLY TO PURCHASER, AND ARE NOT EXTENDED TO ANY THIRD PARTIES. CHINA STARWIN NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS.

Limitation of Liability

(a) CHINA STARWIN SHALL NOT BE LIABLE TO THE PURCHASER OR TO ANY THIRD

PARTY, FOR ANY LOSS OF PROFITS, LOSS OF USE, INTERRUPTION OF BUSINESS OR FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER ARISING UNDER BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE AND WHETHER BASED ON THIS AGREEMENT OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

(b) TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE LIABILITY FOR DAMAGES HEREUNDER OF CHINA STARWIN OR ITS EMPLOYEES OR AGENTS EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT BY PURCHASER, NOR SHALL THE AGGREGATE LIABILITY FOR DAMAGES TO ALL PARTIES REGARDING ANY PRODUCT EXCEED THE PURCHASE PRICE PAID FOR THAT PRODUCT BY THAT PARTY (EXCEPT IN THE CASE OF A BREACH OF A PARTY'S CONFIDENTIALITY OBLIGATIONS).

Electronic Emission Notices

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Safety Considerations

For the following safety considerations, "Instrument" means the 'satellite terminal Flat Terminal' units, components and their cables.

It is necessary to read the instructions carefully before using the satellite terminal flat portable terminal. The terminal usage shall be carried out in accordance with the described steps and methods to ensure the safety and accuracy of equipment operation.

Radio

The instrument transmits radio energy during normal operation. To avoid possible harmful exposure, to this energy, do not stand or work for extended periods of time in front of its antenna. The long-term characteristics or the possible physiological effects of Radio Frequency Electromagnetic fields have not been yet fully investigated.

Caution

1. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.
2. Before connecting this instrument to a power source, make sure that the voltage of the power source matches the requirements of the instrument.

Disposal of Electronic and Electrical Waste

Pursuant to the WEEE EU Directive electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Important Notice

This user manual is delivered subject to the following conditions and restrictions:

- This manual contains proprietary information belonging to China Starwin Science & Technology Co., Ltd. Such information is supplied solely for the purpose of assisting properly authorized users of the respective China Starwin products.
- No part of its contents may be used for any other purpose, disclosed to any person or firm or reproduced by any means, electronic and mechanical, without the express prior written permission of China Starwin Science & Technology Co., Ltd.
- The text and graphics are for the purpose of illustration and reference only. The specifications on which they are based are subject to change, without prior notice.
- The software described in this document is furnished under a license. The software may be used or copied only in accordance with the terms of that license.
- Information in this document is subject to change without prior notice.
- Corporate and individual names and data used in examples herein are fictitious, unless otherwise noted.
- China Starwin Science & Technology Co., Ltd. reserves the right to alter the equipment specifications and descriptions in this publication without prior notice. No part of this publication shall be deemed to be part of any contract or warranty unless specifically incorporated by reference into such contract or warranty.
- The information contained herein is merely descriptive in nature and does not constitute an offer for the sale of the product described herein.
- Any changes or modifications of the equipment, including opening of the equipment when not expressly approved by China Starwin Science & Technology Co., Ltd., will void equipment warranty and any repair thereafter shall be liable to a charge. It may also void the user's authority to operate the equipment.

Some of the equipment provided by China Starwin and specified in this manual, is manufactured

and warranted by third parties. All such equipment must be installed and handled in full compliance with the instructions provided by such manufacturers as attached to this manual or provided thereafter by China Starwin or the manufacturers. Non compliance with such instructions may result in serious damage and/or bodily harm and/or void the user's authority to operate the equipment and/or revoke the warranty provided by such manufacturer.

Instructions

The satellite terminal is a full satellite earth station system for communication in Ku-band. The satellite parameters shall be selected only according to the specific user conditions required.

The China Starwin satellite terminal User Manual provides operational instructions, for the device, which are standard for applications in Ku-band. However, the specific modem and antenna electrical performance parameters need to be taken in account. This manual is intended for technicians responsible for the installing, setting up and operating of the satellite terminal and for system administrators who are responsible for managing the system.

Safety Alert Messages

Safety alert messages call attention to potential safety hazards and tell you how to avoid them. These messages are identified by the signal words DANGER, WARNING, or NOTICE, as illustrated below. To avoid possible property damage, personal injury, or in some cases possible death, read and comply with all safety alert messages.



DANGER: Indicates a potentially hazardous situation which, if not avoided, will result in death or serious injury.



WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.



NOTICE: It is used for advisory messages concerning possible property damage, product damage or malfunction, data loss, or other unwanted results – but not personal injury.



Indicates a safety message that concerns a potentially hazardous situation in which you could fall.



Indicates a safety message that concerns a potential electric shock hazard.

Content

1 INTRODUCING THE USAT FLAT-PANEL FL30P-E/FL30P-M TERMINAL.....	1
2 TECHNICAL SPECIFICATION	3
3 PACKING LIST.....	5
3.1 UNPACKING AND INSPECTION	5
3.2 FREIGHT DAMAGE.....	5
3.3 MATERIAL-MISSING OR DAMAGED.....	5
3.4 BASIC EXTERNAL CONFIGURATION OF USAT TERMINAL	6
4 DESCRIPTION OF USAT TERMINAL	8
4.1 TERMINAL STRUCTURE DIAGRAM	8
4.1.1 Automatic Satellite Communication Terminal (FL30P-E).....	8
4.1.2 Manual Satellite Communication Terminal (FL30P-M).....	8
4.2 TERMINAL DIMENSIONS	9
4.2.1 Automatic Satellite Communication Terminal (FL30P-E).....	9
4.2.2 Manual Satellite Communication Terminal (FL30P-M).....	9
4.3 TERMINAL WIRELESS ACCESS DETAILS	10
4.4 MATTERS NEEDING ATTENTION.....	10
5 TERMINAL INSTALLATION, INITIALIZATION AND ALIGNMENT.....	11
5.1 TERMINAL INSTALLATION AND INITIALIZATION	11
5.1.1 Automatic Satellite Communication Terminal (FL30P-E).....	11
5.1.2 Manual Satellite Communication Terminal (FL30P-M).....	16
5.2 TERMINAL ALIGNMENT	22
5.2.1 Automatic Satellite Communication Terminal (FL30P-E).....	22
5.2.2 Manual Satellite Communication Terminal (FL30P-M).....	26
5.2.3 Terminal Alignment Other Function introduction.....	31
6 MODEM STATUS INDICATION	34
7 APPLICATION ('APP') FOR TERMINAL CONTROL.....	40
8 TERMINAL STOWING.....	47
8.1 Automatic Satellite Communication Terminal (FL30P-E).....	47
8.2 Manual Satellite Communication Terminal (FL30P-M).....	49
9 TROUBLESHOOTING AND MAINTENANCE	55
9.1 TROUBLESHOOTING.....	55
9.2 MAINTENANCE.....	55
10 TECHNICAL SERVICE CONTACT INFORMATION	56
APPENDIX 1 OTHER INSTRUCTIONS.....	57
11 PRODUCTION SPEC.....	60

1 Introducing The uSat Flat-Panel FL30P-E/FL30P-M Terminal

FL30P-E/FL30P-M series integrated satellite communication terminal has completely changed the form of the standard parabolic antenna that have been used for satellite communication for a long time, and is the real next generation of satellite communication terminal. FL30P-E/FL30P-M integrated satellite broadband portable terminal adopts advanced high gain horn waveguide array antenna and integrates necessary components of satellite communication: Antenna system, RF unit, Servo system, Satellite modem, Wireless router and Power supply system, which makes FL30P-E/FL30P-M completely separated from the traditional Parabolic form, with a simpler appearance and structure, and more convenient for transportation and operation which completely solves the problem that the traditional satellite portable station system is not portable.

The operation interface design of FL30P-E/FL30P-M integrated satellite broadband portable terminal is based on the simple and intuitive user experience. The terminal does not need any assembly, and it is simple, convenient and compact for the satellite pointing. Even the personnel without the professional background of satellite communication or the experience of using the satellite portable station can complete all operations only by checking the operation instructions or simple training.

The traditional parabolic antenna form of the split, semi-finished satellite portable station needs more than one person to cooperate in transportation, temporary assembly, which is easy to cause damage to the components. The integrated design of FL30P-E/FL30P-M integrated satellite broadband portable terminal reduces the failure point to the greatest extent, and has high reliability, which can be transported and used by one person.

FL30P-E/FL30P-M integrated broadband portable terminal can provide high-speed data channels for video, voice and data. It is applicable to the emergency communication scenes of the army, public security, fire protection and government emergency agencies, and widely used in the fields of earthquake relief, emergency repair of grid lines, flood control and drought relief, news gathering, etc. When the terrestrial network communication blind area and the temporary need to establish a special communication network, the network channel can be quickly opened to provide a reliable transmission link for various services.



Figure 1-1 FL30P-E



Figure 1-2 FL30P-M

2 Technical Specification

Antenna		
Model No.		FL30P-E/ FL30P-M
Antenna Type		Horn waveguide array antenna
Equivalent to parabolic antenna size		0.3m
RF Performance		
Frequency Range	Tx	13.75~14.50 GHz
	Rx	10.70~12.75 GHz
Polarization		Linear Horizontal / Vertical
Rx Gain		31.2dBi(in range of ±10 degree) 3.11dBi(out range of ±10 degree)
Tx Gain		33.11dBi(in range of ±10 degree) 3.11dBi(out range of ±10 degree)
G/T		10dB/K, 25° Elevation
EIRP		44 dBW (16W BUC)
First Sidelobe		≤ -14dB
Power And RF Performance		
DC Power Supply		DC24V ±5% (With AC Adapter) With two external detachable batteries, the maximum capacity can reach 187.2Wh
Typical Satellite Modem		Select small-size Modems according to customer requirements, such as IQ200, UHP210/220, etc.
Typical BUC		16W
Power Consumption	16W BUC	150W
Mechanical Performance		
Satellite Acquisition		Manually pointing to satellite, level error<0.2°
Azimuth Range		Unlimited, fine adjustment ±5°
Elevation Range		10°~ 90°continues, fine adjustment ±5°
Polarization		±70°
Terminal Dimensions (Stowing)	FL30P-E	L 15.2 × W 13.8 × H 8.0 in. L 385× W 350× H 203 mm
	FL30P-M	L 15.2 × W 13.6 × H 3.1 in. L 385× W 345× H 80 mm
Terminal Weight	FL30P-E	13 kg , 28.7lbs.
	FL30P-M	6 kg , 13.2 lbs.
Environmental Performance		
Operational Wind		17m/s (61.2km/h)
Operational Temperature		-25°C to +50°C
Ingress Protection		IP66
Humidity		0 ~ 95%

Interfaces	
Power	DC Power waterproof aviation connector
LAN	1× RJ45 10/100/1000
Other Function	
Wireless Router	IEEE 802.11b/g/n at 2.4GHz Access number: 30 Coverage (Unobstructed):50~100m
Bluetooth Device	V4.2
GNSS Device Supports	GPS/BeiDou-2

Table 2-1 FL30P-E/FL30P-M Technical Specification

3 Packing List

(1) External Packing of Terminal As Follows:

- ❖ FL30P-E/FL30P-M Terminal
- ❖ 24V DC Power, include safety adapter (The safety adapter is configured according to the user's product usage location)
- ❖ Network Cable, and Upgrade Cable (Optional)
- ❖ Other customized accessories
- ❖ User Manual
- ❖ Warranty Card

(2) Internal Packing of Terminal As Follows:

- ❖ Waveguide array antenna (Equivalent aperture 0.30 m, including LNB and BUC modules)
- ❖ Modem module (When the Modem is built in)
- ❖ GPS module
- ❖ Display module
- ❖ ACU module
- ❖ Power module
- ❖ Battery module

The basic configuration can be designed according to user requirements.

3.1 Unpacking and Inspection

When you receive the system containers, unpack and inspect the components and hardware to ensure that all parts have been received in good condition.

3.2 Freight Damage


If any parts appear to have been damaged in transit, immediately contact the freight carrier.

3.3 Material-Missing or Damaged

If any parts appear to be missing or damaged, but not as a result of handling in transit, contact your dealer or distributor.

3.4 Basic External Configuration of uSat Terminal

Item	Photo	Part Name	Quantity	Remarks
01		uSat Ku-band Portable Flat Terminal	1	Standard
02		Network Cable – 5m	1	Standard
03		Power Cable -5m	1	Standard
04		Power Adapter	1	Standard
05		Backpack	1	Standard
		epp packing box	1	Standard

06		Carton	1	Standard
----	---	--------	---	----------

4 Description of uSat Terminal

4.1 Terminal Structure Diagram

4.1.1 Automatic Satellite Communication Terminal (FL30P-E)

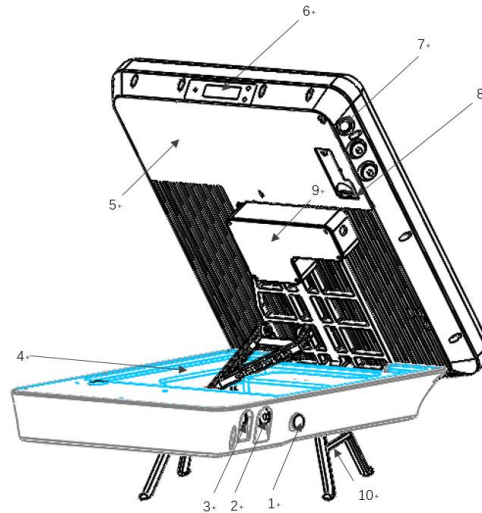


Figure 4-1-1 Component Description

1- Ventilation valve, 2-On/Off Button1, 3-Power In, 4-Base Frame, 5-Antenna, 6-OLED Display, 7-POWER ON/OFF Button2, 8-Lock, 9- Drive mechanism, 10- Rear Support Leg Components,

4.1.2 Manual Satellite Communication Terminal (FL30P-M)

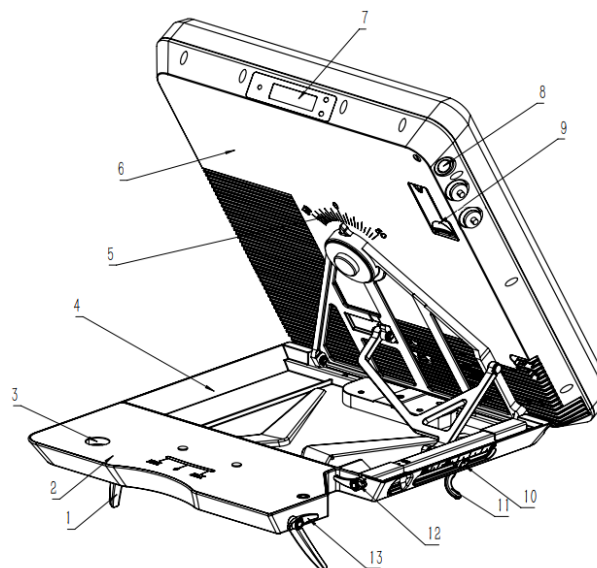


Figure 4-1-2 Component Description

1-Rear Support Leg Components, 2-Dust Cover, 3-Compass, 4-Base Frame, 5- Polarization Scale, 6-Antenna, 7-OLED Display, 8-POWER ON/OFF Button, 9-Lock, 10- Elevation Roughly Adjustment Button, 11-Front Support Leg Components, 12-Elevation Fine-Tune Adjustment Knob, 13- Azimuth Fine-Tune Adjustment Knob

4.2 Terminal Dimensions

4.2.1 Automatic Satellite Communication Terminal (FL30P-E)

The dimension drawing of the uSat Flat Terminal (Unit: mm), as shown in Figure 4-2-1.

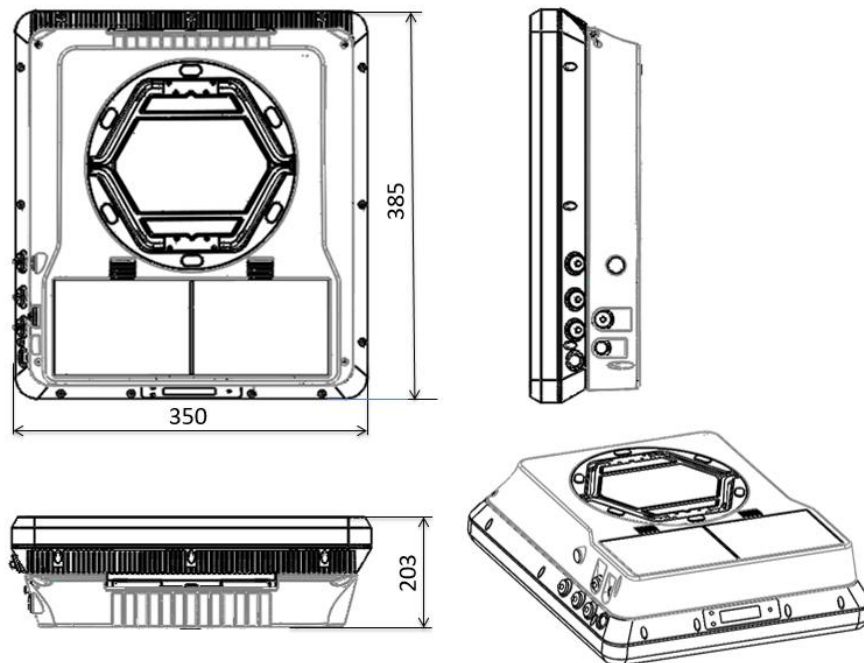


Figure 4-2-1-1 Overall Dimension

4.2.2 Manual Satellite Communication Terminal (FL30P-M)

The dimension drawing of the uSat Flat Terminal (Unit: mm), as shown in Figure 4-2-1.

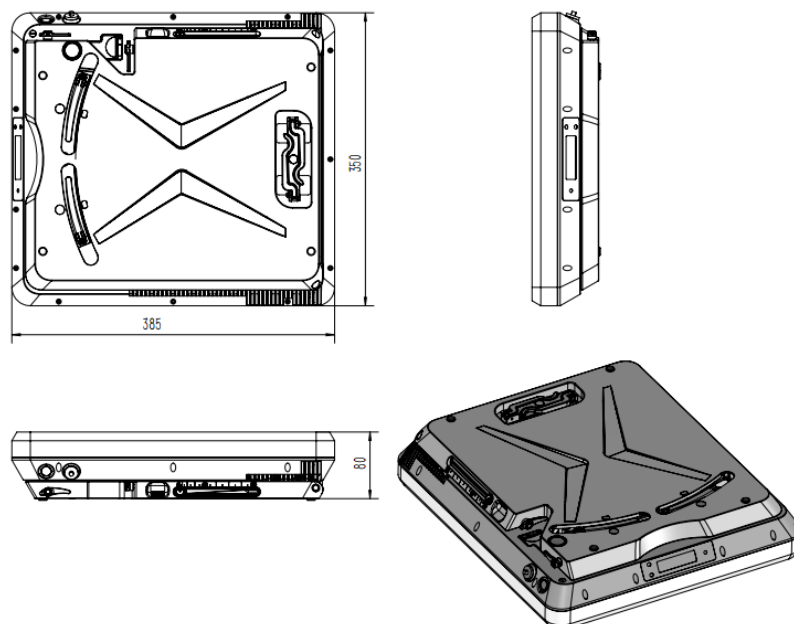


Figure 4-2-1 Overall Dimension

4.3 Terminal Wireless Access Details

❖ **Terminal Serial No (S/N):**

PMXXXXXXXXX (XXXX is the number of the following device)

❖ **MODEM:IQ200 (Take the IQ200 as example)**

IP:192.168.0.1

User: admin

Password: iDirect

❖ **Wi-Fi Router:**

SSID: HILINK-XXX

Default IP Address: 192.168.16.254

User Name: admin Password: admin

❖ **Bluetooth:**

Device Name: uSATXXXX

4.4 Matters Needing Attention

1. The uSat terminal is a valuable instrument - treat it with care.
2. Dry out the uSat terminal, before stowing, after using it in rain or snow.
3. Store the uSat terminal in a dry environment.

5 Terminal Installation, Initialization and Alignment

5.1 Terminal Installation and Initialization

5.1.1 Automatic Satellite Communication Terminal (FL30P-E)

1. Take the Terminal out of the backpack and open four support legs, as shown in Figure 5-1-1-1.

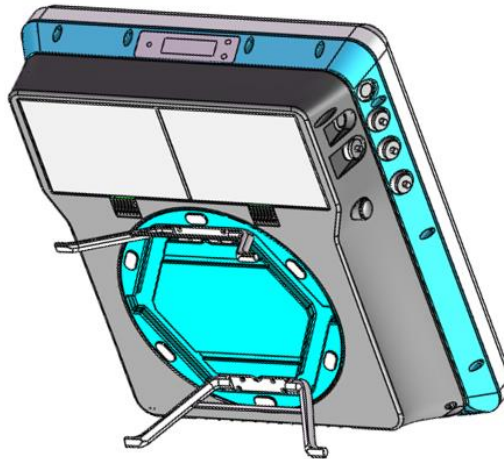


Figure 5-1-1-1 Open the Support Leg

2. Place the Terminal safely on the ground in a horizontal position, as shown in Figure 5-1-1-2.

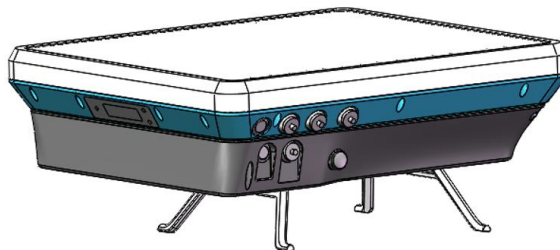


Figure 5-1-1-2 Place the Terminal on Horizontal

3. Take the power cable and connect it to the Terminal's power socket (POWER), as shown in Figure 5-1-1-3.

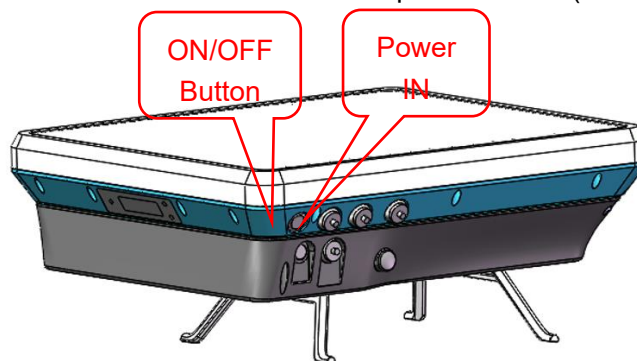


Figure 5-1-1-3 Power On

4. Connect the Power cable to the Power Source. Upon connection, the display will show the power logo, as shown in Figure 5-1-1-4.



Figure 5-1-1-4 LOGO



DANGER

- (1) The power supply requirement is 85-264VAC 50 / 60Hz
- (2) If you work on a roof, tower or other high structure or use a ladder or scaffold to access the work site, follow these precautions to prevent personal injury or death:
 - ❖ Walk only on sound roof structures.
 - ❖ Ensure that the antenna assembly and installation surface are structurally sound so that they can support all loads (equipment weight, ice, and wind).
 - ❖ Use safety equipment (for example, a lifeline) appropriate for the work location.
 - ❖ Follow all manufacturer safety precautions for all safety and other equipment used.
 - ❖ Perform as many procedures as possible on the ground.



- (3) Do not work in high wind or rain; or if a storm, lightning, or other adverse weather conditions are either present or approaching.
 - (4) Do not connect the other side of the power cable to the power source until the terminal installation completion.
5. Deploy the Terminal, move the locking tab downward firstly, and the button will automatically move downward, then the Terminal is deployed. As shown in Figure 5-1-1-5 and Figure 5-1-1-6.

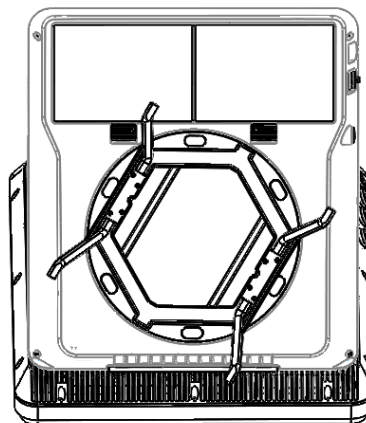


Figure 5-1-1-5 Deploy the Terminal



Figure 5-1-1-6 Deploy Status

6. When the Terminal is powered on, the Terminal will display with indicator and abbreviated text. The display icon description of system initialization is shown in Table 5-1-1. The first three items are main power supply detection, general power supply, LNB power supply and BUC power supply. when the self-test passes, it will be displayed as shown in Figure 5-1-1-7.

Table 5-1 System Initialization Icon Description

Indication					
Indicator Flashes	General Power Supply is in process of detection	LNB Power Supply is in process of detection	BUC Power Supply is in process of detection	GNSS signal is in process of detection	Attitude is in process of detection
Indicator Lights Continuously					
Indicator Lights Continuously	General Power Supply is detected	LNB Power Supply is detected	BUC Power Supply is detected	GNSS signal is acquired	Attitude is detected

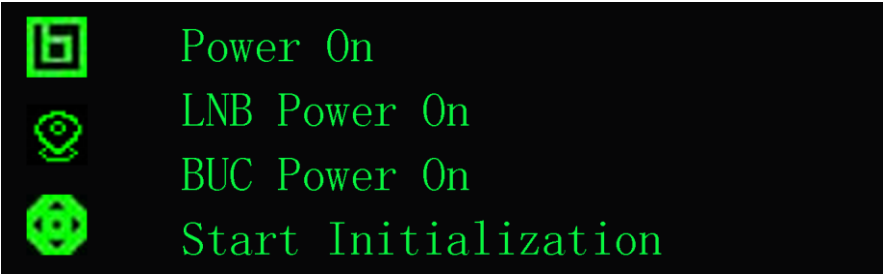


Figure 5-1-1-7 Detection Process

7. The GNSS signals acquisition process is displayed as shown in figures 5-1-1-8 and 5-1-1-9 (**Lng** is abbreviation of Longitude, **Lat** is abbreviation of Latitude).

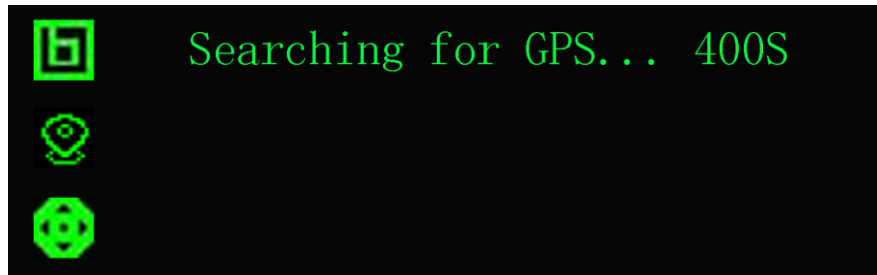


Figure 5-1-1-8 GNSS signals acquisition

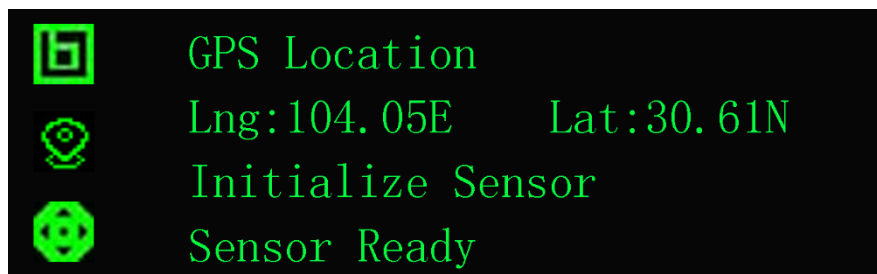


Figure 5-1-1-9 GNSS signals acquisition Successfully

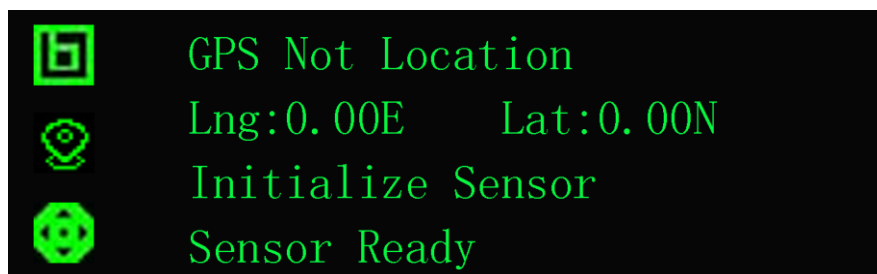


Figure 5-1-1-10 GNSS Signal Acquisition Failed

8. Currently selected satellite information, including satellite parameters as shown in Figure 5-1-1-11, currently selected working mode as shown in Figure 5-1-1-12, satellite beacon frequency and LNB Local Oscillator frequency as shown in Figure 5-1-1-13, and current version information as shown in Figure 5-1-1-14.

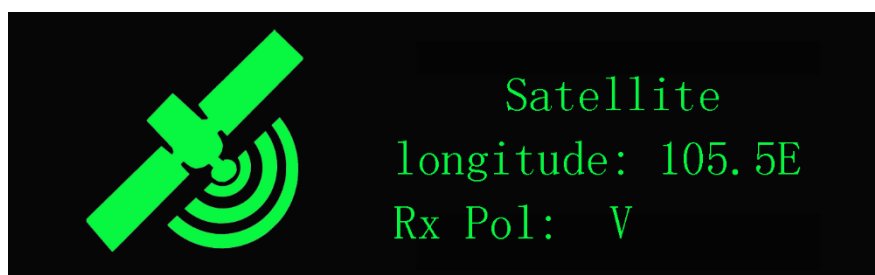


Figure 5-1-1-11 Satellite Name

Current Mode: BEACON MODE

Figure 5-1-1-12 Satellite Information

LNB LO. :10600 22K: OPENED
Beacon Freq: 12634.00

Figure 5-1-1-13 Beacon Frequency and LNB LO.

ACU Version: V1.4.1
OLED Version: V1.4.2
BUC Version: 12800

Figure 5-1-1-14 Version Information



NOTICE

- (1) When the Terminal is used for the initial time, the 'App' for Terminal Control should be used first, to set up the satellite related parameters. If the Terminal has the polarization switch function, please use the App to switch the polarization mode. Please see the operational instructions in section 7.
- (2) The 'App' for Terminal Control should also be used if it is necessary to select a different satellite. Please see the operational instructions in section 7.

9. When the Terminal is ready to align with the satellite, as shown in Figure 5-1-1-15.

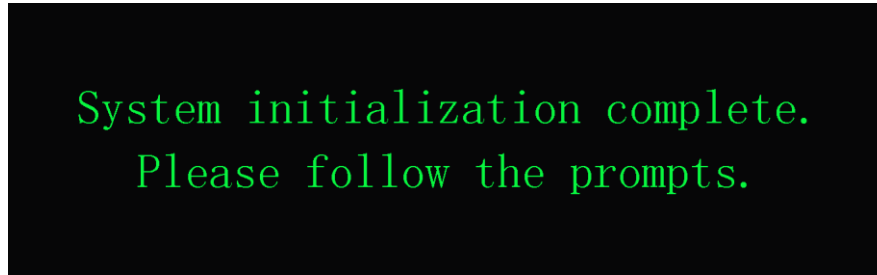


Figure 5-1-1-15 The Prompt of Alignment

5.1.2 Manual Satellite Communication Terminal (FL30P-M)

1. Take the Terminal out of the backpack and open four support legs, as shown in Figure 5-1-2-1.

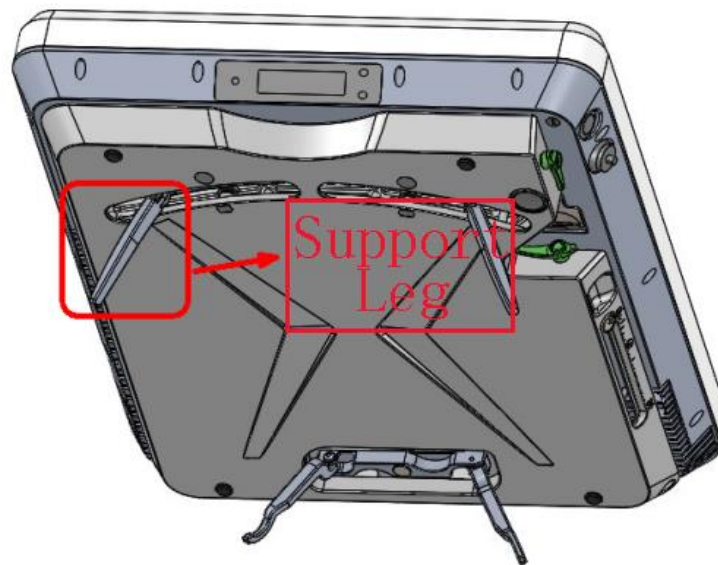


Figure 5-1-2-1 Open the Support Leg

2. Place the Terminal safely on the ground in a horizontal position, as shown in Figure 5-1-2-2.

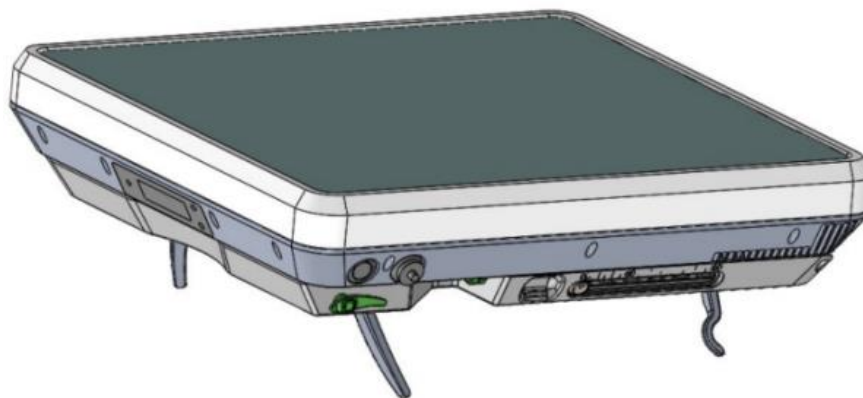


Figure 5-1-2-2 Place the Terminal on Horizontal

3. Take the power cable and connect it to the Terminal's power socket (POWER), as shown in Figure 5-1-2-3.

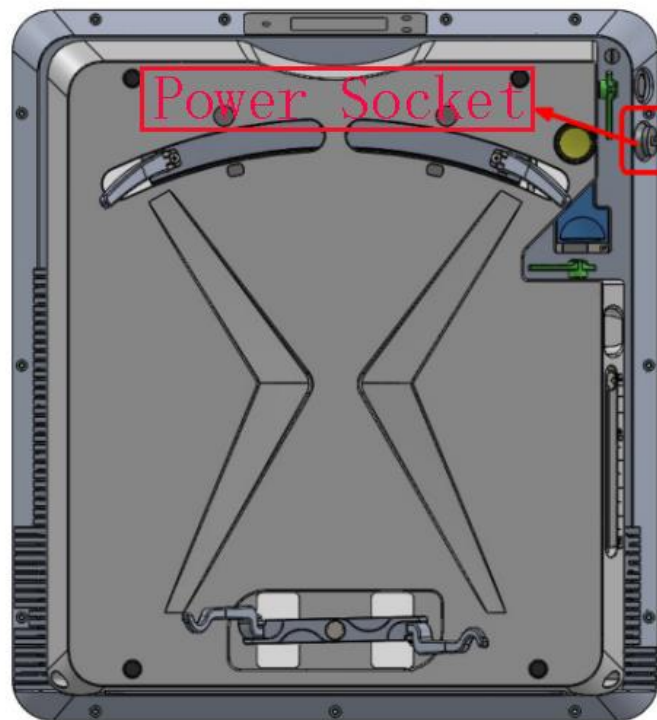


Figure 5-1-2-3 Power On

4. Connect the Power cable to the Power Source. Upon connection, the display will show the power logo, as shown in Figure 5-1-2-4.



Figure 5-1-2-4 LOGO



DANGER

- (5) The power supply requirement is 85-264VAC 50 / 60Hz
- (6) If you work on a roof, tower or other high structure or use a ladder or scaffold to access the work site, follow these precautions to prevent personal injury or death:
 - ❖ Walk only on sound roof structures.
 - ❖ Ensure that the antenna assembly and installation surface are structurally sound so that they can support all loads (equipment weight, ice, and wind).
 - ❖ Use safety equipment (for example, a lifeline) appropriate for the work location.

- ❖ Follow all manufacturer safety precautions for all safety and other equipment used.
- ❖ Perform as many procedures as possible on the ground.



- (7) Do not work in high wind or rain; or if a storm, lightning, or other adverse weather conditions are either present or approaching.
 - (8) Do not connect the other side of the power cable to the power source until the terminal installation completion.
5. Deploy the Terminal, move the locking tab downward firstly, and the button will automatically move downward, then the Terminal is deployed. As shown in Figure 5-1-2-5 and Figure 5-1-2-6.

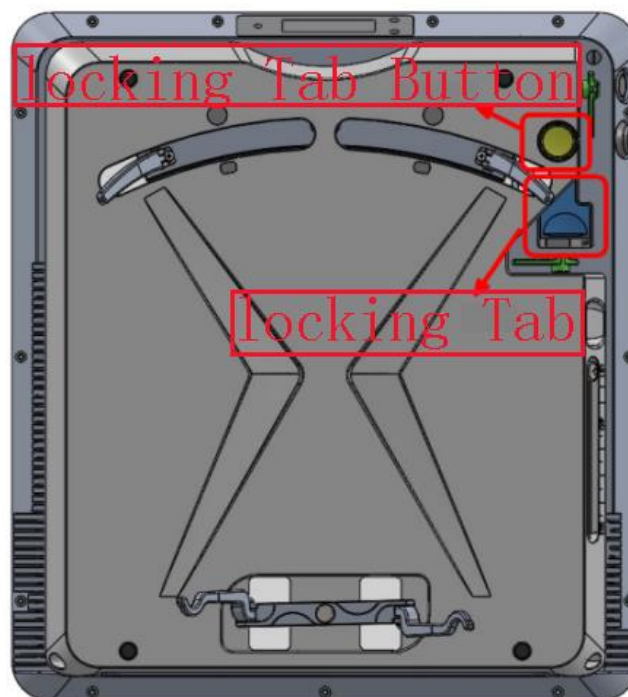


Figure 5-1-2-5 Deploy the Terminal

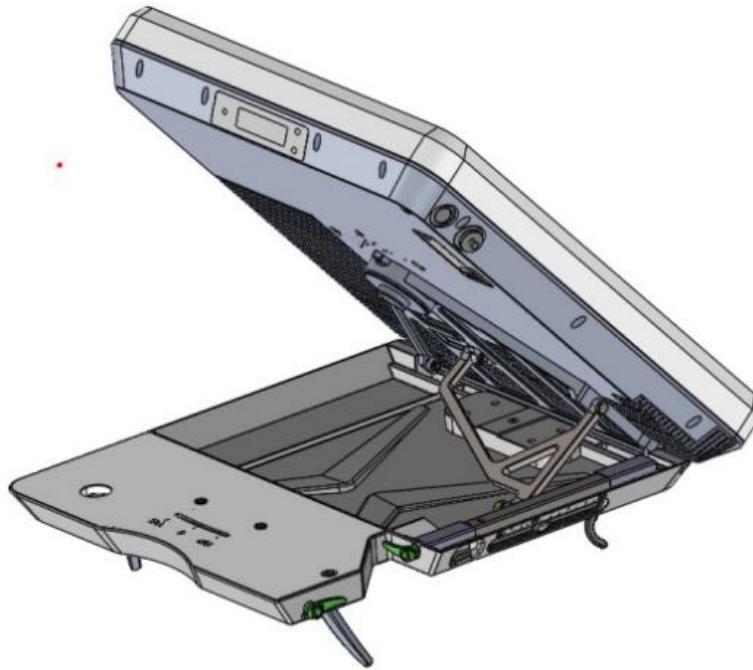












Figure 5-1-2-6 Deploy Status

6. When the Terminal is powered on, the Terminal will display with indicator and abbreviated text. The display icon description of system initialization is shown in Table 5-1-2. The first three items are main power supply detection, general power supply, LNB power supply and BUC power supply. when the self-test passes, it will be displayed as shown in Figure 5-1-2-7.

Table 5-1-2 System Initialization Icon Description

Indication					
Indicator Flashes	General Power Supply is in process of detection	LNB Power Supply is in process of detection	BUC Power Supply is in process of detection	GNSS signal is in process of detection	Attitude is in process of detection
Indication					
Indicator Lights Continuously	General Power Supply is detected	LNB Power Supply is detected	BUC Power Supply is detected	GNSS signal is acquired	Attitude is detected

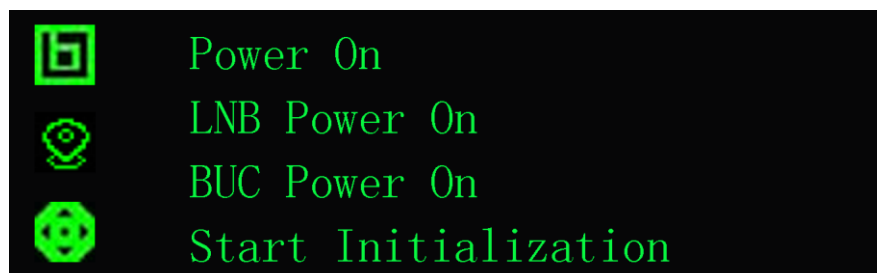


Figure 5-1-2-7 Detection Process

7. The GNSS signals acquisition process is displayed as shown in figures 5-2-8 and 5-2-9 (**Lng** is abbreviation of Longitude, **Lat** is abbreviation of Latitude).

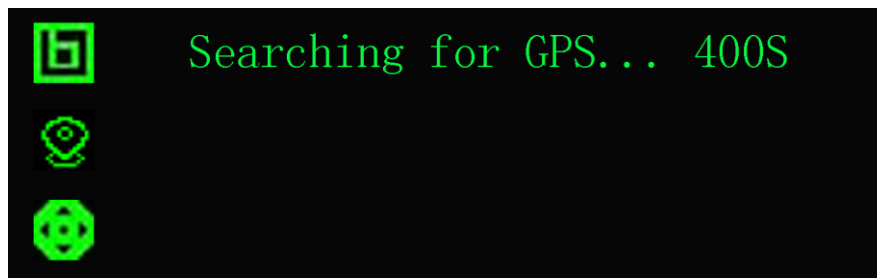


Figure 5-1-2-8 GNSS signals acquisition

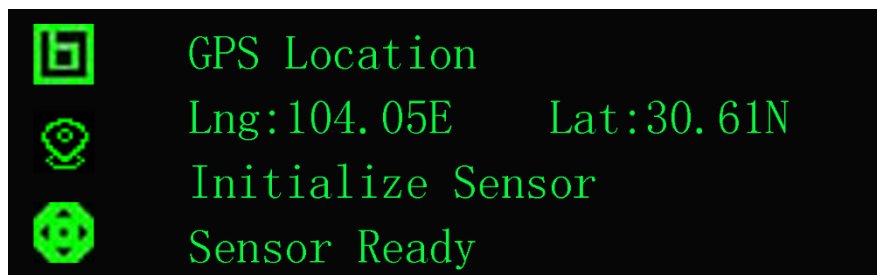


Figure 5-1-2-9 GNSS signals acquisition Successfully

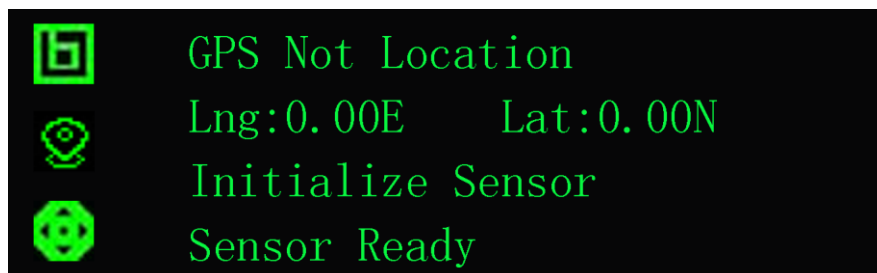


Figure 5-1-2-10 GNSS Signal Acquisition Failed

8. Currently selected satellite information, including satellite parameters as shown in Figure 5-1-2-11, currently selected working mode as shown in Figure 5-1-2-12, satellite beacon frequency and LNB Local Oscillator frequency as shown in Figure 5-1-2-13, and current version information as shown in Figure 5-1-2-14.

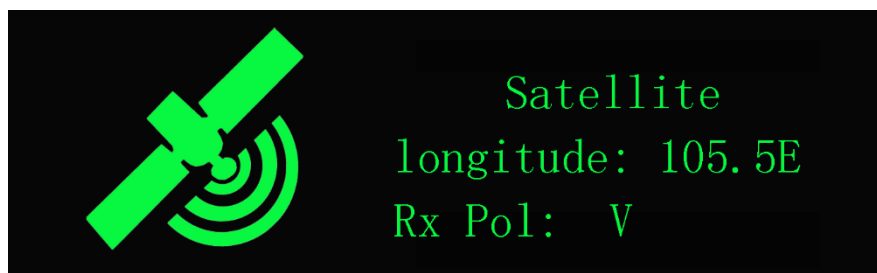


Figure 5-1-2-11 Satellite Name

Current Mode: BEACON MODE

Figure 5-1-2-12 Satellite Information

LNB LO. :10600 22K: OPENED
Beacon Freq: 12634.00

Figure 5-1-2-13 Beacon Frequency and LNB LO.

ACU Version: V1.4.1
OLED Version: V1.4.2
BUC Version: 12800

Figure 5-1-2-14 Version Information



NOTICE

- (3) When the Terminal is used for the initial time, the 'App' for Terminal Control should be used first, to set up the satellite related parameters. If the Terminal has the polarization switch function, please use the App to switch the polarization mode. Please see the operational instructions in section 7.
- (4) The 'App' for Terminal Control should also be used if it is necessary to select a different satellite. Please see the operational instructions in section 7.

9. When the Terminal is ready to align with the satellite, as shown in Figure 5-1-2-15.

System initialization complete.
Please follow the prompts.

Figure 5-1-2-15 The Prompt of Alignment

5.2 Terminal Alignment

5.2.1 Automatic Satellite Communication Terminal (FL30P-E)



NOTICE

Rotate the adjustment knobs slowly during the antenna pointing.

- The display indications for antenna adjustment are described in Table 5-2-1-1. The following abbreviations are used: **EL** – Elevation (Up and Down), **AZ** – Azimuth (Left and Right), **POL** – Polarization (Clockwise and Counter Clockwise).

EL		AZ		POL	
UP	DOWN	LEFT	RIGHT	CW	CCW
					

Table 5-2-1-1

- When **EL** is displayed for the first time an automatic, coarse adjustment of antenna's Elevation angle is performed (Figure 5-2-1-1). The corresponding values are represented on the right side of the display. (**Ref** = Reference value, **Cur** = Current value). **LOCKED**, followed by the sign □ indicates, that the terminal is still not aligned to the satellite. **LOCKED**, followed by the sign ■ indicates, that the terminal is aligned to the satellite.



Figure 5-2-1-1: Elevation adjustment display

3. The coarse adjustment of the Elevation angle is completed when the indication, shown in Figure 5-2-1-2, is displayed.



Figure 5-2-1-2: Elevation angle coarse adjustment is completed

4. When **POL** is displayed for the first time, the automatic, coarse adjustment of antenna's Polarization is performed (Figure 5-2-1-3).



Figure 5-2-1-3: Polarization adjustment display

5. The coarse adjustment of the Polarization angle is completed when the indication, shown in Figure 5-2-1-4, is displayed.



Figure 5-2-1-4: Polarization angle coarse adjustment is completed

6. When **AZ** is displayed for the first time the automatic, coarse adjustment of antenna's Azimuth is performed (Figures 5-2-1-5). The current Beacon receiver signal-quality (**SQ**) and the maximum available signal quality (**MAX**) are represented on the right side of the display.



Figure 5-2-1-5: Azimuth adjustment display

7. The coarse adjustment of the Azimuth is completed when the indication, shown in Figure 5-2-1-6, is displayed.



Figure 5-2-1-6: Azimuth adjustment is completed

8. When **EL** is displayed for the second time the antenna performs an automatic fine-tune of the Elevation angle. The current Beacon receiver signal quality (**SQ**) and the maximum available signal quality (**MAX**) are represented, on the right side of the display.



Figure 5-2-1-7: Elevation angle fine-tune

9. The Elevation angle 'fine-tune' is completed when the indication, shown in Figure 5-2-1-8, is displayed.



Figure 5-2-1-8: Elevation angle fine-tune is completed

10. When **POL** is displayed for the second time the antenna perform an automatic fine-tune of the Polarization. The current Beacon receiver signal quality (**SQ**) and the maximum available signal quality (**MAX**) are represented, on the right side of the display.



Figure 5-2-1-9: Polarization angle fine-tune

11. The polarization 'fine-tune' is completed when the indication, shown in Figure 5-2-1-10, is displayed.



Figure 5-2-1-10: Polarization angle fine-tune is completed

12. When the complete alignment of the antenna is finished, the indication shown in Figure 5-2-1-11 is displayed (within 3 seconds).



Figure 5-2-1-11: Alignment completion indication

13. Within a further 3 seconds the antenna alignment message, shown in Figure 5-2-1-12 is displayed.

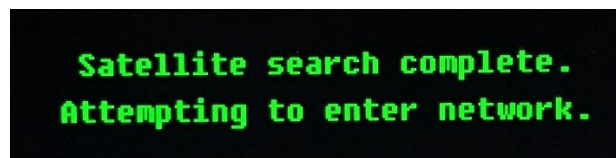


Figure 5-2-1-12: Alignment full completion message



Figure 5-2-1-13: Signal quality display

14. LED state:

OLED normal display, the LED flashing frequency is 1 second, two flashes at one time;

OLED Hibernation mode, the LED flashing frequency is 3 second, two flashes at one time;

Press the touch key, LED flash fast, when the OLED enter the Hibernation mode, can make the screen light up.



NOTICE

Rotate the adjustment knobs slowly during the antenna pointing.

1. After satellite alignment is completed, BUC is enabled automatically, as shown in Figure 5-25. After successful network access, the network can be used, as shown in Figure 5-26.

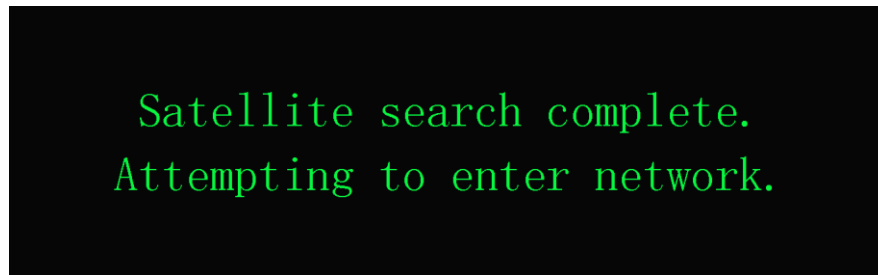


Figure 5-25 Prompt for Satellite Completion

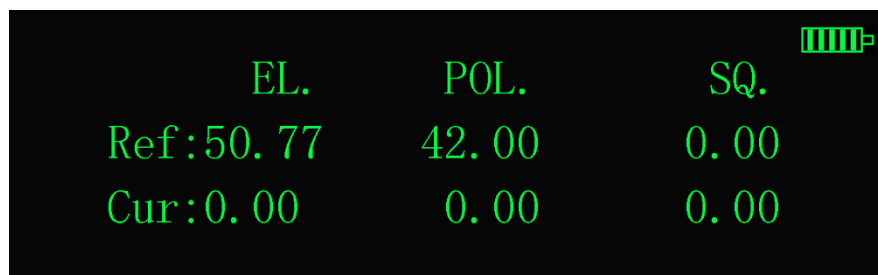


Figure 5-26 Signal Quality Display

5.2.2 Manual Satellite Communication Terminal (FL30P-M)



NOTICE

Rotate the adjustment knobs slowly during the antenna pointing.

1. According to the satellite direction, adjust the antenna elevation, polarization and azimuth to align the satellite. In the adjustment process, you can refer to the prompt information shown in Figure 5-2-2-1.

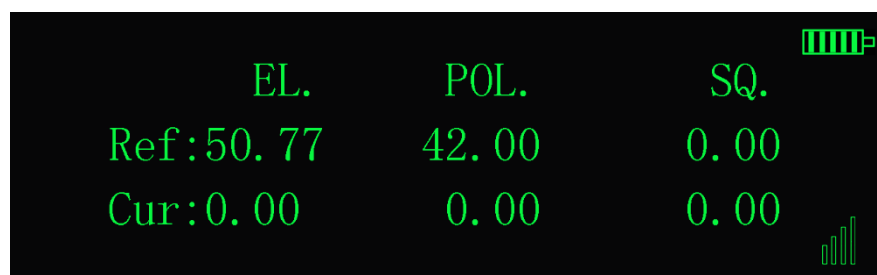


Figure 5-2-2-1 The Prompt of Alignment

2. Elevation coarse adjustment: Press the elevation coarse adjustment button with the right middle finger, press the handle with the index finger, and lift the panel upward with the left hand, that is,

release the fixed lock between the Terminal panel and the base frame, and adjust the elevation adjustment mechanism to make the current elevation angle consistent with the reference elevation angle, as shown in figure 5-2-2-2, 5-18 and 5-2-2-3.

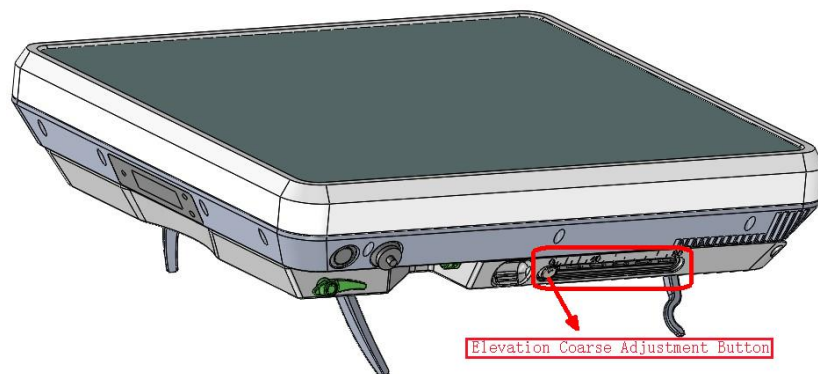


Figure 5-2-2-2 Elevation coarse adjustment button

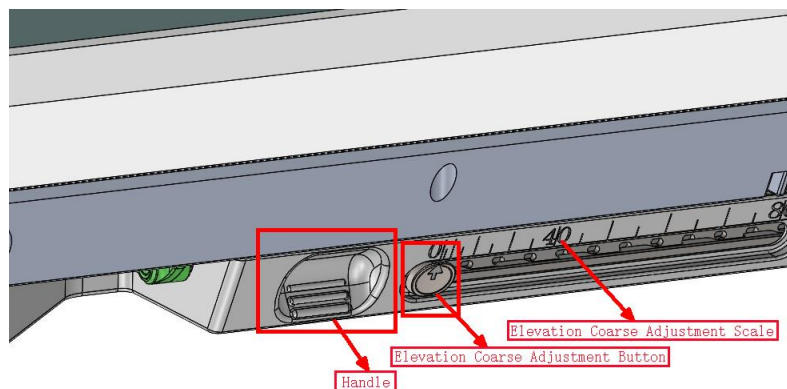


Figure 5-2-2-3 Handle, Elevation coarse adjustment button, Elevation coarse adjustment angle scale

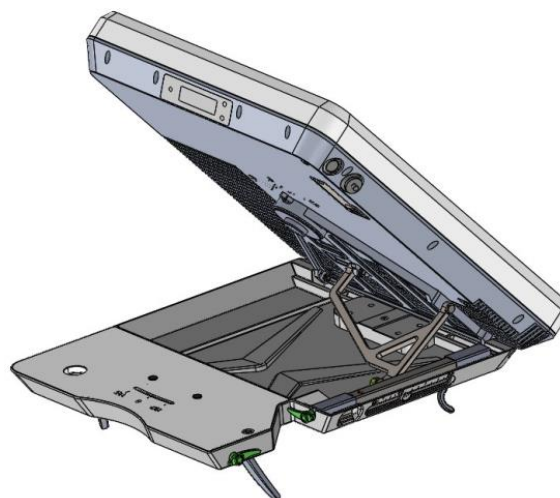


Figure 5-2-2-4 Elevation Coarse Adjustment Status

3. Polarization adjustment: The user rotates the Terminal panel according to the demand to make the current polarization angle consistent with the reference polarization angle. As shown in figure 5-2-2-5 and 5-2-2-6.

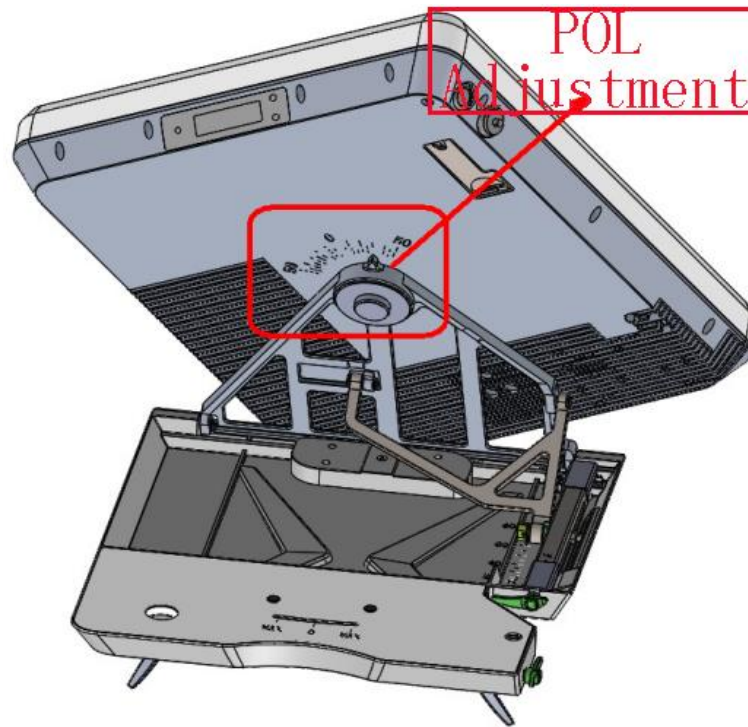


Figure 5-2-2-5 Polarization Adjustment

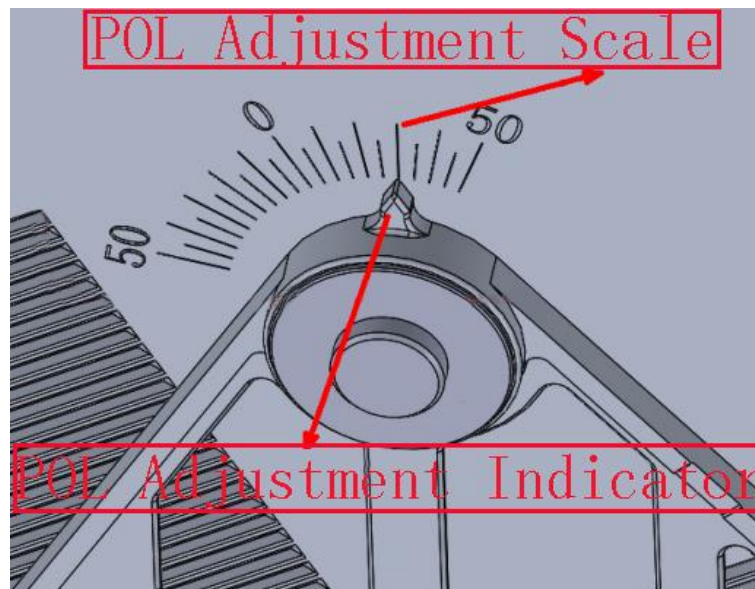


Figure 5-2-2-6 Polarization Adjustment Scale and Indicator

4. Coarse adjustment of azimuth: The whole Terminal is directly rotated during the coarse adjustment of azimuth to ensure that the elevation angle remains unchanged as far as possible until the signal quality appears, that is to say, to find the approximate position of the satellite.
5. The screen appears as shown in Figure 5-2-2-7 According to the signal quality shown on the display, the elevation, azimuth and polarization can be adjusted manually to find a better signal value.

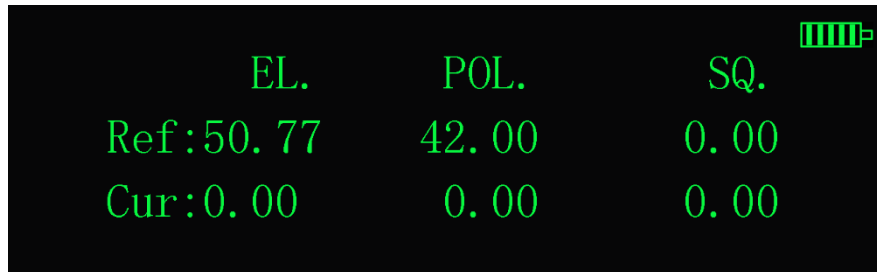


Figure 5-2-2-7 Signal Quality

6. Elevation fine tune: According to the satellite signal quality, rotate the elevation fine tune knob, as shown in Figure 5-2-2-8.

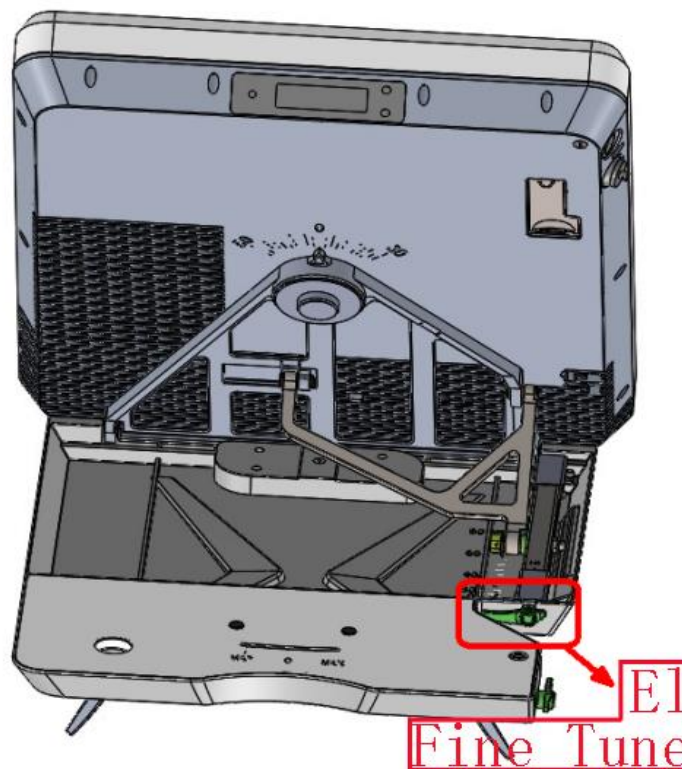


Figure 5-2-2-8 Elevation Fine Tune Knob

7. Azimuth fine tune: According to the satellite signal quality, rotate the azimuth fine tune knob, as shown in Figure 5-2-2-9.

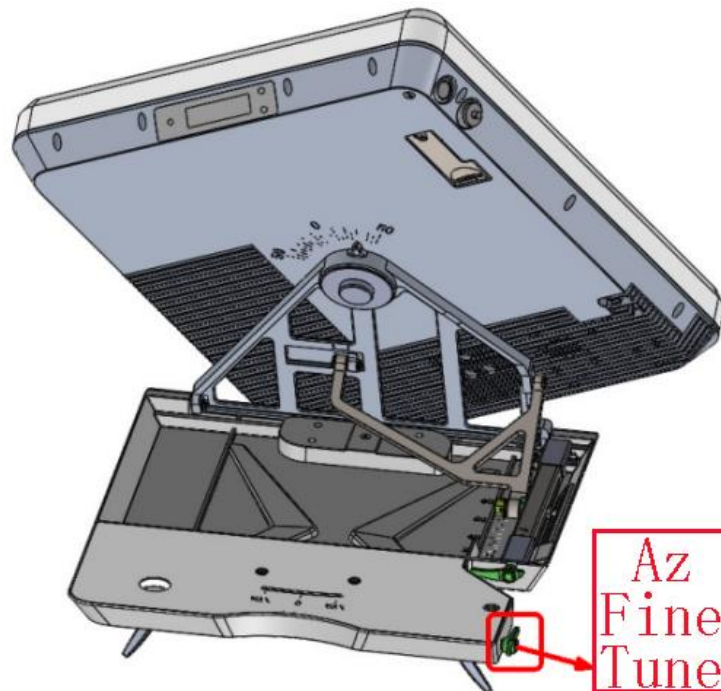


Figure 5-2-2-9 Azimuth Fine Tune Knob



NOTICE

Rotate the adjustment knobs slowly during the antenna pointing.

8. After satellite alignment is completed, BUC is enabled automatically, as shown in Figure 5-2-2-10. After successful network access, the network can be used, as shown in Figure 5-2-2-11.

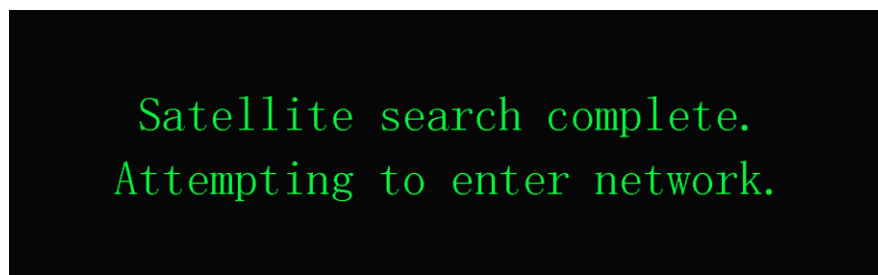


Figure 5-2-2-10 Prompt for Satellite Completion

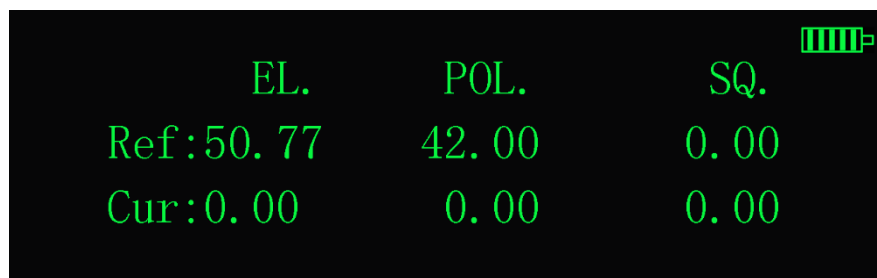


Figure 5-2-2-11 Signal Quality Display

5.2.3 Terminal Alignment Other Function introduction

(1) Beam Switch

Press and hold the sub key to enter the sub interface. If it is not in the beam switching interface, continue to press the sub key to switch to the beam switching interface. At the same time, press and hold the main and sub keys to send the beam switching command, as shown in Figure 5-2-3-1 and Figure 5-2-3-2.

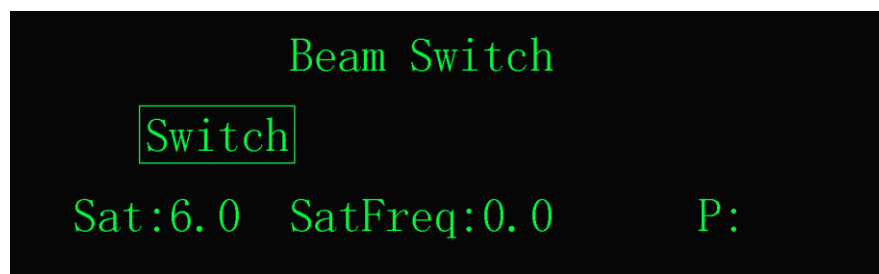


Figure 5-2-3-1 Beam Switch Start

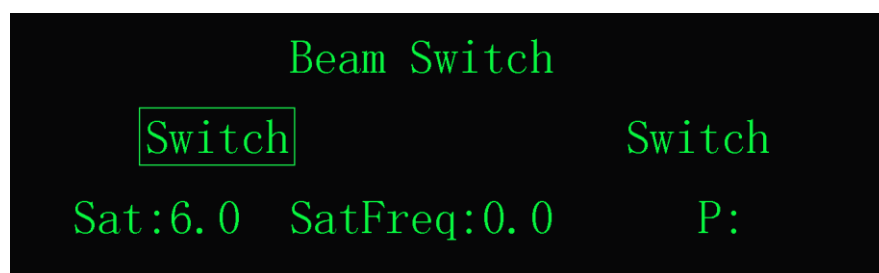


Figure 5-2-3-2 Beam Switch Success

(2) BUC Control:

- There are two infrared keys on the right side of OLED screen, which are arranged vertically. The upper key is the main key to control the main interface, and the lower key is the sub key to control the sub interface.
- The switch between the main and sub interfaces is realized by press and hold the corresponding key, that is, press and hold the main key can switch from the sub interface to the main interface, or switch in each sub interface of the main interface, and press and hold the sub key can switch from the main interface to the sub interface, or switch in each sub interface of the sub interface.
- The function of sub interface (such as BUC on/off) is realized by pressing the main and sub keys at

the same time.

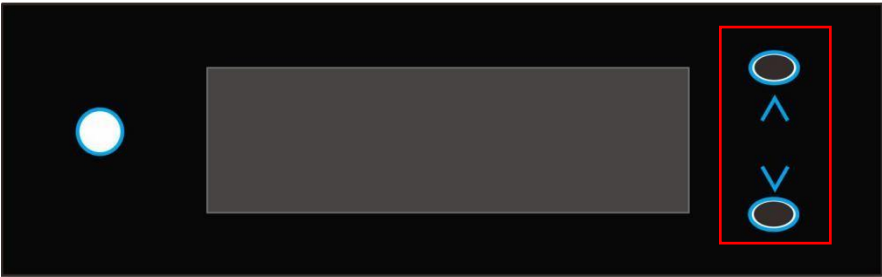


Figure 5-2-3-4 Infrared Key

Infrared Keys	Name	Sub Interface 1	Sub Interface 2
Upper Key	Main Key/Main Interface	Alignment Interface	Information Interface
Lower Key	Sub Key/Sub Interface	BUC Control Interface	Beam Switch Interface

Table 5-3-1 Key Function

- S status analysis:
- The first bit has no meaning;
 - The second bit indicates emission enable, 0: not enable, 1: enable;
 - The third bit indicates the transmitted local oscillator, 0:12800mhz, 1:13050mhz;
 - The fourth bit indicates receive enable, 0: not enabled 1: enabled;
 - The fifth bit indicates receiving Lo, 0: 9750 1:10600 2:11300;

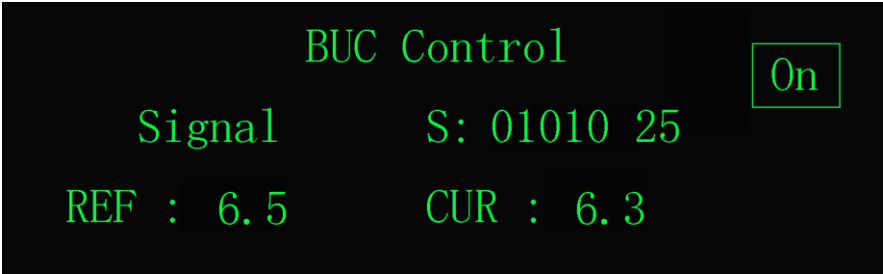


Figure 5-2-3-5 BUC Control Switch On

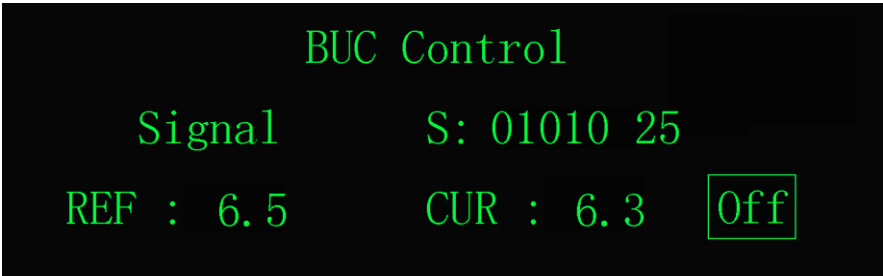





Figure 5-2-3-6 BUC Control Switch Off

(3) LED state:

- ❖ OLED normal display, the LED flashing frequency is 1 second, two flashes at one time;
- ❖ OLED Hibernation mode, the LED flashing frequency is 3 second, two flashes at one time;
- ❖ Press the touch any key, LED flash fast, when the OLED enter the Hibernation mode, can make the screen light up.

(4) Information Interface

Press and hold the sub key to enter the sub interface. If it is not in the information interface, continue to long press the main key to switch to the information interface. The version information 5-2-3-7 currently selected working mode 5-2-3-8, satellite parameter 5-2-3-9 and signal quality prompt 5-2-3-10.

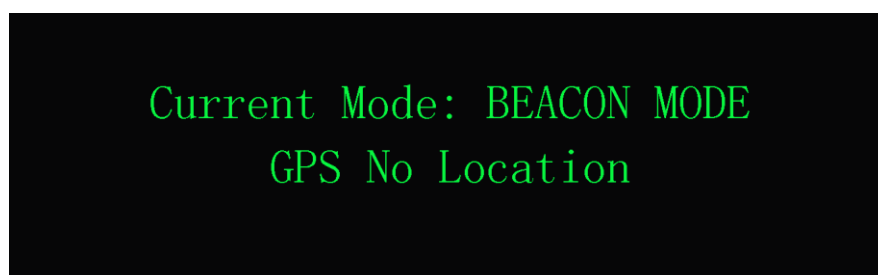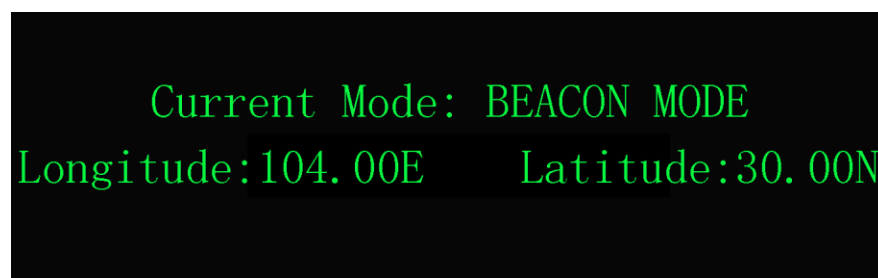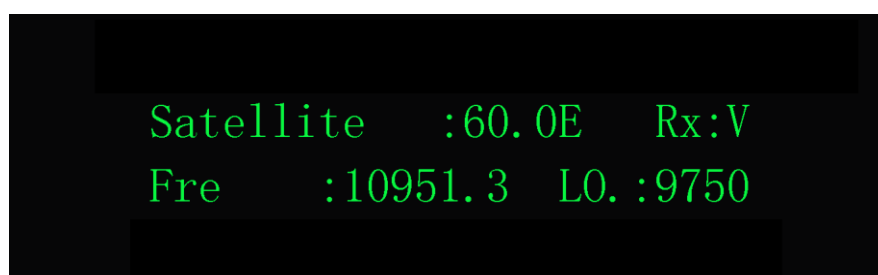**Figure 5-2-3-7 Version Information****Figure 5-2-3-8 Current Working Mode****Figure 5-2-3-9 Satellite Parameter**

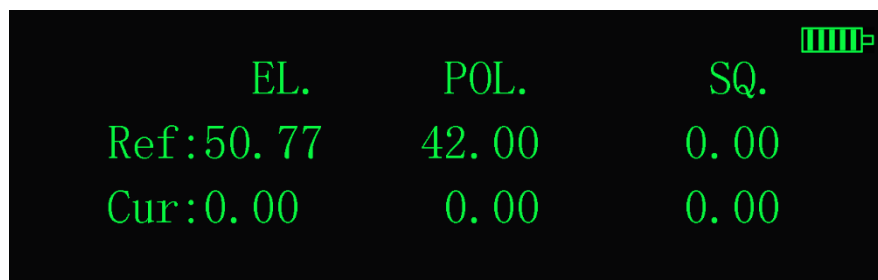


Figure 5-2-3-10 Signal Quality Prompt

6 Modem Status Indication

Note: Take the IQ200 Modem As example:

- The Modem Status indication is shown in Figure 6-1.



POWER	STATUS	TX	RX	NET
Ready:  Not Ready: 				

Figure 6-1 Modem Status Indicator Icon

- The Modem status indication is shown in Table 6-1 and Figure 6-2.

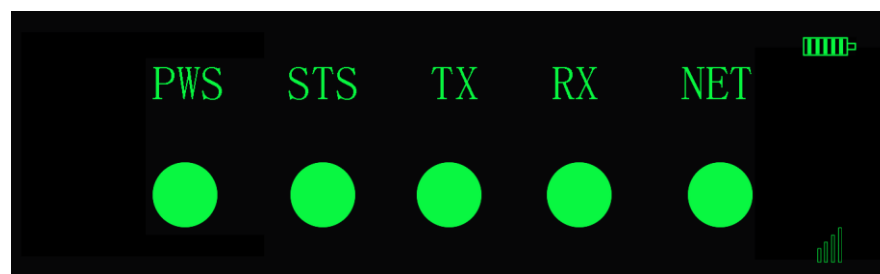


Figure 6-2 Modem Status

Indication	PWS	Tx	Rx	STA	NET
Indicator flashes	The modem Powering Status is NOT COMPLETED	The modem TX Status is OFF	The modem RX Status is NOT LOCKED	The modem LINK Status is CONNECTING	The modem NET Status is CONNECTING
Indicator lights continuously	The modem Powering Status is COMPLETED	The modem TX Status is ON	The modem RX Status is LOCKED	The modem LINK Status is CONNECTED	The modem NET Status is CONNECTED

Table 6-1 Modem Status

- FL30 is connected to the network cable for modem network access debugging, computer web page address input: IP: **192.168.0.1**; Main interface user name: **admin**, main interface password: **iDirect**. Click the "Log In" button on the main interface, click "Continue" - "Continue with Wizard" to enter the

modem interface, and directly click the lower right corner to enter the next step. When entering the interface Figure 6-7, enter the satellite longitude 134 in the "Satellite Longitude" in the lower right corner, click to enter the interface Figure 6-8, and set the low LO or high LO as required in the interfaces Figure 6-8 to Figure 6-11. If the high LO is set, the interface of modem web page is shown in Figure 6-8, and the App application is shown in Figure 6-9; If low LO is set, the interface of modem web page is shown in Figure 6-10, and the App is shown in Figure 6-11. Other setting operation interfaces can be set according to the page, as shown in Figures 6-3 to 6-12. Configure all flow photos for Modem.



Figure 6-3 Modem Web UI

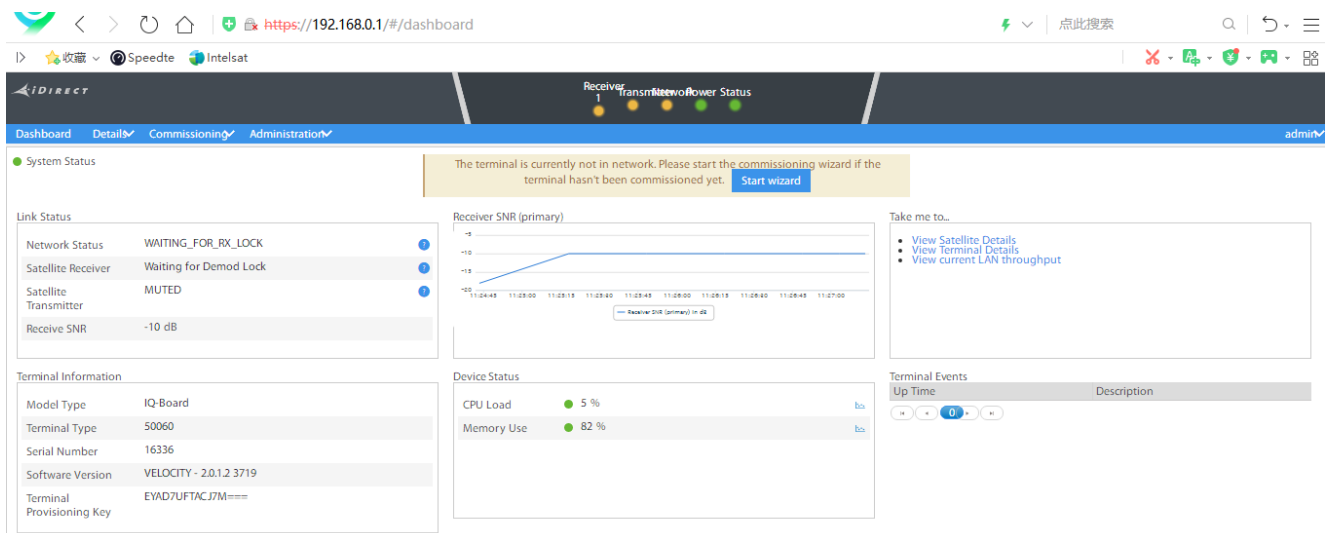


Figure 6-4 Modem Web UI

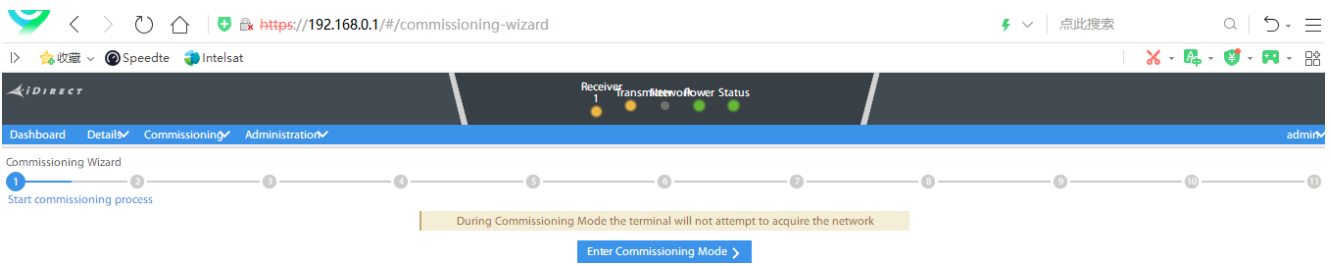


Figure 6-5 Modem Web UI

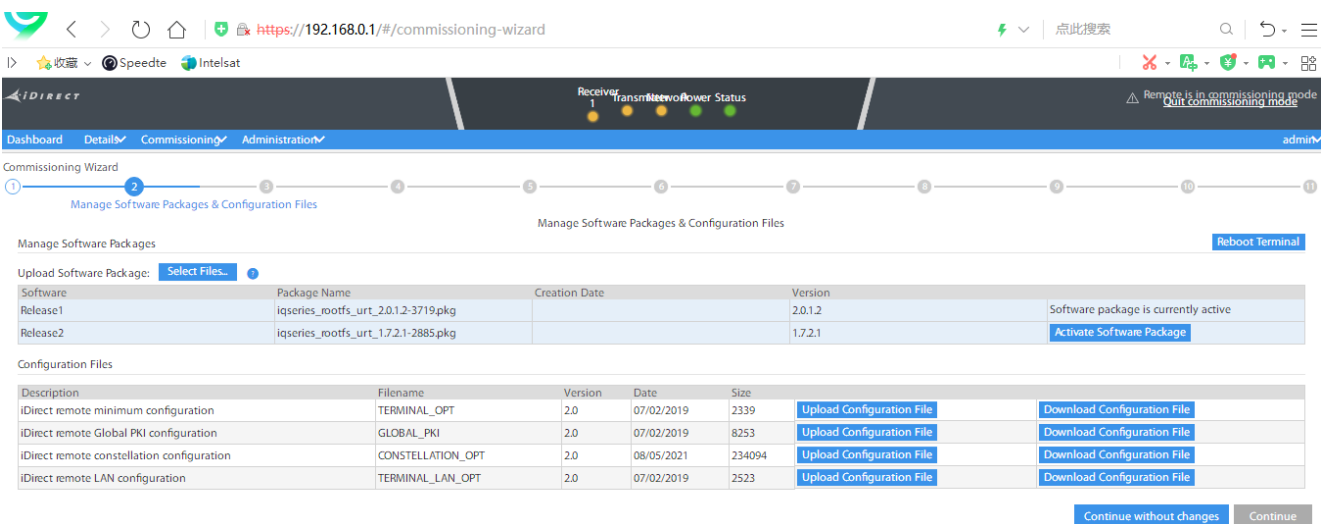


Figure 6-6 Modem Web UI

Commissioning Wizard

Coarse antenna pointing

Please adjust the values on the left in order to calculate the coarse antenna pointing on the right.

Remote Position

Remote Latitude: 30.6100 * (0 - 90)

Remote Latitude Direction: North

Remote Longitude: 104.0300 * (0 - 180)

Remote Longitude Direction: East

Antenna

Elevation Offset: 0.0000 * (0 - 90)

Calculated coarse antenna pointing

Elevation Actual: 41.7 degrees (Actual = True - Offset)

Azimuth True: 131.4 * (Geographic north = 0°)

Polarization Offset: -40.2 * (Polarization Angle Sense)

Elevation True: 41.7 * (Horizontal = 0° Straight up = +90°)

Satellite Position

Satellite Longitude: 134.0000 * (0 - 180)

Satellite Longitude Direction: East

Save remote location and continue

Figure 6- 7 Modem Web UI

Commissioning Wizard

Configure downstream

Enter applicable downstream parameters. These values will be used for pointing the antenna.

RF Frequency: 11.4062500 MHz (0 - 40000)

Modulation: ACM

Symbol Rate: 24.750.00 Ksps

Roll-off: 20 %

Receive Polarization: Horizontal

Transmit Polarization: Horizontal

Latitude Variance: * (0 - 90)

Polarization Skew: * (-90 - 90)

Continue & position antenna

Figure 6-8 Modem Web UI High LO Configuration

Terminal

Current connection device
FINDER_uSAT106(MODEM)

Device information Search setting

LNB parameter

LO
10600

Satellite parameter

Satellite
Telstar 18(138.0E)

Pol type
H

Position parameter

Lng E W 104.18

Lat N S 30.69

SEND TO THE DEVICE AZIMUTH INDICATOR

Figure 6-9 APP High LO Configuration

← → 192.168.0.1/#/commissioning-wizard

Dashboard Details Commissioning Administration

Commissioning Wizard

1 2 3 4 5 6 7 8 9 10 11

Configure downstream

Configure downstream

Enter applicable downstream parameters. These values will be used for pointing the antenna.

RF Frequency 12,514.4000 MHz (0 - 40000)

Modulation ACM

Symbol Rate 1,040.00 Kbps (1000 - 45000)

Rolloff 15 %

Receive Polarization Horizontal

Transmit Polarization Vertical

Latitude Variance ° (-90 - 90)

Polarization Skew ° (-90 - 90)

Continue & position antenna

Figure 6-10 Modem Web UI Low LO Configuration

Terminal

Current connection device
FINDER_uSAT106(MODEM)

Device information Search setting

LNB parameter

LO
9750

Satellite parameter

Satellite
Telstar 18(138.0E)

Pol type
H

Position parameter

Lng E W 104.18

Lat N S 30.69

SEND TO THE DEVICE AZIMUTH INDICATOR

Figure 6-11 APP Low LO Configuration

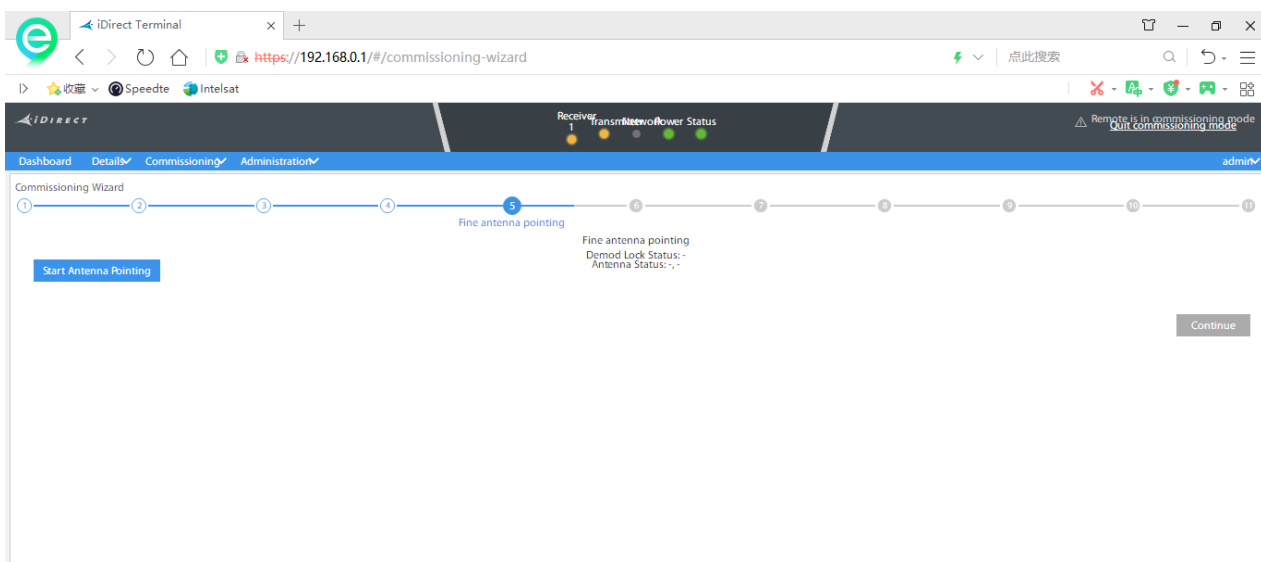


Figure 6-12 Modem Web UI

**NOTICE**

If necessary, perform additional alignment to get better signal quality values.

7 Application ('App') for Terminal Control

The User name and password of iOS is same with Android platform

User: admin Password: starwin

Download Android App from website <http://www.starwincom.com/Support>

iOS App searches "**steerwin**" in Apple store for download

When APP prompts you to get location permissions, give APP location permission.

1. Choose the language, as shown in Figure 7-1.



Figure 7-1



Figure 7-2

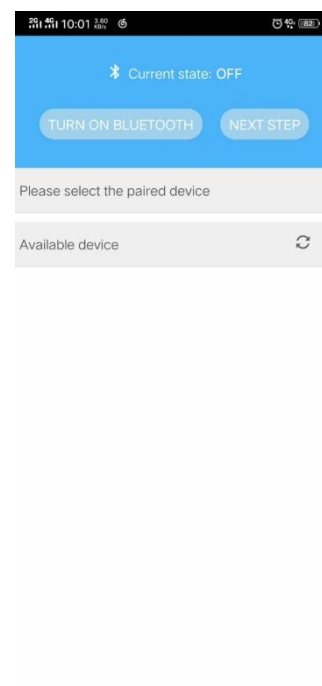


Figure 7-3

2. The APP prompts you for a username and password.

User Name: admin

Password: starwin

If necessary, please check "Save Password", as shown in Figure 7-2.

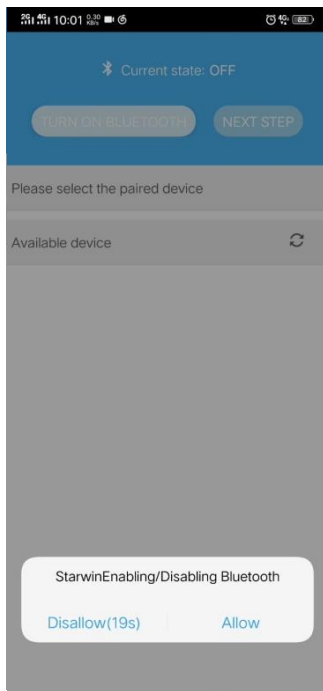


Figure 7-4

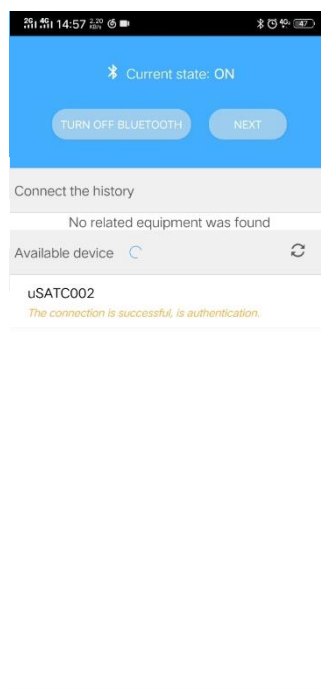


Figure 7-5

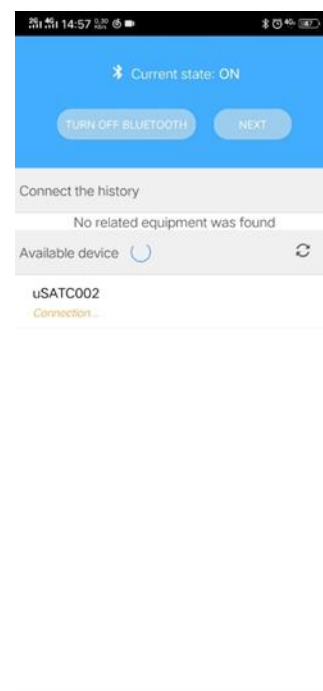


Figure 7-6

3. If you have already turned on the Bluetooth, please jump to the fourth step;

If you do not turn on Bluetooth, please click "TURN ON BLUETOOTH" and allow APP to open Bluetooth, as shown in Figures 7-3 and 7-4.


4. Click on the refresh icon  behind the title "Available device". Search for new Bluetooth devices (uSATxxxx, xxxx is numbers), then click the Bluetooth device name you want to connect, at this point, the APP needs to be authorized by the Terminal, as shown in Figure 7-6, when the Terminal receives the request information of Bluetooth, the buzzer will give sound prompt at the frequency of 1 second (30 seconds will timeout), and only sound prompt will be given on other pages (such as GPS search page). You need to click the touch button on the OLED display screen of the Terminal (as shown in Figure 7-7).



Figure 7-7 The touch button on OLED display screen

If the touch button does not click during the timeout (30 seconds), the authorization fails. APP will prompt "The connection is failed, please click retry", as shown in Figure 7-8.

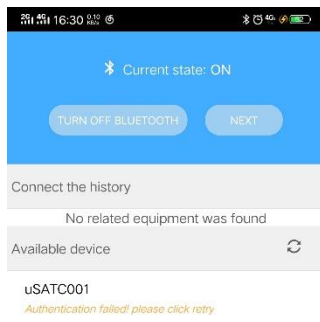


Figure 7-8

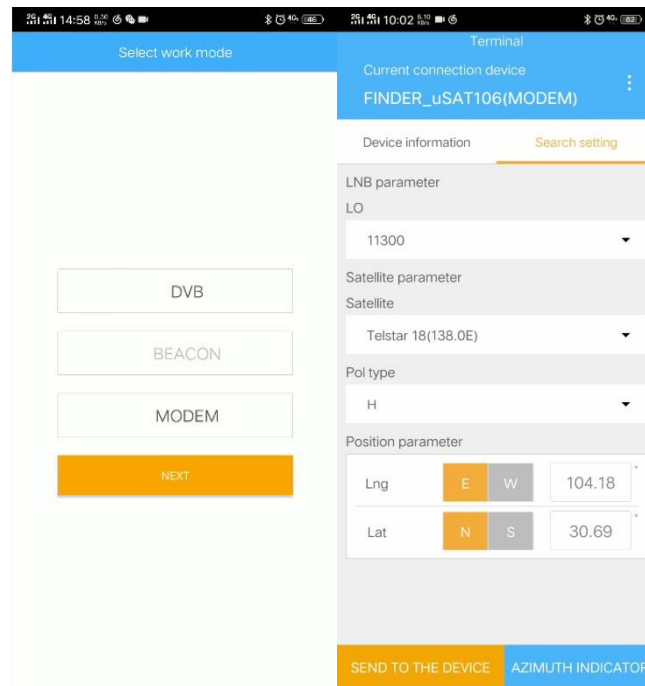


Figure 7-9

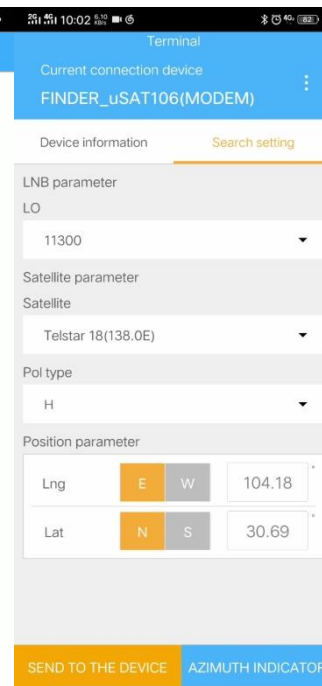


Figure 7-10

5. After the authorization is successful, select the device that needs to be connected in the list and click "NEXT", as shown in Figure 7-6.
6. Selecting the work mode, the device will be fed back to APP according to the mode that it can support. APP provides the mode of choice, as shown in Figure 7-9.

Select which mode you want to work, such as Beacon and then enter the main interface, as shown in Figure 7-10.

If the Terminal cannot find GPS (Terminal cannot locate), please enter the GPS value manually on the page shown in Figure 7-10 and send it to the device together with the satellite information, then the Terminal will reboot.

When the Terminal reboots, during the GPS search, press the upper right key to skip the GPS positioning step, and the Terminal will take the GPS value sent to the Terminal as a reference.

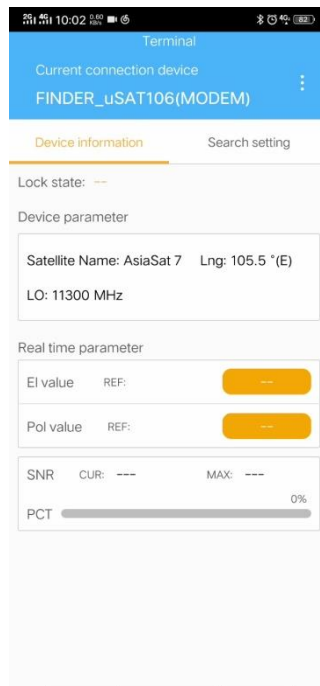


Figure 7-11

7. The main interface is divided into two main functions.

Device Information: The current parameter configuration of the device, the display of device attitude, as well as the real time and maximum values of the signal quality obtained under the current mode, as shown in Figure 7-11.

Search Setting: Local oscillator selection list, satellite selection list, polarization selection list, beacon frequency input box, and location parameters, after set up the satellite-searching parameters in this interface, click "SEND TO THE DEVICE", then confirm the parameters are correct, click "OK", the parameters can be sent to the device, and then according to the APP prompt, you can choose to reconnect the device or cancel, as shown in Figures 7-12 to 7-15, if canceled, the interface will return to Bluetooth device list interface as shown in Figure 7-8.

Note: FL30 series products do not support DVB mode.

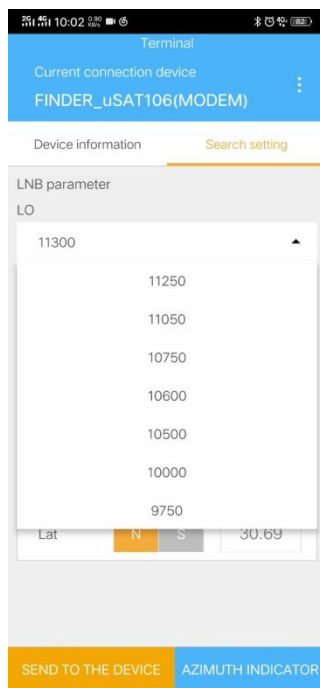


Figure 7-12

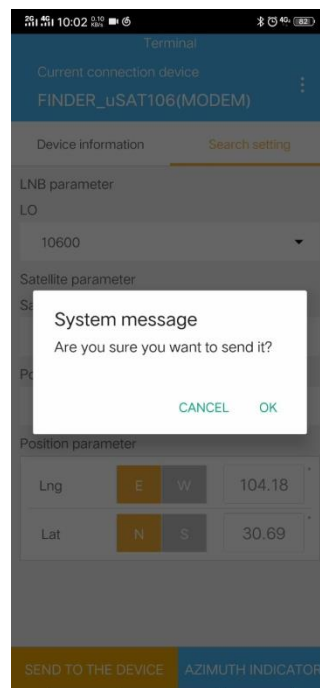


Figure 7-13

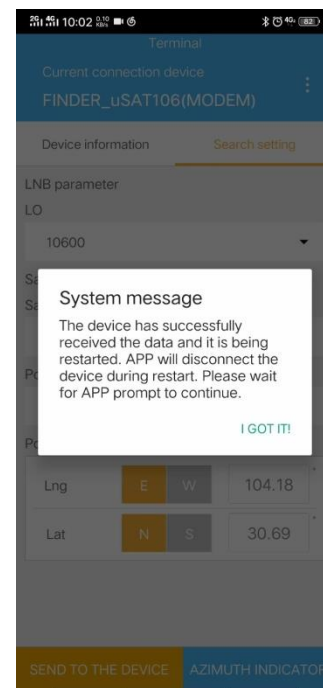


Figure 7-14

8. If you need to disconnect, click the three dots on the upper right corner and select "Disconnect device", then click the "Ok", as shown in Figure 7-16.
9. **Adding Satellite:** Click on the three dots in the upper right corner, then click "Management Center", "Satellite management" in turn, APP has built in the frequently-used satellite,

If there are target satellite, you just check the circle front the satellite, as shown in Figure 7-17.

If there are not the target satellite, click the "+" on the upper right corner to enter the satellite add interface, as shown in Figure 7-18, enter the satellite name and satellite longitude, click "SAVE" to complete the addition, then return to the previous step, check the newly added satellite and it will appear in the satellite selection list, as shown in Figure 7-19 and 7-20.

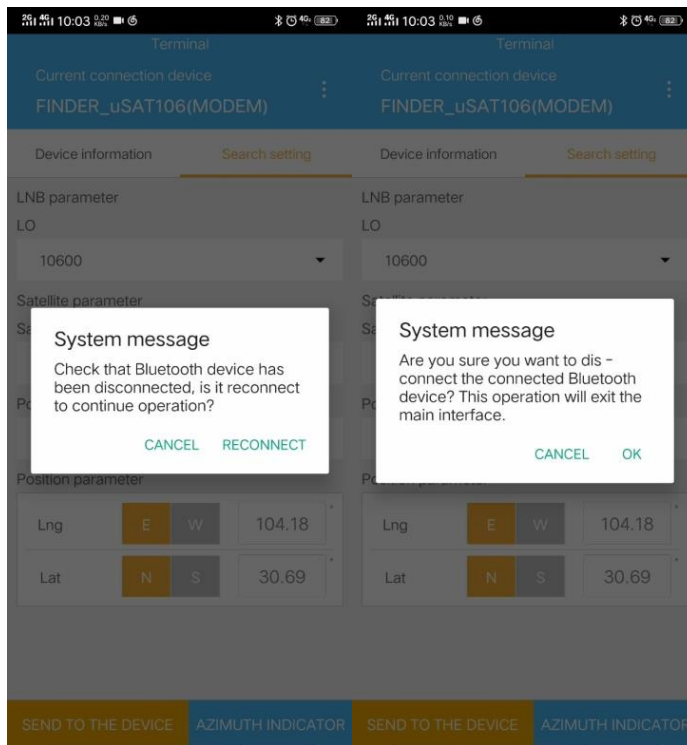


Figure 7-15

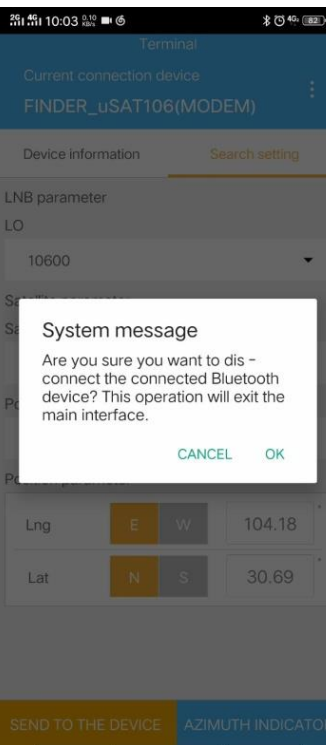


Figure 7-16

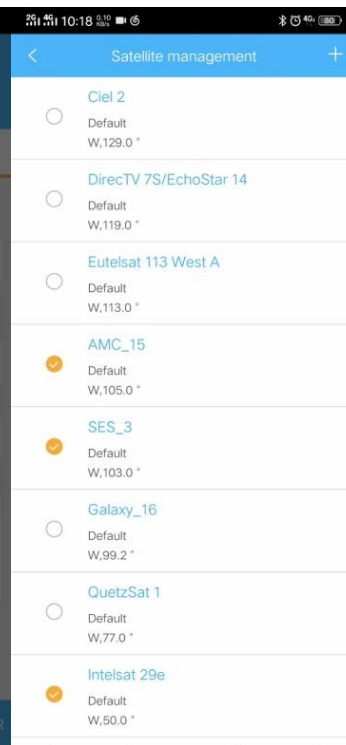


Figure 7-17

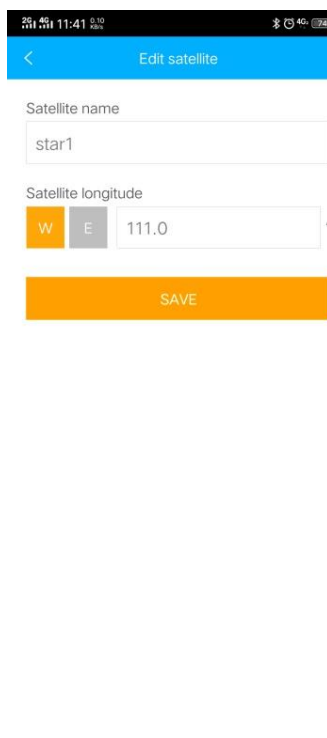


Figure 7-18

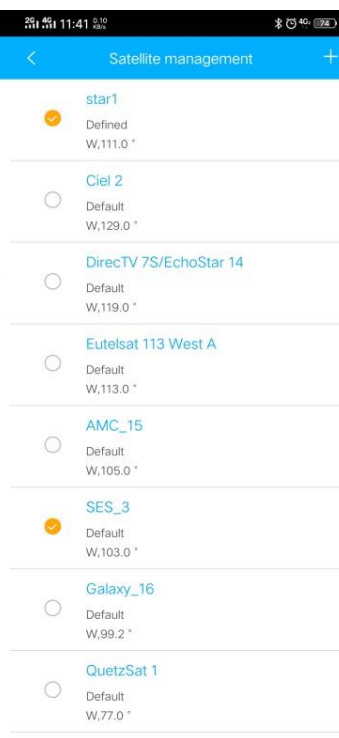


Figure 7-19

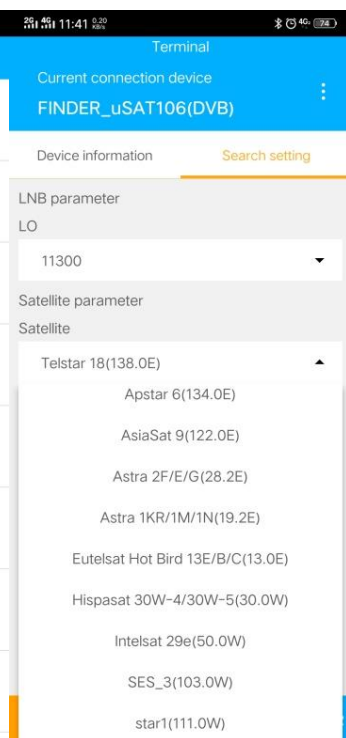


Figure 7-20

10. **BUC LO Switch:** To switch the BUC's local oscillator, the mobile App needs to send instructions. Select "Equipment Information" - "Satellite" - "Configuration Information" on the app main page, and click the "management" key in the upper right corner (the button of three points in the upper right corner).

Terminal

Current connection device
FINDER_uSAT106(MODEM)

Device information Search setting

LNB parameter

LO
11300

Satellite parameter

Satellite
Telstar 18(138.0E)

Pol type
H

Position parameter

Lng E W 104.18

Lat N S 30.69

SEND TO THE DEVICE AZIMUTH INDICATOR

Figure 7-21 APP Main Page

11. General information management interface: Use editable box 2 (as shown in Figure 7-22) to send **12800 LO.** or **13050 LO.** After sending, you can check the BUC status display to judge whether the modification is completed.

< General information management

WIFI password

12345678

Editable item

10

Editable item

11

Editable item

12

WIFI ☒ ON ☐ OFF

Turn off Bluetooth

Editable item 1

Editable item 2

Figure 7-22 BUC LO Switch

8 Terminal Stowing

8.1 Automatic Satellite Communication Terminal (FL30P-E)

1. Press the power switch button as shown in Figure 8-1-1 to make the device automatically storage, and the screen display is shown in Figure 8-1-2.

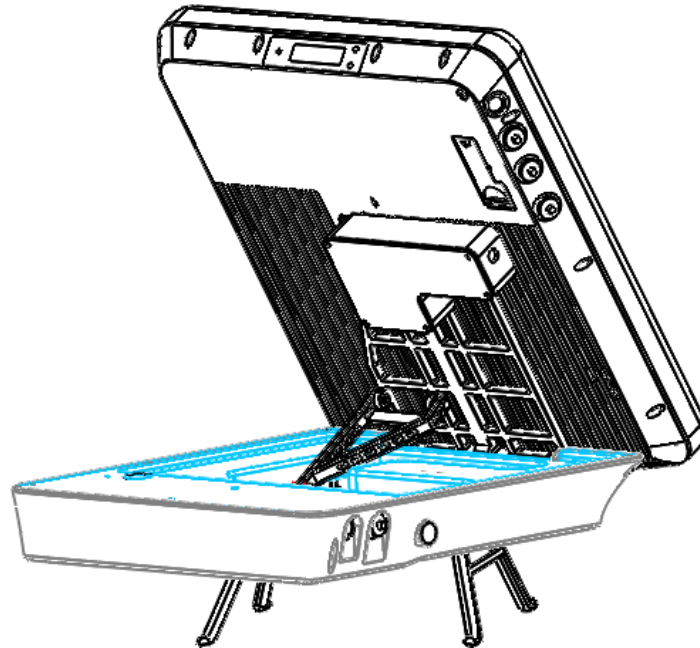


Figure 8-1-1 Power Socket

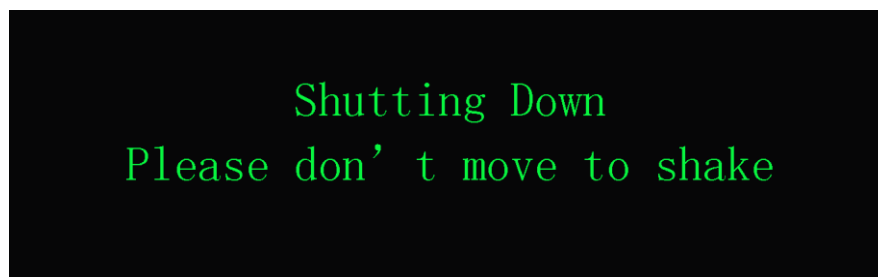


Figure 8-1-2 Shutting Down Prompts

2. Disconnect the power cable from power supply.
3. Disconnect the power cable from terminal power socket (POWER).
4. A Hold the top side of the antenna body with your hand and make it fold slowly towards the base with force, as shown in Figure 8-1-3.

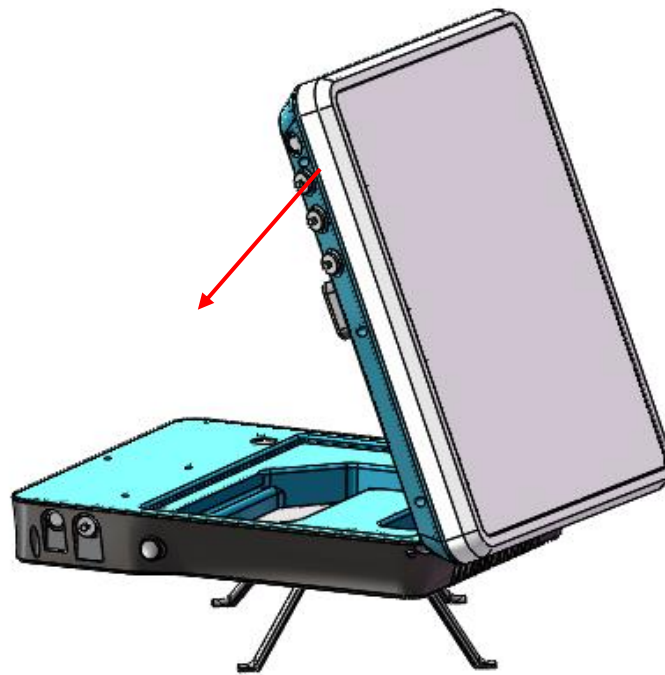


Figure 8-1-3 Polarization Adjustment Scale and Indicator

5. The antenna body is stored in the base as shown in Figure 8-1-4.

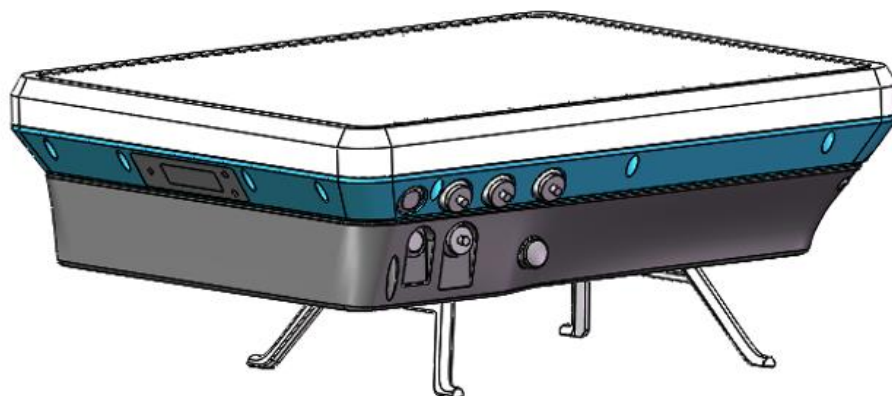


Figure 8-1-4 Position Knob Reset

6. Stow the base legs as shown in Figure 8-1-5 and put them into the matching box to complete the storage.

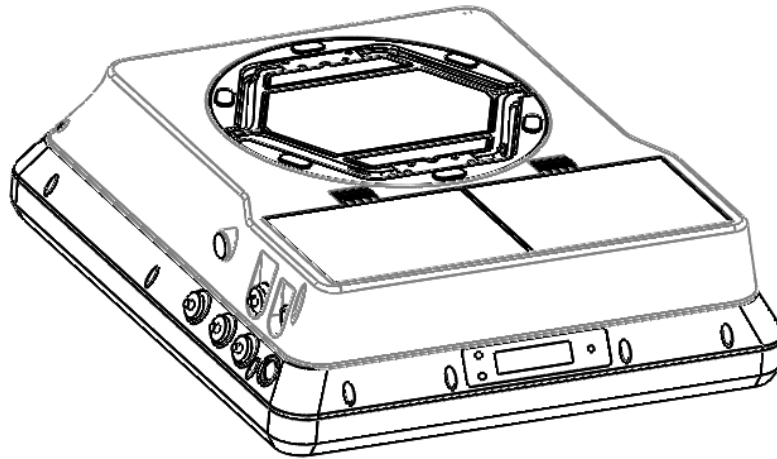


Figure 8-1-5 Terminal panel is closely fit to the Base

Put the Terminal into the backpack to complete the stowing.

8.2 Manual Satellite Communication Terminal (FL30P-M)

1. Press the power switch button as shown in Figure 8-2-1 to disconnect the Terminal power supply, and the screen display is shown in Figure 8-2-2.

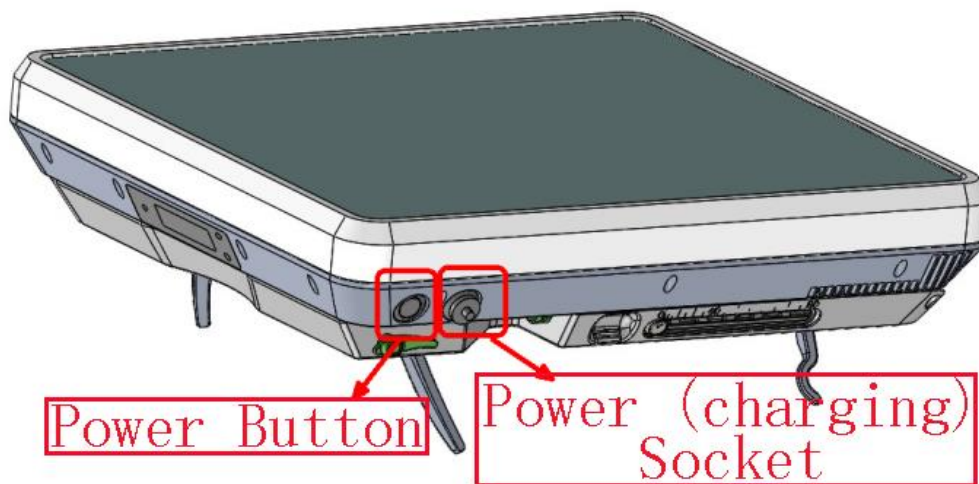


Figure 8-2-1 Power Socket

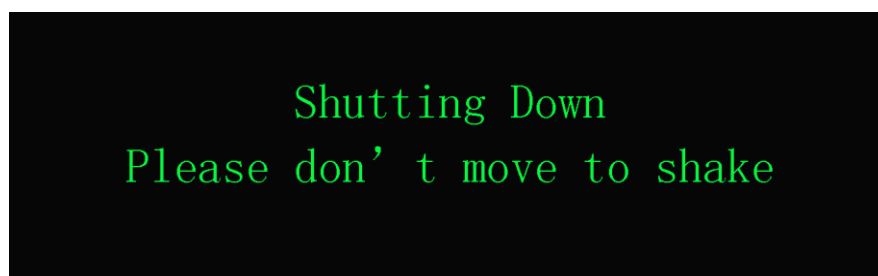
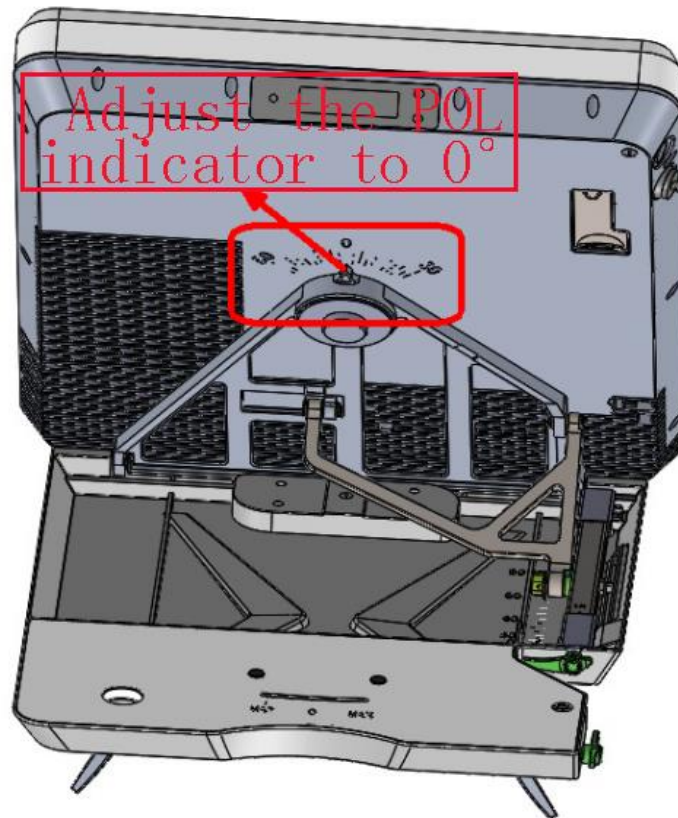


Figure 8-2-2 Shutting Down Prompts

2. Disconnect the power cable from power supply.
3. Disconnect the power cable from terminal power socket (POWER).
4. According to the scale on the panel, indicate the Terminal panel to the 0 position, even if it returns to the zero position, the reference azimuth scale is shown in Figure 8-2-3.



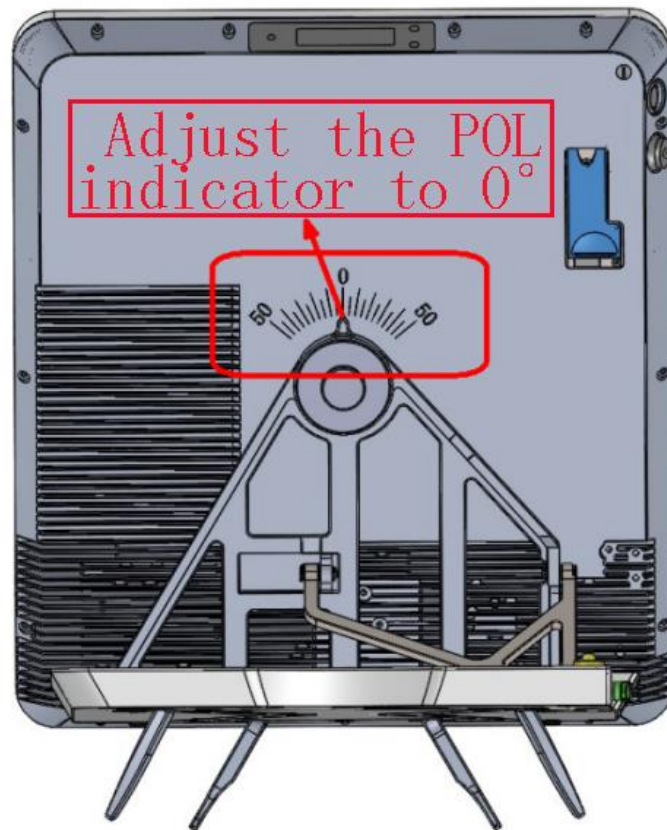
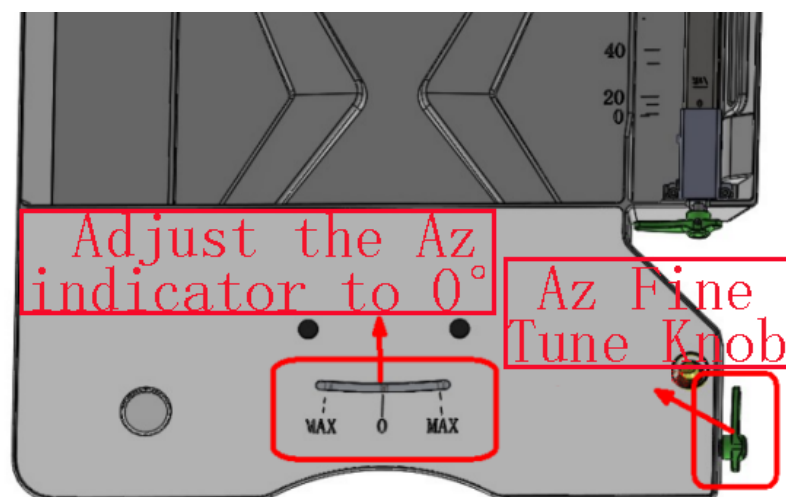


Figure 8-2-3 Polarization Adjustment Scale and Indicator

5. Azimuth fine tune reset: Rotate the azimuth fine tune knob to the 0 position, that is, the azimuth reset is completed, as shown in Figure 8-2-4.



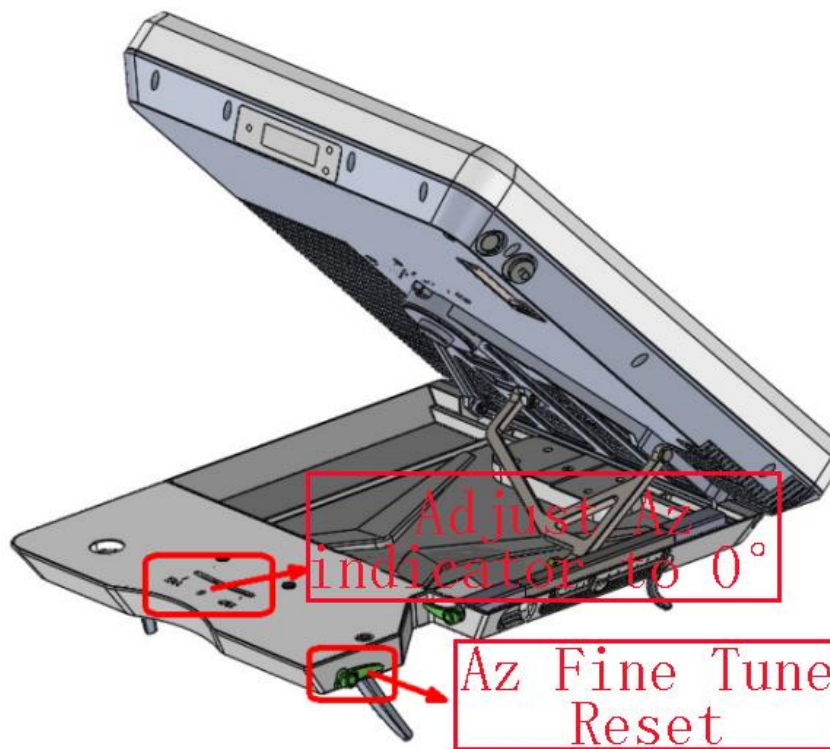


Figure 8-2-4 Position Knob Reset

6. Elevation roughly adjustment reset: Hold the Terminal panel with the left hand, and press the elevation roughly adjustment button inward with the right hand. When the button slides downward, hold the Terminal panel with the left hand and gently move downward towards the base until the button returns to the 0 position, and the Terminal panel is closely connected with the base, as shown in Figure 8-2-5 and Figure 8-2-6.

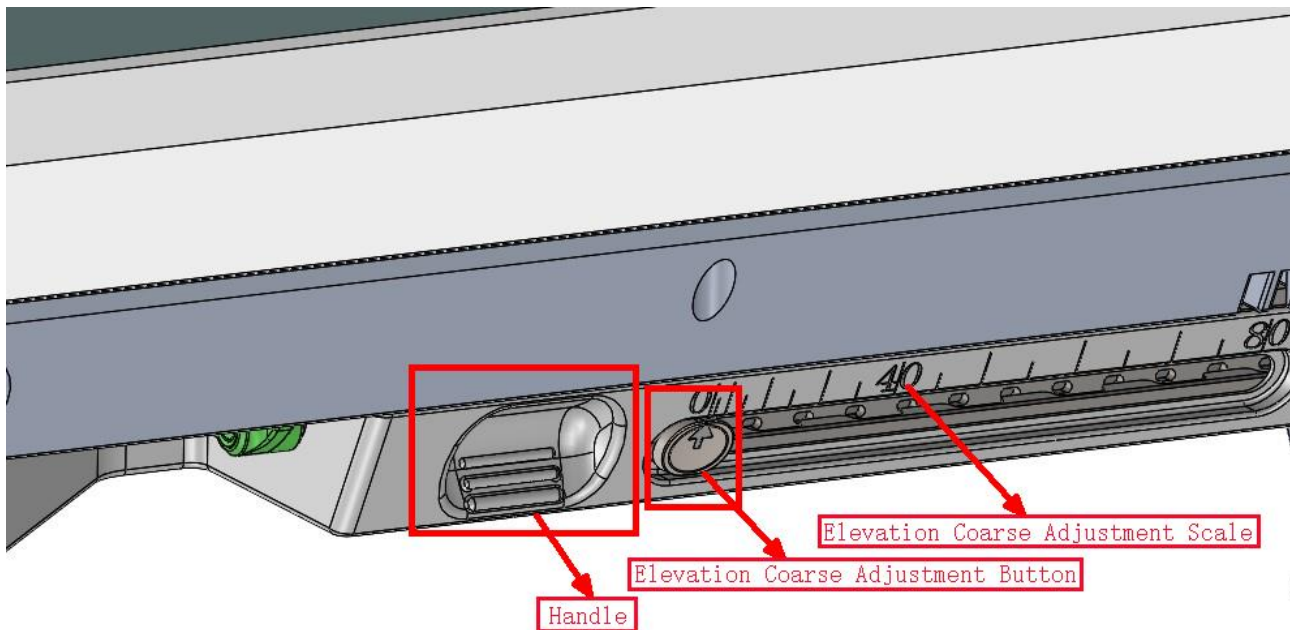


Figure 8-2-5 Elevation Coarse Adjustment Knob and Scale

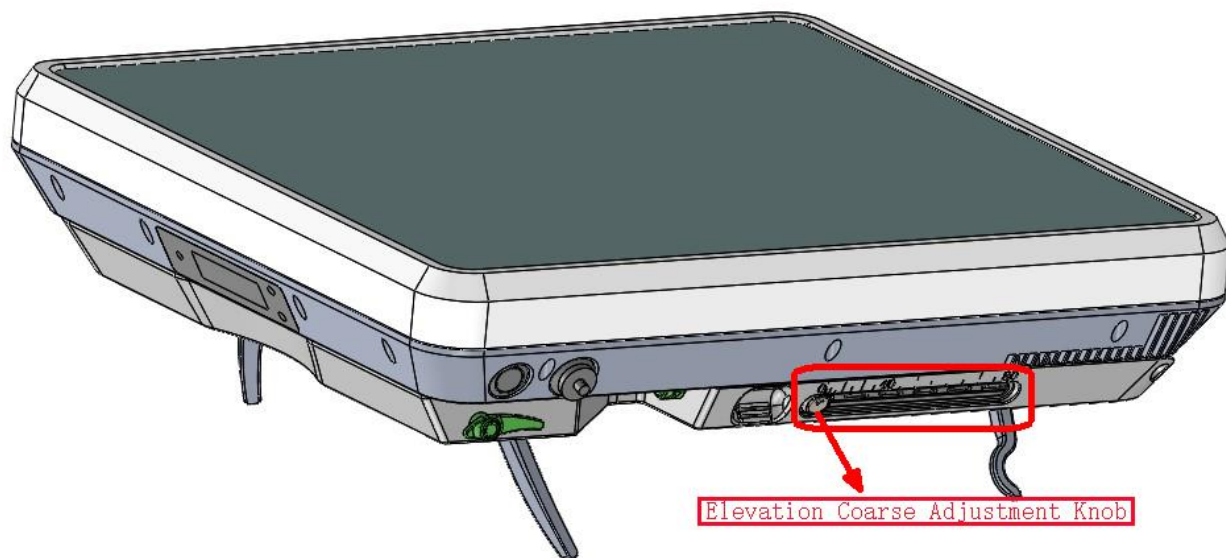


Figure 8-2-6 Terminal panel is closely fit to the Base

7. Base button: After the Terminal panel is tightly connected with the base, gently press the button at the bottom of the base, and there will be a "click" sound, indicating that the Terminal panel and the base are tightly fastened. As shown in Figure 8-2-7.

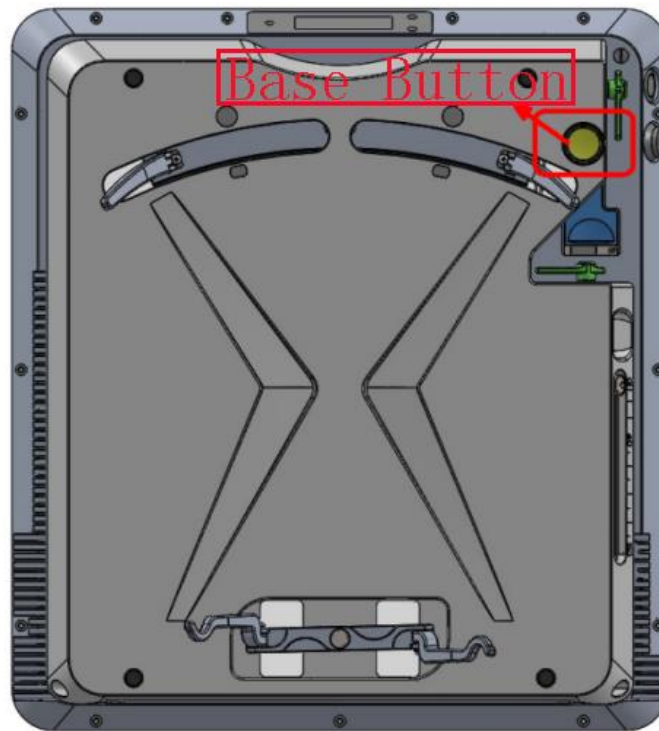


Figure 8-2-7 Base Button

8. Stow each support leg into the supporting leg groove, as shown in Figure 8-2-8.

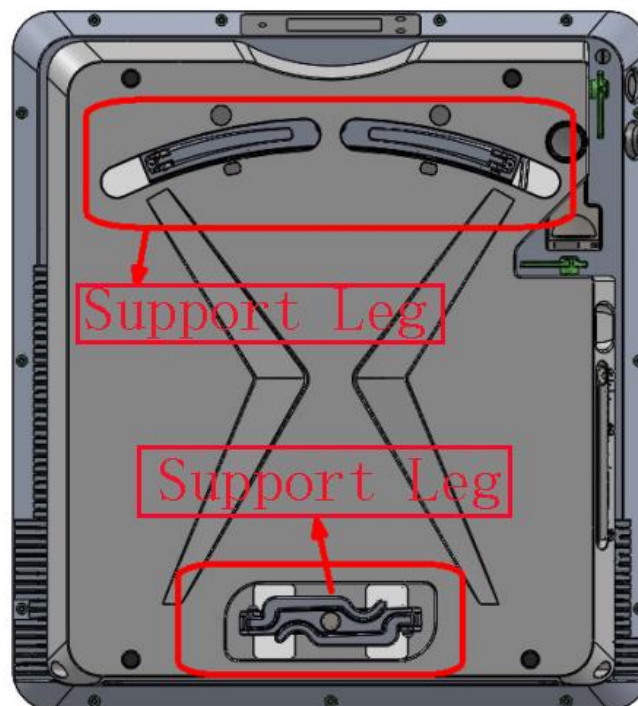


Figure 8-2-8 Support Leg

9. Put the Terminal into the backpack to complete the stowing.

9 Troubleshooting and Maintenance

9.1 Troubleshooting

Item	Problem and Indication	Corrective Action
01	Display does not work	Verify the power connection
02	Antenna does not work	Press the "POWER ON/OFF" button Or reconnect the power
03	No GNSS signals acquisition	Verify the terminal is under the open sky/has an unobstructed view. Reboot
04	Terminal cannot lock the satellite	Check whether the antenna's approximate orientation is correct, Terminal configuration parameters, and Modem configuration parameters are correct
05	Terminal aligns to another satellite	Verify the satellite data entered via the 'App' for Terminal Control
06	Display switches off after the completion of alignment	Press down the "Icon" button (On the screen) for 3 seconds to activate the screen
07	The display indicates the terminal is in normal operational state but there is no data transfer	Verify that LAN or Wi-Fi are properly connected
08	Low signal quality	The elevation and azimuth angle of the antenna body are adjusted by adjusting the elevation and azimuth knobs, and the antenna polarization angle is adjusted by rotating the antenna body in the polarization direction

9.2 Maintenance

The FL30P-E/FL30P-M uSat Terminal parameters and performance can remain stable and provide normal operation for at least 10 years under a regular maintenance schedule. The periodical maintenance work includes:

1. Antenna system - it is highly recommended that a comprehensive examination of the entire system is completed, periodically, along with a thorough check of all the adjustment mechanisms.
2. Antenna mechanisms – it is recommended that a daily check is made of the adjustment mechanisms and any necessary lubricant is added, to prevent wear of the worms and gears.
3. Visual verification of terminal protective casing surface damages. If there is a damage, the special spray (NOT included in the standard system configuration) should be applied.
4. Check that all the screw fastenings are tight.
5. Close check of the antenna to look for any damage or cracks.
6. Regular cleaning of the terminal and antenna radome surfaces. Remove all dust, dirt, condensed salt and other contamination that may harm the signal quality and the terminal's performance.

10 Technical Service Contact Information

China Starwin Science & Technology Co., Ltd

Phone: +86 29 88664381 **E-Mail:** tech@starwincom.com, support@starwincom.com

Web: <http://www.starwincom.com>

Address: Floor 17th, Hengtian Smart Fortune Building, No. 2 Daqing Road, Lianhu District, Xi'an 710082, China

Garrett C. Hill

Chief

P: (707) 664-5710 | M:(707) 953-2589

E: garrett@x2n.com | W: x2nsat.com

X2nSat, Inc.

Petaluma Satellite Gateway and Network Operations Center

1310 Redwood Way, Suite C

Petaluma, CA 94954

Las Cruces Satellite Gateway and Network Operations Center

8811 Trigg Loop

Las Cruces, NM 88007

P: +1.888.4.X2NSAT

F: +1.707.664.5701

Emergency Support

P: +1.707.664.5119

Appendix 1 Other Instructions

Statement of Conditions

The information contained in this manual is subject to change without prior notice.

China Starwin Science & Technology Co., Ltd. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or equipment supplied with it.

Warranties and Disclaimers

All China Starwin Science & Technology Co., Ltd. ("China Starwin") products purchased from China Starwin or through any of its authorized by China Starwin distributors, resellers and agents are subject to the following warranty and product liability terms and conditions.

Exclusive Warranty

China Starwin warrants that the Product hardware it supplies and the tangible media on which any software is installed, under normal use and conditions, will be free from significant defects in materials and workmanship for a period of twelve (12) months from the date of delivery of a given Product to Purchaser (the "Warranty Period"). China Starwin will, at its sole option and as Purchaser's sole remedy, repair or replace any defective Product in accordance with China Starwin standard R&R procedure.

CHINA STARWIN SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY PURCHASER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR IMPROPER TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING OR OTHER HAZARD.

Disclaimer

(a) THE PRODUCT IS SOLD ON AN "AS IS" BASIS. CHINA STARWIN, ITS AFFILIATES OR ITS LICENSORS MAKE NO WARRANTIES, WHATSOEVER, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE AND THE ACCOMPANYING DOCUMENTATION. CHINA STARWIN SPECIFICALLY DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS

FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT WITH RESPECT TO THE SOFTWARE. UNITS OF PRODUCT (INCLUDING ALL THE SOFTWARE) DELIVERED TO PURCHASER HEREUNDER ARE NOT FAULT-TOLERANT AND ARE NOT DESIGNED, MANUFACTURED OR INTENDED FOR USE OR RESALE IN APPLICATIONS WHERE THE FAILURE, MALFUNCTION OR INACCURACY OF PRODUCTS CARRIES A RISK OF DEATH OR BODILY INJURY OR SEVERE PHYSICAL OR ENVIRONMENTAL DAMAGE ("HIGH RISK ACTIVITIES"). HIGH RISK ACTIVITIES MAY INCLUDE, BUT ARE NOT LIMITED TO, USE AS PART OF ON-LINE CONTROL SYSTEMS IN HAZARDOUS ENVIRONMENTS REQUIRING

FAIL-SAFE PERFORMANCE, SUCH AS IN THE OPERATION OF NUCLEAR FACILITIES, AIRCRAFT NAVIGATION OR COMMUNICATION SYSTEMS, AIR TRAFFIC CONTROL, LIFE SUPPORT MACHINES, WEAPONS SYSTEMS OR OTHER APPLICATIONS REPRESENTING A SIMILAR DEGREE OF POTENTIAL HAZARD. CHINA STARWIN SPECIFICALLY DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR HIGH RISK ACTIVITIES.

(b) PURCHASER'S SOLE REMEDY FOR BREACH OF THE EXPRESS WARRANTIES ABOVE SHALL BE REPLACEMENT OR REFUND OF THE PURCHASE PRICE AS SPECIFIED ABOVE, AT CHINA STARWIN'S OPTION. TO THE FULLEST EXTENT ALLOWED BY LAW, THE WARRANTIES AND REMEDIES SET FORTH IN THIS AGREEMENT ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING BUT NOT LIMITED TO WARRANTIES, TERMS OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, NON-INFRINGEMENT, AND ACCURACY OF INFORMATION GENERATED. ALL OF WHICH ARE EXPRESSLY DISCLAIMED. CHINA STARWIN' WARRANTIES HEREIN RUN ONLY TO PURCHASER, AND ARE NOT EXTENDED TO ANY THIRD PARTIES. CHINA STARWIN NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS.

Limitation of Liability

(a) CHINA STARWIN SHALL NOT BE LIABLE TO THE PURCHASER OR TO ANY THIRD PARTY, FOR ANY LOSS OF PROFITS, LOSS OF USE, INTERRUPTION OF BUSINESS OR FOR ANY INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES OF ANY KIND, WHETHER ARISING UNDER BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT LIABILITY OR OTHERWISE AND WHETHER BASED ON THIS AGREEMENT OR OTHERWISE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

(b) TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE LIABILITY FOR DAMAGES HEREUNDER OF CHINA STARWIN OR ITS EMPLOYEES OR AGENTS EXCEED THE PURCHASE PRICE PAID FOR THE PRODUCT BY PURCHASER, NOR SHALL THE AGGREGATE LIABILITY FOR DAMAGES TO ALL PARTIES REGARDING ANY PRODUCT EXCEED THE PURCHASE PRICE PAID FOR THAT PRODUCT BY THAT PARTY (EXCEPT IN THE CASE OF A BREACH OF A PARTY'S CONFIDENTIALITY OBLIGATIONS).

Electronic Emission Notices

Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Safety Considerations

For the following safety considerations, "Instrument" means the 'uSat Flat Terminal' units, components and their cables.

It is necessary to read the instructions carefully before using the uSat flat portable terminal. The terminal usage shall be carried out in accordance with the described steps and methods to ensure the safety and accuracy of equipment operation.

Radio

The instrument transmits radio energy during normal operation. To avoid possible harmful exposure, to this energy, do not stand or work for extended periods of time in front of its antenna. The long-term characteristics or the possible physiological effects of Radio Frequency Electromagnetic fields have not been yet fully investigated.

Caution

1. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.
2. Before connecting this instrument to a power source, make sure that the voltage of the power source matches the requirements of the instrument.

Disposal of Electronic and Electrical Waste

Pursuant to the WEEE EU Directive electronic and electrical waste must not be disposed of with unsorted waste. Please contact your local recycling authority for disposal of this product.

Important Notice

This user manual is delivered subject to the following conditions and restrictions:

- This manual contains proprietary information belonging to China Starwin Science & Technology Co., Ltd. Such information is supplied solely for the purpose of assisting properly authorized users of the respective China Starwin products.

- No part of its contents may be used for any other purpose, disclosed to any person or firm or reproduced by any means, electronic and mechanical, without the express prior written permission of China Starwin Science & Technology Co., Ltd.
- The text and graphics are for the purpose of illustration and reference only. The specifications on which they are based are subject to change, without prior notice.
- The software described in this document is furnished under a license. The software may be used or copied only in accordance with the terms of that license.
- Information in this document is subject to change without prior notice.
- Corporate and individual names and data used in examples herein are fictitious, unless otherwise noted.
- China Starwin Science & Technology Co., Ltd. reserves the right to alter the equipment specifications and descriptions in this publication without prior notice. No part of this publication shall be deemed to be part of any contract or warranty unless specifically incorporated by reference into such contract or warranty.
- The information contained herein is merely descriptive in nature and does not constitute an offer for the sale of the product described herein.
- Any changes or modifications of the equipment, including opening of the equipment when not expressly approved by China Starwin Science & Technology Co., Ltd., will void equipment warranty and any repair thereafter shall be liable to a charge. It may also void the user's authority to operate the equipment.

Some of the equipment provided by China Starwin and specified in this manual, is manufactured and warranted by third parties. All such equipment must be installed and handled in full compliance with the instructions provided by such manufacturers as attached to this manual or provided thereafter by China Starwin or the manufacturers. Non compliance with such instructions may result in serious damage and/or bodily harm and/or void the user's authority to operate the equipment and/or revoke the warranty provided by such manufacturer.

11 Production Spec

Product Name:	Flat Panel Integrated Satellite Communication Terminal
Model No.:	FL30P-E, FL30F-M
Software	XY-PB-FL30-202111
Hardware	XY-PB-FL30-V2.02
Wi-Fi Specification:	802.11b/g/n

	Transmit / Receive: 2412~2462MHz
Bluetooth Version:	V4.2 (Single mode only for BLE) Transmit / Receive: 2402~2480MHz
Satellite Specification:	Transmit: 13.75~14.50GHz Receive: 10.70~12.75GHz
GNSS Specification:	GPS, BDS

Statement: There are no restrictions of use in Member States.

EU declaration of conformity

China Starwin Science & Technology Co., Ltd hereby declares that the device is in compliance with the essential requirements and other relevant requirements of RED Directive 2014/53/EU.

Technical Service Contact Information

China Starwin Science & Technology Co., Ltd

Phone: +86 29 88664381 E-Mail: tech@starwincom.com

Web: <http://www.chinastarwin.com>

Address: Floor 17th, Hengtian Smart Fortune Building, No. 2 Daqing Road, Lianhu District, Xi'an 710082, China

FCC Statement

The device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Danger: FCC Radio Frequency Exposure Information**

In order to comply with RF exposure requirements, antennas must be installed to ensure a minimum separation distance of 1702cm (antenna main beam) and 56cm (out range of +/-10 degrees off-axis) and must not be co-located or operating in conjunction with any other antenna or transmitter except in accordance with accepted multi-transmitter product procedures.

Safety Considerations

For the following safety considerations, "Instrument" means the 'satellite terminal Flat Terminal' units, components and their cables.

It is necessary to read the instructions carefully before using the satellite terminal flat portable terminal. The terminal usage shall be carried out in accordance with the described steps and methods to ensure the safety and accuracy of equipment operation.

Radio

The instrument transmits radio energy during normal operation. To avoid possible harmful exposure, to this energy, do not stand or work for extended periods of time in front of its antenna. The long-term characteristics or the possible physiological effects of Radio Frequency Electromagnetic fields have not been yet fully investigated.

Caution

1. To avoid electrical shock, do not perform any servicing unless you are qualified to do so.
2. Before connecting this instrument to a power source, make sure that the voltage of the power source matches the requirements of the instrument.