


## Smart Black Light User Guide

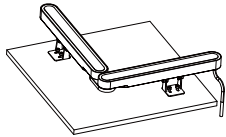

### English

THANK YOU for choosing us. To optimize user experience, please install and use the light according to the following instruction.

#### ⚠ Warning

- (1) Please check if the light and the parts are intact before installation.
- (2) Make sure to cut off power before installation.
- (3) Please do not place this light in corrosive conditions.
- (4) If there is any damage to the cord, please cut off the power and stop using it immediately.
- (5) Please do not retrofit the light within the warranty period.
- (6) To ensure the light works properly, please use the voltage indicated on the packing.
- (7) To avoid any damage to the light, please do not use chemical solvent during routine maintenance.


#### 1. Specification

Model No	NTF90
Wattage	60W
Color	LIV+RGB
Input Voltage	AC100-120V
Protection Rating	IP66
Controlled By	BLE Remote Controller
Frequency	50/60Hz
Mercury Content	No
Lifespan	50000h
Working Temperature	-20°~40°

1

### English

#### 2. Components



Note: 1. Different plugs for different countries. 2. Cord - type Z attachment. For type Z attachment, if the external cord of this luminaire is damaged, it cannot be replaced without breaking or destroying the luminaire.


#### 3. Dimension

2


### English

#### 4. Installation

**Step A:** According to the spacing of two screw bits on the bracket, drill two holes on the mounting panel.

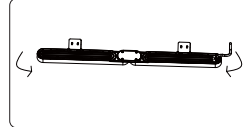

**Step B:** Aim the bracket at the holes and fix it with two bolts.

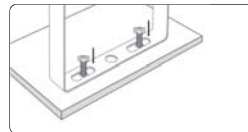

3

### English

**Step C:** Adjust the lighting direction up or down as per your need and plug in to power the light on.



**Step D:** Remove the plastic sheet from the bottom of the remote controller so as to activate the controller.

4

### English

Note:



(1) Make sure that the distance between the light and the object being lit is more than 1 meter, so as to avoid high temperature caused by short distance.

**Non-replaceable Light Source.**

#### Limitation of Indoor and Outdoor Use

- (1) This light is waterproof and dampproof. It is protected against the rain but it cannot be immersed in water.
- (2) The mounting position of this light should be able to bear at least 10 times as heavy as the light.
- (3) This light should be used in condition that is good for heat dissipation. Its working temperature should be less than 40°C. Too high the working temperature will cause serious lumen depression and affect lifespan of the light.

5

### English

#### FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

19