



Quick Start Guide • Guía de inicio rápido • Guide d'installation rapide








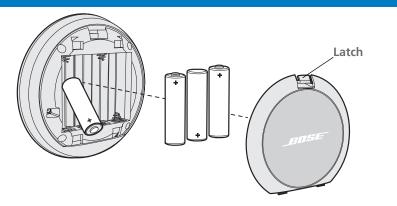

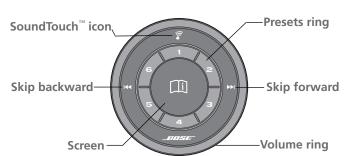

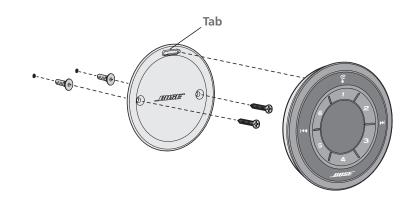

READ THIS FIRST

Read the Important Safety Instructions.

To set up the SoundTouch[™] controller, you need:

- SoundTouch[™] app installed on your computer.
- SoundTouch[™] system connected to your home network.

Note: The controller operates the SoundTouch[™] system that you select in the app. To connect to another system, refer to the help system in the app.

A. On your computer, launch the SoundTouch[™] app.

- B. Click EXPLORE > SETTINGS > Systems.
- **C.** Select the system to connect to the controller.
- D. Click CONNECT SOUNDTOUCH™ CONTROLLER.

A. When prompted by the app, install the batteries into the controller

The controller turns on.

The screen and presets illuminate.

The screen shows system messages and Now Playing information.

B. Follow the instructions in the app

Note: Use only alkaline batteries.

Use the controller to operate your system.

- Press a preset to play it. Press and hold a preset to personalize it.
- Move your finger around the Presets ring to view presets.
- Turn the volume ring to adjust the volume.
- Press and hold the screen to turn the SoundTouch[™] system on and off.
- Press the screen to play or pause music.
- Press the SoundTouch[™] icon to disconnect the controller from a system. Refer to the help system in the app to connect to another system.

Note: If the controller is in power saving mode, wave your hand within 6 in. above the screen to turn it on

Mounting the controller on a wall

Wallboard (anchors and screws supplied):

- A. Use a 3/16 in. (5 mm) drill bit to drill two holes into 3/8 in. (10 mm) or thicker wallboard.
- B. Insert the anchors into the holes.
- C. Align the bracket (tab at top) to the anchors. Tighten the
- D. Align the latch to the bracket's tab. Attach the controller.

- A. Purchase two #6x1.0 in. (25.4 mm) flat-head wood screws.
- B. Use a 7/64 in. (2.778 mm) drill bit to drill 2 holes into 3/4 in. (19 mm) or thicker wood
- C. Align the bracket (tab at top) to the holes. Tighten the screws
- **D.** Align the latch to the bracket's tab. Attach the controller.

ESPAÑOL

READ THIS FIRST

Read the Important Safety Instructions.

To set up the SoundTouch[™] controller, you need: SoundTouch[™] app installed on your computer.

- SoundTouch[™] system connected to your home network.
- **Note:** The controller operates the SoundTouch[™] system that you select in the app. To connect to another system, refer to the help
- A. On your computer, launch the SoundTouch[™] app.
- B. Click EXPLORE > SETTINGS > Systems. **C.** Select the system to connect to the controller.
- D. Click CONNECT SOUNDTOUCH™ CONTROLLER.
- A. When prompted by the app, install the batteries into the controller

The controller turns on.

The screen and presets illuminate.

The screen shows system messages and Now Playing information.

B. Follow the instructions in the app.

Note: Use only alkaline batteries.

Use the controller to operate your system.

- Press a preset to play it. Press and hold a preset to personalize it.
- Move your finger around the Presets ring to view presets.
- Turn the volume ring to adjust the volume.
- Press ◀ or ▶ to skip through content.
- Press and hold the screen to turn the SoundTouch[™] system on and off.
- Press the screen to play or pause music
- Press the SoundTouch[™] icon to disconnect the controller from a system. Refer to the help system in the app to connect to another system

Note: If the controller is in power saving mode, wave your hand within 6 in. above the screen to turn it on.

Wallboard (anchors and screws supplied):

- A. Use a 3/16 in. (5 mm) drill bit to drill two holes into 3/8 in. (10 mm) or thicker wallboard.
- B. Insert the anchors into the holes.
- C. Align the bracket (tab at top) to the anchors. Tighten the
- **D.** Align the latch to the bracket's tab. Attach the controller.

- A. Purchase two #6x1.0 in. (25.4 mm) flat-head wood screws.
- B. Use a 7/64 in. (2.778 mm) drill bit to drill 2 holes into 3/4 in. (19 mm) or thicker wood
- C. Align the bracket (tab at top) to the holes. Tighten the screws
- **D.** Align the latch to the bracket's tab. Attach the controller.

FRANÇAIS

READ THIS FIRST

Read the Important Safety Instructions.

- To set up the SoundTouch[™] controller, you need:
- SoundTouch[™] system connected to your home network.

Note: The controller operates the SoundTouch[™] system that you select in the app. To connect to another system, refer to the help

- A. On your computer, launch the SoundTouch[™] app.
- D. Click CONNECT SOUNDTOUCH™ CONTROLLER.
- A. When prompted by the app, install the batteries into the controller

The controller turns on

- The screen shows system messages and Now Playing information.

Note: Use only alkaline batteries.

Use the controller to operate your system.

- Press a preset to play it. Press and hold a preset to personalize it.
- Move your finger around the Presets ring to view presets.
- Turn the volume ring to adjust the volume. • Press or by to skip through content.
- Press and hold the screen to turn the SoundTouch[™] system on and off.
- Press the screen to play or pause music.
- Press the SoundTouch[™] icon to disconnect the controller from a system. Refer to the help system in the app to connect to another system

Note: If the controller is in power saving mode, wave your hand within 6 in. above the screen to turn it on.

Wallboard (anchors and screws supplied):

- A. Use a 3/16 in. (5 mm) drill bit to drill two holes into 3/8 in. (10 mm) or thicker wallboard.
- **B.** Insert the anchors into the holes.
- C. Align the bracket (tab at top) to the anchors. Tighten the screws into the holes.
- D. Align the latch to the bracket's tab. Attach the controller.

Wood:

- A. Purchase two #6x1.0 in. (25.4 mm) flat-head wood screws.
- B. Use a 7/64 in. (2.778 mm) drill bit to drill 2 holes into 3/4 in.
- C. Align the bracket (tab at top) to the holes. Tighten the screws
- D. Align the latch to the bracket's tab. Attach the controller.

• SoundTouch[™] app installed on your computer.

- B. Click EXPLORE > SETTINGS > Systems.
- **C.** Select the system to connect to the controller.
- The screen and presets illuminate.
- B. Follow the instructions in the app.

ENGLISH

Important Safety Instructions

Please take the time to carefully read and follow these Important Safety Instructions. They will help you set up and operate your system properly and enjoy its advanced features. Save this sheet for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in the owner's guide.

WARNINGS and CAUTIONS

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
 Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.

- Do not place naked flame sources, such as lighted candles, on or near the apparatus.
 The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
 Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and extent performance. compliance, and system performance.





Operate this product within the temperature range of 32° F to 131° F (0° C to +55° C).

Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance.

- 1. Read these instructions
- 1. Keep these instructions
- 2. Heed all warnings.
- Follow all instructions 4. Do not use this apparatus near water or moisture.

- S. Clean only with a dry cloth.
 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7. Use only attachments/accessories specified by the manufacturer.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B).

FCC WARNING

 $Changes \ or \ modifications \ not \ expressly \ approved \ by \ Bose \ Corporation \ could \ void \ the \ user's \ authority \ to \ operate \ this \ equipment.$

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This device complies with Industry Canada licence-exempt RSS standards(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Output power: 4mW

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.

Names and Contents of Toxic or Hazardous Substances or Elements								
		Toxic or Hazardous Substances and Elements						
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)		
PCBs	х	0	0	0	0	0		
Metal parts	х	0	0	0	0	0		
Plastic parts	0	0	0	0	0	0		
Speakers	х	0	0	0	0	0		
Cables	х	0	0	0	0	0		

dous substance contained in all of the homogeneous materials for this part is below the limit requ X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requ

Complete and retain for your records

Model number (inside battery compartment):_

Please keep your sales receipt.
For more information on using your product, refer to the help system in the SoundTouchTM app, or refer to these URLs: Global: http://global.Bose.com

Troubleshooting

Controller does not turn on

- · Ensure batteries are installed correctly • Press the screen to turn on the controller.

- Install new batteries.
 Controller cannot communicate with system.
 Move the controller closer to the system.
 Make sure that the controller is connected to a system.
- Error message on the controller's screen indicates no connection

 \bullet Refer to the help system in the SoundTouch TM app for connection instructions.

Note: Do not use alcohol to clean the controll

SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries.

© Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

ESPAÑOL

Important Safety Instructions

Please take the time to carefully read and follow these Important Safety Instructions. They will help you set up and operate your system properly and enjoy its advanced features. Save this sheet for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in the owner's guide.

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
 Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.

- cause a failure and/or a fire hazard.

 Do not place naked flame sources, such as lighted candles, on or near the apparatus.

 The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.

 Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.





The product contains magnetic material. Please contact your physician if you have any questions on whether this might affect the operation of your implantable medical device.

Operate this product within the temperature range of 32° F to 131° F (0° C to +55° C).

Sose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance.

- declaration of conformi Read these instructions.
- 1. Keep these instructions.
- 2. Heed all warnings.
 3. Follow all instructions.
 4. Do not use this apparatus near water or moisture.
- 5. Clean only with a dry cloth.
- 6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

 7. Use only attachments/accessories specified by the manufacturer.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B).

FCC WARNING

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This device complies with Industry Canada licence-exempt RSS standards(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Output power: 4mW

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not be co-located or be operating in conjunction with any other antennas or transmitters.

Names and Contents of Toxic or Hazardous Substances or Elements								
		Toxic or Hazardous Substances and Elements						
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)		
PCBs	х	0	0	0	0	0		
Metal parts	х	0	0	0	0	0		
Plastic parts	0	0	0	0	0	0		
Speakers	х	0	0	0	0	0		
Cables	х	0	0	0	0	0		

D: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006 X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requ. S.I/T 11363-2006.

Complete and retain for your records

Please keep your sales receipt.

For more information on using your product, refer to the help system in the SoundTouch $^{\intercal M}$ app, or refer to these URLs: US only: www.Bose.com/produc Global: http://global.Bose.com

Troubleshooting


- Controller does not turn on.

 Ensure batteries are installed correctly. · Press the screen to turn on the controller
- Install new batteries. Controller cannot communicate with system
- Move the controller closer to the system.
 Make sure that the controller is connected to a system.

 Error message on the controller's screen indicates no connection.
- Refer to the help system in the SoundTouch™ app for connection instructions.

SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries.

Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permi

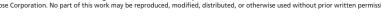

FRANÇAIS

Important Safety Instructions

Please take the time to carefully read and follow these Important Safety Instructions. They will help you set up and operate your system properly and enjoy its advanced features. Save this sheet for future reference.



The lightning flash with arrowhead symbol within an equilateral triangle alerts the user to the presence of uninsulated, dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in the owner's guide.

WARNINGS and CAUTIONS

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
 Do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic products, use care not to spill liquids into any part of the product. Liquids can cause a failure and/or a fire hazard.
- Do not place naked flame sources, such as lighted candles, on or near the apparatus.
- The product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.
 Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.





Operate this product within the temperature range of 32° F to 131° F (0° C to +55° C).

Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance.

- 1. Read these instructions.
- 1. Keep these instructions.
- Heed all warnings.
 Follow all instructions.
- 4. Do not use this apparatus near water or moisture
- 5. Clean only with a dry cloth.
 6. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 7. Use only attachments/accessories specified by the manufacturer

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

CAN ICES-3 (B)/NMB-3(B).

FCC WARNING

This device complies with part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

This device complies with Industry Canada licence-exempt RSS standards(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Output power: 4mW

This device complies with FCC and Industry Canada RF radiation exposure limits set forth for general population. It must not

be co-located or be operating in conjunction with any other antennas or transmitters.								
Names and Contents of Toxic or Hazardous Substances or Elements								
	Toxic or Hazardous Substances and Elements							
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)		
PCBs	х	0	0	0	0	0		
Metal parts	х	0	0	0	0	0		
Plastic parts	0	0	0	0	0	0		
Speakers	х	0	0	0	0	0		
Cables	х	0	0	0	0	0		

: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006 X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requ SJ/T 11363-2006.

Complete and retain for your records

Model number (inside battery compartment): Please keep your sales receipt For more information on using your product, refer to the help system in the SoundTouch™ app, or refer to these URLs:

Global: http://global.Bose.com **Troubleshooting**

- Controller does not turn on · Ensure batteries are installed correctly.
- Press the screen to turn on the controller
- Install new batteries.
 Controller cannot communicate with system
 Move the controller closer to the system.
- Make sure that the controller is connected to a system.

 Error message on the controller's screen indicates no connection
- \bullet Refer to the help system in the SoundTouch $^{\text{TM}}$ app for connection instructions

Note: Do not use alcohol to clean the controlle

SoundTouch and the wireless note design are trademarks of Bose Corporation in the U.S. and other countries.

© Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permi



