



UltraWAVE BTS

Installation and Commissioning Guide

Release 6.5

Part Number 680208-00
1/03 Version A

The products described in this document are products of interWAVE Communications, Inc. or its licensors. No part of this document may be photocopied, reproduced, translated, transferred, disclosed or otherwise provided to third parties without the prior written consent of an officer of interWAVE Communications, Inc.

This document applies to the interWAVE Communications, Inc. release of the GSM product line and to all subsequent versions and releases of the hardware or software unless otherwise indicated in a new version or an update package for this edition.

Publications requests should be addressed to your local sales support office.

interWAVE Communications, Inc. reserves the right to make changes to any products described herein at any time without notice. interWAVE Communications International, Ltd. and interWAVE Communications, Inc. do not assume any responsibility or liability arising out of the application or use of any product described herein, except as expressly agreed to in writing by interWAVE Communications, Inc. nor does the purchase or use of a product from interWAVE Communications, Inc. convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual property rights of interWAVE Communications International, Ltd. or third parties.

Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14 (g) (2) (6/87) and FAR 52.227-19 (6/87), or DFAR 252.227-7015 (b) (6/95) and DFAR 227.7202-3 (a).

The software described in this document is furnished under a license agreement or nondisclosure agreement. The software may be used or copied only in accordance with the terms of the agreement. It is a violation of interWAVE Communications International, Ltd. proprietary rights to copy the software on any medium except as specifically allowed in the license or nondisclosure agreement. interWAVE's products are patented by one or more of the following United States Patents: No. 5,781,582, No. 5,682,403, No. 5,734,979, No. 5,734,699, No. 5,999,813, No. 5,953,651, No. 5,887,256, No. 5,577,029, No. 5,761,195, No. 5,842,138, No. 5,818,824, No. 5,957,464, No. 6,078,823, No. 6,070,071, No. 6,101,400, No. USP D 391,967, No. USP D 391,968, No. USP D 397,693.

Trademark Acknowledgment

interWAVE, WAVEXpress, MicroXpress, WAVEXchange, WAVEView, GSM Network in a Box, and TurboWAVE are trademarks or registered trademarks of interWAVE Communications International, Ltd. All other trademarks, service marks and product names mentioned in this document are the property of their respective owners.

©2003 interWAVE Communications, Inc. All Rights Reserved.

United States Federal Communications Commission Required User Information

Located on the equipment is a label that contains, among other information, the FCC registration number. If requested, this information must be provided to the telephone company.

The UltraWAVE BTS Series AUAC series complies with Part 22 of the FCC Rules.

The 1900 MHz WAVExpress Series M50 complies with Part 24 of the FCC Rules.

This equipment cannot be used on the telephone company-provided coin service. Connection to Party Line Service is subject to State Tariffs.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. If advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications in order to maintain uninterrupted service.

If trouble is experienced with this equipment, please contact:

interWAVE Communications, Inc.
312 Constitution Drive
Menlo Park, CA 94025
Phone: 650.838.2117

If the trouble is causing harm to the telephone network, the telephone company may request you to remove the equipment from the network until the problem is resolved.

It is recommended that the customer install an AC surge arrester in the AC outlet to which that device is connected. This is to avoid damaging the equipment caused by local lightning strikes and other electrical surges.

This equipment uses the following USOC jacks and codes:

Model Name	Facility Interface Code	Service Order Code	Jack Type
340122	04DU9-BN	6.ON	RJ-48C
340122	04DU9-DN	6.ON	RJ-48C
340122	04DU9-1KN	6.ON	RJ-48C
340122	04DU9-1SN	6.ON	RJ-48C
340122	04DU9-1ZN	6.ON	RJ-48C

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Changes of modifications not expressly approved by interWAVE Communications, Inc. can void the user's authority to operate the equipment.

Industry Canada Required User Information

CP-01, Issue 8, Part 1, Section 14.1

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements document(s). The Department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

The standard connecting arrangement (telephone jack type) for this equipment is CA81A.

CP-01, Issue 8, Part 1, Section 14.2

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada RSS-133 and SRSP-510.

Table of Contents

Welcome!	ix
Assumptions, Purpose, and Audience	ix
Related Documentation	ix
Customer Support Services	x
Return Materials Authorization	xi
Training	xi
Conventions Used in this Manual	xii
Chapter 1 Unpacking and Configuration Verification	1
1-1 Unpacking and Inspecting	1
1-2 Inspect Components and Record Part Numbers	3
1-2.1 Identifying the System Configuration	4
1-2.2 Identifying Module Part and Serial numbers	6
1-3 Verifying and Documenting Cards and Modules	8
1-3.1 Required Equipment	8
1-3.2 RF Subrack Assembly	8
1-3.3 Baseband Subrack Assembly	8
1-4 Internal Cabling Overview	10
Chapter 2 Installation	11
2-1 Site Requirements	11
2-1.1 Environmental Conditions	11
2-1.2 Electrical Requirements	12
2-1.3 Chassis Requirements	13
2-2 Mounting the BTS Chassis	14
2-3 Configuring the E1 or T1 Trunk Card	18
2-3.1 Configure Ground Jumpers on 75 Ohm E1 Cards	18
2-3.2 Configure Cable Length DIP Switch Settings on T1 Cards	23
2-4 Connecting Power and Ground Cables	25
2-4.1 Connecting the Grounding Cable	25
2-4.2 Connecting the Power Supplies	25
2-5 Connecting E1 or T1 Trunk Cables	28
2-5.1 E1 Cables	28
2-5.2 T1 Cables	30
2-5.3 Connecting E1 or T1 Lines	31
2-5.4 Direct Cabling Between Multiple UltraWAVE or WAVExpress Systems	31
2-5.5 Cabling External BTSs	32
2-6 Connecting Antennas	32
2-6.1 Omni 1 TRX (O1) Configuration	33
2-6.2 Omni 2 TRX (O2) Configuration	34
2-6.3 Omni 3 TRX (O3) Configuration	34
2-6.4 Omni 4 TRX (O4) Configuration	34

2-6.5	Omni 5 TRX (O5) Configuration	35
2-6.6	Omni 6 TRX (O6) Configuration	36
2-6.7	Omni 5 (O5) and Omni 6 (O6) 25 Watt Configuration	36
2-6.8	Sectorized Two TRX (S11) Configuration	37
2-6.9	Sectorized Three TRX (S111) Configuration	37
2-6.10	Two Sector Four TRX (S22) Configuration	38
2-6.11	Three Sector Four TRX (S211) Configuration	38
2-6.12	Three Sector Five TRX (S221) Configuration	39
2-6.13	Three Sector Six TRX (S222) Configuration	39
2-6.14	Two Sector Five TRX (S32) Configuration	40
2-6.15	Two Sector Six TRX (S33) Configuration	40
2-6.16	Two Sector Six TRX (S42) Configuration	41
2-6.17	RF Radiation Hazard	41
2-7	Connecting External Alarms	43
2-8	Post Installation Cabling and Checks	46
Chapter 3 Off-Line Commissioning		47
3-1	Pre Off-Line Commissioning	48
3-1.1	Visual Inspection	48
3-2	Off-Line Commissioning the UltraWAVE BTS	50
3-2.1	Connecting the Craft PC to the ICP Processor Card	50
3-2.2	Starting XWindows Using the Craft PC	52
3-2.3	Power-On LED Tests	53
3-2.4	Establishing Serial Communications with the BTS	55
3-2.5	Verifying/Changing Boot Parameters	56
3-3	Software verification using Craft PC	58
3-3.1	Verifying the Current Software Version and Patch Level	58
3-3.2	Checking the Flash Version Number	58
3-3.3	Running E1 or T1 POST Diagnostics	59
3-3.4	Verifying Telnet Communications with the BTS over Ethernet	60
3-3.5	Running TRX POST Diagnostics	61
3-3.6	Reviewing POST Results	63
3-3.7	Rebooting the BTS after Running POST	64
3-3.8	Terminating Serial Communications with the BTS	64
3-4	Exiting XWindows on the Craft PC	65
3-5	Upgrading the BTS Software Version (Flash)	66
3-6	Post Off-Line Commissioning	68
Chapter 4 Off-Line Commissioning of a Daisy Chain		69
4-1	Prerequisites to Daisy Chaining	69
4-2	Setting the Abis LAPD Signaling Timeslot	70
Chapter 5 On-Line Commissioning		71
5-1	Pre On-Line Commissioning Requirements	72
5-2	On-Line Commissioning	73
5-3	Antenna Cabling and Power Verification	78

5-3.1	Voltage Standing Wave Ratio (VSWR) Check	78
5-3.2	Verifying BTS RF Performance without Rcal	78
5-3.3	Verifying TRX Output Power	78
5-3.4	RX BER Measurements	79
5-4	Post On-Line Commissioning Procedures	81
Checklist 1	Site Readiness Checklist	83
Checklist 2	Installation Checklist	85
Checklist 3	Commissioning Checklist	87
Index		91

(this page intentionally left blank)

Welcome!

Welcome to the UltraWAVE BTS Installation and Commissioning Guide. This guide is written to provide the user with installation guidelines and procedures which will be required to set-up and initially configure the BTS.

Assumptions, Purpose, and Audience

This document is intended for an interWAVE trained field service engineer (FSE) or operator who performs local installation and commissioning at a customer site. The FSE or operator should be equipped with the necessary tools for installation and commissioning, and a basic understanding of the GSM cellular network. The FSE or Operator should also be familiar with the use of Craft PC and procedures conducted using the Craft PC.

interWAVE assumes that pre-installation project planning has occurred, and is documented via a site survey report. This site survey should include items such as the location of antennas, chassis, power connections and other interface accesses and temperature control equipment.

Microwave Radio Radiation Warning

Although interWAVE products do not use microwave radio antennas, the equipment is often mounted in the vicinity of microwave radio antennas. Under normal operating conditions, microwave radio equipment complies with the limits for human exposure to radio frequency (RF) fields adopted by the Federal Communications Commission (FCC). All interWAVE Communications, Inc. microwave radio equipment is designed so that under normal working conditions, microwave radiation directly from the radio is negligible when compared with the permissible limit of continuous daily exposure recommended in the United States by ANSI/IEEE C95.1-1991 (R1997), Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.

Microwave signal levels that give rise to hazardous radiation levels can exist within transmitter power amplifiers, associated RF multiplexers, and antenna systems.



Never look into the open end of a waveguide or any other open RF connection as eyes are particularly vulnerable to radiation. Do not disconnect RF coaxial connectors, open microwave units, or break down any microwave screening while the radio equipment is operating.

Related Documentation

All manuals are available on a documentation CD-ROM in Adobe portable document format or in an online format via our protected Internet site. To order documentation, please contact interWAVE Communications, Inc. Sales department online at <http://www.iww.com>.

Updates to this manual will be posted on the interWAVE Communications, Inc. Customer Service Website at <http://www.iwv.com/custsupport>. Registered interWAVE customers can access the interWAVE on-line information and support service, available 24 hours a day, seven days a week. The interWAVE on-line service provides users with a wealth of up-to-date information, with documents being added or updated each month.

Customer Support Services

interWAVE has regional customer service centers that handle day-to-day customer issues. Each center is staffed with a local technical support group. The exact services to be performed by the interWAVE Customer Service department are specified in a support contract. Below is an example of the types of services available:

- telephone support
- site surveys
- installations
- off-line and on-line commissioning
- network integration activities
- troubleshooting and fault isolation
- escalation of problems to appropriate interWAVE technical departments

interWAVE can physically perform all or a portion of these processes for the operator, as specified in the support contract. The Customer Service department can also provide documentation outlining corrective and preventive maintenance procedures and troubleshooting guides for fault isolation.

Contact your local Sales Support office, or interWAVE headquarters directly via the Internet at <http://www.iwv.com>.

If possible, please have the following information available when making a call:

- site number or name
- full description of product(s) (e.g., model and part number) and configuration
- serial number of product(s)
- purchase order number

For support on installing or configuring all interWAVE GSM, DCS or PCS equipment, contact your Regional interWAVE Customer Service Center at:

- +852.2574.1922 or asia_support@iwv.com.hk -- Asia and Pacific Rim
- +1.866.306.1263 or usa_support@iwv.com -- North and South America, Europe, Africa, and Middle East

or via the Internet at <http://www.iwv.com/custsupport>.

Return Materials Authorization

In the event that a depot repair or hardware replacement is required after contacting Customer Service, please contact interWAVE for return authorization. The following information is required by interWAVE:

- full description of the product(s): model and part number
- serial number of the product(s)
- purchase order number
- quantity that needs to be returned to interWAVE, if applicable
- description of observed problem

All interWAVE products carry a one year manufacturing warranty from the date of shipment. At the time of a request for a return authorization, if the product has exceeded the warranty period, interWAVE will require a new purchase order number to cover the cost of non-warranty repair.

Contact Sales Operations via the Internet at <http://www.iwv.com> or email at rma@iwv.com.

Training

interWAVE has developed an extensive series of training courses designed to teach you how to use our products. The courses are developed by a combination of subject matter experts and training specialists in order to create highly technical materials in modern training format. Each of our course offerings are designed around specific learning objectives that keep our classes on track to learning specific job skills related to interWAVE products.




The interWAVE training catalog contains a listing of the interWAVE training services available along with descriptions of each course. Our training materials are divided into specific subsystem training series, depending upon the topic and job requirements.

Contact Customer Service via the Internet at <http://www.iwv.com> or email at training@iwv.com.

Conventions Used in this Manual

The following type and style conventions are used in this manual:

Table 1 Conventions Used in This Manual

Convention	Meaning
Body text	Used for regular body text
Bold	Indicates a menu or button choice
Command	Indicates computer generated text and prompts
User Input	Indicates user input
<code><hostname></code>	In command syntax, indicates user-specified command line parameters
<code><variable></code>	In body text, indicates user-specified command line parameters
[BRACKETS]	Indicates a key on the keyboard or instrument
	Provides relevant additional information
	Provides important warning information that may affect operation of or maybe a potential threat to the system
	Used to tell the reader to STOP what they are doing and to read important instructions that are vital to prevent equipment or software damage

This chapter provides instructions for opening the shipping container and inspecting the contents. When you have completed the procedures in this chapter you will have confirmed that the hardware arrived undamaged, and that everything you ordered is present and configured correctly.

The procedures in this chapter include:

- Unpacking and inspecting the system. See Section 1-1.
- Inspect the system identification label and verify that this is the system you ordered. See Section 1-2.
- Inspect the system components, verify and record the part numbers. See Section 1-3.

1-1 Unpacking and Inspecting

Your interWAVE system was packed with great care, and all containers were inspected before shipment. Upon receipt of these packages, immediately inspect the outside of the shipping containers. If there is any visible damage, insist that a representative of the carrier be present when unpacking the contents.

Carefully inspect the system as it is unpacked. If any damage, such as dents or broken connections, is noticeable immediately notify the carrier as well as interWAVE Customer Service.

Store the shipping containers for future use. If the unit has to be returned for upgrade or service, the specially designed shipping containers assure adequate protection for the equipment. If for some reason the containers are not reusable or if they are misplaced, please contact interWAVE to order new containers.

The UltraWAVE BTS is shipped pre-configured in a locking cabinet assembly, shown in Figure 1-1.

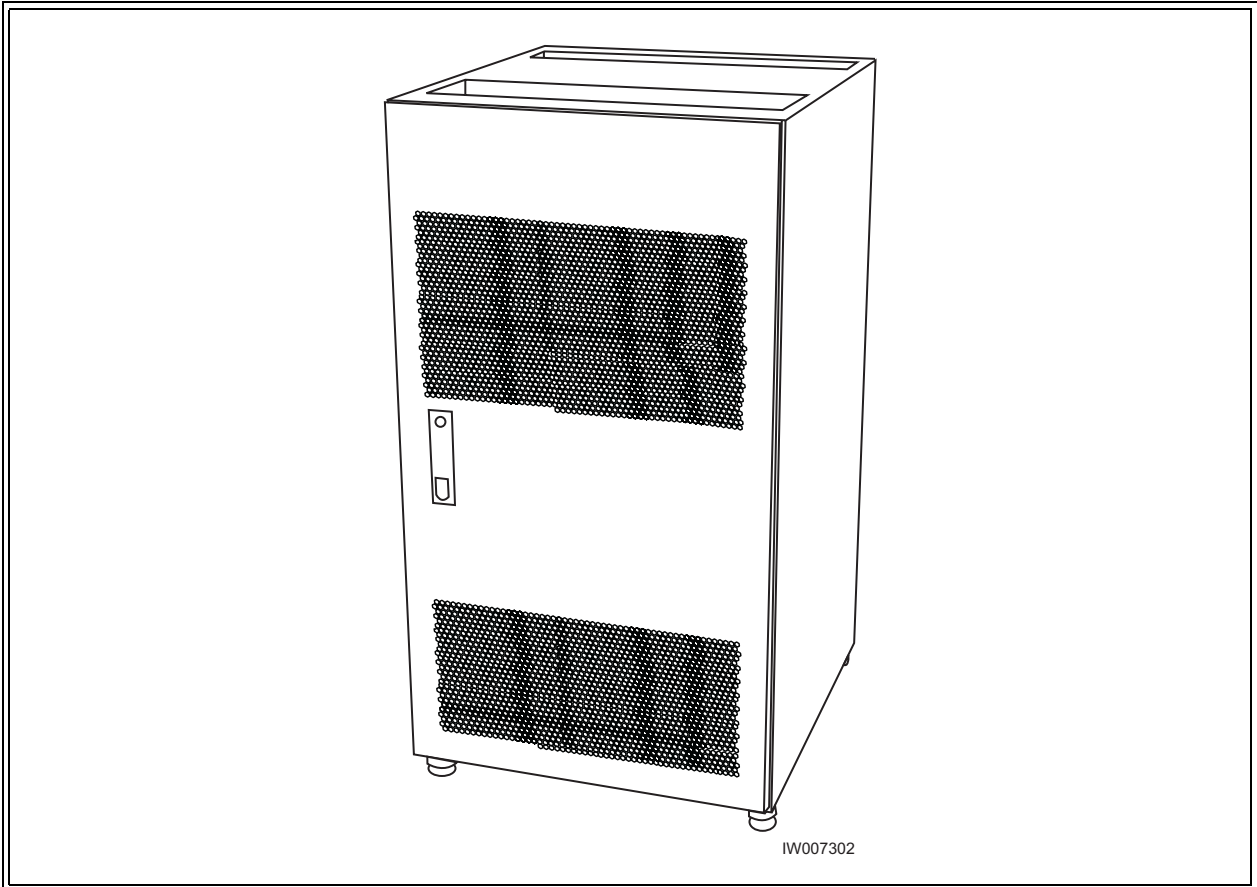


Figure 1-1 Locking Cabinet

Doors are provided for access to the front and rear of the internal assemblies. To open the doors:

- 1 Insert the key provided into the lock and turn to unlock.
- 2 Depress the lock mechanism to release the door latch handle.
- 3 Turn the door handle to unlatch and open the door.

1-2 Inspect Components and Record Part Numbers

The UltraWAVE BTS is tested with all cards and modules installed in the chassis as ordered by the customer. In this section you will:

- Identify and record part and serial numbers
- Determine your system configuration

The unit is shipped assembled to your location. The assembled cabinet and subracks are pre-cabled for your configuration with the exception of the power supplies which will need to be installed. The individual components of the unit include:

- Cabinet (20U) with locking doors and external I/O interface ports
- RF subrack assembly
- Baseband subrack assembly
- Power supply subrack assembly
- PC cards and blank panels
- RF cards and modules
- Internal cabling
- Power supply modules

These components appear assembled without internal cabling in Figure 1-2.

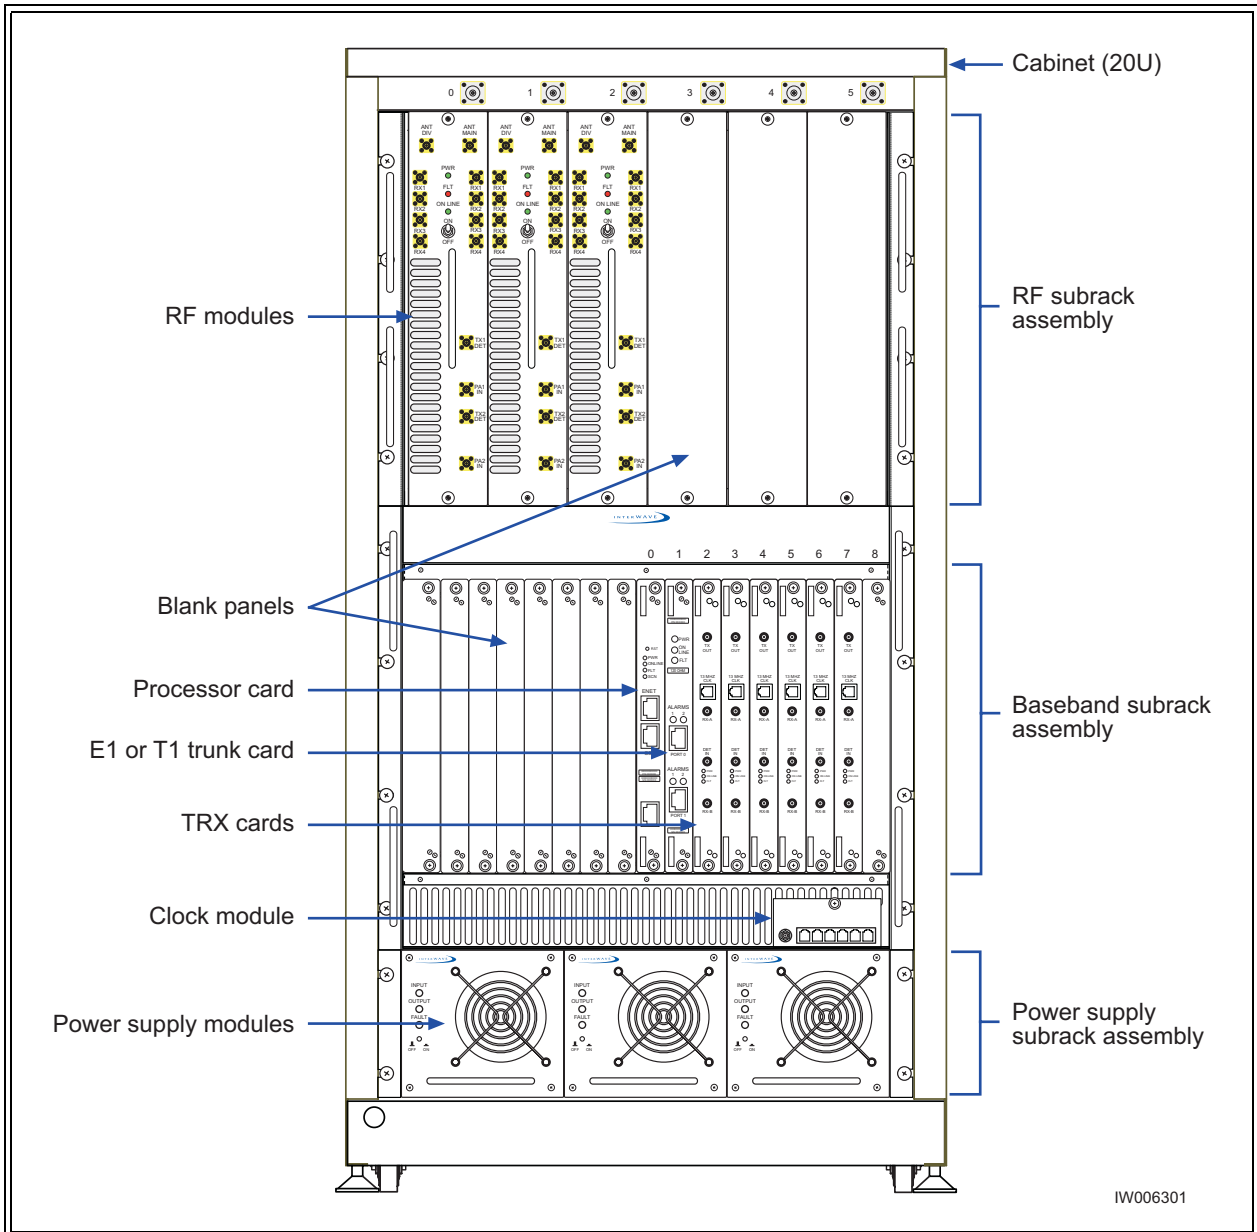


Figure 1-2 UltraWAVE BTS Components

1-2.1 Identifying the System Configuration

Many configurations of the UltraWAVE BTS are available, from an omni one TRX (O1) to a three sector two TRX per sector (S222) system. Use this section to verify the configuration of your BTS.

- 1 Locate the main configuration label on the exterior of your shipping container as shown in Figure 1-3.

This configuration label details the system configuration and all of the modules and cards contained in the system.

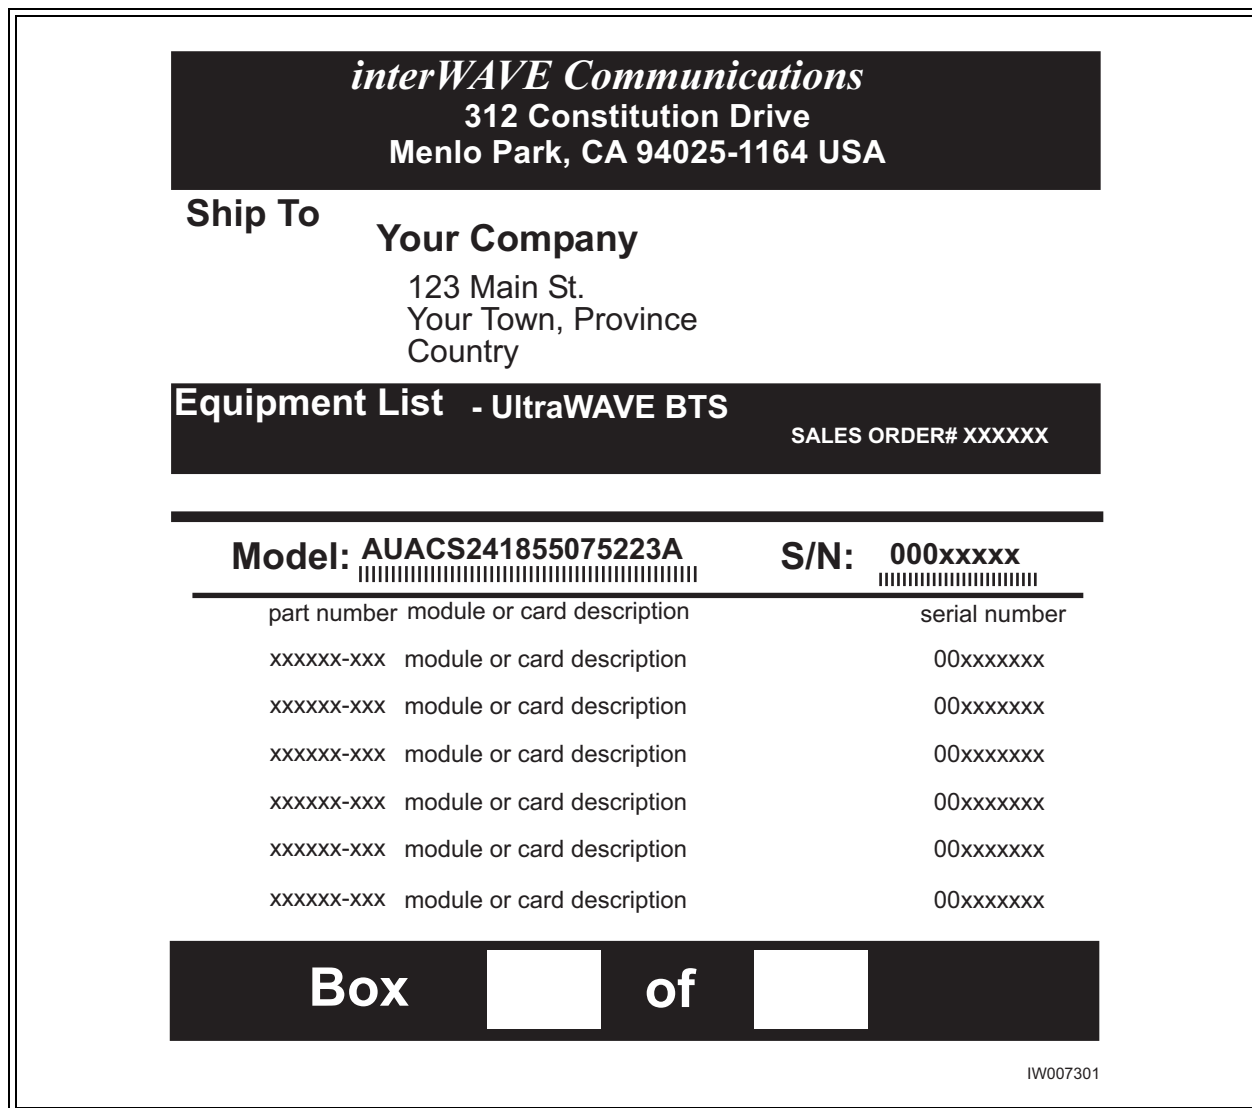


Figure 1-3 Main Configuration Label

- 2 Locate the model number and using Table 1-1 decode the first seven digits for the chassis type and system configuration of the BTS.

The first four letters denote the type of interWAVE system, in this case an UltraWAVE BTS. The next two or three digits denote the BTS configuration.

Table 1-1 Model Number Details

Digit Location	Contents	Configuration
First four letters	AUAC	UltraWAVE BTS

Table 1-1 Model Number Details (continued)

Digit Location	Contents	Configuration
Next two or three digits	O1	Omni single TRX (O1); 50 watts, 2 antennas
	O2	Omni two TRX (O2); 50 watts, 2 antennas
	O3	Omni three TRX (O3); 25 watts, 2 antennas
	O4	Omni four TRX (O4); 25 watts, 2 antennas
	O5	Omni five TRX (O5); 15 watts, 2 antennas or 25 watts, 3 antennas
	O6	Omni six TRX (O6); 15 watts, 2 antennas or 25 watts, 3 antennas
	S11	Two sector, one TRX per sector (S11); 50 watt, 4 antennas
	S13	Three sector, one TRX per sector (S111); 50 watt, 6 antennas
	S21	Two sector, two TRXs per sector (S22); 50 watt, 4 antennas
	S22	Three sector, two TRXs in one sector and one TRX in two sectors (S211); 50 watt, 6 antennas
	S23	Three sector, two TRXs in two sectors and one TRX in one sector (S221); 50 watt, 6 antennas
	S24	Three sector, two TRXs per sector (S222); 50 watt, 6 antennas
	S32	Two sector, three TRXs in one sector and two in the other (S32); 25 watt, 4 antennas
	S33	Two sector, three TRXs per sector (S33); 25 watt, 4 antennas
S41	Two sector, four TRXs in one sector, two in the other (S42); 25 watt, 4 antennas	

Using the example in Figure 1-3, the model number is AUACS24 which corresponds to an UltraWAVE BTS configured for three sectors with two TRXs per sector (S222).

- Record your model number and configuration in the Installation Checklist.

1-2.2 Identifying Module Part and Serial numbers

The factory places up to four configuration labels on the front of each BTS card, module, and chassis to help identify the system configuration. The labels identify the:

- Part description
- Part number
- Revision or dash number
- Serial number

An example of the configuration labels appears in Figure 1-4:

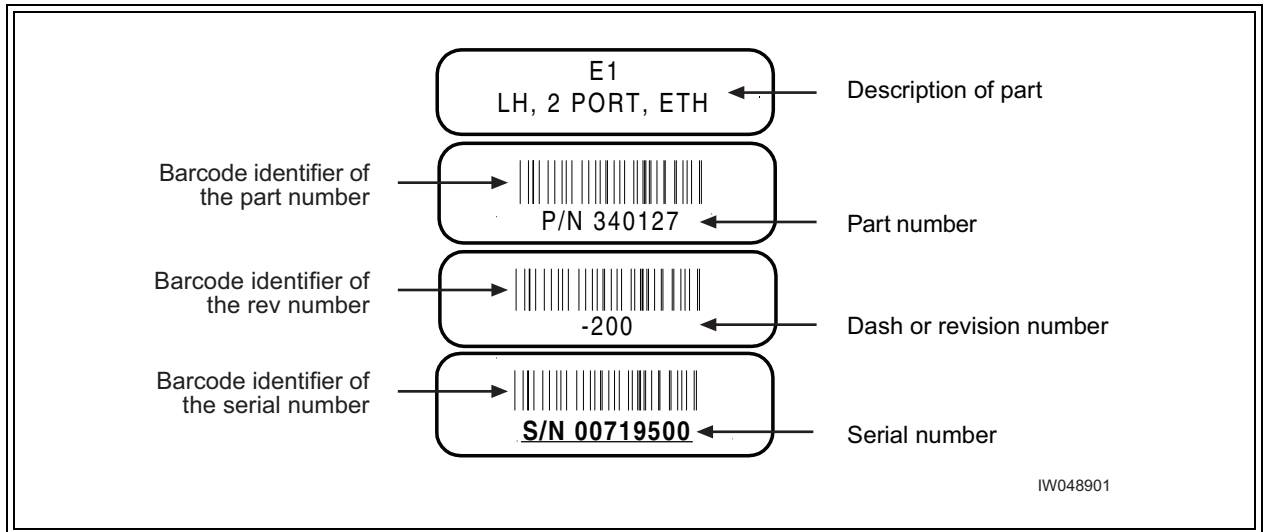


Figure 1-4 Sample Configuration Labels

The part numbers on the BTS cards and modules should be compared to the main configuration label as instructed in the following sections.

Part Numbers, Revision Numbers and Serial Numbers

The verification procedures require you to record each components' part number, revision number and serial number. These numbers are displayed on labels attached to the front plate of each component:

- Part Number -- The part number identifies the type of component. All identical components have the same part number. Part numbers use the format:

P/N NNNNNN

- Revision Number -- Revision numbers record minor changes in design. Revision numbers use the format:

-NNN

- Serial Number -- Each individual component has its own unique serial number. Serial numbers use the format:

S/N NNNNNNNN

1-3 Verifying and Documenting Cards and Modules

The cabinet contains three subrack assemblies:

- The RF subrack contains the BTS RF modules which are responsible for RF power amplification, duplexing and combining when required for each configuration.
- The baseband subrack assembly contains the main processing, trunking and TRX cards.
- The power supply subrack assembly contains up to three power supply modules.

1-3.1 Required Equipment

To verify and record your system configuration, you need:

- A copy of the Shipping Checklist. It should be one of the papers inside the shipping container.
- A copy of Checklist 2

1-3.2 RF Subrack Assembly

The RF subrack provides six slots, starting on the left with slot 0. Depending on your BTS configuration, up to three slots will be required for RF modules. These modules are shipped pre-installed and cabled from the factory.

- 1 Locate the configuration part and serial numbers on your RF modules. Figure 1-4 illustrates a sample of these labels.
- 2 Write down the part number, revision number and serial number in the Installation Checklist.
- 3 Compare the part numbers to the RF module part numbers on the main configuration label and shipping checklist.

1-3.3 Baseband Subrack Assembly

The baseband subrack provides nine slots, starting on the left with slot 0. The following table shows the card cage assignments in the baseband subrack assembly:

Table 1-2 Card Cage Slot Assignments

Card	Slots	Width (Slots)	Function
Processor card	0	1	This is an ICP processor card.
E1 or T1	1	1	E1 or T1 card provides 2 E1 or T1 lines
TRX	2, 3, 4, 5, 6, 7	1	Each TRX manages 8 radio channels.

Use the following procedure to identify and record your system components. See Figure 1-5 for component locations:

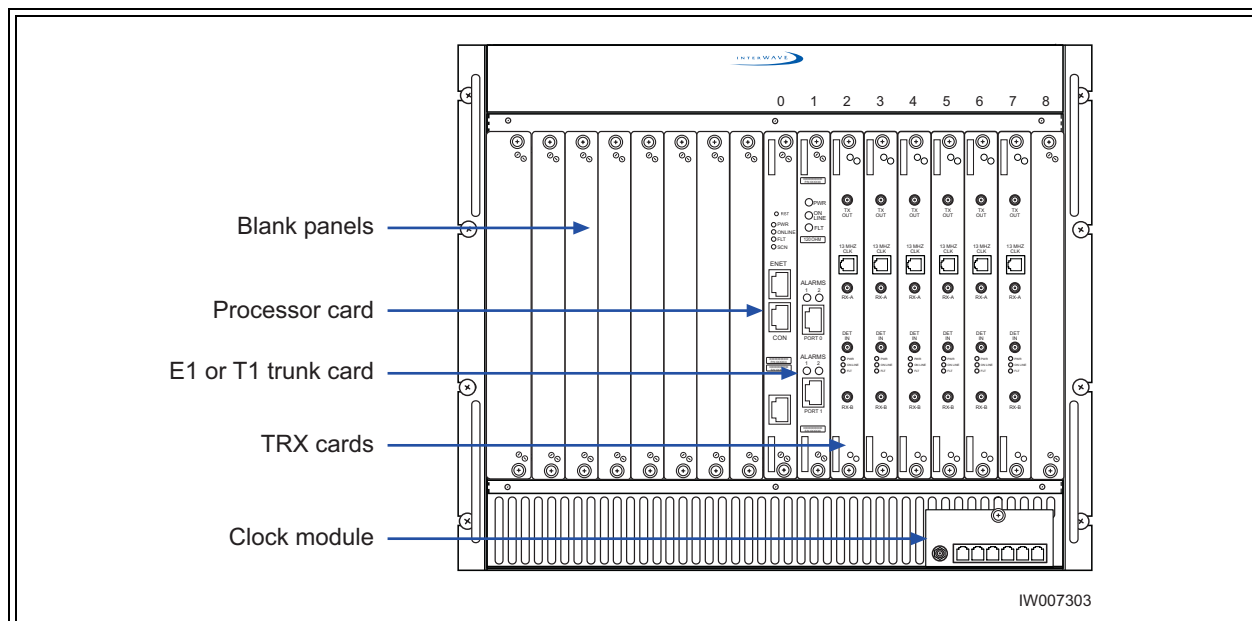


Figure 1-5 Baseband Subrack Assembly

- 1 Locate slot 0 and write down the processor card part number, revision number and serial number in the installation checklist. The processor card part number for the BTS is 340150.
- 2 Slot 1 should contain an E1 or T1 card. Verify that the part number on the card identifies the card as the correct type, as specified by the main configuration label, and write down the part number, revision number and serial number in the installation checklist.

The BTS will contain one of three types of E1 or T1 cards:

- 75 Ohm E1 -- Part Number 340122-075
- 120 Ohm E1 -- Part Number 340122-120
- 100 Ohm T1 -- Part Number 340122-100

- 3 Verify that your system has the correct number of TRX cards as determined by the main configuration label.
- 4 Using Table 1-3, verify that they are in the correct slots. TRX cards fill the card cage assembly from left to right. For example, if your configuration has three TRXs, slots 2, 3 and 4 would contain the TRXs.

Table 1-3 TRX Slot Assignments

TRX Card #	Slots
1	2
2	3
3	4
4	5
5	6

Table 1-3 TRX Slot Assignments

TRX Card #	Slots
6	7
Note: Systems equipped with less than six TRXs will have blank panels covering the empty slots.	

- 5 For each TRX card, write down the part number, revision number and serial number in the installation checklist.
- 6 Verify that all empty slots have blank panels covering them.
- 7 Check the shipping invoice and verify that the system has the correct number of power modules (2 or 3). If the third power module is not installed, verify that the slot is covered by a blank panel.
- 8 For each power module, write down the part number, revision number and serial number in the installation checklist.
- 9 Verify that the clock module is installed. Write down its part number, revision number and serial number in the installation checklist.
- 10 Verify all empty slots are covered by blank panels. These are necessary for cooling and to meet RF emission standards.

1-4 Internal Cabling Overview

Cabling inside the BTS cabinet is routed to connectors accessible on the outside of the cabinet assembly. The internal cabling connects the E1 or T1 card to the external interface cable plate interface. Antenna connections are also routed internally to provide an N-type connector on the top of the cabinet.

The internal cabling of the BTS depends on the configuration ordered by the customer. It is completed by the manufacturer. Due to its complexity, it is not recommended for you to move or disconnect internal cabling. Schematics of the internal RF cabling are provided in Appendix 1.



Extreme care should be used when working around SMA cables, as misalignment or loosening of the cable with the connectors can damage both parts and degrade the cable's performance.

Proceed to Chapter Two to install your BTS.

This chapter provides instructions for installing and configuring the hardware. This includes:

- Verifying site requirements
- Mounting the chassis in its permanent location
- Configuring the E1 or T1 trunk card(s)
- Making the external connections to the BTS

2-1 Site Requirements

Before a site is chosen or equipment installed, a site survey must be carried out. The site survey checklist assists the surveyor with the inspection and the collection of site specific information such as environmental conditions, electrical requirements, and mechanical requirements

The site survey checklist must be completed before installation begins. Note that the necessary steps for site readiness are listed in Checklist 1. The [interWAVE Network Implementation Manual](#) provides additional detailed site requirements.

The site readiness checklist assists the field service engineer or operator to ensure that the site is ready for equipment installation. It includes information about:

- Environmental conditions
- Electrical requirements
- Chassis requirements

The site readiness checklist is located in Checklist 1, it must be completed as part of the installation process.

2-1.1 Environmental Conditions

The BTS is designed to operate indoors only. To facilitate long-term operability and durability of the BTS, observe specific environmental constraints.

Before installing the BTS, ensure that the operating environment maintains a temperature within the range shown in Table 2-1.

NOTE

Make sure the ambient temperature around the unit (which may be higher than the room temperature) is within the limit specified for the unit.

Table 2-1 Operating Environment

	Humidity (non-condensing)	Temperature (Celsius)	Temperature (Fahrenheit)
Maximum	90%	55 degrees	131 degrees
Minimum	10%	-5 degrees	23 degrees

2-1.2 Electrical Requirements

The BTS is specified to operate on either AC or DC power. Requirements for the BTS are dependent on the number of TRX cards supported.

Power Options

Main power supply options for the BTS are:

- 110 VAC, 50-60 Hz
- 220 VAC, 50-60 Hz
- -48 VDC

Table 2-2 shows the typical current requirements for the BTS AC power mains.

Table 2-2 Input Power Requirements

Product configuration	Requirement for 120 or 220 VAC
One TRX	410 watts
Two TRXs	715 watts
Three TRXs	1010 watts
Four TRXs	1320 watts
Five TRXs	1630 watts
Six TRXs	1925 watts

Table 2-3 Power Specifications

Power Requirements	Specification
BTS voltage range: 115 VAC	90 to 132 VAC, 47 to 63 Hz
BTS power protection: 115 VAC	Dedicated 20 amp circuit breaker
BTS voltage range: 230 VAC	187 to 264 VAC, 47 to 63 Hz
BTS power protection: 230 VAC	Dedicated 10 amp circuit breaker
BTS voltage range: -48 VDC	-41 to -60 VDC

Table 2-3 Power Specifications (continued)

Power Requirements	Specification
BTS power protection: -48 VDC	dedicated 45 amp fuse/circuit breaker

2-1.3 Chassis Requirements

Before installing the BTS, ensure that adequate clearing space is allowed around the unit. The BTS should be installed away from salt spray and in an area where there are minimal vibrations. Table 2-4 shows the dimensions of the BTS. For detailed cabinet dimensions, see Section 2-2.

Table 2-4 BTS Cabinet Dimensions

	Weight (Maximum Configuration)	Height	Width	Depth
Metric	213 Kg	105.1cm	56.0 cm	64.77 cm
Imperial	470 lbs	41.38 inches	22.05 inches	25.5 inches

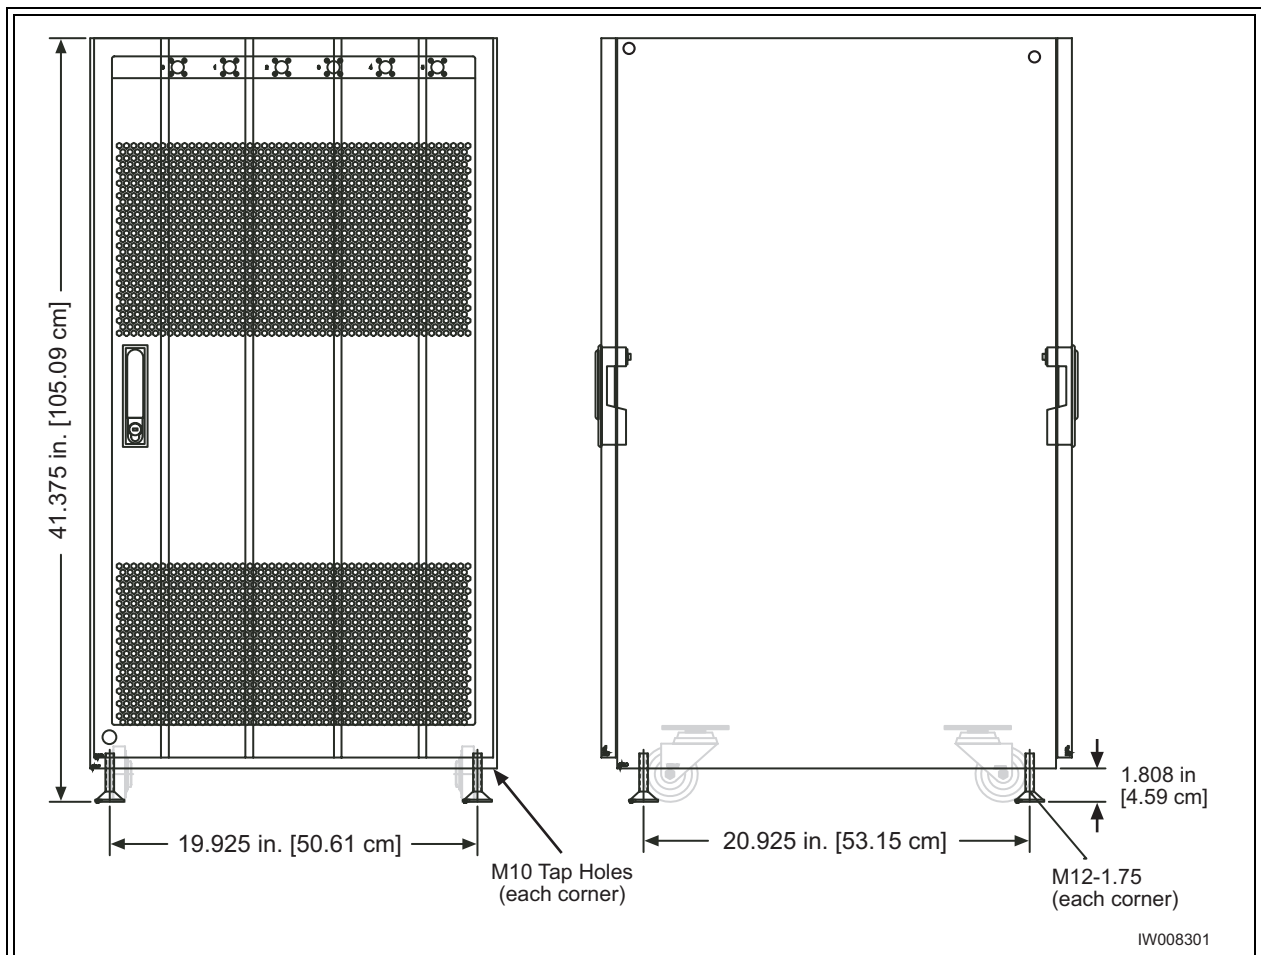


Figure 2-1 Cabinet Dimensions

2-2 Mounting the BTS Chassis

The BTS chassis should be mounted on a concrete pad of sufficient density to support the weight of the cabinet assembly. Alignment pins may be installed in the concrete pad at the locations provided in Figure 2-2. The alignment pins should be 0.5 inch (1.27 cm) in diameter and protrude from 4.1 in. to 4.4 in. (10.41 cm to 11.18 cm) from the concrete pad.

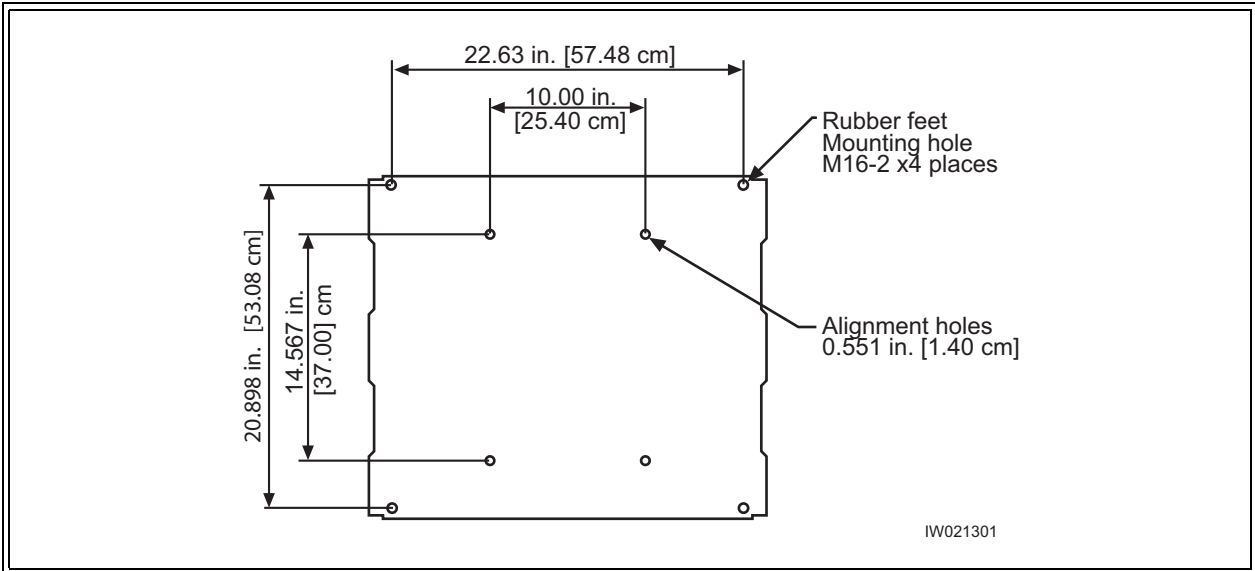


Figure 2-2 Cabinet Footprint

Enough clearance should be provided from the front and back of the cabinet to fully open the doors. This requires at least 24 inches (61 cm) from the front and rear doors. The minimum clearance required on either side of the cabinet is 4.5" (11.4 cm) and the minimum clearance required below the cabinet is 1.8 inches (4.59 cm). The mounting site should also have ample clearance for the trunk and antenna cables to be attached to the connectors at the top of the cabinet.

The required footprint for your cabinet installation must be at least 73.5 inches (186.7 cm) by 31.5 inches (80 cm). Be sure there is sufficient airflow around the unit.

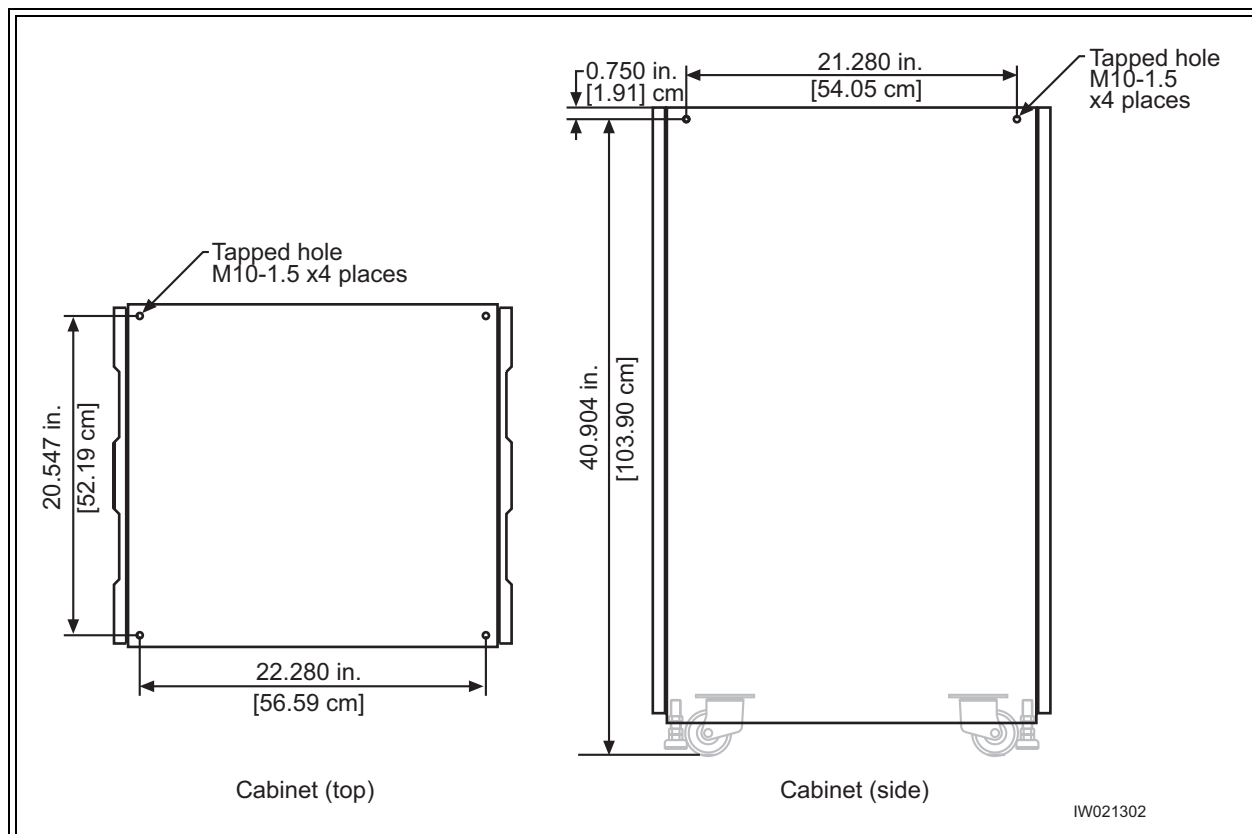



Figure 2-3 Cabinet Dimensions

The cabinet is mounted on casters and may be carefully moved from the unpacking site to its final mounting location. The cabinet has four rubber feet which will raise the cabinet off of the casters. The dimensions for the engagement height of the rubber feet is shown in Figure 2-1. If you have alignment pins mounted in your concrete pad, use the procedure in this section.

If you do not have the alignment pins, Figure 2-3 illustrates the location of eight M10 tap holes which may be used for additional mounting studs, eye hooks or angle brackets for securing the BTS cabinet in its final location.

NOTE 

- Make sure the ambient temperature around the unit (which may be higher than the room temperature) is within the limit specified for the unit.
- Make sure there is sufficient airflow around the unit.
- Make sure electrical circuits are not overloaded - consider the nameplate rating of all the connected equipment, and make sure you have over current protection.
- Make sure the equipment is properly grounded.
- Make sure no objects place on top of unit.

Required Materials

- Angle brackets
- Four M10 machine screws and washers

Required Tools

- 15 mm open end wrench

Installation Instructions

- 1 Move the cabinet into its final location. If using alignment pins to prevent movement, move the cabinet into position over the pins.
- 2 Lower the each of the rubber feet until each reaches the concrete pad.
- 3 Using the 15 mm open end wrench, lower each foot until the casters are raised from the concrete floor, approximately 0.25 in. (0.65 cm).
- 4 Remove the casters from the bottom of the cabinet.
- 5 Lower the cabinet to within 4.1 in. to 4.4 in. (10.41 cm to 11.18 cm) of the concrete pad. If you are using alignment pins, lower the cabinet until the pins should enter the alignment holes no more than 0.25 in. (0.6 cm). Do not lower the cabinet too far over alignment pins as they may puncture internal components.
- 6 Secure locking nuts on foot studs.
- 7 Secure the cabinet using customer-provided 10 mm studs.

NOTE



You may use the additional M10 tap holes to secure the cabinet as site-specific conditions allow.

Rack Mount Advisory

To prevent bodily injury when mounting or servicing this unit in a rack, you must take special precautions to ensure that the system remains stable. The following guidelines are provided to ensure your safety:

- This unit should be mounted at the bottom of the rack if it is the only unit in the rack.
- When mounting this unit in a partially filled rack, load the rack from the bottom to the top with the heaviest component at the bottom of the rack.
- If the rack is provided with stabilizing devices, install the stabilizers before mounting or servicing the unit in the rack.

Attention: Pour éviter toute blessure corporelle pendant les opérations de montage ou de réparation de cette unité en casier, il convient de prendre des précautions spéciales afin de maintenir la stabilité du système. Les directives ci-dessous sont destinées à assurer la protection du personnel :

- Si cette unité constitue la seule unité montée en casier, elle doit être placée dans le bas.

- Si cette unité est montée dans un casier partiellement rempli, charger le casier de bas en haut en plaçant l'élément le plus lourd dans le bas.
- Si le casier est équipé de dispositifs stabilisateurs, installer les stabilisateurs avant de monter ou de réparer l'unité en casier.

Warnung: Zur Vermeidung von Körperverletzung beim Anbringen oder Warten dieser Einheit in einem Gestell müssen Sie besondere Vorkehrungen treffen, um sicherzustellen, daß das System stabil bleibt. Die folgenden Richtlinien sollen zur Gewährleistung Ihrer Sicherheit dienen:

- Wenn diese Einheit die einzige im Gestell ist, sollte sie unten im Gestell angebracht werden.
- Bei Anbringung dieser Einheit in einem zum Teil gefüllten Gestell ist das Gestell von unten nach oben zu laden, wobei das schwerste Bauteil unten im Gestell anzubringen ist.
- Wird das Gestell mit Stabilisierungszubehör geliefert, sind zuerst die Stabilisatoren zu installieren, bevor Sie die Einheit im Gestell anbringen oder sie warten.

2-3 Configuring the E1 or T1 Trunk Card

This section describes how to configure E1 or T1 trunk cards.

These procedures designed for E1 or T1 cards that are shipped pre-configured in a system. To configure E1 or T1 cards that are shipped as configured or unconfigured replacements, see Appendix 1.

Your system is shipped from the manufacturer configured with the correct cards for your site-specific application. These can be 100 Ohm T1, 75 Ohm E1, or 120 Ohm E1. All cards are shipped with the appropriate connectors.

NOTE



Cable runs of greater than 600 meters (1968 feet) are not supported directly from the card. If you are attempting a longer cable run between interWAVE chassis please contact Customer Service to determine if you need a repeater for your application.

Table 2-5 lists the cards and the procedures that apply to each card type.

Table 2-5 Trunk Cards and Procedures

Label	Description	Operation
75 Ohm	75 Ohm E1 board	Set the ground to the Transmit or Receive side using the jumpers. See Section 2-3.1
120 Ohm	120 Ohm E1 Board	No configuration is required
100 Ohm	100 Ohm T1 Board	Configure the DIP switch based on cable length to the DSX-1 demarcation point. See Section 2-3.2. NOTE: No configuration is required unless connecting to a DSX1 demarcation point greater than 133 ft.

2-3.1 Configure Ground Jumpers on 75 Ohm E1 Cards

Two types of dual port 75-Ohm E1 cards exist. They are differentiated only by their connector types—either BNC or RJ-45 — on the front panel of the card.

- 1 Open the front cabinet door and locate the 75 Ohm E1 card in the baseband subrack assembly.
- 2 Identify your E1 card and proceed to the appropriate subsection. For RJ-45 cards, continue with the procedure below. For BNC cards, proceed to “BNC Connector Cards” on page 22.

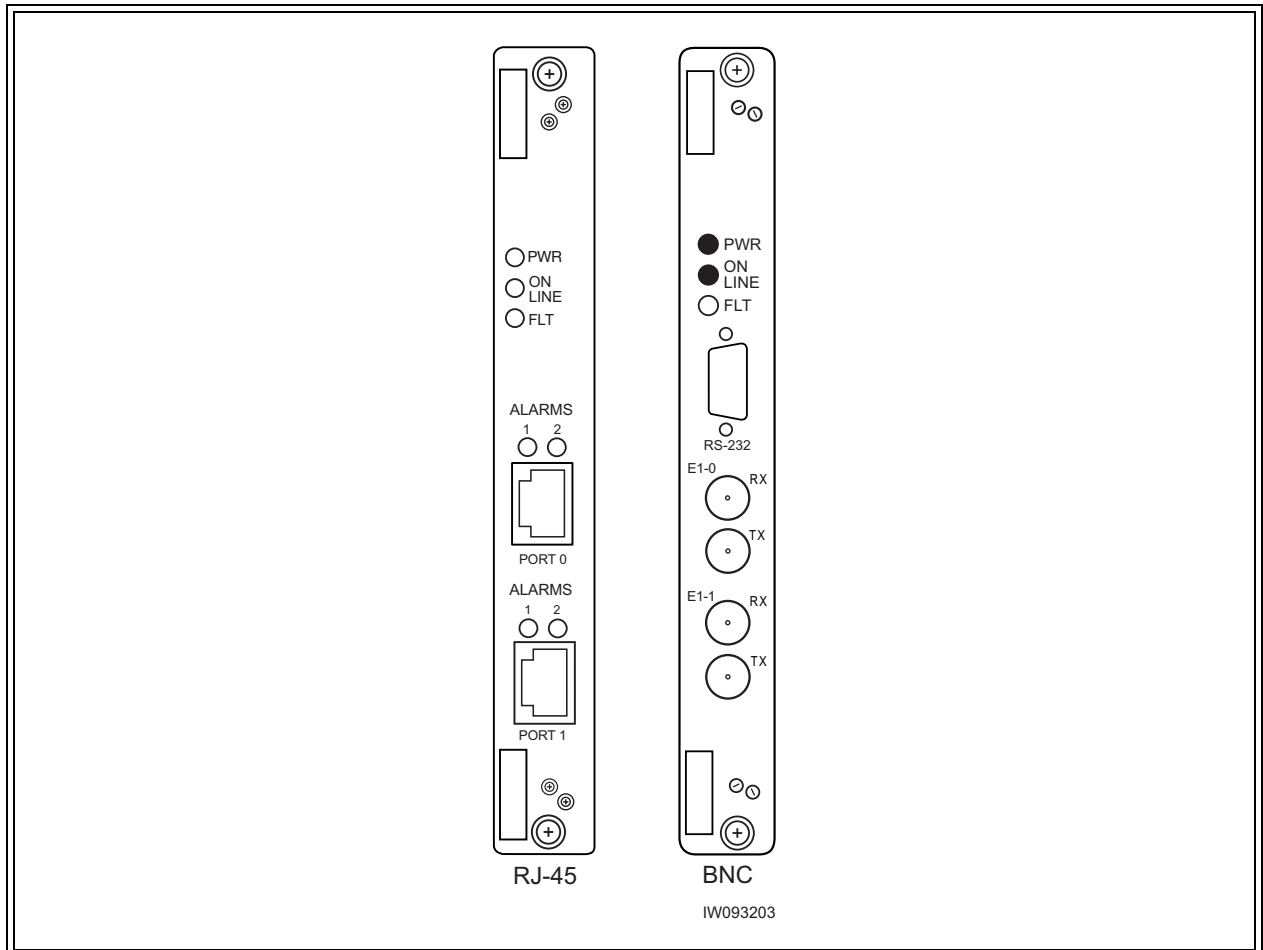


Figure 2-4 Identify 75 Ohm E1 Cards

RJ-45 Connector Cards:

- 1 Ensure that anti-static precautions are taken.
- 2 Make note of the orientation of the cables and disconnect them from the selected card.
- 3 Using a Phillips screwdriver, fully loosen the two screws located at the top and bottom of the card.
- 4 Remove the card by firmly pulling the two white tabs located at the top and bottom of the card.
- 5 See Figure 2-5 to locate jumpers P8 through P11.
- 6 Set the signal grounding to the Transmit or Receive Side.

Jumpers P8, P9, P10 and P11 control the signal grounding. Placing the jumper across Pins 1 and 2 sets the corresponding ground; otherwise the jumper should be placed across Pins 2 and 3.

The following table shows the jumper assignments:

Table 2-6 Ground Jumpers

Ground Selection	Port	Jumper Positions	
Receive Side	Port 0	P8 = 1 to 2	P9 = 2 to 3
	Port 1	P10 = 2 and 3	P11 = 1 and 2
Transmit Side	Port 0	P8 = 2 to 3	P9 = 1 to 2
	Port 1	P10 = 1 and 2	P11 = 2 and 3

interWAVE recommends grounding the receive (RX) side on 75 Ohm boards.

NOTE



Only one side of the transmission link should be grounded. To ensure that only the one side is grounded you should check the settings at the far end of the E1 transmission link when possible. These settings should be identified by experienced personnel.

- 7 Place the card into the slot and slide in the card until it completely rests inside the slot. Push the card firmly into place.
- 8 Using a Phillips screwdriver, tighten the two captive screws into the chassis through the trunk card.

Figure 2-5 shows the location of the grounding jumpers

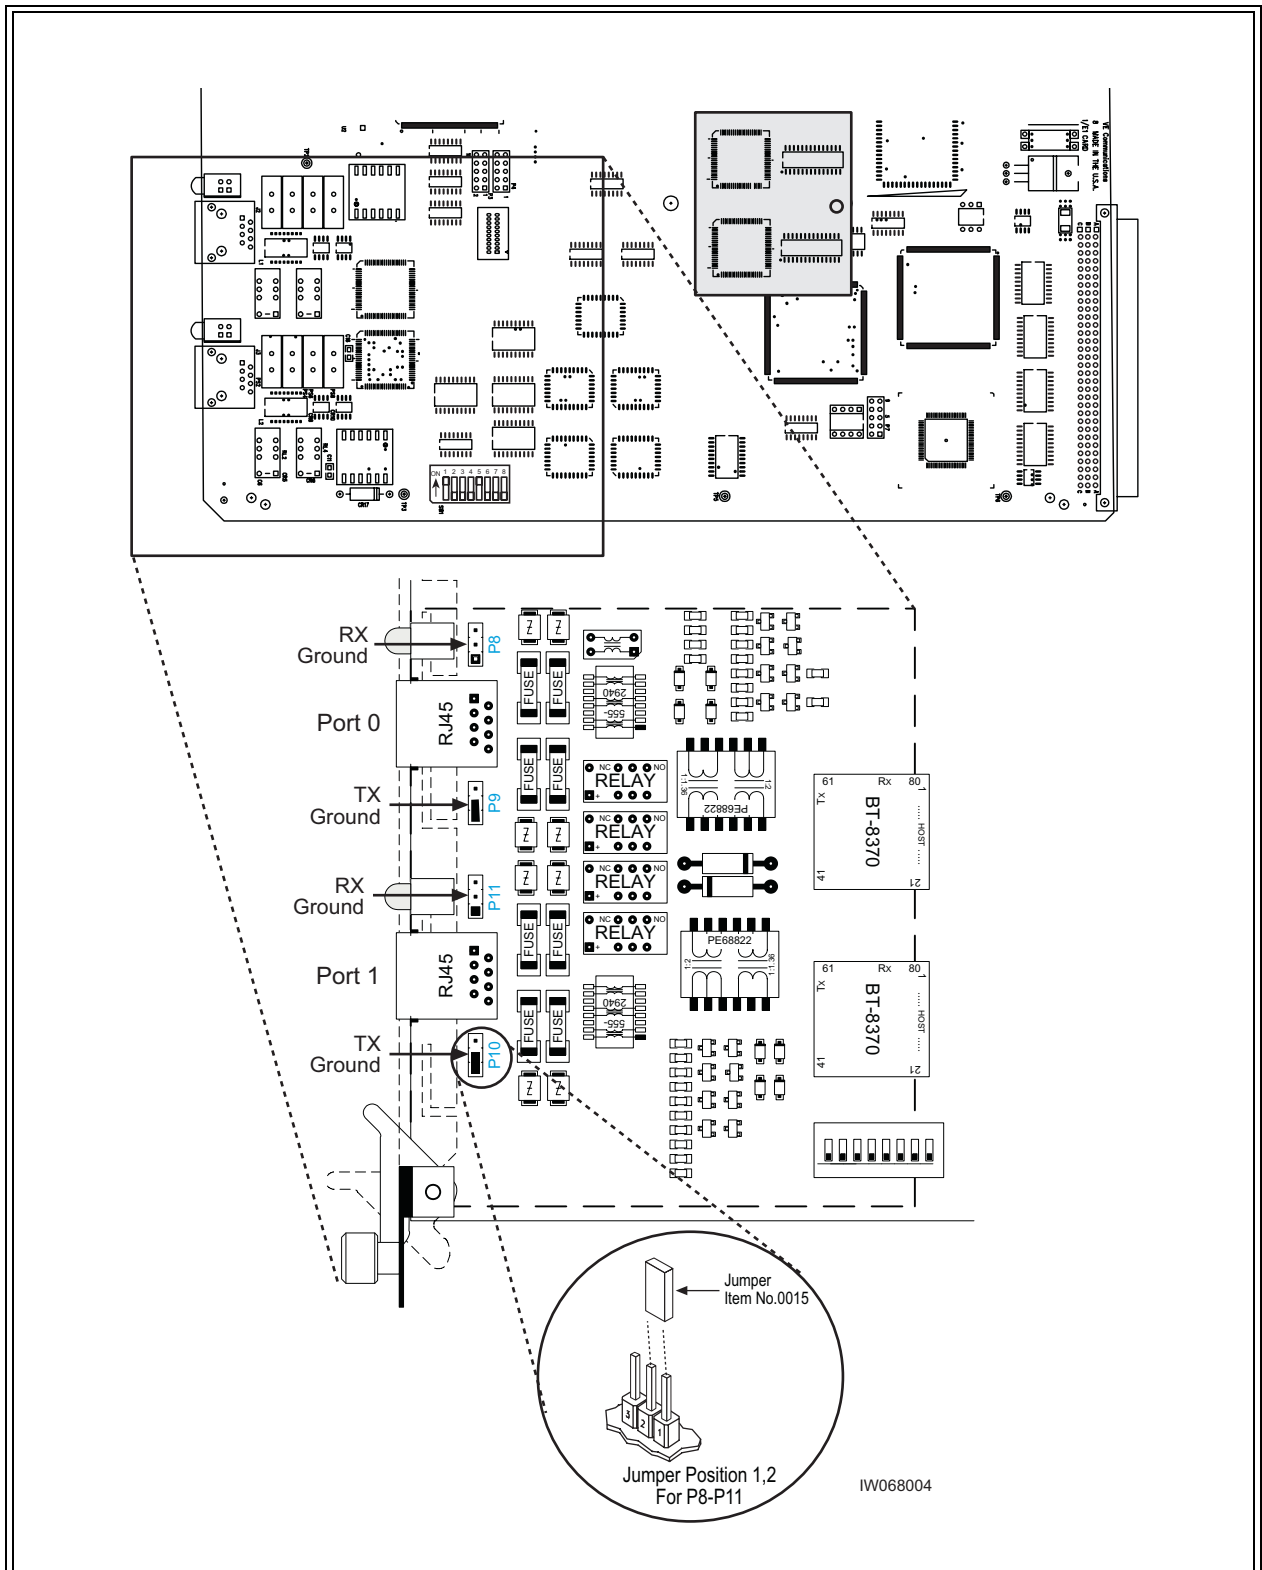


Figure 2-5 Ground Jumpers (P8 through P11)

BNC Connector Cards

By placing a jumper between pins 1 and 2 of headers P4 (port 1) and P6 (port 2), the outer conductor of the dual port BNC 75 Ohm E1 card is grounded. This adheres to the ITU G.703 specification, which states that the receive coaxial pair must be floating, but with the option to ground.

The BTS is shipped with 4 jumpers in place which ground both the transmit and the receive coaxial pair. It is mandatory that the transmit pair is grounded. However, whether the receive pair is grounded is determined by the customer equipment to which the BSC is connected.

The configuration of these jumpers can be changed at this point.

Tools Required

- Phillips screwdriver
- Electrostatic wrist strap, provided with the BTS

Procedure

- 1 Place the supplied electrostatic wrist strap around your wrist. Attach the metallized tape of the wrist strap to the closest ground, for example, to the chassis of the BTS.
- 2 Unscrew the 75 Ohm dual port E1 card from the chassis, and pull it halfway out.
- 3 Look for the four jumpers silk-screened P3, P4, P5, and P6, located next to the external connectors on the dual port E1 card. See Figure 2-6
 - A jumper connects pins 1 and 2 of P4 and P6. This ensures that the outer conductor is grounded. It is mandatory that these jumpers be installed in this configuration.
 - A jumper connects pins 1 and 2 of P3 and P5. Remove these jumpers if the receive pair must be floating. Keep these jumpers installed if the receive pair is to be grounded.

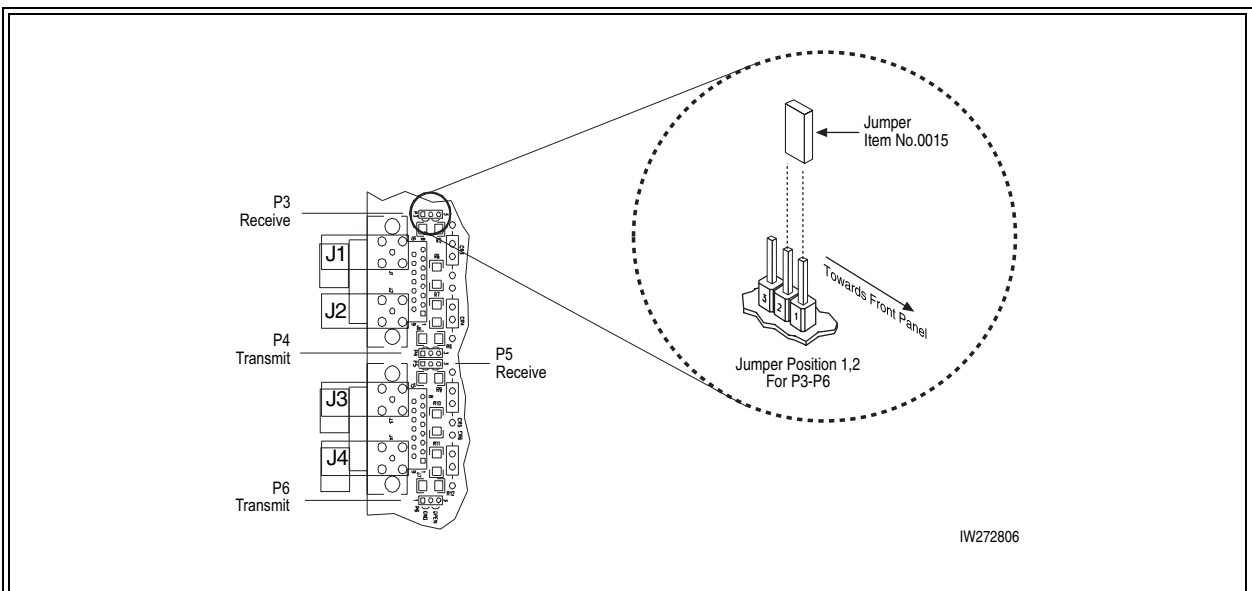


Figure 2-6 Placement of the Jumper for Ports P3-P6

After the E1 card jumpers are checked for their correct placement, reinsert the dual port E1 card in the chassis, and screw it into place.

2-3.2 Configure Cable Length DIP Switch Settings on T1 Cards

To configure the DIP switch settings on a T1 card:

- 1 Ensure that anti-static precautions are taken.
- 2 Make note of the orientation of the cables and disconnect them from the selected card.
- 3 Using a Phillips screwdriver, fully loosen the two screws located at the top and bottom of the card.
- 4 Remove the T1 card by firmly pulling the two white tabs located at the top and bottom of the card.
- 5 See Figure 2-7 to locate the DIP switch.
- 6 On T1 cards, the DIP switch setting is determined by the cable distance from the card to the DSX-1 demarcation point. The following table provides the appropriate Port 0 and Port 1 DIP switch settings for DSX-1 demarcation points located within various cable distance ranges.


	<p>NOTE In Table 2-7, the first setting (0-133 ft.) is the default and should be used for all T1 applications <u>unless</u> connecting to a DSX-1 demarcation point beyond 133 ft. When connecting two WAVExpress chassis you will always use the first setting regardless of distance (up to 600 m).</p>
--	--

Table 2-7 T1 DIP Switch Settings

Port 0 Switch Setting 1-2-3-4	Port 1 Switch Setting 5-6-7-8	Cable distance from T1 Card to DSX-1 Demarcation Point Feet (Meters)
OFF-ON-ON-ON	OFF-ON-ON-ON	0-133 (0-40.57)
OFF-OFF-ON-ON	OFF-OFF-ON-ON	133-266 (40.57-81.13)
OFF-ON-OFF-ON	OFF-ON-OFF-ON	266-399 (81.13-121.7)
OFF-OFF-OFF-ON	OFF-OFF-OFF-ON	399-533 (121.7-162.57)
OFF-ON-ON-OFF	OFF-ON-ON-OFF	533-655 (162.57-199.78)
<p>Note: ON refers to the DIP switch pin being in the "UP" position and OFF refers to the DIP switch pin being in the "DOWN" position. X = either ON or OFF.</p>		

- 7 Place the card into the slot and slide in the card until it completely rests inside the slot. Push the card firmly into place.
- 8 Using a Phillips screwdriver, tighten the two captive screws into the chassis through the trunk card.

The following figure shows the location of the DIP switch.

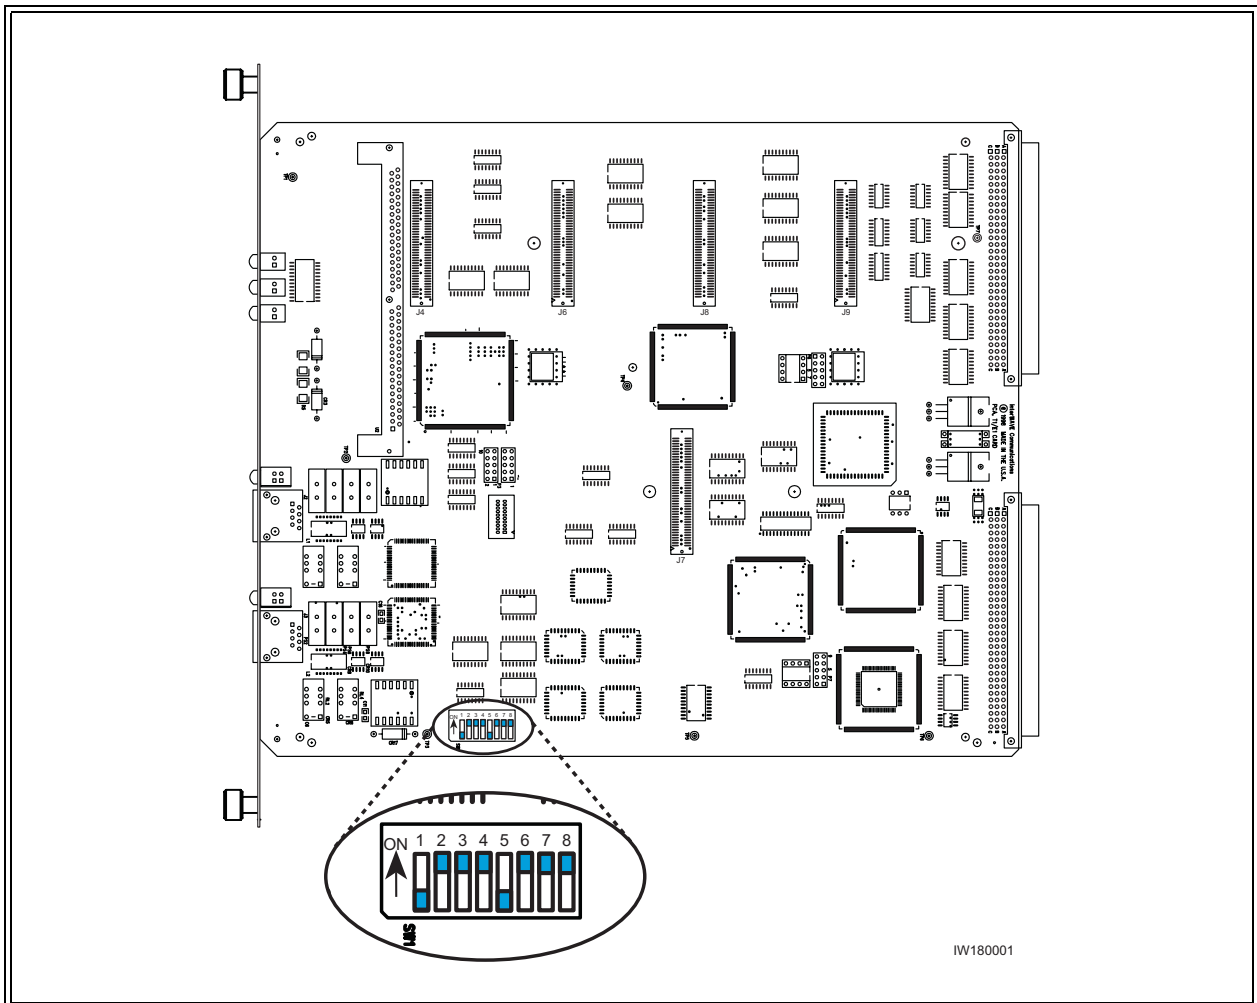


Figure 2-7 Location of DIP switch on a Trunk Card

2-4 Connecting Power and Ground Cables

Use this section to connect your earth ground and power cables to the BTS cabinet.

2-4.1 Connecting the Grounding Cable

The cabinet should be grounded to the site earth ground ring. Complete the following to connect an earth ground to the chassis.

- 1 Route a customer-supplied 10 AWG (2.5 mm) or larger copper wire to a grounding lug inserted into one of the M10 tap holes shown in Figure 2-3.
- 2 Connect the other end of the lead stud to the closest grounding bus.

CAUTION: GROUNDING CIRCUIT CONTINUITY IS VITAL FOR SAFE OPERATION OF MACHINE. NEVER OPERATE MACHINE WITH GROUNDING CONDUCTOR DISCONNECTED.



ATTENTION: UN CIRCUIT DE TERRE CONTINU EST ESSENTIEL EN VUE DU FONCTIONNEMENT SÉCURITAIRE DE L'APPAREIL. NE JAMAIS METRE L'APPAREIL EN MARCHE LORSQUE LE CABLE DE MISE À LA TERRE EST DÉBRANCHE.

Warnung: Achtung, Hoher Ableitstrom! Schutzleiteranschluß vor dem Netzanschluß herstellen.

2-4.2 Connecting the Power Supplies

In this section, you will connect the BTS to your power source. Refer to the appropriate subsection to make either AC or DC power connections.

Warning: This product relies on the building's installation for short-circuit (overcurrent) protection. Ensure that a fuse or circuit breaker no larger than 120 VAC, 15A U.S. (240 VAC, 10A international) is used on the phase conductors (all current-carrying conductors).



Attention Pour ce qui est de la protection contre les courts-circuits (surtension), ce produit dépend de l'installation électrique du local. Vérifier qu'un fusible ou qu'un disjoncteur de 120 V alt., 15 A U.S. maximum (240 V alt., 10 A international) est utilisé sur les conducteurs de phase (conducteurs de charge).

Warnung Dieses Produkt ist darauf angewiesen, daß im Gebäude ein Kurzschluß- bzw. Überstromschutz installiert ist. Stellen Sie sicher, daß eine Sicherung oder ein Unterbrecher von nicht mehr als 240 V Wechselstrom, 10 A (bzw. in den USA 120 V Wechselstrom, 15 A) an den Phasenleitern (allen stromführenden Leitern) verwendet wird.

AC Operation

The BTS is shipped from the factory with the internal cabling routed from the AC power supply subrack assembly to a molex connector on the top rear of the cabinet. A power supply cable is included with the BTS which should be used to connect to your AC power supply or battery backup system.

Make connections from the AC power supply to the cabinet as follows:

- 1 Verify the ground connection you made in Section 2-4.1 is secure.
- 2 Make sure that the power button located on all power supply modules is in the raised OFF position. See Figure 2-8 for the location of the power supply power buttons.

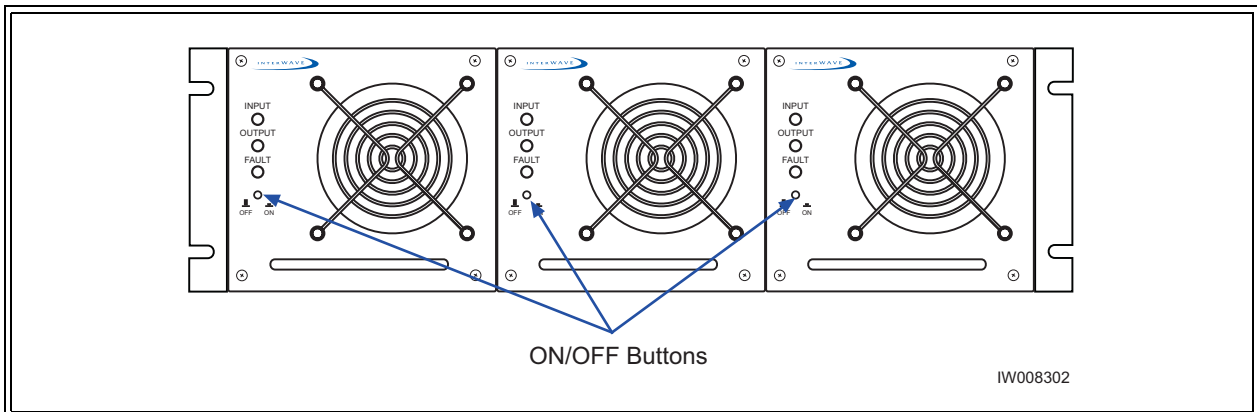


Figure 2-8 Power Supply ON/OFF Buttons

- 3 Plug the molex power connector into the power connection on the top of the cabinet. Secure the connector by twisting the connector sleeve until the lines on the cable connector and chassis connector align.
- 4 Plug the power cable into the electrical mains. Do not apply power to the chassis at this time. Wait until you are performing the off-line commissioning procedures in the next chapter.

CAUTION: THE POWER SUPPLY CORD IS USED AS THE MAIN DISCONNECT DEVICE, ENSURE THAT THE SOCKET-OUTLET IS LOCATED/INSTALLED NEAR THE EQUIPMENT AND IS EASILY ACCESSIBLE.



ATTENTION: LE CORDON D'ALIMENTATION EST UTILISÉ COMME INTERRUPTEUR GÉNÉRAL. LA PRISE DE COURANT DOIT ÊTRE SITUÉE OU INSTALLÉE À PROXIMITÉ DU MATÉRIEL ET ÊTRE FACILE D'ACCÈS.

Warnung: Das Netzkabel dient als Netzschalter. Stellen Sie sicher, dass die Steckdose einfach zugänglich ist.

-48 VDC Operation

The BTS is shipped from the factory with the internal cabling routed from the DC power supply subrack assembly to a molex connector on the top rear of the cabinet. A power supply cable is included with the BTS which should be used to connect to your DC power supply or battery backup system.

Use the following procedure:



The power main must be a Safe Extra-Low Voltage (SELV), -48 VDC supply as defined in IEC950 and EN60950.

- 1 Verify the ground connection you made in Section 2-4.1 is secure. The cabinet power supply is grounded through this connection. It is critical that this connection is made properly.
- 2 Make sure that the power button located on all power supply modules is in the raised OFF position. See Figure 2-8 for the location of the power supply power buttons.
- 3 Verify that the -48 VDC power source is off.
- 4 The -48 VDC power cable has two wires for the positive (+) connection and two wires for the negative (-) connection. This spreads the current draw across two pins of the molex connector for each connection.

Attach the two positive (+) cables to the positive side of your -48 VDC power source.

- 5 Attach the two negative (-) cables to the negative side of your -48 VDC power source.
- 6 Plug the molex power connector into the power connection on the top of the cabinet. Secure the connector by twisting the connector sleeve until the lines on the cable connector and chassis connector align.

NOTE



Do not use the DC power supply circuit breaker to apply power to the chassis at this time. Wait until you are performing the off-line commissioning procedures in the next chapter.

CAUTION: THE POWER SUPPLY CORD IS USED AS THE MAIN DISCONNECT DEVICE, ENSURE THAT THE SOCKET-OUTLET IS LOCATED/INSTALLED NEAR THE EQUIPMENT AND IS EASILY ACCESSIBLE.



ATTENTION: LE CORDON D'ALIMENTATION EST UTILISÉ COMME INTERRUPTEUR GÉNÉRAL. LA PRISE DE COURANT DOIT ÊTRE SITUÉE OU INSTALLÉE À PROXIMITÉ DU MATÉRIEL ET ÊTRE FACILE D'ACCÈS.

Warnung: Das Netzkabel dient als Netzschalter. Stellen Sie sicher, das die Steckdose einfach zugänglich ist.

2-5 Connecting E1 or T1 Trunk Cables

External trunk cabling depends on the configuration that the customer ordered and the site-specific requirements. These cables will be supplied by the customer. Failure to use electrically compliant T1 or E1 cables may cause transmission errors. Please refer to the appropriate subsections to determine your cable requirements.

The E1 or T1 trunk cables are routed internally from the E1 or T1 trunk card in the baseband subrack assembly to the top rear of the BTS cabinet. All three types of signaling (E1 75 Ohm, 120 Ohm and T1 100 Ohm) are terminated at the cabinet with RJ-48C port connectors. The pinout of this connector is illustrated in Figure 2-9.

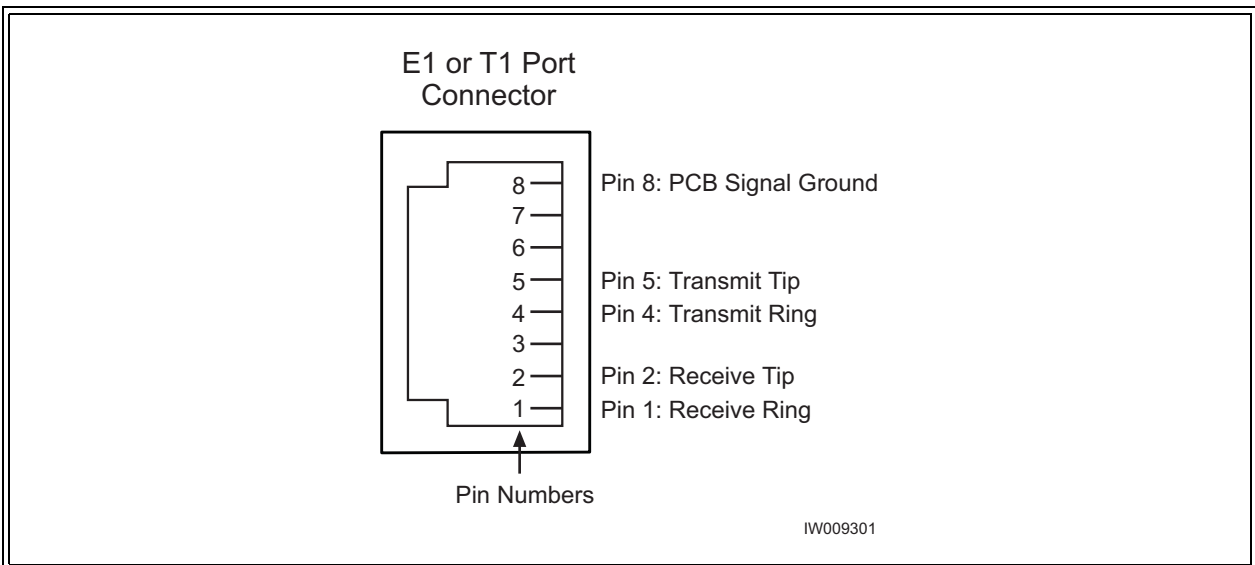


Figure 2-9 Cabinet Trunk Port Pinout

2-5.1 E1 Cables

E1-75 Ohm

This is coaxial cable with a nominal impedance of 75 Ohm +/-5% at 1 MHz. The maximum allowable cable distance depends directly on the insertion loss of the cable at 1 MHz. In this mode, the E1 trunk card can accommodate up to 6 dB of cable loss.

E1-120 Ohm

This cable is individually shielded twisted pair with a nominal impedance of 120 Ohm +/-5% at 1 MHz. The maximum allowable cable distance depends directly on the insertion loss of the cable at 1 MHz. In this mode, the E1 trunk card can accommodate up to 9 dB of cable loss.

Table 2-8 provides a description of cables required for installation and connection to an E1 network, but not supplied with the BTS:

NOTE Before connecting E1 lines to the BTS, it is assumed that the quality of the lines has been verified. It is recommended that bit error ratio tests be completed to ensure that the BER is less than 10^{-8} .

Table 2-8 Customer-Supplied E1 Cabling

Cable Identity	Cable Type	Corresponding Cable Plug
E1, 120 Ohm	Shielded, Twisted, 2-Pair	RJ-48C, Male
E1, 75 Ohm	Shielded, Twisted, 2-Pair	RJ-48C, Male

Note: The number of cables required depends on the ordered configuration of the BTS.

Conversion Cables

If you are connecting into an existing E1 network with standard BNC or DSUP connectors, a conversion cable for either the 75 Ohm or 120 Ohm will be required. To purchase these cables from interWAVE, contact your local sales support representative.

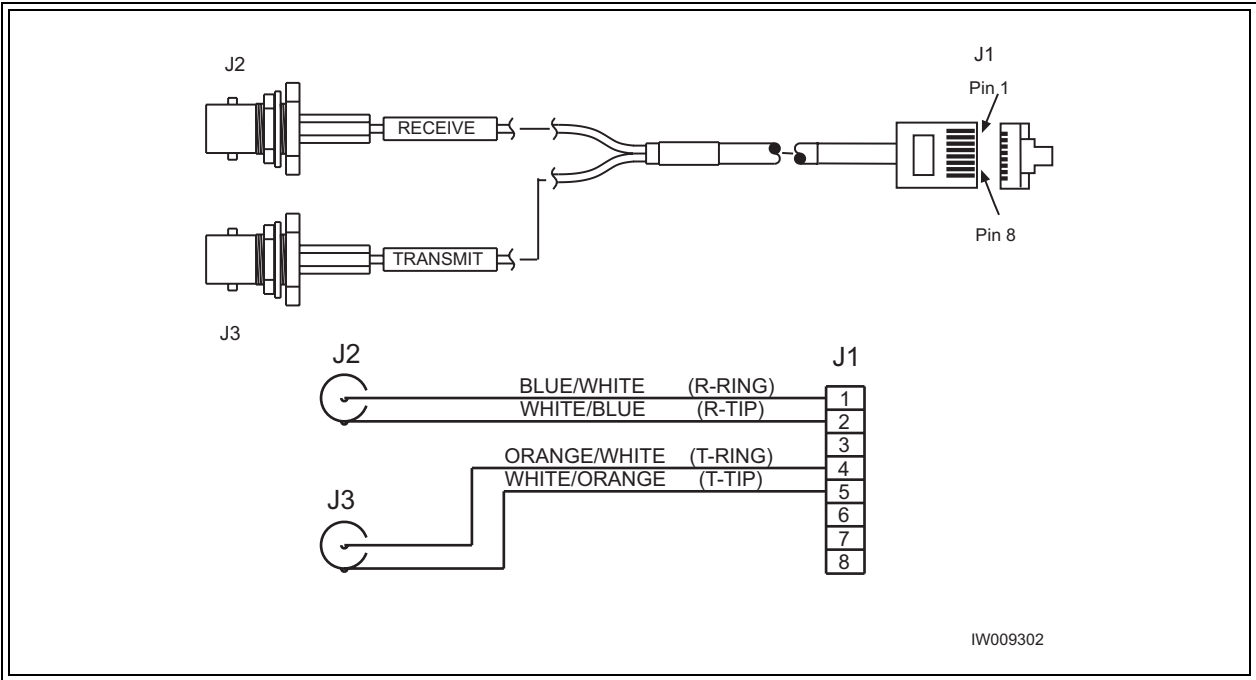


Figure 2-10 75 Ohm BNC Conversion Cable

Figure 2-10 illustrates the pinout for an RJ-48C to 75 Ohm BNC conversion cable.

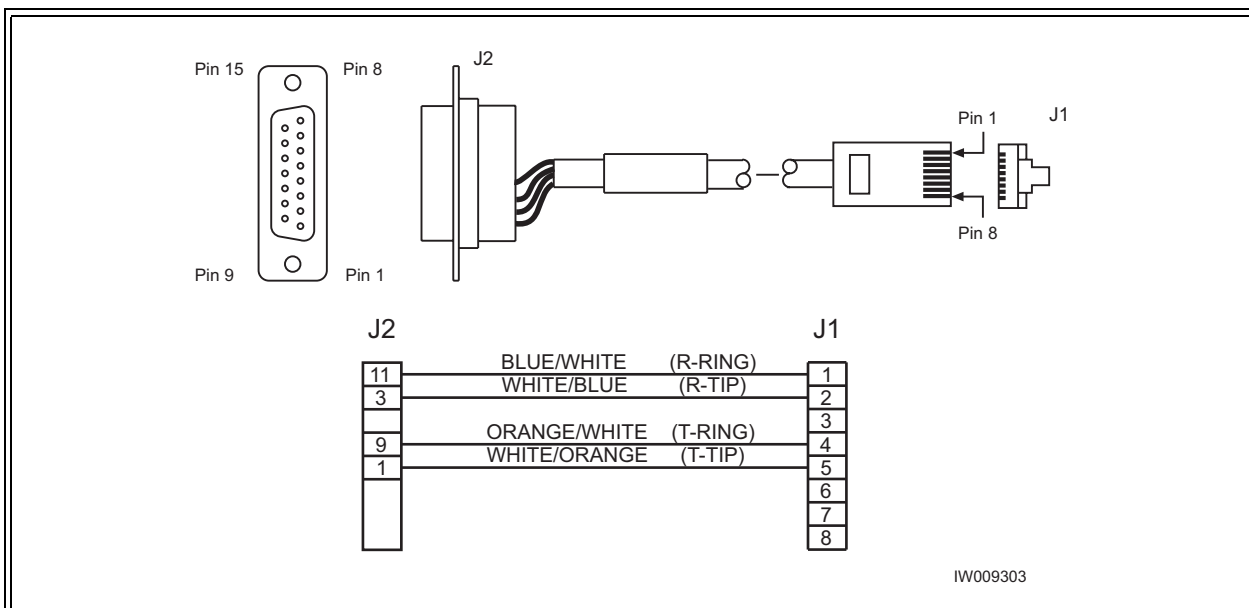


Figure 2-11 120 Ohm DSUB Conversion Cable

Figure 2-11 illustrates the pinout for the RJ-48C to DSUB 120 Ohm conversion cable.

2-5.2 T1 Cables

T1-100 Ohm

For T1 connections, the proper cable is individually shielded twisted pair with a nominal impedance of 100 Ohm +/-5% at 772 kHz. The maximum allowable cable distance depends directly on the insertion loss of the cable at 772 kHz. The T1 card can accommodate up to 9 dB of cable loss. When using 22 AWG ABAM cable, 9 dB of loss is approximately 2000 feet. When using Belden type 9729 (with a cable loss of 6 dB per 1000 feet at 772 kHz) the maximum cable distance is approximately 1500 feet.

Table 2-9 provides a description of cables required for installation and connection to a T1 network, but not supplied with the BTS:

NOTE Before connecting T1 lines to the BTS, it is assumed that the quality of the lines has been verified. It is recommended that bit error rate tests be completed to ensure that the BER is less than 10^{-8} .

Table 2-9 Customer-Supplied T1 Cabling

Cable Identity	Cable Type	Corresponding Cable Plug
T1, 100 Ohm	Shielded, Twisted, 2-Pair	RJ-48C, Male
Note: The number of cables required depends on the ordered configuration of the BTS.		


2-5.3 Connecting E1 or T1 Lines

All E1 or T1 cable routing should be installed per the site survey documentation in conjunction with the information identified in the [interWAVE Network Implementation Manual](#).

- Using the appropriate customer-supplied cables, connect the Abis interface E1 and/or T1 cables to the local E1 or T1 provider.

2-5.4 Direct Cabling Between Multiple UltraWAVE or WAVExpress Systems

This section provides information for cabling between WAVExpress equipment. The external cabling between your equipment will vary depending on the configuration of the cable management assembly of each chassis. This could consist of any combination of BNC, DSUB or RJ-48C connectors and either E1 or T1 signaling.

NOTE  The direct cabling between systems requires crossover cables (Tx to Rx, and Rx to Tx), instead of the straight-through cabling used when connecting systems through a radio or telephone provider network.

Using Cross-Over RJ-48C Cables

When connecting a shielded twisted pair crossover cable between two UltraWAVE or WAVExpress systems, the routing of the pins needs to comply with the cable mapping shown in Figure 2-12. The RJ-48C cable connector may be of the conventional plastic body type with the shield and drain wires of the cable connected to a pigtail to pin 8 (Signal Ground), which is internally grounded to the card. However, a shielded cable plug may also be used, terminating the cable shield to an integral metal shell of the RJ-48 jack which then makes an electrical connection to the front panel when installed. Figure 2-12 provides the pin assignments for the RJ-48C jacks.

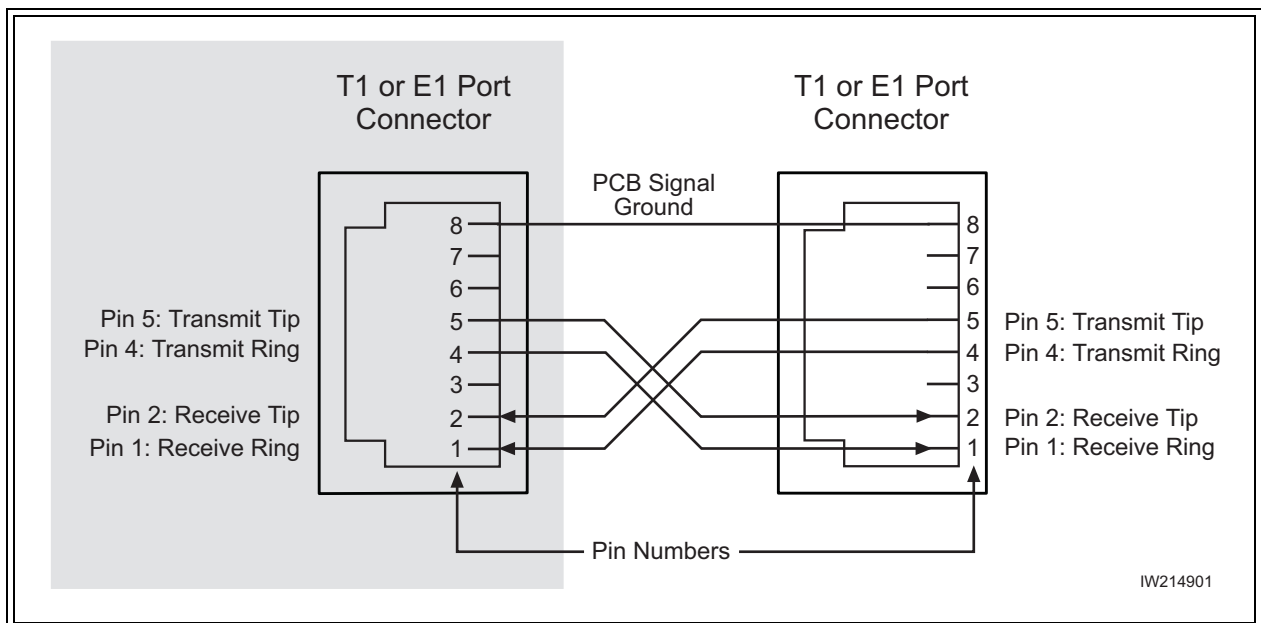


Figure 2-12 Cable Mapping of RJ-48C Crossover Cable

To connect two systems using RJ-48C cables, connect a crossover cable (see Figure 2-12) from the port 1 of the first chassis to port 0 of the second chassis.

2-5.5 Cabling External BTSs

The BTS can also be connected to daisy-chained BTSs as described in Section 2-5.4. These daisy-chained BTSs will download their operating software from the BSC into their flash memory upon reboot. Some additional software configuration is also required to setup the operations and maintenance link to the OMC. This additional configuration of the OAM timeslots is required for daisy-chained BTSs as discussed in Chapter Four.

2-6 Connecting Antennas

The cabinet assembly provides external access to the male N-type connectors for your external antennas. Your antenna cable should terminate with a 90° N-type female connector or an N-type female to male elbow adapter may be used for a more convenient connection to the cabinet. Insertion loss for the elbow type of connector is typically between 0.1 and 0.2 dBm.

The antenna cabling for the BTS can be configured in several ways depending on a number of factors including the number of TRXs, number of antennas and use of diversity. Your site specific configuration was determined during the network planning stage of implementation.

Table 2-10 Customer-Supplied Adapters and Cabling

Identity	Cable Type	Corresponding Cable Plug
Antenna cable (external)	Coaxial	N-type, Female
Adapter (optional)	90 degree elbow	N-type Female to N-type Male
Note: The number of cables required depends on the ordered configuration of the BTS.		

In the subsequent sections, each RF configuration is detailed from the RF module connector to the internal RF connector. Figure 2-13 the relationship between the three connectors. The RF modules are connected to the internal RF connectors at the factory and are pre-configured for your BTS configuration.

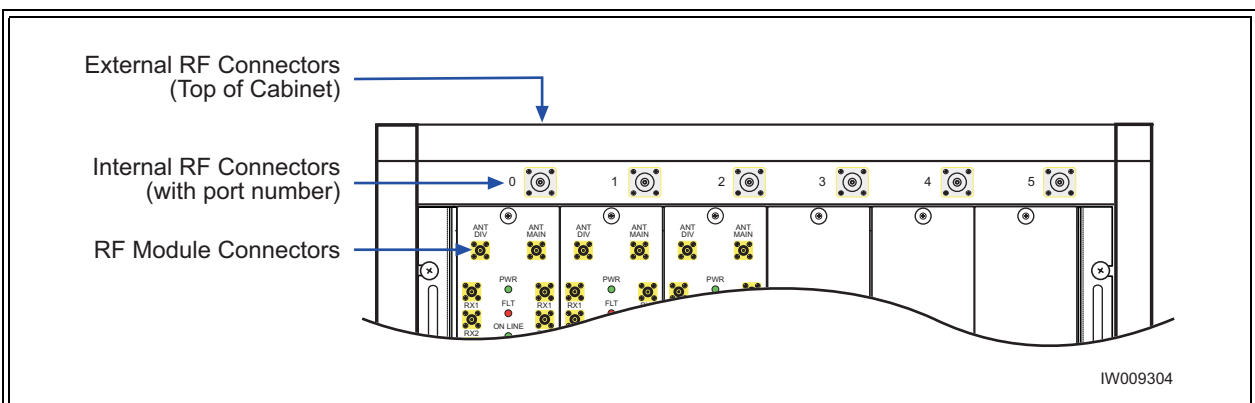



Figure 2-13 Antenna Cabling for Standard BTS Configurations

You will attach an elbow connector and your antenna cable to the external RF connector associated with the internal RF connector shown in the appropriate figure.

The subsequent sections identify the cable routing for the different BTS antenna configurations that you identified in Chapter One. You must install the antennas such that the general population is kept at least 164-inches from the main beam of the antenna. For more information of RF radiation properties of the UltraWAVE, refer to Section 2-6.17.

Proceed to the appropriate subsection to connect your site-specific antenna cable configuration.



All RF cabling must be completed with the chassis powered off and, preferably, with the power cable disconnected from the cabinet.

Do not disconnect RF coaxial connectors on the interWAVE equipment or antenna systems while the radio equipment is operating. **Never** place any body part over or look into any RF connector while the radio equipment is transmitting.

Radio frequency signal levels that give rise to hazardous radiation levels can exist within the transmitter, power amplifiers, associated RF multiplexers and antenna systems.

2-6.1 Omni 1 TRX (O1) Configuration

This is a 50 watt (47 dBm) two antenna configuration available in either 850 MHz or 900 MHz frequencies. Connect your antennas as shown in Figure 2-14.

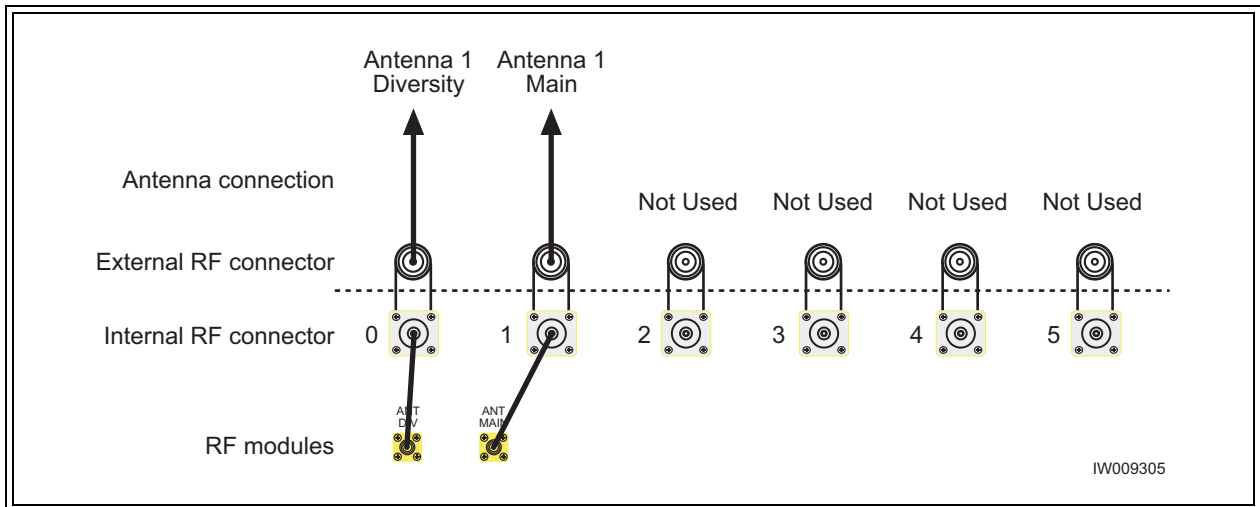


Figure 2-14 Antenna Cabling for O1 Configuration

2-6.2 Omni 2 TRX (O2) Configuration

This is a 50 watt (47 dBm) two antenna configuration available in either 850 MHz or 900 MHz frequencies. Connect your antennas as shown in Figure 2-15.

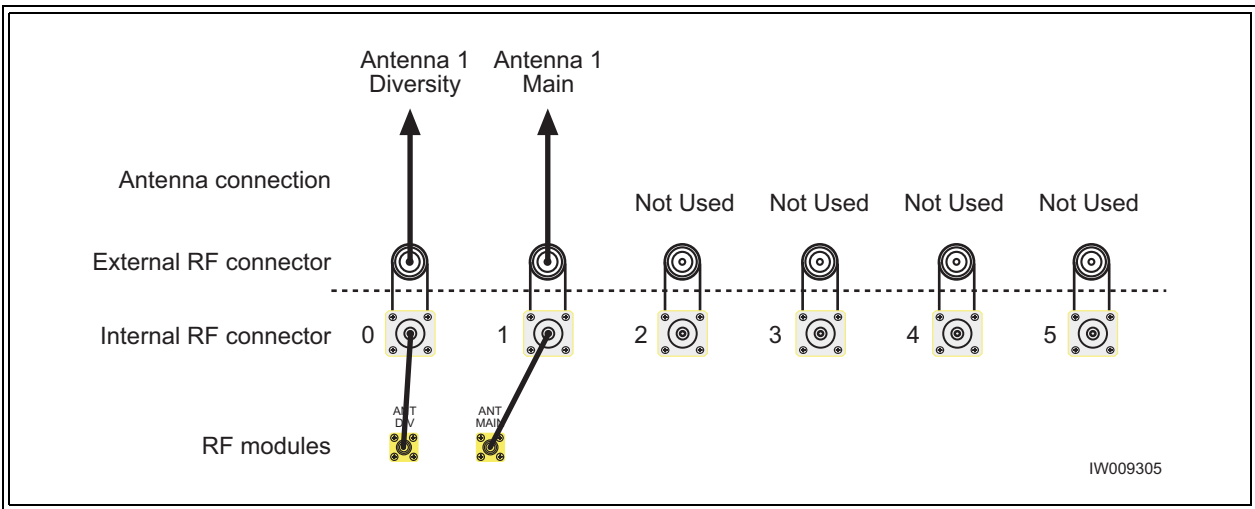


Figure 2-15 Antenna Cabling for O2 Configuration

2-6.3 Omni 3 TRX (O3) Configuration

This is a 25 watt (44 dBm) two antenna configuration available in either 850 MHz or 900 MHz frequencies. Connect your antennas as shown in Figure 2-16.

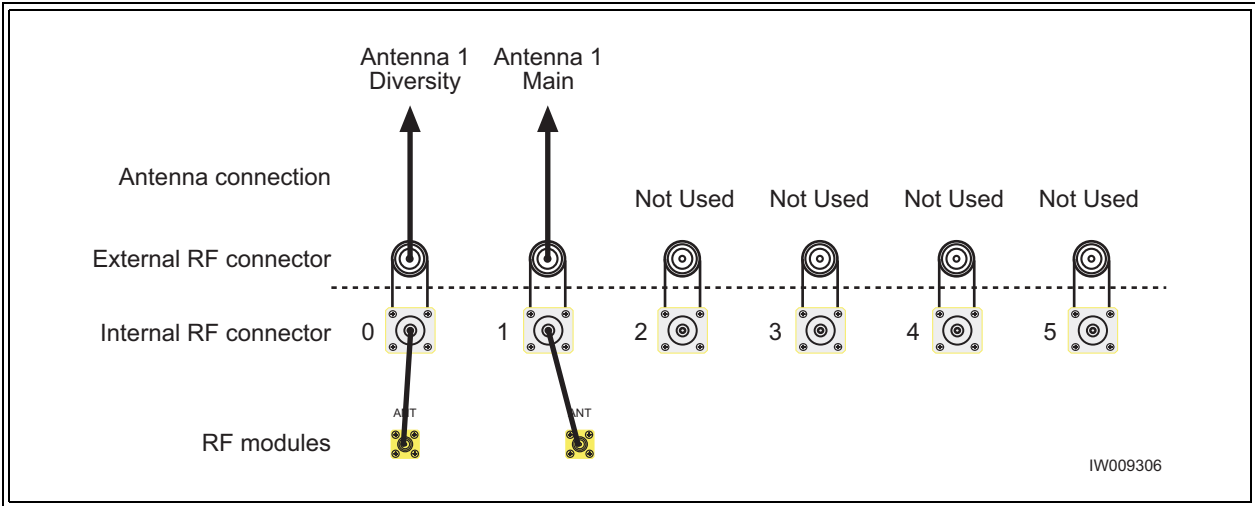


Figure 2-16 Antenna Cabling for O3 Configuration

2-6.4 Omni 4 TRX (O4) Configuration

This is a 25 watt (44 dBm) two antenna configuration available in either 850 MHz or 900 MHz frequencies.

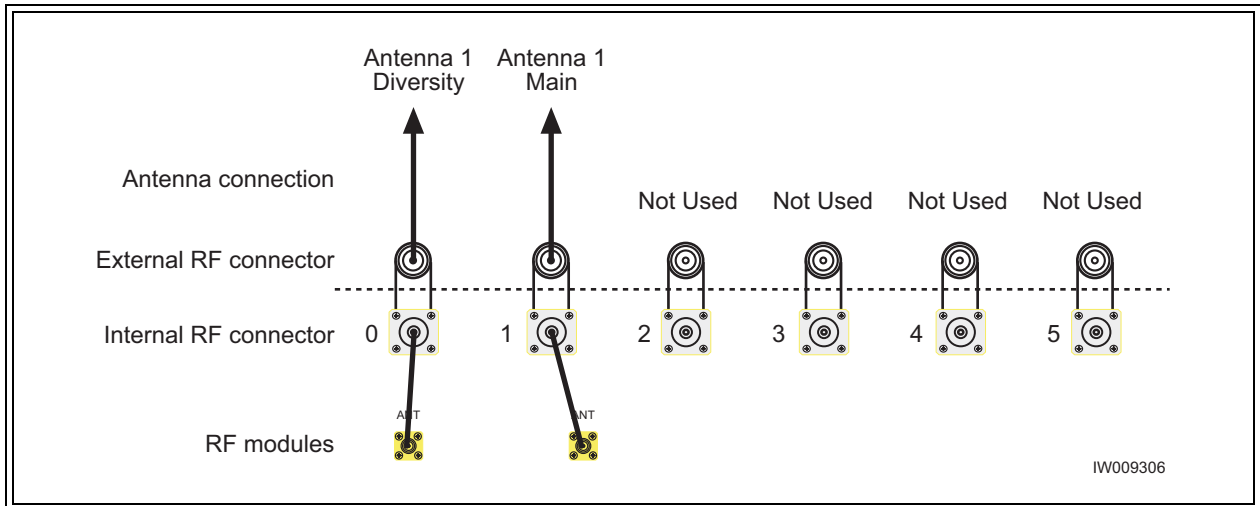


Figure 2-17 Antenna Cabling for O4 Configuration

- Connect your antennas as shown in Figure 2-17.

2-6.5 Omni 5 TRX (O5) Configuration

This is a 15 watt (42 dBm) two antenna configuration available in either 850 MHz or 900 MHz frequencies.

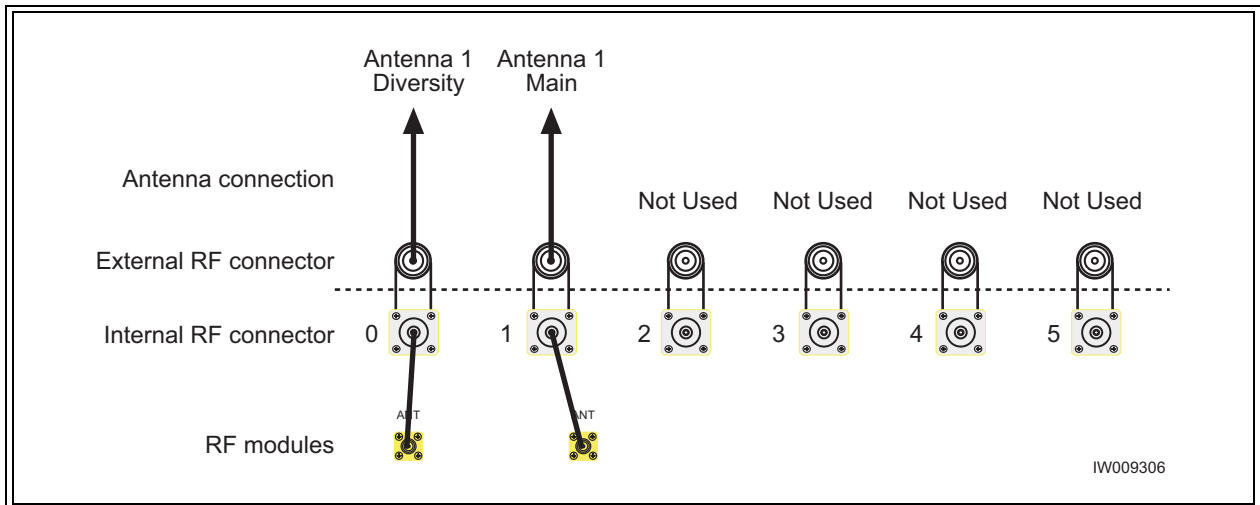


Figure 2-18 Antenna Cabling for O5 Configuration

- Connect your antennas as shown in Figure 2-18.

2-6.6 Omni 6 TRX (O6) Configuration

This is a 15 watt (42 dBm) two antenna configuration available in either 850 MHz or 900 MHz frequencies.

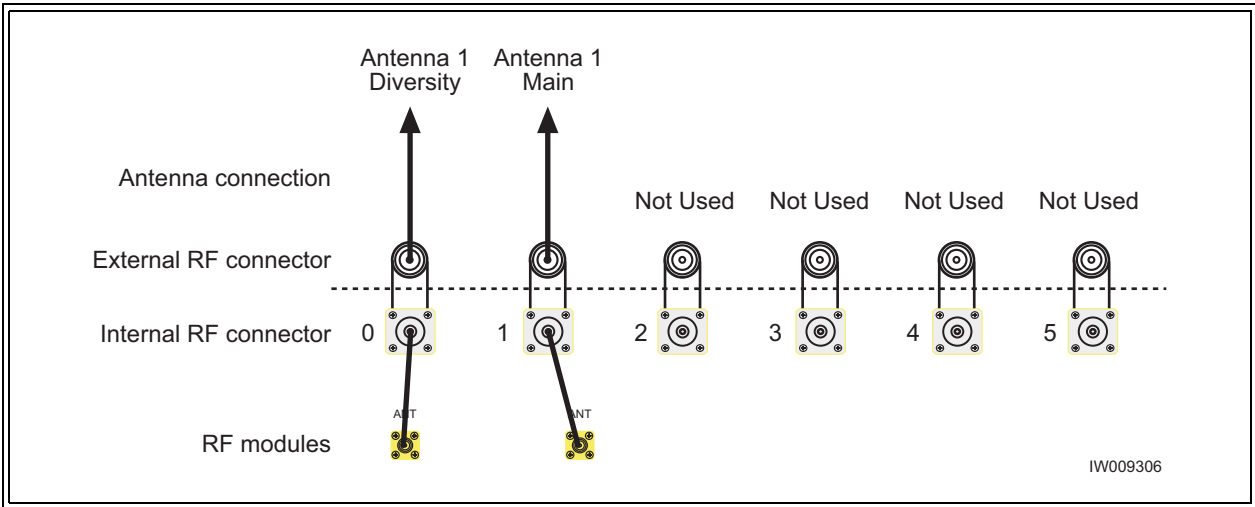


Figure 2-19 Antenna Cabling for O6 Configuration

- Connect your antennas as shown in Figure 2-19.

2-6.7 Omni 5 (O5) and Omni 6 (O6) 25 Watt Configuration

These are a 25 watt (44 dBm) three antenna configurations available in either 850 MHz or 900 MHz frequencies.

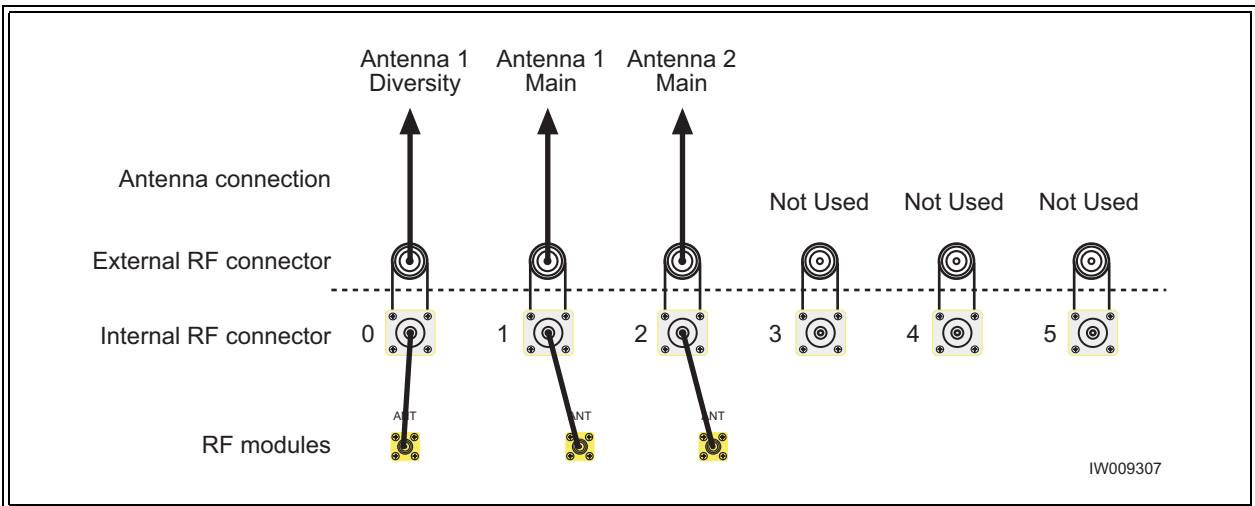


Figure 2-20 Antenna Cabling for O5 and O6 25W Configuration

- Connect your antennas as shown in Figure 2-20.

2-6.8 Sectorized Two TRX (S11) Configuration

This is a 50 watt (47 dBm) four antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has two sectors with one TRX per sector. These antenna connections also apply to the 25 watt (44 dBm) 850 MHz configuration.

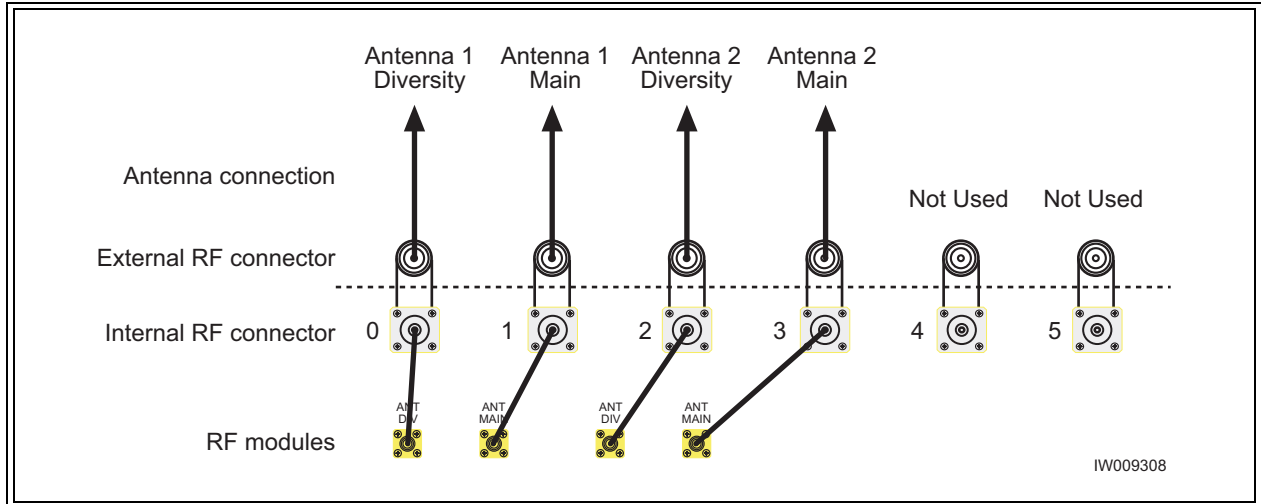


Figure 2-21 Antenna Cabling for S11 Configuration

- Connect your antennas as shown in Figure 2-21.

2-6.9 Sectorized Three TRX (S111) Configuration

This is a 50 watt (47 dBm) six antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has three sectors with one TRX per sector.

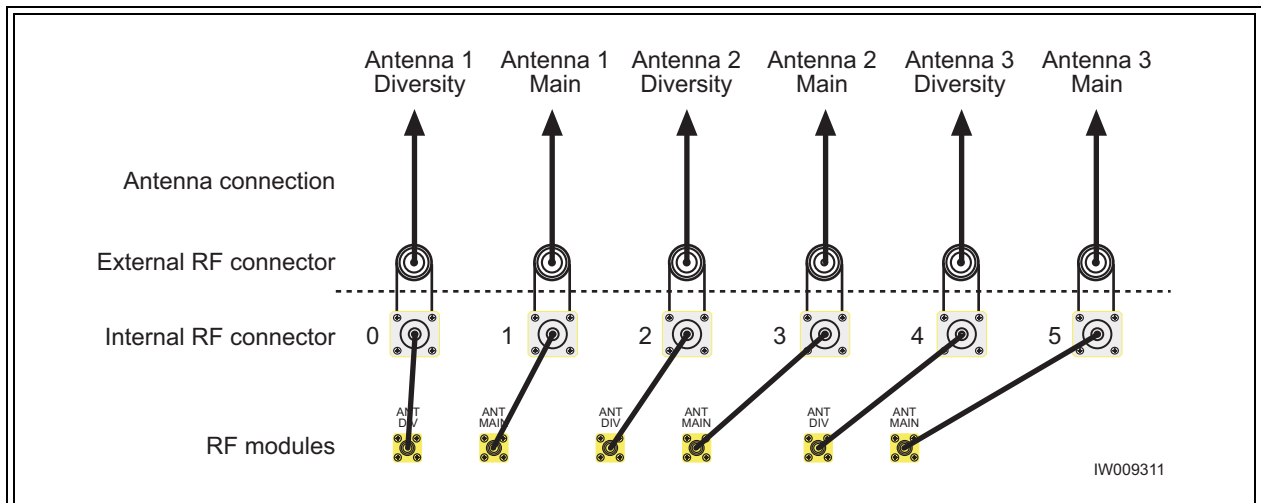


Figure 2-22 Antenna Cabling for S111 Configuration

- Connect your antennas as shown in Figure 2-22.

2-6.10 Two Sector Four TRX (S22) Configuration

This is a 50 watt (47 dBm) four antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has two sectors with two TRXs per sector. These antenna connections also apply to the 25 watt (44 dBm) 900 MHz configuration.

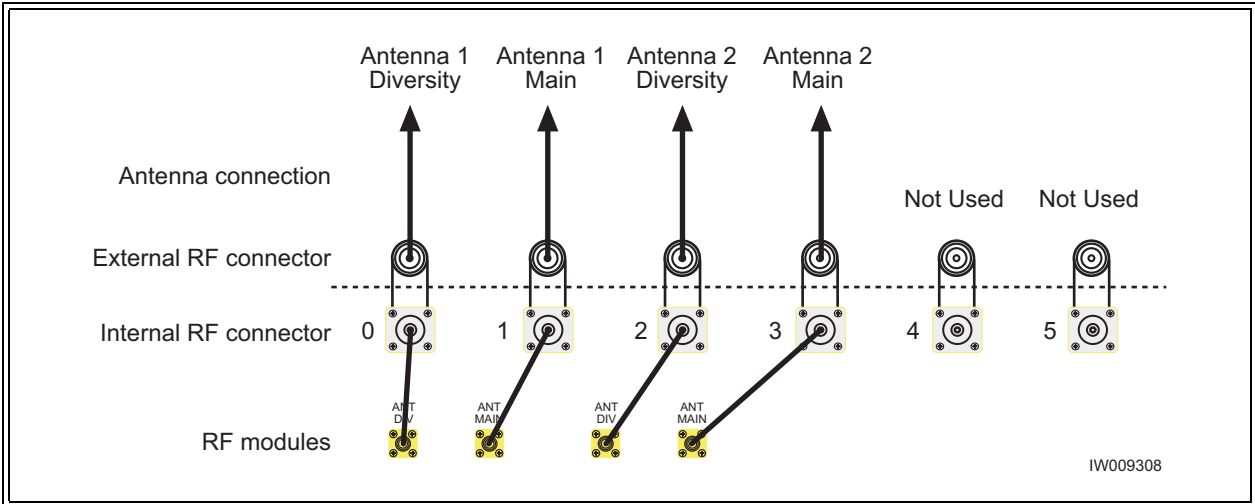


Figure 2-23 Antenna Cabling for S22 Configuration

- Connect your antennas as shown in Figure 2-23.

2-6.11 Three Sector Four TRX (S211) Configuration

This is a 50 watt (47 dBm) six antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has three sectors with two TRXs in one sector and one TRX in the other two sectors. These antenna connections also apply to the 25 watt (44 dBm) 900 MHz configuration.

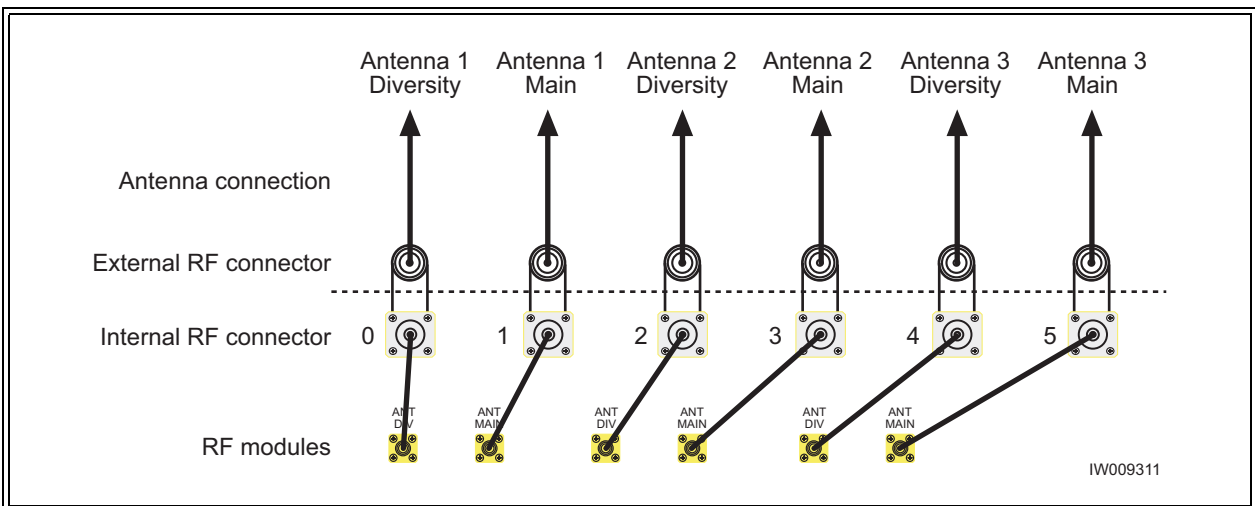


Figure 2-24 Antenna Cabling for S211 Configuration

- Connect your antennas as shown in Figure 2-24.

2-6.12 Three Sector Five TRX (S221) Configuration

This is a 50 watt (47 dBm) six antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has three sectors with two TRXs in two sectors and one TRX in the last sector.

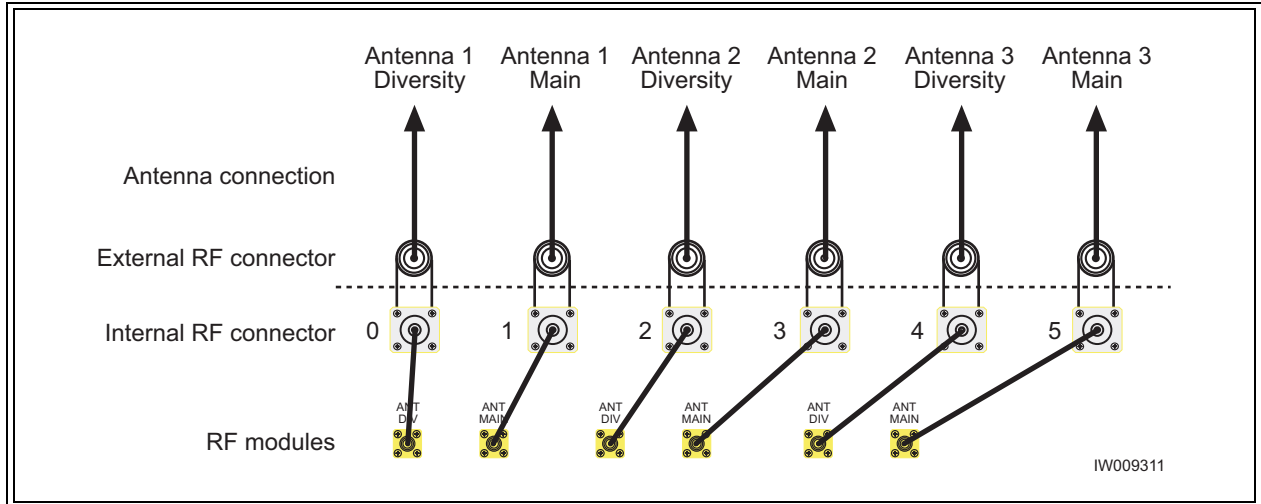


Figure 2-25 Antenna Cabling for S221 Configuration

- Connect your antennas as shown in Figure 2-25.

2-6.13 Three Sector Six TRX (S222) Configuration

This is a 50 watt (47 dBm) six antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has three sectors with two TRXs in each sector. These antenna connections also apply to the 25 watt (44 dBm) 900 MHz configuration.

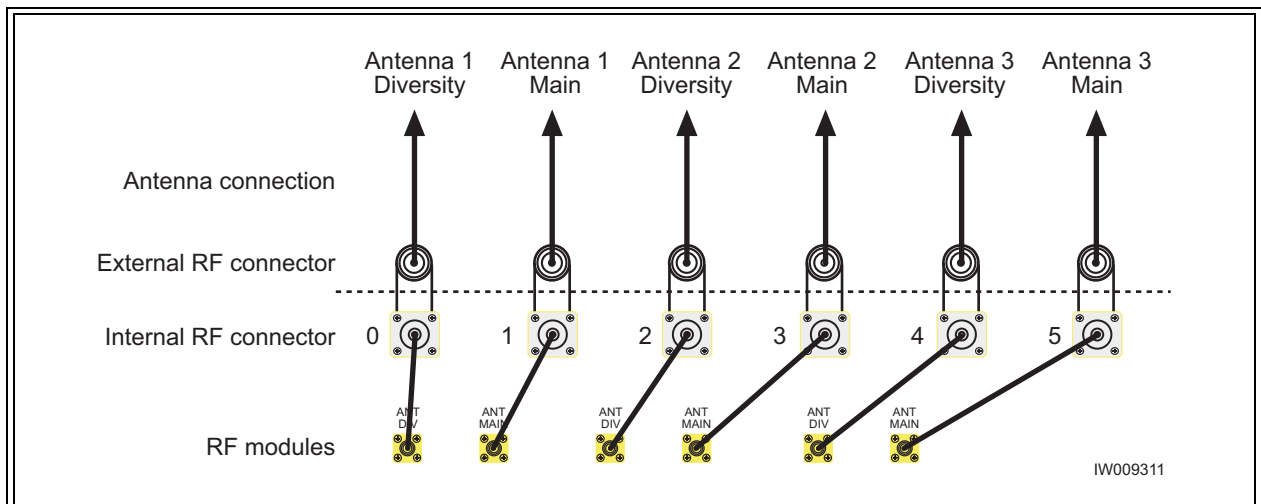


Figure 2-26 Antenna Cabling for S222 Configuration

- Connect your antennas as shown in Figure 2-26.

2-6.14 Two Sector Five TRX (S32) Configuration

This is a 25 watt (44 dBm) four antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has one sector with three TRXs in one sector and two TRXs in the other sector.

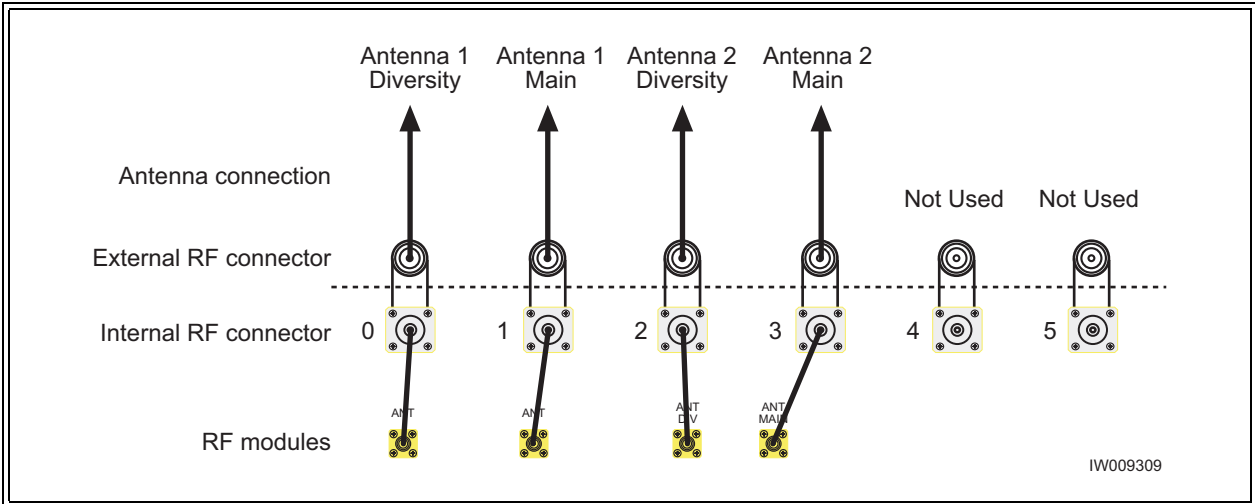


Figure 2-27 Antenna Cabling for S32 Configuration

- Connect your antennas as shown in Figure 2-27.

2-6.15 Two Sector Six TRX (S33) Configuration

This is a 25 watt (44 dBm) four antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has two sectors with three TRXs per sector.

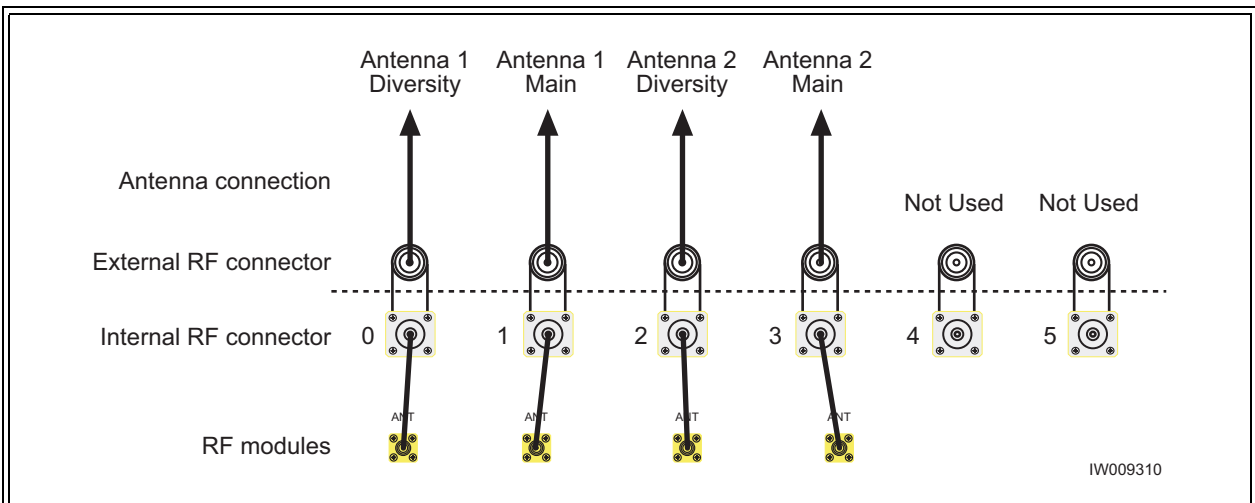


Figure 2-28 Antenna Cabling for S33 Configuration

- Connect your antennas as shown in Figure 2-28.

2-6.16 Two Sector Six TRX (S42) Configuration

This is a 25 watt (44 dBm) four antenna configuration available in either 850 MHz or 900 MHz frequencies. This configuration has two sectors with four TRXs in one sector and two TRXs in the other sector.

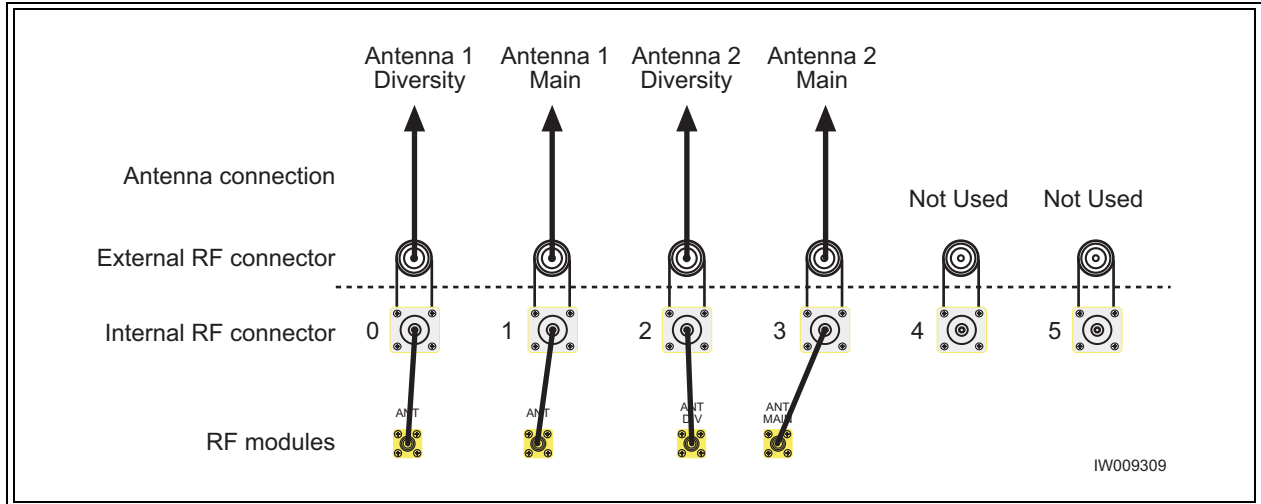


Figure 2-29 Antenna Cabling for S42 Configuration

- Connect your antennas as shown in Figure 2-29.

2-6.17 RF Radiation Hazard

As of October 15, 1997, all products must address the issue of Human Exposure to RF electromagnetic fields. Referring to OET Bulletin 65, RF radiation limits for the 300 - 1500 MHz range are $f / 300$ mW/cm² for occupational exposure, and $f / 1500$ mW/cm² for general population exposure (where f is frequency in MHz). At the 869 MHz cellular band these limits are 2.90 mW/cm² for occupational exposure, and 0.58 mW/cm² for general population exposure.

The Ultrawave base station may consist of up to six separate transceivers, with each of the transmitters operating at a maximum output power of +47 dBm (50W). The Ultrawave base station transmitters operate in the U.S. cellular band of 869 to 894 MHz.

As the Ultrawave is intended to be operated in cellular service, each of its transmitters is typically connected to a 65 - 120 degree sector antenna or omni directional antenna. For the purpose of the MPE calculations, it will be assumed that the Ultrawave is fully equipped with six transceivers, and that two different transmitters are used in each 120 degree sector. For the MPE calculations this would be the worst case radiation levels as the equivalent RF power of +50 dBm (100W) would be transmitted into a 120 degree sector.

The typical gain of 65 - 120 degree sector antenna is in the range of +6 to +18 dBi. However, there is the highest ERP limitation on the Part22 requirement which is 500W(57 dBd).

The duty cycle of the transmitter is 100%. Assuming two transmitters are operating into the same 120 degree sector, a maximum of +47 dBm of RF energy would be transmitted into two antennas, with total EIRP=61 dBi would be the worst case.

RF power density can be calculated with the equation: $S = P * G / 4\pi R^2$, where S = power density in mW/cm, P = power input to the antenna in mW, G = power gain of the antenna, and R = distance to the center of radiation of the antenna in cm. By rearranging this equation, the relationship between distance (R) and Power Density (S) can be found.

Rearranging $R = \sqrt{PG / 4\pi S}$, and solving for the maximum limits of 2.90 mW/cm², and 0.58 mW/cm² we have:

$$R(2.90 \text{ mW/cm}^2) = \sqrt{1,260,000 \text{ mW} / 4\pi * 2.90} = 186 \text{ cm, or 73 inches.}$$

$$R(0.58 \text{ mW/cm}^2) = \sqrt{1,260,000 \text{ mW} / 4\pi * 0.58} = 416 \text{ cm, or 164 inches.}$$

NOTE



1,260,000 mW is used to account for two 50,000 mW transmitters operating into each 120 degree sector.

These results show that the general population RF exposure limits are not exceeded as long as the general population is kept 164-inches from the feed point of the antenna.

The propagation characteristics at 870 MHz dictate a line-of-sight type of RF path. As such, typical installation locations are up on rooftops or masts to get above ground level path obstructions. When the Ultrawave antennas are installed in this manner, the general population will be further than 164-inches from the antenna, and RF exposure limits will be met.

2-7 Connecting External Alarms

The WAVEView OMC supports many alarms from the BTS. The external alarms are reflected at the OMC operator station, and may be used for site alarms, such as open door, temperature and battery back-up alarms. These customer defined alarms are sampled every two minutes by default and will report an alarm when sent by the BTS alarm controller.

Using the details provided in these sections, make your connections for external alarm inputs.

NOTE



If you are replacing an existing WAVExpress system which has external alarms connected directly to the processor card, you may connect your existing RJ-45 alarm cable directly into the ICP processor card alarm connector. Optionally, you can re-route your existing alarms to the UltraWAVE alarm terminal block or add additional external alarms.

The OMC operator can set the alarm text as described in the [WAVEView OMC Setup and System Administration Guide](#).

Identifying the Terminal Block

The alarms are processed on the alarm interface module located on the rear of the RF subrack assembly. The alarm interface module has connections for incoming signals from external alarms and the power supplies and an outgoing connection to the ICP processor card through a USB type cable. The interfaces are shown in Figure 2-30.

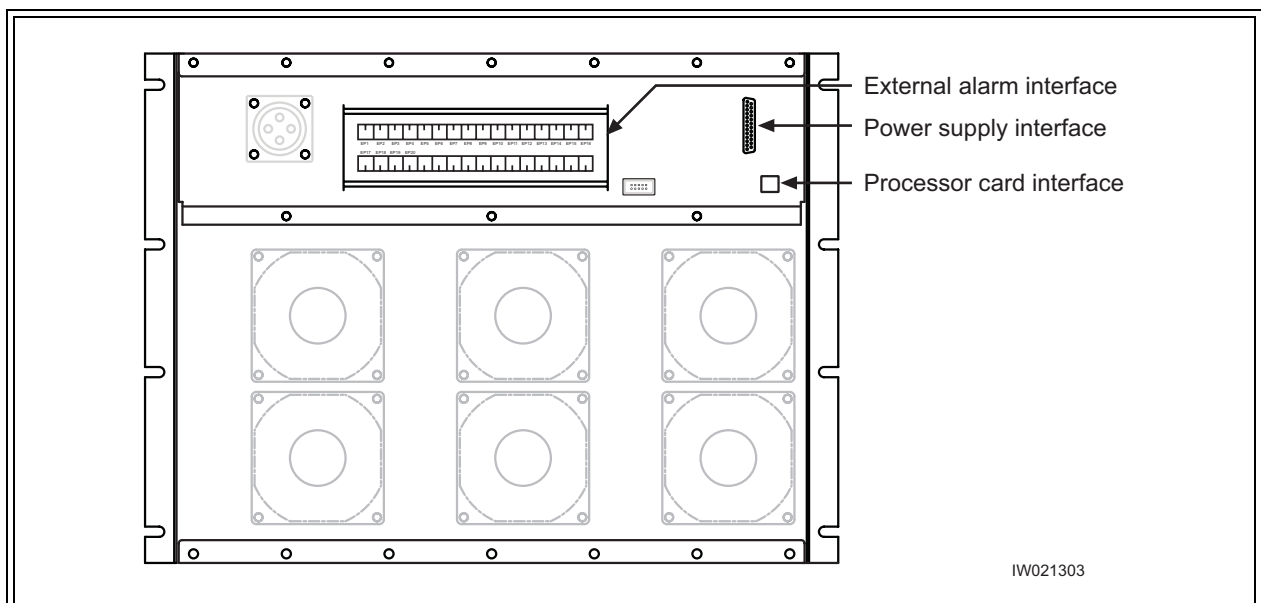


Figure 2-30 Alarm Interface Module

This terminal block provides a plug connection for up to seventeen external alarms. The plugs, supplied with the BTS, provide a closed loop for connection to a normally open alarm mechanism. The plug

identifiers correspond to the alarm code sent to the OMC. See Table 2-11 for Terminal Block pin assignments, and see Figure 2-31 for external alarm connection details.

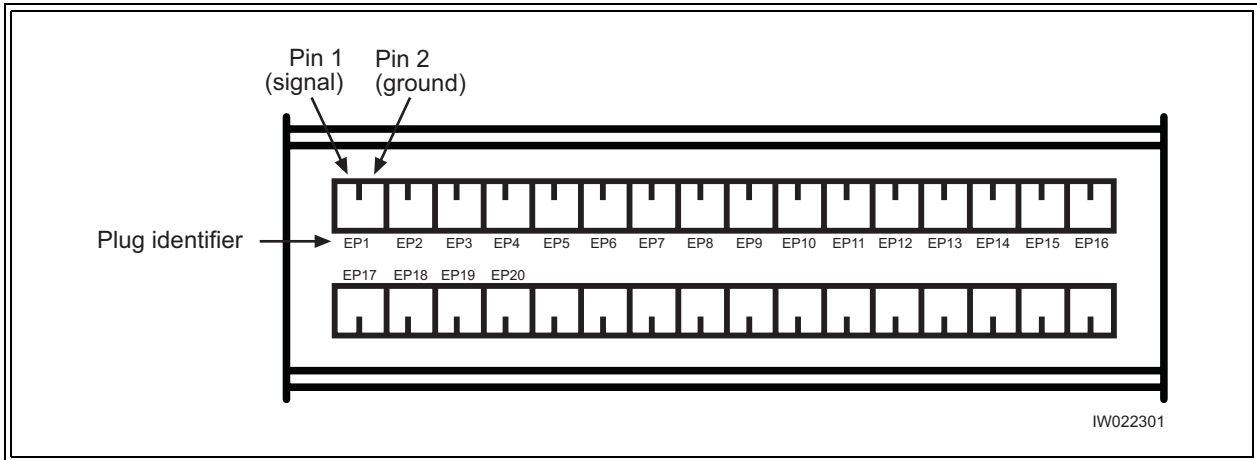


Figure 2-31 Customer-Defined External Alarm Connections

Table 2-11 External Alarm Terminal Block Pin Assignment

Plug Identifier	Alarm Code	Major Alarm Type
EP1	2326	Customer definable UltraWAVE External Alarm 1
EP2	2327	Customer definable UltraWAVE External Alarm 2
EP3	2328	Customer definable UltraWAVE External Alarm 3
EP4	2329	Customer definable UltraWAVE External Alarm 4
EP5	2330	Customer definable UltraWAVE External Alarm 5
EP6	2331	Customer definable UltraWAVE External Alarm 6
EP7	2332	Customer definable UltraWAVE External Alarm 7
EP8	2333	Customer definable UltraWAVE External Alarm 8
EP9	2334	Customer definable UltraWAVE External Alarm 9
EP10	2335	Customer definable UltraWAVE External Alarm 10
EP11	2336	Customer definable UltraWAVE External Alarm 11
EP12	2337	Customer definable UltraWAVE External Alarm 12
EP13	2338	Customer definable UltraWAVE External Alarm 13
EP14	2339	Customer definable UltraWAVE External Alarm 14
EP15	2340	Customer definable UltraWAVE External Alarm 15
EP16	2341	Customer definable UltraWAVE External Alarm 16
EP17	2342	Customer definable UltraWAVE External Alarm 17

To connect the external alarm contacts to the external alarm terminal block:

- 1 Route the external alarm input cables from the external equipment through the cable gland on the CMA to the external alarm terminal block.

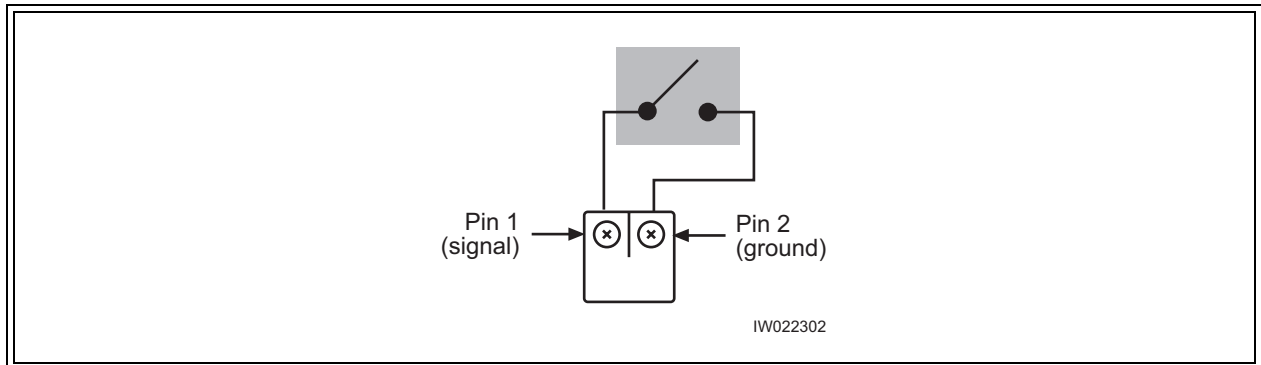


Figure 2-32 External Alarm Plug

- 2 Using the details provided in Figure 2-32, connect the normally-open alarm inputs from the external equipment to the external alarm plug.
- 3 Connect the alarm plug to the terminal block. Note the plug identifier and using Table 2-11 inform the OMC operator which alarm code corresponds to the external alarm that you have just installed.



Inputs from external alarms should be normally open. When the external contacts close, the BTS sends an alarm to the OMC.

2-8 Post Installation Cabling and Checks

Connecting the Chassis

Before commissioning the equipment, make sure that:

- The Abis interface E1 and/or T1 cables are routed to the telephone provider
- The DIP switch settings on the E1 or T1 trunk cards are set correctly and if you are using the 75 Ohm E1 trunk card that the ground jumper is in the correct position (refer to Section 2-3 for E1 and/or T1 DIP switch settings)
- The cabinet power is turned off
- Antenna cables are connected to RF antenna port connectors as appropriate

Verifying External Cabling

- It is the operator's responsibility to verify that all inter-chassis E1 and/or T1 links are ordered, installed and certified by the telephone provider according to ANSI T1.403 specifications before on-line commissioning is performed
- The operator should also perform end-to-end bit error ratio or bit error rate tests over a 20-minute period on the E1 and T1 Abis interface link(s), and verify that the BER is 10^{-8} or better

Three

Off-Line Commissioning

The off-line commissioning process includes the following steps:

- Pre off-line commissioning, where you ensure that the system is in an appropriate state. This includes:
 - visual inspection
 - compliance checks
- Startup Verification, where you verify that the system comes up correctly by observing the LEDs on the front panel
- Craft PC tests, where you use the Craft PC to verify the software configuration and run tests.
- Post off-line commissioning, where you prepare the system for online commissioning.

The rest of this chapter includes the detailed instructions for these steps.



Under normal operating conditions, interWAVE Communications radio equipment complies with the limits for human exposure to radio frequency (RF) fields adopted by the Federal Communications Commission (FCC). All interWAVE Communications, Inc. radio equipment is designed so that under normal working conditions radio frequency radiation directly from the radio is negligible when compared with the permissible limit of continuous daily exposure recommended in the United States of America by ANSI/IEEE C95.1-19991 (R1997), Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.

Radio frequency signal levels that give rise to hazardous radiation levels can exist within the transmitter, power amplifiers, associated RF multiplexers and antenna systems.

Do not disconnect RF coaxial connectors on the interWAVE equipment or antenna systems while the radio equipment is operating. **Never** place any body part over or look into any RF connector while the radio equipment is transmitting.



The BSS software used in the BTS is highly complex. **Before proceeding**, contact Customer Service to verify that you have the latest available software. You must **have** the correct software CD-ROM and **know** the current patch level for your software version before commissioning the BTS. Contact your Level 2 support representative for additional assistance.

NOTE



The off-line commissioning steps are listed in Checklist 3.

3-1 Pre Off-Line Commissioning

The following sections must be completed before doing the off-line commissioning. The off-line commissioning of the BTS must take place on-site after installation. It is critical that all RF connections have been completed before proceeding with the off-line commissioning.

3-1.1 Visual Inspection

Complete the following inspections to ensure that the system is ready for off-line commissioning:

On-Site Visual Inspection

If you are doing your visual inspection on-site, check that:

- The cabinet has been securely installed at the appropriate site.
- The cabinet power supplies to the cabinet are OFF.
- The cabinet is connected to a suitable power source.
- The cabinet is correctly grounded.
- All cables are available and secured in their correct positions.
- All cards and modules are correctly seated and populated according to the original purchase order.
- E1 or T1 transmission cables are available and labeled.
- RF transmission cables are connected to antennas.

Compliance and Power Checks

- Cross-check with the site specific data to ensure that the BTS is correctly configured with all cards and modules.
- Ensure that you have access to Checklist 2 and that all serial numbers of all cards are listed there. This should have been completed in Chapter One.
- Verify that any test equipment to be used has a current calibration certificate.

- Verify that the voltage for the installation site match those of the chassis power supply modules (either 230 VAC, 115 VAC, or -48 VDC, as specified on the power supply subrack assembly).

Label and Disconnect Cables

- 1 Verify that all E1 and/or T1 cables connected to the chassis are properly labeled.
- 2 Disconnect all E1 and/or T1 cables from the top of the cabinet if there are any cables connected.

3-2 Off-Line Commissioning the UltraWAVE BTS

The verification procedures for off-line commissioning are run on the processor card in the BTS. Locate the processor card in the baseband subrack assembly as shown in

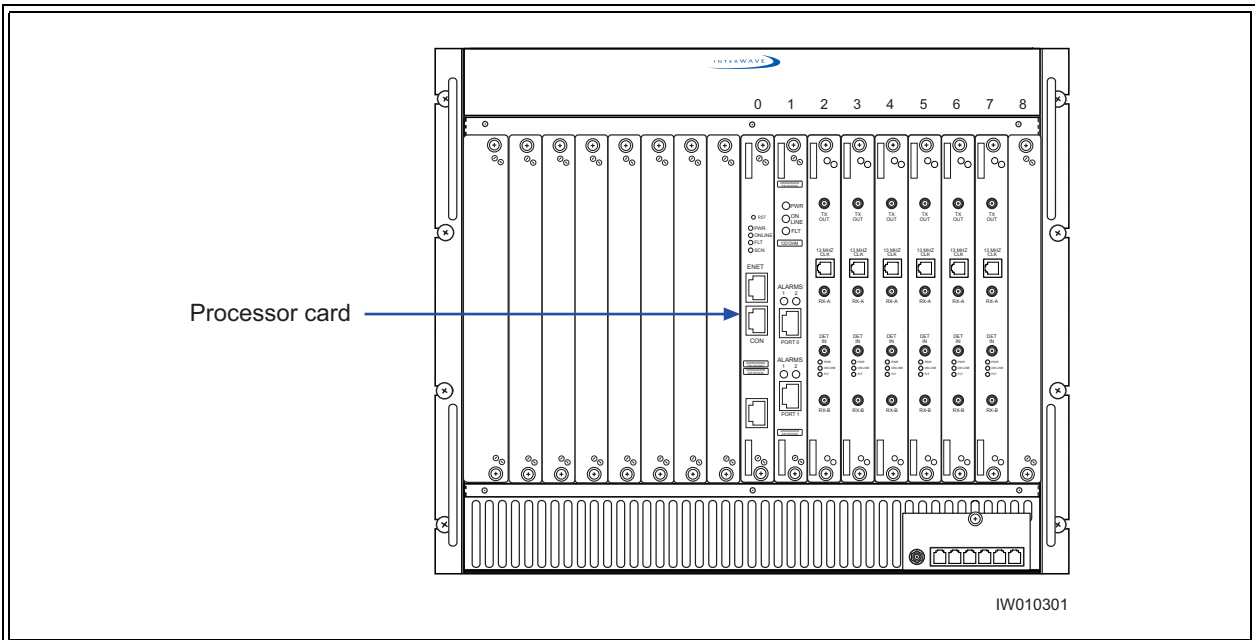


Figure 3-1 BTS Processor Card

3-2.1 Connecting the Craft PC to the ICP Processor Card

You will be making two connections from the Craft PC to the ICP processor card. The first is a slow-speed serial connection used for checking the software version installed on the card, verifying boot parameters and monitoring test results. The second is a faster Ethernet connection used for opening telnet sessions with the ICP. Telnet sessions are required for downloading software to the ICP. The serial and ethernet connections are both required to configure and test the BTS.

NOTE The following section describes procedures performed using the Craft PC. For more information pertaining to the use of the Craft PC, please refer to the [interWAVE Craft PC Guide](#).

Required Hardware

The following hardware is required to connect the Craft PC to the ICP processor card through an ethernet and serial connection. Note that this hardware is supplied with the Craft PC:

- one 3Com 3C589D PCMCIA Ethernet card with a 100/10-Base-2 combo transceiver
- one 3 meter standard RJ-11 patch cable
- one 3 meter standard Ethernet crossover cable
- one grey RJ-11 to DB9 adapter, part number 180247

Setting Up a Serial Connection via the ICP Processor Card Serial Port

- 1 Connect the RJ-11 patch cable to ICP processor card connector labeled 'CON'.
- 2 Connect the opposite end of the patch cable to the RJ-11 to DB9 adapter and connect the DB9 adapter to the serial port on the back of the Craft PC, as shown in the following figure.

The following figure shows a physical serial port connection between the Craft PC and the ICP processor card:

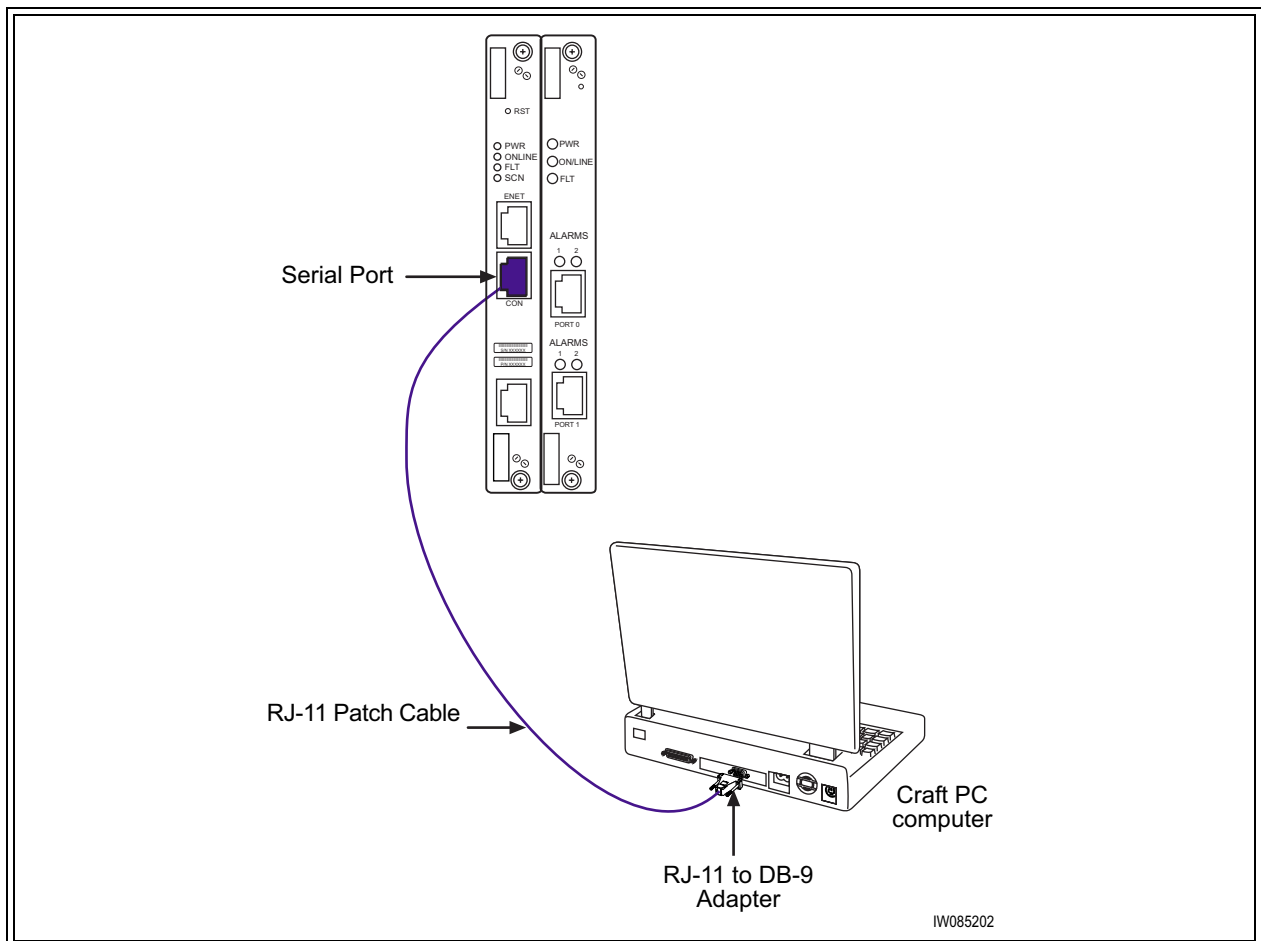


Figure 3-2 Connecting to the Craft PC via the ICP Serial Port

Setting Up an Ethernet Connection via the ICP Processor Card Ethernet Port

- 1 Connect the Ethernet crossover cable to the ICP processor card Ethernet port labeled "ENET".
- 2 Connect the other end of the cable to the Ethernet transceiver.
- 3 Insert the transceiver firmly into the PCMCIA card slot on the side of the Craft PC.

The following figure shows a physical ethernet port connection between the Craft PC and the ICP processor card:

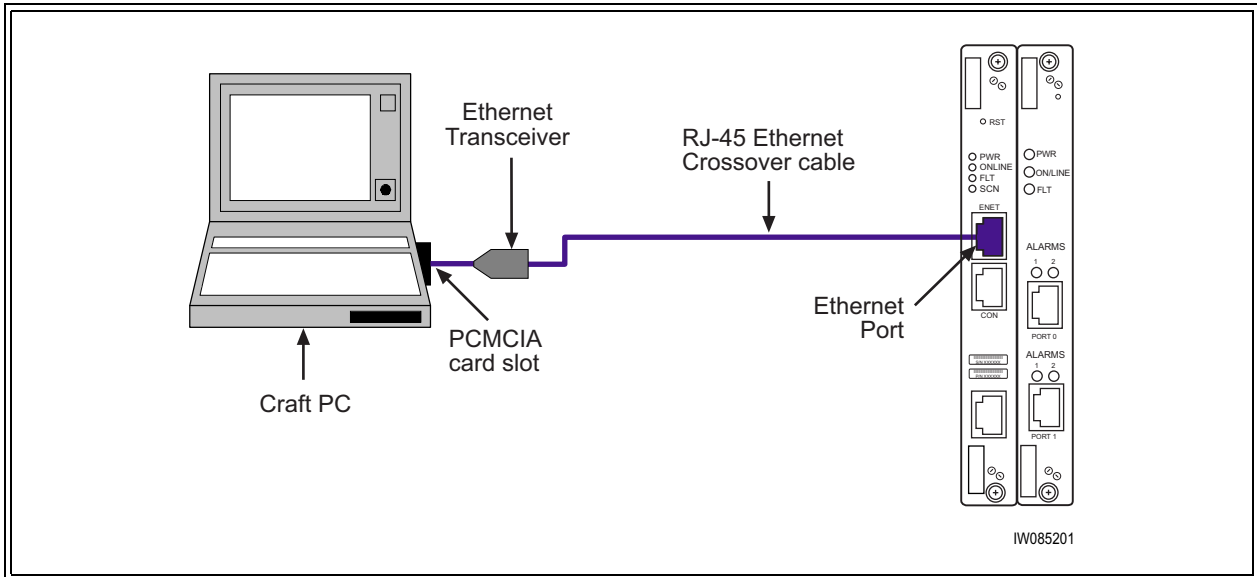


Figure 3-3 Connection to the Craft PC via the ICP Ethernet Port

3-2.2 Starting XWindows Using the Craft PC

In this chapter, you will use the Craft PC to verify the software configuration and other aspects of the BSC operation. This section describes how to start the Craft PC and the Windows environment while subsequent sections will provide connection, test and verification procedures. For information regarding the Linux based Craft PC, see the [interWAVE Craft PC Guide](#).

NOTE



The following sections describe procedures performed using the Craft PC. For more information pertaining to the use of the Craft PC, please refer to the [interWAVE Craft PC Guide](#). Note that all commands in bold are those entered by the user.

Starting XWindows from Windows NT/2000/XP

- 1 With your left mouse button, double click the Craft PC icon on the desktop.
- 2 If you get an error message, or if the XWindows environment does not allow you to create new XWindows, stop the CPC environment by pressing [ALT-F4] and restart the environment.

The XWindows environment now starts.

3-2.3 Power-On LED Tests

This section describes how to power-on the BTS and verify that the cards in the system come up properly by viewing the LEDs on the front panel. The purpose of these tests is to verify that the LEDs come up in the correct state, indicating that the system is operating normally.

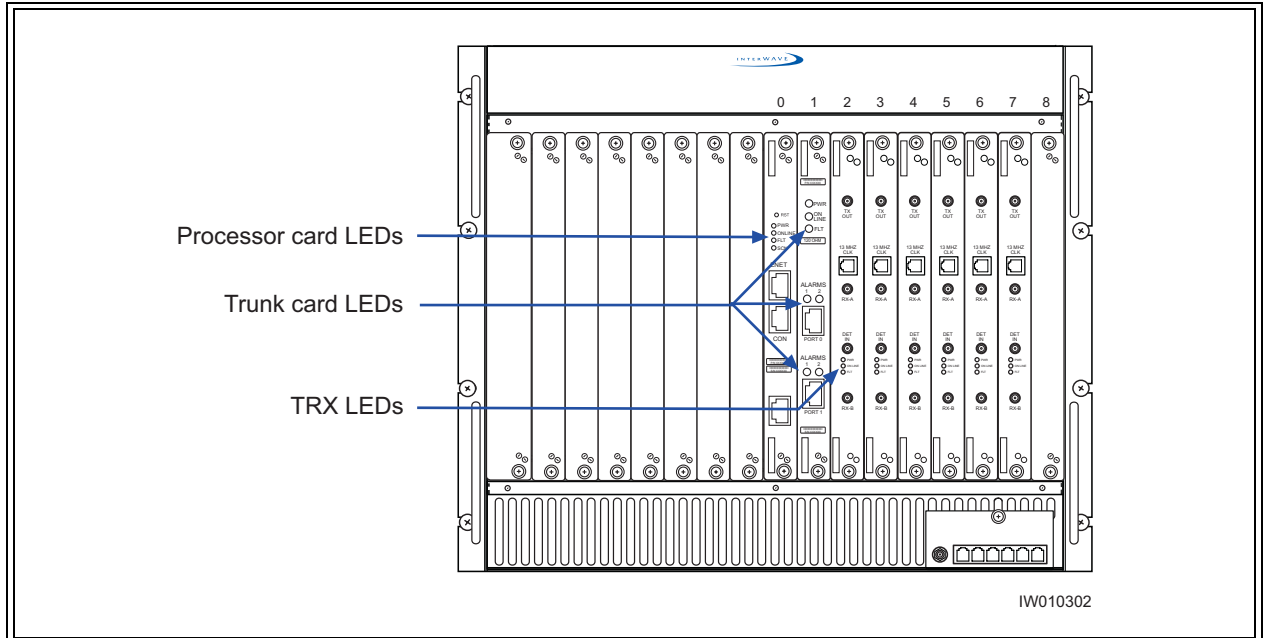



Figure 3-4 LED Locations

When you power-on the BTS, it automatically runs its power on self tests (POST), downloads software to the TRX cards, then attempts to bring up the cards. While it is bringing up the cards and when it is finished, the LEDs indicate the state of the each card.

NOTE  The POST tests will be used later. You can ignore them for now.

Use the following procedure:

- 1 Power on the BTS by depressing the power buttons illustrated in Figure 2-8.
- 2 Verify that the front-panel LEDs flash in the sequence shown in the following figure:

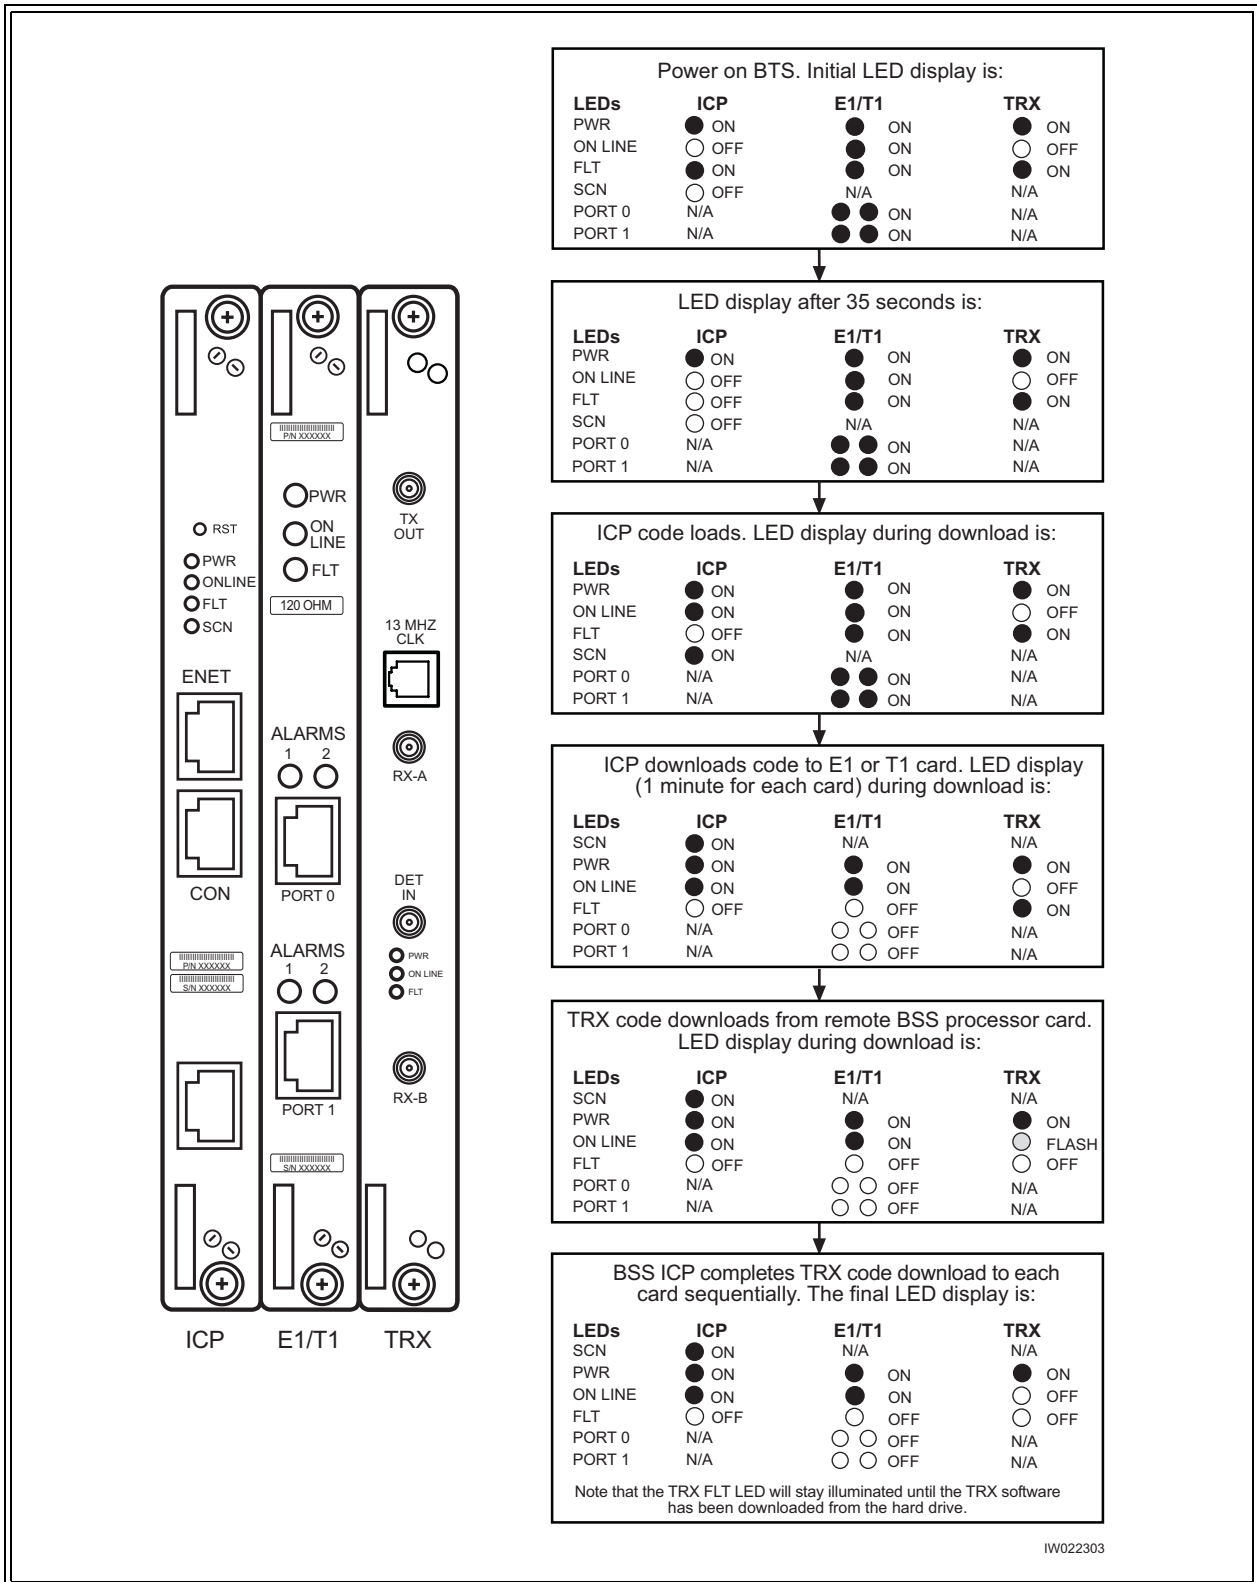



Figure 3-5 LED Sequence During the Boot Process

NOTE  For systems equipped with multiple TRXs, the TRXs come up in order, starting with the first. As a result, each TRX goes through the complete sequence before the next one starts.

3 When the sequence is completed, verify that the LEDs appear as shown in the following table:


Table 3-1 Normal LED Indications

LED	Description
SCN	Green LED, lit when processor card is operational (only present on the processor card).
PWR	Green LED, lit when card has power supplied.
ON LINE	Green LED, lit when card is on-line, and card BOOT process has been performed successfully. The ON LINE LEDs of the processor card and E1 or T1 cards will be lit after all cards have completed the boot-up process. The TRX cards will not go on-line until they are unlocked by the OMC operator.
FLT	Red LED, lit when card detects a fault or is not downloaded. FLT LEDs will be lit on the TRX cards until their code is downloaded.

4 If your LEDs appear as described above, you are done with the LED Power up tests. Proceed to the Craft PC procedures in Section 3-3.


If your LEDs do not appear as described above, you can either:

- Contact Customer Service
- Refer to the [interWAVE Field Maintenance Guide](#) for troubleshooting procedures.

NOTE  For more information about these unsuccessful power-up cases and corrective actions to be taken upon unsuccessful power up, refer to the [interWAVE Field Maintenance Guide](#).

3-2.4 Establishing Serial Communications with the BTS

The Craft PC uses serial communications for basic control of the BTS, including bootChange configuration.

NOTE  The Craft PC cannot establish a serial connection with the BTS if there is an existing telnet or rlogin connection to the BTS.
If a user on the Craft PC and a user on the OMC try to establish connections at the same time, the OMC user has priority.

NOTE

For more information about the Craft PC, refer to the [interWAVE Craft PC Guide](#).

- 1 If not already done, connect the Craft PC to the BTS as described in Section 3-2.1, and start XWindows on the Craft PC as described in Section 3-2.2.
- 2 If an Xterm window does not launch, left click your mouse button and choose Xterm.
- 3 In an Xterm window, type:

```
build@craftpc:~> cu -l ttyS0 [ENTER]
```

Where l is lower case L and 0 is zero.

- 4 After the returned message `Connected` appears, press the [ENTER] key. The prompt now changes to the following:

```
bts->
```

3-2.5 Verifying/Changing Boot Parameters

In this section, you verify the boot parameters and change them if necessary. There are three reasons to change boot parameters:

- If they are configured incorrectly, you must set them to the values shown here.
- If your system is connected to the Ethernet, you must set the IP address to support the Craft PC IP address 172.16.80.43. To make a connection with the Craft PC, set the processor card IP address to 172.16.80.42:ffff000.
- The TARGET NAME sets the IP name, and provides text for the prompt. Contact your network administrator if you are unsure what value to enter. The default is "iwbox".

After changing the boot parameters, the BTS must be rebooted before the changes take effect.

NOTE

The following section describes procedures performed using the Craft PC. For more information about the Craft PC, please to the [interWAVE Craft PC Guide](#).

- 1 If not already done, establish serial communications with the BTS as described in Section 3-2.4. If the BTS starts rebooting endlessly, refer to the [interWAVE Craft PC Guide](#) for corrective measures. If the BTS boots normally, type:

```
bts-> bootChange [ENTER]
```

- 2 A list of boot parameters appears. Use the following commands to edit the parameter values:

Table 3-2 Changing Boot Parameters


Command	Action
[ENTER]	Accepts the current parameter value and proceeds to the next parameter.
. [ENTER]	Erases the current parameter value and proceeds to the next parameter.
- [ENTER]	Returns to the previous parameter.
[CTRL][d]	Aborts all changes and reverts to the current values.

```
'.' = clear field; '-' = go to previous field; ^D = quit

boot device          : motfcc
processor number     : 0
host name            : craftpc
file name            : /home/target/vxWorks.ppc
inet on ethernet (e) : 172.16.80.42:fffff000
inet on backplane (b):
host inet (h)        : 172.16.80.43
gateway inet (g)     :
user (u)              : target
ftp password (pw) (blank = use rsh):
flags (f)            : 0x0
target name (tn)     : bts
startup script (s)   :
other (o)            : motfcc

value = 0 = 0x0
bts-> _
```

Figure 3-6 Boot Parameters for ICP Processor Card

NOTE  You must edit the boot parameters to contain the EXACT values shown in bold in the above display, or the equipment will not bootup properly.

- 3 For the new parameters to take effect, reboot the chassis by pressing the key combination [CTRL][x].

3-3 Software verification using Craft PC

In this section, you use the Craft PC to verify the software configuration and other aspects of the BTS operation. The first sections describe how to connect and start the Craft PC; subsequent sections provide necessary test and verification procedures.

3-3.1 Verifying the Current Software Version and Patch Level

NOTE For more information about the Craft PC, refer to the [interWAVE Craft PC Guide](#).

- 1 If not already done, establish serial communications with the BTS as described in Section 3-2.4.
- 2 If you have not already done so, reboot the chassis by pressing the key combination [CTRL][x]. If you do not receive a prompt after reboot, press [ENTER] to display the `bts->` prompt.
- 3 After the `bts->` prompt appears, verify the current software version and patch level by typing:

```
bts-> iwversion [ENTER]
BTS code version: iw06_05.ZZZ
Release number: 6.5
ABIS version: 1.1
```

The current software version is displayed, represented above by the parameter `iw06_05.ZZZ`. This number should correspond to the software version detailed in the release notes included with the CD-ROM. Keep this number for your records.

- 4 Verify under `Patches Installed:` that the most current patch is installed, if applicable. Refer to the [interWAVE Craft PC Guide](#) for procedures to install required patches. If you are unsure if you require software patches, contact your Level 2 support representative for additional assistance.

3-3.2 Checking the Flash Version Number

In order to verify that the correct software build is loaded into flash memory, go to your serial Xterm window and type:

```
bts-> printConfigBlocks [ENTER]
```

Figure 3-7 shows Image 0 and Image 1 from the ICP card configuration.

```
**** Current Image = 1 ****

***** Image 0 *****
Image IW version   : iw06_05.011
Image creation date: 04/15/02 13:44
Image crc          : 1ff03d8d

***** Image 1 *****
Image IW version   : iw06_05.012
Image creation date: 04/09/02 12:07
Image crc          : e3b05e8c

***** Image 2 *****
Image IW version   : iw06_00.028
Image creation date: 04/09/02 12:07
Image crc          : e3b05e8c
```


Figure 3-7 Determining the Flash Version on ICP Processor Card

The ICP configuration states `Current Image = N` where `N` is either 0 or 1. The flash version have lines in the format:

```
iw06_05.ZZZ
```

where `iw06_05.ZZZ` indicates the flash version.

The flash version number should be `iw06_05.012` or higher for BTS TRX POST diagnostics to be able to run. If it is not, the flash version number will have to be changed and the BTS rebooted. To do this, refer to Section 3-5.

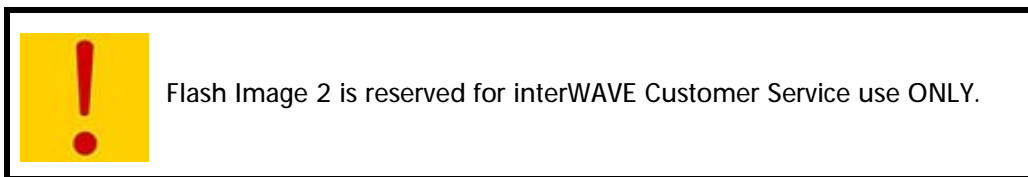


3-3.3 Running E1 or T1 POST Diagnostics

- 1 Disconnect all E1 and/or T1 lines from the BTS. This ensures that no Abis connection exists. If an Abis connection does exist, the TRX POST might not run properly.
- 2 Wait until the `bts->` prompt appears, and type:

```
bts-> reboot [ENTER]
```

This action reboots the BTS. The VxWorks kernel is started, several E1 or T1 trunk card tests run sequentially, and the results of each test are listed as PASSED/FAILED. Only if all seven tests passed successfully will the E1 or T1 POST diagnostics be considered successful. The E1 or T1 POST results will be displayed after the boot process has been completed:

NOTE  The coding for the E1 or T1 trunk card, its modules and scripts generically refer to the E1 or T1 trunk card objects as "E1", whether the corresponding ports are configured as E1 or T1.

```
1 (eldiag) E1 CARD in SLOT 1: STARTING POST/OFFLINE Test
2 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5
3 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5 result 0x0 i 1
4 (eldiag) E1(1) TID01: Initialize Peripheral Registers: PASSED
5 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5 result 0x0 i 2
6 (eldiag) E1(1) TID02: Peripheral Register Test: PASSED
7 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5 result 0x0 i 3
8 (eldiag) E1(1) TID03: Framer Register Test: PASSED
9 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5 result 0x0 i 4
10 (eldiag) E1(1) TID04: VME to CPU FIFO Flag Test: PASSED
11 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5 result 0x0 i 5
12 (eldiag) E1(1) TID05: Initialize Time/Space sw Chip: PASSED
13 (eldiag) testsPtr 0xffb33ab4 testsPtr[0] 0x5 i 6
14 (eldiag) E1 CARD in SLOT 1: COMPLETED POST/OFFLINE Test : PASSED
```


Figure 3-8 E1 or T1 POST Results

- 3 The above display shows the E1 or T1 POST results that would appear if the E1 or T1 POST diagnostics ran successfully on the E1 or T1 trunk card in slot 1. The format for each diagnostic line is:

```
[line number][action][E1 or T1 number][test number][test description][test result]
```

In the case of an error, a FAILED message would appear following the test that failed. In addition, the following message would be displayed in Line 8:

```
E1 CARD in SLOT 1: COMPLETED POST/OFFLINE Test: FAILED
```

NOTE  If an E1 or T1 trunk card fails the POST diagnostics, remove the failed card and return it to interWAVE along with its test results file. The defective card needs to be replaced with a new one, and POST diagnostics should be run again on the new card.

3-3.4 Verifying Telnet Communications with the BTS over Ethernet

The Craft PC uses telnet communications across the Ethernet connection for code downloads and to use the proprietary Network Management Interface (NMI) for BTS testing. Before performing any of the following procedures, ensure that you can establish and terminate a telnet communications session as described in the following procedures.

NOTE

For more information about the Craft PC, please refer to the [interWAVE Craft PC Guide](#).

Establishing a Telnet Communications Session

- 1 In an Xterm window, terminate the serial connection by pressing the [~] key and then the [.] key:

```
bts-> ~.
```

The prompt now changes back to `build@craftpc:~>.`

- 2 Verify that you can establish a telnet communications session by typing:

```
build@craftpc:~> telnet iwbox [ENTER]
```

NOTE

If the Craft PC hangs when attempting to establish a telnet session, press the key combination [CTRL][c] to abort the failed connection. Check the boot parameters and repeat the connection procedures. Also verify that the Craft PC host table contains the hostname of your equipment in reference to the default IP address.

- 3 The Craft PC prompt now changes to `bts->.` This prompt verifies that the telnet session can be established. If this is not the case, verify the Ethernet wiring and retry.

Terminating a Telnet Communications Session

After verifying that a telnet communications session can be established, terminate the telnet session as follows.



Once a telnet session has been established between the Craft PC and the processor card, it must be terminated before the Craft PC is powered off. FAILURE TO DO THIS WILL RESULT IN A HUNG CONNECTION ON THE BSS SYSTEM.

- 4 Terminate the telnet communications session by typing:

```
bts-> logout [ENTER]
```

The return message should read "Connection closed by foreign host" and the prompt changes back to `build@craftpc->.`

3-3.5 Running TRX POST Diagnostics

This section explains how to use the Craft PC to run the TRX POST diagnostics on the BTS.

1 Verify that you can establish and terminate a telnet communications session as described in Section 3-3.4.

2 Establish a serial connection by typing:

```
build@craftpc:~> cu -l ttyS0 [ENTER]
Connected.
bts->
```

3 After the BTS has booted up and the E1 or T1 POST has run during the boot process, the TRX POST diagnostics can be initiated. Type:

```
bts-> runtrxpost [ENTER]
```

4 A set of TRX POST diagnostic tests run sequentially over the Ethernet connection and the results of each test will be listed as PASSED/FAILED. Only if all tests passed successfully will the TRX POST diagnostics be considered successful. The TRX POST results will be displayed after the boot process has been completed.

NOTE



The TRX ON LINE LED flashes continuously when TRX POST diagnostics are being run and does not stop flashing until the BTS is rebooted. The flashing LED can be used as a reminder to reboot the system after successfully completing the TRX POST and other diagnostics.

The format for each diagnostic line is:

```
[line number][action][TRX number][test number][test
description][test result]
```

For example:

```
14 (Diag) TRX(4) TF22: Test Basic op of VME/RTP FIFOs: PASSED
```

where:

Table 3-3 Description of the TRX POST Results

Line Entry	Description
14	Line number
Diag	Diagnostic test being run
TRX 4	TRX4 being tested
TF22	Test number
Test Basic op of VME/RTP FIFOs	Test description
PASSED	Indicates that the TRX passed this test

The following example shows the TRX POST results for a one-TRX BTS. The following display shows that the TRX POST diagnostics ran successfully on the TRX card in slot 2. Figure 3-9 shows the results of the TRX POST for the GPRS enabled TRX card.

```

397.933 (Diag) TRX CARD IN SLOT 6: STARTING TRX POST OFFLINE Test
399.083 (Diag ) IRP(6) tf 5 Test VME Access..... PASSED
400.783 (Diag ) IRP(6) tf 12 Load FPGA (TDM) ..... PASSED
401.116 (Diag ) IRP(6) tf 15 Load FPGA (TXTDMA) ..... PASSED
401.449 (Diag ) IRP(6) tf 14 Load FPGA (RXTDMA) ..... PASSED
404.383 (Diag ) IRP(6) tf 16 Load DSP (Coder) ..... PASSED
404.399 (Diag ) IRP(6) tf 19 Ping DSP (Coder) ..... PASSED
404.433 (Diag ) IRP(6) tf 22 DSP Diag Mode ON (Coder) ..... PASSED
404.949 (Diag ) IRP(6) tf 27 Test External RAM (Coder) ..... PASSED
406.949 (Diag ) IRP(6) tf 17 Load DSP (Equalizer) ..... PASSED
406.966 (Diag ) IRP(6) tf 20 Ping DSP (Equalizer) ..... PASSED
407.000 (Diag ) IRP(6) tf 24 DSP Diag Mode ON (Equalizer) ..... PASSED
407.516 (Diag ) IRP(6) tf 28 Test External RAM (Equalizer) ..... PASSED
408.549 (Diag ) IRP(6) tf 6 Test DSP to VME Interrupt ..... PASSED
409.883 (Diag ) IRP(6) tf 30 Test TDM Control Store RAM ..... PASSED
414.116 (Diag ) IRP(6) tf 34 Test TDM Loop-back ..... PASSED
414.349 (Diag ) IRP(6) tf 45 Test ADC ..... PASSED
415.149 (Diag ) IRP(6) tf 35 Test RXTDMA to Equalizer Serial Bus ... PASSED
415.199 (Diag ) IRP(6) tf 38 Test Coder to TXTDMA Serial Bus ..... PASSED
415.299 (Diag ) IRP(6) tf 40 Test Equalizer To Coder Serial Bus ... PASSED
430.199 (Diag ) IRP(6) tf 41 Test Channel Synthesizers ..... PASSED
433.049 (Diag ) IRP(6) tf 42 Test Local Oscillator ..... PASSED
433.083 (Diag ) IRP(6) tf 23 DSP Diag Mode OFF (Coder) ..... PASSED
433.116 (Diag ) IRP(6) tf 25 DSP Diag Mode OFF (Equalizer) ..... PASSED
433.116 (Diag ) IRP CARD IN SLOT 6 : COMPLETED POST OFFLINE Test : PASSED
***Starting up SP1
***Starting up SP0

```

Figure 3-9 GPRS Enabled TRX POST Results

3-3.6 Reviewing POST Results

This section explains how to review E1 or T1 POST and TRX POST diagnostics results after POST has been completed on the BTS.



NOTE The following procedure assumes that E1 or T1 and TRX POST have just been completed on the selected BTS and a serial connection is still active between the Craft PC and the BTS. If this is not the case, reboot the BTS and run POST again.

- 1 To display the most current E1 or T1 and TRX POST results after POST has been completed, type:

```
bts-> postReportE1Trx [ENTER]
```

A summary of the E1 or T1 and TRX POST results will be displayed (note that some tests may not run):

```

bts:> postReportE1Trx
***** E1 DIAGNOSTICS REPORT *****
*****

Slot:1

E1(1)TID01: Initialize Peripheral Registers : PASS
E1(1)TID02: Peripheral Register Test : PASS
E1(1)TID03: Framer Register Test : PASS
E1(1)TID04: VME to CPU FIFO Flag Test : PASS
E1(1)TID05: Initialize Time/Space sw Chip : PASS
E1(1)TID06: Software Download Test : Not-Run
E1(1)TID07: Memory Test : Not-Run
E1(1)TID08: CPM download Test : Not-Run
E1(1)TID09: TRAU DSP Test : Not-Run
E1(1)TID10: Cross Connect Test : Not-Run
*****

***** TRX DIAGNOSTICS REPORT *****
*****

Slot 6
-----

All Tests PASSED
*****

value=58=0x3a='='
bts:>

```

Figure 3-10 Reviewing E1 or T1 and TRX POST Results

NOTE



There are five tests that are not run but show up in the results section when the user manually retrieves the POST results. These tests are not displayed when running POST by rebooting the BTS. They are:

- T1(1) TID06: Software Download Test : Not-Run
- T1(1) TID07: Memory Test : Not-Run
- T1(1) TID08: CPM Download Test : Not-Run
- T1(1) TID09: TRAU DSP Test: Not-Run
- T1(1) TID10: Cross Connect Test: Not-Run

3-3.7 Rebooting the BTS after Running POST

- 1 Type:

```
bts-> reboot [ENTER]
```

This action places the TRX in an on-line and operational state.

- 2 Reconnect all E1 or T1 lines to the BTS.

3-3.8 Terminating Serial Communications with the BTS

NOTE



If you are going to perform the Racal tests described in the [interWAVE Radio Test Manual](#) at this time, ensure that you have rebooted the chassis. Also, leave the Craft PC connected to the IWP card and a serial communications session active.

- 1 Close the serial connection by placing your cursor in the Xterm window which was used to establish a serial connection, and press the [~] key and the [.] key.
- 2 After a few seconds the returned message should read `Disconnected`, and the display will revert back to `build@craftpc:->` prompt.



Specific shutdown instructions **MUST** be followed when powering off the Craft PC. **DO NOT POWER OFF THE CRAFT PC BY PRESSING THE POWER BUTTON.** Use the shutdown instructions included in Section 3-4.

3-4 Exiting XWindows on the Craft PC

This section explains how to close XWindows running the Windows 2000/XP operating system on the Craft PC.

- 1 If XWindows is running, at the prompt, type: `exit` [ENTER]
- 2 Left click the X in the upper right hand corner of your XWindows window.

3-5 Upgrading the BTS Software Version (Flash)

Use this procedure if the procedures in Section 3-3.1 indicate that you need to update your software version.

The BTS stores its release software in Flash RAM. This section explains how to upgrade the BTS Flash boot image locally using the Craft PC.

NOTE



In order to update the BTS Flash boot image locally using the Craft PC, the Craft PC hard drive must contain the software version (Flash boot image) to be installed.

If the required release is not installed on your Craft PC, use the procedures in the [interWAVE Craft PC Guide](#) to install it.

- 1 Power up the Craft PC and start the XWindows environment. For Craft PC power-up procedures, refer to Section 3-2.2. For XWindows start-up procedures, refer to Section 3-2.2.
- 2 Verify that a telnet session can be established with the BTS. In an Xterm window, type:

```
build@craftpc:~> telnet iwbox [ENTER]
```
- 3 If the Ethernet connection is setup correctly, then the Craft PC returns the VxWorks `bts->` prompt. If this is not the case, refer to Section 3-3.4 for setup procedures.
- 4 Once the Ethernet connection has been tested, terminate the telnet session by typing:

```
bts-> logout [ENTER]
```
- 5 The Craft PC returns the `build@craftpc:~>` prompt. Establish a serial session with the BTS. In an Xterm window, type:

```
build@craftpc:~> cu -l ttyS0 [ENTER]
```

Identify Your Processor Card

- 6 Change the working directory to the directory containing the new software version you wish to upgrade to the BTS:

```
cd "/home/build/iwXX_YY.ZZZ/iwlib/platform/bspppc" [ENTER]
```

The `iwXX_YY.ZZZ` parameter represents the new software version you wish to load on the BTS.
- 7 To find out which Flash image in which the current software version resides, type:

```
bts-> getCurrentImage [ENTER]  
value = 0 = 0x0
```

Make a note of the returned value, which might be either 0 or 1. This is the active image in which the current Flash resides. The binary opposite of this value will be used to load the new Flash in the following steps.

If Current Image Value is 0 (value = 0 = 0x0)

- 8 Load the new Flash in the inactive image. At the `bts->` prompt, type:

```
bts-> writeFlashImage "btsflash.bin", 1 [ENTER]
```
- 9 This takes about one minute. When the `bts->` prompt returns, set the inactive image containing the new Flash as the active or current image, type:

```
bts-> setImageCurrent 1 [ENTER]
```
- 10 Reboot the BTS for the new Flash image to take effect by pressing the key combination [CTRL][x].

If Current Image Value is 1 (value = 1 = 0x1)

- 11 Load the new Flash in the inactive image. At the `bts->` prompt, type:

```
bts-> writeFlashImage "btsflash.bin", 0 [ENTER]
```
- 12 This takes about one minute. When the `bts->` prompt returns, set the inactive image containing the new Flash as the active or current image, type:

```
bts-> setImageCurrent 0 [ENTER]
```
- 13 Reboot the BTS for the new Flash image to take effect by pressing the key combination [CTRL][x].

The Flash boot image has been upgraded to the new software version and set as the default.



Flash Image 2 is reserved for interWAVE Customer Service use ONLY.

3-6 Post Off-Line Commissioning

The following post off-line commissioning procedures are necessary to ensure that the BTS is ready for on-line commissioning. In the case of off-line commissioning at a staging area, these procedures ensure that the BTS is ready for installation. In the case of off-line commissioning after on-site installation, these procedures ensure that the BTS is ready for on-line commissioning.

Post Off-Line Commissioning Procedures at the Staging Area

- 1 Repack the BTS in its original shipping containers and make sure that it is shipped to the site where it will be installed.
- 2 Once the BTS is installed at its final site as described in Chapter Two, continue with the next section.

Post Off-Line Commissioning Procedures On-Site

- 1 Reconnect the E1 or T1 cables to the digital distribution frame.
- 2 Power on the BTS if it is not already on. Verify that all PWR and ON LINE LEDs are green.
- 3 Inform the OMC operator that the BTS is ready for network configuration.
- 4 After the OMC operator has configured the BTS, continue with on-line commissioning tests in the next chapter.

Four

Off-Line Commissioning of a Daisy Chain

Up to four UltraWAVE BTSs, WAVExpress BTSs and/or TurboMAX BTSs can be incorporated into a daisy chain connected to a BSC. If this configuration is used, each BTS must be installed separately, and must have off-line commissioning procedures independently performed. Once each BTS is installed and commissioned, the BTSs can be daisy chained together.

NOTE



If the power fails to one of the units or one of the units in a daisy chain is rebooted, communication with the downstream units will not be lost.

4-1 Prerequisites to Daisy Chaining

- 1 Ensure that all BTSs comprising the daisy chain are installed and off-line commissioned.
Refer to Chapter Two and Chapter Three for instructions on how to install and off-line configure the BTSs that are part of the daisy chain.
- 2 Ensure that the Abis Manager timeslot has been set for each BTS in the daisy chain as described in Section 4-2. Each Abis link within this daisy chain **MUST** be allocated a different Abis timeslot number.
- 3 Turn the power off to all units.
- 4 Using the instructions in Section 2-5.3, verify that all E1 and/or T1 lines are in place and commissioned by the operator from the BSC to the first BTS, and between all successive BTSs comprising the daisy chain.

4-2 Setting the Abis LAPD Signaling Timeslot

This procedure sets the Abis LAPD timeslot between the MSC and each BTS. If the Abis timeslot is not set, it automatically defaults to 16.

This procedure is optional for a star configured BTS, but is required for all BTSs which will be used in a daisy chain. In this case, each BTS must have its Abis timeslot set to a unique number in the chain. This information will be used by the OMC operator to configure the daisy chain.



This procedure must be performed after the BTS is tested using a Racal testset. Refer to the [interWAVE Field Maintenance Guide](#) for further instructions.

- 1 Ensure that the Craft PC is connected to the BTS over a serial line, and that a serial connection is established. Refer to Chapter Three for instructions on how to do this.
- 2 In an Xterm window, type:

```
bts-> getFlashE1Chan [ENTER]
```

This displays the timeslot reserved for the Abis LAPD signalling timeslot, which is by default set to 16. To change this value, type at the prompt:

```
bts-> setFlashE1Chan <number> [ENTER]
```

where <number> is the Abis LAPD signaling timeslot assigned to an unassigned T1 channel between 1 and 24 or to an unassigned E1 channel between 1 and 31.

NOTE



The Abis signaling timeslot for each BTS in the daisy chain must be set to a different number. For example:

- BTS 1 in the chain = Set timeslot 16 as the Abis timeslot
- BTS 2 in the chain = Set timeslot 17 as the Abis timeslot
- BTS 3 in the chain = Set timeslot 18 as the Abis timeslot
- BTS 4 in the chain = Set timeslot 19 as the Abis timeslot

Make sure that this information is communicated to the OMC operator.

- 3 To double-check that the timeslot was changed, type again:

```
bts-> getFlashE1Chan [ENTER]
```

The new Abis signaling timeslot number should be displayed.

- 4 If the Abis signaling timeslot was changed, the BTS must be rebooted. Type:

```
bts-> reboot [ENTER]
```

On-line commissioning takes place on-site after installation and off-line commissioning. Its purpose is to verify that the equipment is operational and can be integrated into the telecommunications network.

On-line commissioning requires the participation of two people; a field technician who operates and tests the BTS on-site and an OMC operator who remains as the OMC console. These two must work together, performing the procedures in this chapter in conjunction with the procedures in the [WAVEView OMC Configuration Guide](#).

The procedures in this chapter are divided into four sections:

- Pre on-line commissioning, where you ensure that the system is ready for online commissioning.
- On-line commissioning, where you test that the system is ready to operate as an integral part of the network.
- Verifying RF performance, where you perform RF-related measurements.
- Post online commissioning.

Radio Frequency Radiation Warning



Under normal operating conditions, interWAVE Communications radio equipment complies with the limits for human exposure to radio frequency (RF) fields adopted by the Federal Communications Commission (FCC). All interWAVE Communications, Inc. radio equipment is designed so that under normal working conditions radio frequency radiation directly from the radio is negligible when compared with the permissible limit of continuous daily exposure recommended in the United States of America by ANSI/IEEE C95.1-19991 (R1997), Safety Levels with Respect to Human Exposure to Radio Frequency Electromagnetic Fields, 3 kHz to 300 GHz.

Radio frequency signal levels that give rise to hazardous radiation levels can exist within the transmitter, power amplifiers, associated RF multiplexers and antenna systems.

Do not disconnect RF coaxial connectors on the interWAVE equipment or antenna systems while the radio equipment is operating. **Never** place any body part over, or look into any RF connector while the radio equipment is transmitting.

5-1 Pre On-Line Commissioning Requirements

Before on-line commissioning begins, the field technician or the OMC operator must verify that:

- The BSC or BS Plus, and the WXC or MSC are fully commissioned, in service and connected to each other and to the BTS.
- The OMC is in service and connected to the BSC via the MSC as defined in the [interWAVE Network Implementation Manual](#).
- The database questionnaire is completed, with all necessary BTS parameters listed, as defined in the [interWAVE Network Implementation Manual](#).
- The OMC operator has successfully created and configured the BTS object on the OMC and downloaded this information to the BTS.
- The RF frequencies are cleared to transmit.
- The E1 or T1 connection between the BTS and the BSC has been commissioned.



Once the E1 or T1 link has been properly connected to the BTS E1 or T1 trunk card, both port alarm LEDs for the connected port should turn off. If one or both LEDs remain lit, signifies an E1 or T1 link problem related to either a faulty connector or the E1 or T1 link itself. Refer to the [interWAVE Field Maintenance Guide](#) for additional information.

- The BSC-BTS E1 or T1 link is properly certified. Note that the certification should state length of testing and BER results.



It is the operator's responsibility to verify that all BSC-BTS E1 or T1 Abis links are ordered, installed and certified by the local telephone provider. Certification should include a bit error ratio/rate test of at least 20 minutes on the Abis interface, with a BER of 10^{-8} or better.

- The HLR subscriber data has been entered into the HLR using the Subscriber Management GUI, as described in the [interWAVE Subscriber Management Guide](#). In particular, the HLR must be configured to support the SIM cards of the mobiles used by the field technician.
- The Abis link and its child objects are locked at the OMC.

5-2 On-Line Commissioning

The network commissioning procedures must be performed at the OMC and at the NIB. This requires two persons working from two different documentation sets:

- A field technician who remains on site. They must have a filled out copy of Checklist 2 and a copy of this manual.
- An OMC operator who remains at the OMC. They must have a copy of the [WAVEView OMC Configuration Guide](#).

The following flowchart provides a high-level view of the procedures. The procedures in the following sections provide detailed, numbered steps.

NOTE



Checklist 3 summarizes the steps for on-line commissioning.

NOTE



Before starting any of the following procedures, the field technician needs to ensure that anti-static precautions are taken.

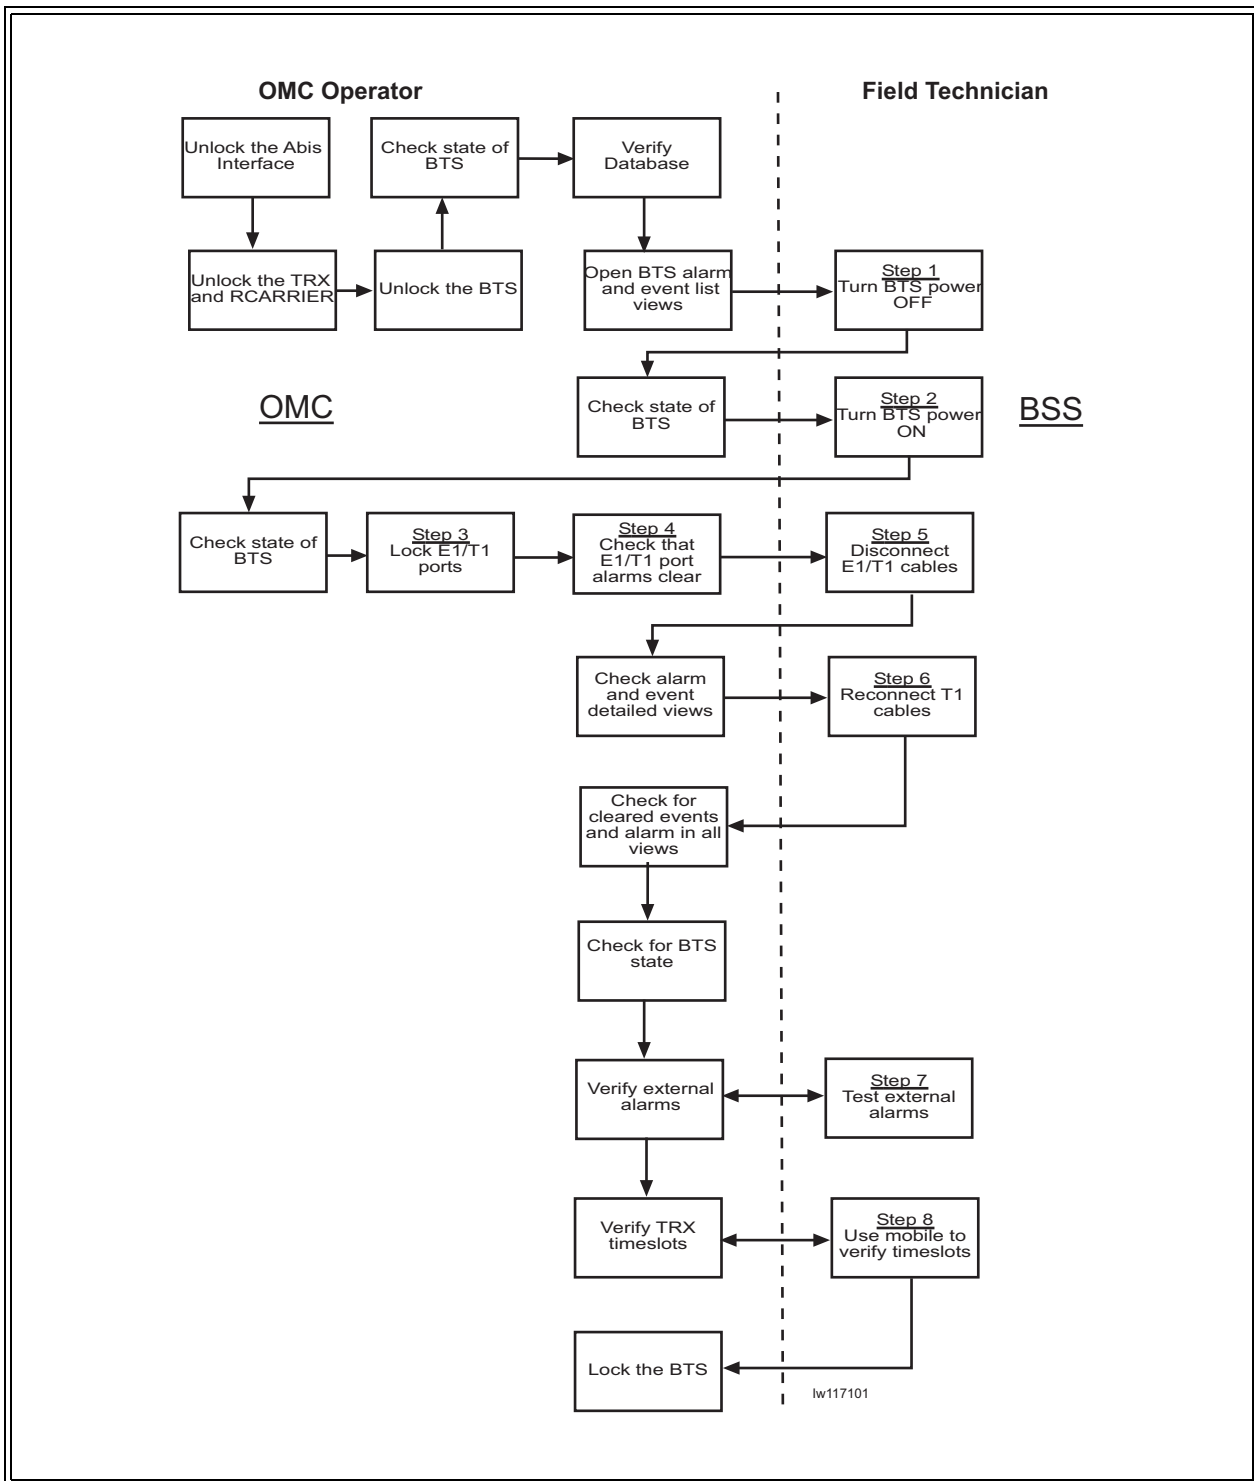


Figure 5-1 On-Line Commissioning Procedures

NOTE

Before starting any of the following procedures, the field technician needs to ensure that anti-static precautions are taken.

Before disconnecting the E1 or T1 cables, the field technician must make sure that the cable is labeled in a way that clearly identifies its origin (a particular E1 or T1 port of the BSC, or a particular port of an E1 or T1 panel, etc.) and destination (a particular E1 or T1 slot and port on the BSC).

- Provide the OMC operator with all part, revision and serial numbers for the BTS cards and modules. This information was gathered during the physical installation and is available in Checklist 1.

Recovery Tests

- 1 At the installation site, power off the BTS. Have the OMC operator verify the changed state of the BTS.
- 2 At the installation site, power on the BTS. Have the OMC operator verify the changed state of the BTS.
- 3 Have the OMC operator lock the E1 or T1 ports, and verify that BTS alarms appear.
- 4 Have the OMC operator unlock the E1 or T1 ports, and verify that BTS alarms clear.
- 5 At the BTS, disconnect all E1 and/or T1 cables. Monitor the LED sequence of the BTS as described in Chapter Three.
- 6 Reconnect both E1 and/or T1 cables to the BTS E1 or T1 trunk card. Monitor the LED sequence of the BTS as described in Chapter Three.

External Alarm Tests

- 1 Test external alarms as per the following procedures:

Test 1

- A Open the door of the BTS.
- B After a delay, the OMC operator must observe an alarm event.
- C Close the door.
- D After a delay, the alarm state displayed at the OMC changes from open to closed.

Test 2

- A If the first external alarm is used, close the alarm relay (i.e. trigger the first customer-defined alarm).
- B After a delay, the OMC operator must observe an alarm event.
- C Close the alarm relay by opening the alarm contact.
- D After a delay, the alarm state displayed at the OMC changes from open to closed.

Test 3

- A If the second external alarm is used, close the alarm relay (i.e. trigger the second customer-defined alarm).
- B After a delay, the OMC operator must observe an alarm event.
- C Close the alarm relay by opening the alarm contact.
- D After a delay, the alarm state displayed at the OMC changes from open to closed.

TCH Timeslot Tests

- 1 In this test, the OMC operator unlocks individual TCH timeslots and the field technician places a mobile-to-mobile call over each timeslot using a mobile handset in debug mode. Refer to the documentation provided by the module handset manufacturer for the proper procedures.

For each timeslot, the commissioner should verify that:

- The timeslot displayed on the handset corresponds to the timeslot unlocked by the OMC operator.
- A two-way call is completed successfully.
- The call has good audio quality and power, and low interference.

The number of timeslots to be tested differs depending on whether you have one, two or three TRXs. Table 5-1 provides the sequence for 1 TRX, Table 5-2 provides the sequence for 2 or more TRXs.

Table 5-1 Timeslots Needing Testing in a One-TRX BTS

TRX Number	Timeslot Number	Channel Type	Testing Necessary
First TRX (TRX in Slot 6)	0	BCCH Combined	No
	1	TCH	Yes
	2	TCH	Yes
	3	TCH	Yes
	4	TCH	Yes
	5	TCH	Yes
	6	TCH	Yes
	7	TCH	Yes
Note: To run an abbreviated version of this test, test any one of timeslots 0-3 and of timeslots 4-7 on each TRX.			

Table 5-2 Timeslots Needing Testing in BTS with More Than One TRX

TRX Number	Timeslot Number	Channel Type	Testing Necessary
First TRX (Note)	0	BCCH	No
	1	SDCCH	No
	2	TCH	Yes
	3	TCH	Yes
	4	TCH	Yes
	5	TCH	Yes
	6	TCH	Yes
	7	TCH	Yes
Second through Sixth TRX (Note)	0	TCH	Yes
	1	TCH	Yes
	2	TCH	Yes
	3	TCH	Yes
	4	TCH	Yes
	5	TCH	Yes
	6	TCH	Yes
	7	TCH	Yes
<p>Note: The BCCH can be assigned to any TRX within the BTS. The label "First TRX" applies to the TRX to which is assigned the BCCH. The OMC operator may determine which physical TRX is the "First". All TCH timeslots on the second through sixth TRX must be tested.</p>			

5-3 Antenna Cabling and Power Verification

5-3.1 Voltage Standing Wave Ratio (VSWR) Check

The VSWR check should be performed by the team responsible for the antenna installation. The purpose of the check is to ensure the integrity of the antenna and the antenna connection by determining whether the reflected power reading is higher than the recommended value. The reflected power is defined as a ratio of the power output versus the reflected power return. This value is determined by two key factors: the power output from the chassis and the loss due the length and type of the cable.

The recommended test approach is to use an in-line, forward/reverse power meter (for example, the NAS model by Rohde and Schwarz) installed between the chassis and the antenna cable. This approach validates that the antenna and cable are good. It also verifies that the transmit power from the chassis is within tolerance limits. The VSWR at the antenna port should be less than or equal to 1.5:1.

Listed below are threshold values assuming a VSWR of 1.5 at different levels of cable loss (due to length or cable type). The estimated return loss should be greater than or equal to the values below.

5-3.2 Verifying BTS RF Performance without Racal

After performing the BTS commissioning as described in the previous section, use the following procedure to check the performance of an on-line BTS without using a Racal test procedure.



This procedure is NOT a substitute for the Racal tests. Please refer to the [interWAVE Radio Test Manual](#) to test the output power of the BTS.

Required Test Equipment

- GSM-compatible RF Power Meter
- 50 Ohm dummy load
- 100 W, 30 dBm attenuator
- Two mobile telephones

Required Network Configuration

To perform satisfactory RF performance tests, the BTS must be connected to an operational BSC/MSC and OMC to enable call processing, as the SS7 must be enabled for the BTS to transmit. Make sure you commission the BTS as described in the previous section before performing this procedure.

5-3.3 Verifying TRX Output Power

This test must be done to each TRX in the system. After completing the test for the first TRX, move on to the next until you have tested each. Use the following procedure:

- 1 At the OMC, make sure that the BTS is in a locked state.
- 2 Disconnect the appropriate antenna cable from cabinet. This cable will correspond to the TRX which you are testing. See Section 2-6 for additional RF cabling information.
- 3 Ensure that the OMC is configured so that the BCCH is on the TRX you are testing.

NOTE



The procedure for BCCH reconfiguration can be found in the Network Configuration section of the [WAVEView OMC Configuration Guide](#).

- 4 Connect the dummy load to the "out" port of the RF Power Meter.
 - 5 For each TRX, connect the "in" port of the RF Power Meter to the RFD as follows.
 - 6 At the OMC, change the BTS state to unlocked.
 - 7 Note the output power of the TRX on the power meter; this will be displayed in either Watts or dBm.
 - 8 Complete these steps for each TRX in turn until you have tested them all.
- If a TRX falls out of the margins, interWAVE recommends that you perform a Rcal test to determine the serviceability of the TRX.

5-3.4 RX BER Measurements

The objectives of this test are to verify the performance of the Receive path of the BTS and the operation of the RX module in the TRX. Before these tests can take place the BTS must be returned to its original "on air" working state with call processing possible.

- 1 From an Xterm window on the OMC, telnet to the BSC controlling the BTS to be tested, or alternatively connect directly to the BSC with the Craft PC.
- 2 From the BSC prompt find the IP address of the BTS by typing:

```
HD:bsc-> ifShow "ppp" [ENTER]
```

A list of PPP connections will then be displayed. Look for the IP address of the BTS you will be testing. The last number of the "192.168.5.x" address relates to the BtsMgr number of the BTS.

- 3 From the BSC prompt type the following to connect to the BTS:

```
HD:bsc-> rlogin "192.168.5.x" [ENTER]
```

If this is successful you will receive the `bts->` prompt.


- 4 From the BTS prompt type the following to activate the RX BER logging:

```
bts-> log_none [ENTER]  
bts-> log_lapdm [ENTER]  
bts-> setdontarray 0x43,0 [ENTER]
```

- 5 Make a call through the BTS. After the initial setup messages, the following log as described in Figure 5-2 will be produced every five seconds for each call in progress. Figure 5-2 shows what each set of bytes means. Note that all of the counters are either two or four bytes, in twos complement.

The TRX and DSP numbers that are being used appear immediately to the left of the EVTI.

The “DSP count of bit errors” shows the bit errors estimated by the DSP in the uplink direction, for every five seconds (250 speech frames). Under normal testing conditions where the mobile is stable and reasonably close to the BTS, this value should remain 00 during testing. If the value is consistently high (that is, above 10) then it is recommended that you perform a Racal test to determine the serviceability of the TRX.

	<p>NOTE This estimate of BER is not 100% accurate, because a codeword after data corruption can be mapped to another valid codeword, thus undetected by the DSP error estimation mechanism of decoding, re-encoding and bit-comparison.</p>
---	--

- 6 Place calls through each TRX and DSP. To allocate calls to different TRXs and DSPs refer to the procedure used in Section 5-2.

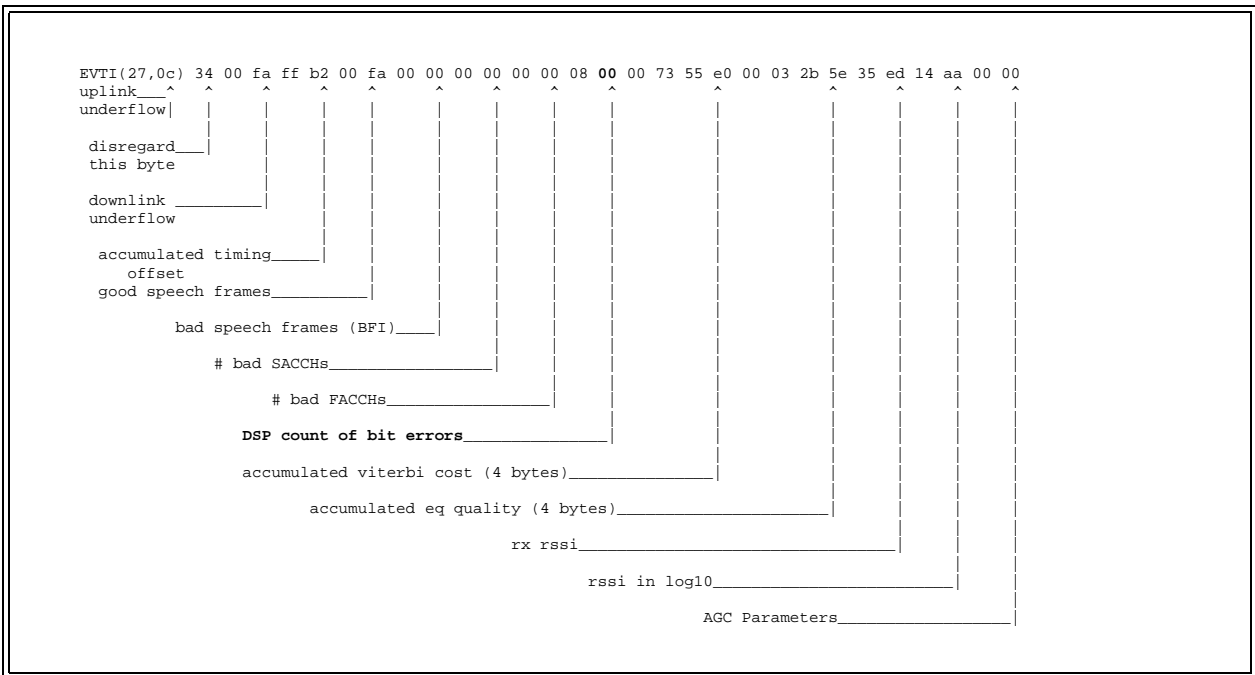


Figure 5-2 Description of DSP Event Indication (EVTI) messages

5-4 Post On-Line Commissioning Procedures

- 1 Leave the power to the BTS on.
- 2 Check that all E1, T1 and power cable connections to the BTS are tight.
- 3 Close and lock the BTS door.
- 4 Inform the OMC operator that the BTS is ready for integration testing.
- 5 Ensure that the BTS site is left in a tidy state.

This concludes the commissioning of the BTS. The field technician can now leave the BTS site.

(this page intentionally left blank)

Checklist 1

Site Readiness Checklist

Site Name	
IP Address	
BSC Name	
MSC Name	
Site/Access Phone Number	

Environmental requirements

- 1 Ground and soil resistance measured
- 2 Air conditioning available

Electrical requirements

- 1 Site ground plate/ring installed and grounding rods connected
- 2 Grounding bar Installed on shelter/cabinet and bonded to site ground plate/ring
- 3 Main feeder bend radius verified
- 4 Power cable entry supports/conduits installed
- 5 Main power cable installed and ready for connection
- 6 Power utility meter installed and connected
- 7 Main power supply available
- 8 MCC & MNC frequencies assigned and confirmed
- 9 Local electrician/ power provider available

Chassis requirements

- 1 Shelter/Cabinet anchored in position
- 2 Foundation pad for shelter/cabinet constructed
- 3 Backbone trunking equipment and installation material on site
- 4 Shelter/Cabinet waterproofed
- 5 PLMN/PSTN/E1/T1 lines installed (BER link measurements)

(this page intentionally left blank)

Checklist 2

Installation Checklist

Site Name	
IP Address	
IP Name (optional)	
BSC Name	
MSC Name	
Site/Access Phone Number	

Baseband Subrack	Slot Number	Part Number	Revision Number	Serial Number
Processor card	0			
E1 or T1 Trunk card	1			
TRX card	2			
TRX card	3			
TRX card	4			
TRX card	5			
TRX card	7			
TRX card	7			
Clock module	-			

Power Supply Subrack	Number	Part Number	Revision Number	Serial Number
PS Module	1			
PS Module	2			
PS Module	3			

Unpacking the BTS

Contact interWAVE Customer Service if any visible damage is found.

- 1 No visible damage to shipping materials
- 2 All parts included per shipping invoice
- 3 Cross check with site specific data to ensure BTS is correctly configured with all cards

Mounting

- 1 __ Attach mounting brackets to chassis
- 2 __ Ground chassis
- 3 __ Connect power supply: 115 VAC, 230 VAC, -48 VDC

Checking VSWR

VSWR measurements are performed by the operator to verify the installation of external antennas.

- 1 __ VSWR measurement on TX antenna 1
- 2 __ VSWR measurement on TX antenna 2 (if applicable)
- 3 __ VSWR measurement on TX antenna 3 (if applicable)

Connecting the BTS

- 1 __ Connect "Abis Interface" E1 and/or T1 trunk cables to local telephone provider demarcation point
- 2 __ Configure E1 or T1 trunk card DIP switch settings
- 3 __ Ensure power to BTS is off

Verifying the BTS-BSC Link

It is the operator's responsibility to verify that all BTS-BSC E1 and/or T1 links are ordered, installed and certified by the local telephone provider.

- Verify bit error rates on a nominal 20 minute soak test on the E1 and/or T1 Abis-interface (end-to-end BER test to include E1 and/or T1 trunk cables)

Checklist 3

Commissioning Checklist

Site Name	
IP Address	
IP Name (optional)	
BSC Name	
MSC Name	
Site/Access Phone Number	

Off-Line Commissioning

Pre-Commissioning Visual Checks

At the Depot

- 1 Power to BTS is off.
- 2 BTS connected to power source.
- 3 BTS grounded.
- 4 Equipment cables labeled and secured.
- 5 Cards seated securely.

On-Site

- 1 Installation secure.
- 2 Power to BTS is off.
- 3 BTS connected to power source.
- 4 BTS grounded.
- 5 Equipment cables labeled and secured.
- 6 Cards seated securely.
- 7 Transmission cables available and labeled.

Compliance Checks

- 1 Cross check with site specific data to ensure BTS is correctly configured with all cards.
- 2 Serial number of all cards recorded.
- 3 Verify correct operating voltage supplied: 230 VAC, 115 VAC, -48 VDC.

Powering On the BTS

- 1 Disconnect all E1 and/or T1 cables from BTS (if connected).
- 2 Turn power to BTS on.
- 3 All card power LEDs and processor and E1 or T1 ON LINE LEDs are green.

BTS Off-Line Software Checks

- 1 __ Connect the Craft PC to the BTS using a serial and ethernet cable.
- 2 __ Establish a serial connection.
- 3 __ Check BTS boot parameters.
- 4 __ Check the flash version number.

POST Tests

- 1 __ Verify E1 or T1 POST tests successfully passed.
- 2 __ Verify TRX POST tests successfully passed for each card.

TRX Commissioning

- 1 __ Connect the BTS to the Craft PC and the Racal testset.
- 2 __ Start the Racal.
- 3 __ Load the sequence files on to the PCMCIA card from the CD-ROM.
- 4 __ Setup the test results presentation on the Racal.
- 5 __ Set the offset values for RF cable loss.
- 6 __ Run the automated test sequence:

__	TRX 1	Pass	__	Fail	__
__	TRX 2	Pass	__	Fail	__
__	TRX 3	Pass	__	Fail	__
__	TRX 3	Pass	__	Fail	__
__	TRX 3	Pass	__	Fail	__
__	TRX 3	Pass	__	Fail	__

Post Racal Procedures

- 1 __ Disconnect the BTS from the Racal testset.
- 2 __ Reboot the BTS using the Craft PC.
- 3 __ Disconnect the BTS from the Craft PC.

Post Off-Line Commissioning

At the Depot

- 1 __ Physically install BTS on-site
- 2 __ Connect E1 and/or T1 lines to telephone provider demarcation point.
- 3 __ Leave power to BTS on.
- 4 __ Inform OMC operator that BTS is ready for on-line commissioning.

On-Site

- 1 __ Connect E1 and/or T1 lines to telephone provider demarcation point.
- 2 __ Leave power to BTS on.
- 3 __ Inform OMC operator that BTS is ready for on-line commissioning.

On-Line Commissioning

BTS On-Line Commissioning Prerequisites

- 1 __ BSC in service and connected to BTS.
- 2 __ OMC in service and connected to BSC.
- 3 __ Database questionnaire completed with BTS parameters defined.

- 4 __ OMC downloaded BTS configuration with correct operational parameters.
- 5 __ RF frequencies cleared to transmit.
- 6 __ BTS E1 or T1 trunk card cables connected to the local telephone provider demarcation.
- 7 __ BSC E1 or T1 trunk card cables connected to the local telephone provider demarcation assigned to the BTS.

Note: It is the operator's responsibility to verify all E1 and/or T1 links are properly installed and certified by local telephone provider facilities. Certification must rate Length of Testing and BER Results.

BTS-BSC Network Integration

- 1 __ Unlock the Abis interface.
- 2 __ Unlock the BTS.
- 3 __ Verify the operational state of the BTS.

Verifying Recovery

- 1 __ Perform a BTS cold start and verify that the BTS fully recovers.
- 2 __ Confirm Abis interface re-establishes communications to BSC after E1 or T1 disconnects.

Operational Tests

- 1 __ Unlock TRX.
- 2 __ Perform test calls on each timeslot.
- 3 __ Perform test calls on each TRX.

Final Commissioning, On-Line Tests

- 1 __ Leave power to BTS on.
- 2 __ Inform the OMC operator that commissioning is complete.

(this page intentionally left blank)

A

- alarm
 - external 43
- antenna
 - connecting to the CMA 32

B

- BTS 32

C

- cabling
 - between multiple WAVExpress systems 31
 - external 25
 - external BTS 32
- changing/verifying boot parameters 56
- chassis mounting 14
- checking IWP flash version number 58
- checklist
 - commissioning 87
 - installation 85
- commissioning
 - online 71
 - post off-line 68
- commissioning checklist 87
- configuring
 - E1 or T1 trunk card 18
- Craft PC
 - powering down 65
- customer support x
- customer support services x

D

- daisy chain off-line commissioning 69
- daisy chain prerequisites 69

E

- E1
 - configuring trunk card 18
 - connecting lines 31
- E1 or T1 POST diagnostics 59
- establishing serial communications 55

Ethernet 60
external cabling 25

F

flash version number 58
front panel LEDs 53

G

grounding cable 25

I

installation 11
installation checklist 85
interWAVE
 customer support x
 customer support services x
 return materials authorization (RMA) xi
 sales operations xi
 sales support x
 technical support x
 training xi
IWP flash version number 58

L

label
 system configuration 4
LAPD signaling time slot 70
LEDs 53

M

mounting BTS chassis 14

N

network integration 72, 78
network integration procedures 73

O

off-line commissioning 47
 daisy chain 69
on-line commissioning 71, 73

P

- patch level verification 58
- post installation cabling 46
- post installation checks 46
- post off-line commissioning 68
- post on-line commissioning procedures 81
- POST results review 63
- Power On LED Tests 53
- power supply 25
- pre on-line commissioning
 - requirements 72
- prerequisites
 - network integration 72, 78
- prerequisites to daisy chaining 69

R

- rebooting BTS after running POST 64
- requirements
 - pre on-line commissioning 72
- return materials authorization (RMA) xi
- reviewing POST results 63
- RMA xi

S

- sales operations xi
- sales support x
- serial communications 55
 - terminating 64
- setting Abis LAPD signaling timeslot 70
- software
 - checking current build 58
 - checking software build 58
 - updating 66
 - verification 58
 - verifying 58
- software verification 58
- system
 - configuration 4
 - type of 4

T

- T1
 - configuring trunk card 18
 - connecting lines 31
- T1 or E1 POST diagnostics 59
- technical support x

- telnet communications 60
 - establishing 61
 - terminating 61
- terminating serial communications with BTS 64
- training xi
- TRX POST diagnostics 61

V

- verifying BTS performance
 - without Racal 78
- verifying current patch level 58
- verifying current software version 58
- verifying/changing boot parameters 56
- Voltage Standing Wave Ratio (VSWR) check 78

Notes:



* * * * *

This is the last page of this document.

This notice complies with ISO9001 requirements
and ensures the reader is working from a complete document.

* * * * *