

RedMAX™



AN-100U/UX Single Sector Wireless Access Base Station User Manual

Copyright Information

All rights reserved April 30, 2008. The information in this document is proprietary to Redline Communications Inc. This document may not in whole or in part be copied, reproduced, or reduced to any medium without prior consent, in writing, from Redline Communications Incorporated.

Contact Information:

Redline Communications Inc.
302 Town Centre Blvd. Suite 100
Markham, ON
Canada L3R 0E8

Web Site: <http://www.redlinecommunications.com>**Sales Inquiries:**

North American: nainfo@redlinecommunications.com
Toll-free sales: 1-866-633-6669
International: intlinfo@redlinecommunications.com

Support: www.redlinecommunications.com/support/support_portal.html**Document Control:**

70-00058-01-01-RedMAX_BaseStation_AN-100U_UserManual-20080430a.doc

Disclaimer

The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Additionally, Redline makes no representations or warranties, either expressed or implied, regarding the contents of this product. Redline Communications shall not be liable for any misuse regarding this product. The information in this document is subject to change without notice.

TABLE OF CONTENTS

1	Important Safety & Service Notices	10
1.1	Important Warning Symbols	10
1.2	IC RF Exposure Warnings.....	10
1.3	Safety Warnings	11
1.4	FCC Notice	12
1.5	Frequency Selection.....	12
1.5.1	General.....	12
1.5.2	R&TTE Directive 1999/5/EC Statements.....	12
1.6	Information For Use In Canada	15
1.7	Important Service Information	15
1.8	WEEE Product Return Process.....	16
2	RedMAX Base Station Overview	17
2.1	Introduction.....	17
2.2	IEEE 802.16 / WiMAX Compliance	18
2.3	PHY Specification.....	18
2.4	OFDM (256 FFT)	18
2.5	Features	18
2.5.1	Privacy.....	18
2.5.2	Time Division Duplexing (TDD)	19
2.5.3	Coding Rate.....	19
2.5.4	Modulation	19
2.5.5	Reed Solomon Error Correction	19
2.5.6	Time Synchronization	19
2.6	Deployment Models.....	19
2.6.1	PTP Deployment	20
2.6.2	PMP Deployment.....	20
2.6.3	Channelization.....	20
2.6.4	Non Line-of-Sight.....	20
2.7	Service Flows	21
2.7.1	Service Flow Classification.....	21
2.7.2	Dynamic Service Addition.....	22
2.7.3	Default Service Flows.....	22
2.7.4	Scheduling.....	22
	Real-Time Polling Service (rt-PS).....	22
	Non-Real-Time Polling Service (nrt-PS).....	22
	Best Effort (BE).....	23
	Unsolicited Grant Service (UGS).....	23
	Traffic Scheduling Algorithm.....	23
3	Physical Description	24
3.1	Base Station Indoor Unit (IDU)	24
3.1.1	Mounting.....	25
3.1.2	Power Supply	25
	AN-100U.....	26
	AN-100UX	26
3.1.3	Wireless Section.....	27

	IF Port (Radio Control)	27
	Time Synchronization Port	27
	Wireless LEDs	27
3.1.4	Ethernet Section	28
	Data Port	28
	Data Port LEDs.....	28
	Mgt Port.....	29
	Mgt Port LEDs	29
3.1.5	System Section.....	29
	System LEDs.....	29
	Reset Switch.....	30
3.1.6	Grounding Connection.....	30
3.1.7	Console Port.....	30
3.2	Radio Outdoor Unit (ODU)	31
3.2.1	Transceiver	31
	HB Radio	31
	HTB Radio	32
	IF Port.....	32
	RF Port	32
3.2.2	Antenna	32
3.2.3	Mounting Brackets.....	33
	AN-100U.....	33
	AN-100UX	33
4	Web Interface	34
4.1	System Menu.....	34
4.1.1	Configuration Using a Web Browser.....	36
4.2	Monitoring Screens.....	37
4.2.1	General Info	37
	System.....	37
	Management Port	37
4.2.2	Status	38
	Wireless Status.....	38
	Interface.....	40
4.2.3	SS Info.....	42
	SS Information.....	42
	SF Info	43
4.2.4	Event Log	44
4.2.5	Auto Refresh.....	45
4.3	Creating Service Flows - Overview	46
4.3.1	Subscribers.....	47
4.3.2	Service Classes	49
	Service Class Configuration Screen.....	49
4.3.3	Service Flows	52
4.3.4	Classifiers	55
	Classifier Configuration Screen	57
4.3.5	Manage -- Save Provisioning Information	60
	Save Provisioning Configuration	60

	Clear Provisioning Configuration	60
4.4	Interface Configuration	61
4.4.1	Wireless Interface	61
	RF Parameters	61
	PHY Parameters.....	63
	MAC Parameters	63
4.4.2	Ethernet Interface	65
4.4.3	Management Interface.....	67
	IP Parameters.....	67
	DHCP Relay Agent Parameters	68
	VLAN Management	68
4.5	Admin Tools.....	69
4.5.1	Advanced Config	69
4.5.2	Software Upgrade.....	72
	Upgrading Software.....	72
	Active SW Selection	72
	Before Beginning the Upgrade	72
	Upgrade Base Station	73
4.5.3	Backup and Restore	74
	Backup and Restore Configuration.....	74
	Before Beginning a Backup	74
	Backup Base Station Settings	75
	Restore Base Station Settings.....	75
4.5.4	System Account Management.....	76
5	CLI Interface.....	78
5.1	Connecting via Telnet.....	78
	Telnet Logout.....	78
5.2	CLI Commands.....	78
5.2.1	Common Controls.....	79
5.2.2	debug.....	80
5.2.3	interfaces	81
5.2.4	ipAddress.....	83
5.2.5	monitor.....	84
5.2.6	reboot	84
5.2.7	set.....	84
5.2.8	show	85
5.2.9	softwareConfig.....	87
5.2.10	softwareUpgrade	87
5.2.11	user.....	87
5.2.12	wmanIfBs	88
5.2.13	x509.....	89
6	Operational Notes.....	90
6.1	Self-Provisioning Features	90
6.1.1	Default Service Flows.....	90
6.1.2	Pass-All Classifier.....	90
6.1.3	Automatic UL Filtering	90
6.1.4	Host Learning	90

6.1.5	Intra-Sector L2 Forwarding (iSL2F)	90
6.1.6	DHCP Option 82	92
6.2	Privacy Layer -- Encryption	92
6.2.1	Overview	92
	Authentication Using Digital Certificates	93
6.2.2	Configuring Privacy	93
	X509 Root CA Certificates	93
	Base Station Privacy Settings	93
	Subscriber Modem Privacy Settings	94
6.2.3	Add x509 Certificates to the Base Station	94
6.3	Co-Channel Operation	95
6.4	Interference Issues	96
6.4.1	Multipath Interference	96
6.4.2	Calculating Receive Sensitivity (WiMAX Testing)	97
	Overview	97
	Sample Test for Subscriber Receive Sensitivity	97
6.4.3	General Interference	98
7	Troubleshooting	99
7.1	Secondary Management Connection (SMC)	99
7.2	Factory Default Settings	99
7.3	Front Panel Diagnostics	100
7.3.1	System LEDs	100
7.3.2	Console Port	100
7.3.3	System Reset Switch	100
7.4	Detecting Channel Interference at Startup	100
7.5	Recovering a Lost IP address	101
7.6	Troubleshooting the Web Interface	101
7.7	Re-Ranging Log Message	101
7.8	Replacing the System Fuse	102
7.9	RF Troubleshooting	103
7.10	Debug Mode	103
7.11	System Log Messages	104
8	Appendices	109
8.1	System Technical Specifications	109
8.2	Radio Types	111
8.3	Receive Sensitivity	111
8.4	Throughput to Distance	112
8.5	FCC: Antenna/Tx Power Setting Combinations	112
8.6	RPS (RedMAX Redundant Power Supply)	113
8.6.1	RPS LEDs	113
8.6.2	Serial/Mgt Port	114
8.6.3	RS-485/Bus Port	114
8.6.4	RJ-45 Port	114
8.6.5	Power Supply Input	114
8.6.6	RPS Power Output Connector	115
8.6.7	RPS Specifications	115
8.6.8	Log Messages	115

8.7	Glossary	116
-----	----------------	-----

LIST OF TABLES

Table 1:	Notices - IC RF Recommended Safe Separation Distances.....	10
Table 2:	Notices - R&TTE Community Language CE Declarations	13
Table 3:	Notices - R&TTE: Countries of Use (3.4 GHz & 3.6 GHz)	14
Table 4:	Notices - Canada: Approved Antennas	15
Table 5:	System - AN-100U Power Supply Options.....	26
Table 6:	System - AN-100UX Power Supply Options	26
Table 7:	System - AN-100U IF Cable Voltage.....	27
Table 8:	System - Wireless Link LED Indications.....	27
Table 9:	System - Wireless Signal LED Indications	28
Table 10:	System - Ethernet Data Port Link/Act LEDs.....	28
Table 11:	System - Ethernet Data Port 100 LEDs.....	28
Table 12:	System - Ethernet Data Port FD/Col LEDs	29
Table 13:	System - Ethernet Mgt Port Link LEDs.....	29
Table 14:	System - Ethernet Mgt Port Act LEDs	29
Table 15:	System - Pwr LED Indications.....	30
Table 16:	System - Fault LED Indications	30
Table 17:	System - Front Panel Reset Switch.....	30
Table 18:	System - Console Port Default Settings	31
Table 19:	System - Console Port (RS-232) Pinout.....	31
Table 20:	System - Base Station Screens and Access Control	35
Table 21:	System - Default Service Flow Throughput.....	52
Table 22:	System - Generic Classifier Functions	55
Table 23:	System - Tx Power Settings (dBm)	62
Table 24:	System - Wireless Channel Reference RSSI	62
Table 25:	System - Wireless Channel Selection	63
Table 26:	System - Wireless - Adaptive Modulation Threshold Settings.....	70
Table 27:	CLI - Command Summary.....	79
Table 28:	CLI - Root Mode Commands.....	79
Table 29:	CLI - Interface Command	80
Table 30:	CLI - Interfaces Command	81
Table 31:	CLI - IP Address Command	83
Table 32:	CLI - Monitor Command	84
Table 33:	CLI - Reboot Command	84
Table 34:	CLI - Set Command.....	84
Table 35:	CLI - Show Command	85
Table 36:	CLI - Software Upgrade Command.....	87
Table 37:	CLI - Software Upgrade Command	87
Table 38:	CLI - User Command	87
Table 39:	CLI - WmanIfBs Command.....	88
Table 40:	CLI - x509 Command	89
Table 41:	Op. Notes - Co-channel C/I dB Measured Results	95
Table 42:	Op Notes: Receive Sensitivity Tests (95% Confidence)	98
Table 43:	Troubleshooting - Factory Default Settings	99
Table 44:	Troubleshooting - Web Interface Diagnostics	101

Table 45: Troubleshooting - Fuse Ratings	102
Table 46: Troubleshooting - RF Error Diagnostics	103
Table 47: Troubleshooting - Event Log Messages	104
Table 48: Specs - RedMAX Base Station	109
Table 49: Specs - AN-100U Radios	111
Table 50: Specs - AN-100UX High-Power Radios	111
Table 51: Specs - Base Station Receive Sensitivity.....	111
Table 52: Specs - Expected Throughput Decrease Over Distance (Kb/s)	112
Table 53: Specs - FCC: Antenna/Tx Power Setting Combinations	112
Table 54: Specs - RedMAX Redundant PS (RPS) Status LEDs.....	113
Table 55: Specs - RedMAX Redundant PS (RPS) Power Output LEDs.....	113
Table 56: Specs - Console Port Default Settings	114
Table 57: Specs - RedMAX Redundant PS (RPS) Power Input	114
Table 58: Specs - RedMAX Redundant PS (RPS) Power Output Pinout	115
Table 59: Specs - RedMAX RPM Power Block.....	115
Table 60: Specs - RPS Event Log Messages	115

LIST OF FIGURES

Figure 1: Notices - WEEE Logo	16
Figure 2: Intro - AN-100U Base Station, Radio, and Antenna.....	17
Figure 3: Intro - AN-100UX Base Station, High Power Radio, and Antenna.....	17
Figure 4: System - PTP Line of Sight Deployment.....	19
Figure 5: System - Fresnel Zone.....	20
Figure 6: System - Non-Line of Sight Deployment	21
Figure 7: System - AN-100U Front Panel.....	24
Figure 8: System - AN-100UX Front Panel	25
Figure 9: System - AN-100UX Front Panel Power (AC Version)	26
Figure 10: System - AN-100U/UX Front Panel Wireless Section.....	27
Figure 11: System - AN-100U/UX Front Panel Ethernet LEDs and Ports.....	28
Figure 12: System - AN-100U/UX System LEDs and Reset Switch	29
Figure 13: System - TB Transceiver with Antenna.....	31
Figure 14: System - HTB High-Power Transceiver with Antenna	32
Figure 15: Web: Base Station System Menu	34
Figure 16: Web: Access - Browser Address Field.....	36
Figure 17: Web: Access - Base Station Login Screen	36
Figure 18: Web: Monitoring - General Information Screen.....	37
Figure 19: Web: Monitoring - Status - Wireless Status Screen	38
Figure 20: Web: Monitoring - Status - Wireless Statistics Screen	40
Figure 21: Web: Monitoring - SS Info Screen.....	42
Figure 22: Web: Monitoring - SS Info - SF Info Screen.....	43
Figure 23: Web: Monitoring - Event Log Screen	44
Figure 24: Web: Monitoring - Auto Refresh Screen	45
Figure 25: Configuration - Subscribers Configuration Screen.....	47
Figure 26: Configuration - Service Class Screen	49
Figure 27: Configuration - Service Flow Screen.....	52
Figure 28: Configuration - Classifier Screen	57
Figure 29: Configuration - Save SF Configuration Screen	60

Figure 30: Web: Configuration - Wireless Interface Screen	61
Figure 31: Web: Configuration - Ethernet Interface Screen	65
Figure 32: Web: Configuration - Management Interface Screen	67
Figure 33: Web: Admin Tools - Advanced Configuration Screen	69
Figure 34: Web: Admin Tools - Advanced Config - Burst Profile Settings	70
Figure 35: Web: Admin Tools - Software Upgrade Screen	72
Figure 36: Web: Admin Tools - Configuration Backup and Restore Screen	74
Figure 37: Web: Admin Tools - System Password Screen	76
Figure 38: CLI - Connecting via Telnet.....	78
Figure 39: Op Notes - Intra-Sector Layer 2 Forwarding -- External Mode	91
Figure 40: Op Notes - Intra-Sector Layer 2 Forwarding -- Internal Mode.....	92
Figure 41: Op Notes: OFDM Multiple Carriers	96
Figure 42: Diagnostics: Base Station Front Panel View.....	100
Figure 43: Diagnostics: Base Station Power Supply Fuse Holder	102
Figure 44: Specs: RPS (Redundant Power Supply) Front Panel	113
Figure 45: Specs: RPS (Redundant Power Supply) Serial Monitor Screen	114

1

1 Important Safety & Service Notices

1.1 Important Warning Symbols

The following symbols may be encountered during installation or troubleshooting. These warning symbols mean danger. Bodily injury may result if you are not aware of the safety hazards involved in working with electrical equipment and radio transmitters. Familiarize yourself with standard safety practices before continuing.



Electro-Magnetic Radiation



High Voltage

1.2 IC RF Exposure Warnings



To satisfy IC RF exposure requirements for RF transmitting devices, the following distances should be maintained between the antenna of this device and persons during device operation:

Table 1: Notices - IC RF Recommended Safe Separation Distances	
Equipment	Separation Distance
AN-100U	50 (~ 20 in) or more
AN-100UX	135 cm (~ 53 in) or more

To ensure compliance, operation at closer than these distances is not recommended. The antenna used for this transmitter must not be collocated in conjunction with any other antenna or transmitter.

1.3 Safety Warnings

1. Read the User Manual and follow all operating and safety instructions.
2. Installation of the antenna and modem must be contracted to a professional installer.
3. This equipments must be installed in compliance with relevant articles in National Electric Code-NEC (and equiv. Canadian Electrical Code CEC) including chapter 8.
4. The system must be properly grounded to protect against power surges and accumulated static electricity. It is the user's responsibility to install this device in accordance with the local electrical codes: correct installation procedures for grounding of the modem, mast, lead-in wire and line protection, location of line protection, size of grounding conductors and connection requirements for grounding electrodes.
5. The outdoor radio modem units must not be located near power lines or other electrical power circuits.
6. The indoor unit DC input source must be an isolated secondary DC SELV supply (60V DC max).
7. The indoor unit is supplied with a grounding power plug. Do not defeat this important safety feature.
8. The indoor unit power requirements are indicated on the product-marking label. Do not exceed the described limits and do not overload wall outlets.
9. Position the indoor unit power cord to avoid possible damage.
10. Indoor unit DC power supply connection warning:


DC Power Supply Connections: <i>Warning to Service Personnel</i>	
Caution for all AC and DC models:	Double pole/neutral fusing.
Caution for all DC models:	Units are <u>not</u> equipped with power switches and activate <u>immediately</u> when connected to a power source.

11. IF cable connection caution:

IF Cable Connection: Caution to Service Personnel
<p>Connecting or disconnecting the IF cable connector when the base station is powered-on may damage the base station equipment.</p> <p>The base station provides DC power to the outdoor modem through the IF cable. Installers must ensure that the base station indoor equipment is completely powered off before connecting or disconnecting the IF cable at the modem or indoor equipment. Technical service personnel must employ the same cautions when bench-testing equipment prior to field deployment.</p>

12. Do not place the indoor product on or near a direct heat source, and avoid placing objects on the indoor equipment.
13. Do not operate the indoor device near water or in a wet location.
14. Use only a damp cloth for cleaning the indoor device. Do not use liquid or aerosol cleaners. Disconnect the power before cleaning.
15. Locate the indoor equipment on a stable horizontal surface or securely mounted in a 19-inch rack.
16. Protect the system by disconnecting the power if it is not used for long periods.
17. Keep all product information for future reference.

1.4 FCC Notice

1. The Model AN-100U / AN-100UX and its antenna must be professionally installed.
2.  WARNING -- FCC RF Exposure Warnings
3. To satisfy FCC RF exposure requirements for RF transmitting devices, a minimum distance of 20 cm should be maintained between the antenna of this device and persons during device operation. To ensure compliance, operation at closer than this distance is not recommended. The antenna used for this transmitter must not be collocated in conjunction with any other antenna or transmitter.
4. Operation is restricted to the 25 MHz band 3.650-3.675 GHz (restricted contention based protocol for WiMAX devices).
5. FCC Information to Users @ FCC 15.21 & 15.105:
This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.
6. Warning: Changes or modifications not expressly approved by Redline Communications could void the user's authority to operate the equipment.
Refer to section 8 for a list of certified antennas.

1.5 Frequency Selection

1.5.1 General

Operation in the FWA band is subject to license. The radio power and channel frequency selections must be set correctly before the installed system is allowed to transmit. The installed system must comply with all governing local, regional, and national regulations. Contact authorities in the country of installation for complete information regarding the licensing regime and operating restrictions for that regulatory domain.

1.5.2 R&TTE Directive 1999/5/EC Statements

Installation

The modem and antenna equipment must be installed by a qualified professional installer and must be installed in compliance with regional, national, and local regulations. It is the responsibility of the system installer and/or system operator to ensure the installed system does not exceed any operational constraints identified by local regulations. Refer to the product User Guide and Installation Guidelines document for detailed information covering the correct steps to ensure power and frequency settings are set correctly before connecting the antenna. Operation in the 3.4-3.6 GHz band is subject to license. Authorities within the country of installation can provide information regarding the licensing regime and restrictions.

Community Language Declarations

The following table contains community language versions of informal statement in accordance with Article 6.3 of Directive 1999/5/EC.

Table 2: Notices - R&TTE Community Language CE Declarations	
Danish	Undertegnede Redline Communications erklærer herved, at følgende udstyr RedMAX Base Station (model AN-100U/AN-100UX) overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Dutch	Hierbij verklaart Redline Communications dat het toestel RedMAX Base Station (model AN-100U/AN-100UX) in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
	Bij deze verklaart Redline Communications dat deze RedMAX Base Station (model AN-100U/AN-100UX) voldoet aan de essentiële eisen en aan de overige relevante bepalingen van Richtlijn 1999/5/EC.
English	Hereby, Redline Communications, declares that this RedMAX Base Station (model AN-100U/AN-100UX) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Finnish	Redline Communications vakuuttaa täten että RedMAX Base Station (model AN-100U/AN-100UX) tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
French	Par la présente Redline Communications déclare que l'appareil RedMAX Base Station (model AN-100U/AN-100UX) est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
	Par la présente, Redline Communications déclare que ce RedMAX Base Station (model AN-100U/AN-100UX) est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.
German	Hiermit erklärt Redline Communications, dass sich <i>dieser/diese/dieses</i> RedMAX Base Station (model AN-100U/AN-100UX) in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet". (BMWi)
	Hiermit erklärt Redline Communications die Übereinstimmung des Gerätes RedMAX Base Station (model AN-100U/AN-100UX) mit den grundlegenden Anforderungen und den anderen relevanten Festlegungen der Richtlinie 1999/5/EG. (Wien)
Greek	<i>ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Redline Communications ΔΗΛΩΝΕΙ ΟΤΙ RedMAX Base Station (model AN-100U/AN-100UX) ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.</i>
Italian	Con la presente Redline Communications dichiara che questo RedMAX Base Station (model AN-100U/AN-100UX) è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Portuguese	Redline Communications declara que este RedMAX Base Station (model AN-100U/AN-100UX) está conforme com os requisitos essenciais e outras provisões da Directiva 1999/5/CE.
Spanish	Por medio de la presente Redline Communications declara que el RedMAX Base Station (model AN-100U/AN-100UX) cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
Swedish	Härmed intyggar Redline Communications att denna RedMAX Base Station (model AN-100U/AN-100UX) står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

Table 3: Notices - R&TTE: Countries of Use (3.4 GHz & 3.6 GHz)					
Country	3400-3600 MHz	Country	3400-3600 MHz	Country	3400-3600 MHz
Austria	✓	Hungary	✓	Poland	✓
Belgium	✓	Iceland	✓	Portugal	✓
Bulgaria	✓	Ireland	✓	Romania	✓
Cyprus		Italy		Slovakia	✓
Czech Republic	✓	Latvia	✓	Slovenia	✓
Denmark	✓	Liechtenstein	✓	Spain	✓
Estonia	✓	Lithuania	✓	Sweden	✓
Finland	✓	Luxembourg	✓	Switzerland	✓
France	✓	Malta	✓	United Kingdom	✓
Germany	✓	Netherlands	✓		
Greece	✓	Norway	✓		

R&TTE Directive 1999/5/EC - Declarations of conformity are available at the following web site address:

<http://www.redlinecommunications.com/conformance/>

1.6 Information For Use In Canada

Usage of this base station is subject to license within Canada. More information regarding licensing requirements is available from Industry Canada (www.ic.gc.ca). This device has been designed to operate with the antennas listed below, and having a maximum gain of 17.5 dBi. Antennas having a gain greater than 17.5 dBi are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

Table 4: Notices - Canada: Approved Antennas	
A11360EAO	Omni Antenna: 360 degree, 11 dBi.
PA14120EAS	Sector Antenna: 120 degree, 14 dBi sector antenna flat panel, vertical polarization.
PA14120EASH	Sector Antenna: 120 degree, 14 dBi sector antenna flat panel, horizontal polarization.
PA1590EASH	Sector Antenna: 90 degree, 15 dBi High performance sector antenna, horizontal polarization offers improved cross polarization and F/B performance.
PA1660EAS	Sector Antenna: 60 degree, 16 dBi High performance sector antenna, vertical polarization, offers improved cross polarization and F/B performance.
PA1660EASH	Sector Antenna: 60 degree, 16 dBi High performance sector antenna, horizontal polarization, offers improved cross polarization and F/B performance.
PA1690EAS	Sector Antenna: 90 degree, 16 dBi High performance sector antenna, vertical polarization, offers improved cross polarization and F/B performance.

1.7 Important Service Information

1. Refer all repairs to qualified service personnel. Removing the covers or modifying any part of this device, as this voids the warranty.
2. Locate and record the serial number of the base station indoor equipment, antenna, and modem for future reference. Record the MAC address of the indoor equipment.
3. Redline does not endorse or support the use of outdoor cable assemblies: i) not supplied by Redline, ii) third-party products that do not meet Redline's cable and connector assembly specifications, or iii) cables not installed and weatherproofed as specified in this manual. Refer to the Redline Limited Standard Warranty and RedCare service agreements.
4. Disconnect the power to this product and return it for service if the following conditions apply:
 - The base station equipment does not function after following the operating instructions outlined in this manual.
 - Liquid has been spilled, a foreign object is inside, or the indoor equipment has been exposed to rain.

The equipment has been dropped or the housing is damaged.

1.8 WEEE Product Return Process



Figure 1: Notices - WEEE Logo

In accordance with the WEEE (Waste from Electrical and Electronic Equipment) directive, 2002/96/EC, Redline Communications equipment is marked with the logo shown above. The WEEE directive seeks to increase recycling and re-use of electrical and electronic equipment. This symbol indicates that this product should not be disposed of as part of the local municipal waste program. Contact your local sales representative for additional information.

2 RedMAX Base Station Overview

Congratulations on your purchase of the Redline Communications model Access Node-100U/UX wireless broadband base station single sector base station. Redline Communications is a world leader in design and production of Broadband Fixed Wireless (BFW) systems.

2.1 Introduction

The base station is a carrier class IEEE 802.16-2004 compliant wireless device for deployment of point-to-multipoint (PMP) and point-to-point (PTP) systems.



Figure 2: Intro - AN-100U Base Station, Radio, and Antenna



Figure 3: Intro - AN-100UX Base Station, High Power Radio, and Antenna

The base station consists of an indoor unit (IDU) and outdoor modem and antenna (ODU). Each operational RedMAX wireless broadband network segment is comprised of a RedMAX base station and one or more WiMAX Forum Certified subscribers. Each subscriber registers and establishes a bi-directional data link with the base station.

The RedMAX base station is (part of) the 802.16 definition of a base station. A RedMAX base station functions as a central hub or concentrator, connected to a WAN network access point, and managing wireless links for remote subscribers. The RedMAX base station enforces the Quality of Service (QoS) settings by controlling all uplink and

downlink traffic scheduling -- providing non-contention based traffic with predictable transmission characteristics.

2.2 IEEE 802.16 / WiMAX Compliance

The IEEE 802.16-2004 specifications describe a PMP broadband wireless access standard for systems operating in the frequency range of 2-11 GHz, and 10-66 GHz. This standard includes descriptions for both the Media Access Control (MAC) and the physical (PHY) layers.

The RedMAX base station is compliant to the following IEEE 802.16-2004 WirelessMAN-OFDM and WirelessHUMAN-OFDM Physical Layer Profiles:

- ProfP3_3.5: WirelessMAN-OFDM PHY profile for 3.5 MHz channelization (Rel. 1.0)
- ProfP3_7: WirelessMAN-OFDM PHY profile for 7 MHz channelization (Rel. 1.1)

Note that the 802.16 standards are subject to amendment, and RedMAX product design compliance applies to a specific revision of the standard. The RedMAX product does not support mesh communication, but does support subscriber-to-subscriber communication using TLS.

Redline is an active member of the IEEE 802.16 standards committee and has been instrumental in creating the original 802.16 standards. Redline is also active in recommending, writing and following-up on new amendments to the 802.16 specifications.

Redline is an active member of the WiMAX Forum™ and is participating in interoperability testing in the WiMAX Forum.

2.3 PHY Specification

The base station is designed for 2-11 GHz operation based on the WirelessMAN-OFDM PHY definition in the IEEE 802.16 specification. Refer to the system specifications for supported frequency ranges.

2.4 OFDM (256 FFT)

The base station uses Orthogonal Frequency Division Multiplexing (OFDM). OFDM is a multi-carrier transmission technique where the data stream is split and transmitted (at a reduced rate) in parallel streams on separate sub-carriers. OFDM uses the Fast Fourier Transform (FFT) algorithm to implement modulation and demodulation functions. Using adequate channel coding and bit-interleaving, OFDM can perform very well in severe multipath environments, mitigate frequency selective fading and provide high spectral efficiency.

2.5 Features

2.5.1 Privacy

The base station is hardware ready to provide encryption for user traffic. The MAC header of 802.16 contains the information Encryption Control (EC), Encryption Key sequence (EKS), and Connection Identifier (CID) necessary to decrypt a payload by the receiver. Protection of the payload is indicated by the EC bit field. A value of '1' indicates the payload is cryptographically protected and the EKS field contains meaningful data. A value of '0' indicates the payload is not cryptographically protected. The EKS field contains a sequence number used to identify the current generation of keying material.

2.5.2 Time Division Duplexing (TDD)

The base station system uses time division duplexing (TDD) to transmit and receive on the same RF channel, or using separate RF channels using half-duplex FDD (HD-FDD) mode (AN-100U only). These are both non-contention based methods for providing an efficient and predictable two-way PTP or PMP cell deployment. All uplink and downlink transmission scheduling is managed by the base station. The base station sends data traffic to subscribers, polls for grant requests, and sends grant acknowledgements based on the total of all traffic to all subscribers.

2.5.3 Coding Rate

Each burst of data transmitted over the wireless interface is padded with redundant information, making it more resistant to potential over-the-air errors. The coding rate is the ratio of user data to the total data transmitted including the redundant error correction data. The base station supports coding rates of 1/2, 2/3, and 3/4.

2.5.4 Modulation

The modulation technique specifies how the data is coded within the OFDM carriers. The base station supports BPSK, QPSK, 16 Quadrature Amplitude Modulation (QAM), and 64 QAM modulation.

2.5.5 Reed Solomon Error Correction

Outer Reed-Solomon and inward Convolution Coding (RS-CC) error correction is enabled for all traffic rates, with the exception of BPSK 1/2 where only inward Convolution Coding is used. These low-level processes can correct bursts of errors in received messages and reduce the number of retransmissions.

2.5.6 Time Synchronization

When operating two or more collocated base stations, transmitter operations MUST be synchronization to minimize inter-sector interference. Each base station has a synchronization port located on the front panel to receive synchronization pulses.

2.6 Deployment Models

The base station supports point to point (PTP) and point to multipoint (PMP) deployment scenarios.



Figure 4: System - PTP Line of Sight Deployment

2.6.1 PTP Deployment

When deployed in a PTP configuration the base station establishes a dedicated bi-directional link to a single subscriber. The PTP deployments typically use a directional narrow beam antenna for both ends of the link.

2.6.2 PMP Deployment

When deployed in a PMP configuration the base station establishes bi-directional links to more than one subscriber. PMP deployments typically use a wide beam (sector) antenna at the base station and a narrow beam antenna at the subscriber. Service flows are used to police service level agreements for each subscriber.

2.6.3 Channelization

The base station is a frequency-specific system, with the frequency band defined by the modem. The use of the operating band must be in accordance with European Conference of Postal and Telecommunications Administrations (CEPT) Recommendation 14-03.

The base station divides the available frequency band into channels. Allocation of channels during deployment is dependent on spectrum availability in the licensed FWA band and local licensing requirements and conditions. Channel selection allows planners to obtain the maximum geographic coverage, while avoiding frequency contention in adjacent sectors.

2.6.4 Non Line-of-Sight

The RedMAX system supports line-of-sight (LOS), optical line-of-sight (OLOS), and non line-of-sight (NLOS) operation. A clear LOS link has no obstacles within 60% of the first Fresnel zone of the direct path. An OLOS link has obstructions within 60% of the first Fresnel zone, but a visible path exists between the base station and subscriber. Refer to the following illustration.

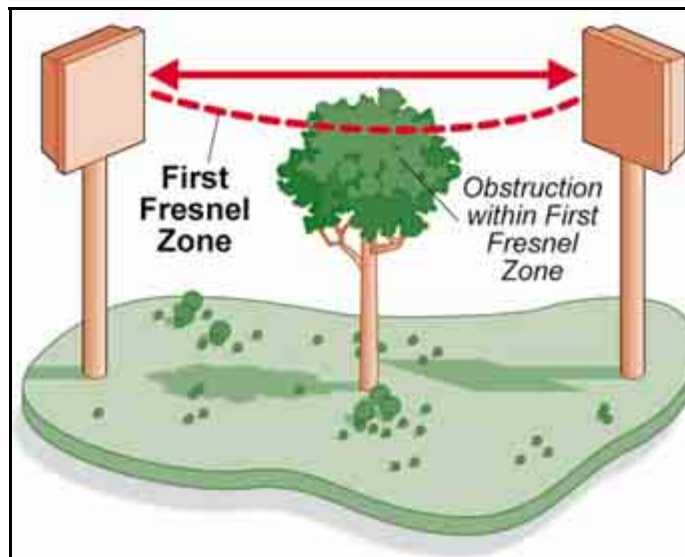


Figure 5: System - Fresnel Zone

A wireless link is considered non LOS if natural or man-made structures block the visible path between the base station and the subscriber. In this case, a wireless link can be established only if a reflective path can be established between the base station and subscriber.

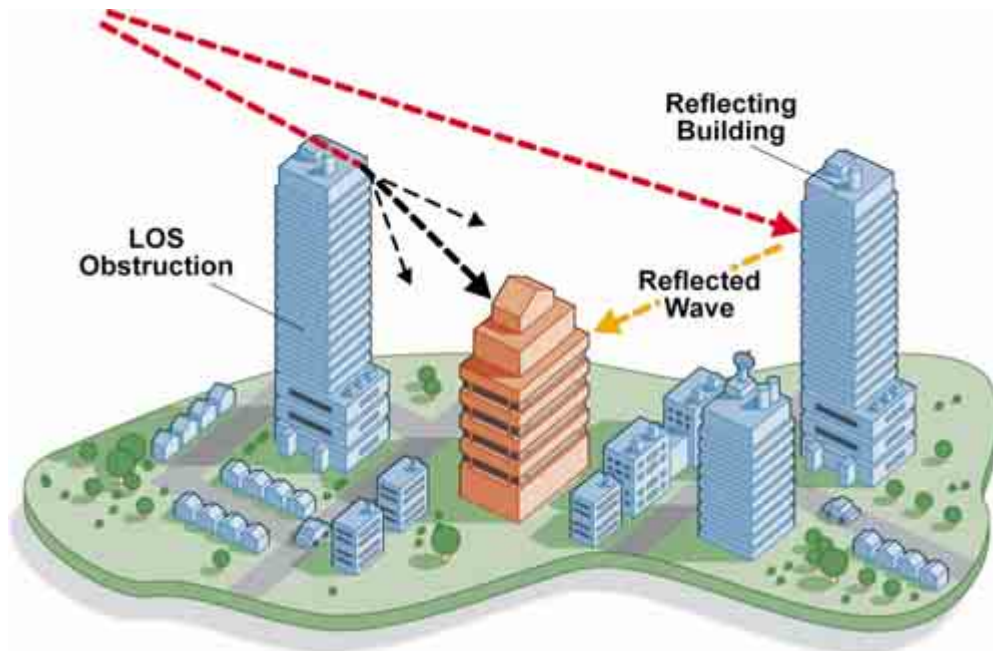


Figure 6: System - Non-Line of Sight Deployment

2.7 Service Flows

Service flows are a key feature of the 802.16 standard. A service flow represents a unidirectional data flow. Transmitting bidirectional traffic requires that two service flows be defined: one for the uplink, and another for the downlink. Each service flow can be assigned a unique QoS settings.

The base station allows multiple service flows to be configured for each subscriber in a sector. This allows service providers to offer different services, and segregate traffic flows having different QoS requirements.

A service flow is partially characterized by the following attributes:

1. A 32-bit Service Flow ID (SFID) is assigned to all existing service flows. The SFID serves as the principal identifier for the Service Flow and has an associated direction.
2. A 16-bit Connection ID (CID) is associated with each active SFID (connection active).
3. A set of QoS parameters specifying the required resources. The principal resource is bandwidth, but the specification may also include latency requirements.
4. A set of QoS parameters defining the level of service being provided.

2.7.1 Service Flow Classification

Data packets are forwarded by the subscriber based on classification rules. Classification rules require examining each packet for pattern matches such as

destination address, source address, or VLAN tag. All classification is defined at the base station and the classification parameters are downloaded to the subscriber.

RedMAX supports service flows with different classification types including: 802.3 Ethernet, 802.1Q VLAN, IPV4, IPV4 Over 802.3 and IPV4 Over 802.1Q -- with options to classify based on Source and Dest of MAC and IP addresses, VLAN tag and Vlan priority, Src and Dst port number, TOS Value and Ethernet protocol type.

2.7.2 Dynamic Service Addition

Service flows are defined and stored in the base station. For each service flow to be established, the base station sends a setup message to the subscriber specifying the required set of QoS parameters. The subscriber responds to each request by accepting or rejecting the setup message.

A service flow may be pre-provisioned or can be dynamically created and deleted without service outage. This is useful for supporting multiple subscribers in a single sector. New subscribers can be added and existing subscribers can be removed or have service levels modified.

Setup messages are sent by the base station following any subscriber power-cycle, loss and recovery of the wireless link to a subscriber, or any service flow add/delete operation at the base station.

2.7.3 Default Service Flows

Default UL/DL service flows are created automatically for each registered subscriber. These service flows are used to pass all traffic not matching any user-defined service flow (such as broadcast ARP) between the base station and subscribers. The default service flow bandwidth is limited for each subscriber. Refer to Default UL/DL Service Flows on 52, Default Service Flows on page 90, and interfaces on page 81.

2.7.4 Scheduling

The base station enforces QoS settings for each service flow by controlling all uplink and downlink traffic scheduling. This provides non-contention based traffic model with predictable transmission characteristics. By analyzing the total of requests of all subscribers, the base station ensures that uplink and downlink traffic conforms with the current service level agreements (SLAs). Centralized scheduling increases predictability of traffic, eliminates contention, and provides the maximum opportunity for reducing overhead.

A regular period is scheduled for subscribers to register with the base station. These subscribers may be newly commissioned or have been deregistered due to service outage or interference on the wireless interface. This is the only opportunity for multiple subscribers to transmit simultaneously.

Real-Time Polling Service (rt-PS)

The base station schedules a continuous regular series of transmit opportunities for the subscriber to send variable size data packets. The grant size is based on the current data transfer requirement. Typical applications include streaming MPEG video or VOIP with silence suppression. This is efficient for applications that have a real-time component and continuously changing bandwidth requirements.

Non-Real-Time Polling Service (nrt-PS)

The base station schedules regular transmit opportunities for the subscriber to send variable size data packets. Typical applications may include high bandwidth FTP. The

polling period may typically be one second or less, even during periods of network congestion.

Best Effort (BE)

The base station schedules transmit opportunities for the subscriber to send traffic based on unused bandwidth after all higher level traffic scheduling requirements are serviced. Typical applications may include Internet access and email. Best effort service flows can be assigned a priority of 0 to 7.

Unsolicited Grant Service (UGS)

The base station schedules a continuous series of transmit opportunities for the subscriber to send fixed size data packets. This schedule supports real-time applications including VoIP or TDM transport. The UGS pre-scheduled grants guarantee reserved bandwidth and reduce latency introduced by repetitive grant requests. The service flow will not transmit packets larger than nominal grant interval.

Traffic Scheduling Algorithm

The base station scheduling algorithm uses two scheduling passes. On the first pass, the scheduler attempts to allocate bandwidth to meet the minimum rates for all active service flows. If there is available bandwidth remaining at the end of the first pass, the scheduler executes a second pass and attempts meet all specified maximum rates. During both passes, bandwidth allocations are assigned based on the following order of assessment:

1. Priority of the scheduling service type, from highest to lowest (rtPS first, and then BE).
2. Traffic Priority setting when multiple service flows have the same service type.

Wireless transmission bandwidth is optimized by granting allocations based only on traffic available for immediate transmission: only the required bandwidth is allocated, and idle service flow channels do not receive any bandwidth allocation.

3 Physical Description

3.1 Base Station Indoor Unit (IDU)

This section describes the characteristics of the base station. All indicator LEDs, power receptacles, data ports, and the reset switch are located on the front panel. A ground terminal is located at the rear of the base station.

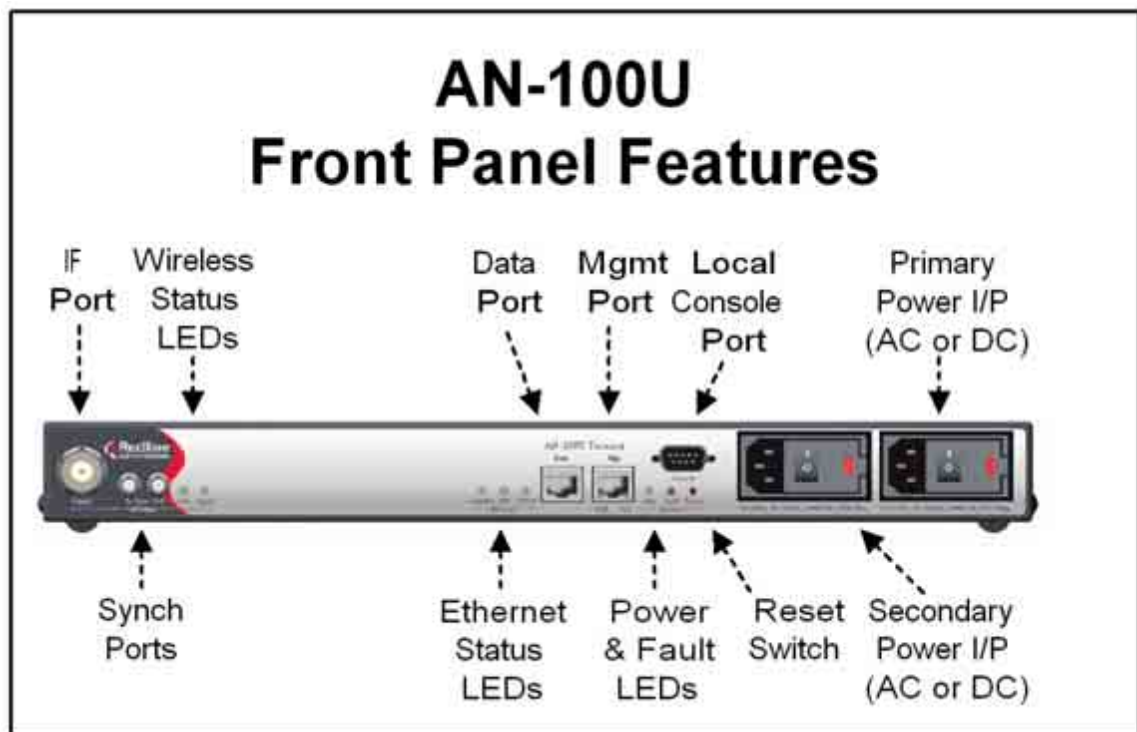


Figure 7: System - AN-100U Front Panel

Important Information

AC & DC Power Options

The AC and DC power input options are different for the AN-100U and the AN-100UX. Review the documentation carefully before connecting power.

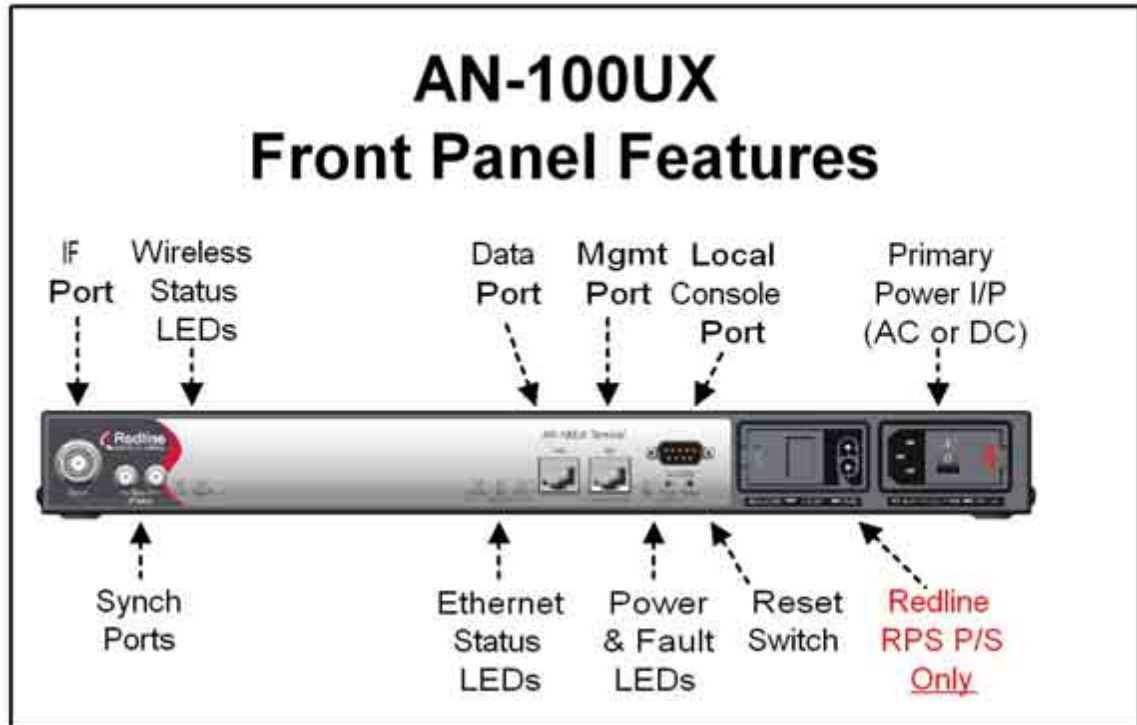


Figure 8: System - AN-100UX Front Panel

3.1.1 Mounting

The indoor equipment can be freestanding on a flat surface or in a 19-inch rack.

3.1.2 Power Supply

The AN-100U and AN-100UX (high power) equipment have different power supply features. Read the following section carefully to determine the correct power requirements and options. All models feature double pole/neutral fusing. Refer to the Installation Guidelines manual for additional information about DC power wiring.

Warning to service personnel:

Caution for all AC and DC models – Double Pole/Neutral fusing.

AN-100U

Power supply options include single or dual AC or DC supplies, or a combination of AC and DC power supplies. Cables are included with both AC and DC power supplies.

Table 5: System - AN-100U Power Supply Options		
AC Supply	1 or 2	Auto-sensing 90 - 264 VAC (50/60 Hz)
DC Supply	1 or 2	Auto-sensing 21 - 60 VDC

AN-100UX

AN-100UX Power supply options include single AC or DC types. Cables are included with both AC and DC power supplies.

Redundant power can be supplied only from a RedMAX RPS (Redundant Power Supply). A DC power cable is always supplied for the RedMAX RPS input.

Table 6: System - AN-100UX Power Supply Options		
AC Supply	1	Auto-sensing 100-240 VAC (50/60 Hz)
DC Supply	1	Auto-sensing 48-60 VDC Floating inputs (+Ve and -Ve not connected to chassis)
Redundant DC Supply (N+1)	1	Redline RPS <u>only</u> +48 VDC only



Figure 9: System - AN-100UX Front Panel Power (AC Version)

IMPORTANT: DC Polarity

The AN-100UX redundant power supply is DC type. The RPS power must be connected using positive polarity: the +48 VDC RPS output must be connected to +Ve input on AN-100UX. Refer to Installation Guidelines for the cable connection diagram.

3.1.3 Wireless Section

This section describes the wireless port, time synchronization ports, and wireless LEDs.



Figure 10: System - AN-100U/UX Front Panel Wireless Section

IF Port (Radio Control)

A female N-type port provides connection via a coaxial cable. This port provides the following functions:

- Local oscillator signal for synchronization between the terminal and radio
- Telemetry signals for control and monitoring the modem
- IF modulated data to/from the radio (wireless interface)
- DC power to the transceiver (see following table)

Table 7: System - AN-100U IF Cable Voltage	
AN-100U	24 VDC
AN-100UX	48 VDC

Time Synchronization Port

The synchronization interface has two SMA female connectors located on the front panel. Refer to section for additional information. When operating two or more collocated base stations (BSs), transmitter operations MUST use synchronization to minimize inter-sector interference. Refer to the RedMAX Base Station Installation Guidelines for complete details.

Wireless LEDs

Link LED

The wireless Link LED flashes once every 8 frames to provide a 'heartbeat' indicator. This indicates proper communication with the outdoor unit (ODU), and that the framer is operating correctly. If this LED is not flashing, there is no possibility of establishing a wireless link.

Table 8: System - Wireless Link LED Indications	
LED State	Description
OFF	Wireless interface unavailable.
FLASH	Wireless interface enabled and functioning correctly.

Signal LED

The Signal LED flashes each time a message is received from any subscriber. Message types include: periodic ranging messages, bandwidth requests, and user data traffic.

Table 9: System - Wireless Signal LED Indications	
LED State	Description
OFF	No wireless link activity.
ON	Messages being received from subscribers.

3.1.4 Ethernet Section

This section describes the Ethernet LEDs and port connections.



Figure 11: System - AN-100U/UX Front Panel Ethernet LEDs and Ports

Data Port

The Data port is always enabled. The port can be programmed to operate in full duplex or half duplex mode and at 10 Mbps or 100 Mbps.

Data Port LEDs

Data Port Link/Act LED

The Link/Act LED lights green when the LAN is functioning properly.

Table 10: System - Ethernet Data Port Link/Act LEDs	
LED	Description
ON	Link is present.
FLASH	Link is present and there is data activity.
OFF	Link is not active.

Data Port 100 LED

The 100 LED lights solid green when the terminal is operating at 100 Mbps. The LED is off when operating at 10 Mbps.

Table 11: System - Ethernet Data Port 100 LEDs	
LED	Description
ON	LAN is operating at 100 Mbps.
OFF	LAN is operating at 10 Mbps.

Data Port FD/Col LED

The FD/Col LED lights green when the port is operating in Full Duplex mode. The LED flashes when collisions are detected. There are always collisions occurring on a Half-Duplex link.

Table 12: System - Ethernet Data Port FD/Col LEDs	
LED	Description
ON	Full duplex operation
FLASH	Packet collisions detected on the LAN
OFF	Half Duplex operation

Mgt Port

The Mgt port is used for out-of-band management and diagnostics. This port can be enabled and disabled. The port can be programmed to operate in full duplex or half duplex mode and at 10 Mbps or 100 Mbps.

Mgt Port LEDs

Mgt Port Link (Link/Act) LED

The Mgt port Link LED lights green when a link is established.

Table 13: System - Ethernet Mgt Port Link LEDs	
LED	Description
ON	Ethernet interface is present.
FLASH	Ethernet interface is present and there is data activity.
OFF	Ethernet interface is not active.

Mgt Port Act (100) LED

The 100 LED lights solid green when the Mgt port is operating at 100 Mbps. The LED is off when operating at 10 Mbps.

Table 14: System - Ethernet Mgt Port Act LEDs	
LED	Description
ON	Ethernet interface is operating at 100 Mbps.
OFF	Ethernet interface is operating at 10 Mbps.

3.1.5 System Section

This section describes other general features of the front panel.

System LEDs

The System LEDs indicate power supply status and system faults.



Figure 12: System - AN-100U/UX System LEDs and Reset Switch

System Pwr LED

The Pwr LED lights green to indicate normal operation.

Table 15: System - Pwr LED Indications	
LED	Description
ON	Normal operation.
FLASH	Indicates an issue with the system power supplies: AN-100U: When dual power supplies are installed, and the secondary power supply is not available (failed or powered off). AN-100UX: The primary or backup (RPS) power supplies is not available (failed or powered off).
OFF	System is turned off.

System Fault LED

The Fault LED lights red when a system fault is detected.

Table 16: System - Fault LED Indications	
LED	Description
OFF	Normal operation.
FLASH	Indicates an issue with one or more of the system power supplies: AN-100U: When dual power supplies are installed, and the secondary power supply is not available (failed or powered off). AN-100UX: The primary or backup (RPS) power supply is not available (failed or powered off).
ON	Serious problem with the system hardware. Refer to the Troubleshooting section.

Reset Switch

The **Reset** switch is recessed in the front panel of the terminal. To operate the switch, use a small narrow object (i.e., bent paper clip) to depress the switch.

Table 17: System - Front Panel Reset Switch	
Operation	Result
Depress switch less than 3 seconds	Short-reset. A short-reset is equivalent to cycling the terminal power off/on. Statistics counters are reset.
Depress switch longer than 3 seconds	Long-reset. A long-reset sets the IP address and password to the factory defaults. Refer to Troubleshooting section.

3.1.6 Grounding Connection

A ground terminal is located on the rear of the terminal. Correct grounding is very important for safe operation of wireless equipment.

3.1.7 Console Port

The console port requires a crossover (null modem) cable to connect directly to a PC serial port emulating a VT-52 or VT-100 terminal. The following table lists the default settings for the Console port:

Table 18: System - Console Port Default Settings	
Baud	57,600
Data Bits	8
Flow Control	None
Parity	None
Stop Bits	1

The following table lists the Console port pinout and associated signals.

Table 19: System - Console Port (RS-232) Pinout				
Pin	Name	RS232	V.24	Description
2	RXD	BB	104	Receive Data
3	TXD	BA	103	Transmit Data
5	GND	AB	102	System Ground

Note: V.24 column is ITU-TSS V.24 circuit name.

3.2 Radio Outdoor Unit (ODU)

3.2.1 Transceiver

The radio modem is housed in a weatherproof aluminum alloy case. The modem features are listed in the following sections.

HB Radio

The TB3x3yF7 series of radios are for use only with the AN-100U. These radios operate on 24 VDC and can be mounted using the standard and heavy-duty antenna mounting brackets.



Figure 13: System - TB Transceiver with Antenna

HTB Radio

The HTB3x3yF7 high-power series of radio are for use only with the AN-100UX. These radios operate on 48 VDC and have integrated mounting brackets. The AN-100U will not recognize HTB-type radios (e.g., event log will indicate log invalid radio type).



Figure 14: System - HTB High-Power Transceiver with Antenna

IF Port

The modem has a female N-type port for connection to the terminal using a coaxial cable. Through this port and cable, the modem:

- Sends/receives IF modulated data to/from the terminal.
- Transmits status information to the terminal.
- Receives control information from the terminal.
- Receives DC power from the terminal.

RF Port

The modem RF port (female N-type connector) is used for sending/receiving the RF signal to/from the antenna. A short coaxial cable is provided to connect the modem to the antenna.

3.2.2 Antenna

The antenna RF port (female N-type connector) is for sending/receiving the RF signal to/from the modem. A short coaxial cable is provided to connect the antenna to the modem.

3.2.3 Mounting Brackets

AN-100U

A vertical-mount bracket is provided for mounting the AN-100U HB radio and flat panel type antennas. The mounting bracket can accommodate 4.45 - 11.45 cm (1 ³/₄ - 4 ¹/₂") OD masts found on many commercial tower installations. Separate mounting brackets are provided for parabolic antennas.

AN-100UX

The AN-100UX HTB antenna has an integrated mounting bracket that can accommodate 4.45 - 11.45 cm (1 ³/₄ - 4 ¹/₂") OD masts found on many commercial tower installations. A separate mounting bracket is provided for mounting the antenna.

4 Web Interface

All configuration and monitoring functions can be performed using the web-based interface described in detail in this chapter.

4.1 System Menu

When you login to the base station, the **General Information** page is displayed. A menu of all available monitoring and configuration screens is located at the left side of the screen. Point and click any of the items in the menu to display the selected screen.

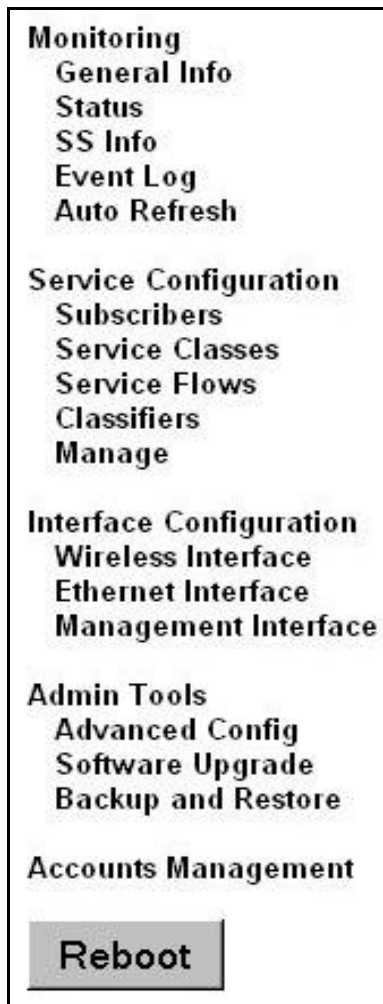


Figure 15: Web: Base Station System Menu

The debug user has unrestricted access to all screens and controls. All other users have restricted access. See the following table for details.

Table 20: System - Base Station Screens and Access Control					
Function	Screen Title	Guest Access	Admin Access	Debug Access	Description
Monitoring	General Info	X	X	X	View general system information, Ethernet settings, and wireless settings.
	Status	X	X	X	View statistics for the wireless interface, Ethernet data port, and management port.
	SS Info	X	X	X	View system information, Ethernet settings, and wireless statistics for active subscribers.
	Event Log	X	X	X	View system activity and error messages.
	Auto Refresh		X	X	Select the rate to automatically refresh the web screen.
Service Flow Configuration.	Subscribers		X	X	Summary of registered subscribers.
	Service Classes		X	X	Define the set of service classes.
	Service Flows		X	X	Define service flows based on the service classes.
	Classifiers		X	X	Define classifiers for each service flow.
	Manage		X	X	Activate service flows.
Interfaces	Wireless Interface		X	X	View and modify RF, PHY, and MAC settings for the wireless interface.
	Ethernet Interface		X	X	View and modify the Ethernet network interface settings.
	Management Interface		X	X	View and modify the IP and DHCP network interface settings.
Admin Tools	Advanced Config			X	View and modify advanced wireless interface settings.
	Software Upgrade		X	X	Upload new system software and select the software version to load at startup.
	Backup and Restore		X	X	Backup and restore configuration settings using remote FTP server.
Accounts Management			X	X	Add users & change password.
Reboot			X	X	Reboot the base station terminal.

4.1.1 Configuration Using a Web Browser

1. Set the IP address of your PC to the following settings:
 IP Address: 192.168.101.110
 Subnet mask: 255.255.255.0
2. Connect the host (laptop) computer directly to the Data port of the base station terminal using an RJ-45 Ethernet (straight-through) cable.
3. Power-on the base station terminal and restore the factory default settings by depressing the reset switch on the front panel for more than five (5) seconds.
4. Launch a Web Browser on the PC and enter the terminal IP address in the browser address field (192.168.101.3). The General Information screen is displayed and the operator can now login to the terminal.



Figure 16: Web: Access - Browser Address Field

Click on any configuration menu item to activate the login dialog screen.



Figure 17: Web: Access - Base Station Login Screen

Enter the default user name and password:

User Name: admin

Password: admin

4.2 Monitoring Screens

This section describes the screens displaying system information and statistics.

4.2.1 General Info

Click [General Information](#) in the system menu (left side of screen) to view general information, management settings, and the system front panel LEDs.

General Information																						
<table border="0"> <tr> <td colspan="2" style="text-align: center;">_Wireless_</td> <td colspan="3" style="text-align: center;">_Data Ethernet_</td> <td colspan="2" style="text-align: center;">_System_</td> </tr> <tr> <td style="text-align: center;">Link</td> <td style="text-align: center;">Signal</td> <td style="text-align: center;">Link</td> <td style="text-align: center;">100</td> <td style="text-align: center;">FD</td> <td style="text-align: center;">Pwr</td> <td style="text-align: center;">Fault</td> </tr> <tr> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> <td style="text-align: center;"><input checked="" type="checkbox"/></td> <td style="text-align: center;"><input type="checkbox"/></td> </tr> </table>	_Wireless_		_Data Ethernet_			_System_		Link	Signal	Link	100	FD	Pwr	Fault	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	
Wireless		_Data Ethernet_			_System_																	
Link	Signal	Link	100	FD	Pwr	Fault																
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>																
System																						
System Name	Alpha_ITC2																					
Software Version	1.2.17 Made on: Jun 22 2007, 13:16:24																					
Radio Type	TB3436F7																					
Time Since System Start	1 days 07:47:38																					
Time of Day	Wed Aug 1 16:54:08																					
Management Port																						
Ethernet MAC Address	00:09:02:00:a3:5d																					
IP Address	192.168.20.100																					
IP Subnet Mask	255.255.255.0																					
Default Gateway Address	192.168.20.250																					

Figure 18: Web: Monitoring - General Information Screen

System

System Name: Assigned name for this base station.

Software Version: Current version of software running on the base station.

Radio Type: Identifies the modem type connected to this base station. Refer to the Appendices for a list of supported radio types and designations.

Time Since System Start: Time elapsed since the base station was last rebooted.

Time of Day: Current date and time. Requires SNTP network server interface to be enabled. Refer to section 4.4.3: Management Interface on page 65.

Management Port

Ethernet MAC Address: Base Station MAC address.

IP Address: Base Station network IP address.

IP Subnet Mask: Base Station network IP subnet mask.

Default Gateway Address: IP address of the default network gateway.

4.2.2 Status

Click **Status** in the system menu (left side of screen) to view status information about the wireless interface and Ethernet management interface. Values are updated according to the screen refresh rate.

Wireless Status			
CINR [dB]	30.7	RF Tx Power [dBm]	5
Traffic Downlink [kbps]	0	Traffic Uplink [kbps]	0
BW Margin Downlink [kbps]	6134	BW Margin Uplink [kbps]	4924
CRC Errors	0	Registered SS's	1
Air Interface Status	enabled	SC Syncro Status	No Synchro
IDU Temperature [Celsius]	46	ODU Temperature [Celsius]	33
Power Supply Status	A-On	Fans Status	oneFanOn
Active DL Service Flows	0	Active UL Service Flows	1
DL SMC Rate [kbps]	0	UL SMC Rate [kbps]	0
DL Bandwidth Usage [%]	0	UL Bandwidth Usage [%]	0
Reference RSS [dBm]	-68	Noise Level [dBm]	-108.6

Figure 19: Web: Monitoring - Status - Wireless Status Screen

Wireless Status

CINR [dB]: Mean Carrier/(Interference + Noise) ratio. The CINR value is calculated and displayed for each automatic screen refresh. The CINR measured by the base station is based on the signal from the subscriber. Based on this value, the base station may request that the subscriber change modulation rate.

Traffic Downlink [kbps]: Rate of traffic transmitted to subscribers.

BW Margin Downlink [kbps]: Downlink bandwidth available that can be scheduled by the base station (based on the minimum traffic rate settings for all active service flows).

CRC Errors: Number of CRC errors detected on packets received from subscribers. This counter is reset when the base station is rebooted.

Note: The CRC Errors counter in the SS Info screen is reset when a subscriber is registered.

Air Interface Status: Status of the base station modem:

Enabled - Transceiver is operating normally.

Disabled - Transceiver is disconnected, disabled, or defective.

IDU Temperature [Celsius]: Internal temperature of the indoor terminal.

Power Supply Status: Display the status of the power circuits.

A-On - Terminal is equipped with AC circuits only.

D-On - Terminal is equipped with DC circuits only.

A-D - Terminal is equipped with AC and DC circuits.

Active DL Service Flows: Number of currently active downlink service flows.

DL SMC Rate [kbps]: Data rate for SMC channel.

DL Bandwidth Usage [%]: Current usage of downlink channel.

Reference RSS [dBm]: The Reference RSS setting is the target value for average Received Signal Strength (RSS) for subscribers RF signals received by the base station.

This target value allows automatic adjustment of the subscriber Tx power for optimum performance with the minimum of RF interference. The suggested default setting for the Reference RSS value is:

Channel Size	Initial Setting
3.5 MHz	-75 dBm
7.0 MHz	-72 dBm

These are the suggested initial settings; adjustments to this target value must be made based on the individual RF characteristics of each deployed sector. The RSSI value (dBm) for each subscriber can be monitored using the base station SS Info screen (Web interface). Tx power adjustments are based on a number of factors, and differences of up to 7 dB may be observed between the Reference RSS setting and measured RSSI.

RF Tx Power [dBm]: Radio transmission output power level.

Traffic Uplink [kbps]: Rate of traffic received from subscribers.

BW Margin Uplink [kbps]: Uplink bandwidth available that can be scheduled by the base station (based on the minimum traffic rate settings for all active service flows).

Registered SS's: Number of subscribers currently registered with the base station.

SC Synchro Status: Status of the base station time synchronization. Refer to the RedMAX Base Station Installation Guidelines for complete details of the synchronization feature.

No Synchro - Base station is not using synchronization.

Master with GPS Synchro - Base station is Master and is synchronized to an external GPS clock.

Master - Base station is Master and is using internal clock.

Slave - Base station is Slave.

Backup Master - Base station is Backup Master and will assume Master operations if Master is unavailable.

ODU Temperature [Celsius]: Internal temperature of the modem.

Fans Status: Display the status of the system cooling fans.

oneFanOn - A single cooling fan is operating.

twoFansOn - Both cooling fans are operating.

Active UL Service Flows: Number of currently active uplink service flows.

UL SMC Rate [kbps]: Data rate for uplink channel.

UL Bandwidth Usage [%]: Current usage of uplink channel.

Noise Level [dBm]: Indicates the noise level. This value is measured by sampling the radio receiver input during idle periods (base station and subscribers are not transmitting) and provides an indication of the average level of interference in the sector.

Interface

The interface panel provides statistics for the wireless interface (802.16), the data Ethernet port Data), and the management (Mgmt) Ethernet port. Select the desired interface and click **Refresh** to update the screen.

Interface			
802.3 Mgt		Clear	Refresh
Status			
Speed	100 Mbps	Operational Status	Up
Last Change	00:00:09		
Ingress			
In Octets	5557360	In Unicast Pkts	16080
In Broadcast Pkts	11788	In Multicast Pkts	5922
In Discards	0	In Errors	0
Egress			
Out Octets	7279154	Out Unicast Pkts	14776
Out Broadcast Pkts	797	Out Multicast Pkts	0
Out Discards	4	Out Errors	0

Figure 20: Web: Monitoring - Status - Wireless Statistics Screen

Interface: Click the arrow in the menu box to select the desired interface:

802.16 - Wireless interface.

802.3 Data - Data Ethernet port.

802.3 Mgmt - Management Ethernet port.

Clear: Click **Clear** to reset the 802.3 Data or 802.3 Mgmt statistics on the selected interface. Does not affect the 802.16 wireless statistics.

Refresh: Click **Refresh** after changing the selected interface type, or anytime to display the latest statistics for the selected .

Status

Speed: Current speed of the interface.

Operational Status: Display the current status of the wireless interface.

Up - Operational link to at least one subscriber.

Down - No operational links to subscribers.

Last Change: Time of the last change in the operational status or the wireless link.

Ingress

In Octets: Total number of good octets received.

In Unicast Pkts: Total number of received valid Ethernet frames with a unicast destination address.

In Not Unicast Pkts: Total number of received valid Ethernet frames with a multicast or broadcast destination address.

In Discards: Total number of valid Ethernet frames that are discarded due to lack of buffer space. This includes both frames discarded at ingress and frames discarded at egress due to priority and congestion at the output queues.

In Errors: Total number of Ethernet frames that are discarded because of invalid Frame Check Sequence (FSC).

Egress

Out Octets: Total number of good octets transmitted.

Out Unicast Pkts: Total number of frames transmitted with a unicast Destination address.

Out Not Unicast Pkts: Total number of frames transmitted with a Multicast or Broadcast Destination address.

Out Discards: Total number of valid Ethernet frames that are discarded due to lack of buffer space. This counter is always 0 (all such discards are already counted in InDiscards).

Out Errors: Total number of packets that were transmitted with an invalid FCS.

4.2.3 SS Info

Click **SS Information** in the menu (left side of screen) to view system information, Ethernet address settings, and wireless statistics for active subscribers.

Subscribers Information												
Name	IP	Mgmt	DL Mod	UL Mod	Min CINR	Max CINR	Curr CINR	UL CRC	DL CRC	RSSI	Tx Pow	Dist
UPDATA	192.168.20.18	yes	64 QAM(3/4)	64 QAM(3/4)	27.3	32.2	30.3	0	1	-56	-12	0

Figure 21: Web: Monitoring - SS Info Screen

SS Information

Name: User-assigned name for subscriber. Click on the subscriber name (blue text) to view the service flows settings and statistics.

IP: Secondary management channel (SMC) IP address for this subscriber.

Mgmt: Indicates if the subscriber can be managed over the wireless interface. Refer to the subscriber user manual for additional information about enabling remote management.

yes: The subscriber supports remote management.

no: The subscriber can not be managed remotely.

DL Mod: Modulation/coding setting for downlink channel.

UL Mod: Modulation/coding setting for uplink channel.

Min CINR: Lowest Curr CINR value reported (since last reboot).

Max CINR: Highest Curr CINR value reported (since last reboot).

Curr CINR: Current CINR value (average of samples taken during screen refresh period).

UL CRC: Total number of CRC errors detected in transmissions from this subscriber.

DL CRC: Total number of CRC errors reported in transmissions to this subscriber.

RSSI: Received signal strength indicator value measured based on the signal received from this subscriber.

Tx Pow: Transmit power of this subscriber.

Dist: Calculated distance from base station to subscriber (kilometers).

Refresh: Click to update the screen with the latest values.

SF Info

Click the subscriber name listed in the **SS Info** screen to view service flow settings and statistics.

SS (UPDATA)							
<input type="button" value="Reset"/>							
Service Flows Information							
SFID	Direction	State	Provisioned Time	CS Specification	Enable/Disable	Throughput Kbits/sec	Total Packets
14990	downstream	authorized	00:00:06	802.1Q Vlan	enabled	0	0
64425	upstream	authorized	00:00:06	802.1Q Vlan	enabled	0	0
8130	downstream	authorized	00:00:06	802.1Q Vlan	enabled	0	0
16523	upstream	authorized	00:00:06	802.1Q Vlan	enabled	0	0

Figure 22: Web: Monitoring - SS Info - SF Info Screen

SFID: Service flow identifier for this service flow.

Direction: Direction of service flow:

Downstream: Downlink traffic from base station to subscriber.

Upstream: Uplink traffic from subscriber to base station.

State: Current state of the service flow.

Active: Service flow is currently active.

Admitted: Service flow is being edited or SC is setting up the service flow.

Authorized: Service flow configuration has been saved but is not active.

Rejected: Base Station was not able to setup the service flow.

Provisioned Time: Time elapsed since this service flow became active.

CS Specification: Classification type associated with this service flow.

802.3 Ethernet: Classified using fields in the Ethernet header.

802.1Q: Classified using fields in the Ethernet header and the 802.1Q VLAN tag.

IPv4: Classified using fields in the packet IP header.

IPv4 Over 802.3 Ethernet: Classified using fields in the packet's IP header and the Ethernet header.

IPv4 Over 802.1Q: Classified using fields in the packet's IP header, the Ethernet header, and the 802.1Q VLAN tag.

Enable/Disable: Indicate the operator-selected status for this service flow:

Enabled: Service flow is enabled.

Disabled: Service flow is disabled.

Throughput Kbits/sec: Traffic throughput rate for this service flow.

Total Packets: Total packets exchanged with the subscriber (all service flows).

Reset: Click to reboot the subscriber MAC (subscriber will be deregistered).

Refresh: Click to update the screen with the latest totals.

4.2.4 Event Log

Click **Event Log** in the menu (left side of screen) to view system activity and log messages. Refer to section 7.11: System Log Messages on page 104.

Event Log	
Time	Details
Thu Apr 27 08:57:00	Service Flow Creation Success: 00:09:02:00:A1:17 , SFid 59844, Cid 400A
Thu Apr 27 08:56:58	Service Flow Creation Success: 00:09:02:00:A1:17 , SFid 39334, Cid 500A
Thu Apr 27 08:56:56	Service Flow Creation Success: 00:09:02:00:A1:19 , SFid 31306, Cid 5009
Thu Apr 27 08:56:52	Service Flow Creation Success: 00:09:02:00:A1:19 , SFid 15207, Cid 4009
Thu Apr 27 08:56:40	SS Registered: 00:09:02:00:A1:17
Thu Apr 27 08:56:40	Basic Capability Success: 00:09:02:00:A1:17
Thu Apr 27 08:56:40	Initial Ranging Success: 00:09:02:00:A1:17
Thu Apr 27 08:56:37	SS Registered: 00:09:02:00:A1:19
Thu Apr 27 08:56:37	Basic Capability Success: 00:09:02:00:A1:19
Thu Apr 27 08:56:37	Initial Ranging Success: 00:09:02:00:A1:19
Thu Apr 27 08:56:07	Service Flow Creation Success: 00:09:02:00:8C:AE , SFid 54854, Cid 4008
Thu Apr 27 08:56:05	Service Flow Creation Success: 00:09:02:00:8C:AE , SFid 8341, Cid 5008
Thu Apr 27 08:55:57	Service Flow Creation Success: 00:09:02:00:8C:7F , SFid 2187, Cid 4007
Thu Apr 27 08:55:55	Service Flow Creation Success: 00:09:02:00:8C:7F , SFid 1321, Cid 5007
Thu Apr 27 08:55:52	SS Deregistered: 00:09:02:00:A1:17 (rngRetries)
Thu Apr 27 08:55:48	SS Registered: 00:09:02:00:8C:AE

Figure 23: Web: Monitoring - Event Log Screen

4.2.5 Auto Refresh

Click [Auto Refresh](#) in the menu (left side of screen) to view and modify the periods used to automatically refresh the listed web screens.

Configure Auto Refresh for Web Pages	
Configure Auto Refresh Delay in Seconds (Enter 0 to Disable Auto Refresh)	
'Status'	<input style="width: 100%;" type="text" value="255"/>
'SS Info'	<input style="width: 100%;" type="text" value="255"/>
'Event Log'	<input style="width: 100%;" type="text" value="255"/>
<input style="border: none; background-color: #cccccc; padding: 2px 10px;" type="button" value="Change"/>	

Figure 24: Web: Monitoring - Auto Refresh Screen

Status: Set the automatic refresh period (seconds) for the [Status](#) screen.

SS Info: Set the automatic refresh period (seconds) for the [SS Info](#) screen.

Event Log: Set the automatic refresh period (seconds) for the [Event Log](#) screen.

Change: Click to update the screen with the latest totals.

4.3 Creating Service Flows - Overview

There are four steps associated with creating service flows:

Note: A service class can not be deleted until all provisioned/active service flows referencing this service class have been deleted.

1. Create service class.

Each service class defines a set of QoS parameters that can be associated with a service flow. Multiple service class definitions can be added to create a library of service classes. By creating a set of standardized service classes, new service flows can be added that conform to pre-defined service level agreements (SLAs). Each service class definition includes traffic rates, latency settings, priority, and transmission policy settings.

2. Create service flow.

All service flows are based on existing service class definitions. Separate service flows are required for downlink and uplink traffic. Each definition requires identifying the subscriber (by name or MAC address), flow direction, class of service, and the classifier type.

3. Define classifier.

A unique set of classifier rules can be defined for each service flow, depending on the classification type (i.e., Packet, 802.3/Ethernet) selected when the service flow is created. All associated classifiers are deleted when the service flow is deleted.

4. Activate

A new service flow is not activated until a classifier is assigned (click **Add** in the Classifier screen).

If the target subscriber is registered a Dynamic Addition Session (DSA) session is initiated. During a DSA session, the service flow is in Requesting state. If the DSA session is successful, the state is set to Active. If the DSA session is not successful, the state is set to Rejected.

If the target subscriber is not registered, the service flow request is stored until the associated subscriber is registered. The subscriber registration triggers the activation of all associated service flows.

4.3.1 Subscribers

Click [Subscribers](#) in the menu (left side of screen) to view a summary of the subscribers currently configured on the base station.

Subscribers Configuration

Subscriber Index	Subscriber Mac	Subscriber Name	Max Hosts Number	Learning Enabled	
6	00:09:02:00:a1:21	UPDATA	1	Yes ▾	Add

Delete SS

Subscriber	02:01:a2:22:bc:a4 ▾	Delete
------------	---------------------	--------

Subscribers

Select	02:01:a2:22:bc:a4 ▾	Template	Edit
--------	---------------------	----------	------

Subscriber Index	Subscriber Mac	Subscriber Name	Max Hosts Number	Learning Enabled
5	02:01:a2:22:bc:a4	02:01:a2:22:bc:a4	0	notLearning
6	00:09:02:00:a1:21	UPDATA	3	learning
7	00:09:02:00:11:22	MINI	0	notLearning
8	01:02:03:04:05:06	01:02:03:04:05:06	0	notLearning

Figure 25: Configuration - Subscribers Configuration Screen

Subscriber Index: Unique index number to identify this subscriber. This number is generated automatically by the base station. The user can also specify an index number (must be unique) when creating a new subscriber entry.

Subscriber MAC: MAC address of the subscriber. You must enter this information when creating a new subscriber entry.

Subscriber Name: Enter the name for this subscriber. This reference is displayed when managing service flows and classifiers.

Note: When upgrading from RedMAX v1.0 this field will automatically be populated with the subscriber MAC address. The name is not imported from the subscriber (set using SNMP or CLI).

Max Hosts Number: Enter the maximum number of hosts (device MAC addresses) to discover on the Ethernet interface to this subscriber. Valid only if Learning Enabled=Yes.

Learning Enabled: The MAC learning feature allows the base station to automatically learn up to 256 hosts (devices) on the Ethernet segment connected to a subscriber. When a new host is detected, the learning function enables downlink traffic to the device by automatically adding a classifier for this device to the downlink service flow. Classifiers are deleted automatically when the subscriber de-registers. This feature can be enabled/disabled individually for any subscriber.

No: Auto-learning is disabled for this subscriber.

Yes: Auto-learning is enabled for this subscriber. See the following requirements:

To use the MAC auto-learning feature (Learning Enabled = Yes) for any subscriber, it is necessary to create a downlink service flow and assign a generic classifier. The service flow specifies the traffic type, and the generic classifier is used as a template when adding new classifiers. When a new host is detected, the learning function automatically adds a new host-specific classifier to the associated service flow -- enabling downlink traffic to that host.

Notes:

1. The generic classifiers should be created only after learning has been enabled, and deleted before learning is disabled (to avoid creating pass-all filters). Refer to section 4.3.4: Classifiers on page 55.
2. The subscriber and base station do not use 'MAC aging' and each learned host address remains in the learning table until the subscriber is rebooted. Reboot the subscriber to clear the MAC address table and rediscover active hosts. Causing the subscriber to re-register with the base station does not clear the subscriber learned MAC address table.

Add: Click to create a new subscriber listing. This control is active only when a new MAC address has been specified in the Subscriber MAC field. When adding new subscribers, the MAC learning feature is enabled by default and the host number is set to one (1). Refer to the Learning Enabled feature above for details.

Delete SS

Subscriber: Select the name of the subscriber to be deleted.

Delete: Click to deactivate and remove all classifiers and service flows for this subscriber. The subscriber will be removed from the subscribers list.

Subscribers

Select: Use this field to select the name of the subscriber to be viewed, edited, or used as a template for creating a new subscriber entry.

Template: Select a subscriber and click to display the current settings in the upper portion of the screen. These settings can be modified and used to create a new subscriber entry. Click to create the new subscriber entry.

Edit: Select a subscriber and click to display the current settings the upper portion of the screen. These settings for this subscriber can now be modified. Click to save changes to this subscriber entry. You can not modify the index number for a subscriber.

Important: Modifying an existing subscriber will cause the base station to delete and recreate all service flows and classifiers for this subscriber.

4.3.2 Service Classes

Click **Service Classes** in the menu (left side of screen) to view, add, or delete service class definitions. The base station will guarantee the QoS parameters for service flows created referencing this service class.

Multiple service class definitions can be created to build a library of service classes. A service class can not be deleted until all provisioned/active service flows referencing this service class are deleted.

Service Class Configuration

Add/Modify a Service Class

Service Class Name	<input type="text" value="Service Class"/>	Traffic Priority	<input type="text" value="0"/>
Max Sustained Rate [bps]	<input type="text" value="64000"/>	Min Reserved Rate [bps]	<input type="text" value="0"/>
Max Latency [ms]	<input type="text" value="0"/>	Fixed vs. Variable Sdu Ind	<input type="text" value="variableLength"/>
Sdu Size [byte]	<input type="text" value="0"/>	Scheduling Type	<input type="text" value="nonRealTimePollingService"/>
Req Tx Policy	<input type="checkbox"/> noBroadcastBwReq(0) <input type="checkbox"/> noPiggybackReq(2) <input type="checkbox"/> noFragmentData(3) <input checked="" type="checkbox"/> noPHS(4) <input type="checkbox"/> noSduPacking(5) <input type="checkbox"/> noCrc(6)		

Delete a Service Class (must not be used by SFs)

Service Class Name	<input type="text" value="1752 be"/>	<input type="button" value="Delete"/>
--------------------	--------------------------------------	---------------------------------------

Service Classes

Select	<input type="text" value="1752 be"/>	<input type="button" value="Select"/>	<input type="button" value="ShowAll"/> <input type="button" value="HideAll"/>
--------	--------------------------------------	---------------------------------------	---

SC Name	Traffic Prio.	MaxSTR	MinRR	MaxLat	Fixed vs Var. Sdu	Sdu Size	Sched. Type	ReqTxPol
1752 be	1	66500	0	0	variableLength	0	bestEffort	4
Shared 64 Kbps	1	64000	0	0	variableLength	0	bestEffort	4
Shared 1024 Kbps	7	1024000	0	0	variableLength	0	bestEffort	4
Shared 512 Kbps	7	512000	0	0	variableLength	0	bestEffort	4
Shared 128 Kbps	1	128000	0	0	variableLength	0	bestEffort	4
Shared 256 Kbps	1	256000	0	0	variableLength	0	bestEffort	4
1752 nrtps	0	164000	12001	0	variableLength	0	nonRealTimePollingService	4
1752 ugs	7	33000	33000	29	variableLength	0	unsolicitedGrantService	4
1752 rtps	7	61000	4000	45	variableLength	0	realTimePollingService	4

Figure 26: Configuration - Service Class Screen

Service Class Configuration Screen

Add a Service Class

Service Class Name: Enter a name for this service class. The name can be any combination of up to 30 letters and numbers.

Traffic Priority: Enter the priority to be used for service flows created using this service class. The priority is relative only to other service flows on the same subscriber. The value '7' represents the highest priority.

Note: This is not the Ethernet (802.1p) priority setting.

Max. Sustained Rate (bps): Enter the maximum sustained wireless reserved rate. A service flow created using this service class is limited to sustained transmission at this rate (peak may be higher).

Min. Reserved Rate (bps): Enter the minimum wireless reserved traffic rate. A service flow created using this service class is guaranteed sufficient bandwidth for this rate.

Max Latency (ms): Enter the maximum latency allowed when forwarding packets from the Ethernet port to the wireless interface. A service flow created using this service class is guaranteed to have latency of less than or equal to this setting.

Fixed Vs. Variable Sdu Ind: Specify if all Ethernet packets belonging to the service flow mapped to this service class are of the same length. If all the Ethernet packets belonging to the service flow mapped to this service class are of the same length, selecting `fixedLength` will allow the system to utilize wireless bandwidth in more efficient way. Note, however, that in most cases, Ethernet packets have variable length.

fixedLength: All Ethernet packets have the same length.

variableLength: Ethernet packets have variable lengths.

Sdu Size: Enter the size for Ethernet packets. Enabled only if `fixedLength` is selected in Fixed vs. Variable Sdu Ind field.

Scheduling Type: Select the type of scheduling service.

bestEffort: (BE) For applications that do not require a minimum bandwidth allocation. Required settings are:

- Max. Sustained Rate
- Traffic Priority.

nonRealTimePollingServices: (nrtPS) For applications requiring variable-sized SDUs transmitted at a minimum sustained data rate. Required settings are:

- Traffic Priority.
- Max. Sustained Rate
- Min. Reserved Rate

realTimePollingServices: (rtPS) For applications requiring variable-size SDUs transmitted at regular intervals. Required settings are:

- Max. Sustained Rate
- Min. Reserved Rate
- Max. Latency.

unsolicitedGrantService: (UGS) For applications requiring fixed-length data packets issued at periodic intervals. Required settings are:

- Min. Reserved Rate
- Max. Latency

Req Tx Policy: Check items to configure the transmission policy. Selecting a control inhibits the specified operation:

noBroadcastBwReq(0): Do not broadcast bandwidth requests.

noPiggybackRequest(2): Do not piggyback bandwidth requests.

noFragmentData(3): Do not fragment Ethernet packets.

noPHS(4): Do not support payload header suppression.

noSduPacking(5): Do not pack multiple Ethernet packets in a wireless MAC packet.

noCRC(6): Do not attach the CRC field to the end of a Wireless MAC packet.

Add: Click to create a new service flow definition.

Modify: Click to change the service class definition.

Note: *Changing a service class definition will interrupt traffic on referencing service flows until they have become active again.*

Delete a Service Class

Service Class Index: Select an existing service class.

Delete: Click to delete the selected service class definition.

View Service Class

Service Class Index: Select an existing service class.

Select: Click to display the selected service class definition.

ShowAll: Click to display all service class definitions.

HideAll: Click to not display any definitions.

SC Name: Name of service class.

Traffic Prio.: Priority setting (relative to other service flows on the same subscriber).

MaxSTR: Maximum sustained traffic rate setting.

MinRR: Minimum reserved rate setting.

MaxLat: Maximum latency setting.

Fixed Vs Var.Sdu: Format for SDU.

Fixed: Variable length SDU's are allowed.

Variable: Only fixed length SDU's are allowed.

SduSize: Size of SDU (if fixed)

SchedType: Scheduling type for this service class.

ReqTxPol: List of enabled transmit policies. Number 4 (representing enabled noPHS) will always be in the list. If a user, for example, checks noSduPacking checkbox then the number 5 will also be in the list. Note that number 6 will never be in the list as the noCRC checkbox cannot be selected.

4.3.3 Service Flows

Click **Service Flows** in the menu (left side of screen) to view, add, and delete service flows. Service flows provide the ability to set up multiple uplink and downlink connections to each subscriber in a sector, and each service flow may be assigned a unique service level category and separate QoS settings. A service flow is not fully activated until at least one classifier is assigned.

Default UL/DL Service Flows

The default service flows are used to pass traffic not matching any user-defined service flow (such as broadcast ARP) between the base station and subscribers.

Table 21: System - Default Service Flow Throughput	
Channel	Max Throughput*
Downlink	64 Kbps (shared by all subscribers)
Uplink	8 Kbps (per subscriber)

*FIFO operation - all packets exceeding these rates are discarded.

Service Flows Configuration

Next SFID	SS Name	Direction	SC Name	CS Specification	
65059	02:01:a2:22:bc:a4	downstream	1752 be	802.3 Ethernet	Add

Delete SF (all associated Classifiers will be deleted)

Service Flow Identifier: 15911 Delete

Service Flows

Select 15911 Template Edit ShowAll HideAll Enable
Disable

SFID ↓	SS Mac	SS Name	Direction	SC Name	SF State	Prov Time	CS Specification	En/Dis
145	01:02:03:04:05:06	01:02:03:04:05:06	upstream	Shared 64 Kbps	authorized	00:00:06	802.1Q Vlan	enabled
366	01:02:03:04:05:06	01:02:03:04:05:06	downstream	1752 ugs	authorized	00:00:06	802.3 Ethernet	enabled
2502	01:02:03:04:05:06	01:02:03:04:05:06	downstream	Shared 1024 Kbps	authorized	00:00:06	802.1Q Vlan	enabled
2994	01:02:03:04:05:06	01:02:03:04:05:06	upstream	Shared 128 Kbps	authorized	00:00:06	802.1Q Vlan	enabled

Figure 27: Configuration - Service Flow Screen

Add Service Flow

Next Sfid: This identifier value is assigned to the next new service flow.

SS Name: Name of subscriber associated with this service flow.

Direction: Direction of service flow. Separate service flows are required for upstream and downstream traffic.

Downstream: Downlink traffic from a base station to a subscriber.

Upstream: Uplink traffic from a subscriber to the base station.

SC Name: Select the service class definition for this service flow.

Cs Specification: Classification type associated with this service flow.

802.3 Eth: The classifiers for this service flow are based on the combination of fields in the Ethernet header.

802.1Q VLAN: The classifiers for this service flow are based on the combination of the fields in the Ethernet header and 802.1Q VLAN tag.

IPv4: The classifiers for this service flow are based on the IPv4 IP header.

IPv4 Over 802.3: The classifiers for this service flow are based on the combination of fields in the IPv4 header and the Ethernet header.

IPv4 Over 802.1Q: The classifiers for this service flow are based on the combination of fields in the IPv4 header and the 802.1Q VLAN tag.

Add (Modify): Click to create a new service flow definition using the current settings. This control is also displayed as after clicking or .

Note: Service flows can be activated only after the requested configuration is validated and saved. See 4.3.5: Manage -- Save Provisioning Information on page 60.

Delete SF (and Classifiers)

Service Flow Identifier: Unique index number of the service flow to be deleted.

Delete: Click to delete the selected service flow (and all associated classifiers).

Note: If the subscriber using this service flow is not registered, the service flow is deleted immediately. If the subscriber is registered, a Dynamic Service Deletion (DSD) session is initiated to delete the service flow. The service flow is deleted when the subscriber sends acknowledgement or becomes deregistered.

Service Flows

Select: Select the unique index number for the service flow to display.

Template: Click to modify any field for the selected service flow. Clicking changes in the fields adjacent to the button (top of screen).

Edit: Click to change only the service class associated with this service flow.

ShowAll: Click to display settings for all service flows.

HideAll: Click to hide the settings for all service flows.

Enable: Click to enable this service flow (will be provisioned to active).

Disable: Click to disable this service flow (will not be provisioned).

Service Flow Status Display

Left-click the mouse on the heading for any column to sort the table using that selection.

SFID: Unique index number assigned when this service flow was created. This number is required when creating a classifier for the service flow (classifier configuration screen).

SS MAC: MAC address of the subscriber associated with this service flow.

SS Name: User-assigned name for the subscriber associated with this service flow.

Direction: Indicates the direction assigned to the service flow.

Downlink: The direction of data traffic is towards the subscriber.

Uplink: The direction of data traffic is from the subscriber.

SC Name: Name of the service class definition associated with this service flow (hover mouse pointer over name to display service class index number).

Sf State: Current status of the service flow.

Authorized: Service flow configuration has been saved but is not active.

Admitted: Service flow is being edited or SC is setting up the service flow.

Active: Service flow is currently active.

Rejected: Base Station was not able to setup the service flow.

Provisioned Time: Time stamp of when an action was last performed on the service flow. This time stamp is displayed in hours, minutes, and seconds (hh:mm:ss) relative to

when the base station was rebooted. If required, the absolute time and day of an event can be determined using the Time Since System Restart on the General Information page:

Current Time - (Time Since System Restart - Provisioned Time)

Note: A value of '00:00:00' indicates that the service flow was created before the base station was rebooted, and the service flow has not been activated.

Cs Specification: Classifier type associated with this service flow. Refer to section 4.3.4: Classifiers on page 55 for supported classification types.

Enable/Disable: Displays the current state of the service flow:

Enabled: Service flow is provisioned by the base station.

Disabled: Service flow will not be provisioned by the base station.

4.3.4 Classifiers

Click **Classifiers** in the menu (left side of screen) to view, add and delete service flow classifiers. Any active service flow must have at least one active classifier. The 802.16 Service Flow can have multiple classifiers (classification rules). New classifiers become active after clicking **Add** on this screen.

When multiple classifiers are defined for one service flow, the index number is listed in the form X.Y where:

X == Service Flow index (SfId)

Y == Classifier index number

When a service flow is activated, the classifiers become active by default. A service flow can have both active and inactive classifiers only when the service flow is already *active* and new classifiers are added. New classifiers become active only after they are successfully implemented on both the base station and the subscriber.

All Revisions
Important information about using generic classifiers.

What is a Generic Classifier

A generic classifier is defined as any classifier with only the priority field enabled.

Behavior of Generic Classifiers

It is important to note that generic classifier filters behave differently based on the mode of the learning function. See the following table.

Table 22: System - Generic Classifier Functions	
Learning Enabled	Filtering Function
Yes	The Learning function requires a generic classifier as a template when automatically adding classifiers for learned hosts. The auto-learning function requires a service flow and a generic classifier for each enabled subscriber. When a new host is detected, the learning function automatically adds a new host-specific classifier (based on the generic classifier definition) to the associated downlink service flow. The host-specific classifiers are deleted automatically when the subscriber de-registers.
No	The generic classifier can be used as a pass-all filter to direct all unclassified downlink traffic in a sector. All downlink traffic in the sector that does <u>not</u> match any higher priority classifier is directed to the downlink service flow with the generic classifier. A sector may contain only one subscriber with a generic (pass-all) classifier.

Using the Learning Feature

To use the Learning feature (Learning Enabled = Yes) for any subscriber, it is necessary to create a downlink service flow and assign a generic classifier. When a new host is detected by the subscriber, this is reported to the base station and the learning function automatically adds a new classifier to permit downlink traffic to that host. The generic classifier filters traffic based on the service flow type:

802.3 Eth: The classifiers for this service flow are based on the combination of fields in the Ethernet header.

802.1Q VLAN: The classifiers for this service flow are based on the combination of the fields in the Ethernet header and 802.1Q VLAN tag.

IPv4: The classifiers for this service flow are based on the IPv4 IP header.

IPv4 Over 802.3: The classifiers for this service flow are based on the combination of fields in the IPv4 header and the Ethernet header.

IPv4 Over 802.1Q: The classifiers for this service flow are based on the combination of fields in the IPv4 header and the 802.1Q VLAN tag.

To avoid unwanted behavior, it is necessary to set Learning Enabled = Yes before adding generic classifiers.

Changing the Learning Mode

When Learning Enabled is set to 'No' on a subscriber, all generic classifiers on active service flows on that subscriber will begin to operate as pass-all filters -- directing all same/lower priority downlink traffic in the sector to that subscriber.

It is recommended to use the following procedure when disabling the MAC auto-learning function for any subscriber:

1. Identify the subscriber to be modified (Learning Enabled = Yes).
2. Identify the downlink service flow(s) associated with this subscriber.
3. Take the following action:
 - a) Delete the service flows that have generic classifiersor
 - b) Delete the generic downlink classifier associated with each service flow
4. Go to the subscriber screen and set Learning Enabled = No (subscriber will re-register).

Classifier Configuration

Add a Classifier

To SFID:

Priority:

DestMacAddr: DestMacMask:

SourceMacAddr: SourceMacMask:

EnetProtocolType: EnetProtocol:

Remove Classifier

SFID.ClsID:

View Classifiers

Service Flow Identifier:

SFID.ClsID	State	Prio.	DstMac Addr/Mask	SrcMac Addr/Mask	Enet Type/Prot	UserPri Low-High	VlanID	Ip Prot.	Tos Low-High/Mask
7476.52734	inactive	1		01:02:03:04:05:09/ ff:ff:ff:ff:ff:ff	ethertype/ 11				
9323.17057	inactive	1	01:02:03:04:05:13/ ff:ff:ff:ff:ff:ff	01:02:03:04:05:14/ ff:ff:ff:ff:ff:ff	ethertype/ 13				

Figure 28: Configuration - Classifier Screen

Classifier Configuration Screen

Add a Classifier

To SFID: Select the index number of the service flow. Refer to the Service Flows Configuration screen for a list of all service flows.

Priority: Check to set a priority for this classifier. When a packet can be classified by more than one classifier definition, it is classified according to the classifier with the highest priority setting. Enter a priority value from 0 to 255 (highest priority).

Packets are tested beginning with the classifier definition having the highest priority value. The packet is processed based on the first discovered match. If classifiers have equal priority, the order of evaluation can not be predicted.

DestMacAddr: Check to enable classification based on a destination MAC address (downstream traffic from the base station). Enter the MAC address in the adjacent field. When matched, downlink traffic is sent from the base station using the associated service flow.

DestMacMask: Enter the mask value (hexadecimal) to be used with the destination MAC address (DestMacAddr). Valid only if the DestMacAddr is enabled (). For example:

1. A mask value of all ones (ff:ff:ff:ff:ff:ff) will match only the MAC address entered in the DestMacAddr field.
2. A partially specified mask value will match a range of MAC addresses. For example, a mask value of 01:02:03:ff:ff:ff will match all MAC addresses where the first 48 bits are 01:02:03. The DestMacAddr should be set to all zeros.
3. A mask of all zeros (00:00:00:00:00:00) will match all destination MAC addresses. The DestMacAddr field value is not used.

Note: Only one classifier can have a DestMacMask value set to all zeros.

SourceMacAddr: Check to enable classification based on a source MAC address (upstream traffic to the base station). Enter the MAC address in the adjacent field. When matched, uplink traffic is sent from the subscriber using the associated service flow.

SourceMacMask: Enter the mask value (hexadecimal) to be used with the source MAC address (SourceMacAddr). Valid only if SourceMacAddr is enabled (.

Examples:

1. A mask value of all ones (ff:ff:ff:ff:ff:ff) will match only the MAC address entered in the SourceMacAddr field.
2. A partially specified mask value will match a range of MAC addresses. For example, a mask value of 01:02:03:ff:ff:ff will match all MAC addresses where the first 48 bits are 01:02:03. The SourceMacAddr should be set to all zeros.
3. A mask of all zeros (00:00:00:00:00:00) will match all source MAC addresses. The SourceMacAddr field value is not used.

Note: Only one classifier can have a DestMacMask value set to all zeros.

EnetProtocolType: Check to enable classification based on the protocol transported by Ethernet. Select Ethernet type from the list: Ethertype for Ethernet version 2 and 802.3 SNAP, and DSAP for 802.3 LLC.

EnetProtocol: Enter the identifier of the protocol transported by Ethernet. Valid only if an EnetProtocolType is selected. Valid Ethertype values are from 1,501-65,536. Valid DSAP values are from 0-169 and 171-255. For example, in order to allow IP traffic, set EnetProtocolType to Ethertype and EnetProtocol to 2048 (0800 hex).

A list of Ethertypes can be found at:

<http://www.iana.org/assignments/ethernet-numbers>

A list of DSAP values can be found at:

<http://www.ethermanage.com/ethernet/enet-numbers/ieee-lsap-list.html>.

Add: Click to save the classifier settings.

Note: Classifier settings are effective immediately when created.

Remove Classifier

Service Flow Identifier: Select an existing classifier to be deleted. The format is:

Service Flow ID. Classifier ID

Delete: Click to permanently delete the selected classifier.

View Classifiers

SFID.CIsID: Identifiers for the selected classifier. The format is:

Service Flow ID. Classifier ID

Show: Click to display the setting for the service flow selected in the Service Flow Identifier field.

ShowAll: Click to display settings for all service flows.

HideAll: Click to hide settings for all service flows.

Classifier Table

SFID.CIsID: Identifiers for the selected classifier. The format is:

State: Current state of the service flow:

Active: Classifier is currently active.

Inactive: Classifier is not currently active.

Prio: Priority setting for this classifier.

DestMac: When displayed, classification is based on this destination MAC address.

Addr: Destination MAC address.

Mask: Destination MAC mask.

SrcMac: When displayed, classification is based on this source MAC address.

Addr: Source MAC address.

Mask: Source MAC mask.

Enet Type/Prot: When displayed, classification is based on Ethernet protocol type and protocol.

UserPri: Matching parameters for the Ethernet IEEE 802.1D user priority value (Ethernet packets with 802.1Q encapsulation). A packet will match if the priority setting is equal to, or falls between, the high and low range setting. Valid settings are zero to seven (0 to 255).

Low: Lowest priority setting of range.

High: Highest priority setting of range.

VlanID: Ethernet packet 802.1Q VLAN tag. Valid only if Cs Specification is 802.1Q.

Ip Prot.: IPv4 specification. Valid only if the service class Cs Specification is IPv4.

EnetProtocol: When displayed, classification is based on this Ethernet protocol.

Tos: Matching parameters for the IP type of service/DSCP (IETF RFC 2474). An IP type of service (ToS) packet will match if the "ip-tos" value, after the mask is applied, is equal to, or falls between, the high and low range setting. Valid settings are 0 to 255.

Low: Lowest priority setting of range.

High: Highest priority setting of range.

Mask: A logical 'AND' is performed using the mask and the "ip-tos" value before testing for range.

SrcIp: Source IPv4 address. Valid only if Cs Specification is IPv4.

Addr: Source IPv4 address network mask.

Mask: Source IPv4 address network mask.

DstIp: IPv4 destination address. Valid only if Cs Specification is IPv4.

Addr: Destination IPv4 address network mask.

Mask: Destination IPv4 address network mask.

DstIp: IPv4 destination address.

Addr Mask: Valid only if Cs Specification is IPv4.

SrcPort: Source IPv4 address port. Valid only if Cs Specification is IPv4.

Start: Lowest port address in range.

End: Highest port address in range.

DstPort: IPv4 destination port address. Valid only if Cs Specification is IPv4.

Start: Lowest port address in range.

End: Highest port address in range.

4.3.5 Manage -- Save Provisioning Information

Click **Manage** in the menu (left side of screen) to determine if there are unsaved changes to the service classes, service flows, or classifiers.

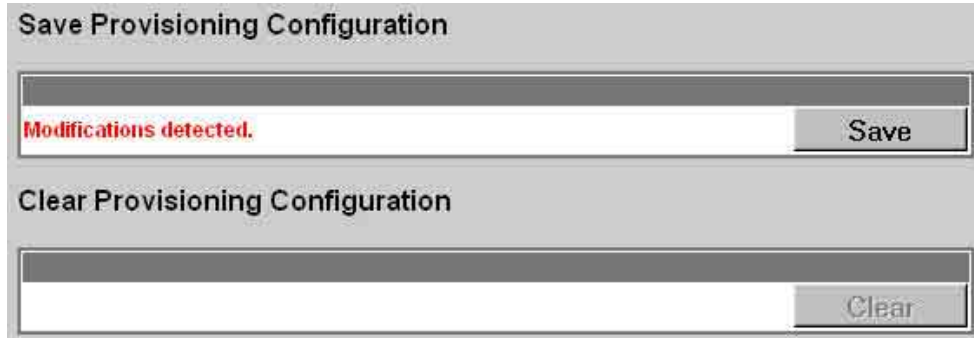


Figure 29: Configuration - Save SF Configuration Screen

Save Provisioning Configuration

Save Provisioning Configuration: This screen indicates if there are unsaved changes to service classes, service flows, or classifiers.

No Modifications Detected: There are no unsaved changes.

Modifications Detected: There are unsaved changes.

Save: Click to save all changes. Saving changes will copy all service class, service flow, classifier configuration data, and subscriber database informatino to non-volatile memory. When the base station is rebooted, all unsaved changes to the service classes, service flows, and classifiers are discarded.

The control is active only if there are unsaved changes to service classes, service flows, or classifiers.

Clear Provisioning Configuration

Clear Provisioning Configuration: Clear all service flow configuration data.

Clear: Click to remove all changes made since the last save.

Note: The Clear Provisioning Configuration feature is not activated in this software release.

4.4 Interface Configuration

View and modify the base station settings for the wireless, Ethernet, and management interfaces.

4.4.1 Wireless Interface

Click [Wireless Interface](#) in the menu (left side of screen) to view and modify the base station MAC, PHY, and RF wireless settings.

Note: Changes to settings marked with a red asterisk () are only effective after clicking [Save](#) and rebooting the base station.*

Wireless Interface Configuration	
RF Parameters	Saved Values Running Values
* RF DL Channel [KHz]	<input style="width: 100%;" type="text" value="3515500"/>
* RF Channel Separation [KHz]	<input style="width: 80%;" type="text" value="0"/> ▾
Tx Output Power [dBm]	<input style="width: 80%;" type="text" value="5"/> ▾
SS Tx Power Control Enable	<input checked="" type="checkbox"/>
Reference RSS [dBm]	<input style="width: 80%;" type="text" value="-70"/> ▾
Auto Rx Gain Enable	<input type="checkbox"/>
PHY Parameters	
* Band Select [MHz]	<input style="width: 100%;" type="text" value="Multiple of 1.75"/> ▾
* Channel Size [MHz]	<input style="width: 80%;" type="text" value="3.5"/> ▾
* Guard Interval	<input style="width: 80%;" type="text" value="1/4"/> ▾
MAC Parameters	
Frame Profile	
* Frame Duration [ms]	<input style="width: 80%;" type="text" value="10"/> ▾
DL Ratio [%]	<input style="width: 80%;" type="text" value="56"/> ▾
* Synchronization Mode	<input style="width: 100%;" type="text" value="No Synch"/> ▾
* Cell Range [Km]	<input style="width: 80%;" type="text" value="5"/>
<input type="button" value="Disable RF"/> <input type="button" value="Save"/> <input type="button" value="Cancel"/> <input type="button" value="Default"/>	
* Fields With Red Star Require System Reset In Order To Apply	

Figure 30: Web: Configuration - Wireless Interface Screen

RF Parameters

RF DL Channel KHz: (*) Enter the channel frequency to use for all subscribers in the sector. The setting is validated against the type of radio installed. The center frequency setting can be made in steps of 250 KHz, and the center frequency setting must allow for the channel size and not exceed the granted frequency range. For example, when using a 7 MHz channel, the center frequency must be at least 3.5 MHz inside the band limits.

Important: RF Channel Settings

Operation in the FWA band is subject to license. The radio frequency selections must be set correctly before the installed system is allowed to transmit. The installed system must comply with all governing local, regional, and national regulations. Contact authorities in the country of installation for complete information regarding the licensing regime and operating restrictions for that regulatory domain.

RF Channel Separation KHz: (*) Select the separation between channels (HD-FDD radio only) where: UL Channel = DL Channel + Separation.

Tx Output Power dBm: Select the output power level (dBm) of the radio.

Table 23: System - Tx Power Settings (dBm)		
Equipment	Minimum	Maximum
AN-100U	0	23
AN-100UX	20	36*

* For best AN-100UX wireless link performance, it is recommended to use a maximum setting of 35 DBm when operating at 64 QAM.

Important: RF Power Settings

Operation in the FWA band is subject to license. The radio power selections must be set correctly before the installed system is allowed to transmit. National Interface documents may identify a maximum output power for the wireless system, expressed in terms of an EIRP level that must not be exceeded. The installed system must comply with all governing local, regional, and national regulations. Contact authorities in the country of installation for complete information regarding the licensing regime and operating restrictions for that regulatory domain.

SS Tx Power Control Enable: Check to allow the base station to automatically adjust the transmit power level of subscribers. When enabled, the base station continually monitors the subscribers and adjusts the transmission power to maintain a requested RSSI value.

Reference RSS: Select the target value for average Received Signal Strength (RSS) for subscribers. The Reference RSS setting is the target value for average Received Signal Strength (RSS) for subscribers RF signals received by the base station. This target value allows automatic adjustment of the subscriber Tx power for optimum performance with the minimum of RF interference. The suggested default setting values are indicated in the following table:

Table 24: System - Wireless Channel Reference RSSI	
Channel Size	Initial Setting
3.5 MHz	-75 dBm
7.0 MHz	-72 dBm

These are the suggested initial settings; adjustments to this target value must be made based on the individual RF characteristics of each deployed sector. The RSSI value (dBm) for each subscriber can be monitored using the base station SS Info screen (Web interface). Tx power adjustments are based on a number of factors, and differences of up to 7 dB may be observed between the Reference RSS setting and measured RSSI.

Auto Rx Gain Enable: Check to enable automatic adjustment of the receiver sensitivity.

PHY Parameters

Band Select MHz: (*) Select channelization type in accordance to 802.16 OFDM PHY system profiles.

Channel Size MHz: (*) Select the channel size. Menu selection is based on the type of radio installed. Refer to the appendices for a list of supported radios.

Guard Interval: (*) Select the cyclic prefix.

MAC Parameters

Frame Profile: Configure the frame size and usage profile.

Frame Duration ms: (*) Select the wireless frame duration (ms). Selections are based on the channel size. This setting affects the system latency.

DL Ratio %: Enter the downlink usage as a percentage of frame size. This setting provides traffic shaping on the uplink and downlink traffic profiles.

The DL ratio is dynamic and can be changed at any time without reboot. The DL Ratio setting in the Wireless Configuration page allows the selection between the minimum and maximum values specified in the following table (based on Frame Duration, Channel Bandwidth and Guard Interval settings):

Table 25: System - Wireless Channel Selection				
Channel Size (MHz)	Frame Duration (ms)	Guard Interval	Lowest DL Ratio (%)	Highest DL Ratio (%)
3.5	5	1/16	50	75
		1/4	58	75
	10	1/16	25	80
		1/4	26	80
7	5	1/16	20	80
		1/4	25	80
	10	1/16	30	85
		1/4	25	85

Synchronization Mode: (*) Select the synchronization mode. Refer to the RedMAX base station Installation Guidelines for details of the synchronization feature.

No Synch: Synchronization feature is disabled.

Master: This base station provides the master synchronization pulse for each connected slave base station (without external GPS clock source).

Master with GPS Synchro: This base station is connected to a GPS clock and provides the master synchronization pulse for each connected slave base station.

Backup Master: This base station normally operates as a slave. If the master base station fails to provide synchronization pulses, this unit will automatically become a Master. This feature operates with or without an external GPS clock connection.

Slave: This base station synchronizes its operations to the synchronization pulse received from the Master or Backup Master.

Cell Range km: (*) Enter the distance to the subscriber located the farthest distance from the base station.

Disable RF: Click to disable the modem output. This is for test purposes only. The base station must be rebooted to restore operation of the radio transmitter.


Save: Click to save and apply the current settings. Settings not marked with a red asterisk are effective immediately. Settings marked with a red asterisk (*) only become only effective after rebooting the base station.

Cancel: Click to restore all fields to the last saved values.

Default: Click to change all fields to the factory values.

4.4.2 Ethernet Interface

Click [Ethernet Interface](#) in the system menu (left side of screen) to view and configure the front panel Data and Management (Mgmt) Ethernet ports, and the Intra-Sector Layer-2 Forwarding (iSL2F) feature.

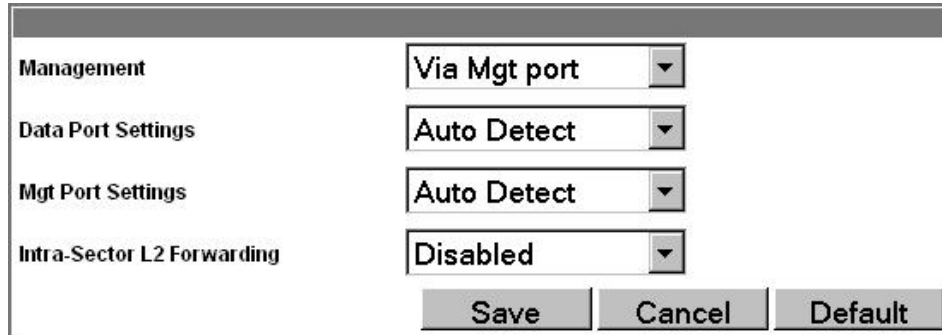

Management	Via Mgt port
Data Port Settings	Auto Detect
Mgt Port Settings	Auto Detect
Intra-Sector L2 Forwarding	Disabled

Figure 31: Web: Configuration - Ethernet Interface Screen

Management: Choose the front panel Ethernet port for management traffic.

Via Data port: The Data Ethernet port is used for data and local management traffic. The Mgt port is disabled.

Via Management port: Only the Mgt Ethernet port is monitored for local management traffic (data and management networks are physically isolated).

Data Port Settings: This setting controls the speed of the Ethernet Data port.

Auto Detect: Auto-negotiate the speed and duplex.

10 Mbps Half Duplex: Operate at 10Base-T half duplex mode only.

10 Mbps Full Duplex: Operate at 10Base-T full duplex mode only.

100 Mbps Half Duplex: Operate at 100Base-T half duplex mode only.

100 Mbps Full Duplex: Operate at 100Base-T full duplex mode only.

Management Port Settings: Set the speed of the Ethernet Management port.

Auto Detect: Auto-negotiate the speed and duplex.

10 Mbps Half Duplex: Operate at 10Base-T half duplex mode only.

10 Mbps Full Duplex: Operate at 10Base-T full duplex mode only.

100 Mbps Half Duplex: Operate at 100Base-T half duplex mode only.

100 Mbps Full Duplex: Operate at 100Base-T full duplex mode only.

Intra-Sector L2 Forwarding: This feature supports layer 2 network connectivity between subscribers in a single sector (hair-pinning).

Important: Refer to section 6.1.5: Intra-Sector L2 Forwarding on page 90 for more information about configuring and using iSL2F feature.

Disabled Mode: When the Intra-Sector L2 Forwarding feature is disabled, the base station will not forward traffic between subscribers (hairpinning) and will not accept traffic resubmitted to the Ethernet port by an external switch.

External Mode: When external mode selected, the base station accepts traffic resubmitted to the Ethernet port. This permits an external switch to forward traffic between hosts located behind subscribers in the same sector.

Internal Mode: When internal mode is enabled, the base station classifies and forwards traffic between hosts located behind subscribers in the same sector (hairpinning) without requiring an external switch. Subscriber traffic arriving at the

base station appears on the Ethernet port and is also resubmitted to the MAC for reclassification and broadcast over the air.

Save: Click to apply and permanently save the displayed settings.

Cancel: Click to restore displayed settings to the last saved values.

Default: Click to change all displayed settings to the factory default values.

4.4.3 Management Interface

Click [Management Interface](#) in the system menu (left side of screen) to view and edit the IP address and DHCP settings.

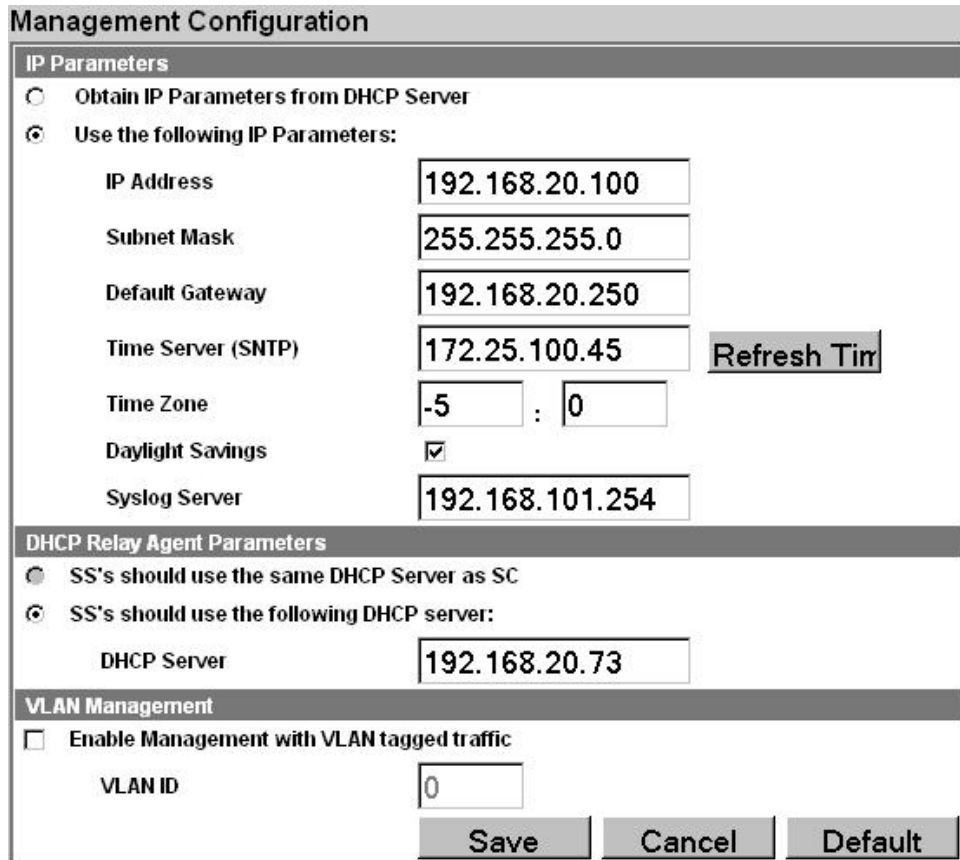


Figure 32: Web: Configuration - Management Interface Screen

IP Parameters

Obtain IP Parameters from DHCP Server: Select this option to have the base station obtain its IP address from a DHCP server.

Use the following IP Parameters: Select this option to manually enter the following IP parameters:

IP Address: Enter the static base station network IP address.

Subnet Mask: Enter the base station subnet address mask.

Default Gateway: Enter the IP address of the default gateway on the local Ethernet segment.

Time Server (SNTP): Enter the IP address of the SNTP server.

Use the following checklist to ensure correct display options:

1. Time server must be compatible with SNTP (RFC-2030)
2. Ensure the time zone is correct for your area.
3. If you are in an area that observes daylight savings time, check the box.

Time Zone: Enter the time offset from GMT (hours:minutes).

Daylight Savings: Check to enable automatic time change for daylight savings.

Syslog Server: Enter the IP address of the Syslog server to enable this feature.

Refresh: Click to poll the time server for the current time.

DHCP Relay Agent Parameters

The subscriber can obtain an IP address from the DHCP server only through a base station acting as a DHCP Relay Agent. A subscriber can not obtain an IP address from any DHCP server on the network segment connected to its local Ethernet port. The base station (acting as a DHCP Relay Agent) can be configured for two different modes:

SS-s should use the same DHCP Server as SC: Select this option to have the base station forward all subscriber DHCP requests to the DHCP server that the base station used to obtain its IP address (valid only if field Obtain IP Parameters from DHCP Server is enabled above).

SS-s should use the following DHCP Server: Select this option to specify the DHCP server to be used by subscribers.

DHCP Server: Specify the IP address of a DHCP server. The base station forwards all subscriber DHCP requests to this address.

It important to configure the correct lease options on your DHCP Server:

- a) The subscriber requires option 4, the address of a ToD Server (RFC-868).
- b) If you do not wish your devices to display GMT, you must add option 2 (Time Offset). This is a value denoting the number of seconds to offset your time from GMT. For example, for the offset of +2 hours you should enter 7200 (some DHCP servers may require entering hexadecimal value). In North America, EST is -5 hours (-18000 seconds) from GMT and the negative value must be entered.

Important: The base station must be rebooted to activate changes to the DHCP Relay Agent settings.

VLAN Management

Enable Management with VLAN Tagged Traffic: Check to enable management using VLAN tagged traffic for the SM CID. This setting is used to configure tagged management for operation in systems where a single VLAN is used to control the base station wireless equipment and the user equipment. After enabling this setting, only traffic with the specified VID is recognized for any management commands. This setting does not affect operation of the RS-232 Console port.

VLAN ID: Enter the VLAN ID. Only traffic tagged with this VLAN ID is recognized by the sector controller management process.

Important: The VLAN network support should be verified before enabling this feature. If the base station is not reachable using the VLAN tagged traffic, the Console port (RS-232) CLI command must be used to disable this setting.

Save: Click to save and apply the current settings.

Cancel: Click to discard all changes and return to the main screen.

Default: Click to set all settings to the factory default settings.


4.5 Admin Tools

The following screens are used to configure the network settings, passwords, and to download software updates to the base station.

4.5.1 Advanced Config

Click **Advanced Config** in the menu (left side of screen) to view and modify MAC settings for modulation thresholds, and backoff settings. Changes to settings marked with a red asterisk (*) are only effective after clicking **Save** and rebooting the base station. This screen has a separate user name and password.

Note: You must login as 'debug' user to access the Advanced Configuration screen.

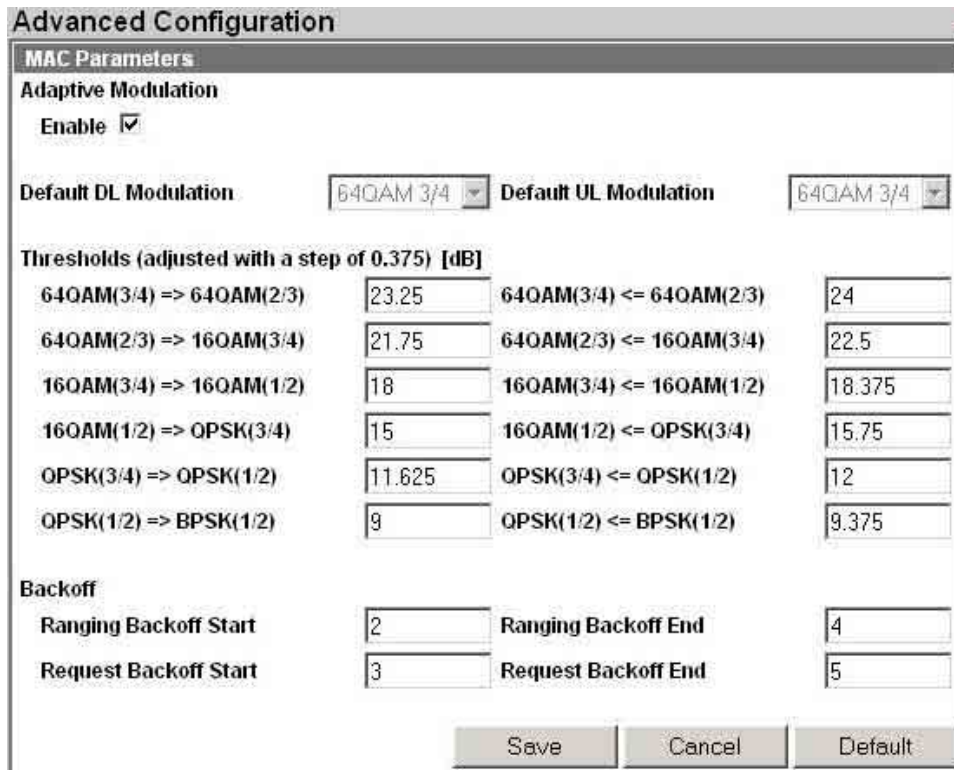

Advanced Configuration

MAC Parameters

Adaptive Modulation
Enable

Default DL Modulation: 64QAM 3/4 Default UL Modulation: 64QAM 3/4

Thresholds (adjusted with a step of 0.375) [dB]

64QAM(3/4) => 64QAM(2/3)	23.25	64QAM(3/4) <= 64QAM(2/3)	24
64QAM(2/3) => 16QAM(3/4)	21.75	64QAM(2/3) <= 16QAM(3/4)	22.5
16QAM(3/4) => 16QAM(1/2)	18	16QAM(3/4) <= 16QAM(1/2)	18.375
16QAM(1/2) => QPSK(3/4)	15	16QAM(1/2) <= QPSK(3/4)	15.75
QPSK(3/4) => QPSK(1/2)	11.625	QPSK(3/4) <= QPSK(1/2)	12
QPSK(1/2) => BPSK(1/2)	9	QPSK(1/2) <= BPSK(1/2)	9.375

Backoff

Ranging Backoff Start	2	Ranging Backoff End	4
Request Backoff Start	3	Request Backoff End	5

Save Cancel Default

Figure 33: Web: Admin Tools - Advanced Configuration Screen

Adaptive Modulation Enable: Check to enable adaptive modulation. Enabling this control disables the default modulation settings.

Default DL Modulation: Select the default modulation and coding rate for the downlink channel. This value is used only when Adaptive Modulation is disabled. When Adaptive Modulation is disabled the base station will transmit data only using the selected modulation/coding.

Default UL Modulation: Select the default modulation and coding rate for the uplink channel. This value is used only when Adaptive Modulation is disabled. When Adaptive Modulation is disabled the base station will receive data from subscribers only using the selected modulation/coding.

Thresholds: Enter the adaptive modulation threshold values (dB) for each modulation (based on measured CINR). The values are used only when Adaptive modulation is enabled. There are two entry fields for each threshold setting (row):

- Minimum Entry Threshold (right column)

- Mandatory Exit Threshold (left column)

The modulation/coding is decreased by one step under the following conditions:

1. CINR drops below the exit threshold of the current CINR
2. CINR is between the entry threshold and exit threshold of the current UIUC and CRC errors are detected in the uplink channel

Settings must be adjusted to match the characteristics of each deployment. Refer to the following table for recommended threshold settings. These are applicable for independent sector operation. Co-channel sector deployment in a cell may require further optimization of the Adaptive Modulation settings.

64 QAM 3/4 => 64 QAM 2/3	23.25 dB	64 QAM 3/4 <= 64 QAM 2/3	24 dB
64 QAM 2/3 => 16 QAM 3/4	21.75 dB	64 QAM 2/3 <= 16 QAM 3/4	22.5 dB
16 QAM 3/4 => 16 QAM 1/2	18 dB	16 QAM 3/4 <= 16 QAM 1/2	18.375 dB
16QAM 1/2 => QPSK 3/4	15 dB	16 QAM 1/2 <= QPSK 3/4	15.75 dB
QPSK 3/4 => QPSK 1/2	11.625 dB	QPSK 3/4 <= QPSK 1/2	12 dB
QPSK 1/2 => BPSK 1/2	9 dB	QPSK 1/2 <= BPSK 1/2	9.375 dB

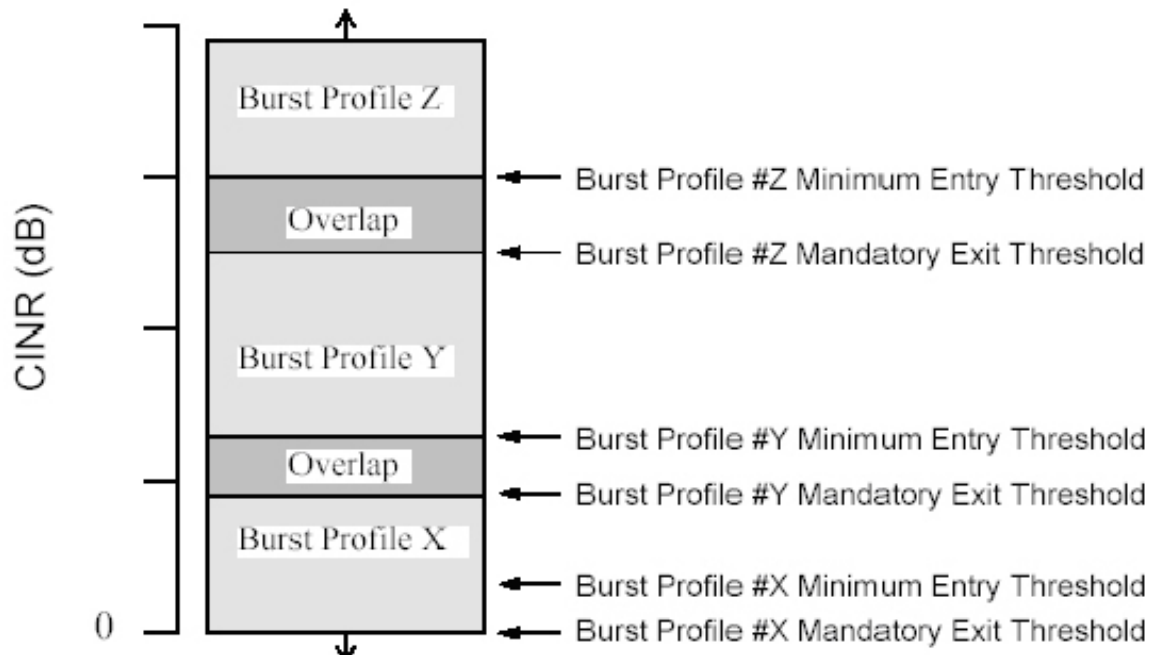


Figure 34: Web: Admin Tools - Advanced Config - Burst Profile Settings

Backoff: Specify ranging and contention periods.

Backoff settings are used when a subscriber experiences collisions during link establishment or while competing for additional bandwidth. The entered value represents the binary exponent of the number of 'opportunities' to wait before responding to a base station registration poll or a bandwidth request opportunity.

It is recommended to not change the Backoff values. Changes to these settings can severely impact performance of the wireless link. Click **Default** in the Advanced Config menu to restore the factory backoff settings.

Ranging Backoff Start: Enter the starting backoff window size for initial ranging contention.

Ranging Backoff End: Enter the final backoff window size for initial ranging contention.

Request Backoff Start: Enter the starting backoff window size for contention during bandwidth requests.

Request Backoff End: Enter the final backoff window size for contention during bandwidth requests.

Save: Click to apply and save the displayed settings. Changes to settings marked with a red asterisk (*) are effective only after the base station is rebooted.

Cancel: Click to discard all changes and return to the main screen.

Default: Click to set all settings to the factory default settings.

Example: How Subscribers Use Backoff Settings

When a subscriber detects a collision during a registration attempt, the subscriber will use a retry strategy to avoid repeating the collision. Consider the effects of the following settings:

Ranging Backoff Start = 2

Ranging Backoff end = 4

Following a collision, the subscriber will skip between zero and four registration opportunities ($2^{\text{Ranging Backoff Start}}$). If the subscriber detects a collision during the retry, it will skip a random number, between zero and eight registration opportunities ($2^{\text{Ranging Backoff Start}+1}$). If a third collision is experienced, the subscriber will skip between zero and sixteen registration opportunities ($2^{\text{Ranging Backoff End}}$). If a fourth collision is detected, the process repeats as for the first detected collision.

4.5.2 Software Upgrade

Click **Software Upgrade** in the menu (left side of screen) to upload a new system software image from a remote server. The terminal contains two non-volatile RAM banks for storing the software. Each upload overwrites the standby (unselected) bank.

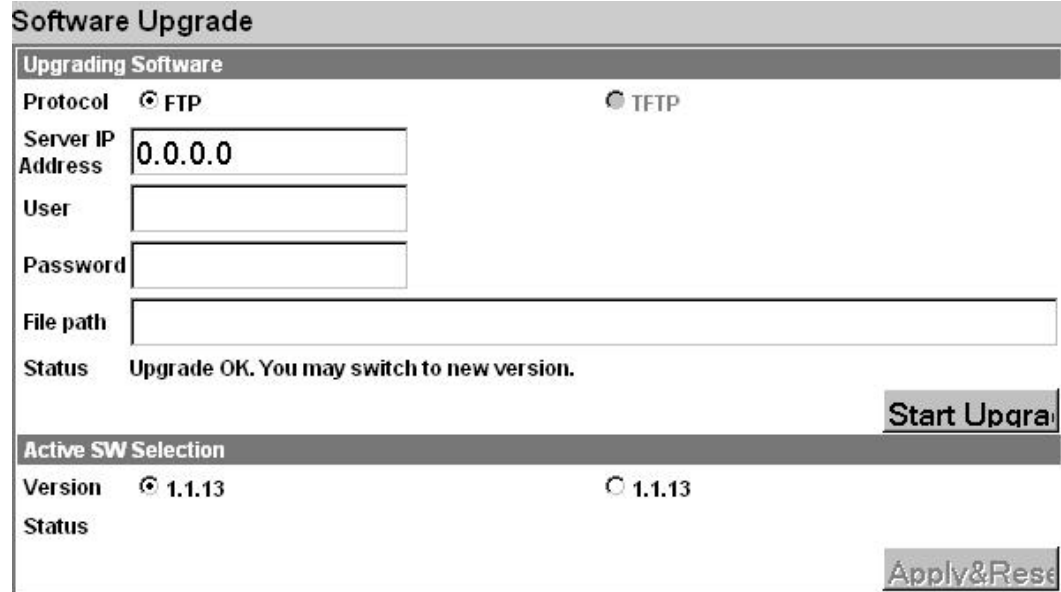


Figure 35: Web: Admin Tools - Software Upgrade Screen

Upgrading Software

Protocol: Select the type of server:

FTP: Use File Transfer Protocol for file upload.

TFTP: Use Trivial File Transfer Protocol for file upload. *TFTP is not available in the current software version.*

Server IP Address: Enter the FTP server network address.

User: Enter the username of a user that is defined on the FTP server and has sufficient access rights to the base station software image file.

Password: Enter the password for the username entered in the User field above.

File Path: Enter the path and name of the system software image to upload. It is strongly recommended to copy the binary files to the default file directory for the FTP server and to specify only the file name in this field.

Status: Monitors the software upload operation.

Start Upgrade: Click Start Upgrade to begin the software upload.

Active SW Selection

Version: Select the software image to load on the next system reboot.

Status: Monitors the system upgrade operation.

Apply&Reset: Click Apply&Reset to save the current version selection and reboot the base station.

Before Beginning the Upgrade

Use the following procedures to upgrade the base station.

The following items must be addressed before beginning the upgrade:

1. You must obtain the latest base station binary files. You must copy the binary files into the default file location for the FTP server. You can not specify a 'path' in the upgrade dialog.
2. The base station performs all software upgrades using an FTP server:
 - a) The FTP server must be located on the network connected to an active Ethernet port (Data or Mgmt) on the base station.
 - b) The FTP server must have a user defined as follows:
username: target
password: secret

Upgrade Base Station

1. Start a Web browser session to the base station and login. The factory default settings are as follows:
Login: admin
Password: admin
2. Click **Software Upgrade** in the left-hand menu and make the following settings:
Protocol: FTP
Server IP address: [enter address of FTP server]
User: target
Password: secret
File Path: [Enter binary file name -- including .bin extension]
3. Click and wait for the base station to download and save the binary file. This process may take a few minutes. Progress is indicated in the **Status** field. The Status Screen displays '**Update OK**' when the upgrade is complete.
4. In the Software Upgrade screen, Select the new version and click to activate the new software. Click in the confirmation dialog.

4.5.3 Backup and Restore

Click **Backup and Restore** in the menu (left side of screen) to manage the base station saved settings. The configuration settings for the active and alternate software loads can be saved to a network server reachable by the base station. Configuration files saved on a remote server can be used to restore settings on a base station.

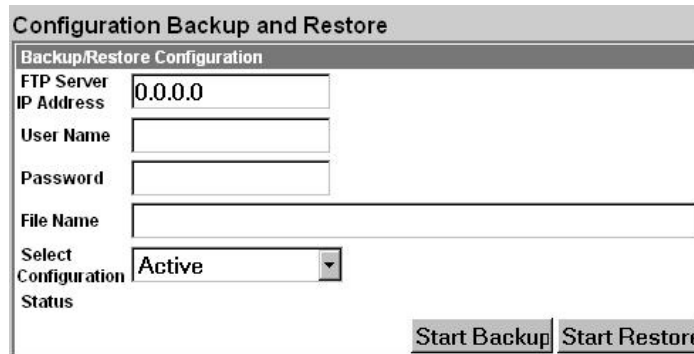


Figure 36: Web: Admin Tools - Configuration Backup and Restore Screen

Backup and Restore Configuration

FTP Server IP Address: Enter the FTP server network address.

User Name: Enter the username of an account on the FTP server. This user must have access rights to read and write files on the server.

Password: Enter the password for the user account.

File Name: Enter the path and file name of the configuration file to save or read.

When performing a backup, it is strongly recommended to use the default file directory for the FTP server and enter only the file name in this field. It is also recommended to specify a file name that includes the date and software revision.

Select Configuration:

Active: Save/restore the saved configuration for the active software load.

Alternate: Save/restore the saved configuration for the inactive software load.

Status: Displays status messages for the current operation.

Start Backup: Click to save the selected settings (Active/Alternate).

Start Restore: Click to restore the selected settings (Active/Alternate).

Before Beginning a Backup

The following items must be addressed before beginning the backup:

1. The settings to be saved on a remote server must be saved in the memory bank associated with the software binary file. To be sure that all current settings are saved, click **Manage** in the menu (left side of screen) and click to save all changes (if this control is active).
2. The base station performs all software upgrades using an FTP server. The FTP server must be located on the network connected to an active Ethernet port (Data or Mgmt) on the base station and must have a user account with read/write privileges.

Backup Base Station Settings

Use the following steps to backup the base station settings:

1. Start a Web browser session to the base station and login. The factory default settings are as follows:

Login: admin

Password: admin

2. Click **Backup and Restore** in the menu and make the following settings:

User Name: Enter the username of a user that is defined on the FTP server and has sufficient access rights to the read and write files.

Password: Enter the password for the user account.

File Name: Enter the path and name of the file to save.

When performing a backup, it is strongly recommended to use the default file directory for the FTP server and enter only the file name in this field. It is also recommended to specify a file name that includes the date and software revision.

Select Configuration: Select **Active** or **Alternate**.

3. Click and wait for the base station to transfer the configuration file. This process may take a few minutes and progress is indicated in the **Status** field.

Restore Base Station Settings

Use the following steps to restore the base station settings:

1. Start a Web browser session to the base station and login. The factory default settings are as follows:

Login: admin

Password: admin

2. Click **Backup and Restore** in the menu and make the following settings:

User Name: Enter the username of a user that is defined on the FTP server and has sufficient access rights to the read and write files.

Password: Enter the password for the user account.

File Name: Enter the path and name of the file to be restored.

Select Configuration: Select **Active** or **Alternate**.

3. Click and wait for the base station to transfer the configuration file. This process may take a few minutes and progress is indicated in the **Status** field.
4. If the restore operation was successful, and the destination was the Active memory bank, the base station is automatically rebooted. When the base station is rebooted, all traffic stops for about 30 seconds and then resumes as the subscribers are registered.

4.5.4 System Account Management

Click [Accounts Management](#) in the menu (left side of screen) to change the system access password.

Configure User Accounts

Add User

Group: Name:

New Password: Confirm Password:

Your Password:

Change User

Group: Name:

New Password: Confirm Password:

Your Password:

Delete User

Name:

Your Password:

User Name	Group
admin	Admin
guest	Guest

Figure 37: Web: Admin Tools - System Password Screen

Add User

Group: Select the group for this account.

Admin: This account user is an administrator.

Guest: This account user is a guest.

Name: Enter the name for this account.

New Password: Enter a new password.

Confirm Password: Re-enter the new password.

Your Password: Enter your login password.

Add: Click to create a new account using these settings.

Change User

Group: To change the group for this account, check and select a new group.

Admin: This account user is an administrator.

Guest: This account user is a guest.

Name: Select the name of an existing account to change.

New Password: To change the password for this account, check and enter a new password for this account.

Confirm Password: If changing the password, re-enter the new password in this field.

Your Password: Enter your login password.

Change: Click to create a new account using these settings.

Delete User

Name: Select the name of an existing account to be deleted.

Your Password: Enter your login password.

Delete: Click to create a new account using these settings.

User Accounts

Old Password: Enter the current password.

New Password: Enter a new password.

Confirm Password: Re-enter the new password.

Your Password: Enter your login password.

Change: Click to save and apply changes.

Note: To delete an administrator account, you must login using another administrator account. To delete an administrator account: 1) change the account to be deleted to type 'guest', 2) delete the account.

5 CLI Interface

The base station can be configured and monitored using the command line interface (CLI) commands. This section describes the procedures for configuring and operating the base station using the CLI over a Telnet connection.

5.1 Connecting via Telnet

To connect to the base station, open a Telnet session to the IP address of the base station (default address is 192.168.101.3).

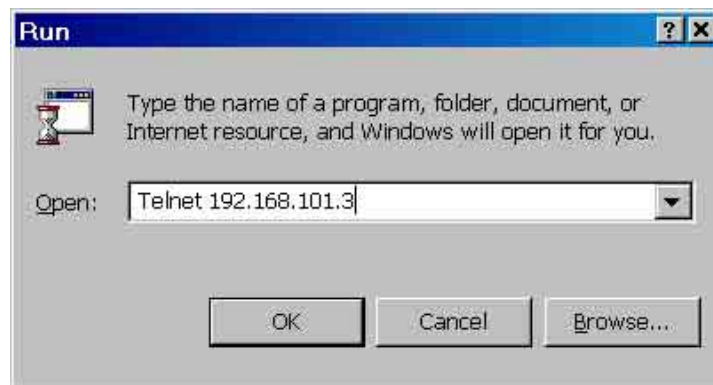


Figure 38: CLI - Connecting via Telnet

When the command prompt screen appears, login using the following (factory default) :

Username: admin

Password: admin

The base station may now be controlled using a set of CLI commands.

Telnet Logout

Exit from a CLI session by typing:

logout ENTER

The system will logout users automatically if no commands are received (idle) for five minutes.

5.2 CLI Commands

The system defaults to root mode when you login to the base station. The following table lists all base station specific commands available in root mode. All commands are case-sensitive.

The following table lists commands available in the root directory. These commands are described in detail in the following sections.

Table 27: CLI - Command Summary

Command	Description
debug*	Intermediate node for debugging commands
diagStatistics*	Access the Diagnostic Status data structure
interfaces	View and configure the data and management Ethernet ports
ipAddress	View and configure the IP address data structure
logout	Exit from Command Line Interface
monitor	Enter monitor mode (press any key to exit monitor mode)
reboot	Reboot the device box.
remoteFSInit*	Initialize remote File System
resetSS*	Reboot the base station
set	Command mode to view and configure system settings
show	Command mode to view system settings
softwareConfig	Backup/restore base station settings to/from FTP server
softwareUpgrade	Download software and select the active version
user	View and configure user accounts
vxShell*	Switch to VxWorks target shell
wmanIfBs	View and configure wireless MAN interface objects
wmget*	Set WindMark, with instance/argument support
wmlist*	Set WindMark, with instance/argument support
wmnext*	Set WindMark, with instance/argument support
wmset*	Set WindMark, with instance/argument support
x509	WMAN-IF-MIB X509 certificate data

*Debug user only.

5.2.1 Common Controls

Use the following CLI control commands in all configuration modes.

Table 28: CLI - Root Mode Commands

Command	Description
?	Use the '?' character to display help for any command or mode. <u>Example:</u> From the root directory, enter the following command to list all parameters that can be changed using the 'set' command: set ?
CTRL-Z	Return to root mode. Cancel command entry (alternative to backspace delete).
exit	Return to parent node / mode. all (exit all) Return to parent mode.
logout	Terminate this telnet session. May be entered from any mode.

5.2.2 debug

The **debug** command is used to view diagnostic information for the base station.

Table 29: CLI - Interface Command	
Command	Parameter/Description
debug	<p>dump - Save the information to the specified FTP server. <Server> - IP Address of the Server to dump data to <File> - File Name of the dump data</p> <p>mode - Show/change the current debug mode setting. level - <normal(0) monitoring(1) debug(2)> server - IP address of the default FTP server for automatic dump of debug info and system error messages.</p> <p>reset - Reset the DEBUG data structure content. CrcErrors - <i>absolute</i> SymErrors - <i>absolute</i> DISdus - <i>absolute</i> UISdus - <i>absolute</i> DIMpdus - <i>absolute</i> UIMpdus - <i>absolute</i> DISecMgm - <i>absolute</i> UISecMgm - <i>absolute</i> DIDefaultSdus - <i>absolute</i> UIDefaultSdus - <i>absolute</i> Fpc - <i>absolute</i> Bwr - <i>absolute</i> Pgb - <i>absolute</i></p> <p>rxmode - Set to continuous receive mode.</p> <p>show - Display DEBUG data structure content. FrameNumber - <i>RO -- MAC statistics;</i> Stations - <i>RO -- MAC statistics;</i> UIServiceFlows - <i>RO -- MAC statistics;</i> DIServiceFlows - <i>RO -- MAC statistics;</i> DIUsage - <i>RO -- MAC statistics;</i> UIUsage - <i>RO -- MAC statistics;</i> CrcErrors - <i>Resetable -- MAC statistics;</i> SymErrors - <i>Resetable -- MAC statistics;</i> DISdus - <i>Resetable -- MAC statistics;</i> UISdus - <i>Resetable -- MAC statistics;</i> DIMpdus - <i>Resetable -- MAC statistics;</i> UIMpdus - <i>Resetable -- MAC statistics;</i> DISecMgm - <i>Resetable -- MAC statistics;</i> UISecMgm - <i>Resetable -- MAC statistics;</i> DIDefaultSdus - <i>Resetable -- MAC statistics;</i> UIDefaultSdus - <i>Resetable -- MAC statistics;</i> Fpc - <i>Resetable -- MAC statistics;</i> Bwr - <i>Resetable -- MAC statistics;</i> Pgb - <i>Resetable -- MAC statistics;</i> Cinr - <i>RO -- PHY statistics;</i> Rssi - <i>RO -- PHY statistics;</i> Fofs - <i>RO -- PHY statistics;</i> Corb - <i>RO -- PHY statistics;</i> mac - <i>Display MAC subgroup statistics.</i> phy - <i>Display MAC subgroup statistics.</i> monitor - <i>Enter into monitor mode, press any key to exit.</i></p> <p>txmode - Set to continuous transmit mode.</p>

5.2.3 interfaces

The **interfaces** command is used to view and configure the front panel Data and Management (Mgmt) Ethernet ports.

Table 30: CLI - Interfaces Command		
Command	Command	Parameter/Description
ethernet		Ethernet port settings.
		<p>IntSep Select integrated or separated management mode.</p> <p>0: The Data Ethernet port is used for data and local management traffic. The Mgt Ethernet port is disabled.</p> <p>1: Only the Mgt Ethernet port is monitored for local management traffic. Select this mode only when data and management networks are physically isolated.</p> <p>DataDuplex Data Ethernet port settings.</p> <p>0: Auto-detect speed and duplex.</p> <p>1: Operate at 10Base-T half duplex mode only.</p> <p>2: Operate at 10Base-T full duplex mode only.</p> <p>3: Operate at 100Base-T half duplex mode only.</p> <p>4: Operate at 100Base-T full duplex mode only.</p> <p>default Restore all settings to factory default values.</p> <p>MgmDuplex Management Ethernet port settings.</p> <p>0: Auto-detect speed and duplex.</p> <p>1: Operate at 10Base-T half duplex mode only.</p> <p>2: Operate at 10Base-T full duplex mode only.</p> <p>3: Operate at 100Base-T half duplex mode only.</p> <p>4: Operate at 100Base-T full duplex mode only.</p> <p>Intra-SectorL2Forwar Establish a virtual private network at layer 2 between any number of subscriber CPEs in single sector.</p> <p>0: Disabled - base station will not accept traffic resubmitted to the Ethernet port</p> <p>1: Internal - base station creates a service flow to provide transparent tunneling for higher-layer protocols</p> <p>2: External - base station allows an external switch to forward VLAN traffic back through the (originating) base station Ethernet port and over the wireless.</p>
management		Management configuration settings.
	set	<p>LocalIp Enter the static base station network IP address.</p> <p>LocalMask Enter the base station subnet address mask.</p> <p>DefGateway Enter the IP address of the default gateway on the local Ethernet segment.</p> <p>DhcpEnable</p> <p>0: Manually enter the following IP parameters</p> <p>1: Have the base station obtain its IP address from a DHCP server.</p> <p>ToDIP Enter the IP address of an the SNTP server.</p> <p>TimeZoneHour Enter the offset (hours) from GMT.</p> <p>TimeZoneMinute Enter the offset minutes (fraction) from</p>

Table 30: CLI - Interfaces Command		
Command	Command	Parameter/Description
		<p>GMT.</p> <p>DayLightSavings Enable automatic time change for daylight savings.</p> <p>0: Disabled 1: Enabled</p> <p>SysLogIP Enter the IP address of the System Log server.</p> <p>DhcpServIPUsr Specify the IP address of a DHCP server. The base station forwards all subscriber DHCP requests to this address.</p> <p>DhcpType Set the DHCP relay type.</p> <p>0: Base station forwards all subscriber DHCP requests to the DHCP server that the base station used to obtain its IP address.</p> <p>1: Subscriber to use the specified DHCP server. Use DhcpServIPUsr to specify the DHCP server to be used by subscribers.</p> <p>MgmtVLAN Enable or disable management using VLAN tagged traffic.</p> <p>0: Disable tagged management. 1 Enable tagged management.</p> <p>VlanId Enter the VLAN ID (VID) for the management VLAN.</p> <p>default Restore all settings to factory default values.</p>
wireless		Wireless interface configuration settings:
	set	<p>Modify settings.</p> <p>*DefaultUISfEnable</p> <p style="padding-left: 20px;">0 -- disable default uplink service flows 1 -- enable default uplink service flows</p> <p><i>Note: Default DL service flows are permanently enabled.</i></p> <p>*RfDLChannel - <3400000 - 3600000; step=250></p> <p>*RfSeparation - <-100000 - 100000; step=50000></p> <p>RfTxOutputPower - <0 - 23; step=1></p> <p>RefRSS Enter the reference RSS value</p> <p>SSTxPowerControl - 0 -- disable; 1 -- enable</p> <p>RfAutoRxGainEnable - 0 -- disable; 1 -- enable</p> <p>PhyClk</p> <p style="padding-left: 20px;">80 -- UnlicensedProprietary 84 -- Multiple_Of_1.5MHz 91 -- Unlicensed 96 -- Multiple_Of_1.75MHz</p> <p>*ChannelBandwidth</p> <p style="padding-left: 20px;">5 -- 7 Mhz 6 -- 3.5 Mhz;</p>

Table 30: CLI - Interfaces Command		
Command	Command	Parameter/Description
		<p>*CyclicPrefix (phyCp) 0 -- 1/32 1 -- 1/16 2 -- 1/8 3 -- 1/4</p> <p>*MacMaxDistance maximum distance to any subscriber</p> <p>MacFrmDuration 0 -- 2.5 1 -- 4 2 -- 5 3 -- 8 4 -- 10 5 -- 12.5 6 -- 20</p> <p>*MacSyncMode 0 -- NoSynch 1 -- Master with GPS Synch 2 -- Master 3 -- Slave 4 -- Backup Master</p> <p>MacAirInterfaceStatu - 0 -- disable RF; 1 -- enable RF</p> <p>MacDLRatio downlink ratio (25 - 80)</p> <p>default restore all settings to factory default values.</p>
	show	Display the general wireless configuration.

5.2.4 ipAddress

The *ipAddress* command is used to view and configure the base station IP address parameters.

Table 31: CLI - IP Address Command	
Command	Parameter/Description
set	<p>Modify the base station network IP settings.</p> <p>Address: <IP Address> Enter new IP address. XXX.XXX.XXX.XXX</p> <p>Mask: <IP Mask> Enter new Netmask value. XXX.XXX.XXX.XXX</p> <p>Dhcp: Enable or disable DHCP support. 0: - Static address 1: - DHCP allocated address.</p> <p>Gateway < Default gateway> Enter new gateway address. Requires confirmation to proceed.</p>
show	Display all IP address information.

5.2.5 monitor

The **monitor** command is used to remotely view a dynamically updated screen of statistics for the base station.

Table 32: CLI - Monitor Command																							
Command	Parameter/Description																						
monitor	Dynamic display of base station statistics values. For example: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;"><i>MacFrameNumber:</i> 11296</td> <td style="width: 50%;"><i>MacUIMpdus:</i> 2378</td> </tr> <tr> <td><i>MacStations:</i> 5</td> <td><i>MacArqReTx:</i> 0</td> </tr> <tr> <td><i>MacUIServiceFlows:</i> 3</td> <td><i>MacBcstSdus:</i> 0</td> </tr> <tr> <td><i>MacDIServiceFlows:</i> 3</td> <td><i>MacSecMgmPkts:</i> 132</td> </tr> <tr> <td><i>MacDIUsage:</i> 7 %</td> <td><i>MacFpc:</i> 9</td> </tr> <tr> <td><i>MacUIUsage:</i> 3%</td> <td><i>MacBwr:</i> 1928</td> </tr> <tr> <td><i>MacCrcErrors:</i> 0</td> <td><i>MacPgb:</i> 0</td> </tr> <tr> <td><i>MacSymErrors:</i> 0</td> <td><i>PhyCinr:</i> 31.5 dB</td> </tr> <tr> <td><i>MacDISdus:</i> 3590</td> <td><i>PhyRssi:</i> -12.0 dBfs</td> </tr> <tr> <td><i>MacUISdus:</i> 1889</td> <td><i>PhyFofs:</i> 183 Hz</td> </tr> <tr> <td><i>MacDIMpdus:</i> 3574</td> <td><i>PhyCorb:</i> 0</td> </tr> </table>	<i>MacFrameNumber:</i> 11296	<i>MacUIMpdus:</i> 2378	<i>MacStations:</i> 5	<i>MacArqReTx:</i> 0	<i>MacUIServiceFlows:</i> 3	<i>MacBcstSdus:</i> 0	<i>MacDIServiceFlows:</i> 3	<i>MacSecMgmPkts:</i> 132	<i>MacDIUsage:</i> 7 %	<i>MacFpc:</i> 9	<i>MacUIUsage:</i> 3%	<i>MacBwr:</i> 1928	<i>MacCrcErrors:</i> 0	<i>MacPgb:</i> 0	<i>MacSymErrors:</i> 0	<i>PhyCinr:</i> 31.5 dB	<i>MacDISdus:</i> 3590	<i>PhyRssi:</i> -12.0 dBfs	<i>MacUISdus:</i> 1889	<i>PhyFofs:</i> 183 Hz	<i>MacDIMpdus:</i> 3574	<i>PhyCorb:</i> 0
<i>MacFrameNumber:</i> 11296	<i>MacUIMpdus:</i> 2378																						
<i>MacStations:</i> 5	<i>MacArqReTx:</i> 0																						
<i>MacUIServiceFlows:</i> 3	<i>MacBcstSdus:</i> 0																						
<i>MacDIServiceFlows:</i> 3	<i>MacSecMgmPkts:</i> 132																						
<i>MacDIUsage:</i> 7 %	<i>MacFpc:</i> 9																						
<i>MacUIUsage:</i> 3%	<i>MacBwr:</i> 1928																						
<i>MacCrcErrors:</i> 0	<i>MacPgb:</i> 0																						
<i>MacSymErrors:</i> 0	<i>PhyCinr:</i> 31.5 dB																						
<i>MacDISdus:</i> 3590	<i>PhyRssi:</i> -12.0 dBfs																						
<i>MacUISdus:</i> 1889	<i>PhyFofs:</i> 183 Hz																						
<i>MacDIMpdus:</i> 3574	<i>PhyCorb:</i> 0																						

5.2.6 reboot

The **reboot** command is used to remotely reset the base station.

Table 33: CLI - Reboot Command	
Command	Parameter/Description
reboot	Reboot the base station. Confirmation is required.

5.2.7 set

The **set** command is used to control selected fields.

Table 34: CLI - Set Command	
Command	Parameter/Description
ipAddress	See the ipAddress command.
privacy	Change privacy related settings on SC. TrustAll: 0 -- no 1 -- yes. UseTestTimers: 0 -- Use normal default timer settings 1-- Use factory test timer settings.
sysContact	Change the system administrator contact information (255 chars max). <val_sysLocation> Enter the location string for this device.
sysLocation	Change the system administrator contact information (255 chars max). <val_sysLocation> : Enter the location string for this device (255 chars max.).
sysName	Change the system name (255 chars max). <val_sysname> : Enter the system name for this device.
variable	Set CLI session variables.

5.2.8 show

The **show** command is used to display operating information about the base station.

Table 35: CLI - Show Command

Command	Parameter/Description																						
eventLog	Display system logging events. For example: <i>Time:.....Tue May 23 14:17:39</i> <i>Txt:.....Radio Type 1: TB3435F7</i> <i>Time:.....Tue May 23 14:17:36</i> <i>Txt:.....RedMax AN-100U Ver. 1.0.58 started.</i>																						
ifCounters	Display counter statistics of device interfaces. For example: <i>Structure --- <<Interface statistics>></i> <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;"><u>64 bits Ingress Counters</u></th> <th style="text-align: left;"><u>64 bits Egress Counters</u></th> </tr> </thead> <tbody> <tr> <td><i>Octets:.....0</i></td> <td><i>Octets:.....0</i></td> </tr> <tr> <td><i>UcastPkts:.....1876059</i></td> <td><i>UcastPkts:.....881643</i></td> </tr> <tr> <td><i>MulticastPkts:.....0</i></td> <td><i>MulticastPkts:.....0</i></td> </tr> <tr> <td><i>BroadcastPkts:.....0</i></td> <td><i>BroadcastPkts:.....583368</i></td> </tr> <tr> <td colspan="2"><i><u>Others</u></i></td> </tr> <tr> <td><i>Name:.....Signal</i></td> <td><i>InDiscards:.....0</i></td> </tr> <tr> <td><i>InMulticastPkts:.....0</i></td> <td><i>InErrors:.....350</i></td> </tr> <tr> <td><i>InBroadcastPkts:.....0</i></td> <td><i>OutDiscards:.....0</i></td> </tr> <tr> <td><i>OutMulticastPkts:.....0</i></td> <td><i>OutErrors:.....0</i></td> </tr> <tr> <td><i>OutBroadcastPkts:.....583368</i></td> <td></td> </tr> </tbody> </table>	<u>64 bits Ingress Counters</u>	<u>64 bits Egress Counters</u>	<i>Octets:.....0</i>	<i>Octets:.....0</i>	<i>UcastPkts:.....1876059</i>	<i>UcastPkts:.....881643</i>	<i>MulticastPkts:.....0</i>	<i>MulticastPkts:.....0</i>	<i>BroadcastPkts:.....0</i>	<i>BroadcastPkts:.....583368</i>	<i><u>Others</u></i>		<i>Name:.....Signal</i>	<i>InDiscards:.....0</i>	<i>InMulticastPkts:.....0</i>	<i>InErrors:.....350</i>	<i>InBroadcastPkts:.....0</i>	<i>OutDiscards:.....0</i>	<i>OutMulticastPkts:.....0</i>	<i>OutErrors:.....0</i>	<i>OutBroadcastPkts:.....583368</i>	
<u>64 bits Ingress Counters</u>	<u>64 bits Egress Counters</u>																						
<i>Octets:.....0</i>	<i>Octets:.....0</i>																						
<i>UcastPkts:.....1876059</i>	<i>UcastPkts:.....881643</i>																						
<i>MulticastPkts:.....0</i>	<i>MulticastPkts:.....0</i>																						
<i>BroadcastPkts:.....0</i>	<i>BroadcastPkts:.....583368</i>																						
<i><u>Others</u></i>																							
<i>Name:.....Signal</i>	<i>InDiscards:.....0</i>																						
<i>InMulticastPkts:.....0</i>	<i>InErrors:.....350</i>																						
<i>InBroadcastPkts:.....0</i>	<i>OutDiscards:.....0</i>																						
<i>OutMulticastPkts:.....0</i>	<i>OutErrors:.....0</i>																						
<i>OutBroadcastPkts:.....583368</i>																							
ifStatus	Display status of device interfaces. For example: <i>Structure --- <<Interface Status>></i> <i>Descr:..... 802.16</i> <i>Type:..... propBWAp2Mp(184)</i> <i>Mtu:..... 2048</i> <i>Speed:..... 16940000</i> <i>PhysAddress:.... 0:09:02:00:89:</i> <i>AdminStatus:.... up(1)</i> <i>OperStatus:.... up(1)</i> <i>LastChange:..... 00:00:13</i>																						
interfaces	Display device interfaces. For example: <table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;"><u>Index</u></th> <th style="text-align: left;"><u>Description</u></th> <th style="text-align: left;"><u>MAC Address</u></th> </tr> </thead> <tbody> <tr> <td><i>1</i></td> <td><i>802.16</i></td> <td><i>00 09 02 00 89 c1</i></td> </tr> <tr> <td><i>2</i></td> <td><i>802.3</i></td> <td><i>00 09 02 00 89 c1</i></td> </tr> <tr> <td><i>3</i></td> <td><i>802.3</i></td> <td><i>00 09 02 00 89 c1</i></td> </tr> </tbody> </table>	<u>Index</u>	<u>Description</u>	<u>MAC Address</u>	<i>1</i>	<i>802.16</i>	<i>00 09 02 00 89 c1</i>	<i>2</i>	<i>802.3</i>	<i>00 09 02 00 89 c1</i>	<i>3</i>	<i>802.3</i>	<i>00 09 02 00 89 c1</i>										
<u>Index</u>	<u>Description</u>	<u>MAC Address</u>																					
<i>1</i>	<i>802.16</i>	<i>00 09 02 00 89 c1</i>																					
<i>2</i>	<i>802.3</i>	<i>00 09 02 00 89 c1</i>																					
<i>3</i>	<i>802.3</i>	<i>00 09 02 00 89 c1</i>																					
ipAddress	Display the IP address data. Address: <IP Address> - IP Address Mask: <IP Address> - Subnet Mask. Dhcp: Enable/disable DHCP support. 0: Static address entered by user. 1: DHCP allocated address. Gateway: <IP Address> - Default GatewayAddress. If no field name is specified, the whole data structure is displayed. For example: <i>Structure --- <<SC IP Address Data>></i> <i>Address:.....192.168.20.97</i> <i>Mask:.....255.255.255.0</i> <i>Dhcp:.....StaticIP(0)</i> <i>Gateway:.....192.168.20.250</i>																						
learnHosts	Display learned MAC addresses of the specified SS. <MacAddr> MAC address of a provisioned SS.																						
privacy	Display base station privacy settings.																						

Table 35: CLI - Show Command	
Command	Parameter/Description
	<p>TrustAll - 0 -- no, 1 -- yes.</p> <p>AKLifetime - Lifetime in seconds that BS assigns to new AK.</p> <p>TEKLifetime - Lifetime in seconds that BS assigns to new TEK.</p>
sflInfo	<p>Display service flow info.</p> <p><MAC Address> - Specify the subscriber MAC address</p> <p>downlink - Display downlink service flow information.</p> <p>uplink - Display uplink service flow information.</p> <p><i>For example:</i></p> <pre>AN-100U(show->)#> sflInfo 00:09:02:00:8c:7f downlink << SF Information >> --- Downlink --- IfBsSfld:.....5106 ScSchedulingType:.....bestEffort(2) MaxSustainedRate:.....800000 bps ScArqEnable:.....false(2) MinReservedRate:.....0 bps SflInfoOctets:.....251088824 MaxLatency:.....0 ms SflInfoTrafficRate:.....787 Kbps TrafficPriority:.....1 SflInfoPkts:.....256244</pre>
sslInfo	<p>Display information about selected/all subscribers. If no MAC address is entered, information for all subscribers is returned. For example:</p> <p><MAC Address> - Specify the subscriber MAC address</p> <pre><< SS Information >> MAC Address:.....00:09:02:00:a1:21 SignalNoise:.....29.6 dB IpAddress:.....192.168.20.30 SignalNoiseMax:.....31.1 dB BasicCid:.....47 SignalNoiseMin:.....23.2 dB DownChannelModCode:.....64QAM(3/4)(6) CrcErr:.....0 SsInfDownlinkRate:.....12705 Kbps AntennaRsl:.....-54 dBm UpChannelModCode:.....64QAM(3/4)(6) Distance:.....0 m SsInfUplinkRate:.....12705 Kbps</pre>
status	Display Wireless Interface information.
sysContact	Display contact info of system administrator.
sysDescr	Display info about system hardware and software.
sysLocation	Display system location information.
sysName	Display system name.
sysUpTime	Display system time running since last reboot.
version	Display the running software version.

5.2.9 softwareConfig

The **softwareConfig** command is used to load new software binary files on the base station. See section 4.5.2: Software Upgrade on page 72.

Table 36: CLI - Software Upgrade Command	
Command	Parameter/Description
backup	<p>Save a backup copy of the base station settings on a remote FTP server.</p> <p>Server: IP Address of the FTP server.</p> <p>File: Use this name when saving the configuration backup file.</p> <p>Which: Specify the settings to be saved: 0 - Alternate configuration. 1 - Active configuration.</p> <p>For example: <i>backup 192.168.20.100 BS_024-061108.cfg 1 <ENTER></i></p> <p>You will be prompted by the FTP server to enter a valid username and password.</p>
restore	<p>Restore the base station settings using a backup copy previously saved on a remote FTP server.</p> <p>Server: IP Address of the FTP server.</p> <p>File: Use this name when saving the configuration backup file.</p> <p>Which: Specify the settings to be saved: 0 - Alternate configuration. 1 - Active configuration.</p> <p>For example: <i>restore 192.168.20.100 BS_024-061108.cfg 1 <ENTER></i></p> <p>You will be prompted by the FTP server to enter a username and password.</p>

5.2.10 softwareUpgrade

The **softwareUpgrade** command is used to load new software binary files on the base station. See section 4.5.2: Software Upgrade on page 72.

Table 37: CLI - Software Upgrade Command	
Command	Parameter/Description
loadimage	<p>Download software image and write into flash.</p> <p>Server: <IP address> - Address of ftp server</p> <p>File: <filename.bin> - Enter file name (including .bin extension).</p>
show	Display the S/W version information in the device.
switch	Switch between the active and inactive software versions. Requires user confirmation to proceed.

5.2.11 user

The **user** command is used to modify the user profiles and passwords.

Table 38: CLI - User Command	
Command	Parameter/Description
access	<p>Change user access level</p> <p>name <username> - User login name</p> <p><access> - Access level (0-10)</p>

Table 38: CLI - User Command	
Command	Parameter/Description
add	Add a user name <username> - User login name to be added <access> Access level
delete	Delete a user name <username> - User login name to be deleted <i>Note: To delete an administrator account: 1) change the account to be deleted to access level '0' (guest), 2) delete the account.</i>
password	Change user password. User is required to enter/confirm new password for this account. < username > - User login name
show	Show all users. For example: <i>User: admin Access: 10 (Administrator level)</i> <i>User: guest Access: 0 (Guest access level)</i>

5.2.12 wmanIfBs

The **wmanIfBs** command is used to ...

Table 39: CLI - WmanIfBs Command	
Command	Parameter/Description
classifier	View or modify the wmanIfBsClassifierRuleTable. add add an instance to the wmanIfBsClassifierRuleTable delete remove an instance from the wmanIfBsClassifierRuleTable show display one or all instances in the wmanIfBsClassifierRuleTable
provForSf	View or modify the wmanIfBsSsProvisionedForSfTable. add add an instance to the wmanIfBsSsProvisionedForSfTable delete remove an instance from the wmanIfBsSsProvisionedForSfTable show display one/all entries in the wmanIfBsSsProvisionedForSfTable
saveAll	Save into non-volatile memory any changes to the SF configuration setting.
serviceClass	View or modify the wmanIfBsServiceClassTable. add add an instance to the wmanIfBsServiceClassTable delete remove an instance from the wmanIfBsServiceClassTable show display one or all instances in the wmanIfBsServiceClassTable
sf	View or modify the wmanIfBsProvisionedSfTable. add add an instance to the wmanIfBsProvisionedSfTable delete remove an instance from the wmanIfBsProvisionedSfTable show display one or all instances in the wmanIfBsProvisionedSfTable
ssConfig	View or modify the subscriber information. add Add an entry of Subscriber Station info. delete Remove Subscriber Station info entries. edit Modify an existing entry of Subscriber Station info. show Display Subscriber Station info entries.

5.2.13 x509

The **x509** command is used to manage the privacy sublayer certificates.

Table 40: CLI - x509 Command	
Command	Parameter/Description
x509	<p>add Download new certificates into the device. (FTP setup required) <Server> IP Address of the Server to download certificates from <File> Certificate file name. (i.e. *.cer or *.pem)</p> <p>delete Delete one of or all the certificates from the device non-volatile memory. <Index> To remove the certificate item specified by Index, -1 for removing all.</p> <p>All To remove all the certificates (Index must be specified as -1).</p> <p>Yes Confirmation to proceed</p> <p>show Display a list of certificates stored in non-volatile memory.</p>

6 Operational Notes

6.1 Self-Provisioning Features

6.1.1 Default Service Flows

The base station automatically creates one default uplink and downlink service flow for each registered subscriber. The default service flows pass initial traffic (i.e., DHCP Discovery or PPPoE Initiation) from hosts connected to subscriber. The default service flows have the lowest QoS settings and the associated classifiers have the lowest priority. The sector-wide bandwidth is limited to 64 Kbps downlink and 8 Kbps uplink. Traffic statistics are reported aggregate with all other service flows. The default service flows and classifiers must be included when calculating the total service flows and classifiers for a sector.

6.1.2 Pass-All Classifier

The 802.3 classifier can be configured to allow unfiltered Ethernet traffic in the direction of the associated service flow.. Configure a classifier to 'pass-all' by setting the MAC address to zero. For example,

- SrcMacAddr:
- DestMacAddr:

Note: Only one subscriber in a sector may have a downlink service flow classifier configured as 'pass-all'. All uplink traffic is subject to filtering by Automatic UL filtering and the host Learning feature (if enabled).

6.1.3 Automatic UL Filtering

The Automatic Uplink filter implemented at the subscriber emulates bridge functionality to prevent local traffic from being transmitted upstream over the wireless interface.

6.1.4 Host Learning

The MAC learning feature allows the base station to automatically learn the MAC addresses of hosts (devices) on the Ethernet segment connected to a subscriber. The learning feature can be enabled individually for any subscriber and the number of learned hosts can be adjusted dynamically. MAC addresses are learned on a first-come basis. The subscriber does not age the learned MAC addresses -- table is re-learned only when the subscriber is rebooted.

Note: Enabling 'host learning' affects the function of downlink 802.3 classifiers (see Generic 802.3 DL Classifiers following). No other classifiers are affected. Remote management must be enabled (managedSS=1) on the subscriber.

6.1.5 Intra-Sector L2 Forwarding (iSL2F)

This feature supports layer 2 network connectivity between subscribers in a single sector (hair-pinning).

For the iSL2F feature to be functional, the following items must be properly configured:

1. Ethernet Tagging: The Ethernet Tagging (ethTag) function must be enabled on each participating subscriber. When enabled, this function identifies data traffic through this subscriber by using 802.1Q VLAN tags. Refer to the RedMAX Outdoor Wireless Access Subscriber Modem User Manual for details. The ethTag function can be configured only using the subscriber CLI commands.

2. MAC Learning: The Learning function must be enabled on the base station for each participating subscriber. The Learning feature allows the base station to automatically discover the MAC addresses of hosts (devices) on the Ethernet segment connected to a subscriber. Set the Max Hosts Number to learn up to sixteen hosts on the specified subscriber. Refer to section 4.3.1: Subscribers on page 47.

External Mode: When external mode selected, the base station accepts traffic resubmitted to the Ethernet port. This permits an external L2 switch to forward traffic between hosts located behind subscribers in the same sector. The L2 VLAN switch must have the capability to forward traffic back through the originating Ethernet port. This capability is not supported by all Ethernet switches, but may be possible through specific VLAN-to-Ethernet port mappings or by VLAN switching.

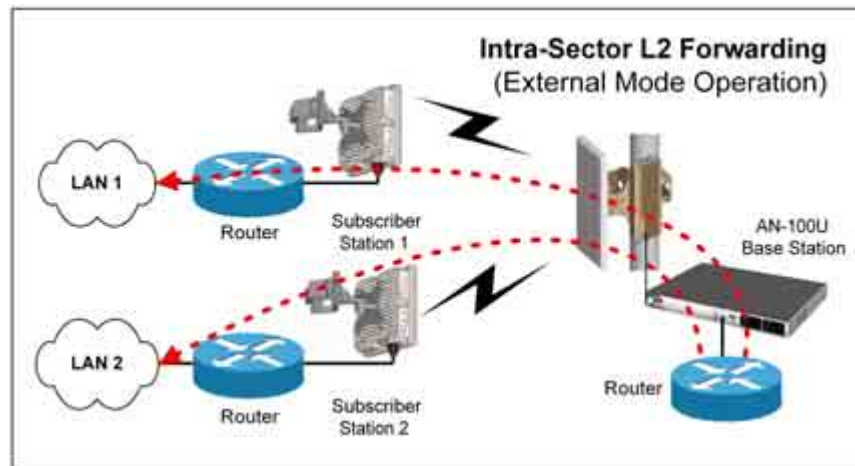


Figure 39: Op Notes - Intra-Sector Layer 2 Forwarding -- External Mode

Internal Mode: When internal mode is enabled, the base station classifies and forwards traffic between hosts located behind subscribers in the same sector (hairpinning) without requiring an external switch. Subscriber traffic arriving at the base station appears on the Ethernet port and is also resubmitted to the MAC for reclassification and broadcast over the air.

On the AN-100U the service is established by defining a service flow to act as a transparent tunnel for higher layer protocols (i.e. ARP, IP, SNA). VLAN tags, inserted by the subscriber unit are used to uniquely identify members of a shared VLAN. The base station establishes individual forwarding rules for each virtual LAN as identified by the VLAN VID field.

Tagged traffic is transmitted from the subscriber to the base station, where each VLAN tag (specifically the VID) is inspected in each frame and forwarding rules are applied. Traffic arriving at the base station from subscribers appears on the Ethernet port as well as being resubmitted to the MAC for reclassification and broadcast over the air.

Disabled Mode: When the Intra-Sector L2 Forwarding feature is disabled, the base station will not forward traffic between subscribers (hairpinning) and will not accept traffic resubmitted to the Ethernet port by an external switch.

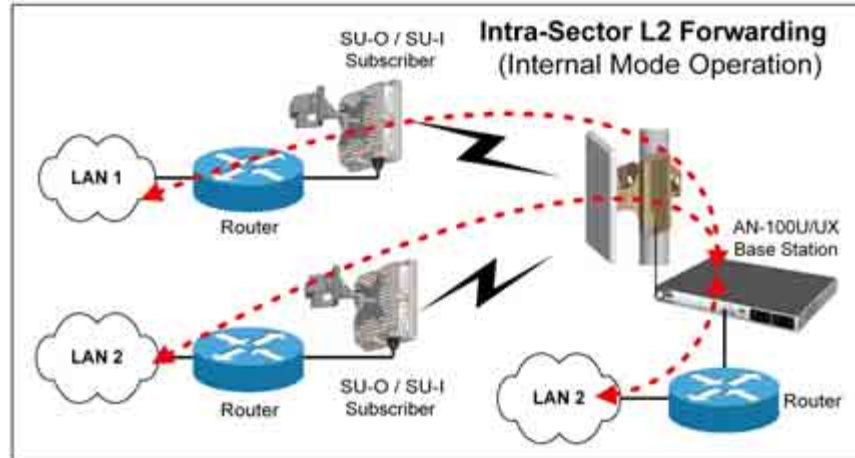


Figure 40: Op Notes - Intra-Sector Layer 2 Forwarding -- Internal Mode

6.1.6 DHCP Option 82

The DHCP option 82 support can be used by equipment upstream of the RedMAX base station to uniquely identify when customer equipment located behind a subscriber issues a request for network access (DHCP request for an IP address). This information, used in combination with other network notification messages, allows network operators to be informed when customers activate self-install CPEs. Operations can then take manual or automated actions to authorize and activate the services for this subscriber.

The format of Relay Agent Option 82 option is as follows:

- Circuit ID:** MAC address of base station.
- Remote ID:** MAC address of subscriber.
- GiAddr:** Management IP address of base station (if added by upstream equipment).

Note: The subscriber CLI control 'dhcpRelayAgent' must be enabled prior to using the Option 82 feature.

6.2 Privacy Layer -- Encryption

6.2.1 Overview

All RedMAX equipment is hardware enabled to support the privacy sub-layer as defined in 802.16-2004. The process of modem authentication and message exchange for user traffic encryption is described fully in the 802.16-2004. The Privacy Sub-layer can be enabled on a individual subscribers. This release supports user traffic encryption through the DES cryptographic suite only, with the Traffic Encryption Key secured to a 3DES level. Encryption must be enabled separately for the base station and each participating subscriber.

Authentication and registration are part of the 802.16 MAC common part sublayer. Authentication is based on the use of PKI technology-based X.509 digital certificates. Each wireless subscriber access modem will contain one built-in certificate for itself and another for its manufacturer. These certificates allow the customer modem to uniquely authenticate itself with the base station. The base station can then verify that the customer modem is authorized to receive service. If the database lookup succeeds, the base station sends the customer modem an encrypted authorization key, using the customer modem's public key. This authorization key is used to encrypt and protect any transmissions that follow.

The authentication process ensures the subscriber modem is an authentic device and not a rogue that was brought into the wireless sector area. For authentication the devices use X.509 digital certificates [IETF RFC 3280] together with RSA public-key encryption algorithm. At the end of the authentication, process the device has a shared key with its peer known as AK (Authentication Key). This Key is used to derive the TEK.

Management messages between base station and subscriber modem are protected with a HMAC digest that ensures the data was not altered over the air in any way. The authenticity of the CA's signature, and whether the CA can be trusted, can be determined by examining its certificate in turn. This chain must however end somewhere, and it does so at the root certificate, so called as it is at the root of a tree structure. Root certificates are implicitly trusted. Redline Root CA certificate is issued by Verisign. It can be used to validate the certificates of the subscriber modem and cannot be used to validate the certificates supplied by another vendor.

Authentication Using Digital Certificates

The entire authentication process is performed inside the base station and it does not require external AAA servers (e.g. RADIUS, TACCACS, LDAP, etc). Sixty-four Kilobytes (64 KB) of memory is reserved for X509 Root CA certificates. A root certificate allows the validation of subscriber modem certificates.

Validation process implies a check of the certificates against the information stored on the base station. The result of this check is a truth value based on which the base station will allow the subscriber to join the network. There are two scenarios:

1. Base station can skip the validation of the certificates sent from subscriber and performs only a basic test to ensure is properly encoded.
2. Base station checks the digital signature with the information stored on the board.

To switch between the two scenarios the operator modifies the field TrustAll under "privacy" group.

6.2.2 Configuring Privacy

This section describes the CLI commands for Privacy sublayer functions. Settings for privacy modules are defined under "privacy" group. The values set by the user are taken into account only after a system reboot, even though the values are stored into NVRAM memory immediately. The privacy module on the base station always running, while the subscriber modem can be enabled or disabled.

X509 Root CA Certificates

Each subscriber modem shipped from the factory comes with two X509 certificates - subscriber modem certificate and CA certificate. The subscriber modem certificate is unique per subscriber modem sends the certificates to the base station during network entry procedure in order to authenticate itself. The base station verifies the certificates are valid and allows or denies the subscriber request to join the network.

Base Station Privacy Settings

The AK lifetime specifies the period the subscriber is authenticated with the base station, and TEK specifies the period the traffic key is valid. Changes to these parameters require a reboot. The two keys are replaced at regular time intervals as specified by their corresponding lifetimes. The operator can also specify to trust all subscriber certificates or to validate each subscriber based on stored root certificates. There are two modes:

Operational Mode: The base station uses the 802.16 standard default values.

Test Mode: Used only for testing the standard certification process.

It is strongly recommended that the privacy timers of all base stations be adjusted to the following settings.

```

AKLifetime      604800
TEKLifetime     43200
AuthGraceTime   600
TEKGraceTime    60
ReauthWaitTime  10
AuthRejWaitTime 10
OpWaitTime      10
  
```

Subscriber Modem Privacy Settings

The privacy settings (enable/disable) must match on the base station and the subscriber modem, otherwise the subscriber modem will never register.

To enable privacy module in SS follow these steps

```

SUO#> privacySS
SUO(privacySS ->)#> set Enabled 1
  
```

To disable privacy module in SS follow these steps

```

SUO#> privacySS
SUO(privacySS ->)#> set Enabled 0
  
```

6.2.3 Add x509 Certificates to the Base Station

Use the following procedure to add X.509 certificates to the base station. Note that installing certificates does not automatically activate privacy in the subscribers.

Prerequisites:

1. The base station must be updated using CLI.
2. An FTP server is required for all upgrades. The FTP server must be located on the network connected to an active Ethernet port (Data or Mgmt) on the base station.
3. You must copy the X.509 certificate(s) into the default file location for the FTP server (you can not specify a 'path' in the CLI dialog).

Steps

1. Open a Telnet connection to the AN-100U.
2. Use the following command to add an x.509 certificate. You will be prompted to enter a username and password for the FTP server.

```
x509 add<FTP_IP> <CERTIFICATE_NAME> <ENTER>
```

Where,

<FTP_IP> is the IP address of your ftp server. The x.509 file must be in the server root folder.

<CERTIFICATE_NAME> is the name of the x.509 certificate to be loaded to the base station.

For example:

```
AN100U#> x509 add 192.168.10.100 Redline_Communications_Root_CA.509
```

```
user name: target
```

```
password:
```

```
X509LoadDownloading ...
```

3. Use the following command to confirm the x.509 certificate was loaded successfully.

x509 show <ENTER>

For example:

x509 show <ENTER>

Index #0:

Subject:

C = CA, O = Redline Communications Inc, CN = Redline Communications Inc

Root CA Issuer:

C = CA, O = Redline Communications Inc, CN = Redline Communications Inc

Root CA Validity:

Not Before: Dec 2 00:00:00 2005 GMT

Not After : Dec 1 23:59:59 2035 GMT

6.3 Co-Channel Operation

Greater complexity in the modulation technique requires a greater (C/N) ratio to maintain adequate throughput. In the presence of an interferer, the useful signal is degraded. The ratio of 'useful signal' to 'interfering signal' is called the carrier-to-interference ratio. If the interferer signal power is additional noise power, and the overall C/I+N ratio can be estimated as:

$$CINR = C/I + C/N - 10 \log(10^{\frac{C/I}{10}} + 10^{\frac{C/N}{10}}), \text{ where all variables are in decibels.}$$

This formula corresponds with an expectation that a very strong signal (high C/N) is able to withstand higher levels of interference (low C/I). If the signal is weak, even low interference levels will significantly degrade the useful signal. Consider the following examples:

Case 1: The threshold CINR for 64 QAM 3/4 is around 23.25 dB. If the C/N ratio is 24 dB, the system will operate at 64 QAM 3/4 (signal is close to the 64 QAM 3/4 threshold, but still above it). If we introduce an interferer with a signal 30 dB weaker than the system signal (i.e., C/I = 30 dB), the overall CINR will drop to around 23 dB, forcing the system to change the modulation rate to 64 QAM 2/3.

Case 2: If the signal is very strong and the C/N ratio is around 28 dB, it will require a much stronger interferer to force a drop in modulation. According to the formula above, for a C/N of 28 dB, the C/I should be 25 dB in order to force a drop in modulation. In this case the interferer was 5 dB stronger than the first case.

The following table lists experimentally obtained minimal C/I ratios required for the system to not change modulation:

Table 41: Op. Notes - Co-channel C/I dB Measured Results			
Modulation/Coding	CINR threshold dB	C/I: Case 1 dB	C/I: Case 2 dB
64 QAM 3/4	23.25	34	24.4
64 QAM 2/3	21.75	32	22.7
16 QAM 3/4	18	28	18.2
16 QAM 1/2	15	26	16.4
QPSK 3/4	11.6	21	12.1
QPSK 1/2	6.75	19	9.4

In case 1 the signal is already very close the threshold rate (C/N is less than 1 dB above the CINR threshold) and even weak interference can force the system to change to a

lower modulation. A moderately high C/I ratio is required for the modulation to remain unchanged.

In case 2 the signal is very strong (C/N is more than 10 dB above the CINR threshold) and can experience more severe interference without being forced to change modulation.

The amount of interference required to force the system to go to the lower modulation rate in these two extreme cases is very different, and in an actual deployment scenario a full range of results are possible. Careful planning is necessary when frequency reuse is required, and sufficient fade margin must be included to anticipate fluctuations of both C/I and C/N.

6.4 Interference Issues

6.4.1 Multipath Interference

The base station is designed with high immunity to interference and multipath signals. Its core technology is Orthogonal Frequency Division Multiplexing (OFDM), capable of reliable performance under multi-path and frequency selective fading known to have severe signal fading and distortion effects in the sub-11 GHz frequencies.

Multipath interference is a significant problem in long-range links, and in near line-of-sight, and non line-of-sight links. Multipath is a form of self-interference occurring when signal reflections arrive slightly later than the primary signal. The result can be destructive interference that can essentially null out the primary signal or overlap the original signal such that it cannot be decoded. Multi-path interference is a problem with long-range links where reflections off the ground, snow, and water frequently interfere with the primary signal. It is also a problem in urban environments where the signal reflects off buildings, trees, and roads.

OFDM breaks up the transmit signal into many smaller signals. For example, instead of one single carrier carrying 70 Mbps of data (wireless interface rate), there are 192 separate carriers, each carrying about 364 Kbps of data (in the case of the Redline product) in a 14 MHz bandwidth. If selective fading degrades one or two carriers, the impact is minimal since the information is spread across the remaining carriers.

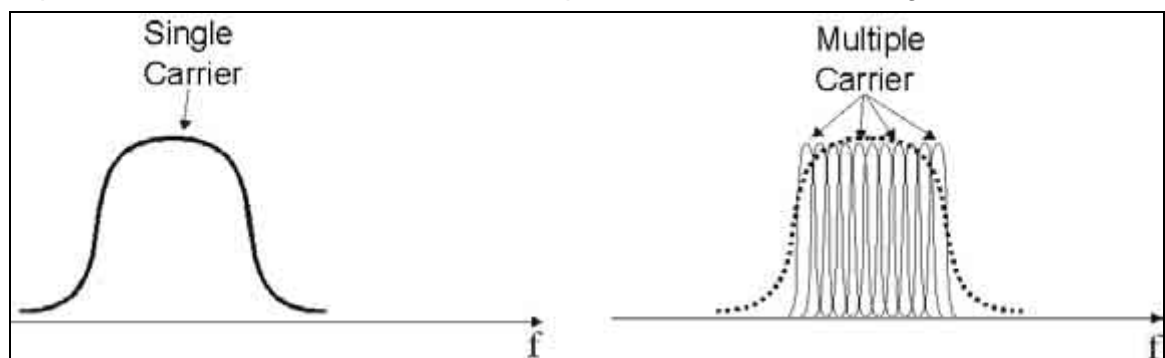


Figure 41: Op Notes: OFDM Multiple Carriers

One key aspect of OFDM implementation is that the individual carriers overlap significantly to preserve overall bandwidth. Normally, overlapping signals would interfere with each other, however, through special signal processing, the carriers in an OFDM waveform are orthogonal to each other.

Multipath interference may cause individual narrowband channels to be altogether lost. This problem is addressed in the Redline implementation in three ways:

1. Equalizing the received signal based on an estimate of the channel fading conditions (restoring the faded sub-channels).
2. Interleaving the data before modulation onto the individual sub-channels (so that adjacent data symbols do not necessarily end up on adjacent sub-channels, and thus deep fades do not impair large chunks of the signal).
3. Convolutional encoding of the input data introduces correlations between signal samples that are echoed on sub-channels occurring in separate parts of the spectrum. This allows the receiver to infer the values of the signal that were transmitted on fatally faded sub-carriers. The key advantage of multiple carriers is that the signal is more robust to multipath disturbance, as described below.

OFDM equalization and coding techniques cannot overcome all forms of sharp, multipath-related fading. For additional robustness, the OFDM implementation uses a guard interval between each of the sub-channels. This guard interval is filled with redundant data taken from the end of the same channel symbol and repeated at the beginning of each channel symbol. Multipath echoes from each individual sub-channel overlap the guard interval, rather than overlapping data in other symbols. Used in conjunction with adaptive equalization, coding, and modulation, use of the guard interval provides reliable operation in a wide class of non line-of-sight environments.

6.4.2 Calculating Receive Sensitivity (WiMAX Testing)

Overview

The WiMAX test for receive sensitivity modifies the methodology from 802.16 to allow results to be obtained easier and faster. The standard Bit Error Rate (BER) of 1×10^{-6} remains the benchmark for these calculations. The BER is obtained by measuring Packet Error Rate (PER), but PER cannot truly be measured (it is a limit) and requires that a test be performed to estimate the PER value. Larger sample sizes will produce more accurate values for PER. There is a practical limit to the size of the test sample, and WiMAX has chosen the number of packets in the sample to enable result that will approximate a BER lower than 1×10^{-6} .

Sample Test for Subscriber Receive Sensitivity

1. Connect packet generator to the base station-to-subscriber link and then configure packet generator to send 50,000 Ethernet packets with payload of 288 Bytes (i.e., total Ethernet packet size is $288 + 18 = 306$ Bytes). Payload should not be chosen by the packet generator, but must be filled with the pattern defined in the WiMAX standard. The packets should be sent at a rate to fill at least 80% of the downlink (DL) frame.
2. Count the number of packets received. If less than 97 packets are lost, it can be stated with 95% confidence that the BER is 1×10^{-6} or lower.
3. Repeat the test by sending 20,000 Ethernet packets with payload of 864 Bytes. If less than 118 packets are lost, it can be stated with 95% confidence that the BER is 1×10^{-6} or lower.
4. You repeat the test by sending 10,000 Ethernet packets with payload of 1488 Bytes. If less than 100 packets are lost, it can be stated with 95% confidence that the BER is 1×10^{-6} or lower.
5. Receiver sensitivity is defined as the lowest RSSI value tested where samples for all three packet sizes did not exceed the maximum number of lost packets. The 95% confidence level indicates that if the test is repeated multiple times, you will obtain passing results 95 times out of 100.

Refer to the following table for a summary of the test parameters.

Table 42: Op Notes: Receive Sensitivity Tests (95% Confidence)			
Equivalent BER	Packets Sent	Payload Size	Max. Packets Lost
1x10 ⁻⁶	10,000	1,488	100
	20,000	864	118
	50,000	288	97
1x10 ⁻⁹	60,000	1,488	57
	100,000	864	55
	300,000	288	100

6.4.3 General Interference

Redline has introduced several techniques into its products to mitigate interference issues:

1. OFDM: multiple carriers using both time and frequency diversity to provide high tolerance to co-channel and adjacent channel interference, remove ISI due to multipath and recover data from carriers falling in regions of deep channel fades.
2. Multiple channels (twenty-eight non-overlapping at 3.5 MHz) for diversity and interference mitigation.
3. Adaptive modulation using six transmission rates to suit varying link conditions.
4. Adaptive encoding is heavily coded to substantially increase robustness. State of the art FEC using Convolutional-coding gives the base station superior frequency selective fading mitigation capability.
5. Narrow beam antennas with high side lobe and backlobe isolation and very low VSWR.
6. Antenna cross-polarization enabling equipment co-location as well as effective frequency planning.
7. High receiver dynamic range to address dynamic interference.
8. State of the art filtering at the RF, IF and baseband levels to reduce interference.
9. Choice of non-adaptive modulation to provide stable burst rate during periods of rapid interference variations on the link.

7 Troubleshooting

7.1 Secondary Management Connection (SMC)

The SMC is used to exchange management traffic between the base station and subscribers (e.g., statistics and software downloads). A minimum downlink rate of 256 Kb/s is shared between all managed subscribers in a sector. A minimum uplink rate of 32 Kbps is provided on a per-subscriber basis. Additional uplink and downlink bandwidth available data scheduling is also made available to the SMC.

7.2 Factory Default Settings

The table lists some important factory default settings for the base station terminal.

Table 43: Troubleshooting - Factory Default Settings			
Setting	Sub	Field	Value
Ethernet Interface		Management	Via Data port (integrated)
Management Interface		IP Address	192.168.101.3
Wireless Interface	RF	Frequency	3448000 KHz*
Wireless Interface	RF	Reference RSS	69 dBm
Wireless Interface	RF	Tx Power	0 db
Wireless Interface	PHY	Channel size	3.5 MHz
Wireless Interface	PHY	Guard Interval	1/4
Wireless Interface	MAC	Adaptive DL/UL Ratio	Disabled
Wireless Interface	MAC	Cell Range Km	5
Wireless Interface	MAC	DL Ratio	54
Wireless Interface	MAC	Frame Duration	10 msec
Wireless Interface	MAC	Synchronization Mode	No sync
Admin Login		Login Password	admin admin
Guest login		Login Password	guest guest
Debug Login		Login Password	debug redline

*Based on 3-4-3.6 GHz radio.

7.3 Front Panel Diagnostics



Figure 42: Diagnostics: Base Station Front Panel View

7.3.1 System LEDs

The front panel of the terminal includes a number of LEDs to monitor operation of the system and assist troubleshooting. Refer to section 3: Physical Description on page 24.

7.3.2 Console Port

The front panel includes the Console port. Use the CLI commands to interrogate the base station status and program most system settings.

7.3.3 System Reset Switch

Throughout this section, reference is made to the reset switch, which is a micro-switch recessed in the front panel in the system block. Use a small narrow object, such as a paper clip, to access the switch.

Depressing the reset switch for less than five seconds activates a short-reset (equivalent to power-cycle). Statistical values are reset.

Depressing the front panel reset switch for more than five seconds activates a long-reset. A long-reset reloads the factory defaults for the IP Address, IP subnet mask, password, and statistical values are reset.

7.4 Detecting Channel Interference at Startup

Following a power-cycle or reboot, the base station monitors the RF Channel to detect interference on the uplink channel. The transceiver is set to receive mode and the PHY is programmed to receive a long preamble from a WiMAX base station. If no preamble is detected during the one-second interval, the channel is considered free of interference from other WiMAX equipment.

If a long preamble is received, the base station continues to monitor the channel for an additional three seconds. If an 802.16d DL-Map is received, the following message will be entered into the event log:

WARNING: RF Channel Conflict with [BS Id]

This message in the event log indicates that another base station has been detected using the following RF-PHY characteristics:

- Same DL channel frequency as the UL channel frequency of this SC
- Same Cyclic Prefix
- Same channel size (i.e., 7 MHz)

If a long preamble was received, but no DL-Map was detected, the following message will be entered into the event log:

WARNING: Unknown Interference was detected on the UL channel

This second message does not necessarily indicate interference from another base station, and may be the result of cross-interference from subscriber stations.

7.5 Recovering a Lost IP address

Use a DB-9 serial cable to access the base station serial console. The configuration of the serial port should be 57,600 bps, no parity, 8 data bits, 1 stop bit. Once connected, type in the command `ifShow` and read the value of `inet` under the `idt` interface.

7.6 Troubleshooting the Web Interface

These troubleshooting steps assume that the status LEDs on the front panel of the terminal indicates normal function.

1. Open a Web browser and attempt to login to the base station terminal. If the terminal does not respond by displaying the login dialog box, check that the correct IP address is being used. The factory default address is listed in the Troubleshooting section. The IP address may have been changed during installation. For correct operation the host computer and the terminal must appear to be on the same subnet. Ensure that the IP address for the PC is set to the same subnet as the terminal. For example, the IP address should only differ in the last octet (i.e., 192.168.101.X).
2. The next test is to verify the IP address is reachable from the computer. Use the ping command to test the connection between the terminal and host computer. The system always responds to ping frames less that 577 bytes in length.
If the ping test is successful the host computer was able to send and receive packets. The problem may be with the Internet browser or related settings on the host computer. Re-boot the host computer to try to resolve the problem. If the ping is not successful, the IP address may be incorrect, or a duplicate address may exist.
3. If the current address of the terminal cannot be determined, it is recommended to perform a long-reset. Performing a long-reset restores the terminal IP address and IP Subnet Mask to the factory default values.

Important: The long reset operation will restore many operating parameters to factory default settings.

Table 44: Troubleshooting - Web Interface Diagnostics		
Symptom	Possible Problem	Solution
Login screen cannot be accessed.	Incorrect IP address and/or Subnet Mask.	Perform a ping test from the host computer command line. If the ping test is unsuccessful, then the problem is with the IP address. Perform a long-reset to restore the default address.
	Problems with host computer, or terminal.	If the ping is successful, reboot of the base station and/or host computer.
	Host PC ARP table is incorrectly configured.	Run 'arp -d' whenever connecting to a different base station terminal. Check that the subnet mask for the host PC matches the subnet mask of the terminal. Check that the host PC address is in the same subnet.

7.7 Re-Ranging Log Message

The log message 're-ranging' is recorded by the base station when a registered subscriber initiates a network entry sequence.

There are two common reasons for this event:

1. When network entry is complete, the subscriber retains its 'registered' state by sending data traffic to the base station. When there is no data traffic, the SU-O sends only periodic ranging requests each 25 seconds. Under no-traffic conditions, it may

take the base station more than 25 seconds to declare a subscriber unavailable and mark it as de-registered. During the same 25-second period, the subscriber may declare the base station to be unavailable (i.e., due to poor link conditions) and begin attempts to re-register. In this scenario, the subscriber is attempting to re-register before the base station has declared the subscriber to be failed.

2. This condition may also result from a loss of connectivity between a subscriber and the DHCP server or TOD server. When remote management is enabled on the subscriber (managedSS=1), the subscriber must communicate with the DHCP server and the ToD server specified in the obtained lease. If communication cannot be established within two minutes, the subscriber MAC is rebooted and the attempt repeated.

7.8 Replacing the System Fuse

Important: Always completely remove power from the base station before performing any maintenance on the terminal or modem.



Warning to service personnel:
Caution for all AC and DC models – Double Pole/Neutral fusing.

To replace fuse:

1. Disconnect power from the terminal.
2. Pry off the black plastic cover located on the back panel beside the power switch and extract the red fuse holder. Use an approved tool to remove the glass-cased fuses from the holder. Be certain to replace the fuse(s) into the lower half of the holder, as shown in the diagram below. The fuse holder holds two fuses, both of which are active. Be certain to use fuses of the same type and rating.
3. Replace the fuse holder in the system terminal and secure.
4. Restore power to the base station.

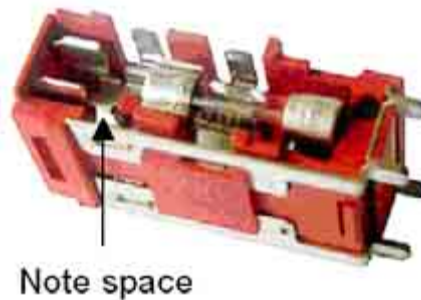


Figure 43: Diagnostics: Base Station Power Supply Fuse Holder

Table 45: Troubleshooting - Fuse Ratings		
Symptom	Power Supply Type	Fuse Rating
AN-100U	AC	2.5 Amp, 5 x 20 mm, time delay glass tube
	DC	4.0 Amp, 5 x 20 mm, time delay glass tube
AN-100UX	AC	2.5 Amp, 5 x 20 mm, time delay glass tube
	DC	5.0 Amp, 5 x 20 mm, time delay glass tube
	DC (from RPS)	5.0 Amp, 5 x 20 mm, time delay glass tube

7.9 RF Troubleshooting

The terminal monitors the status of the outdoor modem and reports any fault conditions in the system event log. The following table lists the general fault conditions reported by the terminal.

Table 46: Troubleshooting - RF Error Diagnostics	
Error Type	Description
IF PLL Unlocked	The PLL (Phase Locked Loop) section within the terminal experienced an error. The System Fault LED may light. Try rebooting the base station.
Communication Error Over IF Cable	Communication between the terminal and the modem failed. Check the IF cable and connectors.
Outdoor Unit Temperature is too High. Air Interface Disabled for 15 Minutes	The internal temperature of the modem is above 82C (180°F). The modem shuts down to allow cooling.
Outdoor Unit Power Supply Error	Displays a fault in the modem power supply. This error could be due to a problem with the internal power supply or with the power source from the terminal. If the 'Low DC Voltage At Radio' error is also indicated, (see below) check the IF cable and connectors. If the 'Low DC Voltage At Radio' error is not indicated, the modem requires servicing.
Outdoor Unit 24V Error	The DC voltage at the modem (carried by the IF cable from the terminal) is lower than the required 24 VDC. Check the IF cable and connectors. The minimum required voltage for operation is 12 VDC.
Air Interface Disabled	The radio is disabled.
Cable Compensation Failed	The measured IF cable compensation is out of specification.
Invalid Radio	The attached radio is not compatible with this terminal/configuration.
Outdoor Unit 3.3V Error	The modem internal power supply is lower than the required 3.3 VDC.

7.10 Debug Mode

Debug mode is used for factory test and advanced troubleshooting. Logging in to the Web GUI or Telnet session using the debug username and password provides access to advanced configuration controls. Debug mode should be used only under the explicit direction of Redline field service or their representatives. It is recommended to change the debug mode default password to restrict access to this feature.

7.11 System Log Messages

Table 47: Troubleshooting - Event Log Messages	
Log Message	Description
Access Address : 0x%08x	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
Air Interface is Disabled	The RF interface has been disabled by the user.
Air Interface is Enabled	The RF interface has been enabled by the user.
Another Upgrade operation is currently running. Skip SNMP[CLI,WEB] upgrade	The user has tried to initiate an upgrade while another upgrade is already in progress. The command has been ignored.
Another Upgrade operation is currently running. Skip SNMP[CLI,WEB] synchronization	The user has tried to synchronize the active and alternate images while a software upgrade is in progress. The command has been ignored.
Another Upgrade operation is currently running. Skip SNMP[CLI,WEB] backup	The user has tried to backup the active image to the alternate while a software upgrade is in progress. The command has been ignored.
Another Upgrade operation is currently running. Skip SNMP[CLI,WEB] restore	The user has tried to apply a configuration file to either the active or alternate images while a software upgrade is in progress. The command has been ignored.
Another Upgrade operation is currently running. Skip switchover	The user has tried to switch software versions while an upgrade is in progress. The command has been ignored.
Backup Detected	This base station is configured as Master, and it has detected the presence of a Backup Master
Backup Function Activated	This base station is configured as a Backup Master, and has been successfully activated
Cable Compensation Ok. Value = [v]	The attenuation of the IF cable is within operating parameters.
Cause Register: 0x%08x	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
CRITICAL: Cable Compensation Failed	The attenuation of the IF cable to the ODU is too high.
CRITICAL: IF Cable Disconnected	The IF cable between the base station IDU and ODU has been disconnected.
CRITICAL: IF PLL Error	The IF chain has encountered a PLL error. Communication with the ODU has been interrupted.
CRITICAL: LO[X] Error	There has been a hardware problem with Local Oscillator [X].
CRITICAL: ODU Temperature is too High	The operating temperature of the base station ODU is too high to continue operation. The IDU will temporarily suspend operation to avoid damage.
CRITICAL: Radio Reference Frequency Error	There has been a hardware problem with the synchronization of the ODU's reference frequency.
CRITICAL: Rx IF PLL Error	The IF chain has encountered a PLL error. Communication with the ODU has been interrupted.

Table 47: Troubleshooting - Event Log Messages	
Log Message	Description
Eep Configuration checksum error. Parameters are reset to factory defaults. Force WD reset...	Self explanatory
Error address: 0x%08x, Error ID: 0x%04x	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
Error when reading from i2c memory	Hardware failure. There was an error while reading some configuration data.
Error when writing to i2c memory	Hardware failure. There was an error while writing some configuration data.
Event log cleared by user	Self explanatory
Exception Program Counter: 0x%08x	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
Fp Status Register: 0x%08x	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
GPS Detected	An external GPS clock source has been properly detected.
GPS is not Detected. Waiting for GPS...	An external GPS clock source has not been detected. The RF interface will not be started until this problem is resolved.
Invalid Radio Type	The radio connected to the base station is not compatible.
Long Reset	The base station has been reset to factory defaults by the user.
Master Detected	A slave has detected the presence of a master.
Master Function Activated	This base station is configured as Master, and it has successfully activated.
Master is Not Detected	A slave has failed to detect the clock signal of a master
Master or GPS must be connected. Waiting...	A Backup Master has not detected the presence of a Master or GPS clock source. It will wait for one before activating its RF interface.
Master with GPS Function Activated	This base station is configured as Master, and has been successfully activated.
NOTICE: Watchdog is Disabled	A jumper installed during factory burn-in was not properly removed before shipping.
Ntp client: Invalid address	The IP address of SNTP server cannot be resolved
Ntp client: Server Unsync	The received timestamp is 0, or the SNTP server suggests it is not synchronized
Ntp client: Timeout	The SNTP server does not reply to SNTP requests
Ntp client: Version unsupported	SNTP server version number is greater than 3
Other Backup Detected. Waiting...	This base station is configured as a Backup Master, but another Backup Master has been detected.
Other Master Detected. Waiting...	The base station is configured to act as a Master, but it has detected the presence of another Master.

Table 47: Troubleshooting - Event Log Messages	
Log Message	Description
P1 Watchdog Reset	The P1 processor has encountered an exception, and has prompted a reboot of the base station
P2 Watchdog Reset	The P2 processor has encountered an exception, and has prompted a reboot of the base station
P2-Task: %#x \"%s\	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
Parameters are reset to factory defaults	This message appears after the user has initiated a long-reset to factory defaults
Power Supply [X] is On	Where X is either A or B. This signifies that the relevant power supply has been detected and is properly supplying power to the base station
Primary Power Supply is On	The base station primary power supply (AC or DC) is operational. Message is logged only when system has been operating on backup power.
Radio Type [XX]: TBXXXXFX	This message is simply a confirmation of the type of radio connected to the IDU. It should match with the radio type printed on the ODU's sticker.
RedMax base station Ver. X.X.X started	System startup message.
Reference Clock Calibration Done	The reference clock calibration procedure initiated by the user has been completed.
Reference Clock Calibration Failed	The reference clock calibration procedure initiated by the user has failed.
Restore configuration into active image	The user-provided configuration file has been applied to the active image
Restore configuration into alternate image	The user-provided configuration file has been applied to the alternate (non-active) image
RF capabilities are changed. Check RF and PHY parameters and activate again the RF interface	Self explanatory
Secondary Power Supply is Available	The backup supply is connected and available if the base station primary supply fails.
Status Register: 0x%08x	This message is displayed only after a watchdog reset occurs. It provides information about the software exception that caused the watchdog.
Synchronization Failed. Waiting for Synchronization Signal...	A base station configured as Slave has detected the Master on reboot, but synchronization failed. It will wait and try again.
Synchronization Lost	A slave has previously synchronized with a Master, but since lost the signal and drifted out of phase.
Synchronization of alternate completed successfully	Software image and configuration have been applied to the alternate image, overwriting its previous contents.
Synchronization of configurations not possible	The synchronization of software and configuration from the active image to the alternate has failed.
Synchronization Ok	Synchronization with a Master or Backup Master was successful.

Table 47: Troubleshooting - Event Log Messages	
Log Message	Description
Synchronization Signal Detected	A Slave has detected the clock signal of a Master.
Synchronization Signal not Detected	A slave has previously synchronized with a Master, but has since lost the signal.
Synchronization Signal not Detected. Waiting...	A base station configured as Slave cannot detect the synchronization Master.
Synchronization with Backup Failed	This base station is configured as Master. It has recently rebooted, detected the presence of a Backup Master, but it has failed to resume control of the base station's clock.
Synchronization with Backup Ok	This base station is configured as Master. It has recently rebooted, detected the presence of a Backup Master, and successfully resumed control of the base station's clock.
Synchronization with GPS is Lost	Synchronization with a previously detected external clock source has been lost
Synchronization with GPS Ok	Synchronization with an external GPS clock has been successfully completed.
Synchronization with Master is Lost	A Backup Master has previously detected the presence of a master clock signal, and synchronized. It has since lost this signal.
Synchronization with Master Ok	A slave has successfully synchronized with a master's clock signal
WARNING: Clock Offset Close to End of Scale	The reference clock calibration procedure initiated by the user has been completed, but the clock offset is at the boundaries of the base station's capabilities
WARNING: DL aggregated Guaranteed Rate exceeds Capacity	The aggregate guaranteed minimum rates configured for service flows using RTPS and UGS scheduling exceeds the downlink capacity of the sector.
WARNING: Indoor Unit Temperature > 65 Celsius	The base station indoor unit has exceeded the recommended operating temperature.
WARNING: ODU Temperature is [c] Celsius	The operating temperature of the base station ODU is nearing the limit of its operating temperature. No action is taken.
WARNING: Power Supply [X] is Off	Where X is either A or B. This signifies that the relevant power supply has been detected, but it is not supplying power to the base station.
Warning: Primary Power Supply is Off	The base station primary power supply (AC or DC) is powered-off or failed (using backup power supply).
WARNING: RF Channel Conflict with [BS Id]	During startup, a long preamble and DL-Map were both detected on the UL channel. See section 7.4: Detecting Channel Interference at Startup on page 100.
Warning: Secondary Power Supply is Disconnected"	The backup supply is not connected to the base station.

Table 47: Troubleshooting - Event Log Messages	
Log Message	Description
Warning: Secondary Power Supply is Unavailable	This message may be logged for the following reasons: 1. This message is always logged at reboot when the base station primary power is operational and the backup supply is connected and available. 2. The backup supply is connected and powered-off. 3. The backup supply is connected and currently supplying power to another base station with a failed primary supply.
WARNING: UL aggregated Guaranteed Rate exceeds Capacity	The aggregate guaranteed minimum rates configured for service flows using RTPS and UGS scheduling exceeds the uplink capacity of the sector.
WARNING: Unknown Interference was detected on the UL channel	During startup, a long preamble was received but no DL-Map was detected the UL channel. See section 7.4: Detecting Channel Interference at Startup on page 100.
WRONG CRC over I2C	The stored interface configuration data has failed integrity check.

8 Appendices

8.1 System Technical Specifications

Table 48: Specs - RedMAX Base Station	
System Capability:	LOS, Optical LOS, Non LOS Cellular-based Point-to-Multipoint
RF Band:	AN-100U: 3.300-3.500 GHz (FWA Band) 3.400-3.600 GHz (FWA Band) 3.600-3.800 GHz (FWA Band) AN-100UX: 3.400-3.600 GHz (FWA Band) 3.600-3.800 GHz (FWA Band) (Operation is dependant on license/regulatory domain)
Channel Size:	3.5, 7 MHz
RF Dynamic Range:	> 40 dB
Spectral Efficiency:	Up to 5 bps/Hz (over the air), up to 3 bps/Hz (net)
Over The Air Rate:	Up to 17.5 Mbps Uncoded Rate @ 3.5 MHz channel Up to 35 Mbps Uncoded Rate @ 7 MHz channel
Data Rate:	Up to 10.8 Mbps Max. Ethernet Rate @ 3.5 MHz channel ¹ Up to 23 Mbps Max. Ethernet Rate @ 7 MHz channel ¹
Latency:	6 to 18 ms (based on channel size & frame duration)
Maximum Tx Power:	AN-100U: +23 dBm (region specific) AN-100UX: +35 dBm up to 64 QAM $\frac{3}{4}$ (region specific) +36 dBm all except 64 QAM $\frac{2}{3}$, $\frac{3}{4}$ (region specific)
Minimum Tx Power:	AN-100U: + 0 dBm AN-100UX: +20 dBm
Rx Sensitivity:	Better than -98 dBm @ 3.5 MHz / BPSK $\frac{1}{2}$ (1x10e-6 BER / 3.5 MHz channel)
IF Cable:	Multiplexed IF, Tx/Rx, AGC, ATPC, DC power AN-100U: Max. length 250 m (~820 ft) using LMR-400 cable AN-100UX: Max. length 165 m (~550 feet) using LMR-400 cable Note: Lengths are without lightning protection. Adding surge protection may reduce maximum cable lengths.
Network Attributes:	Transparent bridge, DHCP client pass-through 802.1Q VLAN, 802.1p network traffic prioritization
Modulation/Coding Rates:	BPSK ($\frac{1}{2}$); QPSK ($\frac{1}{2}$, $\frac{3}{4}$); 16 QAM ($\frac{1}{2}$, $\frac{3}{4}$); 64 QAM ($\frac{2}{3}$, $\frac{3}{4}$)
MAC:	Point-to-Multipoint TDMA Scheduling Scheduled Services (BE, nrtPS, rtPS, UGS) 256 subscribers/sector 802.16-2004 compliant PMP 802.16-2004 packet convergence sub-layer mode QoS (delay, CIR/PIR)
Wireless Transmission:	256 FFT OFDM (orthogonal frequency division multiplexing)

Table 48: Specs - RedMAX Base Station

Security:	X.509 subscriber authentication and RSA exchange (TEK) encryption; DES (over the air) traffic encryption
Network Connections:	RJ-45 (10/100 Ethernet)
System Configuration:	HTTP (Web), SNMP, FTP (software updates) CLI via Local Console (RS-232) only
Network Management:	SNMP, standard and proprietary MIBs Full management by RedMAX Management Suite
Power Requirements:	AN-100U: Auto-sensing 90-264 VAC (47-63 Hz) Auto-sensing 21 - 60 VDC, 75 W maximum Optional dual AC or dual DC power supply (dual cord with automatic failover) AN-100UX: Auto-sensing 100-240 VAC (50/60 Hz) 120 W Max. 46-60 VDC (nominal battery range) Redundant Power: 48 VDC (RedMAX RPS <u>only</u>)
Standards:	IEEE: 802.3, 802.1Q, 802.1p.,802.16-2004
Compliance:	EMC: EN 301 489-1, EN 301 489-4, (EN 55022/CISPR 22) IEC 61000-4-5 class 3 (2 KV), ITU-T K.21 ESD as per EN 61000-4-2. Radiated Immunity as per EN-1000-4-3. EFT as per EN 61000-4-4 Surge as per EN 61000-4-5 Conducted Immunity as per EN 61000-4-6 Dips & interrupts (AC versions only) as per EN 61000-4-11 Flickers and harmonics (AC versions only) comply to EN 61000-3-2, EN 61000-3-3 RF: EN 302 326, Industry Canada: RSS-192 Safety: IEC 60950-1, UL 60950-1
Operating Temperature:	IDU: 0 C to 40 C IDU Short-term: 0 C to 55 C for up to 5 hours ODU: -40 C to 60 C
Wind Loading:	Antenna: 220 Km/hr (137 mph)
Dimensions:	431.8 x 304.8 x 44.45 mm (17 x 12 x 1.75 in)
Weight:	AN-100U: 2.5 Kg (5.5 lb) AN-100UX: 2.73 Kg (6 lb)
Line Protection:	AN-100U (24V): Polyphaser P/N 104-1004T-A & 104-1004T-B. AN-100UX (48V): Polyphaser P/N 107-0625T-A & 107-0625T-B
Humidity:	Up to 90% non-condensing

¹ Actual Ethernet data throughput is dependent on channel size, protocols, packet size, burst rate, transmission latency, and link distance.

8.2 Radio Types

The following radio types are supported:

Table 49: Specs - AN-100U Radios			
Radio Type:	TB3335F7	TB3436F7	TB3638F7
Channelization:	3.5 MHz, 7 MHz	3.5 MHz, 7 MHz	3.5 MHz, 7 MHz
Operation:	TDD, HD-FDD	TDD, HD-FDD	TDD, HD-FDD
Frequency:	3.3 - 3.5 GHz	3.4 - 3.6 GHz	3.6 - 3.8 GHz
Tx Power:	23 dBm	23 dBm	23 dBm
Tx Power Tolerance:	+/- 2 dBm	+/- 2 dBm	+/- 2 dBm
Maximum Power Consumption:	24 V, 1.5 A	24 V, 1.5 A	24 V, 1.5 A

Table 50: Specs - AN-100UX High-Power Radios			
Radio Type:		HTB3436F7	HTB3638F7
Channelization:		3.5 MHz, 7 MHz	3.5 MHz, 7 MHz
Operation:		TDD	TDD
Frequency:		3.4 - 3.6 GHz	3.6 - 3.8 GHz
Tx Power:		36 dBm	36 dBm
Tx Power Tolerance:		+/- 2 dBm	+/- 2 dBm
Maximum Power Consumption:		48 V, 2 A	48 V, 2 A

8.3 Receive Sensitivity

The following table lists the sensitivity levels for different modulation and coding levels.

Table 51: Specs - Base Station Receive Sensitivity			
Modulation	Coding	3.5 MHz	7 MHz
BPSK	1/2	-94	-91
QPSK	1/2	-93	-90
	3/4	-92	-89
16 QAM	1/2	-89	-86
	3/4	-86	-83
64 QAM	2/3	-82	-79
	3/4	-77	-74

8.4 Throughput to Distance

The following table represents the expected decrease in throughput (Kbps) associated Receive Sensitivity with the distance between the base station and subscriber.

Table 52: Specs - Expected Throughput <u>Decrease</u> Over Distance (Kb/s)								
Channel Size	Distance (Km)							
	5	10	15	20	25	30	35	40
3.5 MHz	0	86	86	173	173	260	260	346
7 MHz	86	173	260	346	346	432	518	605

Notes: Line-of-sight links operating at 64 QAM 3/4 with 10 ms frame duration. Throughput decrease is x2 when using 5 ms frame duration. Typical deployed cell radius is <10 Km. Distances of >10 Km are quoted for backhaul.

8.5 FCC: Antenna/Tx Power Setting Combinations

The AN-100U has been designed to operate with the antennas listed below, having a maximum peak gain of 20 dBi. The Max. Tx Power GUI Setting listed below for each antenna and channel size will limit the EIRP at any time to a maximum peak of 1W/1MHz (30 dBm). The maximum EIRP of this device must not exceed 35.5 dBm for 3.5 MHz channels, or 38.5 dBm for 7 MHz channels. Antennas not included in this list or having a peak gain greater than 20 dBi are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

Table 53: Specs - FCC: Antenna/Tx Power Setting Combinations					
Redline PN	Ant. Gain (dBi)	Antenna Description	App.	3.5 MHz Max. Tx Power GUI Setting	7 MHz Max. Tx Power GUI Setting
PA1760EAS	17	Sector Antenna: 60 degree, 17 dBi, vertical polarization.	PMP	18	21
PA1660EASH	16	Sector Antenna: 60 degree, 16 dBi, horizontal polarization.	PMP	19	22
PA1590EAS	15	Sector Antenna: 90 degree, 15.4 dBi, vertical polarization.	PMP	20	23
PA1590EASH	15	Sector Antenna: 90 degree, 15 dBi, horizontal polarization.	PMP	20	23
PA14120EAS	14	Sector Antenna: 120 degree, 14 dBi, vertical polarization.	PMP	21	23
PA14120EASH	14	Sector Antenna: 120 degree, 14 dBi, horizontal polarization.	PMP	21	23
A11360EAO	11	Sector Antenna: 360 degree, 11.0 dBi.	PMP	23	23

Note: The RF output power and selection must be professionally programmed and installed by the manufacturer or a trained professional installer. Values do not include implementation (cable) loss of up to 1 dB).

8.6 RPS (RedMAX Redundant Power Supply)

The RPS is a stand-alone power supply that can be used as redundant standby power for deployments of up to six AN-100UX base stations operating in an N+1 configuration (supports up to one AN-100UX unit with a failed internal power supply).

The RPS scans and sets the power outputs only at power-on and following a detected failure of a connected AN-100UX system.



Figure 44: Specs: RPS (Redundant Power Supply) Front Panel

8.6.1 RPS LEDs

The following table lists the LED indicators for the RPS system status and power output connectors:

Table 54: Specs - RedMAX Redundant PS (RPS) Status LEDs	
Green ON full	System OK (no over temperature, no failed fans)
Green ON blinking	Over temperature (35 - 70 C). The over-temperature fan will be activated when the temperature exceeds 35 C and is powered-off when the temperature drops below 33 C.
Yellow ON blinking	One or more fans are failed.
Green/Yellow ON blinking	Over-temperature condition and at least one fan is failed (e.g., under-speed).
Green/Red ON blinking	Over-temperature condition and at least one fan is defective (non-operational).
Red ON blinking	At least one fan is defective (non-operational).
Red ON full	A temperature reading of >70 C has caused system shutdown. All outputs are off and no backup is available. The RPS remains in shutdown mode until the temperate drops below 65 C.

Table 55: Specs - RedMAX Redundant PS (RPS) Power Output LEDs	
Led OFF	Channel OFF or there are no base stations connected.
Green ON full	Channel ON without load.
Green ON blink	Channel ON with load.
Green/Yellow ON blink	Channel ON with load under the expected minimum loading.
Yellow ON full	Channel OFF (unavailable).
Red ON full	Short or overcurrent condition.

8.6.2 Serial/Mgt Port

The serial port can be used to monitor the RPS status. Configuration settings are not available in this release.

To view the monitor display, connect a straight serial (RS-232) cable (DB-9 female-female) from the RPS Serial/Mgt port to the serial port on a computer and open a Terminal session using the setting in the following table.

Table 56: Specs - Console Port Default Settings	
Baud	19,200
Data Bits	8
Flow Control	None
Parity	None
Stop Bits	1

The RPS will automatically update the screen each one second.

```

Redline Communications Inc. @ 2007
Version: 2
Build No.: 0

Power : ON
Temperature : 34.5
Fan #1: OK RUNNING
Fan #2: OK RUNNING
Fan #3: OK STOP
Main Fan #1
Over temperature Fan #2
Main Voltage : 48.41V
Main Power : 51.77W
Channel #1: 0.00W OFF
Channel #2: 0.00W NA
Channel #3: 47.44W ON
Channel #4: 0.00W OFF
Channel #5: 0.00W NA
Channel #6: 0.00W OFF_
    
```

Figure 45: Specs: RPS (Redundant Power Supply) Serial Monitor Screen

8.6.3 RS-485/Bus Port

This feature is not functional in this release.

8.6.4 RJ-45 Port

Used for software upgrade only.

8.6.5 Power Supply Input

The following single power supply options are supported for use with the AN-100UX.

Table 57: Specs - RedMAX Redundant PS (RPS) Power Input			
Description	Quantity	Input	Power Requirements
DC Supply	1	Auto-sensing 48-60 VDC	130 Watts (max.)
AC Supply	1	Auto-sensing 100-240 VAC (50/60 Hz)	130 Watts (max.)

8.6.6 RPS Power Output Connector

The following table lists the pinout of the RPS power output connector. Refer to the Installation Guidelines for installation details.

Table 58: Specs - RedMAX Redundant PS (RPS) Power Output Pinout						
Port	Pin	Signal	Description	Pin	Signal	Description
1	1	+Ve	+48 VDC	2	-Ve	Ground
2	3	+Ve	+48 VDC	4	-Ve	Ground
3	5	+Ve	+48 VDC	6	-Ve	Ground
4	7	+Ve	+48 VDC	8	-Ve	Ground
5	9	+Ve	+48 VDC	10	-Ve	Ground
6	11	+Ve	+48 VDC	12	-Ve	Ground

8.6.7 RPS Specifications

Table 59: Specs - RedMAX RPM Power Block	
Power I/P Requirements:	Auto-sensing 100-240 VAC (50/60 Hz), 130 Watts (max.) 48-60 VDC (nominal battery range), 130 Watts (max.)
Power O/P:	Standby power configuration supports up to six AN-100UX base stations operating in an N+1 configuration (support one AN-100UX unit with failed internal power supply).
Dimensions:	431.8 x 304.8 x 44.45 mm (17 x 12 x 1.75 in)
Weight:	2.5 Kg (5.5 lb)
Humidity:	Up to 90% non-condensing
Operating Temperature:	IDU: 0 C to 40 C

8.6.8 Log Messages

The following table lists log messages associated with the operation of the RPS.

Table 60: Specs - RPS Event Log Messages	
Log Message	Description
Secondary Power Supply is Available	The backup supply is connected and available if the base station primary supply fails.
Warning: Secondary Power Supply is Disconnected"	The backup supply is not connected to the base station, or RPS is powered-off..
Warning: Secondary Power Supply is Unavailable	This message may be logged for the following reasons: 1. This message is always logged at reboot when the base station primary power is operational and the backup supply is connected and available. 2. The backup supply is connected and currently supplying power to another base station with a failed primary supply.
Primary Power Supply is On	The base station primary power supply (AC or DC) is operational. Message is logged only when system has been operating on backup power.
Warning: Primary Power Supply is Off	The base station primary power supply (AC or DC) is powered-off or failed (using backup power supply).

8.7 Glossary

Term	Acronym	Definition
Active Service Flow	-	An Admitted Service Flow that is active and available for packet transmission.
Address Resolution Protocol	ARP	An IETF protocol for converting network addresses to 48-bit Ethernet addresses.
Admitted Service Flow	-	Service Flow is registered, but not active.
RedMAX Base Station System		The base station terminal, modem, and antenna.
RedMAX Base Station Terminal		The base station indoor unit.
Antenna Gain	-	The measure of antenna performance relative to a theoretical antenna called an isotropic antenna.
Base Station	BS	The RedMAX base station terminal configured as central equipment (also referred to as a base station).
Beamwidth	-	The angle of signal coverage provided by an antenna.
Best Effort Service	BE	BE service provides efficient service to best effort traffic. In order for this service to work correctly, the Request/Transmission Policy setting should be such that the Subscriber is allowed to use contention request opportunities. This results in the Subscriber using contention request opportunities as well as unicast request opportunities and unsolicited Data Grant Burst Types. All other bits of the Request/Transmission Policy are irrelevant to the fundamental operation of this scheduling service and should be set according to network policy. The key service elements are the Minimum Reserved Traffic Rate, the Maximum Sustained Traffic Rate, and the Traffic Priority.
Binary Phase Shift Keying	BPSK	BPSK is a digital modulation technique. This type of modulation is less efficient than similar modulation techniques such as QPSK and 64 QAM, but is less susceptible to noise.
Bps	Bps	A unit of measurement for data is transfer.
Broadband Fixed Wireless	BFW	High-speed wireless installation where the equipment is not mobile.
Broadcast Addresses	-	A predefined destination address that denotes the set of all data network service access points.
Burst	-	A group of protocol data units (PDUs) transmitted over the wireless link using the same profile.
Burst profile	-	Enter of settings that describe the uplink or downlink transmission properties associated with an Interval Usage Code. Each profile contains settings such as modulation type, forward error correction type, preamble length, guard times, etc.
CEPT		The European Conference of Postal and Telecommunications Administrations (CEPT) established in 1959. CEPT activities included co-operation on commercial, operational, regulatory and technical standardization issues.

Term	Acronym	Definition
Channel	-	A communications path wide enough to permit a single RF transmission.
CIR	CIR	Minimum Reserved Traffic Rate (see QoS)
CINR	CINR	CINR is the ratio of Carrier/(Interference + Noise).
Class of Service	-	Each Class of Service can be defined by a set of QoS settings.
Classifier	-	A set of criteria used for packet filtering which map each packet to the corresponding Service Flow (i.e., IP or MAC address).
Committed Information Rate	CIR	The minimum guaranteed bandwidth for a connection.
Concatenation	-	The act of combining multiple medium access control (MAC) protocol data units (PDUs) into a single burst.
Connection	-	A unidirectional mapping between RedMAX base station and subscriber medium access control (MAC) peers for transporting service flow's traffic. A Connection Identifier (CID) identifies connections. All traffic is carried on a connection, even for service flows that implement connectionless protocols, such as Internet Protocol (IP).
Connection Identifier	CID	A unidirectional, medium access control layer address that identifies a connection to equivalent peers in the medium access control layer of the base station and subscriber. A CID maps to a service flow Identifier (SFID), which defines the Quality of Service (QoS) settings of the Service Flow associated with that connection. Initial Ranging - A well-defined Connection Identifier that is used by a subscriber during the initial ranging process. This CID is defined as constant value within the protocol since a subscriber has no addressing information available until the initial ranging process is complete. Transport - unique identifier taken from the Connection Identifier address space that uniquely identifies the Transport Connection.
Cyclic Prefix	CP	Guard interval to resist multipath effect.
Data Link Layer	-	Layer 2 in the Open System Interconnection (OSI) architecture; the layer that provides services to transfer data over the transmission link between open systems.
DB	-	A ratio expressed in decibels.
dBi	-	A ratio, measured in decibels, of the effective gain of an antenna compared to an isotropic antenna.
DBm	-	Decibels relative to a milliwatt
Directional Antenna	-	An antenna that concentrates transmission power into one direction.
Download Interval Usage Code	DIUC	An interval usage code specific to a downlink (from RedMAX base station to subscriber).
Downlink	-	The direction from the RedMAX base station to the subscriber.


Term	Acronym	Definition
Downlink Channel Descriptor	DCD	A medium access control layer message that describes the physical layer characteristics of a downlink channel.
Downlink Map	DL-MAP	A medium access control layer message that defines a map with burst start times. DL-MAP is the main message that defines synchronization of Subscriber. Based on the map Subscriber read and parse the Downlink information.
Downstream	-	Flow from base station to subscriber.
Downstream Classifier	-	Assigns packets to downstream service flows.
Dynamic Host Configuration Protocol	DHCP	An Internet protocol used for assigning network-layer (IP) addresses dynamically.
Dynamic service	-	The set of messages and protocols that allow base station and subscriber to add, modify, or delete the characteristics of a service flow.
Encryption	-	For the purposes of privacy, the transformation of data into an unreadable format until reformatted with a decryption key.
Ethernet	-	A LAN architecture using a bus or star topology
FCS	FCS	Frame Check Sequence.
File Transfer Protocol	FTP	(Client and Server): Protocol implementing RFC 959 and running in NOC-S as Client and BSC as Server for transferring/replicating configurations files needed by local DHCPs.
Frame	-	A structured data sequence of fixed duration used by some physical layer specifications. A frame may contain both an uplink sub frame and a downlink sub frame.
Frequency Agnostic	-	Operating independently of the radio frequency selection.
Frequency Division Duplexing	FDD	A transmission method that separates the transmitting and receiving channels with a guard band (some amount of spectrum that acts as a buffer or insulator). In a framed (burst) FDD system, the uplink and downlink channels are located on separate frequencies and the downlink data can be transmitted in bursts. A fixed duration frame is used for both uplink and downlink transmissions.
Full Duplex	-	Refers to the transmission of data in two directions simultaneously (i.e. a telephone)
Gain	-	The ratio of the output amplitude of a signal to the input amplitude of a signal. Typically expressed in decibels (dB).
Gateway	-	A network point that acts as an entrance to another network.
Gigahertz	GHz	1,000,000,000 Hz, or 1,000 MHz
Grant Per Connection	GPC	A bandwidth allocation method in which grants are allocated to a specific connection within a subscriber. Note that bandwidth requests are always made for a connection. A Subscriber can have multiple connections. In GPC mode, Subscriber request bandwidth for each connection.
Header Check Sequence	HCS	Header Check Sequence error. This is a CRC error on the header fields only.

Term	Acronym	Definition
Hertz	Hz	The international unit for measuring frequency, equivalent to the number of cycles per second. One megahertz (MHz) is one million Hertz. One gigahertz (GHz) is one billion Hertz.
Information Element	IE	A component of the downlink or uplink map that defines the starting address associated with an IUC that identifies a certain burst profile.
Internet Protocol	IP	See TCP/IP
Interval Usage Code	IUC	A code identifying a particular burst profile that can be used by a downlink or uplink transmission interval.
Isotropic	-	A theoretic construct of an antenna that radiates its signal 360 degrees both vertically and horizontally—a perfect sphere. Generally used as a reference.
Latency	-	Delay
Lightweight Directory Access Protocol	LDAP	Internet protocol described in RFC 2251 and implemented in NOC-C, NOC-S and SR. It is designed to provide quick access to directories that contain information locally in attributes or externally in databases such as SQL. In our provisioning system LDAP is the engine that replicates, distributes, searches, reads and writes <i>Subscriber</i> information (CPE-NAMES, Service Flows).
Line Of Sight	LOS	A clear direct path between two antennas, with no obstructions within the first Fresnel zone.
Link Layer Control	LLC	Layer 2 Link Layer Control
Link Budget Tool		Software application to characterize the range performance for LOS, OLOS and NLOS conditions for selected system settings.
Local Area Network	LAN	A data communications network, typically within a building or campus linking computers, printers and other devices together.
Local Exchange Carriers	LEC	The traditional local wired phone company.
Management Connection	-	A connection that is established during initial subscriber registration that is used to transport delay-tolerant medium access control management messages and even higher layer management and control messages. Each Subscriber has three management connections BASIC, PRIMARY and SECONDARY.
Media Access Control	MAC	A unique number assigned to a network device. It corresponds to the ISO Network Model Layer 2 data link layer.
Megahertz	MHz	1,000,000 Hz
Modulation	-	Any of several techniques for combining user information with a transmitter carrier signal.
Multicast polling group	-	A group of subscribers that are assigned a multicast address for the purposes of polling.
Multipath	-	The RF echoes created from radio signal reflections.
Network Time Protocol	NTP	Protocol for synchronizing a set of network clocks using a set of distributed clients and servers. It is implemented as Server on <i>BSC</i> for time synchronization with subscribers and base stations. Described in IETF RFC 958.

Term	Acronym	Definition
Non Line Of Sight	NLOS	Completely obstructed path between two antennas.
NVRAM		Non-volatile RAM memory. Does not lose its data when power is removed.
Non Real-Time Priority	nrt-PS	The nrt-PS is designed to support non real-time service flows that require variable size Data Grant Burst Types on a regular basis, such as high bandwidth FTP. The service offers unicast polls on a regular basis, which assures that the flow receives request opportunities even during network congestion. The RedMAX base station typically polls nrt-PS CIDs on an interval (periodic or periodic) on the order of one second or less. The key service elements are Minimum Reserved Traffic Rate, Maximum Sustained Traffic Rate, Request/Transmission Policy, and Traffic Priority.
Optical Line Of Sight	OLOS	A clear direct path between two antennas, with obstructions within the first Fresnel zone.
Orthogonal Frequency Division Multiplexing	OFDM	<p>Orthogonal frequency-division multiplexing (OFDM) is a method of digital modulation in which a signal is split into several narrowband channels at different frequencies. The technology was first conceived in the 1960s and 1970s during research into minimizing interference among channels near each other in frequency.</p> <p>In some respects, OFDM is similar to conventional frequency-division multiplexing (FDM). The difference lies in the way in which the signals are modulated and demodulated. Priority is given to minimizing the interference, or crosstalk, among the channels and symbols comprising the data stream. Less importance is placed on perfecting individual channels.</p>
Packet	-	A bundle of data organized in a specific way for transmission. The three principal elements of a packet include the header, the text, and the trailer (error detection and correction bits).
Packing	-	The act of combining multiple service data units (SDU) from a higher layer into a single medium access control protocol data unit MPDU.
Physical Layer	PHY	Provides for the transmission of data through a communications channel by defining the electrical, mechanical, and procedural specifications.
Physical slot	PS	A unit of time, dependent on the physical layer specification, for allocating bandwidth. PS is designated by 1 OFDM symbol.
PIR	-	Maximum Sustained Traffic Rate (see QoS)
Privacy key Management Protocol	PKM	A client/server model between base station and subscriber that is used to secure distribution of keying material.
Protocol Data Unit	PDU	The data unit exchanged between peer entities of the same protocol layer. On the downward direction, it is the data unit generated for the next lower layer. On the upward direction, it is the data unit received from the previous lower layer. MPDU is the data unit exchanged between peer 802.16 MAC entities. One MPDU is formed from one or more SDUs.


Term	Acronym	Definition
Provisioned Service Flow	-	A Service Flow that has been provisioned as part of the Registration process, but has not yet been activated or admitted. It may still require an authorization exchange with a policy module or external policy server prior to admission.
Quadrature Amplitude Modulation	QAM	<p>Quadrature Amplitude Modulation (QAM) is a method of combining two amplitude-modulated (AM) signals into a single channel, doubling the effective bandwidth. QAM is used with pulse amplitude modulation (PAM) in digital systems, especially in wireless applications.</p> <p>In a QAM signal, there are two carriers, each having the same frequency but differing in phase by 90 degrees. One signal is called the I signal, and the other is called the Q signal. Mathematically, one of the signals can be represented by a sine wave, and the other by a cosine wave. The two modulated carriers are combined at the source for transmission. At the destination, the carriers are separated, the data is extracted from each, and then the data is combined into the original modulating information.</p>
Quality of Service	QoS	<ul style="list-style-type: none"> - Minimum Reserved Traffic Rate (CIR) - Maximum Latency - Maximum Sustained Traffic Rate (PIR) - Traffic Priority
Real-Time Polling Service	rt-PS	The rt-PS is intended to support real-time service flows that generate variable size data packets on a periodic basis, such as moving pictures experts group (MPEG) video. The service offers real-time, periodic, unicast request opportunities, which meet the flow's real-time needs and allow the Subscriber to specify the size of the desired grant. This service requires more request overhead than UGS, but supports variable size grants for optimum data transport efficiency.
Receiver Sensitivity	-	A measurement of the weakest signal a receiver can receive and still correctly translate it into data.
RSSI	RSSI	Received signal strength indicator.
Scope	-	A group of network entities administered by a DHCP Server via its configuration file that get IP addresses in the same subnet. A scope can define common and individual properties for all network entities getting an IP address from that subnet.
Security Association	SA	The set of security information base station and one or more of its client subscribers share in order to support secure communications. This shared information includes traffic encryption keys and cipher block chaining initialization vectors.
Security Association Identifier	SAID	An identifier shared between base station and subscriber that uniquely identifies a security association.

Term	Acronym	Definition
Service Class	-	<p>Service classes are identifiers for a specific set of QoS parameter set values. The use of service classes is optional. A service identified by a service class is identical to a service that has the same QoS parameter set explicitly specified.</p> <p>The Service Class allows operators to configure service flows directly on the RedMAX base station. Operators provision the Subscribers with the Service Class Name; the implementation of the name is configured at the RedMAX base station. This allows operators to modify the implementation of a given service to local circumstances without changing Subscriber provisioning.</p> <p>This feature allows higher layer protocols to create a service flow by its Service Class Name. For example, telephony signaling may direct the subscriber to instantiate any available Provisioned service flow of class G711.</p>
Service Data Unit	SDU	The data unit exchanged between two adjacent protocol layers. On the downward direction, it is the data unit received from the previous higher layer. On the upward direction, it is the data unit sent to the next higher layer.
Service Flow		Service flows are a key feature of the 802.16 standard. A service flow represents a unidirectional data flow. Transmitting bidirectional traffic requires that two service flows be defined: one for the uplink, and another for the downlink. Each service flow can be assigned a unique QoS settings.
Service Flow Identifier	SFID	A 32-bit quantity that uniquely identifies a service flow to both the subscriber and base station.
Service Flow Name	-	An ASCII string that is used to reference a set of QoS settings that (partially) define a service flow.
Service Level Agreement	SLA	This describes in general the minimum quality of service the provider is committed to provide
Simple Network Management Protocol	SNMP	A network management protocol of the IETF.
SINADR	-	Signal to noise and distortion ratio.
Subscriber	SS	The RedMAX base station terminal configured as customer premises equipment (CPE). 802.16 definition of a Subscriber.
Time division duplex	TDD	A duplex scheme where uplink and downlink transmissions occur at different times but share the same frequency.
Transmission Control Protocol/Internet Protocol	TCP/ IP	The standard set of protocols used by the Internet for transferring information between computers, handsets, and other devices.
Transport Connection		A connection used to transport user data.
Type/ length/ value	TLV	A formatting scheme that adds a tag to each transmitted parameter containing the parameter Type (and implicitly its encoding rules) and the length of the encoded parameter.

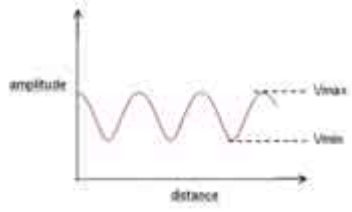Term	Acronym	Definition
Unsolicited Grant Service	UGS	The UGS is designed to support real-time service flows that generate fixed size data packets on a periodic basis, such as TDM and Voice over IP without silence suppression. The service offers fixed size grants on a real-time periodic basis, which eliminate the overhead and latency of Subscriber requests and assure that grants are available to meet the flow's real-time needs.
Uplink		The direction from a subscriber to the RedMAX base station.
Uplink Channel Descriptor	UCD	A UCD message is transmitted by the RedMAX base station at a periodic interval to define the characteristics of an uplink physical channel. A separate UCD message is transmitted for each active uplink channel associated with the downlink channel.
Uplink Interval Usage Code	UIUC	An Interval Usage Code specific to an uplink (to RedMAX base station from subscriber).
Uplink Map:	UL-MAP	A set of information that defines the entire map for the uplink. Based on that, Subscribers send data according to the scheduled opportunities. The UL-MAP is composed from Information Elements.
VSWR	VSWR	<p>Voltage standing wave ratio (VSWR) is the ratio of the amplitude of a partial standing wave at an antinode (maximum) to the amplitude at an adjacent node (minimum).</p> 
Wireless Fidelity	Wi-Fi	Wireless fidelity is used generically when referring of any type of 802.11 network, whether 802.11b, 802.11a, dual-band, etc
	WiMAX	Worldwide Interoperability for Microwave Access 802.16 Interop Consortium.



www.redlinecommunications.com

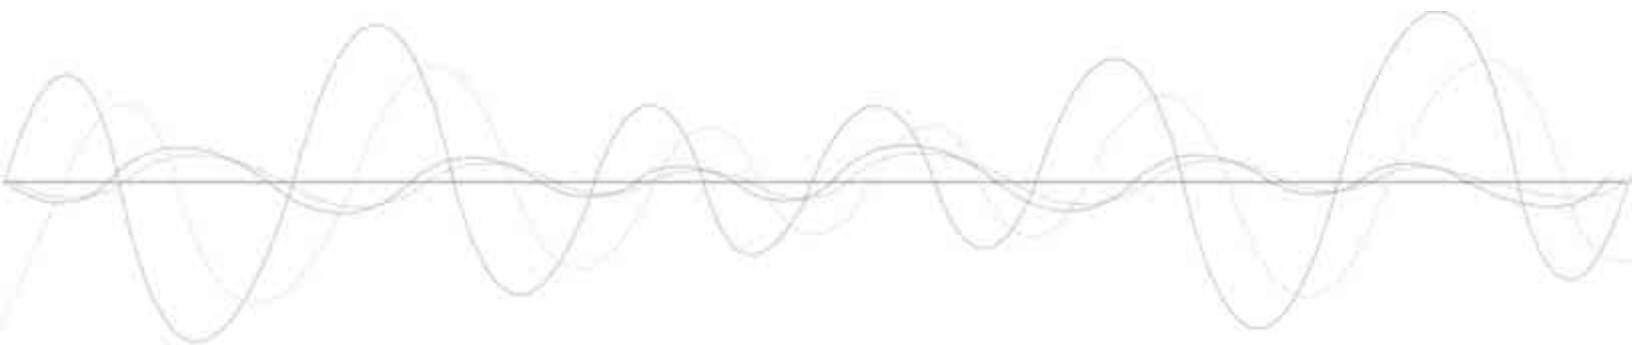

302 Town Centre • Suite 100 • Markham, Ontario • Canada • L3R 0E8

www.redlinecommunications.com