
**User's
Manual**

**YFGW510
Field Wireless Access Point**

IM 01W02E01-01EN

vigilantplant[®]

YFGW510 Field Wireless Access Point

IM 01W02E01-01EN

This document contains important information about using the YFGW510 field wireless access point properly and safely. Please read this document thoroughly before using this product.

The configuration of the field wireless system is described in the User's Manual of the YFGW410 field wireless management station (IM 01W02D01-01EN). Read that document first.

CONTENTS

Introduction	i
Safety Precautions	ii
About Radio Wave.....	ii
Documentation Conventions.....	iii
Information of Revision	iv

PART-A. OVERVIEW OF FIELD WIRELESS SYSTEM

A1. Introduction.....	A1-1
A2. System Configuration.....	A2-1

PART-B. FUNCTIONS OF YFGW510

B1.	Functions of YFGW510	B1-1
B2.	Structure and Parts of YFGW510.....	B2-1
B2.1	Front View	B2-1
B2.2	Rear View	B2-2
B2.3	Side View.....	B2-4
B3.	LED Display Function	B3-1
B4.	Mechanical Operating Parts.....	B4-1
B5.	Checking the Product	B5-1

PART-C. INSTALLATION

C1.	Installation Environment	C1-1
C2.	Power Supply and Grounding	C2-1
C2.1	Power Supply	C2-1
C2.2	Grounding.....	C2-1
C3.	Requirements for Installation	C3-1
C3.1	Requirements for Installation Locations.....	C3-1
C3.2	Notes on Installation.....	C3-2
C4.	Mounting	C4-1
C5.	Wiring.....	C5-1
C5.1	Power Supply Cable Connection	C5-1
C5.2	Grounding Cable Connection.....	C5-3
C5.3	Network Cable Connection	C5-4
C5.3.1	Metal Network Cable Connection	C5-4
C5.3.2	Optical Network Cable Connection.....	C5-5
C5.4	Installation and wiring of Antenna	C5-7
C5.4.1	Mounting ISA100.11a antenna to YFGW510	C5-7
C5.4.2	Remote Installation and Wiring of ISA100.11a Antenna	C5-8
C5.4.3	Installation and Wiring of Wireless LAN Antenna	C5-12
C6.	Explosion Proof Wiring.....	C6-1

PART-D. SETUP

D1.	Initial Configuration	D1-1
D2.	Setup Tool	D2-1
D2.1	System Requirements	D2-1
D2.1.1	Hardware	D2-1
D2.1.2	Software	D2-1
D2.1.3	Connection Example.....	D2-2
D2.2	Installation Procedure	D2-3
D2.2.1	Driver for Infrared adapter.....	D2-3
D2.2.2	Field Wireless Access Point Setup Tool.....	D2-4
D3.	Configuration Method.....	D3-1
D3.1	Window Design	D3-1
D3.2	Display/Edit Mode Switching.....	D3-2
D3.3	Backbone Interface.....	D3-4
D3.4	Maintenance	D3-6
D3.5	Setting of Wireless LAN 1 (WLAN C1)	D3-8
D3.6	Setting of Wireless LAN 2 (WLAN C2)	D3-10
D3.7	Setting of WLAN Redundancy.....	D3-11
D3.8	Version Information	D3-12

PART-E. OPERATION AND MAINTENANCE

E1.	Routine Maintenance	E1-1
E2.	Additions and Replacements.....	E2-1
E3.	Maintenance in Hazardous Areas.....	E3-1
E4.	Components Having Defined Life Spans	E4-1

PART-F. TROUBLESHOOTING

F1. Status Information.....	F1-1
F2. Status Indication and Responsive Measures	F2-1

PART-G. SPECIFICATIONS

G1.	Standard Specifications	G1-1
G1.1	Communication Interface Specifications.....	G1-1
G1.2	General Specifications	G1-2
G1.3	Regulatory Compliance Statements.....	G1-3
G2.	Model, Suffix Codes and Option Codes.....	G2-1
G3.	External Dimensions.....	G3-1
G3.1	100BASE-TX/100BASE-FX Specifications	G3-1
G3.2	Single Communication Wireless LAN Client Specifications	G3-3
G3.3	Redundant Communication Wireless LAN Client Specifications	G3-5

Introduction

This document describes the YFGW510 field wireless access point, which is a core component of field wireless networks, conforming to ISA100.11a, a wireless communication standard for industrial automation that was drawn up by the International Society of Automation (ISA). Outline, setup, settings, start-up, operation and maintenance of the entire field wireless system including the field wireless network and field wireless backbone are described in the User's Manual of the YFGW410 field wireless management station (IM 01W02D01-01EN). Read that document first.

Safety Precautions



IMPORTANT

Read the safety precautions for this product that are described in Read Me First (IM 01W02E01-11EN).

About Radio Wave



IMPORTANT

- This product is equipped with a wireless module which is designated as a certification of construction type as a wireless facility for 2.4 GHz band low-power data communication system of the Radio Act.
Refer to G1.3 Regulatory Compliance Statements for detail.
Due to the designated certification of construction type, users may be subject to legal punishment in case of:
 - Disassembling or modifying the wireless module or antenna in this instrument
 - Peeling off the certification label attached to the wireless module in this instrument
 - Microwave ovens and other industrial, scientific and medical equipment, as well as local wireless stations (license required) and specific low-power wireless stations (license not required) for identifying mobile objects used in the production line of a factory, use the same frequency band as this product. Prevent interference with other wireless stations.
 - Check that local wireless stations and specific low-power wireless stations are not being used in the vicinity before using this product.
 - If this product causes radio interference in a local wireless station used for identifying mobile objects, change the working frequency or stop the emission of radio waves immediately. For details on how to prevent radio interference, contact our service office.
 - Although this product has been designed to resist high frequency electrical noise, if a radio transceiver is used near the transmitter or its external wiring, the transmitter may be affected by high frequency noise pickup. To test this, start out from a distance of several meters and slowly approach the transmitter with the transceiver while observing the measurement loop for noise effects. Thereafter use the transceiver outside the range where the noise effects were first observed.
-

■ FCC compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Co-Located:

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Compliance with FCC requirement 15.407(c)

Data transmission is always initiated by software, which is then passed down through the MAC, through the digital and analog baseband, and finally to the RF chip. Several special packets are initiated by the MAC. These are the only ways the digital baseband portion will turn on the RF transmitter, which it then turns off at the end of the packet. Therefore, the transmitter will be on only while one of the aforementioned packets is being transmitted. In other words, this device automatically discontinues transmission in case of either absence of information to transmit or operational failure.

Frequency Tolerance: 20 ppm

5.15-5.25GHz band is restricted to indoor operations only.

RF Exposure Compliance

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

■ Industry Canada (IC) compliance

This Class A digital apparatus complies with Canadian ICES-003.

French: Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

French: Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

5.15-5.25GHz band is restricted to indoor operations only.

French: La bande 5 150-5 250 MHz est restreints à une utilisation à l'intérieur.

This radio transmitter IC Number 8999A-WIC003 has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Antenna type:	Gain:
Sleeve	2.14dBi, 50 Ω
Collinear	6dBi, 50 Ω
Collinear	9dBi, 50 Ω
Patch compound	15dBi, 50 Ω

French: Le présent émetteur radio IC Number 8999A-WIC003 a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain

admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Antenna type:	Gain:
Sleeve	2.14dBi, 50 Ω
Collinear	6dBi, 50 Ω
Collinear	9dBi, 50 Ω
Patch compound	15dBi, 50 Ω

RF Exposure Compliance:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

French: Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le dispositif rayonnant et le corps (à l'exception des extrémités : mains, poignets, pieds et chevilles).

Documentation Conventions

■ Typographical Convention

The following typographical conventions are used throughout this document:

● Conventions commonly used throughout this document

Character string to be entered

The characters to be entered are shown in one-byte characters as follows:

Example:

FIC100.SV=50.0

“△”Mark

Indicates a space between character strings to be entered.

Example:

.AL △ PIC010 △ -SC

Character string enclosed by brackets ({ })

Indicates an option that can be omitted.

Example:

.PR △ TAG {△. Sheet name}

● Conventions used to show key or button operations:

Characters enclosed by brackets ([])

Characters enclosed by brackets within any description on a key or button operation, indicate either a key on the HIS (Human Interface Station) keyboard, a key on the operation keyboard, a button name on a window, or an item displayed on a window.

Example:

To perform the function, press the [OK] key.

Characters enclosed by angle-brackets (<>)

Characters enclosed by angle-brackets show the title of the screen during explanation of the software operation.

■ Symbols

The symbols used in this document are described in Read Me First (IM 01W02E01-11EN).

■ Drawing Conventions

Some drawings may be partially emphasized, simplified or omitted for the convenience of description.

Some screen images depicted in the user's manual may have different display positions or character types (e.g., upper/lower case). Also note that some of the images contained in this user's manual are display examples.

Information of Revision

Document Name: YFGW510 Field Wireless Access Point

Document Number: IM 01W02D01-01EN

Edition	Date	Page	Revised Item
1st	August 2012		New Issue

PART-A. OVERVIEW OF FIELD WIRELESS SYSTEM

A1. Introduction

Read the User's Manual of the YFGW410 field wireless management station (IM 01W02D01-01EN) before reading this document.

The YFGW510 field wireless access point is a core component of field wireless networks based on ISA100.11a, a wireless communication standard for industrial automation. YFGW510 serves as an access point (master device for field wireless devices) and forms the wireless backbone network for the YFGW410 field wireless management station and the YFGW610 field wireless media converter.

A2. System Configuration

This section describes the configuration for the field wireless system including YFGW510.

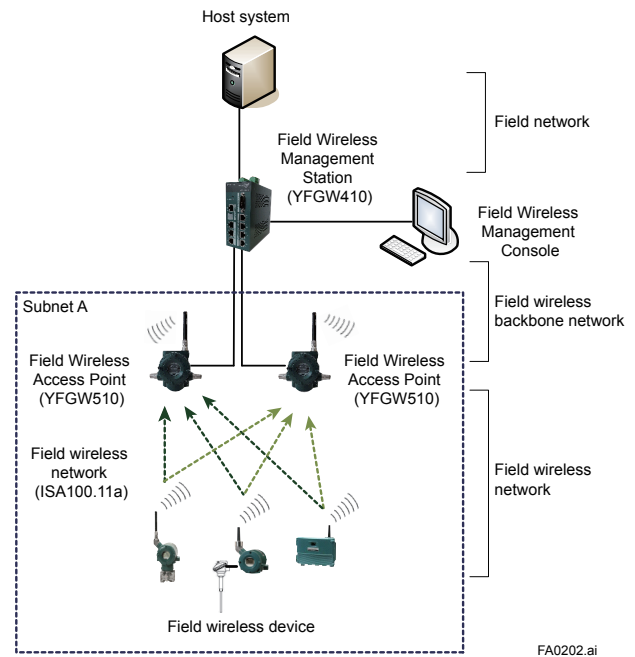
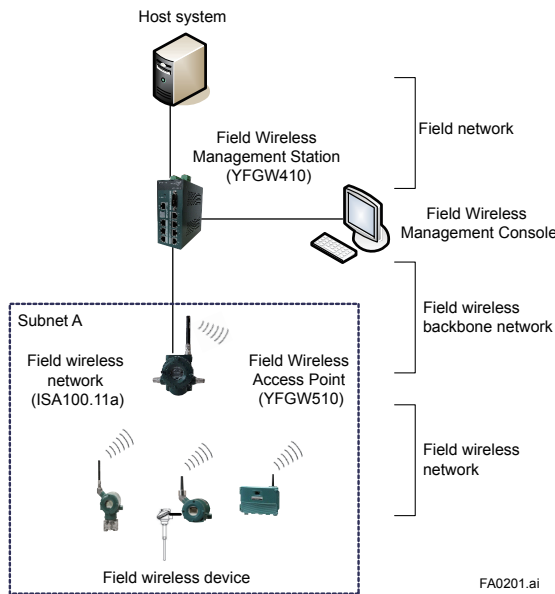



Figure A2-1 Minimum configuration

Figure A2-2 YFGW510-redundant configuration

Figure A2-1 shows the minimum configuration with a single YFGW510, and Figure A2-2 shows the YFGW510-redundant configuration employing the Duocast technology (each wireless field device communicates with two YFGW510s).

The wireless backbone network consists of the YFGW410 field wireless management station, the YFGW510 field wireless access point and the YFGW610 field wireless media converter. Any of the following connection methods can be selected.

1. Metal network cable (100BASE-TX)
2. Optical fiber network cable (100BASE-FX)
YFGW610 must be installed between YFGW510 and YFGW410 for optical fiber network connection to convert it to metal network connection.
3. Wireless LAN connection
Recommended access points for wireless LAN must be installed between YFGW510 and YFGW410 for wireless LAN connection to convert it to metal network connection.
For recommended wireless LAN access points, see the User's Manual of YFGW410 field wireless management station (IM 01W02D01-01EN).

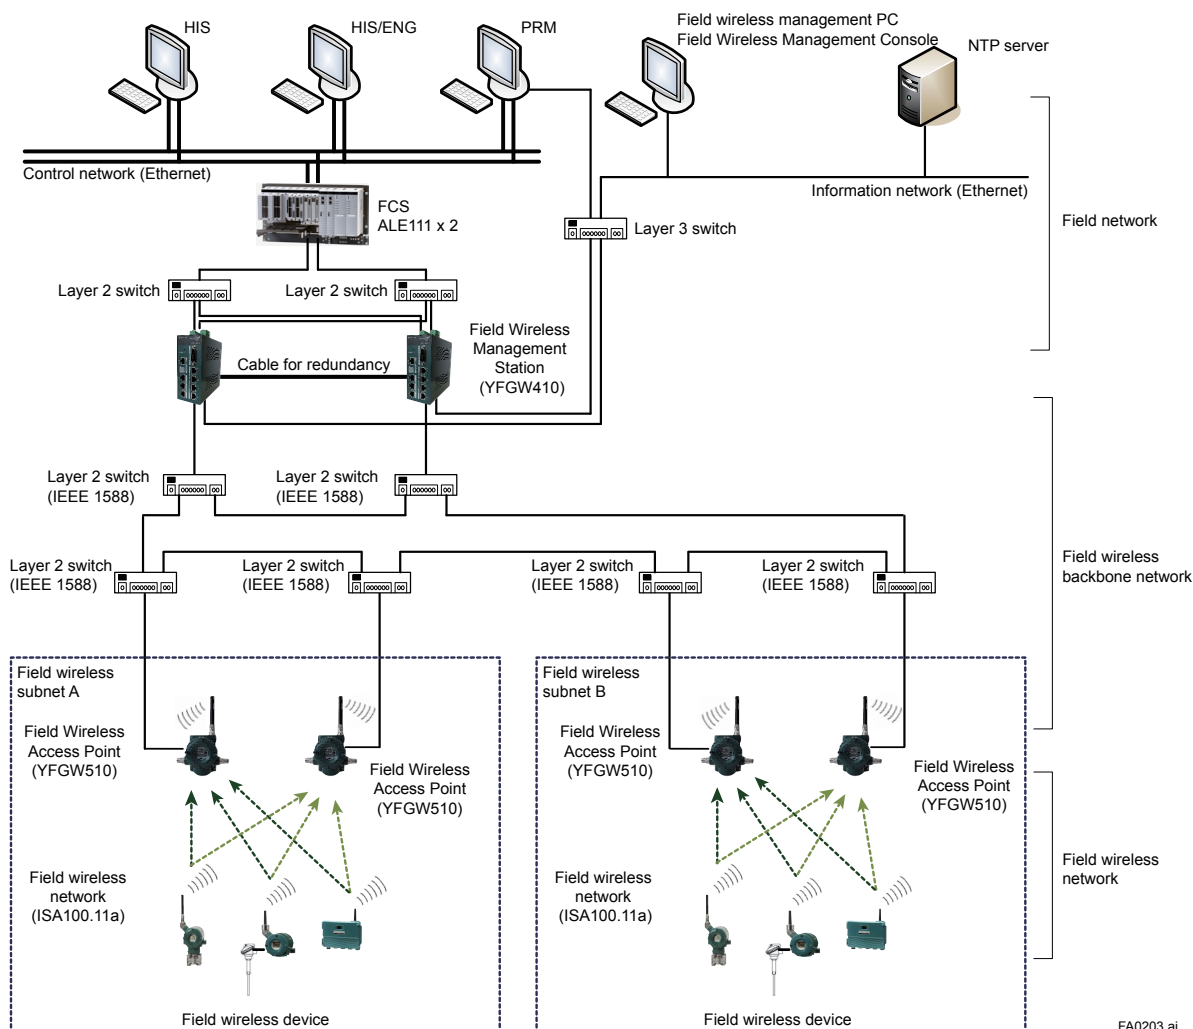

FA0203.ai

Figure A2-3 YFGW410/YFGW510-redundant configuration

Figure A2-3 shows the YFGW410/YFGW510-redundant system configuration.

The switching hub between YFGW410 and YFGW510 must support the rapid spanning tree protocol (RSTP) to prevent Ethernet packets from looping, and the IEEE1588 (precision time protocol).


For recommended switching hubs, see the User's Manual of YFGW410 field wireless management station (IM 01W02D01-01EN).

As shown above, field wireless networks can come with various system configurations.

PART-B. FUNCTIONS OF YFGW510


B1. Functions of YFGW510

The following block figures show communication functions of YFGW510 for each specification code.

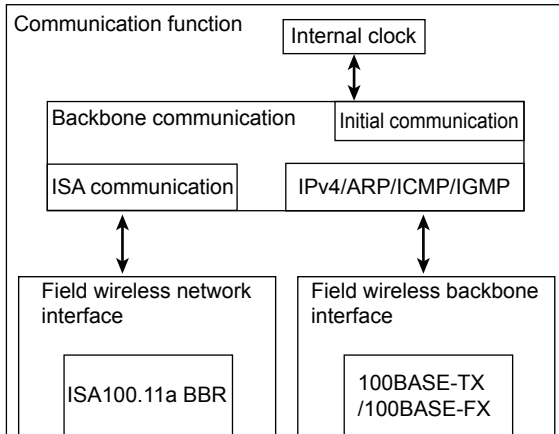


FB0101.ai

Figure B1-1 100BASE-TX/100BASE-FX specification (-A1, -A2)

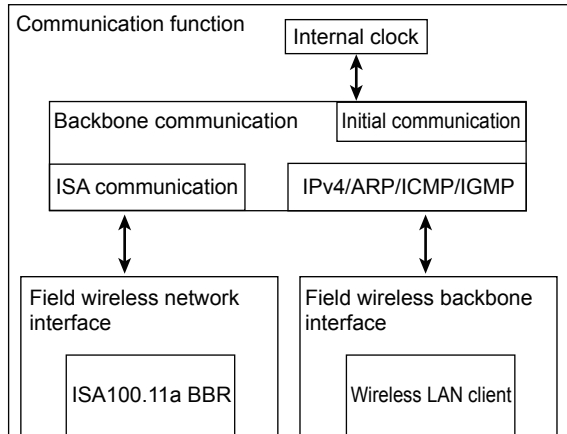

FB0102.ai

Figure B1-2 Wireless LAN client specification (-C4)

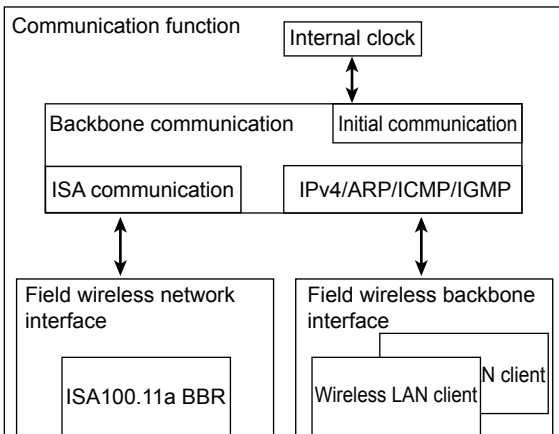

FB0103.ai

Figure B1-3 Redundant wireless LAN specification (-C5)

As shown above, the functions of the field wireless backbone interface differ depending on specifications.

YFGW510 with the 100BASE-FX specifications is equipped with a media converting board for metal network/optical fiber network. The metal network cable and optical fiber network cable cannot be used at the same time.

In the wireless LAN specifications, neither metal network cable nor optical fiber network cable can be used.


YFGW510 with the redundant wireless LAN specifications uses either wireless LAN port as a communication path. For the selection of a wireless LAN port and the conditions for switching communication paths, see D3.7 Setting of WLAN Redundancy.

ISA100.11a BBR of the field wireless network interface is for the ISA100.11a field wireless communication.

Initial communication shown in the block figure is an infrared communication port for setting parameters through the glass window on the front face of YFGW510.

B2. Structure and Parts of YFGW510

B2.1 Front View

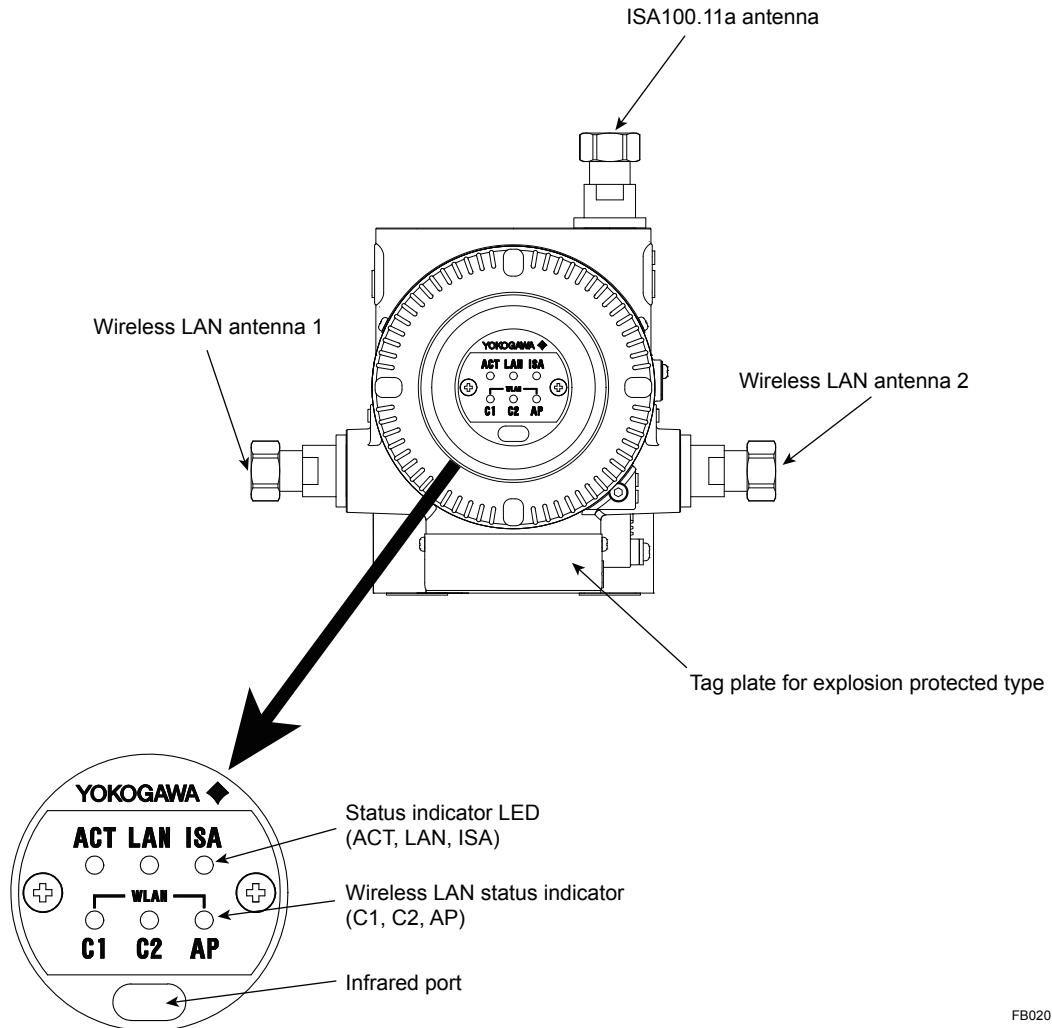

FB0201.ai


Figure B2-1 Front view

One to three antenna connectors are provided, depending on the specifications. For all specifications, the ISA100.11a antenna connector is on top. The wireless LAN antenna connector 1 on the left side of the body is for single communication and the antenna connector 2 is added on the right side for redundant communication.


The ISA100.11a antenna can be directly mounted on the connector, or remotely connected by using an extension cable. The wireless LAN antenna(s) must be placed vertically and more than 1 m apart from the ISA100.11a antenna. Thus, they must be connected by using antenna extension cables.

YFGW510 does not have any switches or buttons that can be mechanically operated from the outside of the housing.

B2.2 Rear View

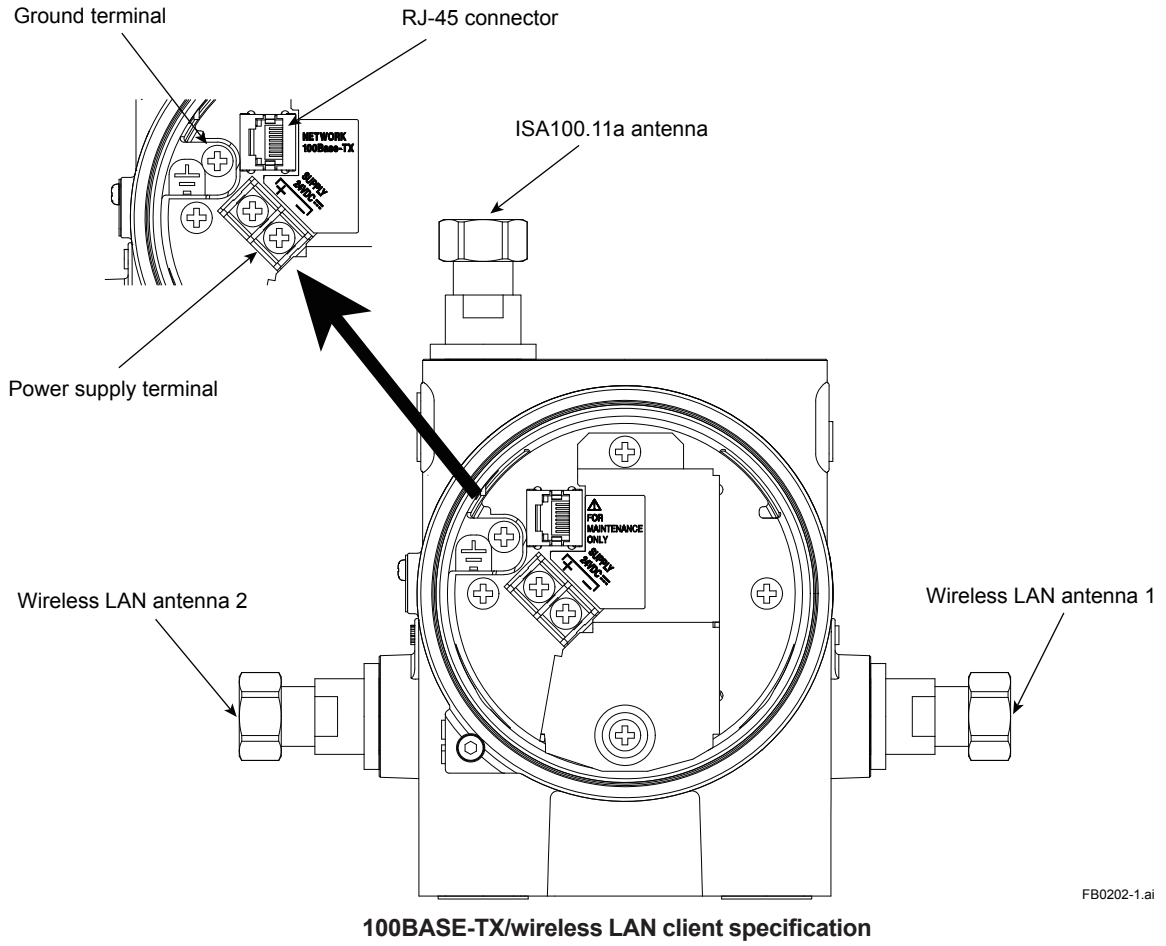

FB0202-1.ai

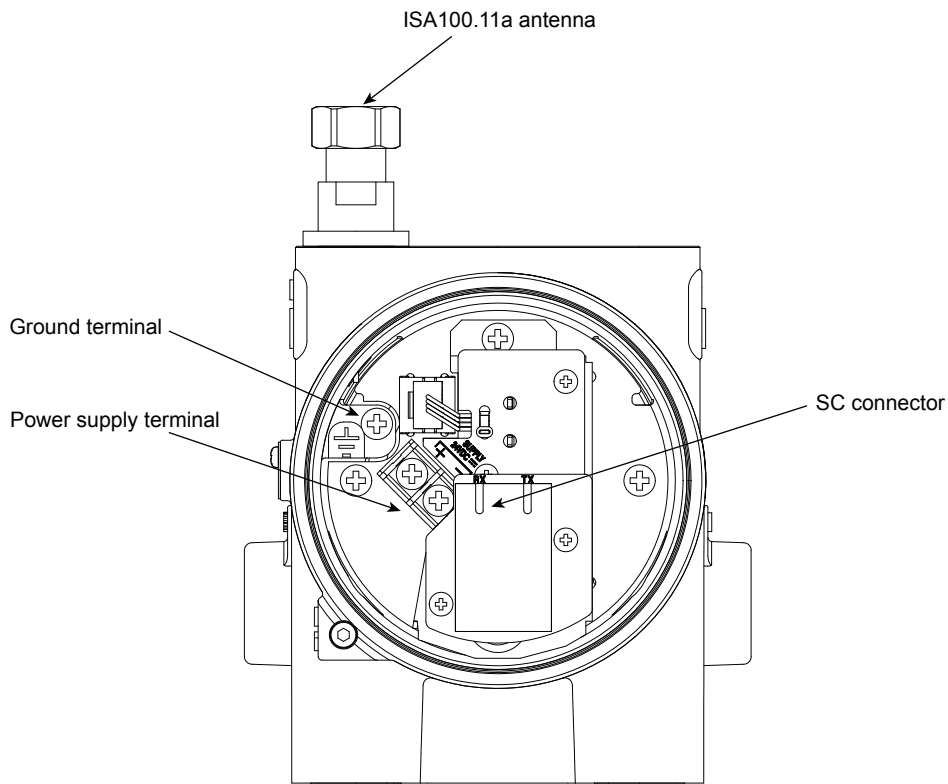

FB0202-2.ai

100BASE-FX specification

Figure B2-2 Rear view of YFGW510

The power supply cable, grounding cable and field wireless backbone cable are connected on the back face of YFGW510. The electrical connection is provided on the bottom.

In the 100BASE-FX specification, a media converter module is added to the 100BASE-TX specification.

Although the RJ-45 connector is provided in the wireless LAN specification, it is for maintenance only and cannot be used for communication.

B2.3 Side View

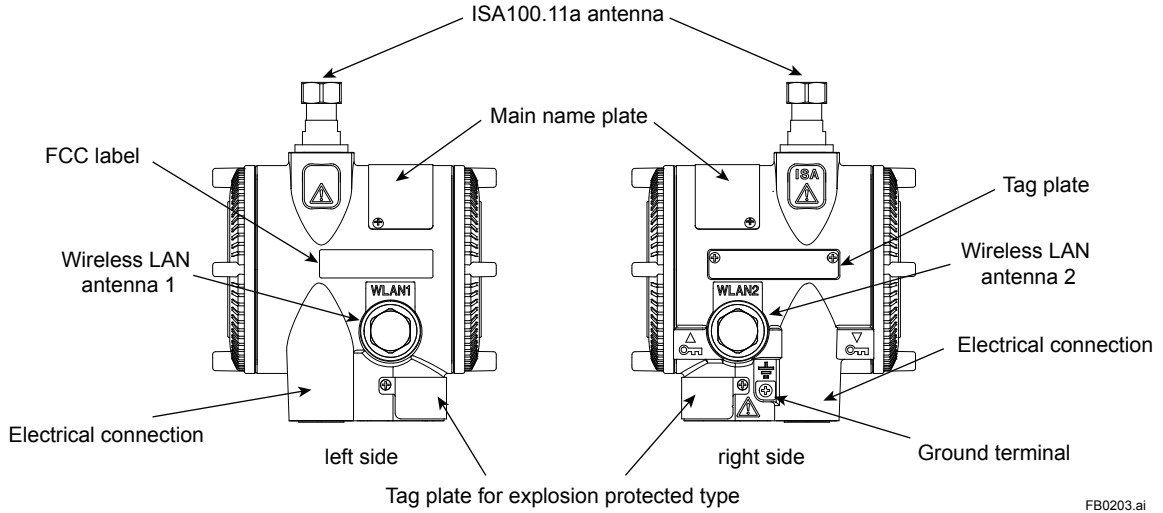


Figure B2-3 Side view of YFGW510

The wireless LAN antenna connector(s) are equipped on the side(s) only for wireless LAN specifications.

B3. LED Display Function

- The functions of the status indicator LED on the front face are as follows.

LED	Function
ACT	Display the operating status of YFGW510
LAN	Display the operating status of the communication interface (100BASE-TX/100BASE-FX)
ISA100	Display the operating status of ISA100.11a antenna
C1	Display the operating status of wireless LAN antenna 1
C2	Display the operating status of wireless LAN antenna 2
AP	Not used for YFGW510

■ Displaying the operating status

The relation of the device status and LED status is as follows.

LED	Power off	Starting up	Connect- ing	Normal	Mainte- nance	Abnormal
ACT	OFF	Orange	Orange blink	Green	Red blink	Red

Details of the device status are as follows.

Status	Description
Power off	Power supply is OFF.
Starting up	Power supply is turned on and the device is being initialized.
Connecting	Startup has completed and the device is trying to connect to YFGW410.
Normal	The results of the self-diagnosis (communication, operation) are all normal.
Maintenance	YFGW510 is being set up (device tags and parameters for wireless LAN, etc. are being set up through the infrared communication).
Abnormal	Any of the results of the self-diagnosis (communication, operation) is abnormal.

■ Displaying the communicating status

The relation of the communication status and LED status is as follows.

LED	Power off	Starting up	Signal search	Link down	Link up	Commu- nicating	Mainte- nance	Abnor- mal
LAN	OFF	OFF	N/A	OFF	Green	Green blink	OFF	Red
ISA100	OFF	OFF	N/A	N/A	Green	Green blink	OFF	Red
WLAN-C1	OFF	OFF	Orange blink	OFF	Green blink	Green	OFF	Red
WLAN-C2	OFF	OFF	Orange blink	OFF	Green blink	Green	OFF	Red
WLAN-AP	—	—	—	—	—	—	—	—


B4. Mechanical Operating Parts

YFGW510 does not have any switches or buttons that can be mechanically operated from outside of the housing.


B5. Checking the Product

When you receive YFGW510, please check that the product specifications match your order, all items are included and that there is no damage, stains or other problems.

■ Main unit

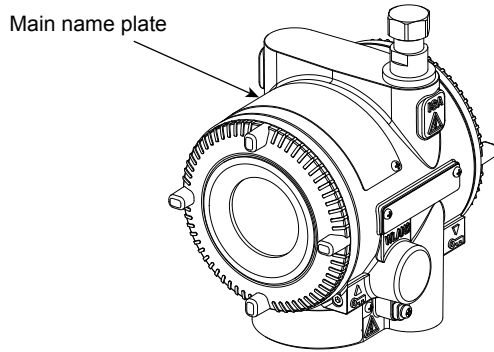

FB0501.ai

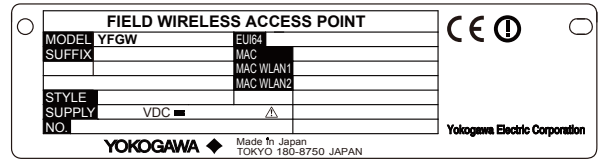


FB0502.ai

■ Standard accessories

- Manual


IM01W02E01-11EN Read Me First

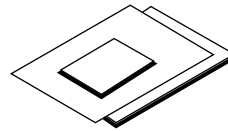

FB0503.ai

- Software media (F9195TA)

IM01W02E01-01EN YFGW510 Field Wireless Access Point Configuration tool for field wireless access point

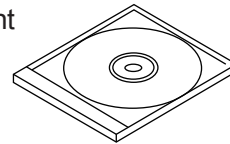

FB0504.ai

- Mounting bracket

- ISA100.11a antenna (when models with the standard antenna specified)

- Wireless LAN antenna 1 and 3-m antenna extension cable (when models with the detachable antenna specified)

- Wireless LAN antenna 2 and 3-m antenna extension cable (when models with the detachable antenna specified)

PART-C. INSTALLATION

This section describes installation for YFGW510.

Follow the steps below to install YFGW510.

1. Installation of YFGW510
2. Wiring of the power supply, grounding cable, signal cables and mounting/wiring of antenna(s)

C1. Installation Environment

YFGW510 should be installed in appropriate conditions to ensure its stable operation.

The table below shows details of the installation environment for YFGW510.

Item		Environment	Note
Power supply	Rated voltage	24 V DC	
	Voltage range	10 to 26.4 V DC	
	Momentary power failure	1 ms or less (instant disconnection)	
	Ripple ratio	1%p-p or less	
Terminal		M4 screw terminal (power supply and ground)	
Maximum power consumption		3.5 W	
Grounding		Class D grounding (100 ohms or less)	No sharing with other devices
Temperature range	Operating	-40 to 65°C	
	Transport/storage	-40 to 85°C	
Humidity range	Operating	0 to 100% RH (No condensation)	
	Transport/storage	0 to 100% RH (No condensation)	
Temperature gradient	Operating	±10°C/h or less	JEIDA29 class B
	Transport/storage	±20°C/h or less	
Protection degree		IP66	IEC529
Vibration resistance		Displacement amplitude: 0.21 mm (10 to 60 Hz)	
		Acceleration amplitude: 3 G (60 to 2000 Hz)	
Shock resistance		50 G 11 ms (de-energized, with half-sine wave pulse in three directions)	IEC68-2-27
Altitude		3000 m or less	
Noise resistance	Electric field	3 V/m or less (80 MHz to 1 GHz)	
	Electrostatic discharge	4 kV or less (contact discharge), 8 kV or less (aerial discharge)	
Cooling		Natural air cooling	
Mounting		2-inch pipe	With dedicated brackets



IMPORTANT

- Avoid direct sunlight.
- Keep away conductive particles such as iron and carbon.
- Avoid corrosive gases such as hydrogen sulfide, sulfurous acid, chlorine and ammonia.

**IMPORTANT**

This product is equipped with a wireless module which is designated as a certification of construction type as a wireless facility for 2.4 GHz band low-power data communication system of the Radio Act.

Refer to G1.3 Regulatory Compliance Statements for detail.

Before use, confirm that the location of installation satisfies the above standard.

**IMPORTANT**

- Microwave ovens and other industrial, scientific and medical equipment, as well as local wireless stations (license required) and specific low-power wireless stations (license not required) for identifying mobile objects used in the production line of a factory, use the same frequency band as this product. Prevent interference with other wireless stations.
 - Check that local wireless stations and specific low-power wireless stations are not being used in the vicinity before using this product.
 - If this product causes radio interference in a local wireless station used for identifying mobile objects, change the working frequency or stop the emission of radio waves immediately. For details on how to prevent radio interference, contact our service office.
-

C2. Power Supply and Grounding

An appropriate power supply is necessary for the stable operation of YFGW510.

C2.1 Power Supply

Connect the power supply to the terminal block of the main unit.

SEE ALSO For details of the power supply and power consumption of YFGW510, see C1. Installation Environment.

Inrush Current

When starting up, inrush current may run into the device. As shown in the table below, this current is, even though short-lived, significantly larger (10 times or more) than the steady state current. Make sure that the power supply and protector can endure the inrush current.

Item	Specification	Remarks
Inrush current	8 A (5 ms or less)	At 26.4 V DC

SEE ALSO For details of power supply wiring, see C5.1 Power Supply Cable Connection.



IMPORTANT

YFGW510 does not have a power switch. Provide a breaker or switch for the power line to turn ON/OFF the device.

- Configuration data may be corrupted if a power failure occurs during download to YFGW410, YFGW510 and field wireless devices. Configuration data is not corrupted even if a power failure occurs at the time of the usual operation.
- Please supply the power from the permanent power supply to avoid.

C2.2 Grounding

Appropriate grounding is necessary for the stable operation of YFGW510. Class D grounding (the third class grounding) with the grounding resistance of 100 ohms or less is necessary. To connect the grounding cable to YFGW510 directly, use the ground terminal on the right side of the main body.

SEE ALSO For details of ground wiring, see C5.2 Grounding Cable Connection.

C3. Requirements for Installation

C3.1 Requirements for Installation Locations

The installation of YFGW510 and field wireless devices must meet the following conditions:

- The field wireless equipment should be mounted in the place where no obstacle exists around the antenna. Especially, YFGW510 should be mounted in the condition that no obstacle exists around the antenna.
- If there is a pipe for mounting or plumbing in the direction except for the communication partners, the antenna should be more than 30 cm apart from them.
- When the wireless LAN antenna or wireless field antenna do not meet above requirements, use an extension cable to place the antenna where radio waves will not be affected by obstacles.
- All antennas must be in the upright position.
- The antenna of field wireless equipment must be installed at least 1.5 meter above the ground (floor)
- The YFGW510 should be installed at a location as close as possible to the center of the field wireless network.
- Ensure that the field wireless devices that are located within the wireless communication range are within the line of sight of each other. In the star topology, the YFGW510 must meet this condition.

C3.2 Notes on Installation

Pay attention to the following points at the installation of YFGW510 and field wireless devices.

■ Installation Location

This device is designed to work under the severe environmental condition. However, it is necessary to pay attention to the following conditions for the stable and long-term precise operation.

● Exposure to Direct Sunlight

If the device is placed at a location that may be exposed to direct sunlight, it is necessary to make the insulation measure. However, the antenna must be covered with the material which does not block the radio wave.

● Ambient Temperature

Avoid locations subject to wide temperature variations or a significant temperature gradient. If the location is exposed to radiant heat from plant equipment, provide adequate thermal insulation and/or ventilation. Do not install the device in a location where high temperature and high humidity may last for a long time.

● Ambient Atmosphere

Do not install the device in a corrosive atmosphere. If this cannot be avoided, there must be adequate ventilation as well as measures to prevent the rain water from penetrating or remaining in the conduits.

● Vibration and Impact

Although the device is designed to be resistant to vibration and impact, an installation site should be selected where vibration and impact are kept to a minimum.

■ Installation of Explosion Proof Compliant Device

The explosion proof compliant equipment can be installed in the hazardous area of specific gases. This device must be installed in accordance with the regulations of the country where the device is installed.

- Installation: Check that the ambient temperature is not beyond the limit.
- Wiring: Put all the power cables in protective ducts. If possible, also put the network cables (optical fiber cable or metal cable) in protective ducts.
- Maintenance: After confirming that there is no dangerous gas in the ambience, open the housing or protective ducts.

C4. Mounting

Mount YFGW510 on the 2-inch (2B) pipe, placed vertically or horizontally, using the dedicated bracket. YFGW510 is accessed through its four or six sides. Make sure that the mounting pipe, the device, connectors or cables will not interfere with radio wave signals. This is achieved by using the dedicated bracket. YFGW510 does not support any other mounting method.

■ Mounting on vertical pipe (Communications interface: 100BASE-TX/100BASE-FX)

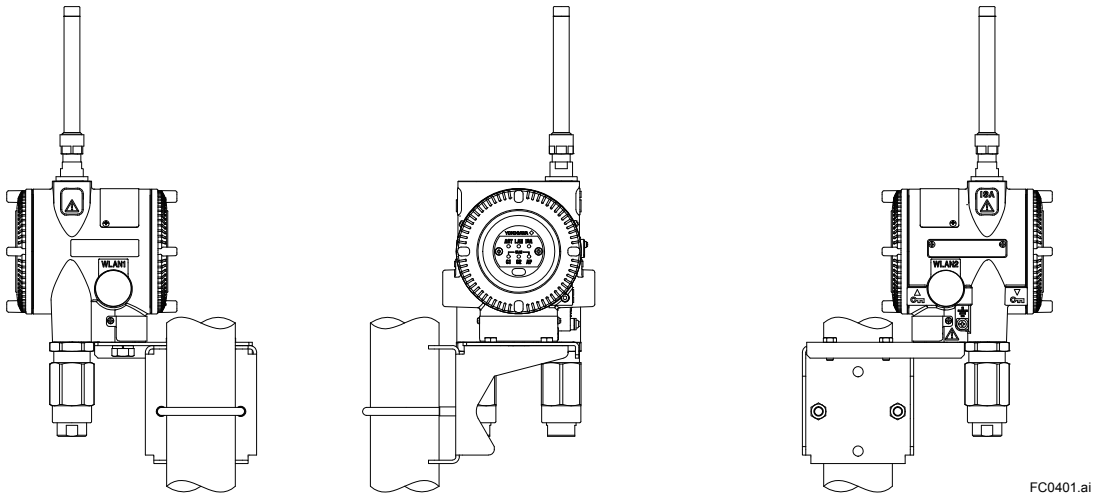


Figure C4-1 Mounting on vertical pipe (Communications interface: 100BASE-TX/100BASE-FX)

Assemble the bracket and attach YFGW510 to the bracket. Fasten it to the pipe using the U-bolts.

For wiring procedure using cable connectors, see the section on wiring.

■ **Mounting on vertical pipe (Communications interface: Wireless LAN client)**

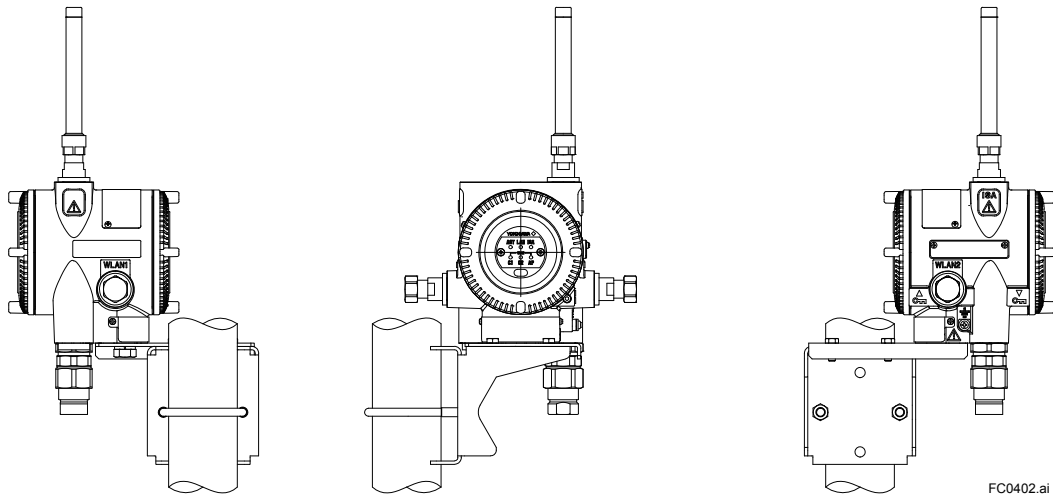


Figure C4-2 Mounting on vertical pipe (Communications interface: Wireless LAN client)

When used for a single-line wireless LAN, YFGW510 is equipped only with the connector for wireless LAN antenna on the left side of the device.

Assemble the bracket and attach YFGW510 to the bracket. Fasten it to the pipe using the U-bolts.

For wiring procedure using cable connectors, see the section on wiring.

The wireless LAN antenna must be placed away from the ISA100.11a antenna, using an extension cable. For details, see the section on antenna installation

■ **Mounting on horizontal pipe (Communications interface: 100BASE-TX/100BASE-FX)**

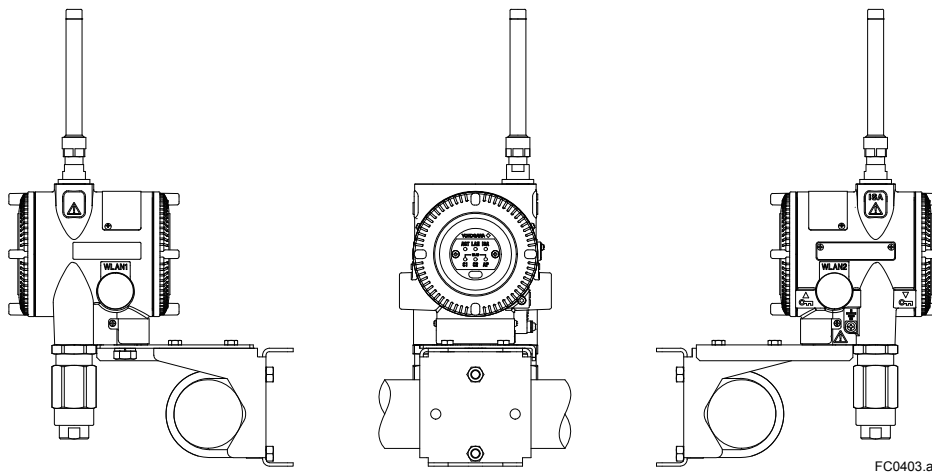


Figure C4-3 Mounting on horizontal pipe (Communications interface: 100BASE-TX/100BASE-FX)

Assemble the bracket and attach YFGW510 to the bracket. Fasten it to the pipe using the U-bolts.

For wiring procedure using cable connectors, see the section on wiring.

■ **Mounting on horizontal pipe (Communications interface: Wireless LAN client)**

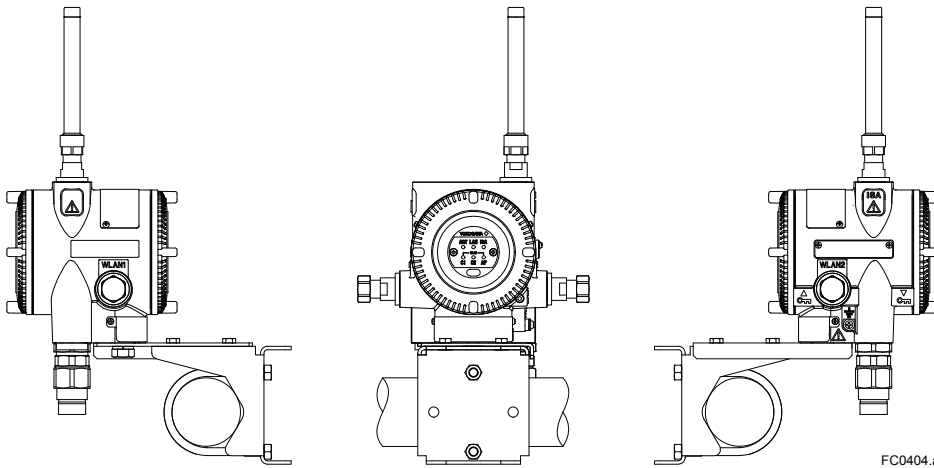


Figure C4-4 Mounting on horizontal pipe (Communications interface: Wireless LAN client)

For use with a single-line wireless LAN, YFGW510 is equipped only with the connector for a wireless LAN antenna on the left side of the device.

Assemble the bracket and attach YFGW510 to the bracket. Fasten it to the pipe using the U-bolts.

For wiring procedure using cable connectors, see the section on wiring.

The wireless LAN antenna must be placed away from the ISA100.11a antenna, using an extension cable. For details, see the section on antenna installation.

C5. Wiring

This chapter describes connection of the power supply cable, grounding cable and network cable to the installed YFGW510, mounting of antennas and cable connection.

- Use cables with a 70°C rating or higher for explosion-proof devices.
- Explosion-proof device must be wired in compliance with related laws and regulations.

C5.1 Power Supply Cable Connection

This section describes power supply cable wiring.

● Wiring

Pull the power supply cable into the device through the power cable ground. Connect the power supply cable to the power supply terminal in the device.

● Recommended power supply capacity

Output voltage range: 12 to 24V DC (Supplied from power supply to YFGW510)

Output capacity: 10 W or more *

* When starting up YFGW510, an inrush current flows as described in C2.1 Power Supply. Make sure that the power source has current output capacity at least three times normal current consumption and enough to withstand the inrush current as described below.

● Inrush current

When power is turned on, an input current flows, which is higher than its normal state. See C2.1 Power Supply about inrush current. Ensure that the power supply and protective devices can withstand this current.

● Cable (Insulated for industrial equipment)

Examples

- 600 V polyvinyl chloride insulated wires (IV): JIS C3307
- Polyvinyl chloride insulated wires for electrical apparatus (KIV): JIS C3316
- 600 V grade heat-resistant polyvinyl chloride insulated wires (HIV): JIS C3317
- Heatproof vinyl insulated wires VW-1 (UL1015/UL1007)

Wire size

- Core: AWG14 to 13 (2 to 2.6 mm²)

Terminal treatment

- Ring terminal for M4: With insulation covers

● **Power supply cable connection procedure**

1. Insert the power supply cable through the power supply cable gland into the housing.
2. Screw the cable gland into the housing to fasten it.
3. Connect the + cable to the + terminal and the – cable to the – terminal.
4. For shielding the power supply cable, connect the grounding cable to the ground terminal next to the power terminal.

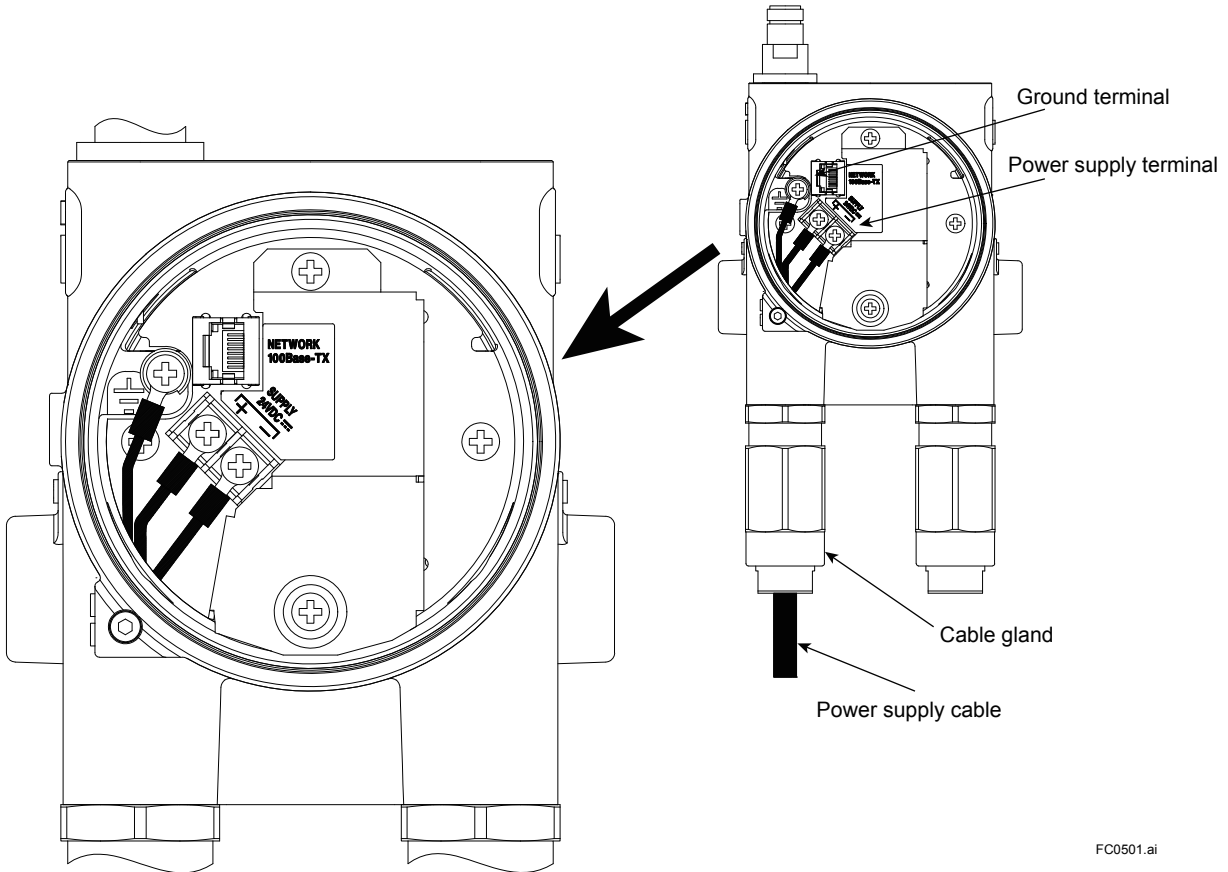


Figure C5-1 Connecting power supply cable

FC0501.ai

C5.2 Grounding Cable Connection

This section describes ground wiring.

Class D grounding (the third class grounding) with the grounding resistance of 100 Ω or less is necessary. To connect the grounding cable to YFGW510 directly, use the ground terminal on the right side of the main device. Do not share the ground wiring with other devices.



IMPORTANT

The explosion proof compliant device always needs the grounding.

● Applicable Cable (Insulated wire for industrial equipment)

Examples:

- 600 V polyvinyl chloride insulated wires (IV): JIS C3307
- Polyvinyl chloride insulated wires for electrical apparatus (KIV): JIS C3316
- 600 V grade heat-resistant polyvinyl chloride insulated wires (HIV): JIS C3317
- Heatproof vinyl insulated wires VW-1 (UL1015/UL1007)

Wire size


- Core: AWG14 to 13 (2 to 2.6 mm²)

Terminal treatment

- Ring terminal for M4: With insulation covers

● Connection of Cable

Connect the grounding cable to the ground terminal of YFGW510. The ground terminal is located at the bottom on the right side of the housing.

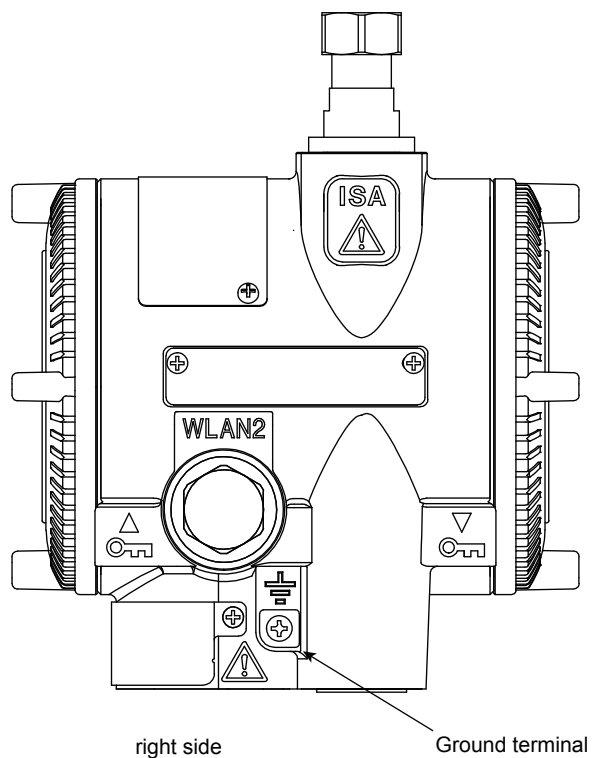

FC0502.ai

Figure C5-2 Connecting grounding cable

C5.3 Network Cable Connection

C5.3.1 Metal Network Cable Connection

IMPORTANT: YFGW510 must be installed by professionals.

- **Caution for use with metal network cable**

The metal network cable is intended for indoor wiring. In outdoor wiring, it is recommended the optical network cable in order to eliminate the influence of electromagnetic noise due to lightning and keep transmission distance. An optical fiber network cable is recommended if outdoor wiring is required because of transmission range and influence of electromagnetic noise due to lightning or other similar factors.

- **Cable**


Item	Specification
	Metal network cable
Standard	100BASE-TX
Connector	RJ-45*
Cable	Category 5 or higher
Transmission range	100m(Max.)

* RJ-45 connector attaching to the YFGW510-side end of the cable is larger than the cable gland hole. The RJ-45 does not go through the gland. Follow wiring procedures as described below.

- **Metal network cable connection procedure**

Connect the metal network cable using the following procedure.

1. Insert the metal network cable through the YFGW510 network cable gland and pressure-weld the RJ-45 connector to the end of the cable. Be sure to use a 100BASE-TX cable.
2. Insert the RJ-45 connector through the communications connection and screw in the cable gland.
3. Connect the metal network cable to the RJ-45 connector.

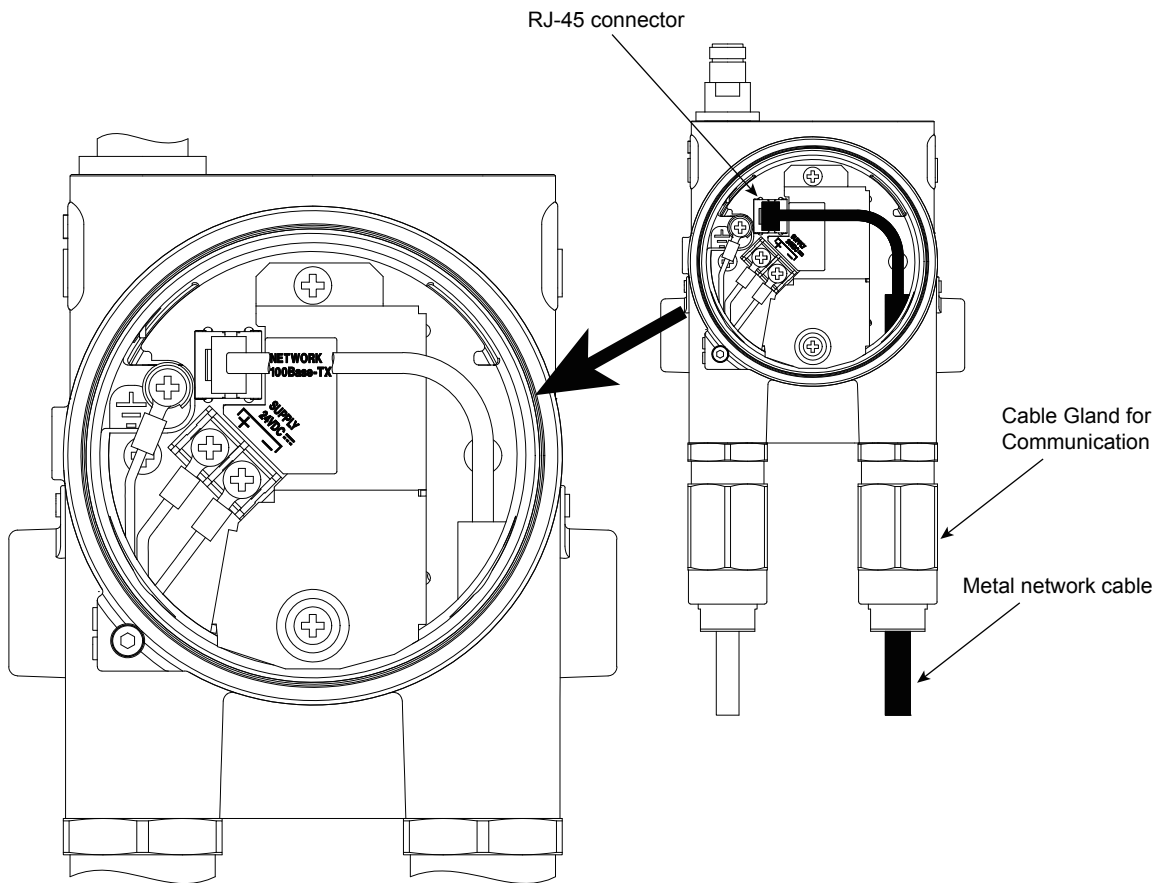

FC0503.ai

Figure C5-3 Connecting metal network cable

C5.3.2 Optical Network Cable Connection

- Cable

Item	Specification
	Optical network cable
Standard	100BASE-FX
Connector	SC connector (1-pole × 2)*
Cable	Multimode fiber (central wavelength: 1300 nm) 50/125 μm or 62.5/125 μm The inner tension member must be nonmetal, such as FRP.
Transmission range	2 km (Max.)

* A double ferrule SC connector does not go through the connection hole. Be sure to use a short-boot SC connector.




IMPORTANT

To connect YFGW410 and YFGW510 using an optical network cable, the YFGW610 field wireless media converter is required for YFGW410. YFGW610 is used for conversion between 100BASE-TX and 100BASE-FX.

● **Optical network cable connection procedure**

Connect the optical network cable in the following procedure.

1. Insert the optical network cable through the YFGW510 network cable gland.
2. Insert the connector through the YFGW510 connection and screw in the cable gland.
3. Connect the optical network cable to the SC connector of the device. Do not bend the optical network cable at a sharp angle.
4. The optical network cable consists of a pair of wires. One wire is used for sending signals and the other for receiving signals (TX/RX). The polarity of the YFGW510 SC connector is indicated on the connector label. If polarity is indicated, follow the indication. If not, the wires can be connected to either port. The polarity can be easily changed on YFGW610.

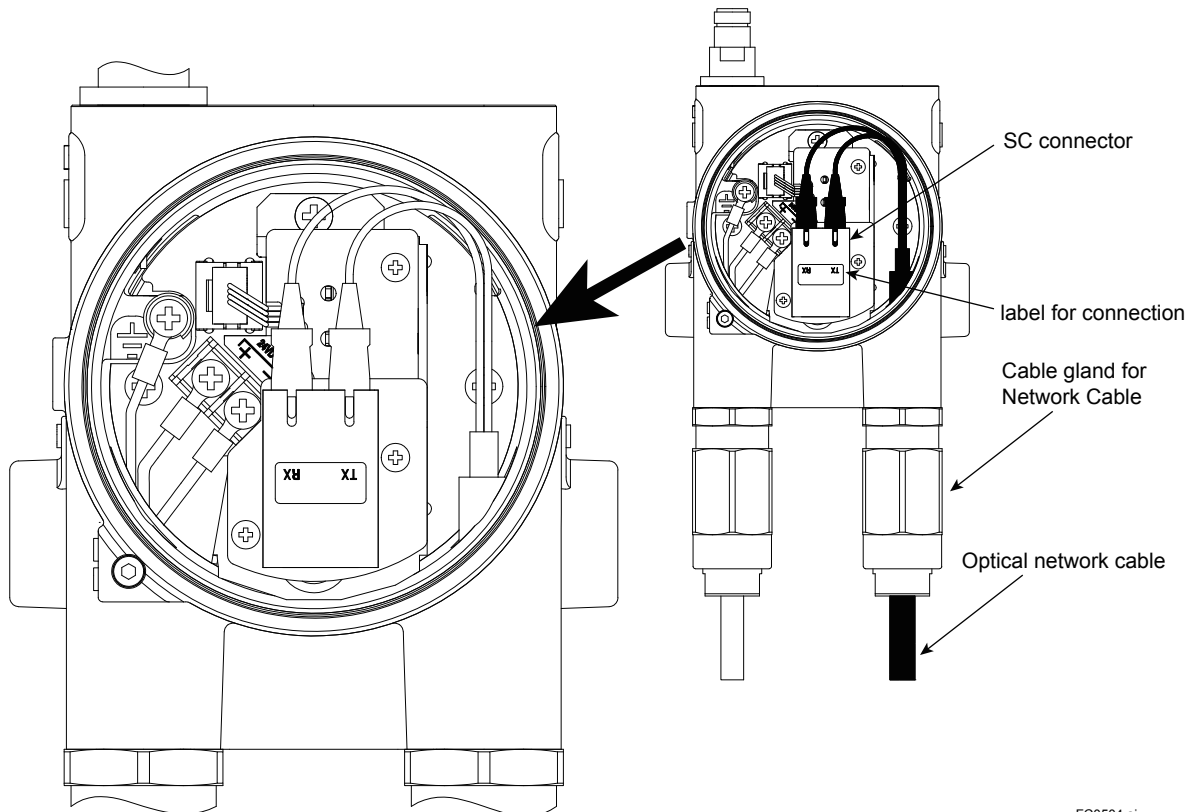

FC0504.ai

Figure C5-4 Connecting optical network cable


C5.4 Installation and wiring of Antenna

This section describes mounting of antennas to YFGW510, and installation of external antennas and their wiring.

C5.4.1 Mounting ISA100.11a antenna to YFGW510

This section explains the procedure for mounting the ISA100.11a antenna directly into the connector on top of the device.

Screw the antenna into the antenna connector on the top of the device. Ensure that the antenna is properly mounted. Protect the connector with tape to increase resistance to environmental impact.

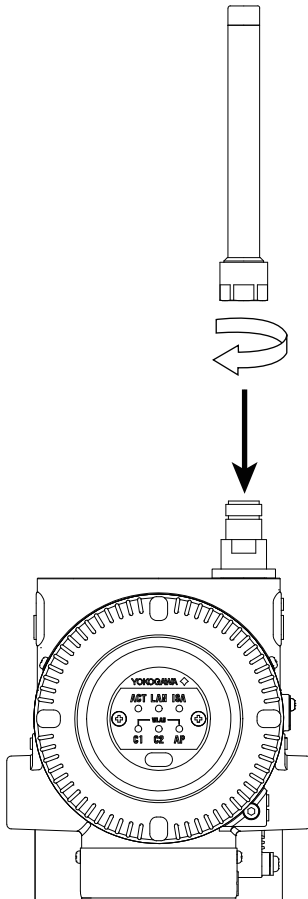

FC0505.ai

Figure C5-5 Mounting ISA100.11a antenna connector

● Antenna mounting procedure

1. Turn counter-clockwise the cover of the antenna connector on the top of YFGW510 to remove.
2. Mount the provided antenna into the antenna connector. Tighten the antenna connector with a torque of 2 to 3 N•m.
3. Protect the joint of the antenna and connector with tape.
 - Clean the connection to be protected.
 - Wind the butyl rubber self-bonding tape around the connection. See the manual of the tape about the winding.
 - To protect the butyl rubber self-bonding tape from the environment such as ultraviolet rays and so on, wind vinyl tape (or a vinyl type self-bonding tape) on it.

- **Tape**

- Butyl rubber self-bonding tape
- Vinyl tape or a vinyl type self-bonding tape

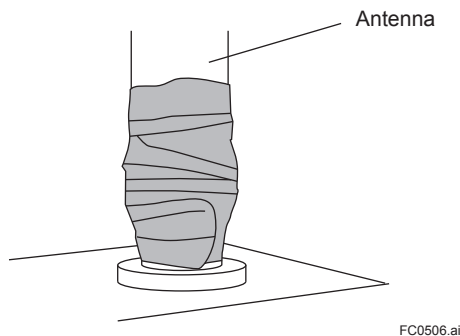


Figure C5-6 Sealing of antenna connector



IMPORTANT

The ISA100.11a antenna connector for the YFGW510 supports 2-dBi standard antennas only. A high-gain antenna, available as an optional accessory, must be installed as a remote antenna with an antenna extension cable, as described in the next section.

C5.4.2 Remote Installation and Wiring of ISA100.11a Antenna


This section explains the procedure for installing the ISA100.11a antenna away from YFGW510, using an external antenna extension cable.

■ Installing the antenna

Install the antenna in an appropriate location for wireless communication, referring to C3.1 Requirements for Installation Locations. Make sure that the mounting of the antenna on a 2-inch pipe has enough strength to withstand strong winds and vibrations. The antenna must be kept upright.

- **Fastening the antenna**

Fasten the antenna to the pipe using the brackets provided with the antenna extension cable.

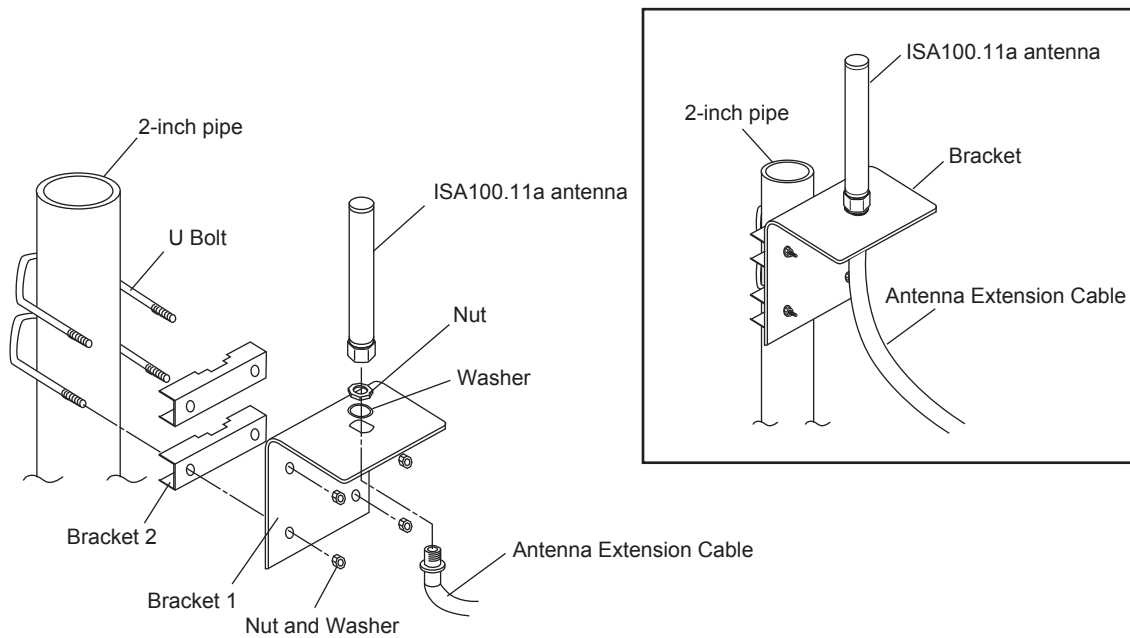

FC0507.ai

Figure C5-7 Fastening external antenna

● **Mounting procedure of antenna**

1. Fix the antenna extension cable to the bracket 1 with the provided nut as shown in the figure above.
2. Fix the bracket 1 to the 2-inch (2B) pipe by using the provided a pair of U bolts and bracket 2.
3. Screw the antenna into the antenna connector of the antenna extension cable on the bracket 1.
Tighten the antenna connector with a torque of 2 to 3 N·m.
4. Protect the joint of the antenna and the connector with tape. For details on taping, see C5.4.1 Mounting ISA100.11a antenna to YFGW510.

■ **Antenna wiring and improvement of environment resistance**


● **Specification for extension antenna cable
(Only by order of option)**

- Specification: 8D-SFA(PE)
- Outside diameter: 11.1 mm
- Minimum bend radius: 67 mm (when fixing)
167 mm (when wiring)
- Cable end treatment: N type connector, one end is male and the other is female.

* “When fixing” shows the bending radius for fixing (the state is maintained for a long time). “When wiring” shows the bending radius while checking the wiring position. This bending radius is set larger than that for fixing in order to prevent damage to the cable because the cable is likely to be repeatedly bent when checking the final wiring position.

● **Wiring of extension antenna cable**

1. Use the provided extension antenna cable to connect the antenna connector with the external antenna. Tighten the connector of the antenna extension cable with a torque of 2 to 3 N·m. Refer to the specification about the limitation of bend radius when fixing or wiring.
2. When using two extension cables, the provided arrester should be inserted between these cables.
3. Before the wiring work, confirm the polarities (male/female) of the connectors of antenna, extension antenna cable, and arrester.
Tighten the connector of the antenna extension cable with a torque of 2 to 3 N·m.

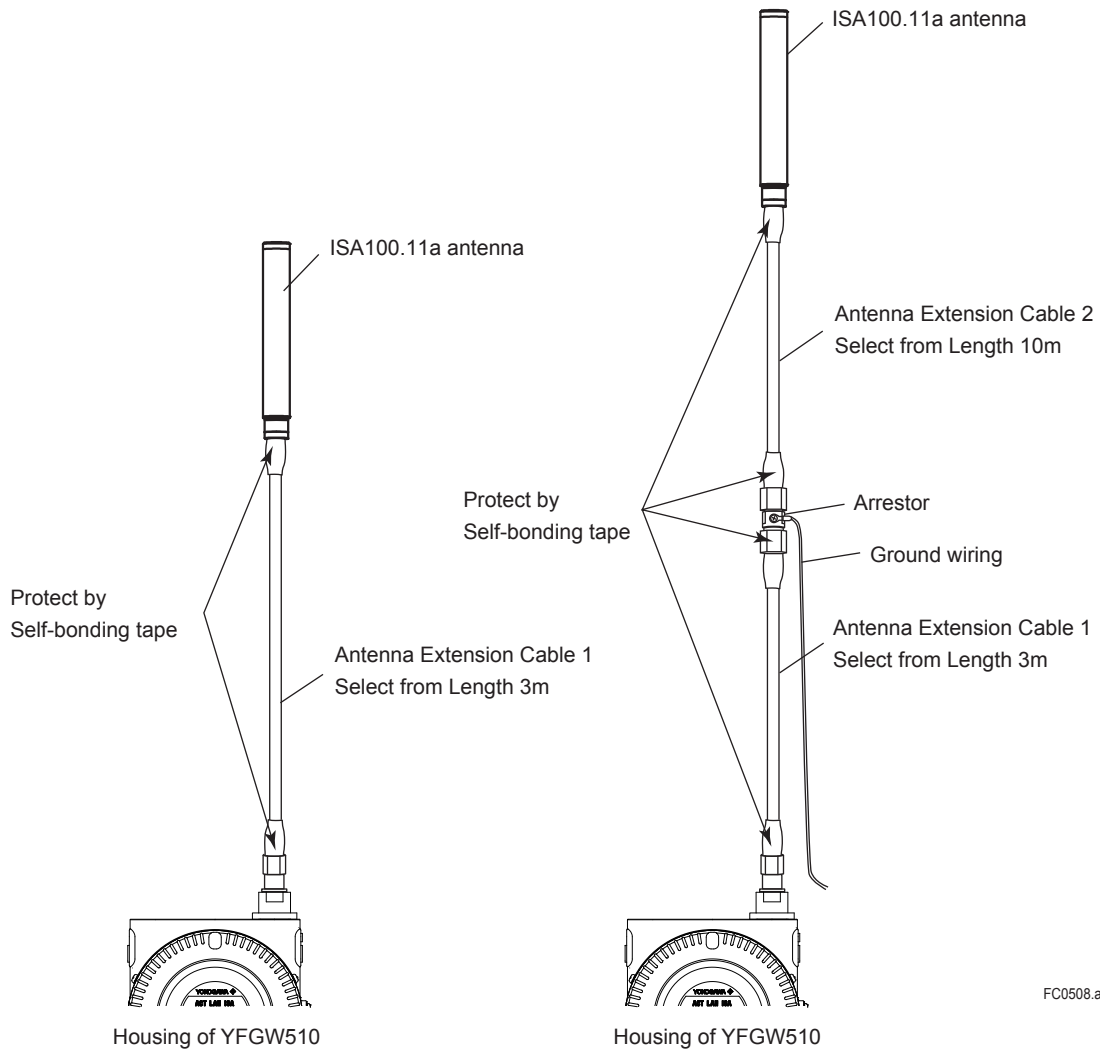

FC0508.ai

Figure C5-8 Wiring for remote antenna

● **Ground wiring of arrester for antenna extension cables**

To connect two antenna extension cables, an arrester for lightning protection is provided. Place the arrester between the two extension cables. Connect the grounding cable to the ground terminal of the arrester.

Connect the grounding cable to the grounding terminal on the main body. Class D grounding (the third class grounding) with the grounding resistance of 100 Ω or less is necessary. Do not share the ground with other devices.

● **Grounding cable (Insulated for industrial equipment)**

Examples


- 600 V polyvinyl chloride insulated wires (IV): JIS C3307
- Polyvinyl chloride insulated wires for electrical apparatus (KIV): JIS C3316
- 600 V grade heat-resistant polyvinyl chloride insulated wires (HIV): JIS C3317
- Heatproof vinyl insulated wires VW-1 (UL1015/UL1007)

Wire size

- grounding cable

Terminal treatment

- Ring terminal for M4: With insulation cover

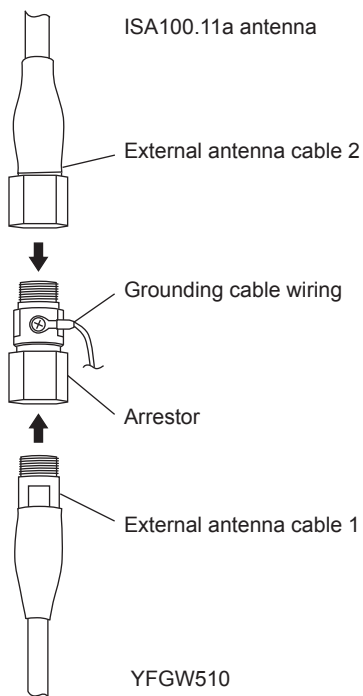

FC0509.ai

Figure C5-9 Wiring for arrestor

- **Waterproofing antenna cables and connectors**

Make sure that the antenna, extension cables and arrestor wiring including the grounding cable are connected properly. Protect the connectors and the arrestor with tape. As described in C5.4.1 Mounting ISA100.11a Antenna to YFGW510, wind self-bonding tape and vinyl tape around connections.

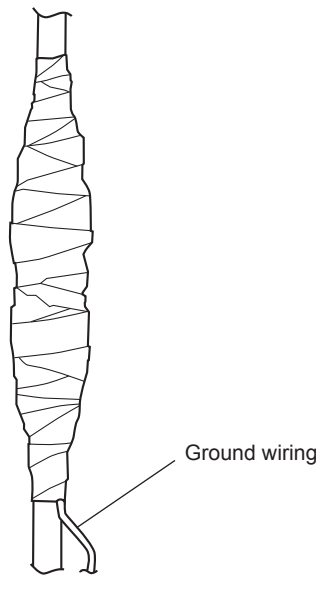


Figure C5-10 Sealing external antenna wiring

- **Fastening antenna wiring**

After taping, fasten the cables to a solid structure to protect against vibration and wind. Ensure that the radii of bends in the cables do not fall below the limits above.

C5.4.3 Installation and Wiring of Wireless LAN Antenna

The wireless LAN antenna must be connected to YFGW510 using an extension cable in order to prevent interference with the ISA100.11a antenna and to mount the antenna vertically. To fasten the antenna, use the brackets provided with the extension cable.

Basically, the wireless LAN antenna must be at least 1 m away from the ISA100.11a antenna. In a redundant wireless LAN system, the wireless LAN antennas must be at least 30 cm away from each other. When wireless LAN antennas or the ISA100.11a antenna is located near a mounting pipe or any other metal object, allow clearance of at least 30 cm.

■ Installing wireless LAN antennas

Install the wireless LAN antenna in an appropriate location for wireless communication, referring to requirements on distance from the ISA100.11a antenna, and C3.1 Requirements for Installation Locations. Make sure that the mounting of the antenna on a 2-inch pipe has enough strength to withstand strong winds and vibration. The antenna must be kept upright.

- **Fastening wireless LAN antenna**

Fasten the wireless LAN antenna to the pipe using the brackets provided with the antenna. When mounting on a vertical pipe, make sure that the antenna stands higher than the top of the pipe.

- WLAN specification (single communications)


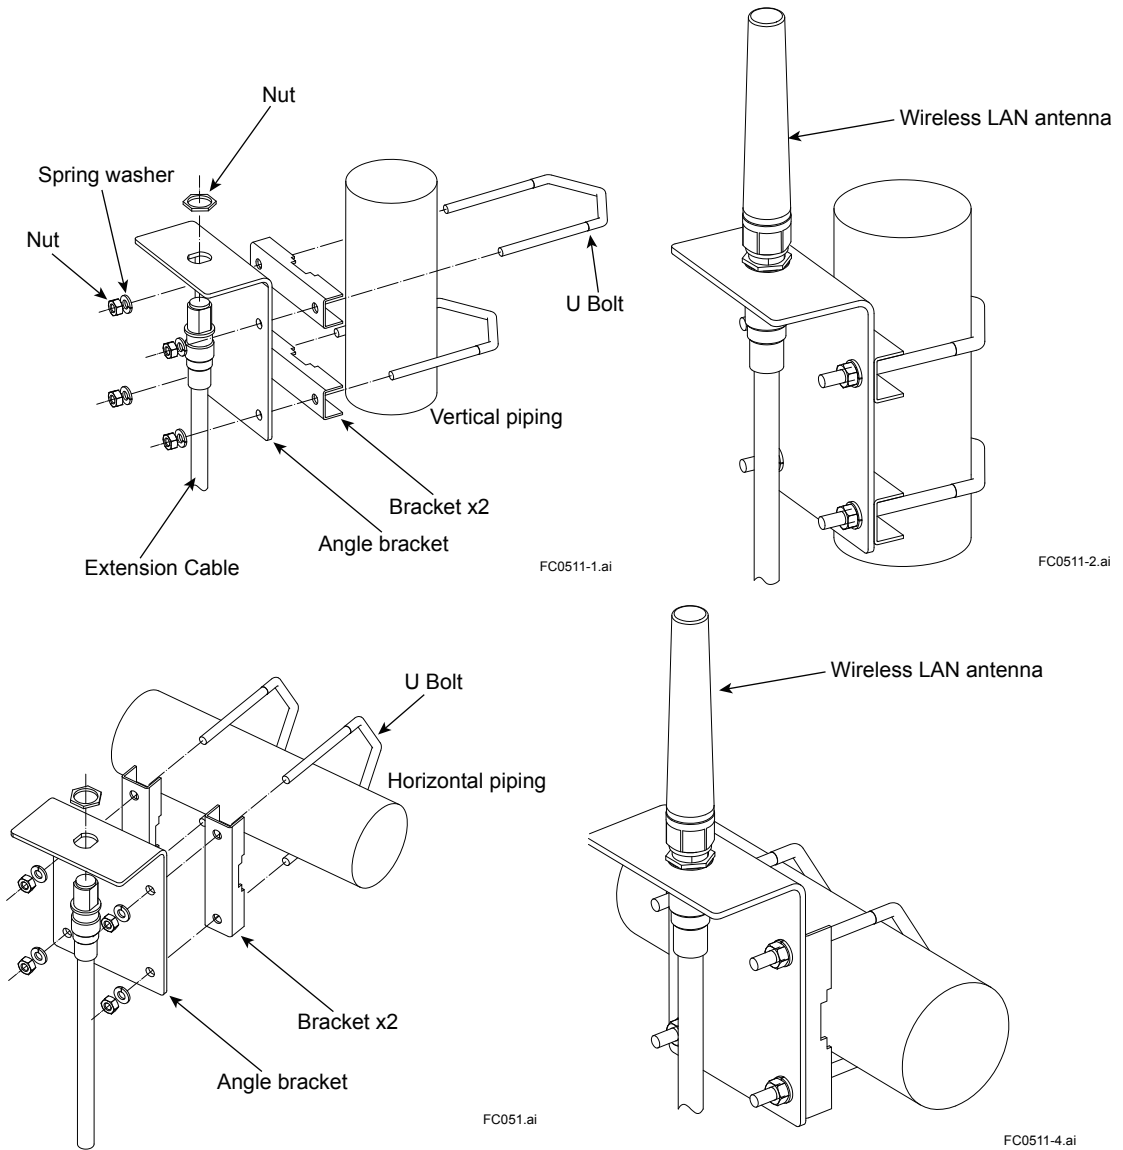



Figure C5-11 Connecting brackets to fasten the wireless LAN specification antenna

- WLAN specification (redundant communications)

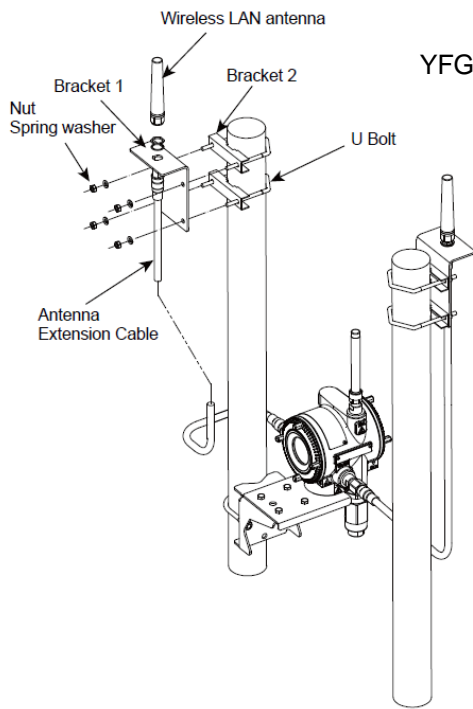

Mounting YFGW510 to the vertical piping

YFGW510 does not transmit at the same time from any antenna.

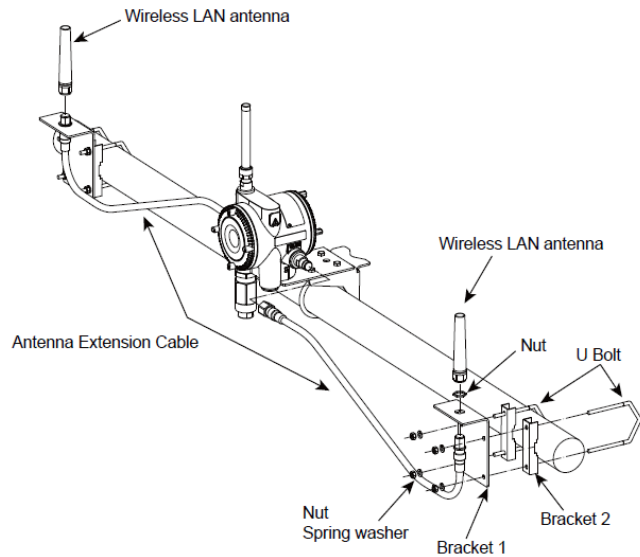

Mounting YFGW510 to the horizontal piping

Figure C5-12 Connecting brackets to fasten the WLAN redundant specification antenna

● **Wireless LAN antenna fastening procedure**

- Fix the antenna extension cable to the bracket 1 with the provided nut as shown in the figure above.
- Fix the bracket 1 to the 2-inch (2B) pipe by using the provided a pair of U bolts and bracket 2.
- Screw the antenna into the antenna connector of the antenna extension cable on the bracket 1.
Tighten the antenna connector with a torque of 2 to 3 N·m.
- Protect the joint of the antenna and the connector with tape to increase environmental resistance. For details on taping, see C5.4.1 Mounting ISA100.11a antenna to YFGW510.

■ Wiring of wireless LAN antenna and improvement of environmental resistance

● Specification of extension cable for wireless LAN antenna (Use only the cables included as option.)

- Specification: 8D-SFA(PE)
- Outside Diameter: 11.1 mm
- Minimum Bend Radius: 67 mm (when fixing)
167 mm (when wiring)
- Cable End Treatment: N type connector, one end is male and the other is female.

* “When fixing” shows the bending radius for fixing (the state is maintained for a long time).
When wiring” shows the bending radius while checking the wiring position. This bending radius is set larger than that for fixing in order to prevent damage to the cable because the cable is likely to be repeatedly bent when checking the final wiring position.

● Wiring procedure of wireless LAN antenna

1. Use the provided extension antenna cable to connect the antenna connector with the external antenna. Tighten the connector of the antenna extension cable with a torque of 2 to 3 N·m. Refer to the specification about the limitation of bend radius when fixing or wiring.
 2. When using two extension cables, the provided arrester should be inserted between these cables.
 3. Before the wiring work, confirm the polarities (male/female) of the connectors of antenna, extension antenna cable, and arrester.
- Tighten the connector of the antenna extension cable with a torque of 2 to 3 N·m.

YFGW510 does not transmit at the same time from any antenna.

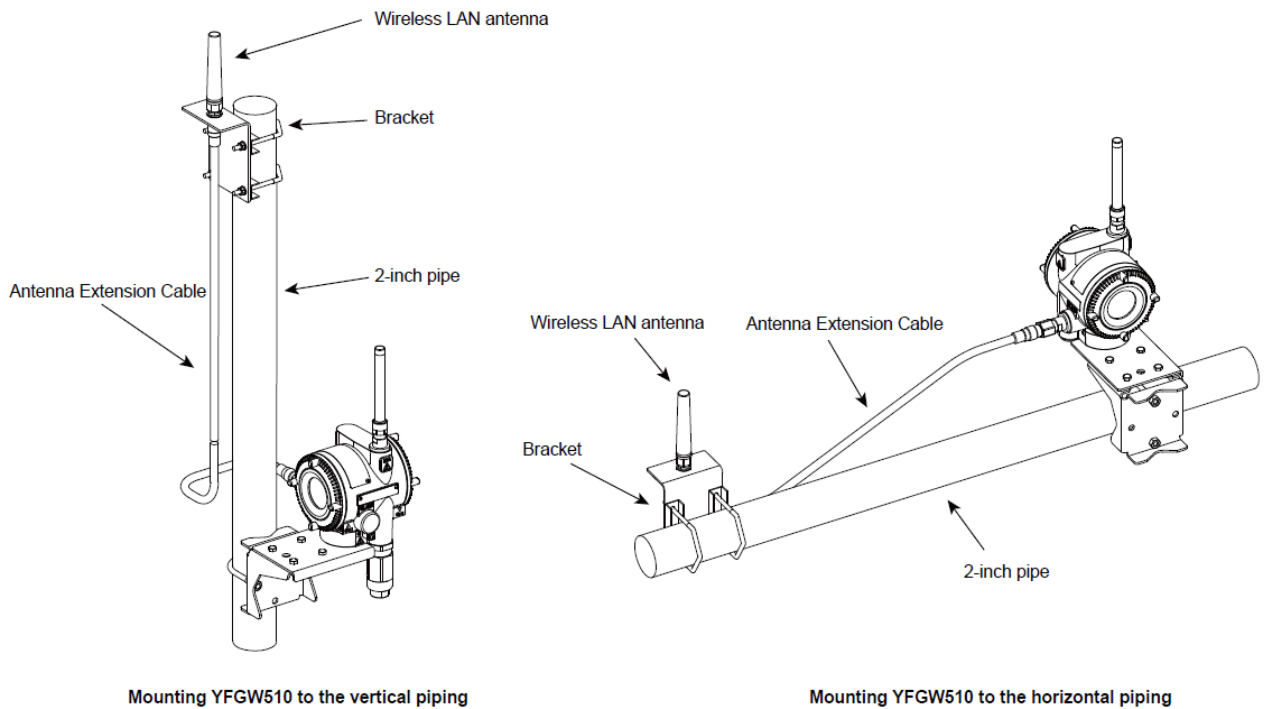


Figure C5-13 Wiring of wireless LAN antenna (single communications)

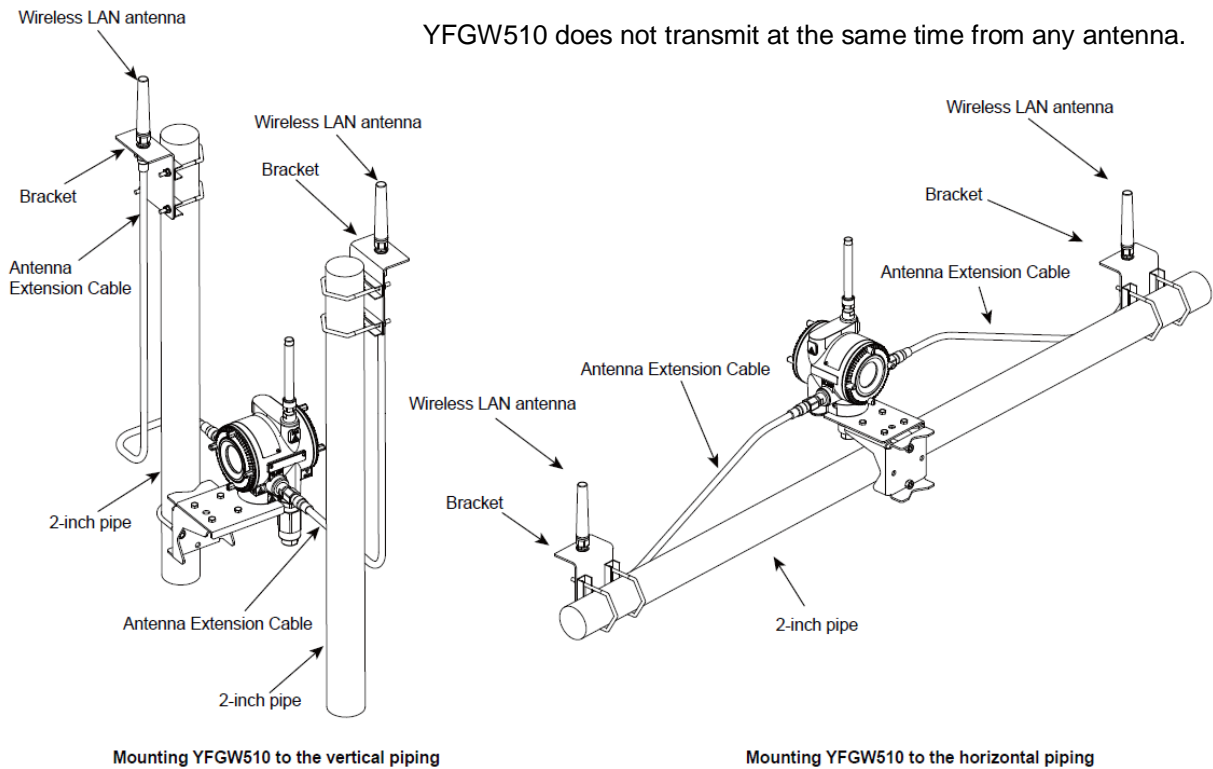


Figure C5-14 Wiring of wireless LAN antenna (redundant communications)

● **Ground wiring of arrestor**

Place an arrestor between two extension cables. Connect the grounding cable to the ground terminal of the arrestor.

Connect the grounding cable to the ground terminal on the main body. Class D grounding (the third class grounding) with the grounding resistance of 100 Ω or less is necessary. Do not share the ground with other devices.

● **Grounding cable (Insulated for industrial equipment)**

Examples


- 600 V polyvinyl chloride insulated wires (IV): JIS C3307
- Polyvinyl chloride insulated wires for electrical apparatus (KIV): JIS C3316
- 600 V grade heat-resistant polyvinyl chloride insulated wires (HIV): JIS C3317
- Heatproof vinyl insulated wires VW-1 (UL1015/UL1007)

Wire size

- Core: AWG14 to 13 (2 to 2.6 mm²)

Terminal treatment

- Ring terminal for M4: With insulation covers

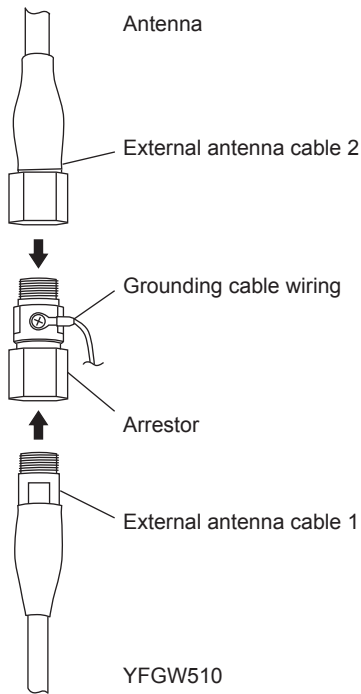


FC0515.ai

Figure C5-15 Wiring for arrestor

● **Waterproofing antenna cables and connectors**

Make sure that the antenna, extension cables and arrestor wiring including the grounding cable are connected properly. Protect the connectors and the arrestor with tape. As described in C5.4.1 Mounting ISA100.11a Antenna to YFGW510, wind self-bonding tape and vinyl tape around connections.

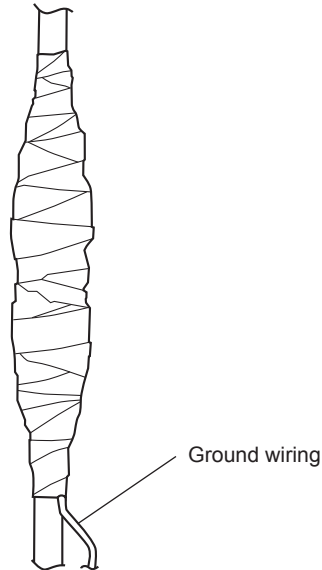

FC0516.ai

Figure C5-16 Sealing for antenna wiring

● **Fastening wireless LAN antenna wiring**

After taping, fasten the cables to a solid structure to protect against vibration and wind. Ensure that the radii of bends in the cables do not fall below the limits above.

C6. Explosion Proof Wiring

- Explosion proof approval is pending -
Remainder of page intentionally left blank

PART-D. SETUP

D1. Initial Configuration

Initial configuration is required to connect YFGW510 to YFGW410.

To set the initial configuration, install the field wireless access point setup tool (setup tool) provided with YFGW510 on a PC and connect the infrared adapter of the PC to YFGW510.

The table below shows the essential items to set in the initial configuration.

Setting item	Description	Scope
Device tag	The device tag of YFGW510	All models
Password to YFGW410	Password to connect to YFGW410	
Login password	Password to log in to the field wireless access point setup tool	
SSID1	Identification code of the wireless LAN	All models with wireless LAN specification
Encryption 1	Encryption method	
Network key 1	Initial encryption key	
Band 1	Frequency band of the wireless LAN	
Channel 1	Channel of the wireless LAN	
Data rate 1	Communications rate of the wireless LAN	
SSID2	Identification code of the wireless LAN	All models with redundant wireless LAN specification
Encryption 2	Encryption method	
Network key 2	Initial encryption key	
Band 2	Frequency band of the wireless LAN	
Channel 2	Channel of the wireless LAN	
Data rate 2	Communications rate of the wireless LAN	

Note: The default settings are provided in the descriptions below.

D2. Setup Tool

This chapter provides system requirements and installation procedures for the field wireless access point setup tool.

D2.1 System Requirements

- Basic license of software provided with YFGW510: 1 licensee
- Language:
 - Software (GUI): English
 - User's manual: Japanese or English (to be specified at the time of order)

D2.1.1 Hardware

- Recommended system requirements of PC

Item	System requirements
CPU	Intel Core 2 Duo 2.66 GHz or equivalent minimum
RAM	2 GB minimum
Hard disk	40 GB minimum (at least 15 GB free space)
Display	1280 × 800 high color, 32-bit
Communications device	Ethernet network card USB 2.0 port

- Infrared adapter

The following infrared adapter is recommended for this field wireless access point setup tool. The adapter is not provided with YFGW510 or setup tool. The Infrared adapter is available as an extra option.

Recommended Infrared adapter

Item	System requirements
Manufacturer	ACTISYS
Product name	IR224UN
Model No.	ACT-IR224UN-LN96-LE
Baud rate	9600 bps

D2.1.2 Software

Software requirements*1*2*3

Supported OS *1	Type
Windows7 Professional Service Pack 1	32/64-bit
Windows Vista Business Edition Service Pack 2	32-bit
Windows Server 2008 Enterprise Service Pack 2	32-bit
Windows Server 2008 R2 Enterprise	32/64-bit


*1: Japanese or English version is supported.

*2: Microsoft .NET Framework 3.5 Service Pack 1 is required.

*3: The 64-bit operating systems run on WOW64 (Windows 32-bit On Windows 64-bit).

D2.1.3 Connection Example

To use the setup tool, infrared communication between the PC and YFGW510 is required. Connect the Infrared adapter to a USB port on the PC. Place the Infrared adapter close to the infrared photoreceiver of YFGW510 and ensure that they face each other. For distance between YFGW510 and the Infrared adapter, see the table below.

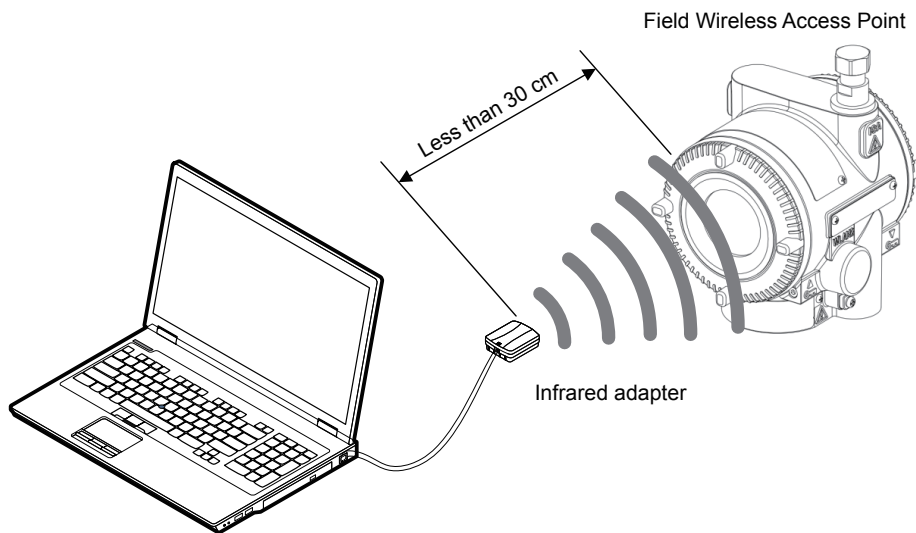

Field wireless access point setup tool

FD0201.ai

Figure D2-1 Connection example for field wireless access point setup tool

Table D2-4 Communications distance between YFGW510 and Infrared adapter

Item	Communications distance
Recommended communications distance	Within 20 cm
Maximum communications distance	30 cm

D2.2 Installation Procedure

Install the field wireless access point setup tool and Infrared adapter driver on the PC.

D2.2.1 Driver for Infrared adapter


- **Installing the driver**

Install the driver by the means provided with the Infrared adapter, referring to the user’s manual of ACTiSYS

- **Checking the device**

Connect the Infrared adapter to a USB port on the PC. Check the Device Manager to see whether the PC has detected the Infrared adapter. To display the Device Manager, select Control Panel on the menu, select Hardware and Sound, then Device Manager. The window, as shown in Figure D2-2, will appear.

When the PC has detected the Infrared adapter, Prolific USB-to-Serial Comm Port(COMx) will appear under COM port. The letter “x” represents the COM port number. Write down this number. The COM port number assigned to the Infrared adapter is needed at the start of setup. In the example shown in Figure D2-2, the adapter is assigned to COM9.

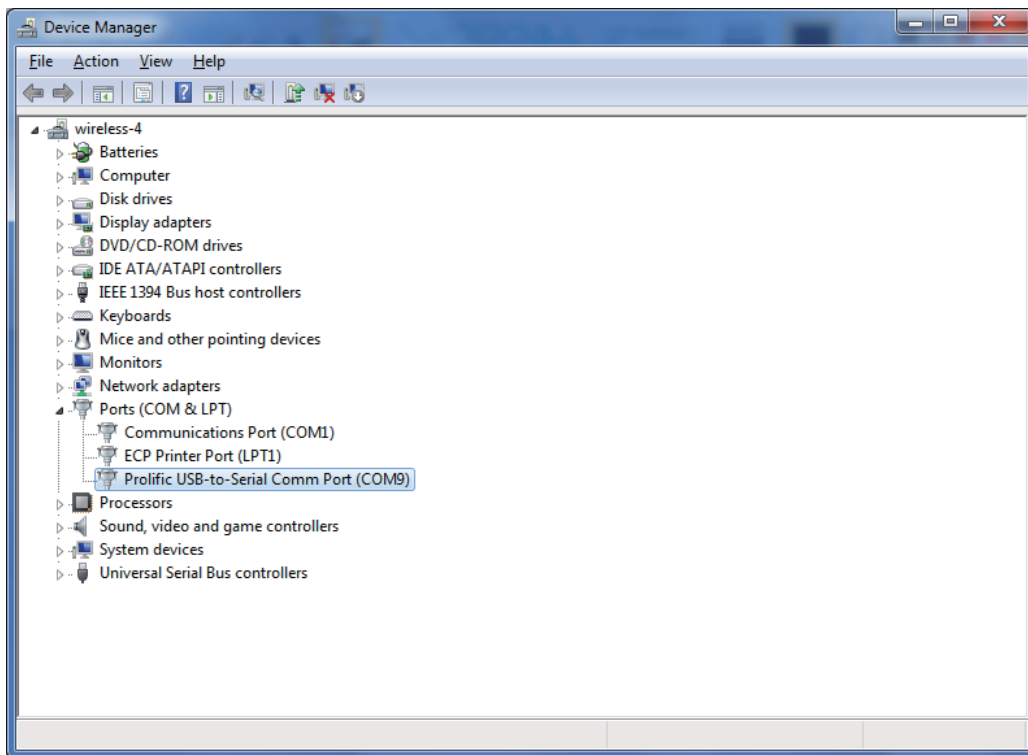

FD0202.ai

Figure D2-2 Example of Device Manager window

D2.2.2 Field Wireless Access Point Setup Tool

- **Installation**

Insert the DVD, provided along with YFGW510, into the PC. Copy the folder containing the setup tool program (YFGW510Tool.exe and FWMCCCommon.dll) into a folder on the PC hard drive. This program will not change the registry information of Windows.

- **Starting the setup tool**

Double-click the YFGW510Tool.exe icon to start the tool.


When the program has started, the login window, as shown in Figure D2-3, appears and prompts you to enter the COM port number of the Infrared adapter and the password to log in to YFGW510.



IMPORTANT

When using the field wireless access point setup tool, must close FieldMate and the other application that connected to the infrared adapter.

In after, communication between the PC running the tool and YFGW510 must be kept available via the infrared adapter.

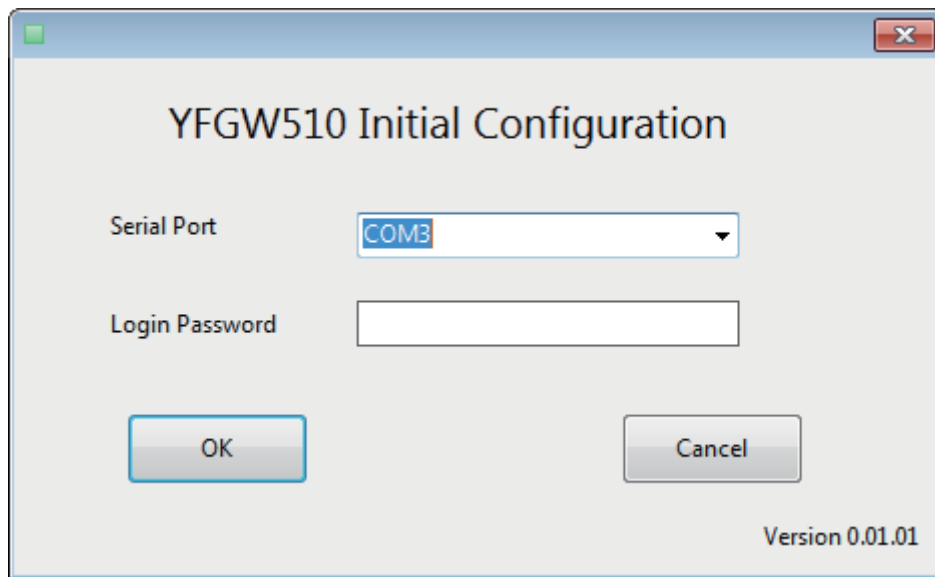

FD0203.ai

Figure D2-3 Login window

The table below shows the setting items and their default settings.

Item	Number of characters	Default setting
Serial Port	The number of the port the Infra-red adapter is connected to	The smallest COM number among those devices
Login Password	Up to 8 one-byte alphanumeric characters or other symbols (e.g., !,\$,#)	yokogawa

In the Serial Port field, enter the COM port number of the Infrared adapter. Open the drop-down list, then select the COM port number to which the Infrared adapter is connected.

When beginning the program for the first time, enter the default login password in the Login Password field.

Click the [OK] button. The Change Login Password window as shown in Figure D2-5 will appear if the field wireless access point setup tool is communicating with YFGW510.


Click the [Cancel] button to exit the setup tool. The window will close.



IMPORTANT

- If the wrong password is entered three times straight, YFGW510 will not accept another login attempt for 30 minutes. Type in the password carefully.
- Keep the login password safe. It is necessary for setting up the field wireless access point.

After clicking the [OK] button, if there is a problem in communication between the field wireless access point setup tool and YFGW510, the Error window as shown in Figure D2-4 will appear.

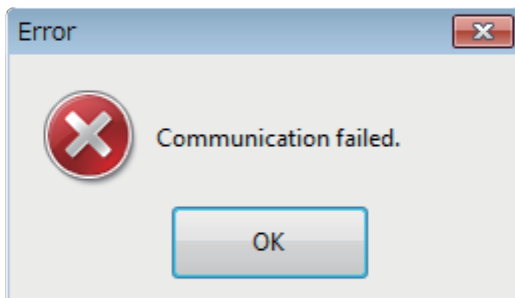


FD0204.ai

Figure D2-4 Communication Error window

Check the adapter COM port number, and positions in the front window of YFGW510.

After the problem has been solved, click the [OK] button. The window will close.

Go back to the window as shown in Figure D2-3. Check the entered information and click the [OK] button to proceed.

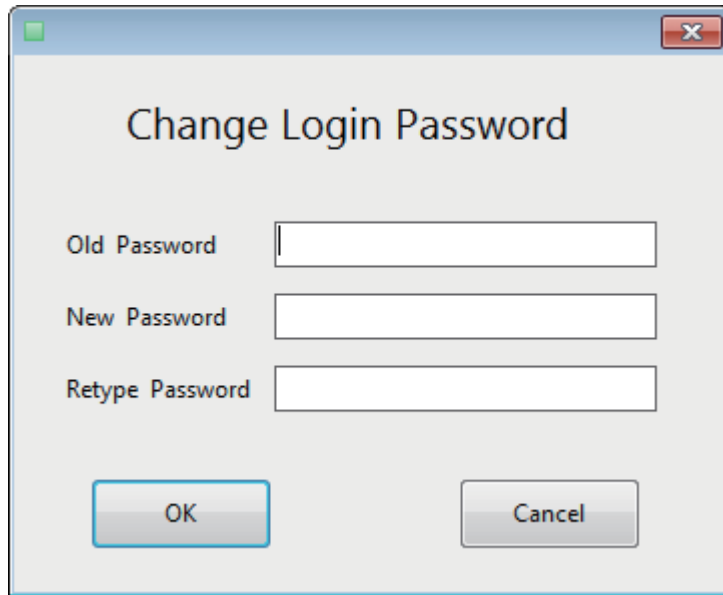


FD0205.ai

Figure D2-5 Change Login Password window

Change the default login password to a new password to ensure security. Enter the current password (default) in the Old Password field, then type a new password in the New Password and Retype Password fields.

Click the [OK] button. When the password has been successfully changed, the main window as shown in Figure D2-6 will appear.

Click the [Cancel] button to exit the program. All windows will close.

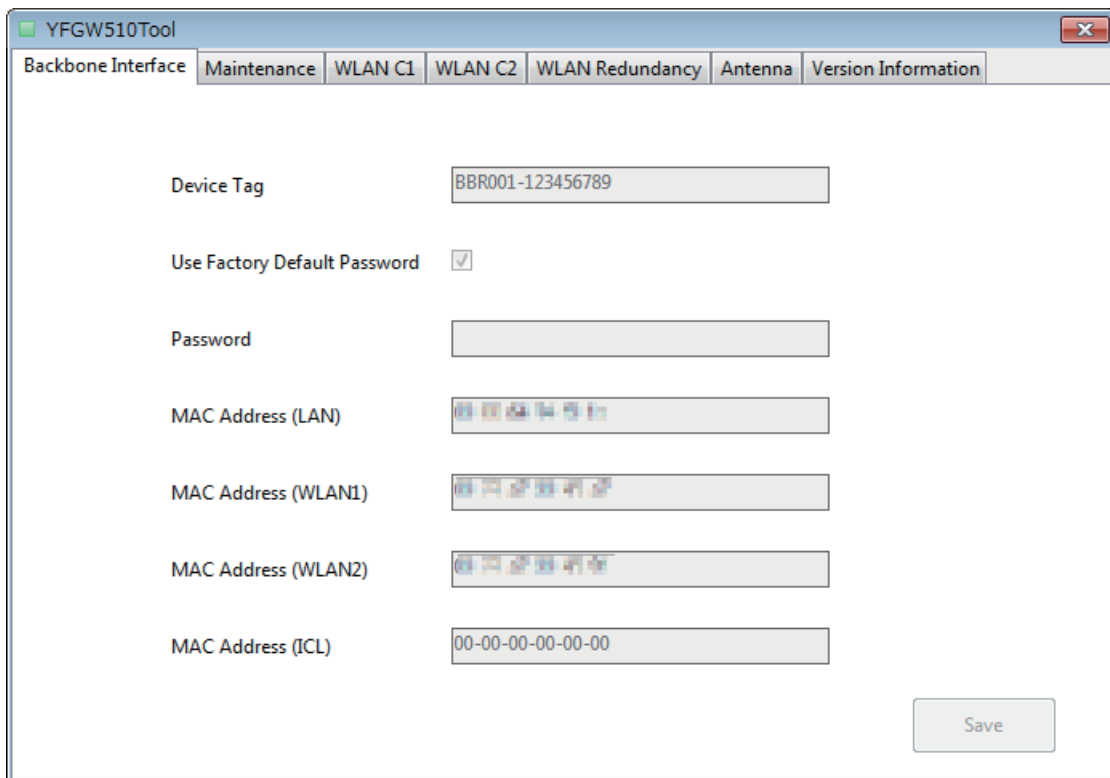

FD0206.ai

Figure D2-6 Main window

The Backbone Interface tab of the setup tool’s main window is always shown at startup of the set-up tool. The window is also shown in Display mode with the parameter fields and buttons grayed out.


● **Problem with infrared communications**

If, after login to YFGW510, an infrared communication failure occurs while attempting to access YFGW510 via the setup tool as described in D3 Configuration Method, the communication error window shown in Figure D2-4 appears similarly when an error occurs during login to Configuration tool.

After verifying and fixing the problem, click the [OK] button to close the window. In this case, retry to log in again.

● **Setup tool operation timeout**

If there is no operation for five minutes during the configuration of the field wireless access point setup tool indicate a timeout error shown in Figure D2-7, will appear on top of the main screen. In this case, retry to log in again.

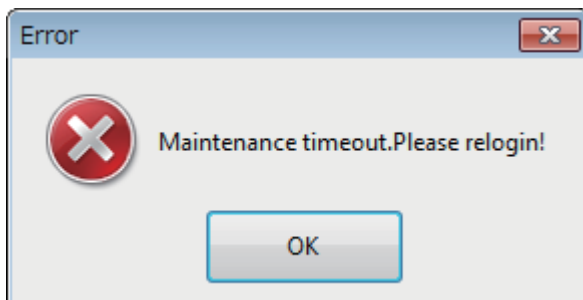

FD0207.ai

Figure D2-7 Timeout error window

D3. Configuration Method

This section describes initial configuration of YFGW510 using the field wireless access point setup tool.

D3.1 Window Design

The main window of the field wireless access point setup tool consists of the following seven tabs.

Table D3-1 shows the summary of the setting functions of each tab.


Table D3-1

Tab Name	Functions
Backbone Interface	Setting of a device tag and password for YFGW410 connection
Maintenance	Display/Edit mode switching, restart and login password modification
WLAN C1	Setting of wireless LAN 1 (LED indication: C1)
WLAN C2	Setting of wireless LAN 2 (LED indication: C2)
WLAN Redundancy	Setting of wireless LAN redundant communication
Antenna	Maintenance use only. The tab cannot be opened.
Version Information	Viewing of the version information

D3.2 Display/Edit Mode Switching

The field wireless access point setup tool has two operation modes: Display, to view the setting information, and Edit, to configure YFGW510. The setup tool always starts up in Display mode. To allow for YFGW510 configuration, the mode needs to be switched to Edit.

To change modes, select the [Maintenance] tab as shown in Figure D3-1.

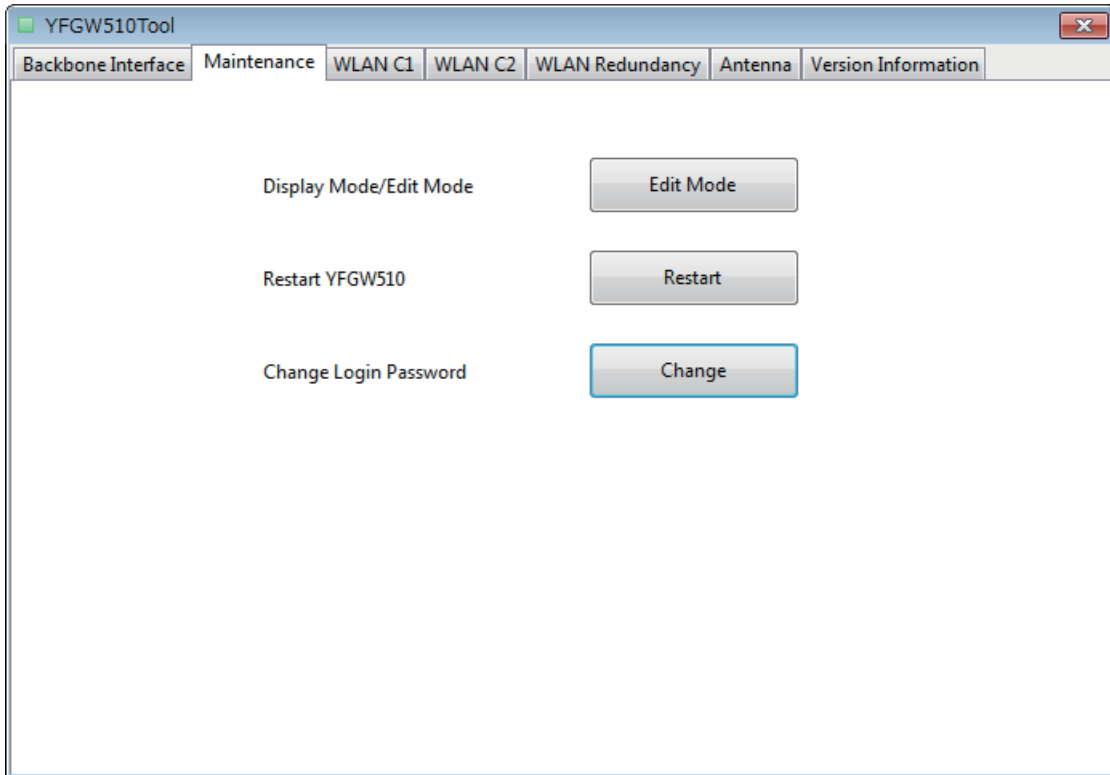


FD0301.ai

Figure D3-1 Maintenance tab

Click the button in the [Display Mode/Edit Mode] field to select the target mode.

If the button reads "Edit Mode", the setup mode is Display. Otherwise, the current mode is Edit.

Clicking the [Edit Mode] button displays a confirmation dialog box as shown in Figure D3-2.

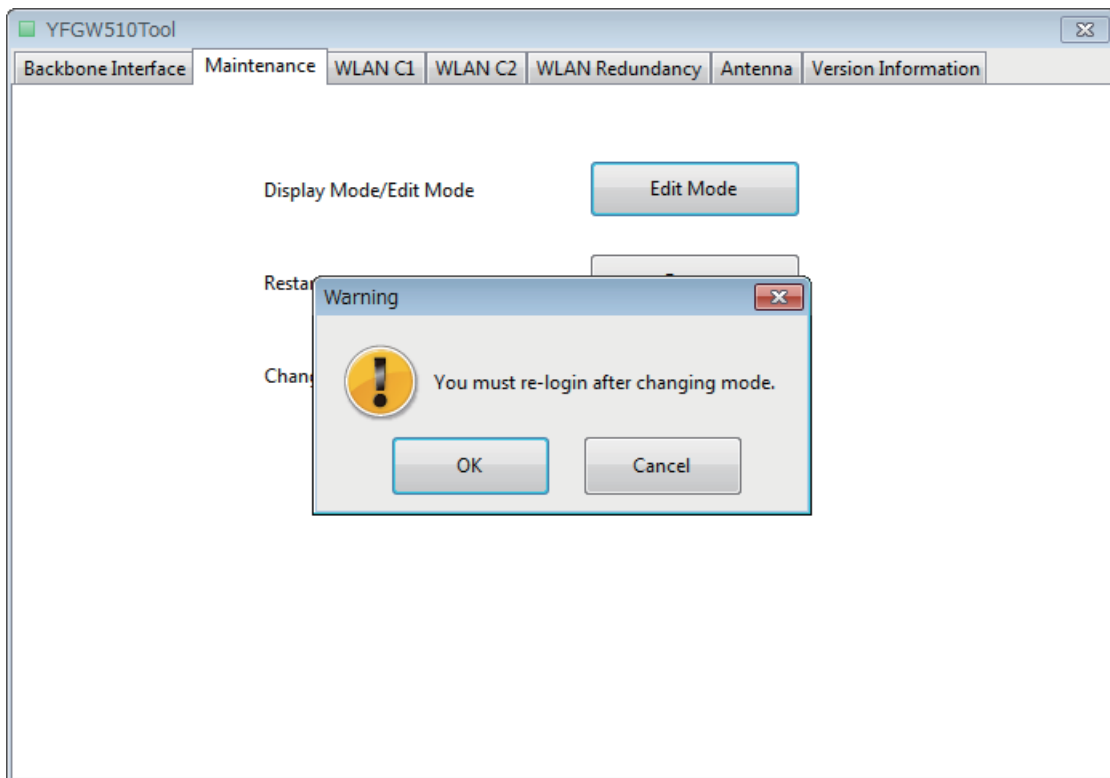

FD0302.ai

Figure D3-2 Setup mode change confirmation dialog box

Clicking the [OK] button navigates to the login window shown in Figure D2-3. Log in again and setup will start up in Edit mode.

Clicking the [Cancel] button terminates the mode switching.

Setup starts up in Display mode even if the mode was Edit at the last logoff; so, it is necessary to change modes every time the YFGW510 setting modification is required.

If configuration have been completed, restart the YFGW510 click the Restart button.

For other button functions, see D3.4 Maintenance.



IMPORTANT

Wait at least one minute after power-on, change to Edit mode YFGW510.

If you change to Edit mode at less than one minute may not start correctly.

In this case, restart the YFGW510.

D3.3 Backbone Interface

The [Backbone Interface] tab allows a change in settings for the YFGW510 connection to the field wireless backbone network. Figure D3-3 shows the [Backbone Interface] tab in Edit mode.

The screenshot shows a configuration window titled 'YFGW510Tool' with a tabbed interface. The 'Backbone Interface' tab is active. The settings are as follows:

- Device Tag: BBR001-123456789
- Use Factory Default Password:
- Password: (empty field)
- MAC Address (LAN): (empty field)
- MAC Address (WLAN1): (empty field)
- MAC Address (WLAN2): (empty field)
- MAC Address (ICL): 00-00-00-00-00-00

A 'Save' button is located at the bottom right of the window.

FD0303.ai

Figure D3-3 Backbone Interface tab

The following are items that need to be set in YFGW510.

Item	Descriptions	Initial Value
Device Tag	Enter the YFGW510 device tag.	Blank
Use Factory Default Password	Select whether to use the factory-set default password for the connection to YFGW410. If checked, the factory-set default password will be used.	Checked
Password	If the [Use Factory Default Password] checkbox is not selected (the default password is not used), enter any password.	Blank

● Device tag setting regulation

The device tag for the Field Wireless Access Point has the following restrictions. No string outside of these restrictions can be accepted.

- Up to sixteen characters
- Alphanumeric characters, hyphens and underscores only
- Single-byte, uppercase only

● **Password setting regulation**

The password for the connection to YFGW410 on the Field Wireless Access Point has the following restrictions. No string outside of these restrictions can be accepted.

- Up to sixteen characters
- From “A” to “F” and numeric characters only (case sensitive)


After entering all required items, click the [Save] button to store settings in YFGW510.

The following is information about YFGW510. No setting is required.

Items	Descriptions
MAC Address (LAN)	Wired LAN MAC address
MAC Address (WLAN1)	Wireless LAN 1 MAC address
MAC Address (WLAN2)	Wireless LAN 2 MAC address
MAC Address (ICL)	00-00-00-00-00-00 fixed

D3.4 Maintenance

Clicking the [Maintenance] tab displays the controls shown in Figure D3-4.

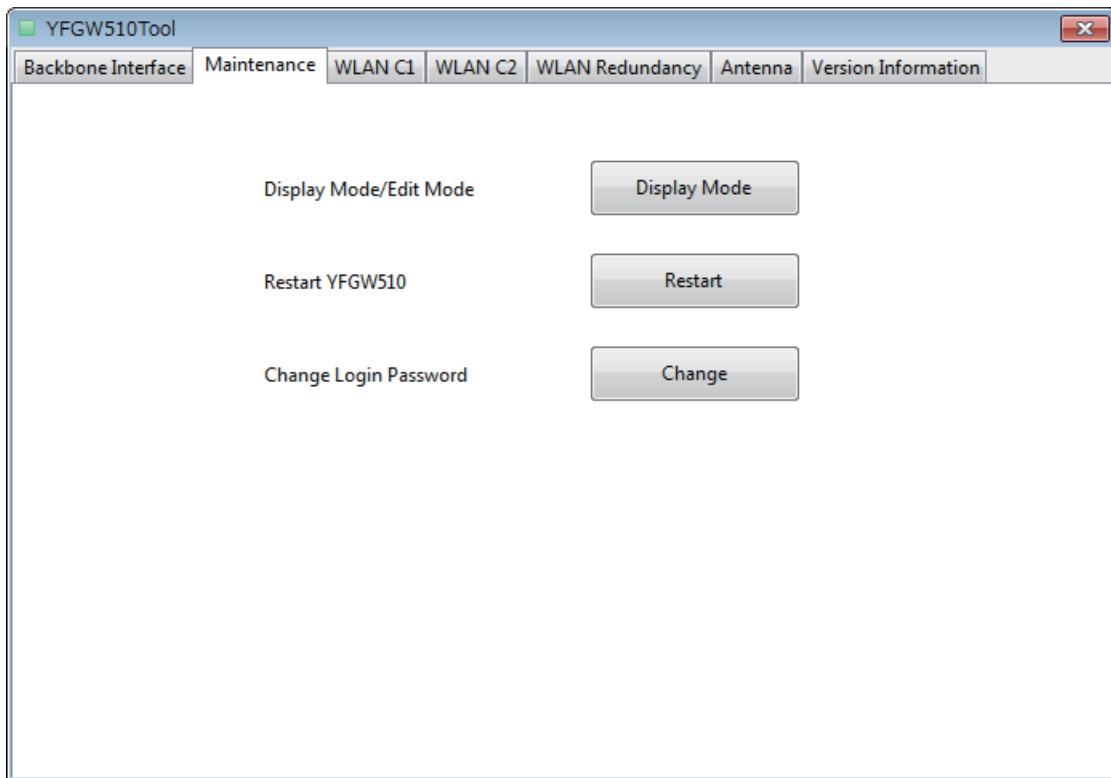


FD0304.ai

Figure D3-4

The following describes the functions of the buttons on this tab.

Button Name	Function
Display Mode/Edit Mode	Clicking the button switches Display/Edit mode for the setup tool. For details, see D3.2 Display/Edit Mode Switching.
Restart YFGW510	Clicking the button restarts YFGW510.
Change Login Password	This button allows the modification of the YFGW510 login password. Clicking the button displays the window shown in Figure D2-5. For details, see Field Wireless Access Point Setup Tool in D2.2.2.

Clicking the [Restart YFGW510] button displays a confirmation dialog box as shown in Figure D3-5.

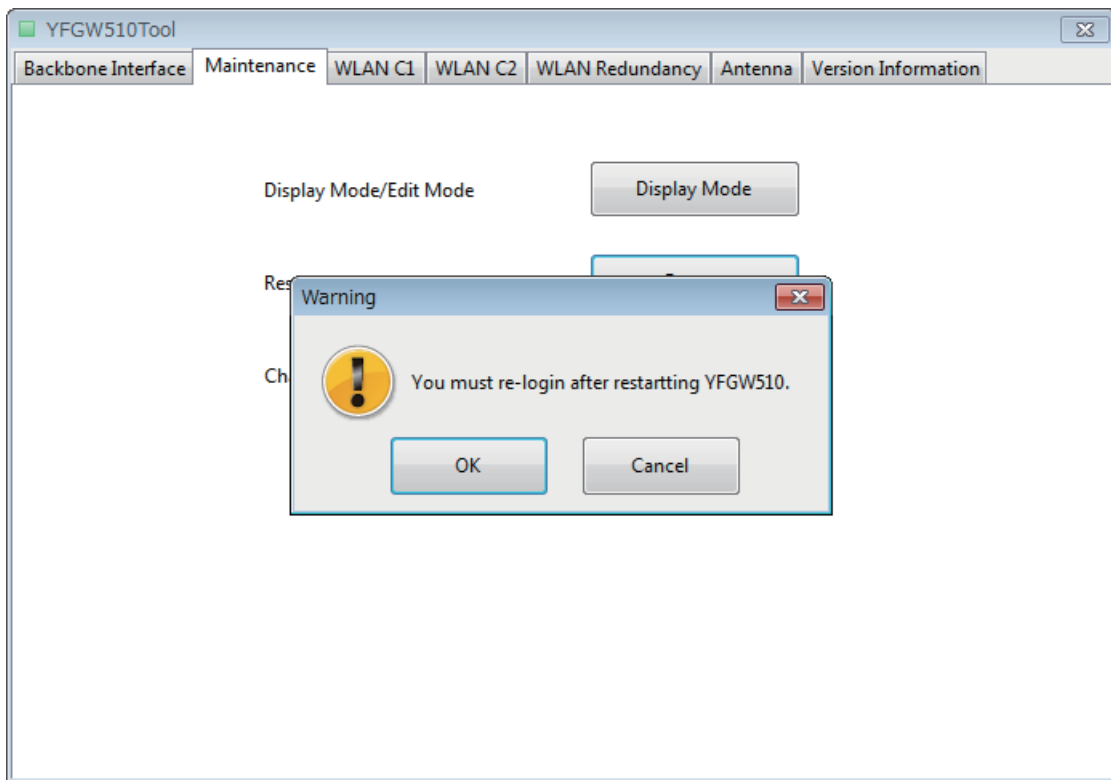

FD0305.ai


Figure D3-5 YFGW510 Restart confirmation dialog box

Clicking the [OK] button restarts YFGW510 and navigates to the login window shown in Figure D2-3.

Clicking the [Cancel] button terminates the process and closes the confirmation dialog box.

D3.5 Setting of Wireless LAN 1 (WLAN C1)

Clicking the [WLAN C1] tab displays the controls and information shown in Figure D3-6.

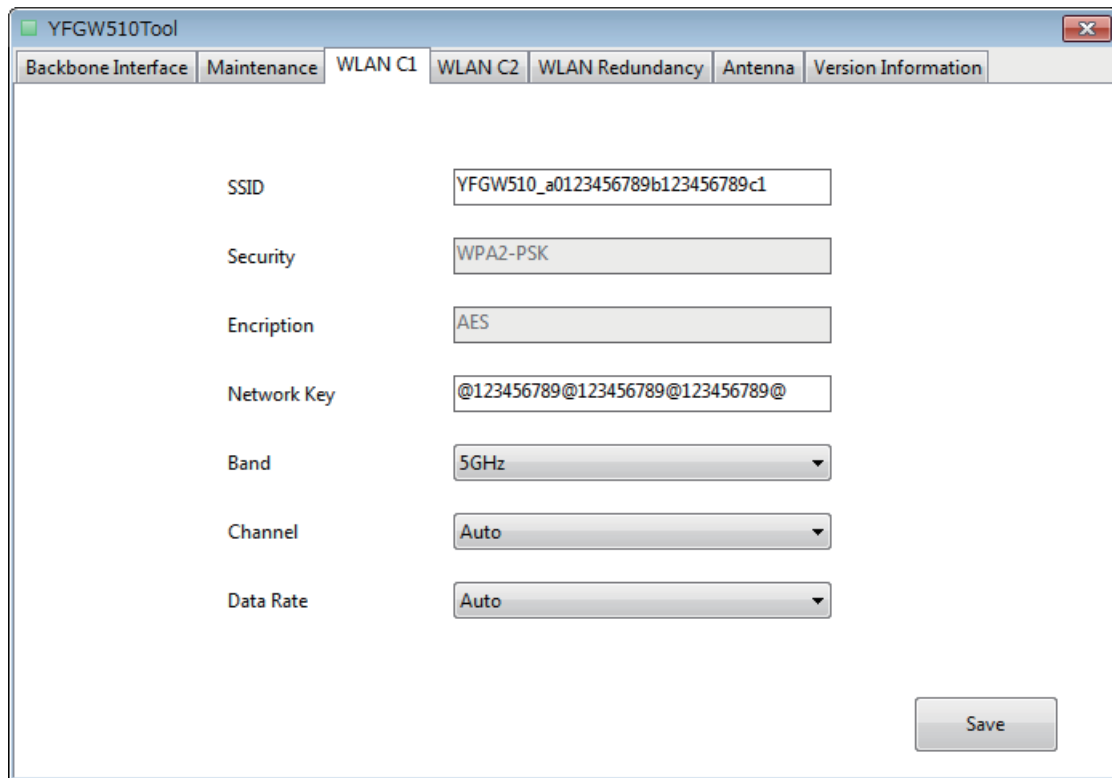

FD0306.ai

Figure D3-6 WLAN C1 tab

This tab allows the setting of wireless LAN 1.

The setting items are as follows.

Item	Descriptions	Initial Value
SSID	Wireless LAN identification code. Enter the same value as the SSID of wireless LAN access point being connected.	Blank
Security	Display-only, security method	WPA2-PSK
Encryption	Display-only, encryption method	AES
Network Key	Encryption key. Enter the same value as the encryption key of wireless LAN access point being connected.	Blank
Band	Wireless LAN frequency band. Select either 2.4 GHz or 5 GHz.	"2.4 GHz"
Channel	Wireless LAN channel. Select the channel to be used in wireless LAN. The selectable channels vary depending on the frequency band. For details, see Band and channel setting regulation.	"Auto"
Data Rate	Wireless LAN communication data rate. Select the data rate of wireless LAN. The selectable data rates vary depending on the frequency band. For details, see Data rate setting regulation.	"Auto"

● SSID setting

The SSID for the Field Wireless Access Point has the following restrictions:

- Up to 31 characters
- Single-byte, alphanumeric characters and other marks and signs (e.g., "!", "\$", "#")

● **Network key setting**

The network key to be set for the Field Wireless Access Point has the following restrictions:

- Up to 31 characters
- Single-byte alphanumeric characters and other marks and signs (e.g., “!”, “\$”, “#”)

● **Band and channel setting regulation**

The following table shows the selectable channels.

2.4GHz Band		5GHz Band			
Channel	Center Fre-Quency (GHz)	Channel	Center Fre-Quency (GHz)	Channel	Center Fre-Quency (GHz)
Auto	--	Auto	-	116	5,580
1	2,412	36(*1)	5,180(*1)	120(*2)	5,600(*2)
2	2,417	40(*1)	5,200(*1)	124(*2)	5,620(*2)
3	2,422	44(*1)	5,220(*1)	128(*2)	5,640(*2)
4	2,427	48(*1)	5,240(*1)	132	5,660
5	2,432			136	5,680
6	2,437	52	5,260	140	5,700
7	2,442	56	5,280		
8	2,447	60	5,300	149	5,745
9	2,452	64	5,320	153	6,765
10	2,457			157	5,7,85
11	2,462	100	5,500	161	5,805
12	2,467	104	5,520	165	5,825
13	2,472	108	5,540		
-	-	112	5,560		

*1: 5180-5240MHz band is restricted to indoor operations only.

*2: In Canada, these channels cannot be selected.

● **Data rate setting regulation**

The following table shows the selectable communication data rates..

Data Rate (Mbps)	Band	
	2.4GHz	5GHz
Auto	Y	Y
1	Y	N
2	Y	N
5.5	Y	N
11	Y	N
6	Y	Y
9	Y	Y
12	Y	Y
18	Y	Y
24	Y	Y
36	Y	Y
48	Y	Y
54	Y	Y

Note: “Y” means selectable, “N” means not selectable.

After entering all the required items, click the [Save] button to store settings in YFGW510.

In the 5GHz band, must keep the data rate of less than 12 Mbps.

D3.6 Setting of Wireless LAN 2 (WLAN C2)

Clicking the [WLAN C2] tab displays the controls and information shown in Figure D3-7.

Field	Value
SSID	YFGW510_b0123456789b123456789c1
Security	WPA2-PSK
Encryption	AES
Network Key	@123456789@123456789@123456789@
Band	5GHz
Channel	Auto
Data Rate	Auto


FD0307.ai

Figure D3-7 WLAN C2 tab

This tab allows the settings for wireless LAN 2. The procedure for setting items is the same as for the wireless LAN 1. For details, see D3.5 Setting of Wireless LAN 1 (WLAN C1).

D3.7 Setting of WLAN Redundancy

Clicking the [WLAN Redundancy] tab displays the controls shown in Figure D3-8.

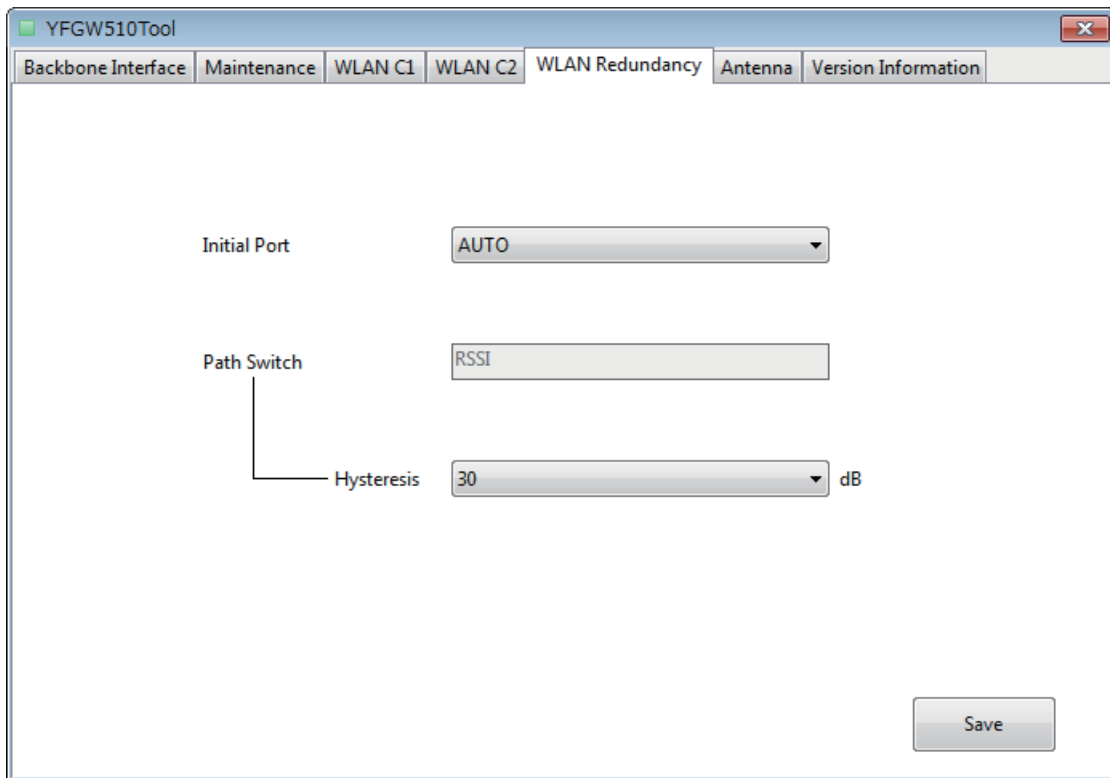

FD0308.ai

Figure D3-8 WLAN Redundancy tab

This tab allows the setting for wireless LAN redundancy.


The setting items are as follows.

Item	Descriptions	Initial Value
Initial Port	Select a wireless LAN port to be used at startup. If "AUTO" is set, a wireless LAN port with high RSSI is automatically selected.	"AUTO"
Path Switch	Select the communication path switching standard. YFGW510 supports RSSI.	"RSSI"
Hysteresis	If RSSI is selected for the communication path switching standard, specify the hysteresis width in dB.	30

After entering all the required items, click the [Save] button to store settings in YFGW510.

D3.8 Version Information

Clicking the [Version Information] tab displays the information shown in Figure D3-9.

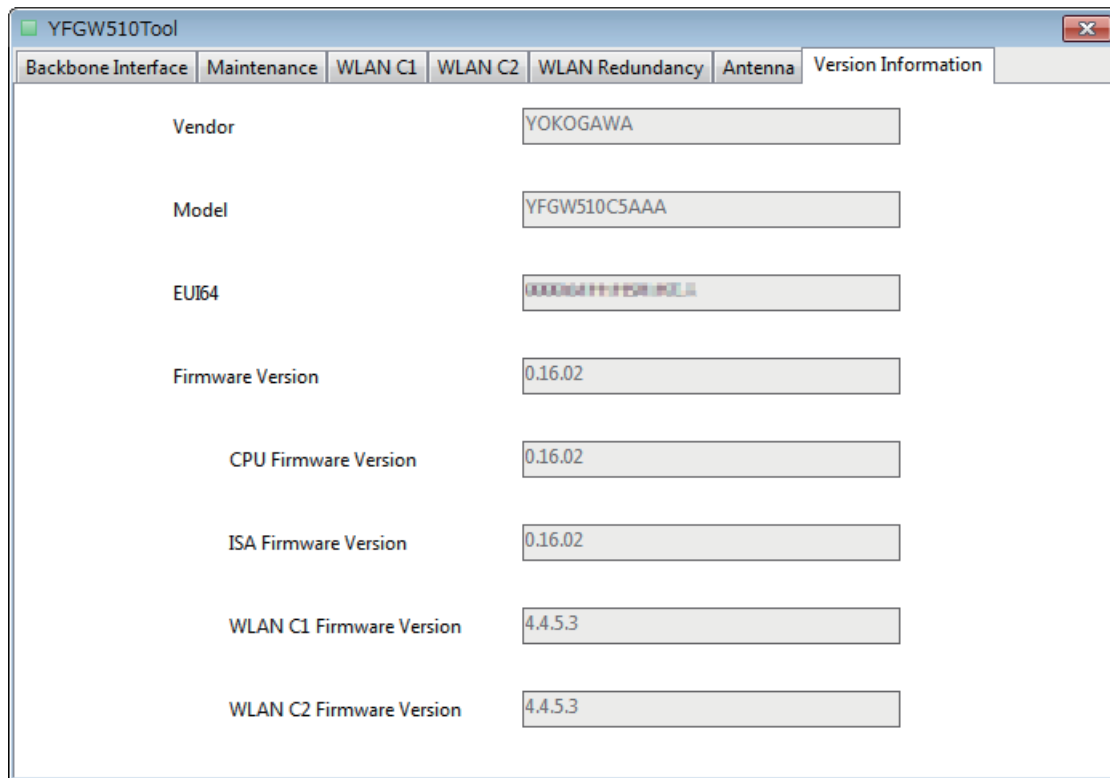

FD0309.ai

Figure D3-9 Version Information tab

This tab displays information about the YFGW510 Field Wireless Access Point, such as the vendor name, model name and firmware versions. The tab has no setting items.

The following table shows items that can be viewed on this tab.

Item	Descriptions
Vendor	Vendor name
Model	Model name followed by part of the specification code
EUI64	EUI64
Firmware Version	Firmware version of the entire YFGW510
CPU Firmware Version	Firmware version of the CPU
ISA Firmware Version	Firmware version of the field wireless communication chip
WLAN C1 Firmware Version	Firmware version of the communication chip for wireless LAN 1
WLAN C2 Firmware Version	Firmware version of the communication chip for wireless LAN 2

PART-E. OPERATION AND MAINTENANCE

For information about routine maintenance, or for YFGW510 additions or replacements, consult, in advance, the YFGW410 User's Manual (IM 01W02D01-01EN).

E1. Routine Maintenance

For problems during routine maintenance, check the host system monitoring YFG510, and the device information for the Field Wireless Management Console monitor provided with the YFGW410.

For details on the Field Wireless Management Console, maintenance procedures and error prevention, see the YFGW410 User's Manual (IM 01W02D01-01EN).

During maintenance of YFGW510, check the installation and operation statuses of the main body as component to the field wireless system hardware.

Confirm that the main body is correctly installed, free of dirt and that power and communication cables are securely connected. If the main body is dirty or dusty, wipe it out by using a soft cloth moistened with water or mild soap water.

E2. Additions and Replacements

For instructions on adding or replacing YFGW510, see the YFGW410 User's Manual (IM 01W02D01-01EN).

E3. Maintenance in Hazardous Areas

In maintenance, check for loose power supply wiring, ground wiring or network cable connection.

During maintenance and repair activities, if there is need to access the system in hazardous areas via an YFGW510 communication port, PCs and other devices used must comply with the explosion-proof requirements. For details, please contact Yokogawa Electric Corporation.

Explosion-proof instruments must retain their intended properties before and after maintenance. Otherwise, hazardous conditions can arise. Be sure to consult with Yokogawa Electric Corporation for any repair and alteration.

For other field wireless system hardware components, see respective user's manuals.

E4. Components Having Defined Life Spans

YFGW510 includes no components having defined life spans that need replacing.

For reference, the following are precautions for such components.



IMPORTANT

Precautions for components having defined life spans

- “Components having defined life spans” are those expected to wear out or break down within a 10-year period of use or in storage under normal conditions. Components designed for a life span of at least 10 years are excluded from the category.
 - The “recommended replacement cycle” is the interval between preventive maintenance for components having defined life spans. It does not guarantee breakdown-free operation during that period.
 - The recommended replacement cycle is a guideline. The actual replacement cycle may vary depending on the environmental conditions of use, such as ambient temperature.
 - The recommended replacement cycle is subject to change according to performance in the field.
-

PART-F. TROUBLESHOOTING

This section describes troubleshooting for YFGW510. If any abnormalities are identified in YFGW510 through investigation and in accordance with procedures described in the YFGW410 User's Manual (IM 01W02D01-01EN), check the following.

F1. Status Information

The YFGW510 operational status information is shown in the backbone router status (BBR_STATUS) in the Modbus register.

The status data structure and the contents are as follows.

Modbus Address	Name	Data Format	Contents
n	Data status	Unsigned 16	0x0080, fixed: normal
n + 1	Backbone router status	Unsigned 16	Backbone router status (0: connected/1: not connected)
n + 2 to n + 8		Unsigned 16	0, fixed (reserved bits)

Only the status having a Modbus address of (n + 1) is used. This indicates whether YFGW510 is connected to YFGW410 correctly.

F2. Status Indication and Responsive Measures

There are six status indicator LEDs installed on the front of YFGW510: [ACT], [LAN], [ISA100], [WLAN-C1], [WLAN-C2] and [WLAN-AP].

■ YFGW510 operational status indication

The following is the LED that indicates the YFGW510 operational status.

LED	Power off	Starting up	Connect- ing	Normal	Mainte- nance	Abnormal
ACT	OFF	Orange	Orange blink	Green	Red blink	Red

The LED blinks red when the device mode is changed to offline via the infrared adapter using the setup tool to configure YFGW510.

If the LED lights red, check the field wireless backbone network cable connection and communication devices such as the Layer 2 switch, etc., and fix any abnormalities. If there is no abnormality found in cable connection, check the backbone router status information described in F1. Status Information and the Field Wireless Management Console monitor device information. Any abnormality found may indicate the breakdown of YFGW510. For details of the YFGW510 device replacement method, see the YFGW410 User's Manual (IM 01W02D01-01EN).

■ Communication status indication

The following are the LEDs that indicate communication status.

LED	Power off	Starting up	Signal search	Link down	Link up	Commu- nicating	Mainte- nance	Abnor- mal
LAN	OFF	OFF	N/A	OFF	Green	Green blink	OFF	Red
ISA100	OFF	OFF	N/A	N/A	Green	Green blink	OFF	Red
WLAN-C1	OFF	OFF	Orange blink	OFF	Green blink	Green	OFF	Red
WLAN-C2	OFF	OFF	Orange blink	OFF	Green blink	Green	OFF	Red
WLAN-AP	—	—	—	—	—	—	—	—

■ [LAN] LED

If the LED turns off during operation, it may indicate that communication between YFGW510 and the YFGW410 field wireless backbone network has been terminated. Investigate the communication cable connection and the status of communication devices such as the Layer 2 switch, etc., and re-establish communication.

If the LED lights red, it may indicate the breakdown of the communication function of YFGW510. Replace the main body or consult with Yokogawa Electric Corporation.

■ [ISA100] LED

If the LED turns off during operation, it may indicate that communication between YFGW510 and all field wireless network devices has been terminated. Investigate the connection of the ISA100.11a antenna and the condition of the antenna extension cables, and re-establish communication. If no abnormality is found in the antenna, check the status of field wireless devices and any disturbances in wireless communication routes, and fix any problems to re-establish the communication.

If the LED lights red, it may indicate the breakdown of the communication function of YFGW510. Replace the main body or consult with Yokogawa Electric Corporation.

■ [WLAN-C1]/[WLAN-C2] LED

If the LED turns off during operation, it may indicate that communication between the field wireless backbone LAN and the wireless LAN access point has been terminated. Investigate the connection of the wireless LAN antenna and the condition of the antenna cables, and re-establish communication. If no abnormality is found in the antenna, check for any disturbances in wireless communication routes and fix any problems to re-establish communication.

If the LED lights red, it may indicate the breakdown of communication functions. Replace the communication devices or consult with Yokogawa Electric Corporation.

■ [WLAN-AP] LED

This LED is not used in YFGW510.

PART-G. SPECIFICATIONS

G1. Standard Specifications

G1.1 Communication Interface Specifications

Item		Field Network Specifications	Field Wireless Backbone Specifications ^{*1}		
Communication Interface	Standard	IEEE802.15.4	IEEE802.11a/b/g ^{*2}	100BASE-TX	100BASE-FX
	Frequency	2400~2483.5MHz	b/g: 2400-2483.5MHz a: 5150-5850MHz	-	
	Raw data rate	250kbps	1~54Mbps	100Mbps	100Mbps
	Radio Security	AES128bit	WPA2-PSK	-	
	RF Transmitter Power	Max 10dBm	Max 15dBm	-	
	Connector	N type	N type	RJ-45	SC connector [single pole × 2] ^{*3}
	Cable Type	coaxial	coaxial	Category 5	Multimode fiber (50/125μm or 62.5/125μm)
	Antenna	+2dBi	-	-	
	Remote Antenna	+2dBi, +6dBi, +9dBi	+2dBi, +6dBi, +9dBi	-	
	Maximum length	500m ^{*4}	b/g: 500m ^{*4} a: 200m ^{*4}	100m	2000m
	Port	1 port	Max 2 port	1 port	1 port
	Protection	-	-	Surge	-
Communication Protocol	Field Wireless	ISA100.11a	-		
	Management, configuration, etc.	-	IEEE1588PTP v2 ^{*5} , Proprietary ^{*6}		

- *1: In outdoor wiring to Field Network or 100BASE-FX of Field Wireless Backbone, use optical fiber cables with a nonmetallic tension member, combining with YFGW610
- *2: This product requires a wireless LAN access point for connection with YFGW410 in the wireless LAN in field wireless backbone.
- *3: 2-pole SC connector cannot be used due to the conduit hole size limitation. SC connector should use Short Boot type.
- *4: The maximum length needs perfect conditions without an obstruction for radio wave transmission, using a standard antenna (2dBi). The maximum length changes with the environmental conditions and installation situations of a site.
- *5: Installation of these multiple product and YFGW410 in one field wireless subnet requires direct connection or the connection via IEEE1588PTP basis products.
- *6: TCP based custom protocol used for communication between this product and YFGW410.

■ Communication interface specifications for YFGW510 configuration

Interface	Item	External Specifications	Remarks
Infrared communication	Communication protocol	IrDA-SIR Ver. 1.2	
	Wavelength	870 nm	
	Maximum transmission speed	9600 bps	
	Maximum transmission distance	30 cm	
	Number of ports	1	
	Purpose	Initial configuration of YFGW510	

G1.2 General Specifications

■ Performance

Network Size:

Max 100 field wireless devices are connectable

Display:

2-color luminescence LED displays the operating state of this product, and the operating state of wireless communications and cable communications.

Diagnosis Function:

CPU failures, communication interface malfunctions, outside the range, abnormal settings.

Software Download Functions:

The software inside this product and the software (communication firmware, sensor firmware) inside wireless field device can update via YFGW410.

■ Installation Environment

Temperature Range:

Operating: -40 to +65°C (altitude: up to 3000m)
Storage: -40 to +85°C

Humidity Range:

Operating: 5 to 95 %RH (non-condensation)
Storage: 5 to 95 %RH (non-condensation)

Temperature gradient

Operating: ±10°C/h or less
Storage: ±20°C/h or less

Power Supply:

Voltage Range: 10.0~26.4 V DC
Rated Voltage: 24 V DC
Momentary Power Failure: Instant Disconnection
DC Power Supply Ripple Ratio: 1%p-p or less

Power Consumption:

Max. 3.5 W

Degrees of Protection:

IP66, NEMA4X

Vibration resistance:

0.21 mm P-P (10~60 Hz), 3G (60~2k Hz)

Shock resistance:

50G 11 ms

Noise resistance:

Electric field : 3 V/m or less (80MHz~1GHz)
Electrostatic discharges: 4 kV or less (contact discharge), 8 kV or less (aerial discharge)

Grounding:

Class-D grounding (no sharing ground with others)

Cooling:

Natural Air Cooling

■ Physical Specifications

Connections:

Refer to "MODEL AND SUFFIX CODES."

Housing Material:

Low copper cast aluminum alloy with Polyurethane, mint-green paint (Munsell 5.6BG 3.3/2.9 or its equivalent)

Name plate and tag:

SUS304 tag plate

Weight:

3.0 kg (without mounting bracket, and process connector.)

■ Software Specifications

● Field Wireless Access Point Setting Tool

This software is used for a setup and maintenance of this product. PC on which this software program installed is connected with this product via infrared communication.

● Specifications and System Requirements

Software license:

1 license

Language:

Software (GUI): English
Manual: Japanese or English

Hardware Operating Environment:

Item	Recommended System Requirement
Processor	Intel Core 2 Duo 2.66GHz or more
Memory	2GB or more
Hard Disk	40GB or more (Minimum free space 15GB or more)
Display	1280 x 800 High color, 32-bit
Communication Device	Ethernet Network Card

Software Operating Environment *1,*2,*3:

OS	Kind
Windows7 Professional Service Pack 1	32/64bit
Windows Vista Business Edition Service Pack 2	32bit
Windows Server 2008 Enterprise Service Pack 2	32bit
Windows Server 2008 R2 Enterprise	32/64bit

*1: Japanese version or English version are supported.

*2: Microsoft .NET Framework 3.5 Service Pack 1 is required.

*3: For 64bit OS, WOW64 (Windows 32-bit On Windows 64-bit) can be performed.

G1.3 Regulatory Compliance Statements

■ Regulatory Compliance Statements

This device contains the wireless module.
The wireless module satisfies the following standards.

- * The specific radio equipment (Approval Number: ISA100.11a: 007-AA00110, Wireless LAN: 007-AA0065/66) which received the technical standard satisfied certification based on the Radio Law is used for this product.
- * Please confirm that a installation region fulfills a standards, require additional regulatory information and approvals, contact to Yokogawa Electric Corporation.

R&TTE Conformity Standards: CE

EN 300 328, EN 301 893, EN60950-1, EN 301 489-1, EN 301 489-17

Regulation Conformity of the Wireless Module

- FCC Approval (Part 15C, Part 15E)
- IC Approval (RSS-210)

EMC Conformity Standards

EN61326-1 Class A, Table 2 (For use in industrial locations), EN55011 Class A, group 1, EN61000-6-2

Safety Requirements:

EN61010-1, CSA C22.2 No. 61010-1

Explosion-Proof Types:

FM, ATEX, CSA, IECEx (approvals under pending)

G2. Model, Suffix Codes and Option Codes

Model	Suffix Codes	Description
YFGW510		Field Wireless Access Point
Output signal	-A	ISA100.11a
	-C	ISA100.11a, IEEE802.11a/b/g *1
Communication interface	1	100 BASE-TX
	2	100 BASE-FX
	5	Wireless LAN
Housing	1	Low copper cast aluminum alloy
Electrical Connection	0	G1/2 female, two electrical connections, without blind plugs
	2	1/2NPT female, two electrical connections, without blind plugs
	4	M20 female, two electrical connections, without blind plugs
	5	G1/2 female, two electrical connections, one blind plug *1
	7	1/2 NPT female, two electrical connections, one blind plug *1
	9	M20 female, two electrical connections, one blind plug *1
	A	G1/2 female, two electrical connections, one SUS316 blind plug *1
	C	1/2 NPT female, two electrical connections, one SUS316 blind plug *1
	D	M20 female, two electrical connections, one SUS316 blind plug *1
---	A	Always A
License	-S	Software license
Manual language	0	Japanese
	1	English
Software media	0	Provided with DVD-ROM
	1	None
Mounting bracket	B	SUS304 2-inch pipe mounting (for horizontal piping) *2
	D	SUS304 2-inch pipe mounting (for vertical piping) *2
	J	SUS316 2-inch pipe mounting (for horizontal piping) *2
	K	SUS316 2-inch pipe mounting (for vertical piping) *2
	N	None
ISA100.11a antenna	1	Integral antenna +2dBi (2.4GHz)
	A	Antenna adaptor: N-type connector *3*4
Wireless LAN antenna (1) *5	N	None
	3	Integral antenna +2dBi (2.4GHz), antenna cable 3m
	4	Integral antenna +2dBi (2.4GHz, 5GHz), antenna cable 3m
	A	Antenna adaptor: N-type connector *3*4
Wireless LAN antenna (2) *5	N	None
	3	Integral antenna +2dBi (2.4GHz) , antenna cable 3m *6
	4	Integral antenna +2dBi (2.4GHz, 5GHz), antenna cable 3m *6
	A	Antenna adaptor: N-type connector *3*4*6
---	A	Always A
---	A ..	Always A
Option codes		/□Optional specifications

- *1: Select in a wireless LAN client (communication interface code 5).
- *2: A bolt is required for wall attachment.
- *3: Select an antenna and an antenna cable. For details, refer to the accessory.
- *4: In order for the wireless output of an antenna to get the maximum which the area permits, adjustment by service of Yokogawa Electric Corporation is required.
- *5: Wireless LAN antenna cannot perform direct connection to this product.
- *6: Select only by 3, 4, and A of wireless LAN antenna (1).

■ OPTIONAL SPECIFICATION (For Explosion Protected type)

Item	Description	Code
TIIS Certification	Flameproof Approval	-
Factory Mutual (FM)	Nonincendive, Explosionproof Approval	-
ATEX	Type n Declaration, Flameproof Approval	-
Canadian Standards Association (CSA)	Nonincendive, Flameproof Approval	-
IECEX	Type n, Flameproof Approval	-

■ OPTIONAL SPECIFICATIONS

Item	Description		
Coating	Coating change	High anti-corrosion coating	X2

■ ACCESSORY

Item	Parts Number	Description
External antenna cable	F9915KU	3m with mounting bracket
	F9915KV	13m (3m+10m) with arrestor and mounting bracket
Antenna	F9915KW	2dBi Standard Antenna (2.4GHz)
	F9915KY	6dBi High gain antenna (2.4GHz)
	F9195VG	9dBi High gain antenna (2.4GHz)
	F9195VA	2dBi Standard Antenna (2.4GHz,5GHz)

*1: Standard antenna cannot perform direct connection to this product at wireless LAN.


*2: High gain antenna cannot perform direct connection to this product.

G3. External Dimensions

G3.1 100BASE-TX/100BASE-FX Specifications

■ Vertical pipe mounting


Unit:mm

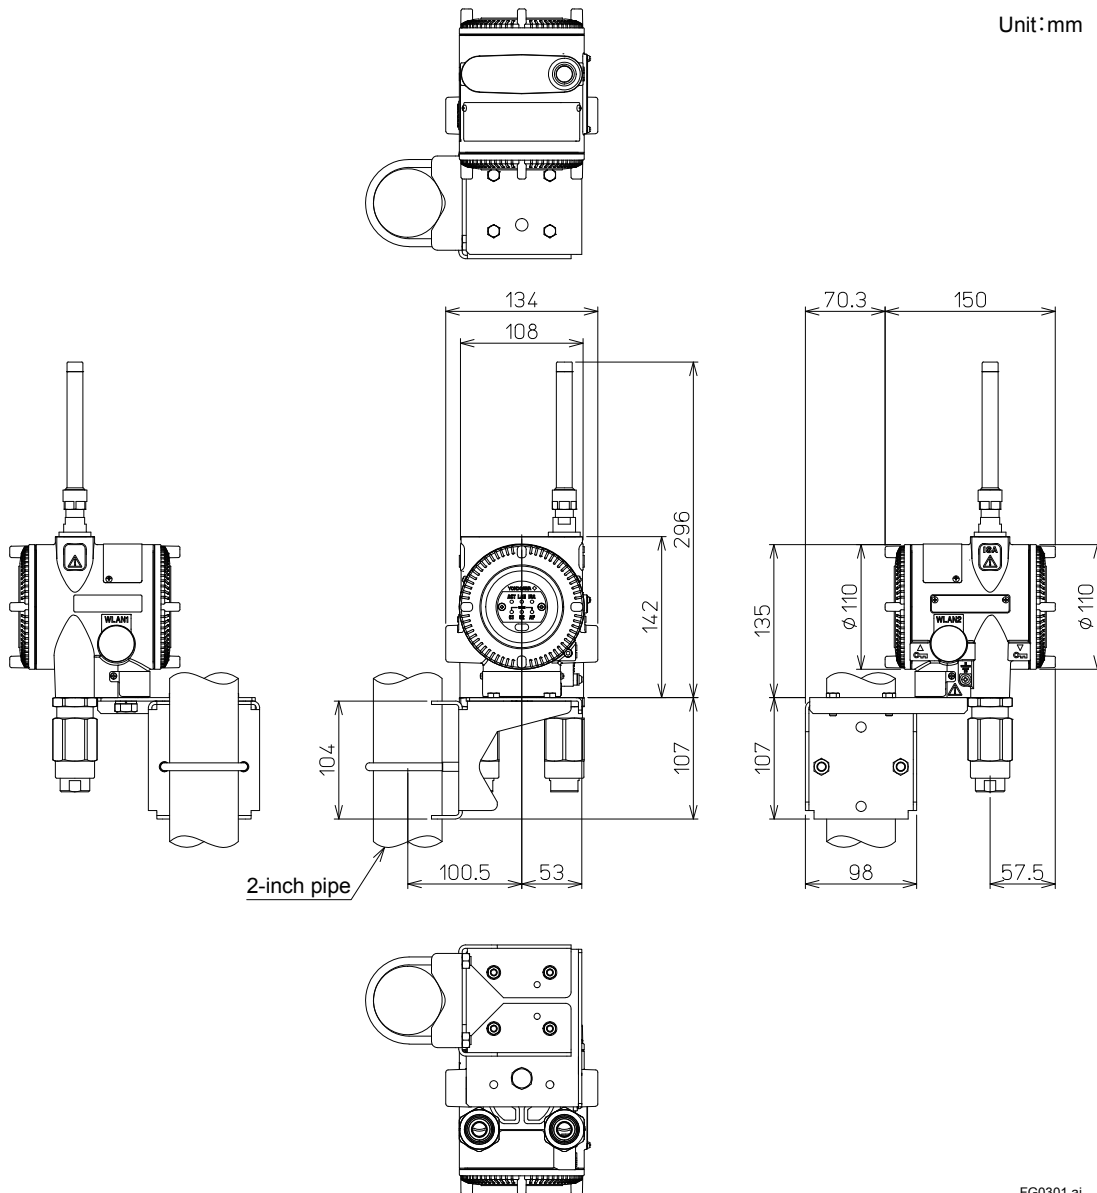

FG0301.ai

■ Horizontal pipe mounting

Unit: mm

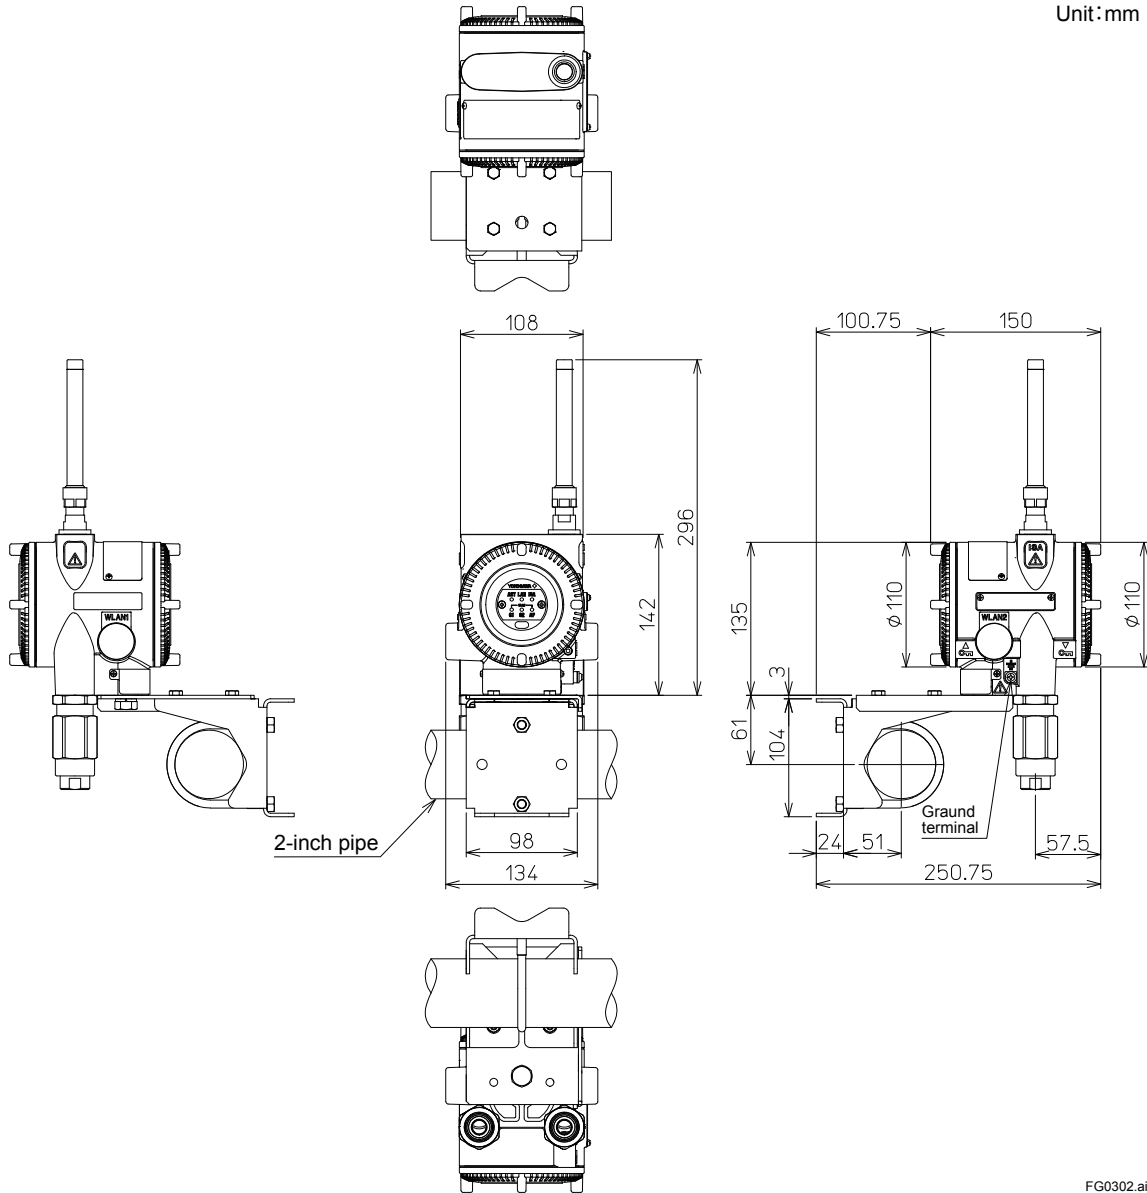


FG0302.ai

G3.2 Single Communication Wireless LAN Client Specifications

■ Vertical pipe mounting


Unit:mm

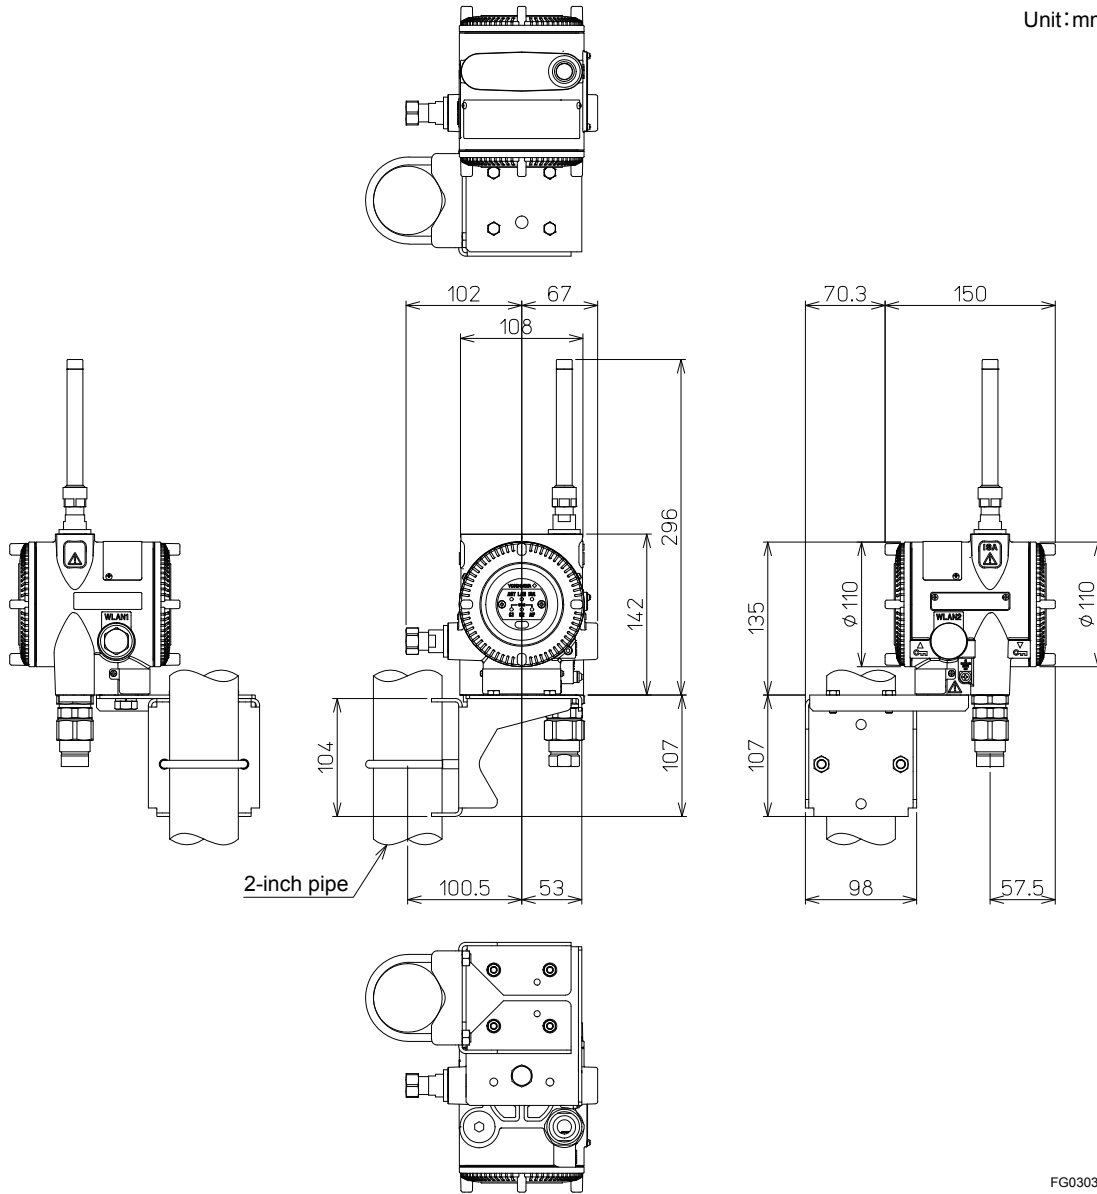

FG0303.ai

■ Horizontal pipe mounting


Unit:mm

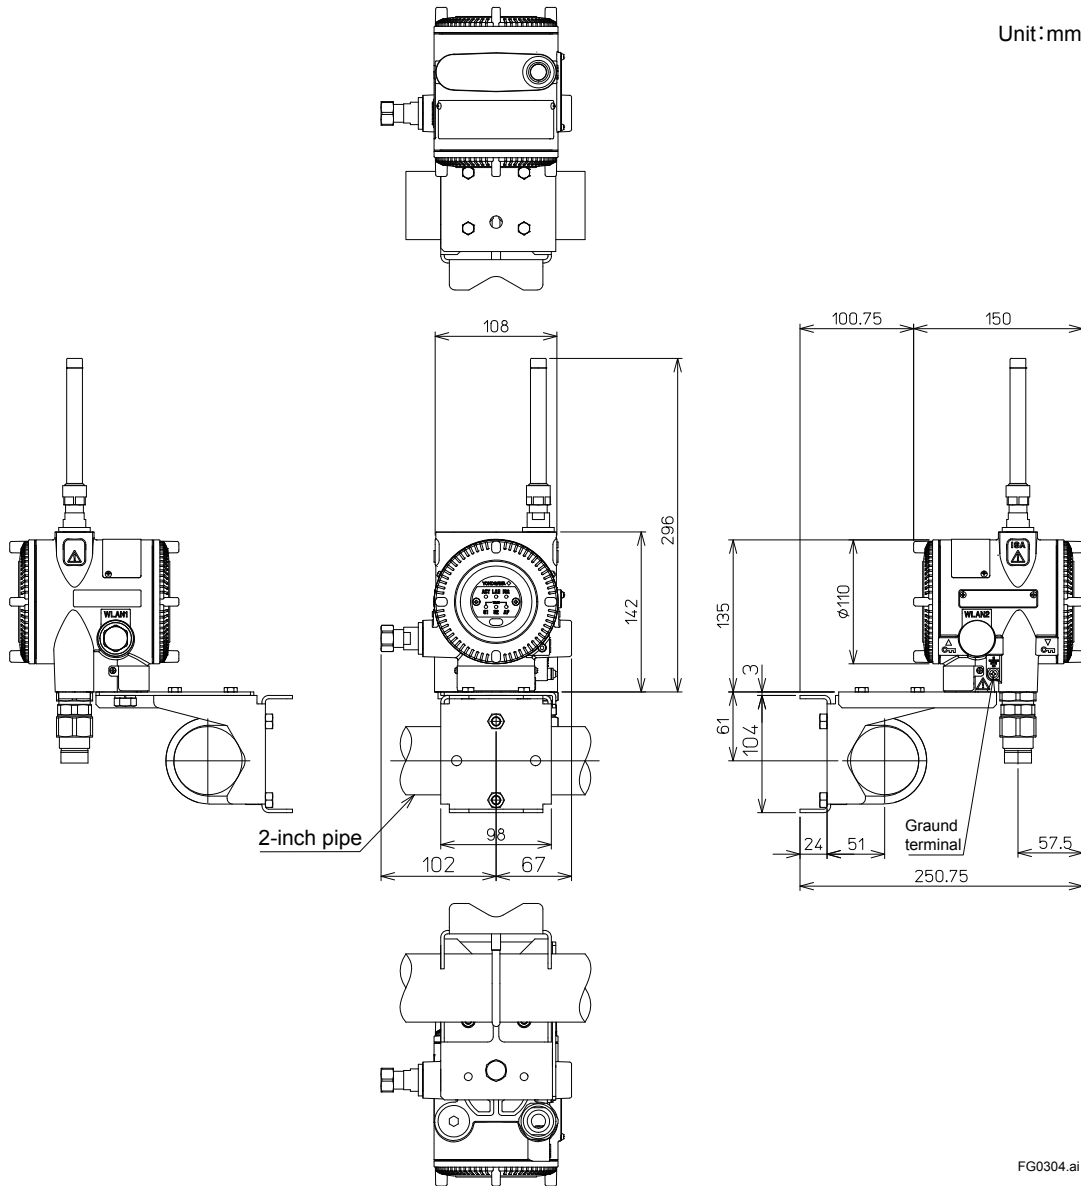

FG0304.ai

G3.3 Redundant Communication Wireless LAN Client Specifications


■ Vertical pipe mounting

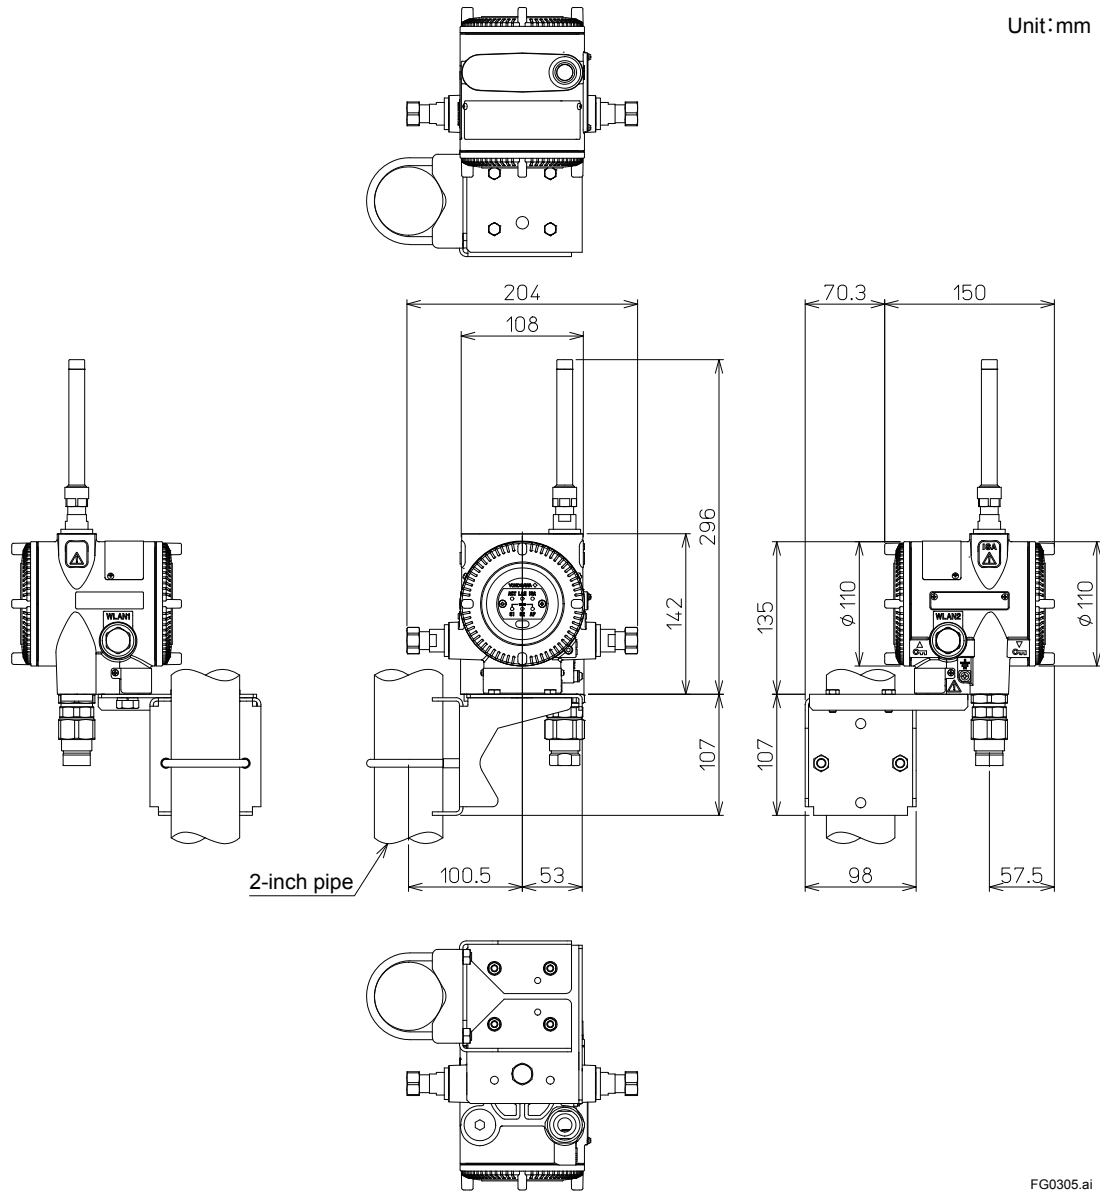

FG0305.ai

■ Horizontal pipe mounting

Unit:mm

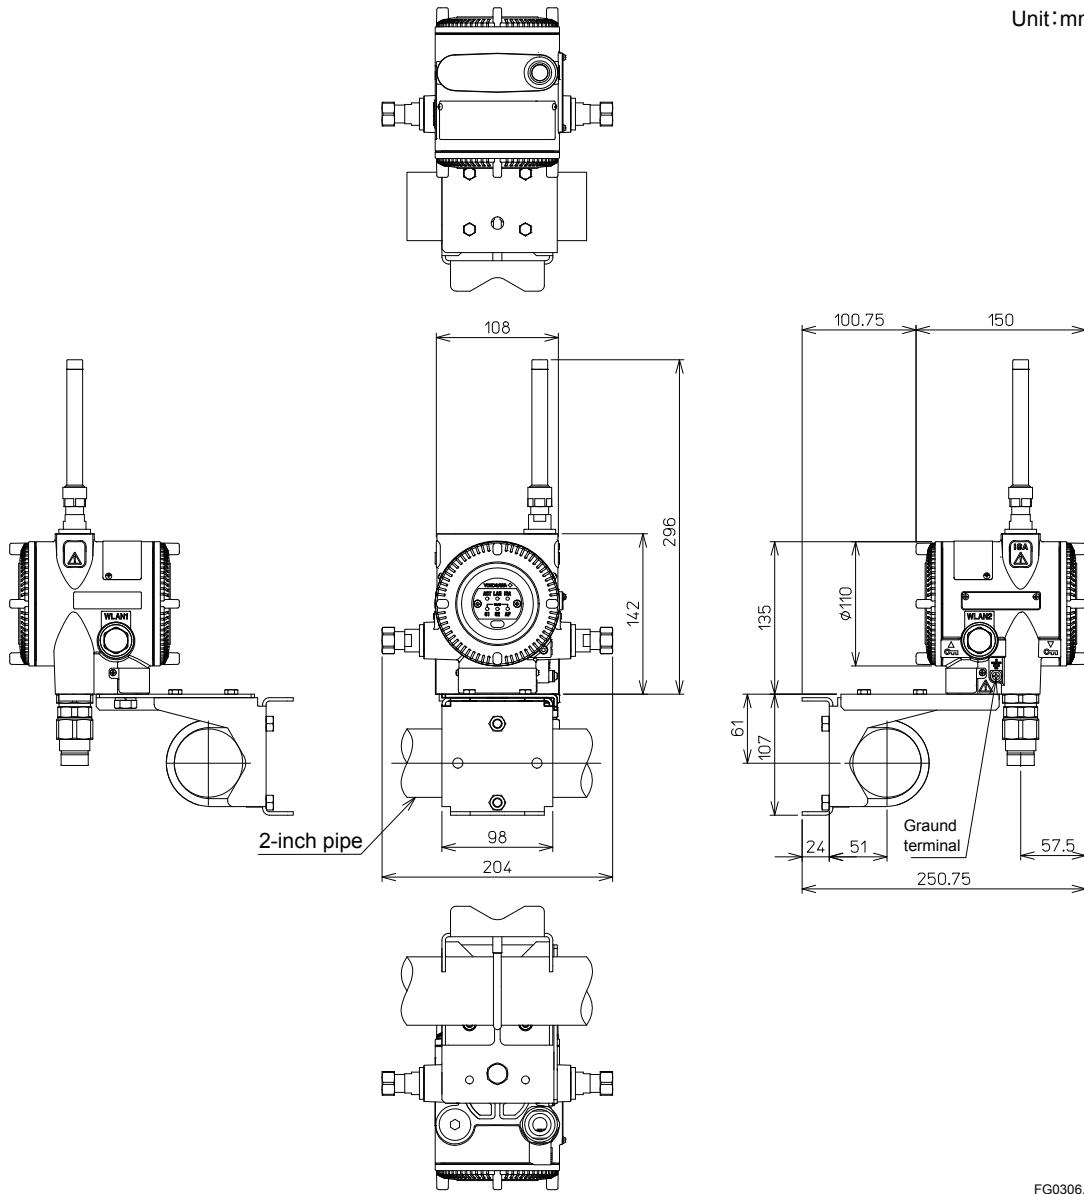

FG0306.ai