
## 1 Phone Overview

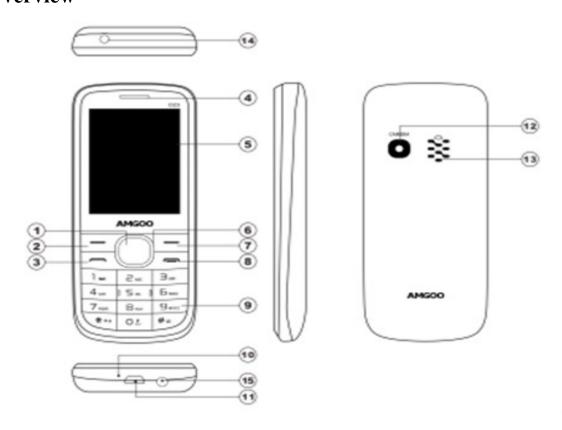

1	Center key	9	Keypad
2	Left soft key	10	Microphone
3	Dial/Answer key	11	Charge port
4	Earpiece	12	Camera
5	Display	13	Speaker
6	Navigation key	14	Torch
7	Right soft key	15	Headset port
8	On/Off key		

## 2 Getting started

## 2.1 Installing the SIM Cards, SD card and battery.

1) Remove the back cover and lift the battery away.



2) Insert the SIM card into the SIM card slot lightly with the corner cutting of the card aligning to the notch of the slot and the gold plate of the card facing downward, till it cannot be pushed further in.



3) To install the SD card, open its latch, place its indented side downward, insert the card into the card slot, and then close the latch.



4) With the metallic contacts of the battery facing the metallic contacts in the battery slot, press the battery down until it locks into place, then fix its back cover.





## 2.2 Linking to the Network

After the SIM card and the mobile phone are successfully unlocked, the mobile phone automatically searches for an available network.

## 3 Input methods

This mobile phone provides multiple input methods.

- 1) Press # key to switch between input methods.
- 2) Press the \* key to enter the Select symbol interface and select a symbol you want.

## 4 Using the Menus

## 4.1 Message

Through this function, you can write message, view inbox outbox etc, If the short message memory is full, a blinking message icon appears on the top of the screen.

## 4.2 Call logs

Through this function, you can view a list of missed calls, dialed calls and received calls etc.

## 4.3Phonebook

The mobile phone can store 300 phone numbers.

## 4.4 Camera

Use this function to take picture.

### 4.5 Multimedia

#### Video Record

Use this function to record video files.

## **Image**

Use this function to preview photos.

#### Video

Use this function to play video files.

#### FM radio

You can use the application as a traditional FM radio with automatic tuning and

saved channels.

#### Recorder

Use this function to record audio files.

## 4.6 Audio player

Use this function to play audio files.

#### 4.7 Profiles

The mobile phone has multiple user profiles to suit user's requirements.

#### 4.8Tools

#### **Torch**

Select on or off as per your requirement. Long press 0 key to switch on or off in the standby interface.

#### Alarm

Three alarm clocks are set but deactivated by default. For each alarm clock, the ringing date and the ringing time can be set

#### Calendar

Once you enter this menu, there is a monthly-view calendar for you to view the date; you can go to any day you want.

#### **Calculator**

The calculator can add, subtract, multiply and divide.

#### World clock

This function allows you to check the standard time in different areas of the world.

#### **Backup**

You can backup or restore Call logs, Contacts, SMS, Calender. through this function.

#### Games

The Mobile phone has one game for the user to play, name Sokoban.

## 4.9 File Manager

The phone supports the SD card. You can use the file manager to conveniently manage various directories and files on the SD card.

## 4.10 Settings

## **Phone Settings**

- 1) **Date &time**: set the date format, time format, and detail time of the location.
- 2) Language settings: Select the display language for the mobile phone.
- 3) **Shortcut settings:** Customize the shortcut functions of the Up, Down key.
- 4) **Auto power on/off**: Set the time when the mobile phone will be automatically powered on and off.
- 5) **Power management:** Use this function to view Battery left lightmod.
- 6) **Restore Factory Settings:** Use this function to restore factory settings. The preset password is 1234.

## **Display**

You can set wallpaper, Idle display, Backlight etc.through this function.

## **Security**

1)**PIN:** PIN code is the personal identification number for SIM card. Default

password set by network operator should be 1234. If activated the power-on PIN code, then you have to input the PIN password each time you switch on the phone.

- 2)**Phone locked:** Secured by phone password, the phone will be protected from other unauthorized users. After activated this function, you should input password each time you switch on the phone. The defaulted password is 1234.
- 3)**Privacy**: In this menu, you can set password-protected on the need of menu, For the menu open the private protection, need to input a phone password when you entered.
- 4) **Auto keypad lock:** After activating this function, the phone will be locked automatically after a particular time, so as to avoid error operations
- 5)**Guardlock**: You can activate or deactivate the guardlock function, When the guardlock is activate, once your SIM card is replaced, the phone will automatically send stolen information to the prior SIM card.

## **Call settings**

Through this function, you can set call divert, call waiting, call barring etc.

#### **Connections**

You can set Network account, Data connection, Network selection mode etc.

#### 4.11 Service

#### **Internet**

This function enables you to view the internet.

#### **SIM Tool Kit**

STK service is the tool kit of SIM card. This phone supports the service function .The specific items are depended on SIM card and network. Service menu will be auto added to the phone menu when supported by network and SIM card.

#### 4.12 BT

With BT, you can make a wireless connection to other compatible devices, such as mobile phones, computers, headsets and car kits. You can use the BT to send images, video clips, music, sound clips, and transfer files from your compatible pc.

#### 5. Addendum

#### **Common fault diagnosis**

Fault phenomenon	possible reasons
Cannot turn on	The battery is discharged. Charge it with electricity
Wrong SIM Card	SIM card smudgy, clean the SIM card. Re install the SIM card. SIM card has been damaged, replace the SIM card.
Reception bad	Check on the screen of the signal strength indicator, and this is the number of symbols in this for 5 case said the strong signal, 2 case said the weak signal

Phone cannot dial	May have a strong interference environment around signal; You may have activated the call barring function; You may have activated the line 2, but your network operator does not provide this service
Battery cannot charge	The battery charge is very low and a longer period of charging time is needed.
Unable to connect to the network	Signal is too weak, there is radio interference around the signal, SIM card has been installed incorrectly. If the SIM Card has been damaged or it is unable to connect, please contact your service provider.
Photography too dark	Display brightness is set low; environment light around a dark.
Photographs too blurry	Shooting in a state of motion object; at the moment of pressing the shutter the phone has a slight shaking.
Cannot enter service menu	May be the SIM card does not support this service

## **Safety precautions:**

- Use a wireless hands-free system (Headphone, headset) with a low power BT emitter
- Make sure the cell phone has a low SAR
- Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women
- Use cell phone when the signal quality is good

People having active medical implants should preferably keep the cell phone at least 15cm away from the implant

# Do's and Don'ts for disposal e-waste

- Do's:
- Ensure that an Authorized Person repairs your product
- Always drop your used electronic products, batteries or any accessories after the end of their life at nearest Authorized Collection Point or Collection Center.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always remove the battery from the product, when you do not intend to use the product anymore it in future.

## Don'ts:

- Do not Dismantle your Product on your own
- Do not give your e-waste to Authorized Person

- Do not dispose-off the e-waste in landfills
- Never dump E-waste in garbage bins.
- Do not dispose of your product at municipal waste bins.
- Do not throw used batteries into household waste.

## Consequences of improper handling and disposal of E-Waste

- Improper disposal of waste prevents natural resources from being re-used.
- Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
- If e-waste is not properly disposed of, it can threat to the health and well-being of humans and animals and it also has adverse effect on the environment.
- Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- If the battery terminals are in contact with metal objects, it may cause a fire.
- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Specific Absorption Rate (SAR) information
- SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.
- Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.
- For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.
- Non-compliance with the above restrictions may result in violation of RF exposure guidelines.