


- Input voltage: 3V/CR2430 (DC90 )
- Input voltage: 3V/CR2430
- Work temperature:-10°C -50°C ■ Emission distance: open 200m, two walls 30m

Press the receiver

programming key

#### DC90

- Transmitter: You can choose single channel (DC90), Each indicator li ht means one controlg channel. Press 'channel choose' button Pr- (Indicator move left side) or Pl+ (Indicator move right side) to change the channel. On the analogy of this, loose finger when the indicator light move to suitable channel that you select effective channel. All indicator lights flash that means all channels is effective (group control state).
- Notice: transmitter Do not exposed to moisture and strike, so as not to affect life. When you use transmitter, if found emission distance obviously short or less sensitive, please change another same new battery. Please have batteries for recycling.

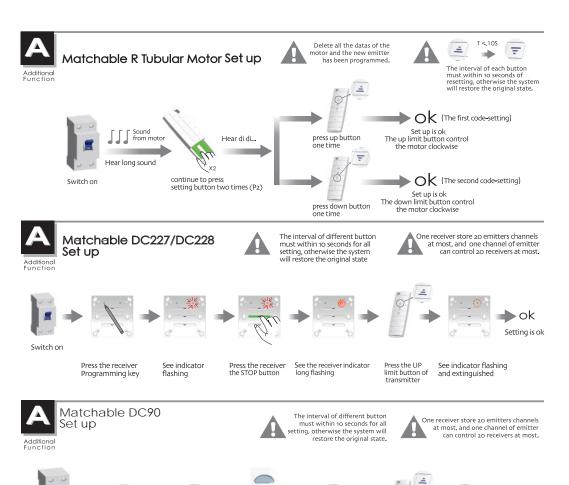

Press the STOP

button of receiver

indicator flashing



### Control System


## **DC90 Series Control System**

# **Specification**

Version No: A/o4



#### Type Specification

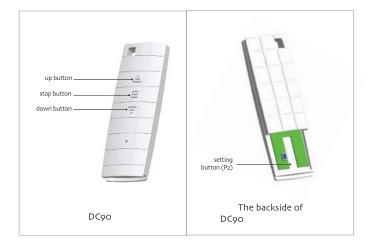

### FCC Statement:

Setting is OK

See green indicator flashing

and extinguished

Press the UP

transmitter

limit button of

green indicator

long flashing

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.