Instructions

Camtalk Front Side

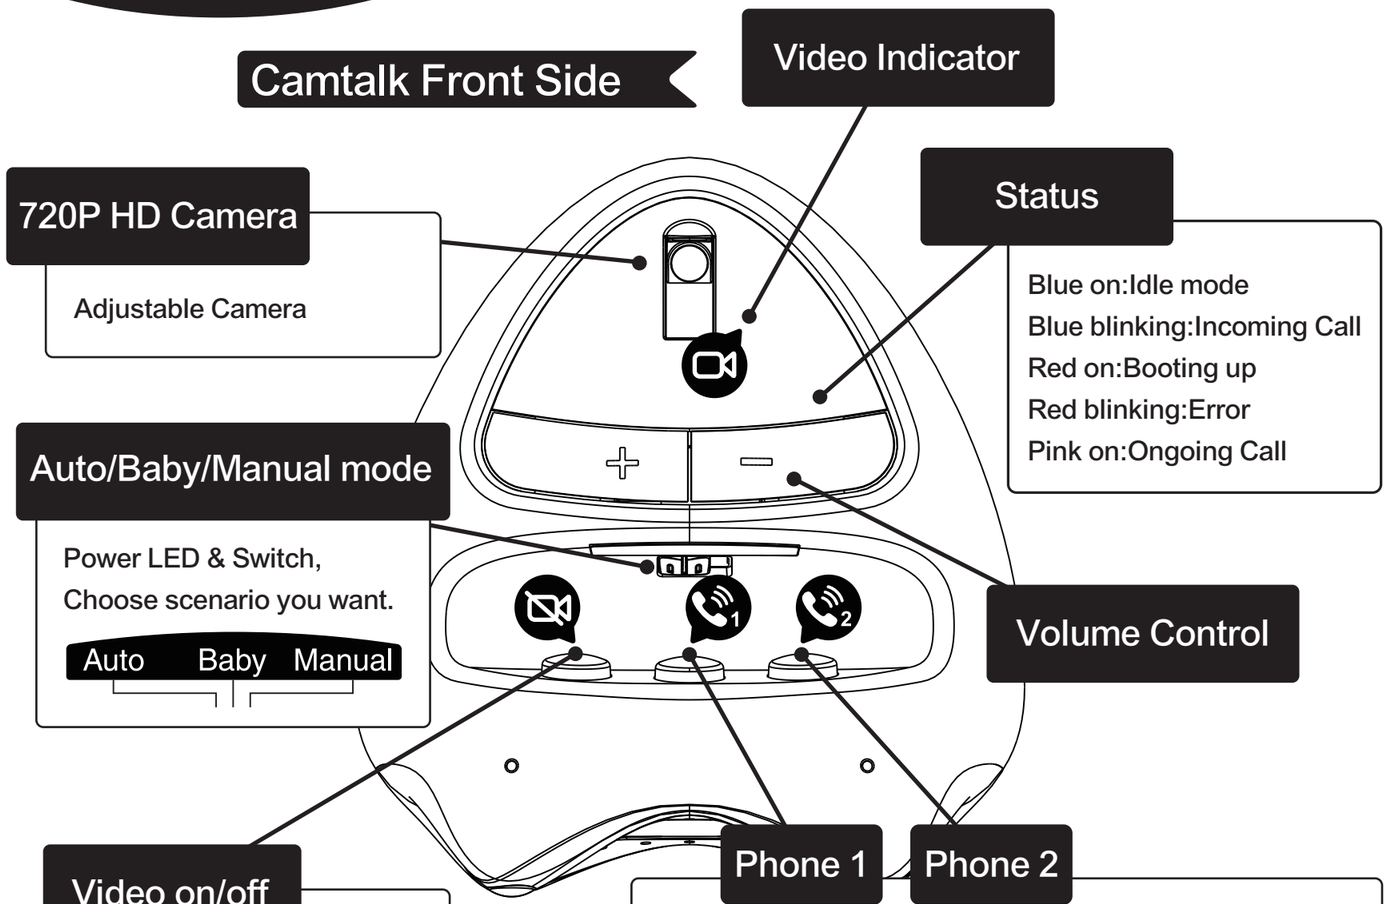

Video Indicator

720P HD Camera

Adjustable Camera

Status

Blue on:Idle mode
Blue blinking:Incoming Call
Red on:Booting up
Red blinking:Error
Pink on:Ongoing Call

Auto/Baby/Manual mode

Power LED & Switch,
Choose scenario you want.

Auto Baby Manual

Volume Control

Video on/off

Enable or disable during conversation.

Phone 1

Phone 2

Press Call button 1 or 2 to dial out.
Press video plus either button 1 or 2 simultaneously to memorize the last incoming call number for speed dialing.

Camtalk Back Side

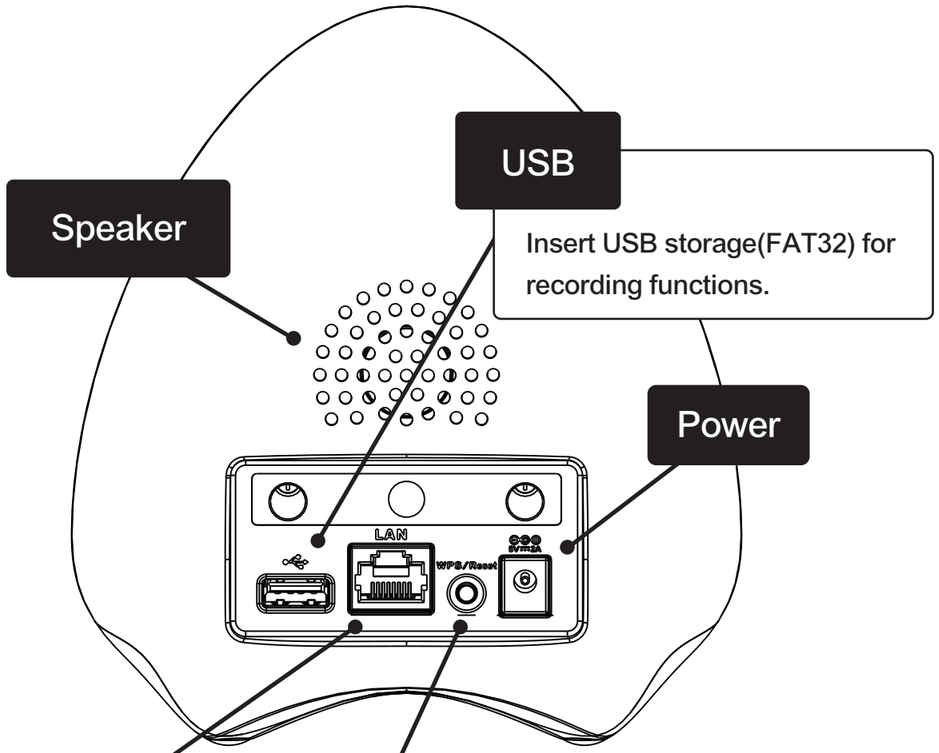

Speaker

USB

Insert USB storage(FAT32) for recording functions.

Power

LAN

WPS/Reset

Press 1 time for WPS.
Over 3 seconds for Reset.

Camtalk Label Example

FreePP Camtalk
Model Name : BV1501
DC : 5V ⎓ 2A
Box ID : 008971007000
Security code : 4567
MAC : F835DDXXXXXX
SN : VITANR334567
CCAXXXXXXXXXXX
CE FC FCC ID : MXF-BV1501
Browan Communications Inc.
Made in Taiwan

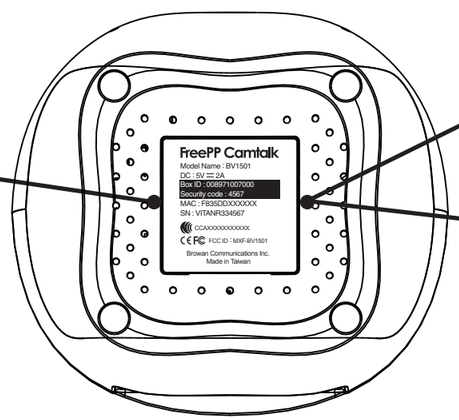

Box ID

Enter Box ID to make the call.

Security Code

On Auto and Baby Monitor mode, person making incoming call needs to enter the security code (4 digits). The security code can be customized in settings later.

Quick Guide

Quick Setting

1. Plug Power & LAN cable first, wait until blue light turns on and make sure your Smartphone or Tablet is connected to the same Router（Only for configuration）.
2. Download FreePP APP from Apple Store or Google Play on your mobile device. After registration, go to Contact list and you will find the FreePP Device option on top of Contacts. Use it to search.
3. Click on the device and you can start to set it up.(Default password is 'admin')

Set Up Speed Dial Button

1. Camtalk can memorize two sets of FreePP contacts for speed dial.
2. To configure them, press video plus either button 1 or 2 simultaneously to memorize the last incoming call number for speed dialing.
3. Finally release those buttons and you will hear an alert, indicating the phone number was successfully saved.

How to Call

FreePP APP > Camtalk

1.Use the dial pad of the APP to key in the Camtalk Box ID and complete phone call.
2.Follow voice instructions to enter Security code in order to access Camtalk.（Auto or Baby Monitor mode only）

Camtalk to FreePP APP & Product

Use Phone 1 or 2 for speed dial. To configure them, call the Camtalk from your smartphone and hang up. Then, hold the Video on/off button first and press Phone 1 or 2 whichever you want to save that last phone call number. Finally release those buttons and you will hear an alert, indicating the phone number was successfully saved. Repeat same process if you want to save another number in Phone 1 or 2.

Access Camtalk without internet cable

1. Camtalk will become Access Point (AP) if no RJ45 Cable is connected to it (Around 90 seconds after boot up and when Red light is blinking)
2. Use your computer or mobile device to connect to Cam talk via wireless (SSID is Camtalk + last 6 digits of MAC)
3. Type '192.168.1.1' into your Browser to set it up (Default password is 'admin')

Real time & Scheduling Voice Message

1. Press Voice message button on APP to send a message. This also can be scheduled, sliding finger up after message is recorded.
2. The message will be reproduced 5 times. Once every 30 seconds.
3. Press Video on/off button in Camtalk to pick it up

Customize your own Ringtone

1. You can record your own Ringtone.
2. Press Video on/off button for 3 seconds to set the last voice message as Ringtone.

PS：MP3, 3GP, WAV formats are supported as Ringtone.

Advance Settings

For more features and options, please use the setting page via FreePP APP.

1. Wireless
2. White List
3. Do not disturb mode
4. Upload Ringtone & Alert
5. Motion Detection
6. Loop Recording
7. Scheduling Recording
8. Interval Photos
9. Others advance settings

Note： All configurations can be done through Internet Browser. Only need to identify the Camtalk IP, type IP address into browser and follow the instructions.

Mode

	Mic Range	Pick up mode	Voice single/ Two way	Alerts for Pick up & hang up	Voice mes-sage	Scenario
Auto	1M	Auto	Two way	Yes	Yes	Pets, Home care
Baby Monitor	3～4M	Auto	Single way(To APP)	No	No	Baby care
Manual	1M	Manual	Two way	Yes	Yes	Family & Friends

Q&A

Question	Answer
No Sign of Power	1. Check the Power cable. 2. Check the outlet on the wall. 3. Unplug the power adapter and plug it again.
Can't pick up or dial FreePP phone call。	1. Make sure LAN cable is properly connected and ensure Status LED is Blue.（Blue light takes 90~120 seconds to turn on） 2. Check whether the Router is properly connected to Internet. 3. Check Speed dial button has been already set.
No Blue light displays on FreePP logo（Idle Mode）	1. Check the status of LAN cable. 2. Disconnect and connect power supply. 3. Try another LAN cable. 4. Check whether the Router is properly connected to Internet. 5. Try to reset your device. (Press over 3 seconds) 6. Check the IP status of the Camtalk via FreePP APP. If there is no IP displayed, please check your Router or contact your Internet Service Provider.