| Test Mode	UNII-7_TX AX(HE80) Mode 6785 MHz	Polarization	Horizontal

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		6759.000	66.97	19.14	86.11	88.20	-2.09	peak	No Limit
2	*	6760.200	56.46	19.15	75.61	68.20	7.41	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-7_TX AX(HE80) Mode 6785 MHz	Polarization	Horizontal
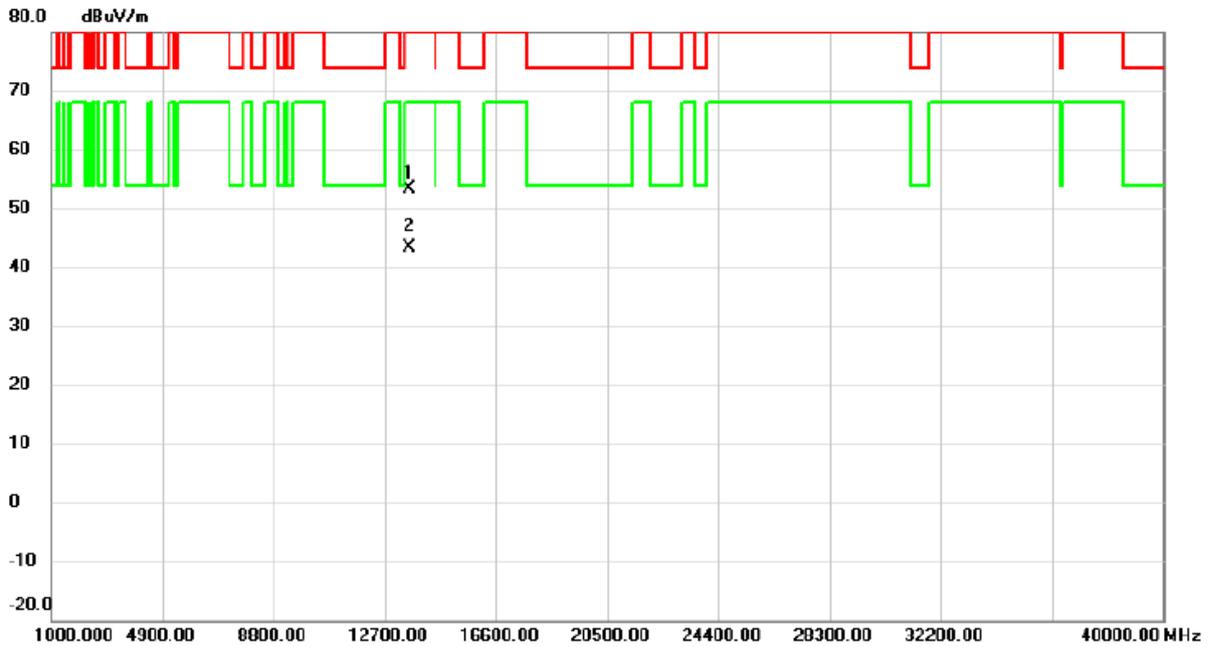
No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13572.510	35.62	17.65	53.27	88.20	-34.93	peak	
2	*	13574.250	25.66	17.65	43.31	68.20	-24.89	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7_TX AX(HE80) Mode 6865 MHz	Polarization	Vertical
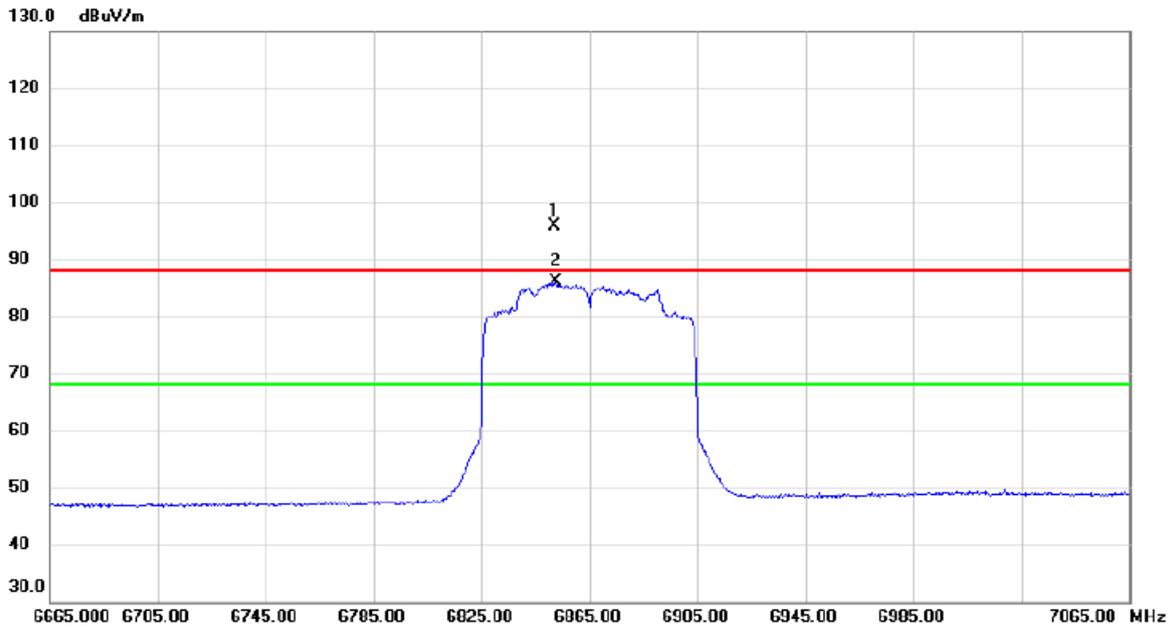
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	6852.200	76.24	19.59	95.83	88.20	7.63	peak	No Limit
2	*	6852.600	66.43	19.59	86.02	68.20	17.82	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7_TX AX(HE80) Mode 6865 MHz		Polarization	Vertical
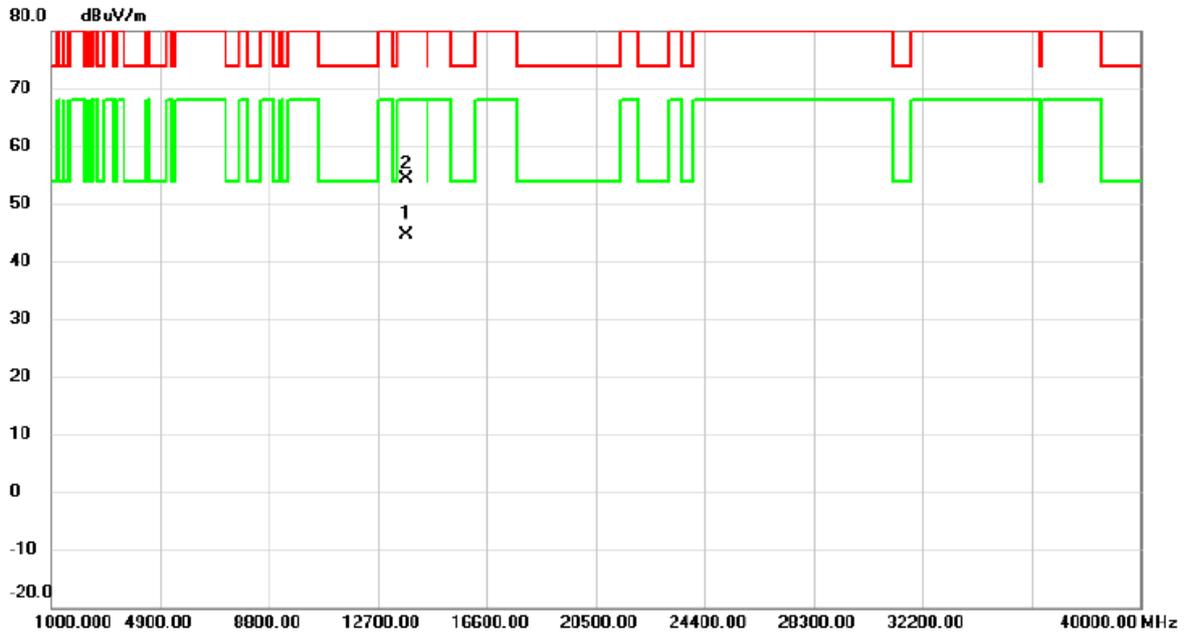
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	13727.650	26.57	17.98	44.55	68.20	-23.65	AVG	
2		13730.880	36.35	17.98	54.33	88.20	-33.87	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7_TX AX(HE80) Mode 6865 MHz	Polarization	Horizontal
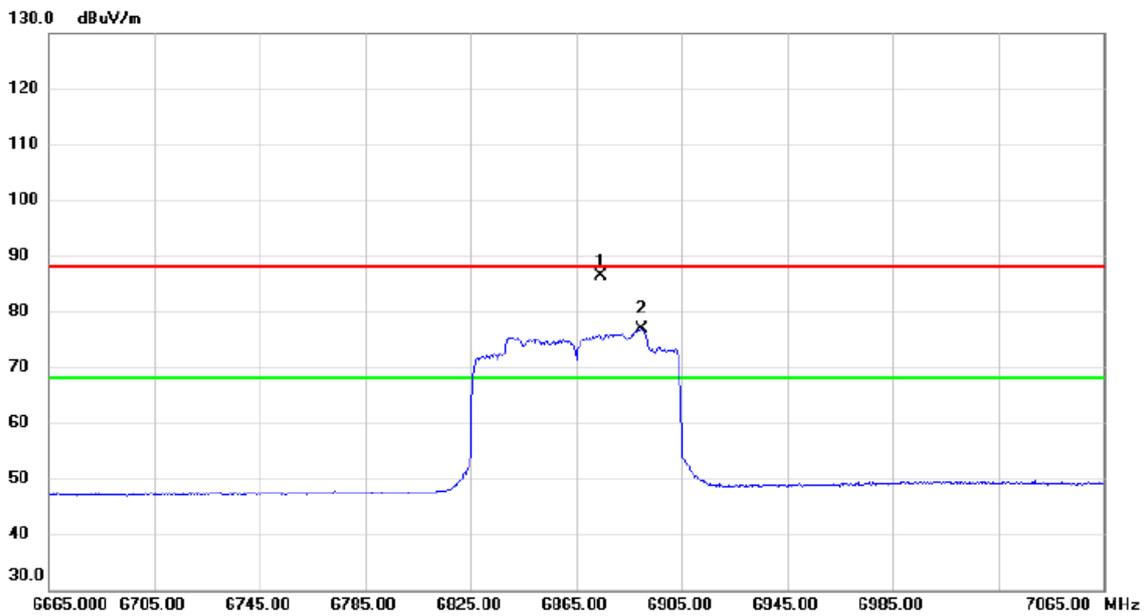
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		6874.200	66.62	19.69	86.31	88.20	-1.89	peak	No Limit
2	*	6889.800	57.13	19.76	76.89	68.20	8.69	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-7_TX AX(HE80) Mode 6865 MHz		Polarization	Horizontal
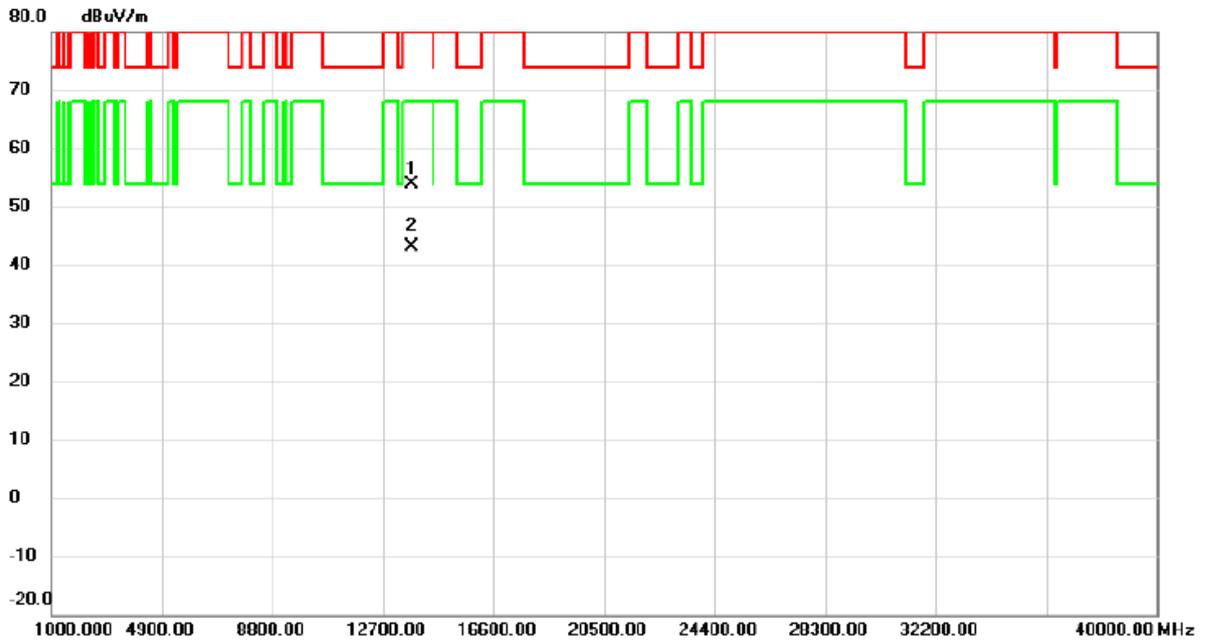
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13722.650	35.97	17.98	53.95	88.20	-34.25	peak	
2	*	13732.520	25.18	17.99	43.17	68.20	-25.03	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-7_TX AX(HE160) Mode 6665 MHz	Polarization	Vertical
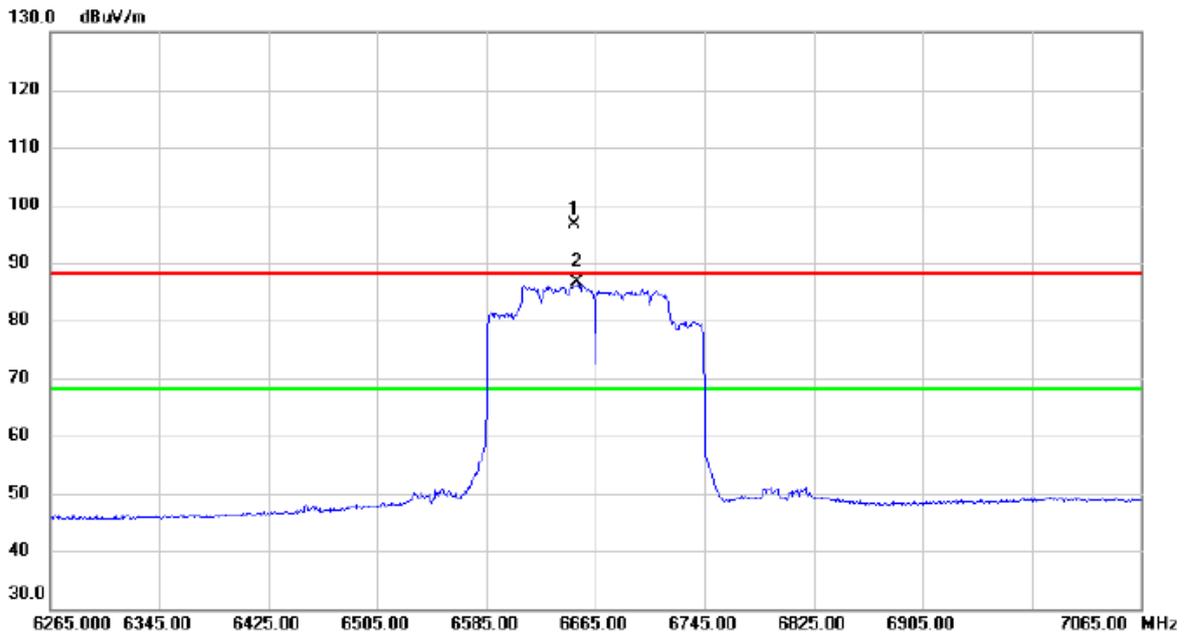
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	X	6649.800	78.14	18.61	96.75	88.20	8.55	peak	No Limit
2	*	6652.200	67.88	18.63	86.51	68.20	18.31	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7_TX AX(HE160) Mode 6665 MHz	Polarization	Vertical
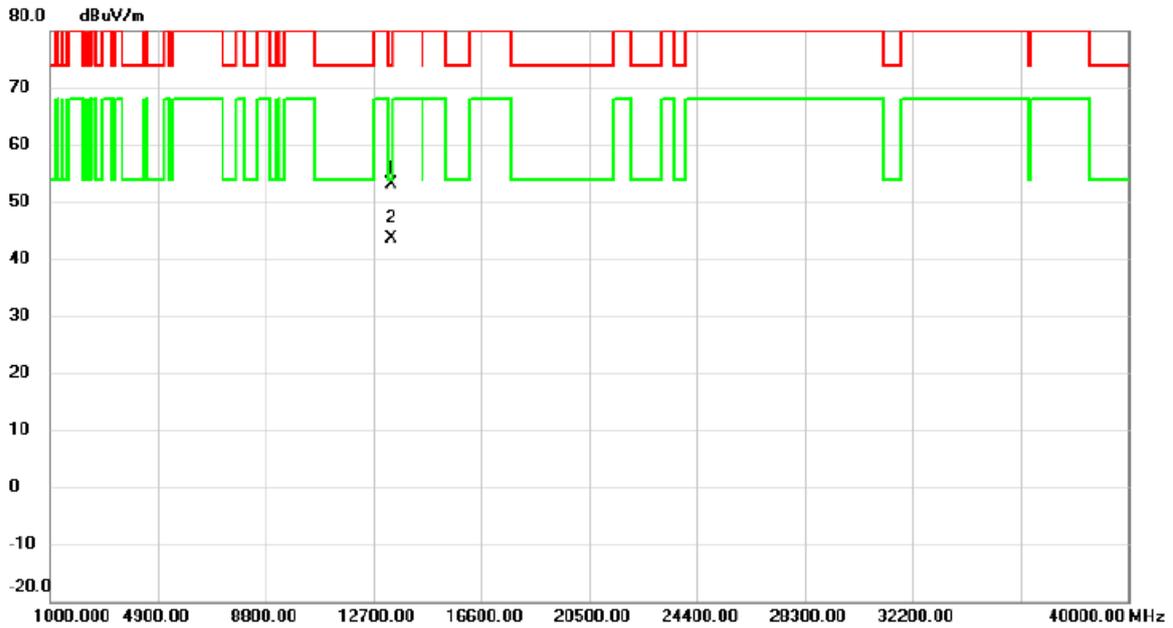
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		13326.280	35.93	17.19	53.12	74.00	-20.88	peak	
2	*	13327.630	26.35	17.19	43.54	54.00	-10.46	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-7_TX AX(HE160) Mode 6665 MHz	Polarization	Horizontal
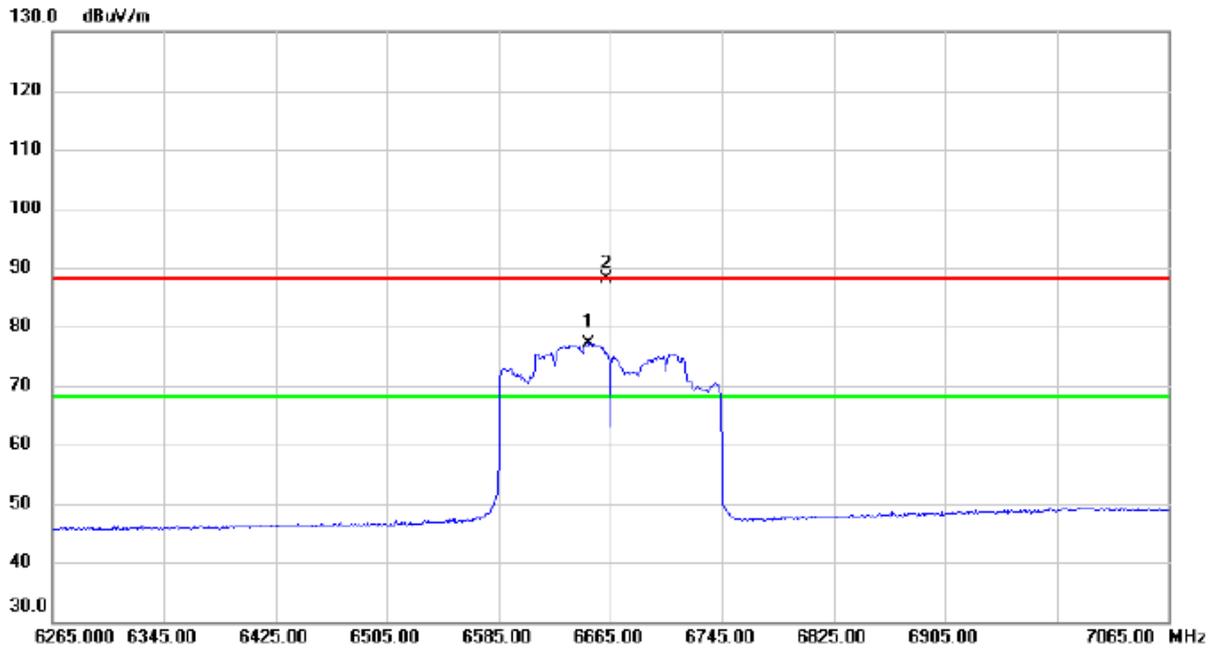
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	6649.800	58.64	18.61	77.25	68.20	9.05	AVG	No Limit
2		6662.600	69.41	18.69	88.10	88.20	-0.10	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-7_TX AX(HE160) Mode 6665 MHz	Polarization	Horizontal
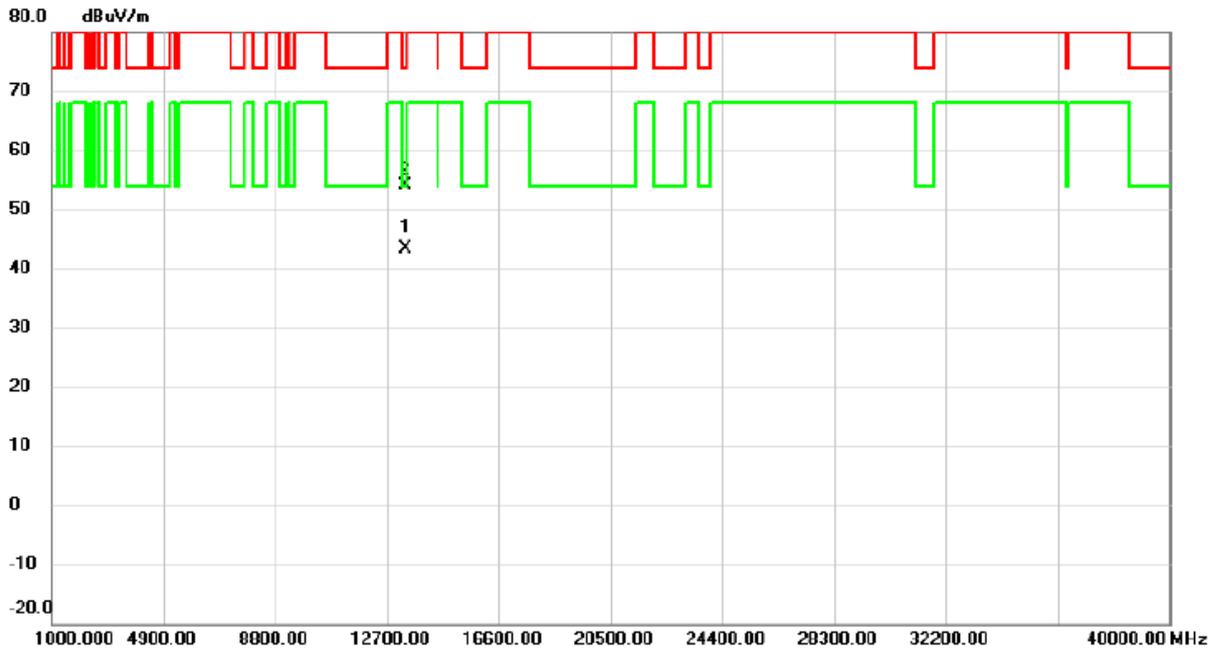
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	13325.990	26.21	17.19	43.40	54.00	-10.60	AVG	
2		13326.370	36.88	17.19	54.07	74.00	-19.93	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-6+UNII-7_TX AX(HE40) Mode 6525 MHz	Polarization	Vertical

| No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	6531.200	69.97	18.04	88.01	68.20	19.81	AVG	No Limit
2	X	6535.000	80.56	18.07	98.63	88.20	10.43	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-6+UNII-7_TX AX(HE40) Mode 6525 MHz	Polarization	Vertical

| No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13047.870	36.99	16.71	53.70	88.20	-34.50	peak	
2	*	13052.180	26.32	16.72	43.04	68.20	-25.16	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-6+UNII-7_TX AX(HE40) Mode 6525 MHz	Polarization	Horizontal
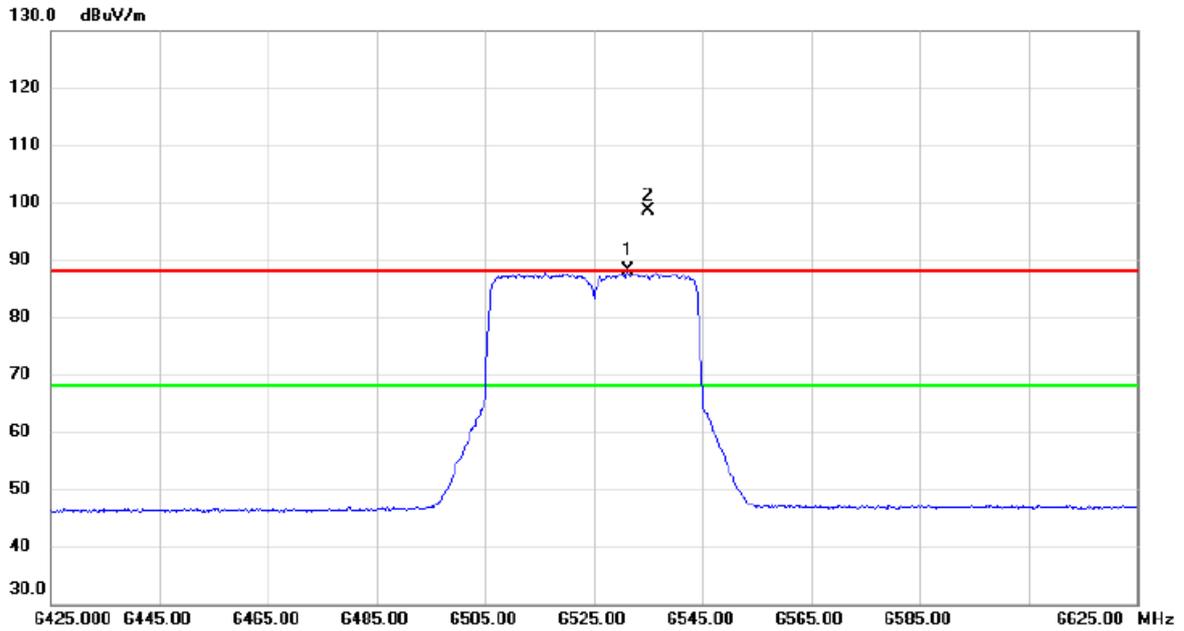
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	6531.200	69.97	18.04	88.01	68.20	19.81	AVG	No Limit
2	X	6535.000	80.56	18.07	98.63	88.20	10.43	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-6+UNII-7_TX AX(HE40) Mode 6525 MHz	Polarization	Horizontal

No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13049.910	37.62	16.71	54.33	88.20	-33.87	peak	
2	*	13050.180	26.20	16.72	42.92	68.20	-25.28	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX A Mode 6995 MHz		Polarization	Vertical
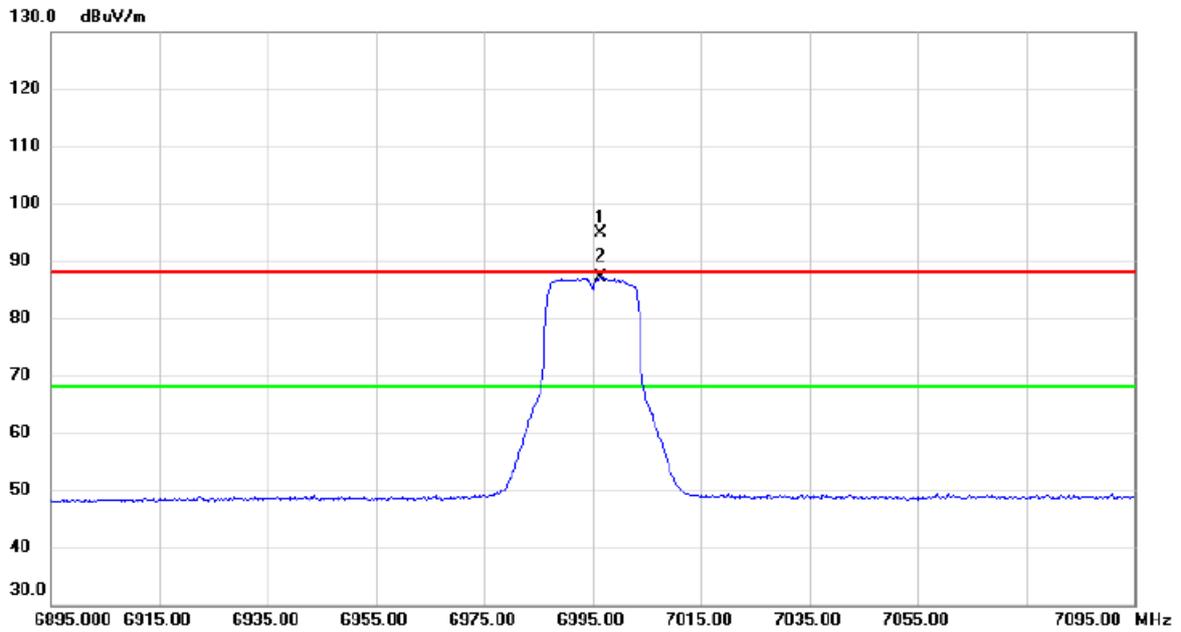
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	6996.400	74.67	20.28	94.95	88.20	6.75	peak	No Limit
2	*	6996.400	66.89	20.28	87.17	68.20	18.97	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX A Mode 6995 MHz		Polarization	Vertical
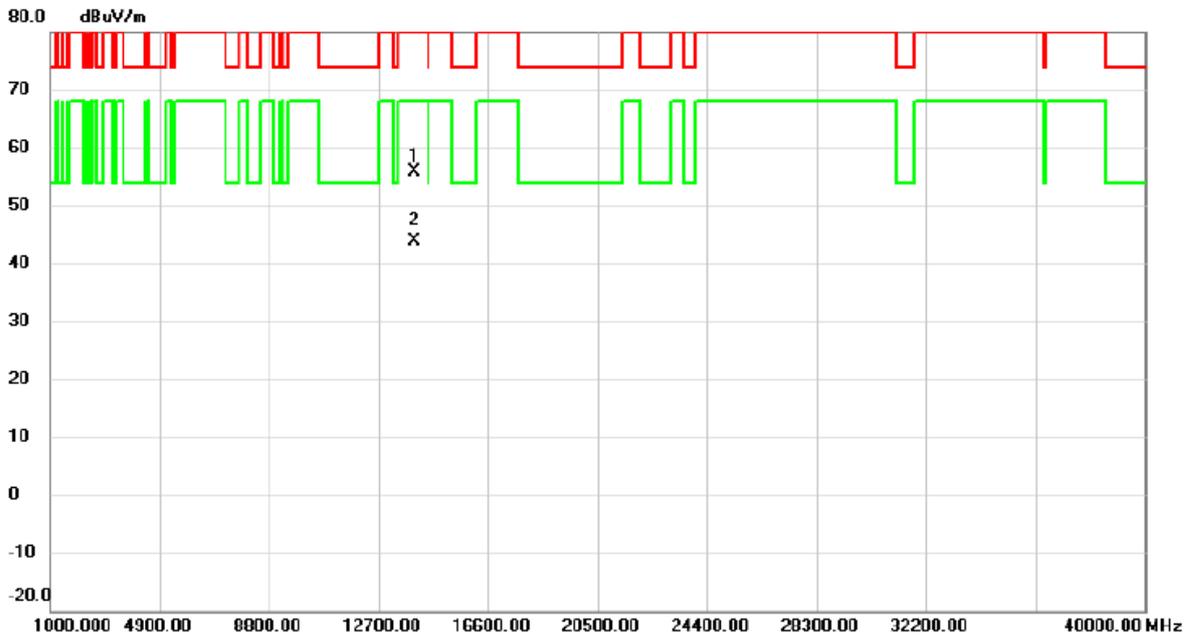
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13985.070	37.46	18.53	55.99	88.20	-32.21	peak	
2	*	13986.550	25.41	18.54	43.95	68.20	-24.25	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX A Mode 6995 MHz		Polarization	Horizontal
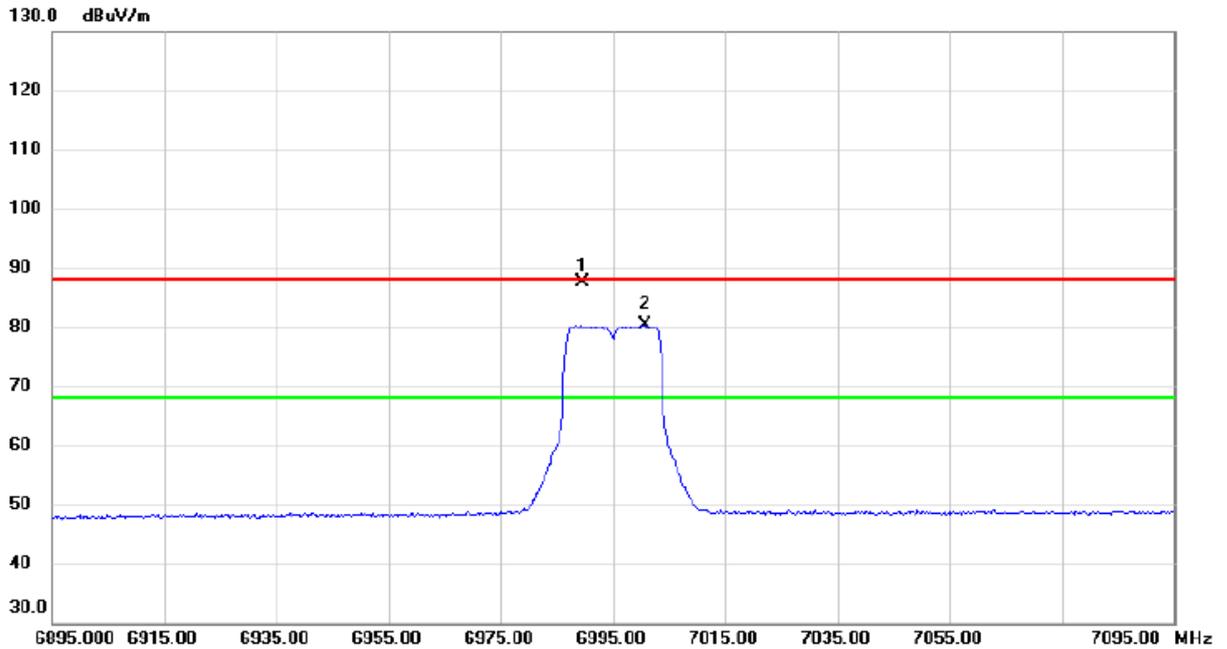
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		6989.600	67.48	20.24	87.72	88.20	-0.48	peak	No Limit
2	*	7000.600	60.04	20.29	80.33	68.20	12.13	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX A Mode 6995 MHz		Polarization	Horizontal
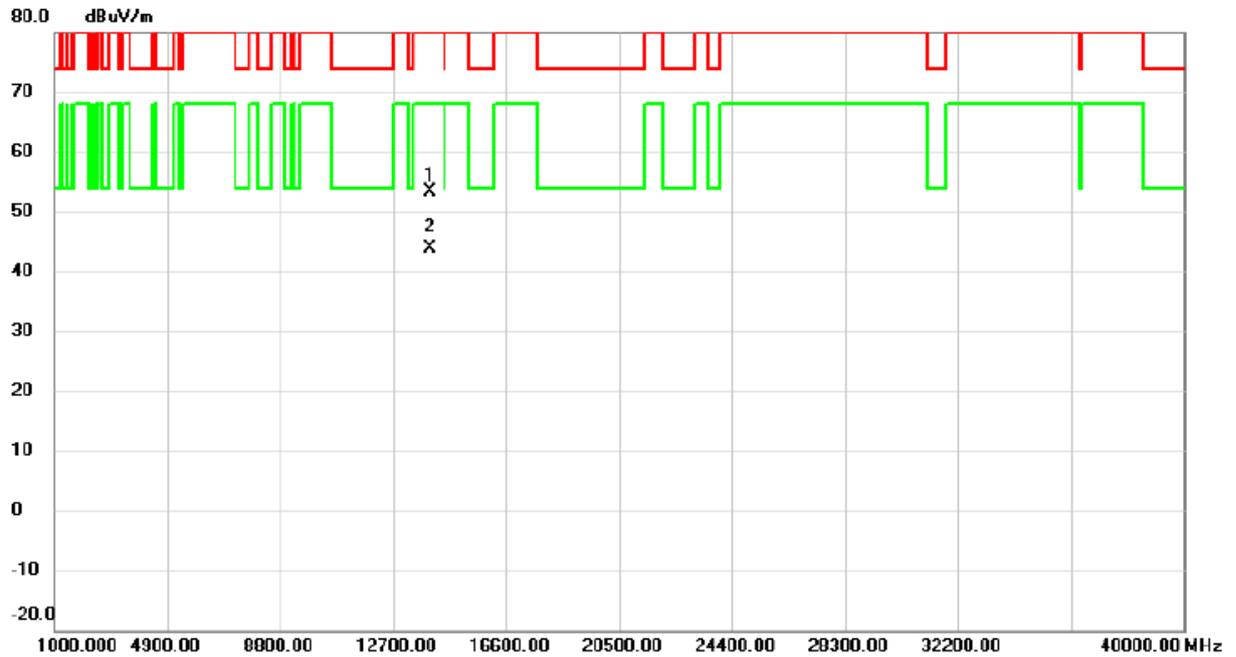
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13991.870	34.87	18.55	53.42	88.20	-34.78	peak	
2	*	13993.780	25.36	18.56	43.92	68.20	-24.28	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX A Mode 7095 MHz		Polarization	Vertical
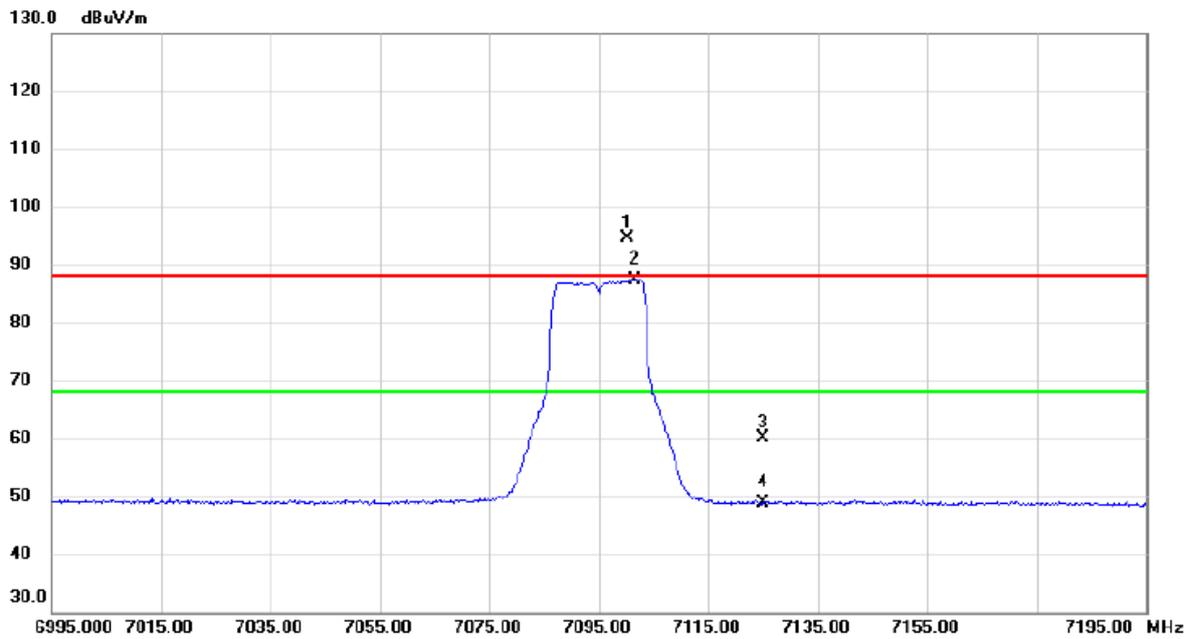
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	X	7100.200	74.21	20.42	94.63	88.20	6.43	peak	No Limit
2	*	7101.600	67.06	20.42	87.48	68.20	19.28	AVG	No Limit
3		7125.000	39.65	20.46	60.11	88.20	-28.09	peak	
4		7125.000	28.50	20.46	48.96	68.20	-19.24	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX A Mode 7095 MHz	Polarization	Vertical
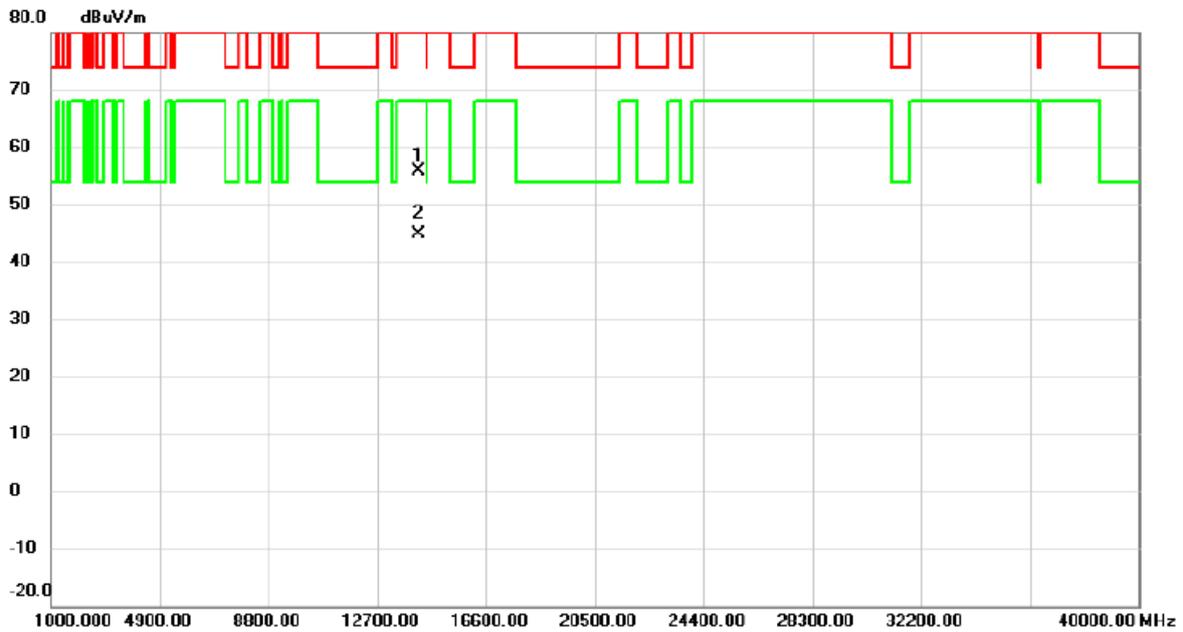
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		14185.910	36.82	18.96	55.78	88.20	-32.42	peak	
2	*	14191.880	25.95	18.97	44.92	68.20	-23.28	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX A Mode 7095 MHz		Polarization	Horizontal
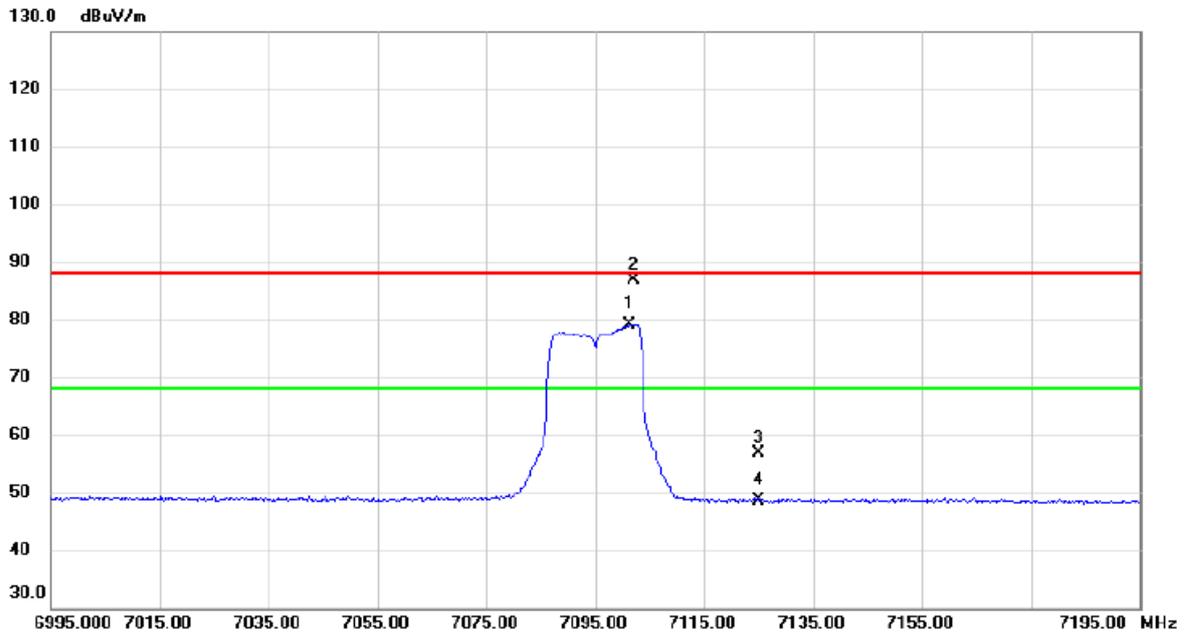
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	7101.400	58.72	20.42	79.14	68.20	10.94	AVG	No Limit
2		7102.200	66.39	20.42	86.81	88.20	-1.39	peak	No Limit
3		7125.000	36.54	20.46	57.00	88.20	-31.20	peak	
4		7125.000	28.14	20.46	48.60	68.20	-19.60	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX A Mode 7095 MHz	Polarization	Horizontal
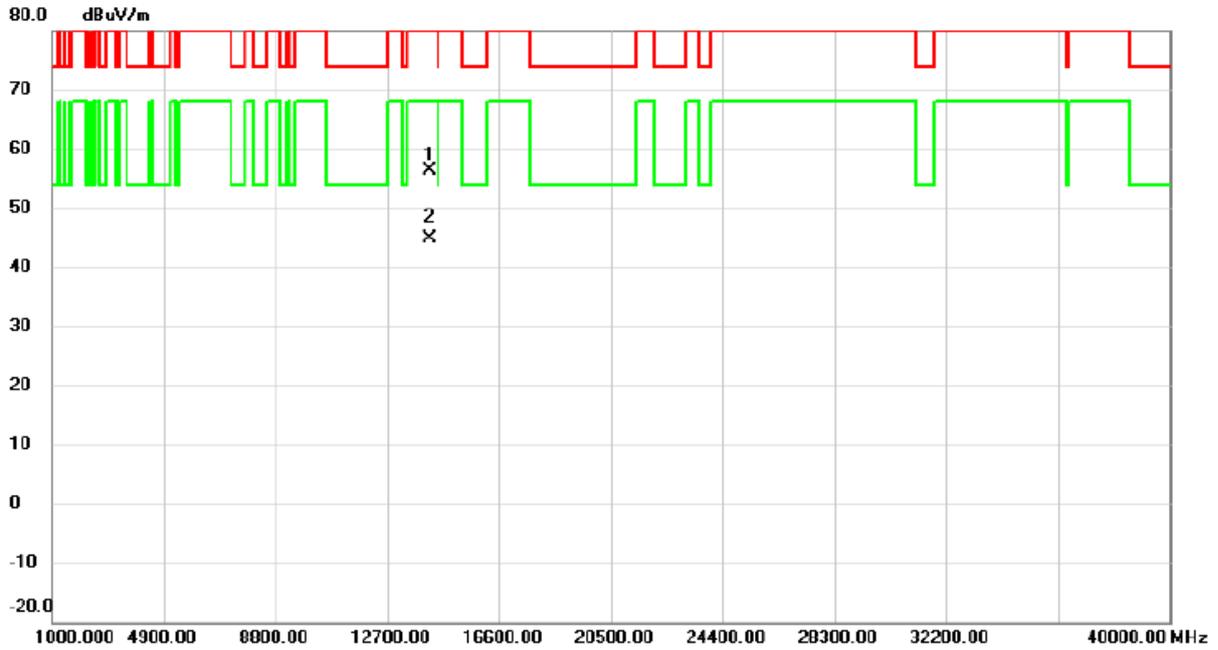
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14185.290	37.48	18.95	56.43	88.20	-31.77	peak	
2	*	14194.200	25.84	18.98	44.82	68.20	-23.38	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX A Mode 7115 MHz		Polarization	Vertical
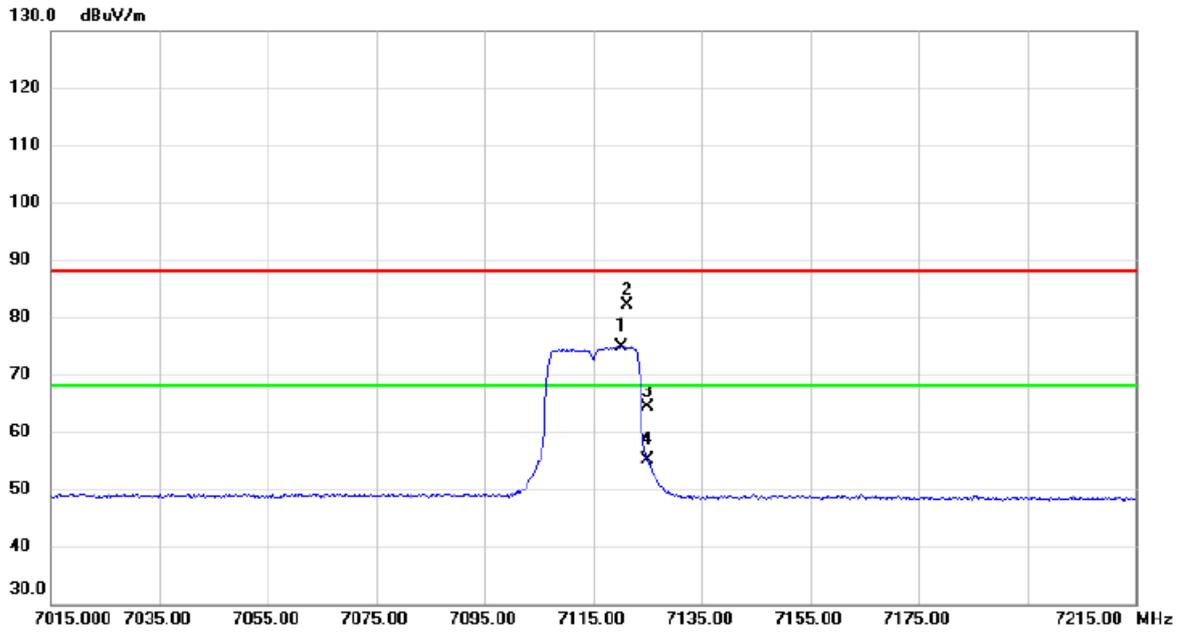
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	7120.200	54.40	20.44	74.84	68.20	6.64	AVG	No Limit
2		7121.400	61.72	20.44	82.16	88.20	-6.04	peak	No Limit
3		7125.000	43.92	20.46	64.38	88.20	-23.82	peak	
4		7125.000	34.66	20.46	55.12	68.20	-13.08	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX A Mode 7115 MHz		Polarization	Vertical
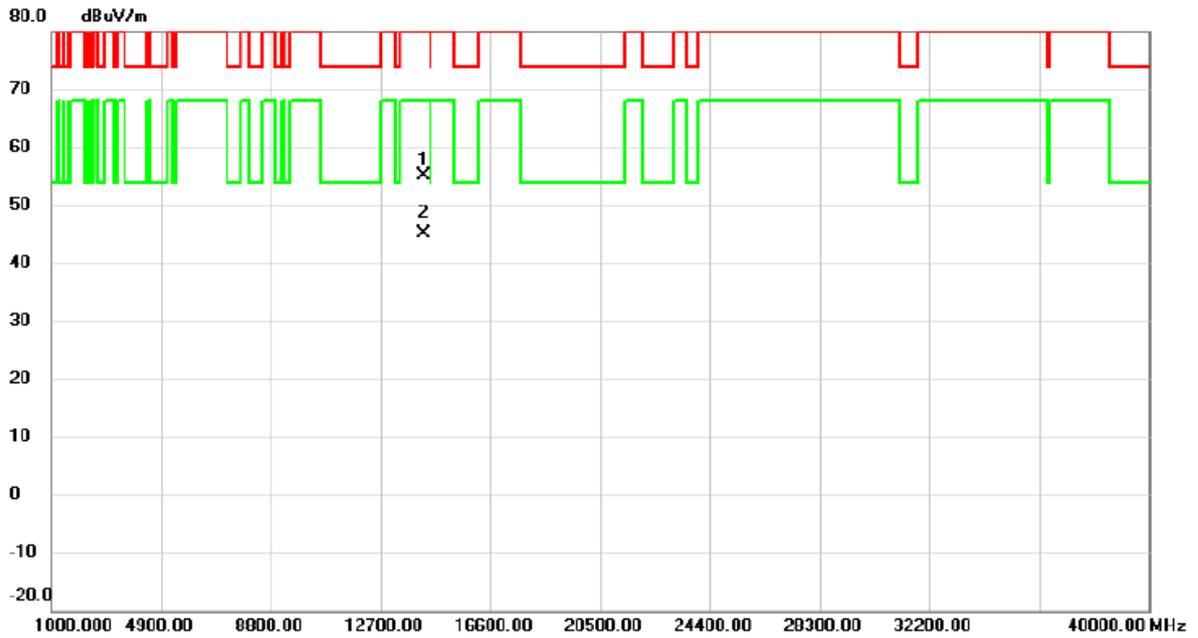
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14225.120	36.00	19.04	55.04	88.20	-33.16	peak	
2	*	14226.240	25.97	19.04	45.01	68.20	-23.19	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX A Mode 7115 MHz		Polarization	Horizontal
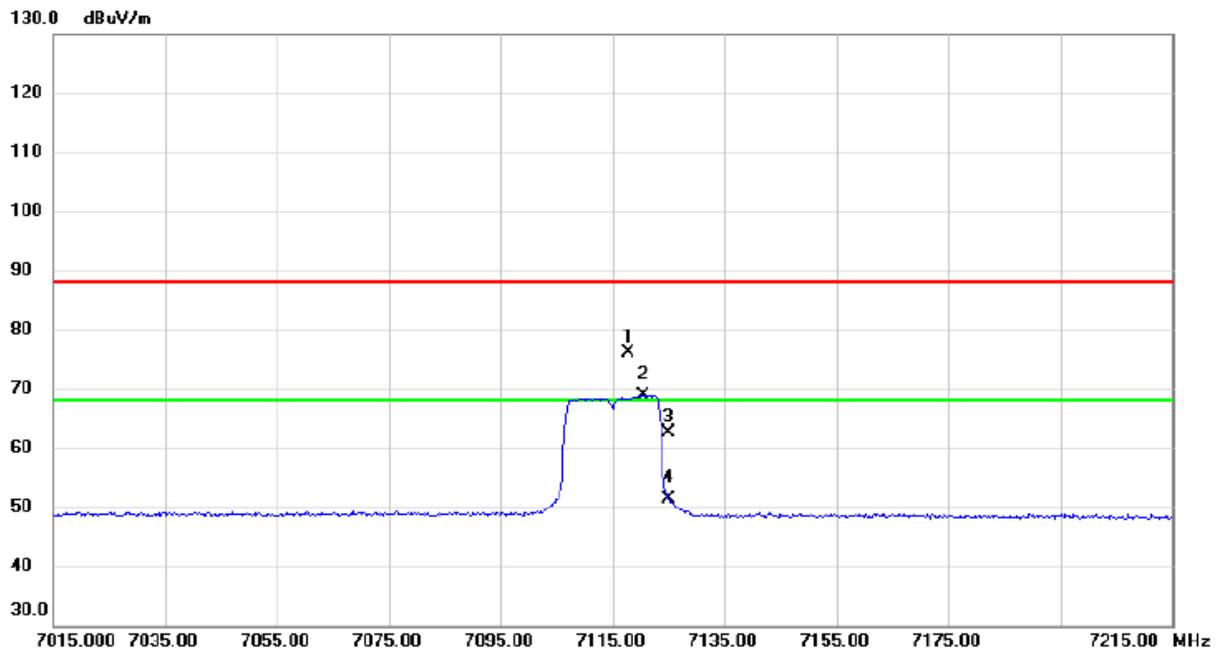
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		7117.800	55.78	20.44	76.22	88.20	-11.98	peak	No Limit
2	*	7120.400	48.50	20.44	68.94	68.20	0.74	AVG	No Limit
3		7125.000	42.15	20.46	62.61	88.20	-25.59	peak	
4		7125.000	30.94	20.46	51.40	68.20	-16.80	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX A Mode 7115 MHz		Polarization	Horizontal
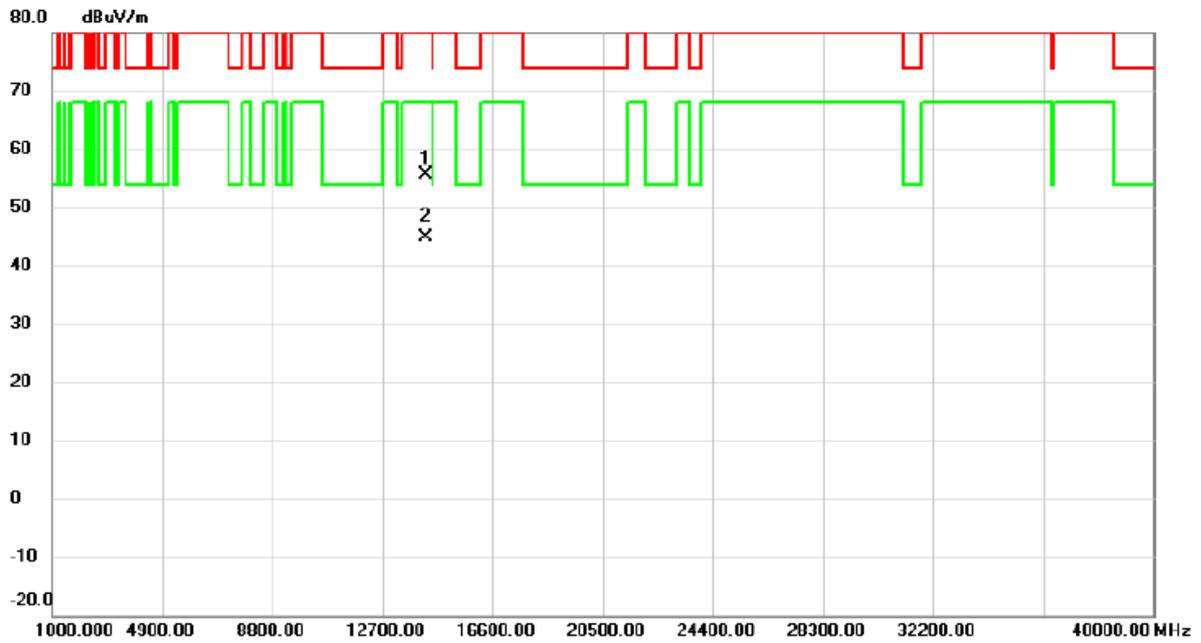
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14225.660	36.60	19.04	55.64	88.20	-32.56	peak	
2	*	14227.790	25.72	19.05	44.77	68.20	-23.43	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 6945 MHz	Polarization	Vertical
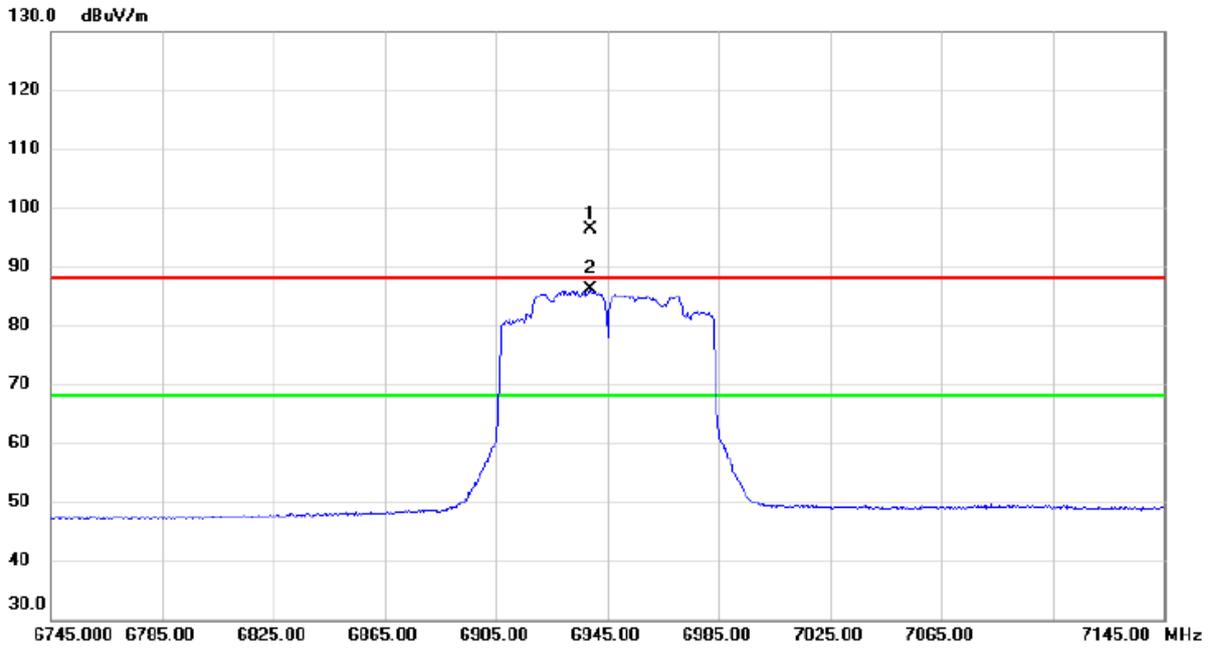
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	6939.000	76.33	19.99	96.32	88.20	8.12	peak	No Limit
2	*	6939.000	66.09	19.99	86.08	68.20	17.88	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 6945 MHz	Polarization	Vertical
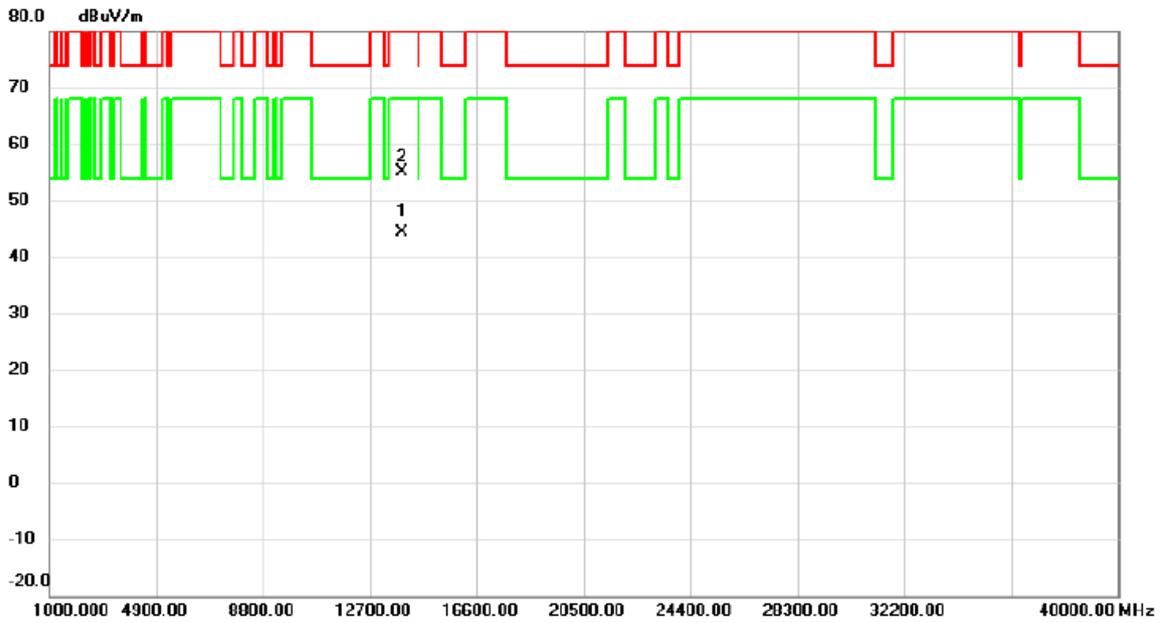
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	13889.640	26.05	18.33	44.38	68.20	-23.82	AVG	
2		13892.395	36.85	18.34	55.19	88.20	-33.01	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 6945 MHz	Polarization	Horizontal
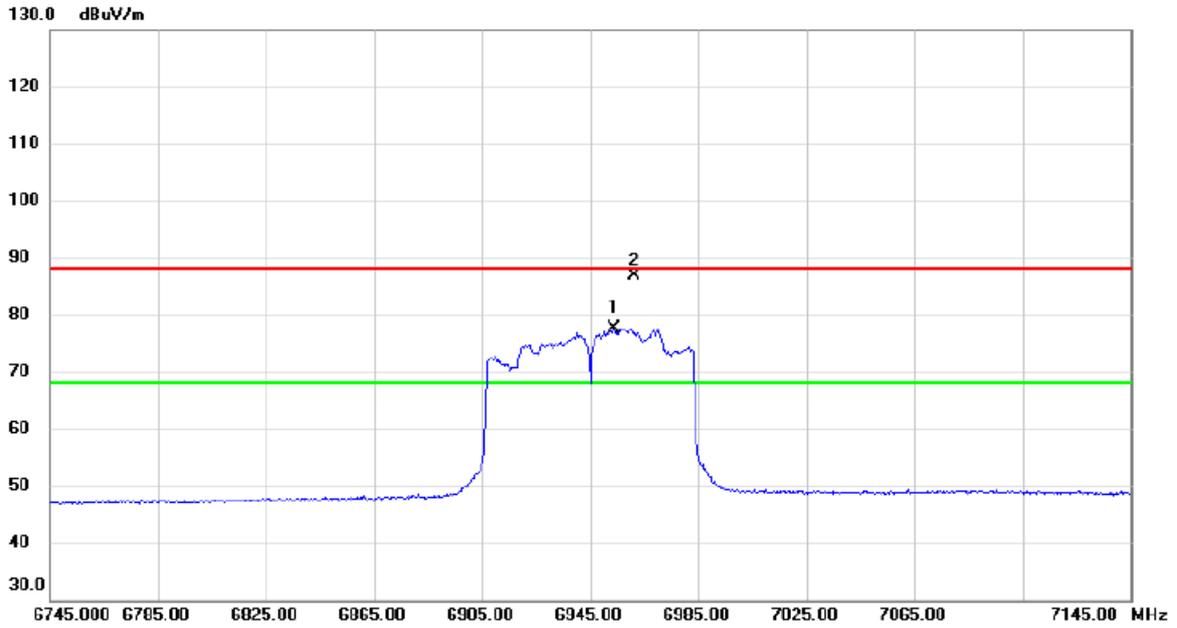
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	6953.800	57.64	20.07	77.71	68.20	9.51	AVG	No Limit
2		6961.400	66.86	20.11	86.97	88.20	-1.23	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 6945 MHz		Polarization	Horizontal
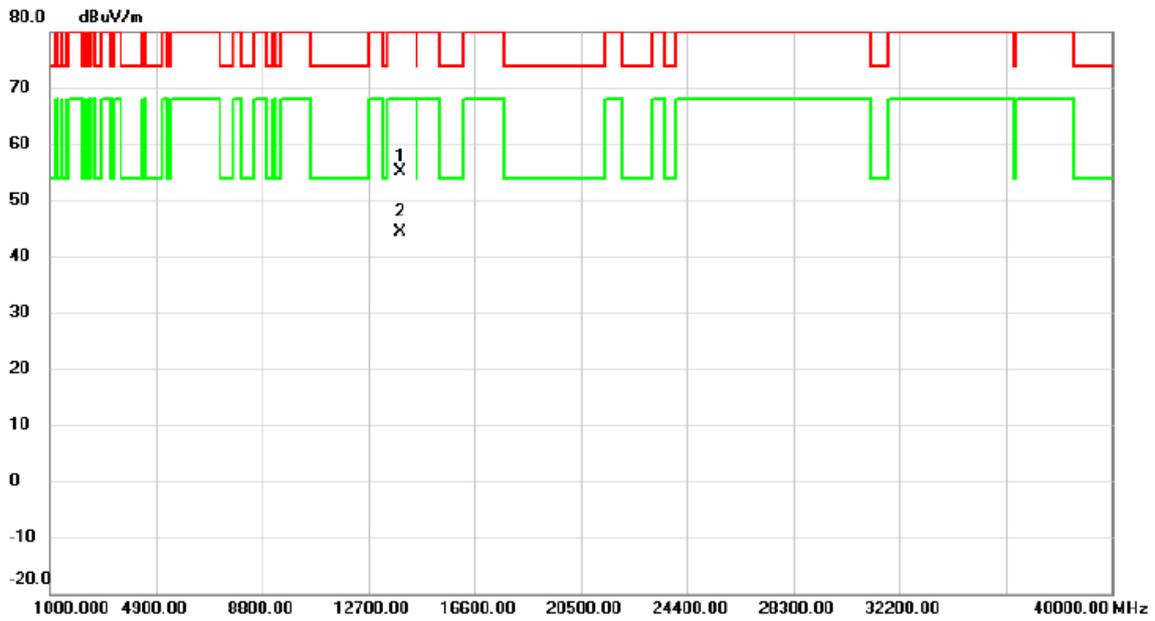
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13889.280	36.88	18.33	55.21	88.20	-32.99	peak	
2	*	13891.630	25.94	18.34	44.28	68.20	-23.92	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AC(VHT80) Mode 7025 MHz	Polarization	Vertical
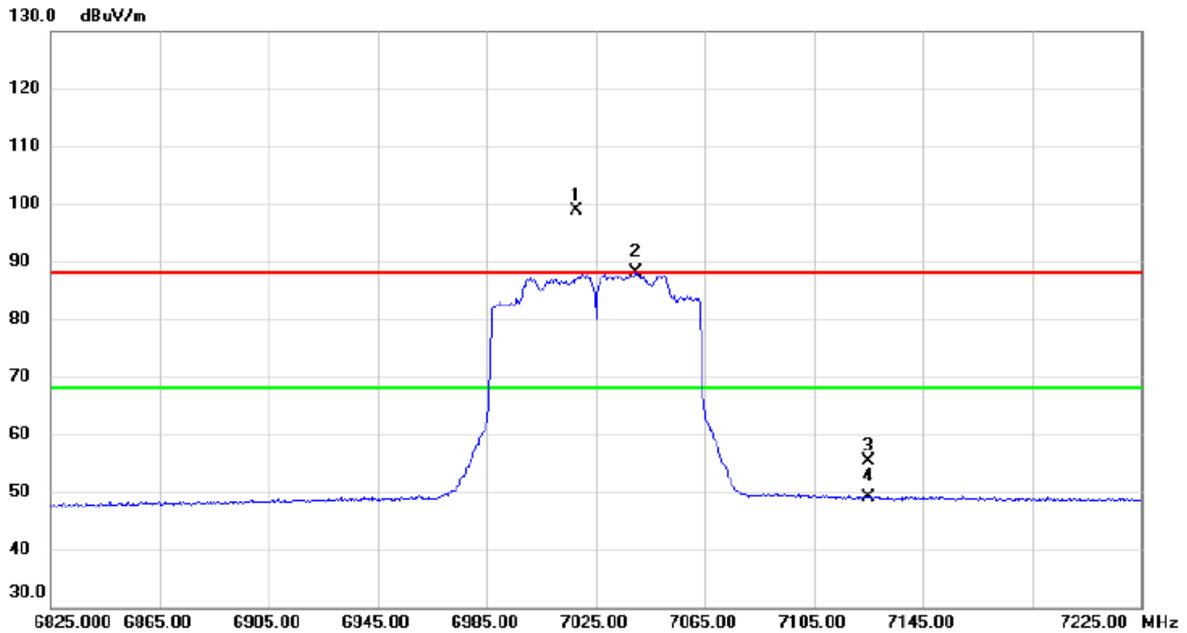
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	X	7017.800	78.69	20.31	99.00	88.20	10.80	peak	No Limit
2	*	7039.800	67.77	20.34	88.11	68.20	19.91	AVG	No Limit
3		7125.000	34.97	20.46	55.43	88.20	-32.77	peak	
4		7125.000	28.56	20.46	49.02	68.20	-19.18	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 7025 MHz	Polarization	Vertical
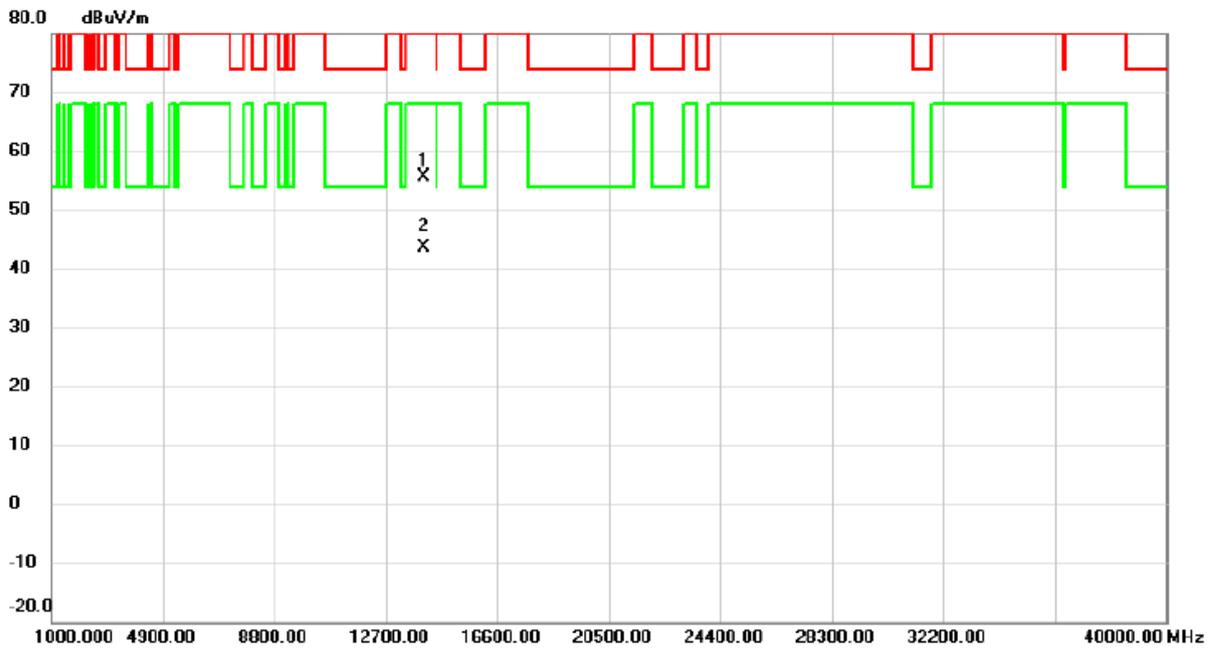
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14050.000	36.88	18.67	55.55	88.20	-32.65	peak	
2	*	14050.000	25.04	18.67	43.71	68.20	-24.49	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 7025 MHz	Polarization	Horizontal
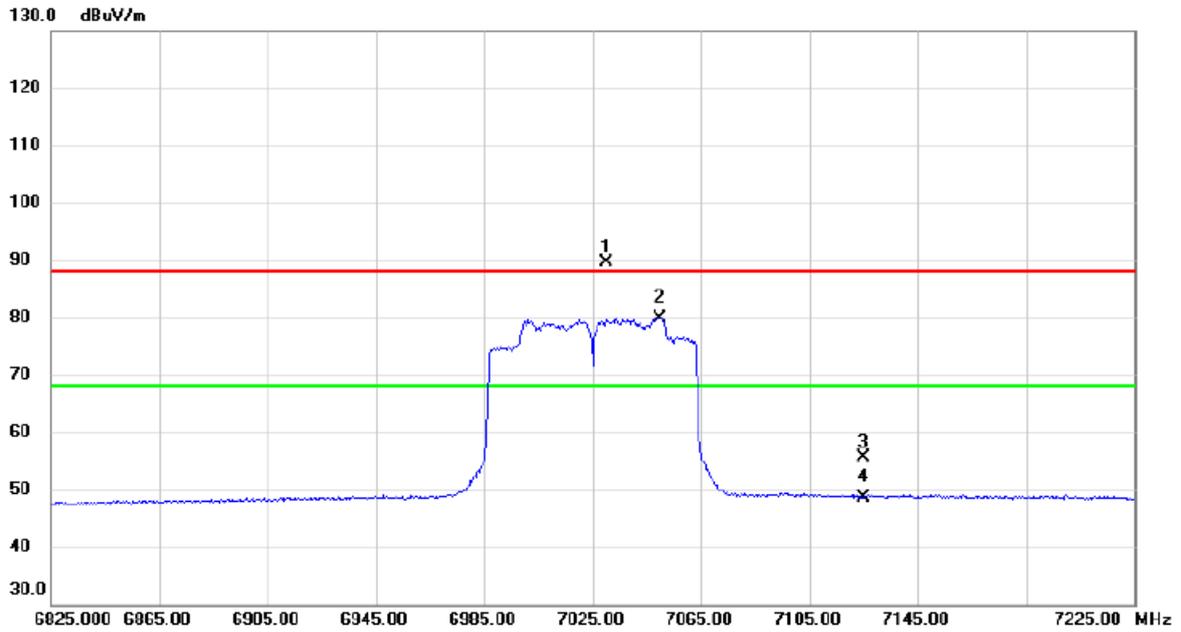
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	7030.200	69.21	20.33	89.54	88.20	1.34	peak	No Limit
2	*	7049.800	59.62	20.35	79.97	68.20	11.77	AVG	No Limit
3		7125.000	35.10	20.46	55.56	88.20	-32.64	peak	
4		7125.000	28.26	20.46	48.72	68.20	-19.48	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT80) Mode 7025 MHz	Polarization	Horizontal
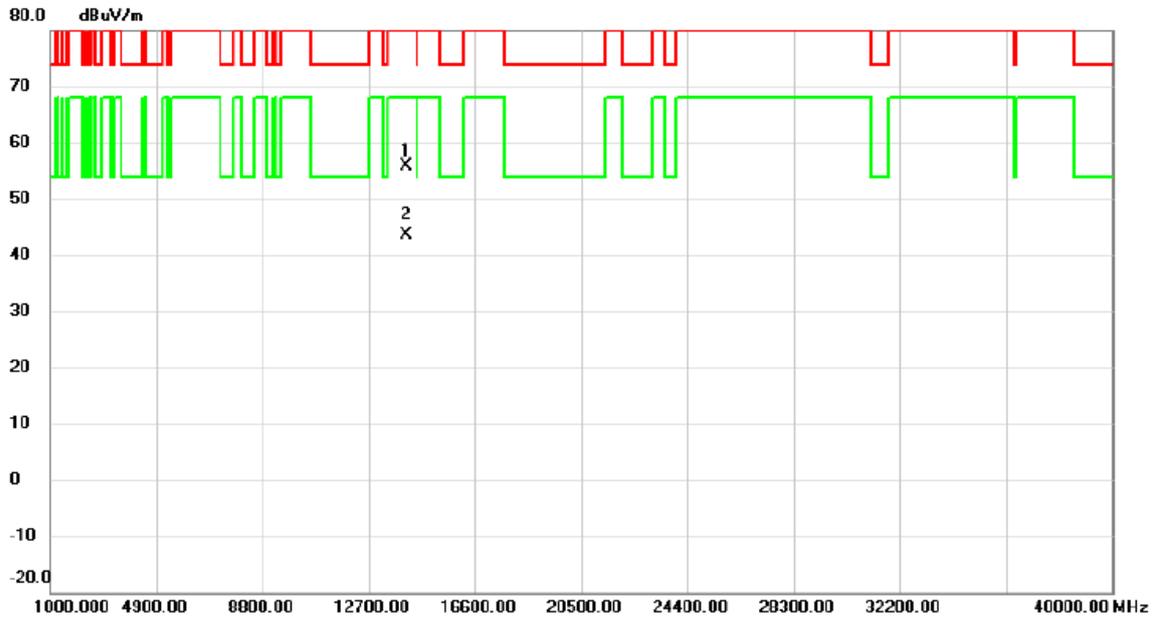
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure- ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14053.630	37.23	18.68	55.91	88.20	-32.29	peak	
2	*	14059.130	24.96	18.69	43.65	68.20	-24.55	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT160) Mode 6985 MHz	Polarization	Vertical
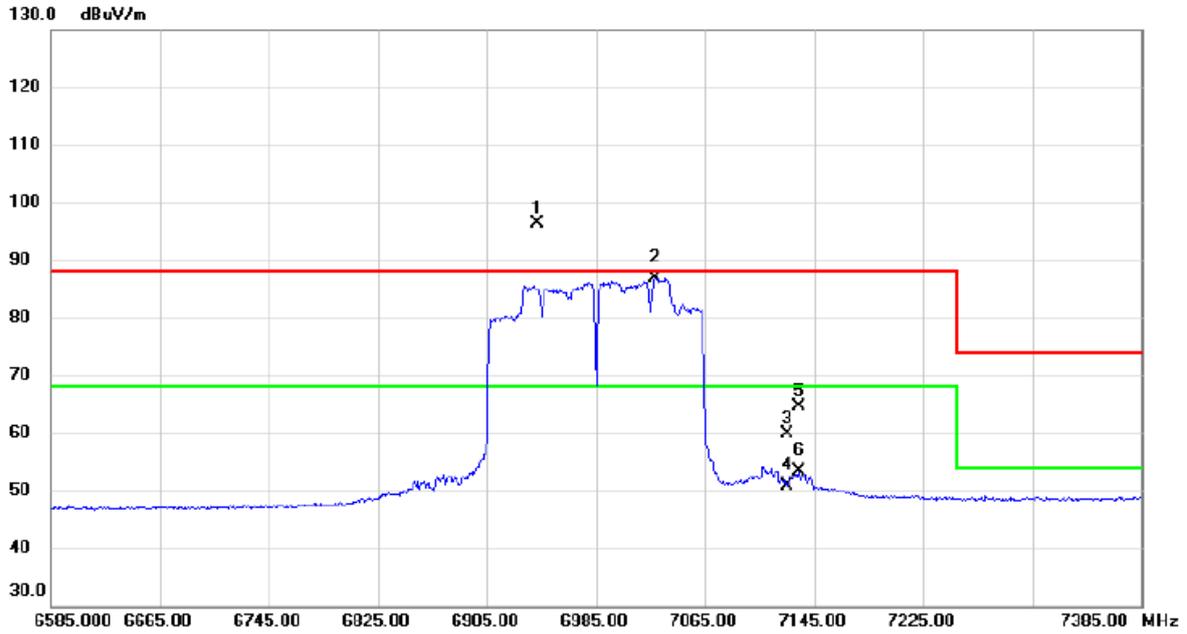
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	X	6941.800	76.39	20.01	96.40	88.20	8.20	peak	No Limit
2	*	7028.200	66.66	20.33	86.99	68.20	18.79	AVG	No Limit
3		7125.000	39.40	20.46	59.86	88.20	-28.34	peak	
4		7125.000	30.40	20.46	50.86	68.20	-17.34	AVG	
5		7133.800	44.26	20.46	64.72	88.20	-23.48	peak	
6		7133.800	32.83	20.46	53.29	68.20	-14.91	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AC(VHT160) Mode 6985 MHz	Polarization	Vertical
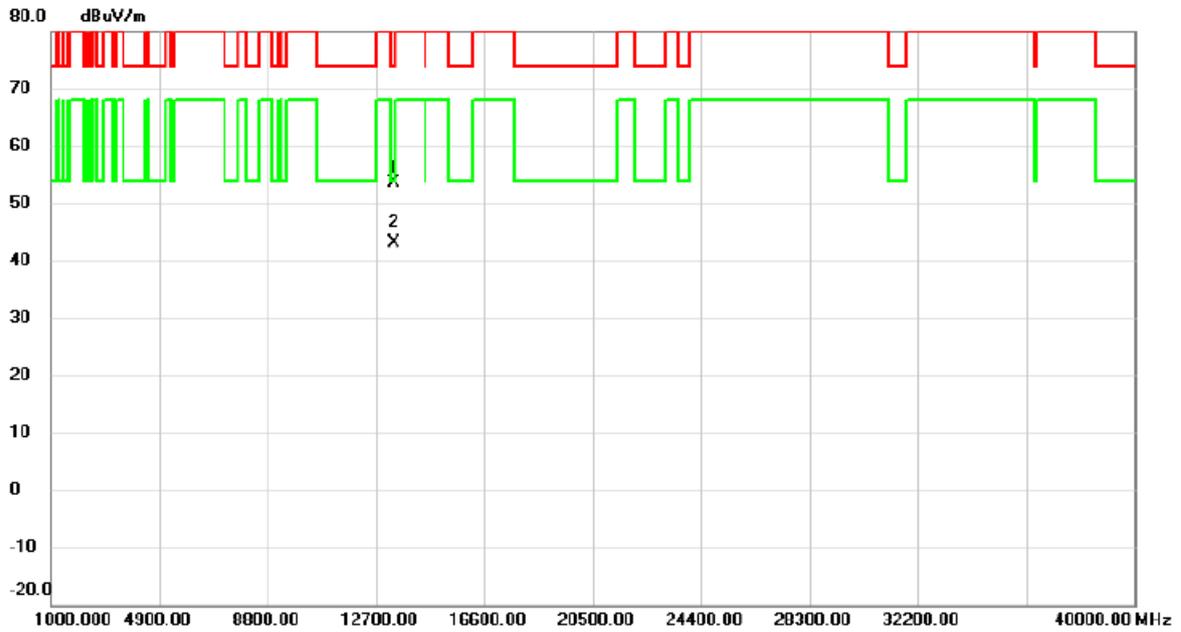
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13327.930	36.50	17.19	53.69	74.00	-20.31	peak	
2	*	13331.120	26.05	17.19	43.24	54.00	-10.76	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT160) Mode 6985 MHz	Polarization	Horizontal
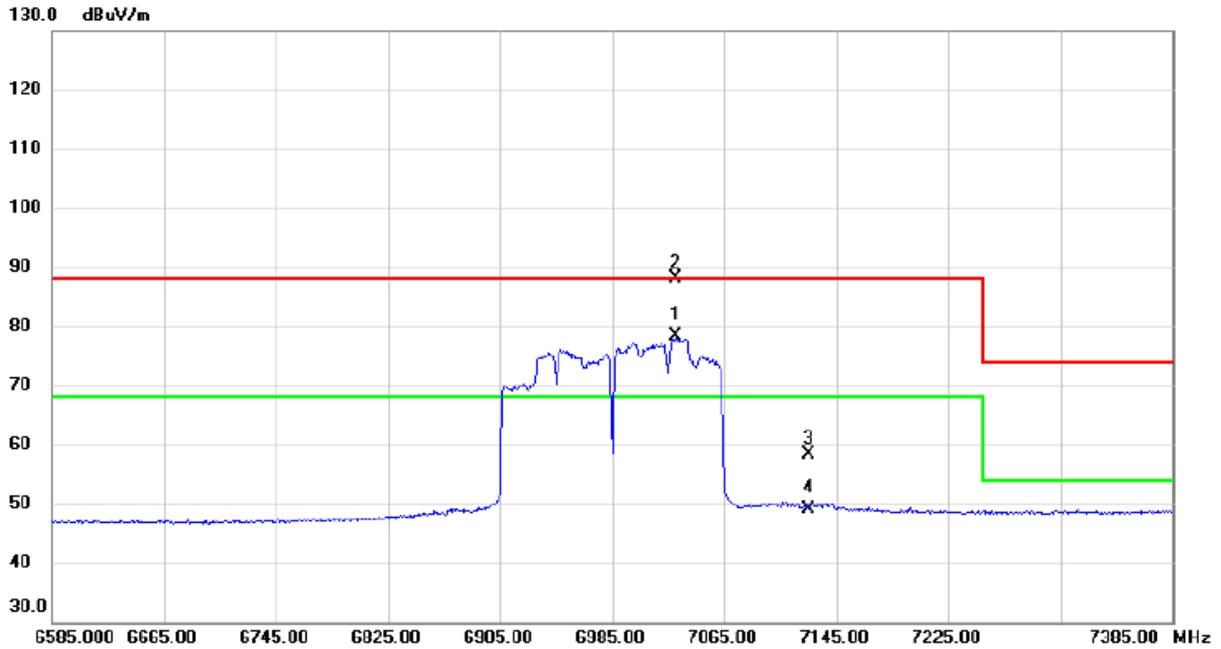
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	7029.800	57.94	20.33	78.27	68.20	10.07	AVG	No Limit
2		7030.600	67.73	20.33	88.06	88.20	-0.14	peak	No Limit
3		7125.000	37.86	20.46	58.32	88.20	-29.88	peak	
4		7125.000	28.73	20.46	49.19	68.20	-19.01	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AC(VHT160) Mode 6985 MHz	Polarization	Horizontal
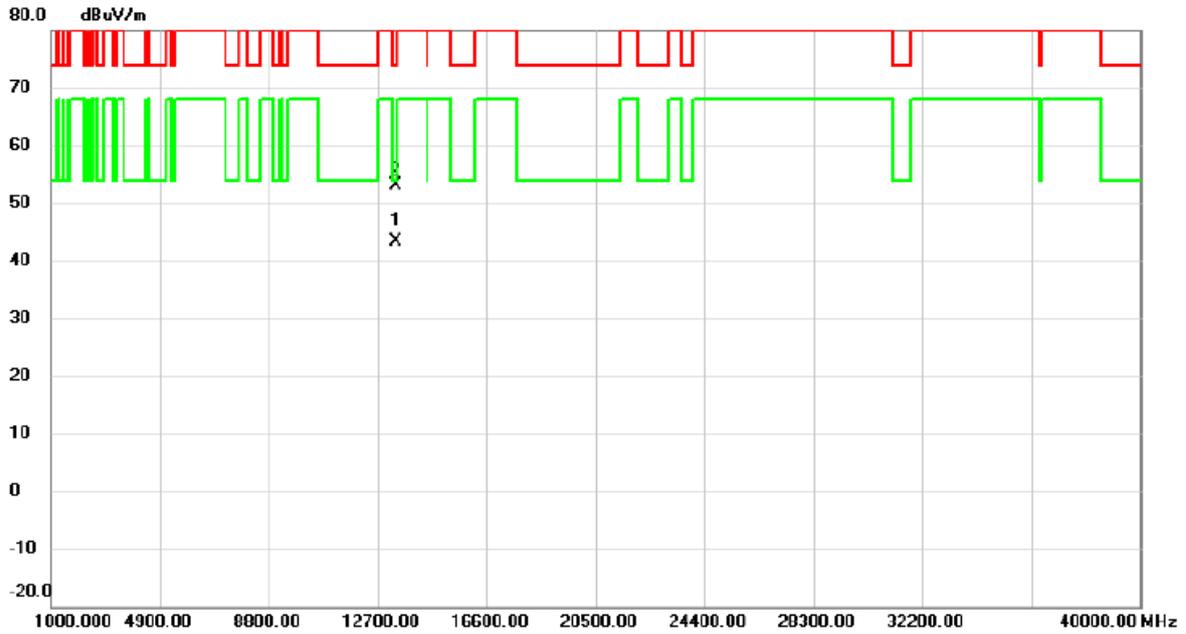
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	13326.050	26.19	17.19	43.38	54.00	-10.62	AVG	
2		13333.910	35.92	17.20	53.12	74.00	-20.88	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 6995 MHz	Polarization	Vertical
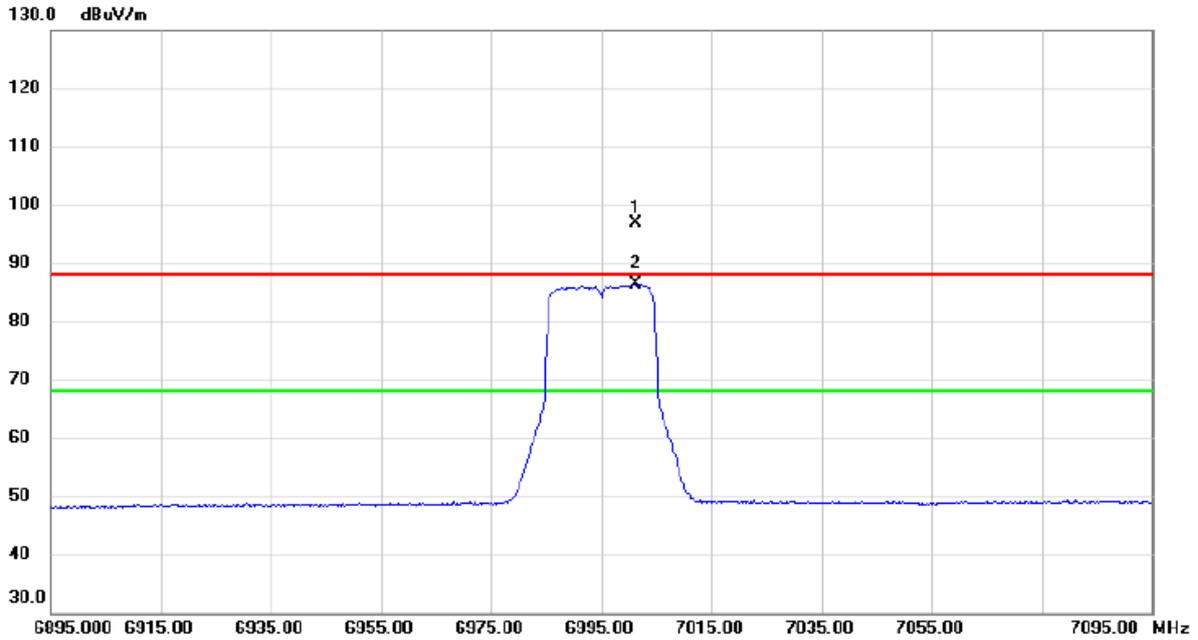
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	7001.400	76.69	20.29	96.98	88.20	8.78	peak	No Limit
2	*	7001.400	66.10	20.29	86.39	68.20	18.19	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 6995 MHz	Polarization	Vertical
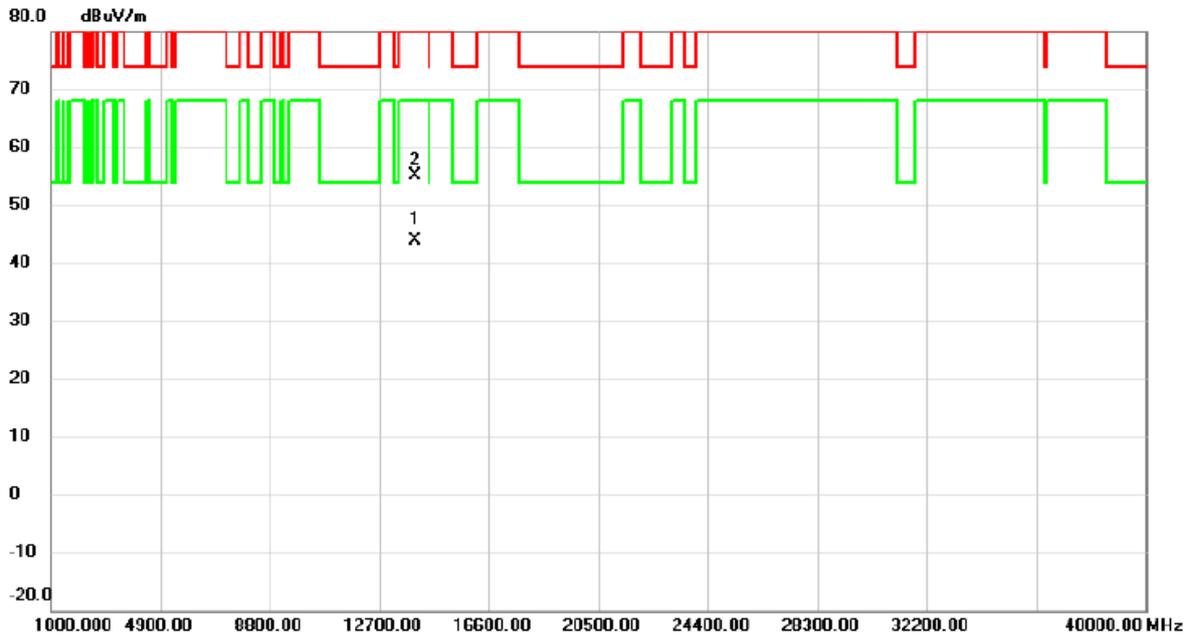
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	13989.570	25.39	18.55	43.94	68.20	-24.26	AVG	
2		13990.565	36.70	18.55	55.25	88.20	-32.95	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE20) Mode 6995 MHz	Polarization	Horizontal
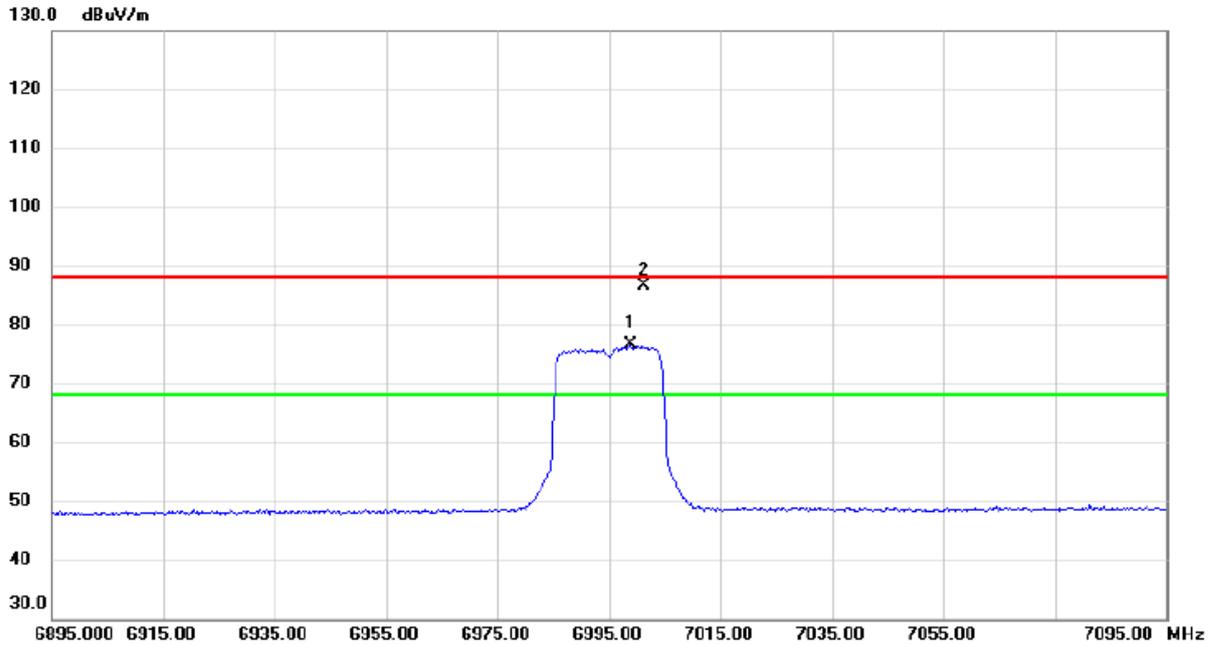
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	6998.800	56.25	20.29	76.54	68.20	8.34	AVG	No Limit
2		7001.200	66.39	20.29	86.68	88.20	-1.52	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE20) Mode 6995 MHz	Polarization	Horizontal
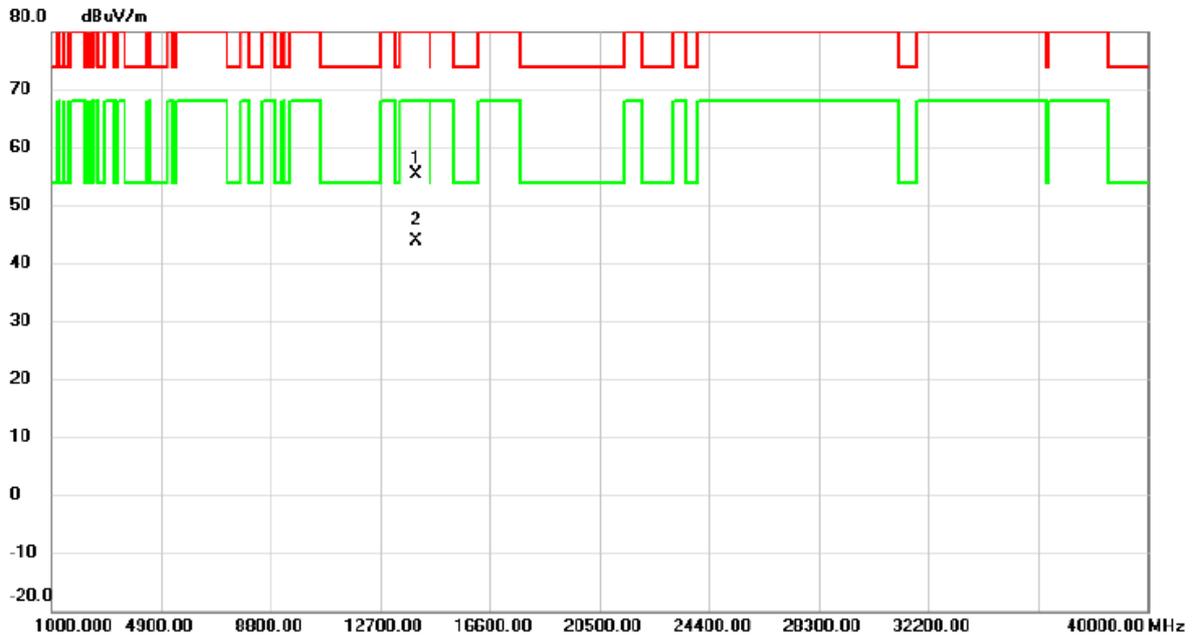
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13989.740	36.91	18.55	55.46	88.20	-32.74	peak	
2	*	13990.400	25.43	18.55	43.98	68.20	-24.22	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7095 MHz	Polarization	Vertical
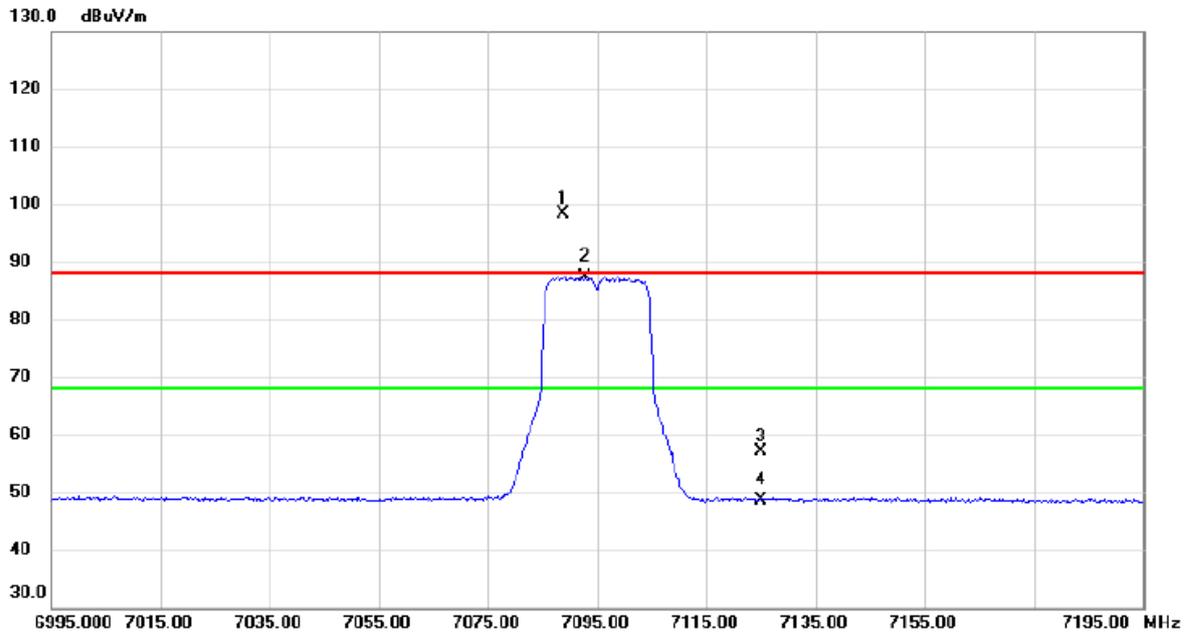
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	7088.800	78.07	20.41	98.48	88.20	10.28	peak	No Limit
2	*	7092.800	67.04	20.41	87.45	68.20	19.25	AVG	No Limit
3		7125.000	36.70	20.46	57.16	88.20	-31.04	peak	
4		7125.000	28.23	20.46	48.69	68.20	-19.51	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE20) Mode 7095 MHz	Polarization	Vertical
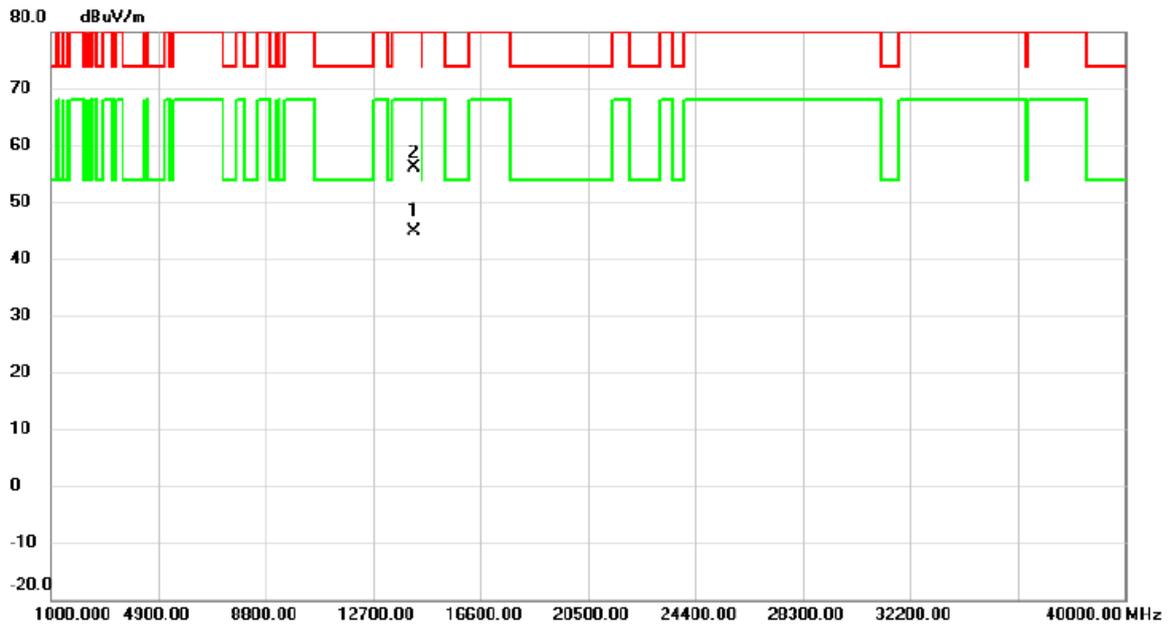
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measurement dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	14187.795	25.96	18.96	44.92	68.20	-23.28	AVG	
2		14191.930	37.20	18.97	56.17	88.20	-32.03	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7095 MHz	Polarization	Horizontal
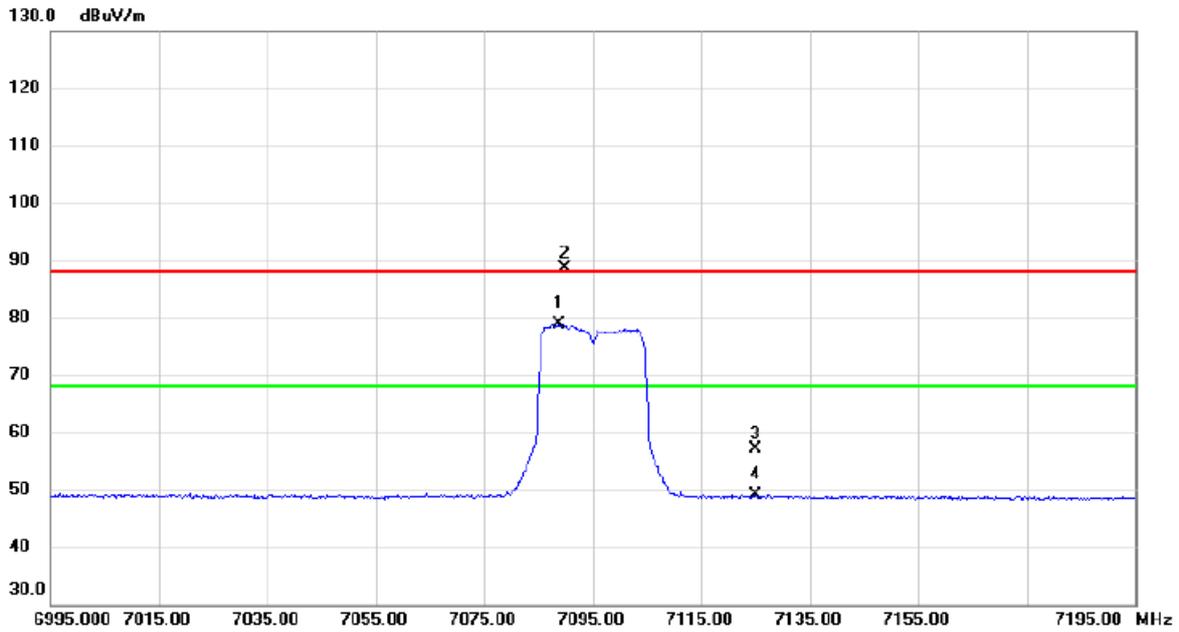
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	7088.800	58.46	20.41	78.87	68.20	10.67	AVG	No Limit
2	X	7089.800	68.27	20.41	88.68	88.20	0.48	peak	No Limit
3		7125.000	36.61	20.46	57.07	88.20	-31.13	peak	
4		7125.000	28.55	20.46	49.01	68.20	-19.19	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7095 MHz	Polarization	Horizontal
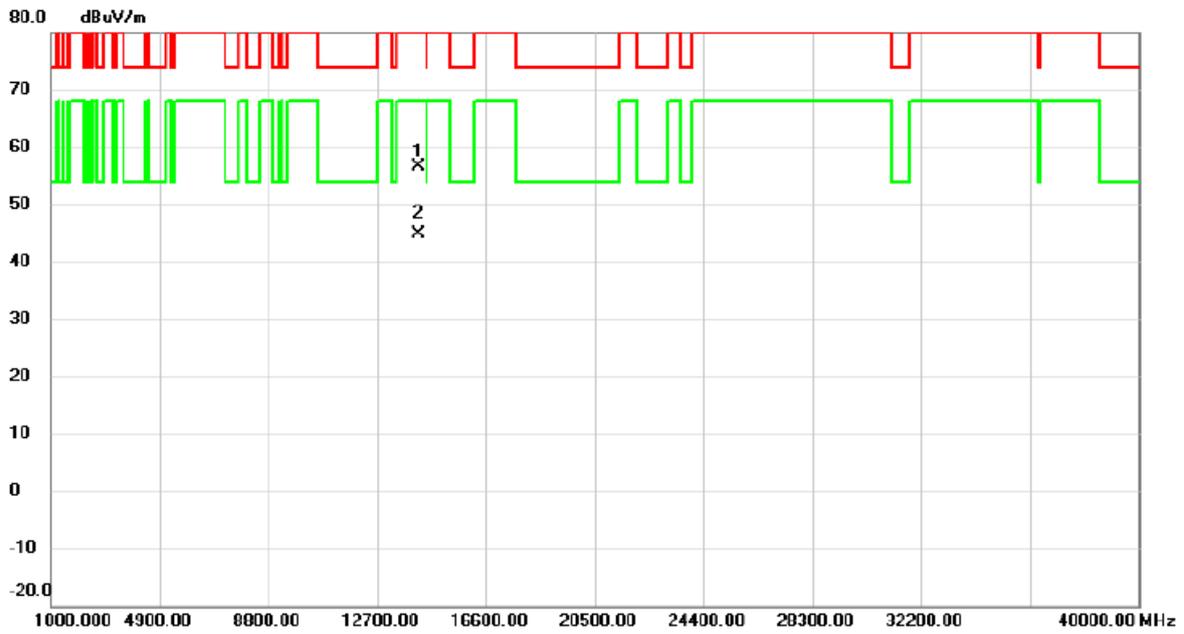
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14188.925	37.59	18.96	56.55	88.20	-31.65	peak	
2	*	14192.325	25.87	18.97	44.84	68.20	-23.36	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7115 MHz	Polarization	Vertical
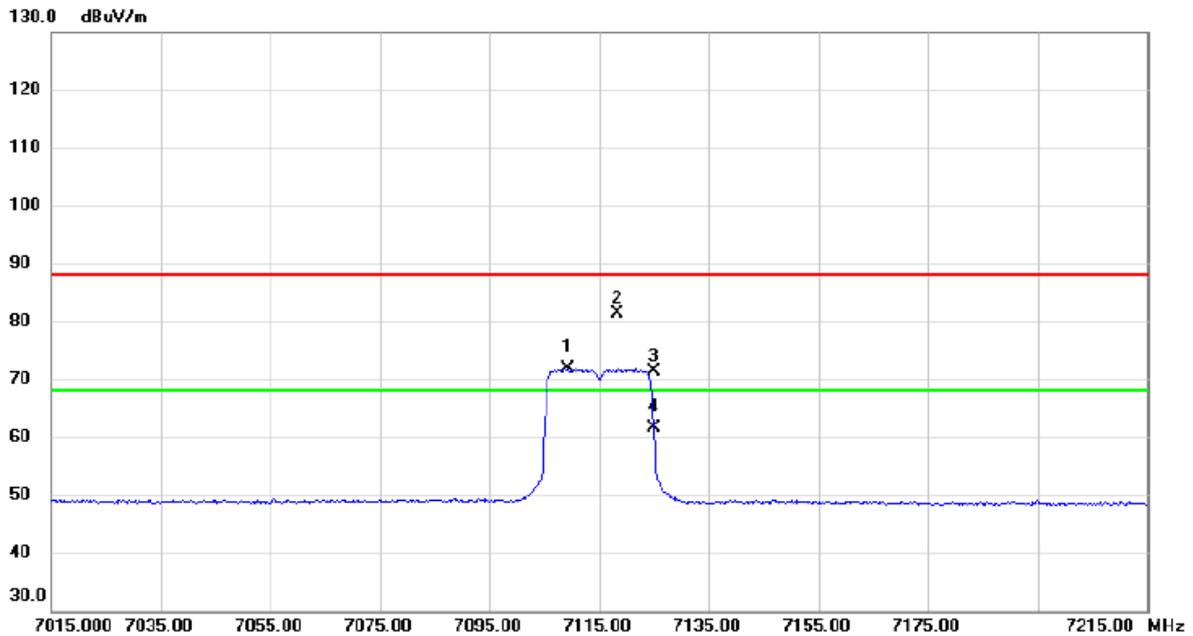
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	7109.200	51.48	20.43	71.91	68.20	3.71	AVG	No Limit
2		7118.400	60.92	20.44	81.36	88.20	-6.84	peak	No Limit
3		7125.000	50.97	20.46	71.43	88.20	-16.77	peak	
4		7125.000	41.09	20.46	61.55	68.20	-6.65	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7115 MHz	Polarization	Vertical
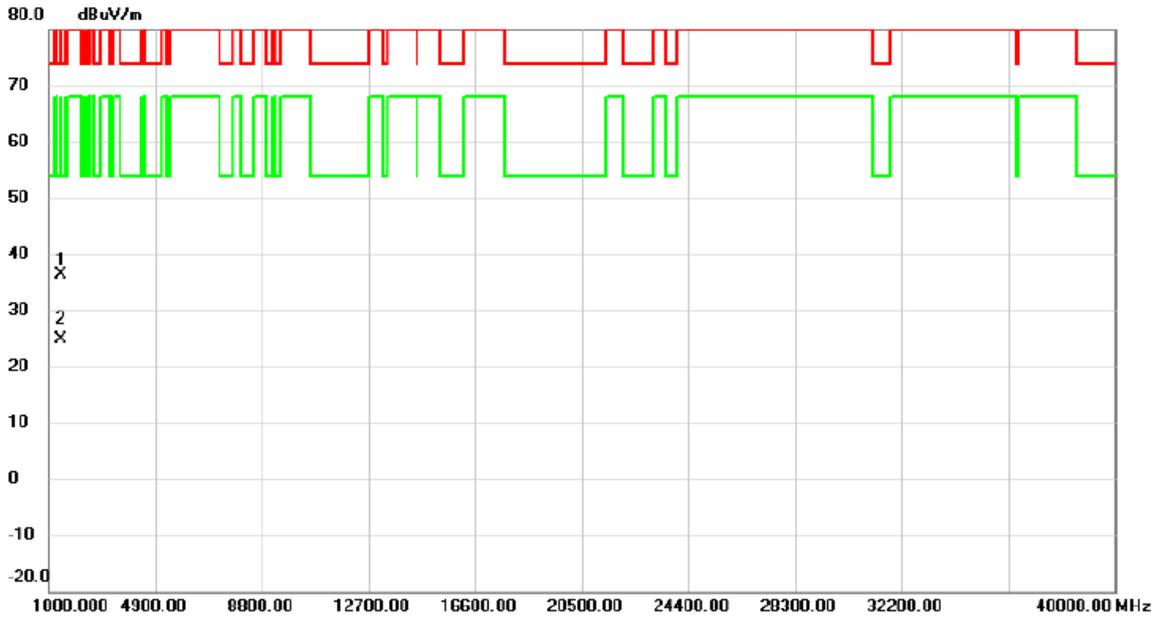
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		1423.730	42.72	-6.29	36.43	74.00	-37.57	peak	
2	*	1424.745	31.23	-6.29	24.94	54.00	-29.06	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7115 MHz	Polarization	Horizontal
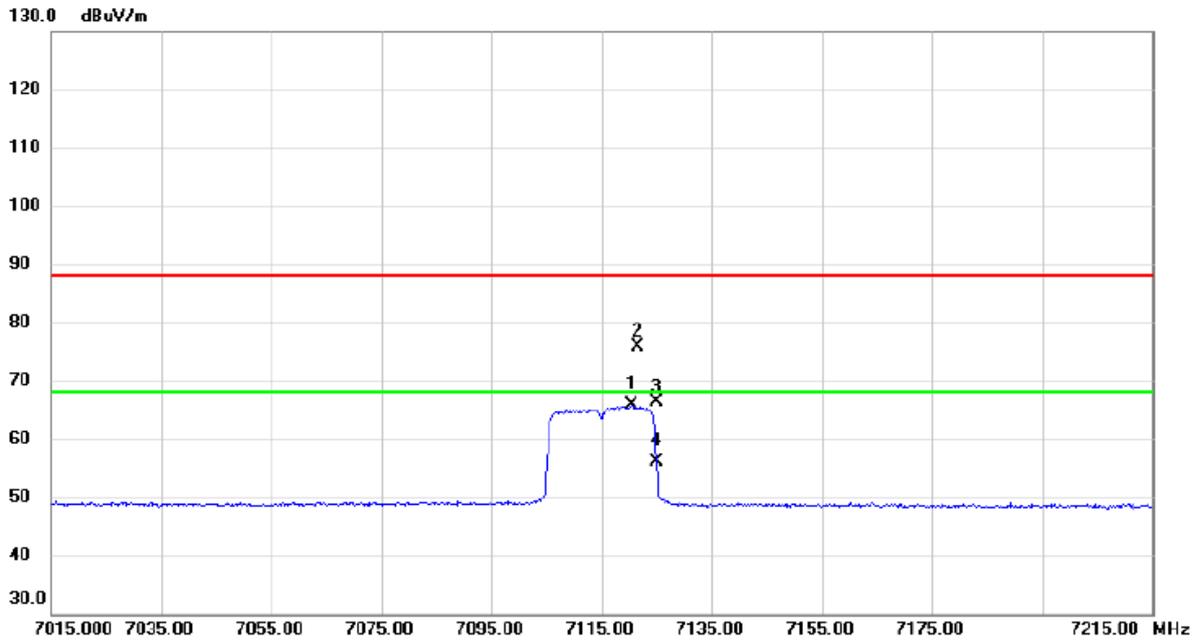
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	7120.400	45.32	20.44	65.76	68.20	-2.44	AVG	No Limit
2		7121.600	55.37	20.44	75.81	88.20	-12.39	peak	No Limit
3		7125.000	45.96	20.46	66.42	88.20	-21.78	peak	
4		7125.000	35.67	20.46	56.13	68.20	-12.07	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE20) Mode 7115 MHz		Polarization	Horizontal
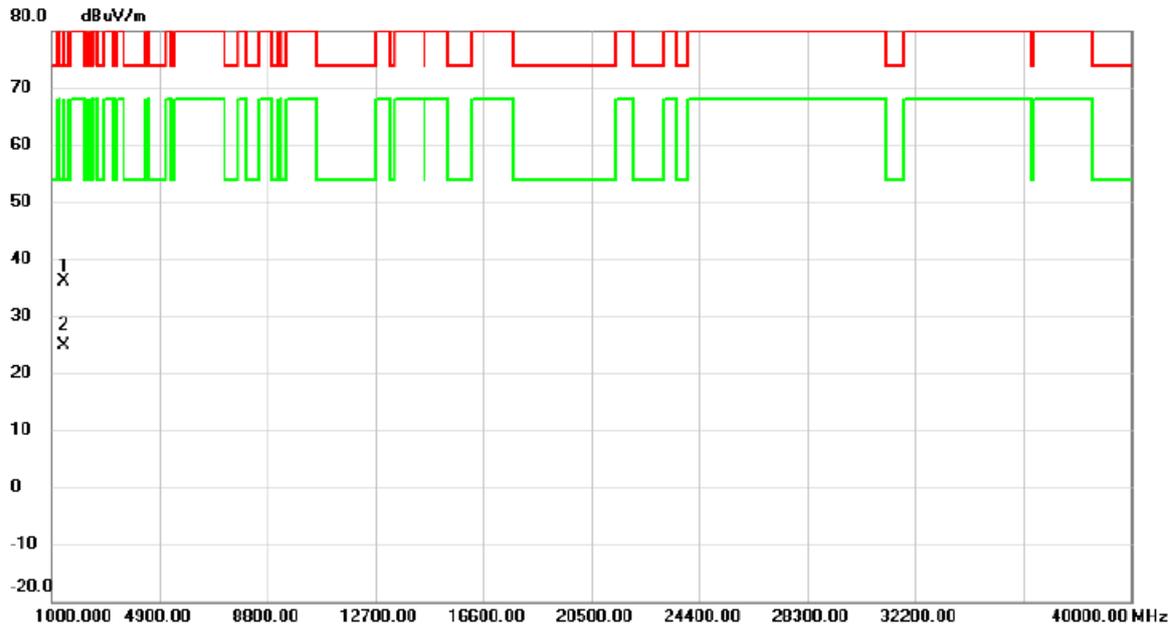
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		1422.635	42.33	-6.29	36.04	74.00	-37.96	peak	
2	*	1423.935	31.13	-6.29	24.84	54.00	-29.16	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 6885 MHz		Polarization	Vertical
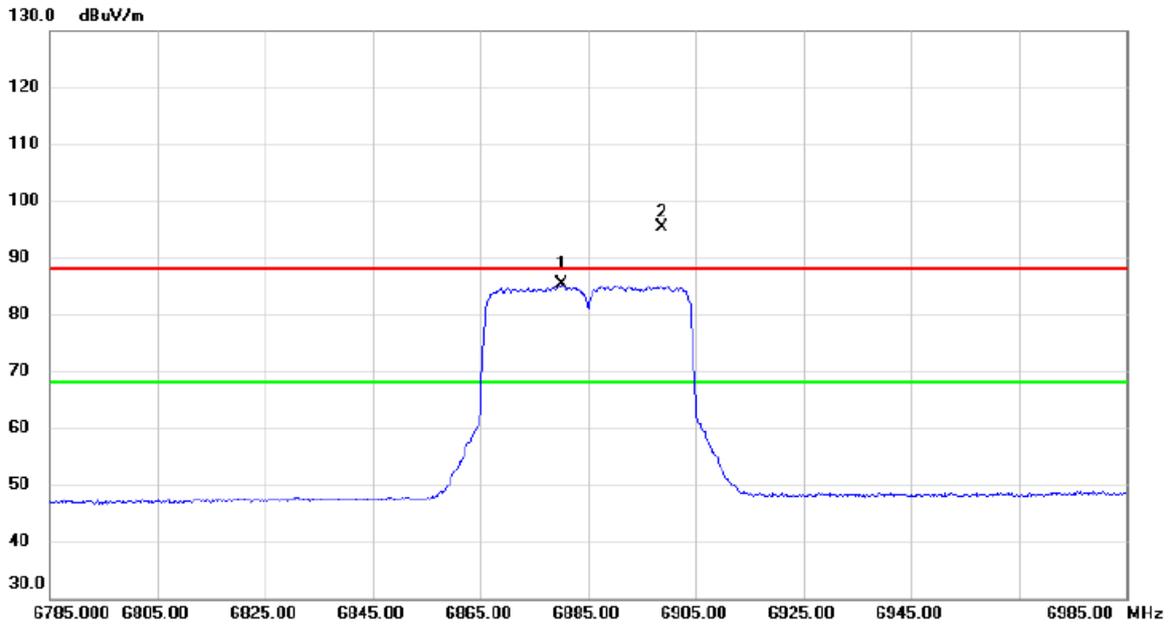
No.	Mk.	Freq.	Reading Level	Correct Factor	Measurement	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	6880.000	65.60	19.72	85.32	68.20	17.12	AVG	No Limit
2	X	6898.600	75.53	19.80	95.33	88.20	7.13	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 6885 MHz	Polarization	Vertical
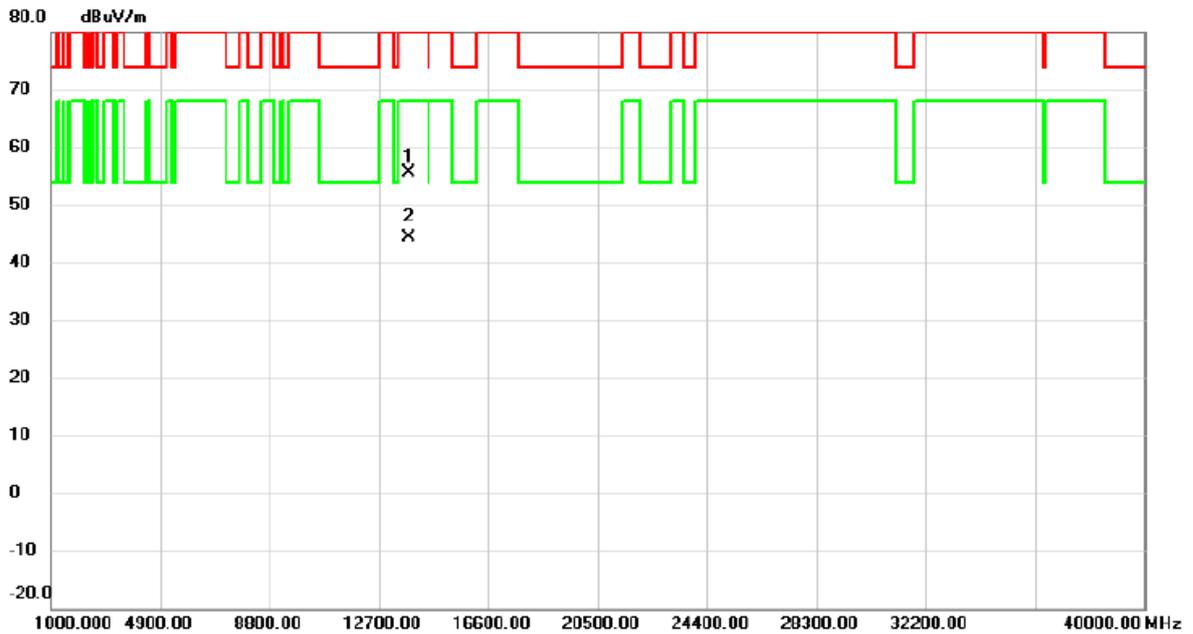
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		13771.120	37.67	18.08	55.75	88.20	-32.45	peak	
2	*	13772.235	26.42	18.08	44.50	68.20	-23.70	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 6885 MHz	Polarization	Horizontal
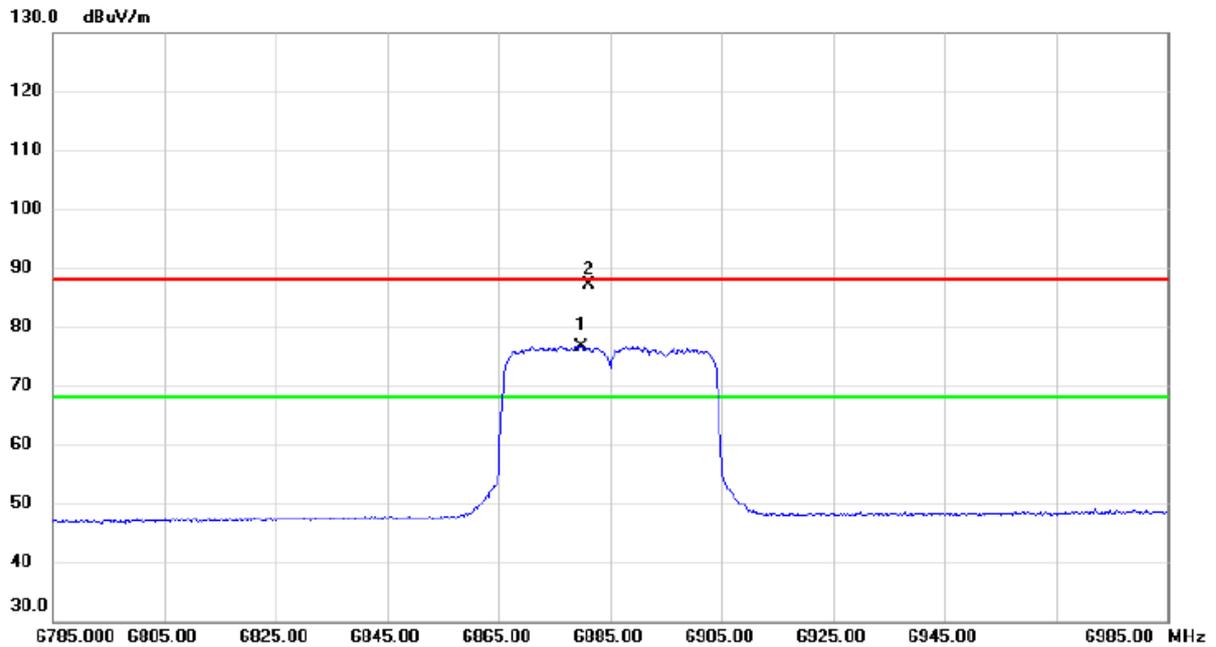
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	6879.800	56.92	19.72	76.64	68.20	8.44	AVG	No Limit
2		6881.000	67.52	19.72	87.24	88.20	-0.96	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE40) Mode 6885 MHz	Polarization	Horizontal
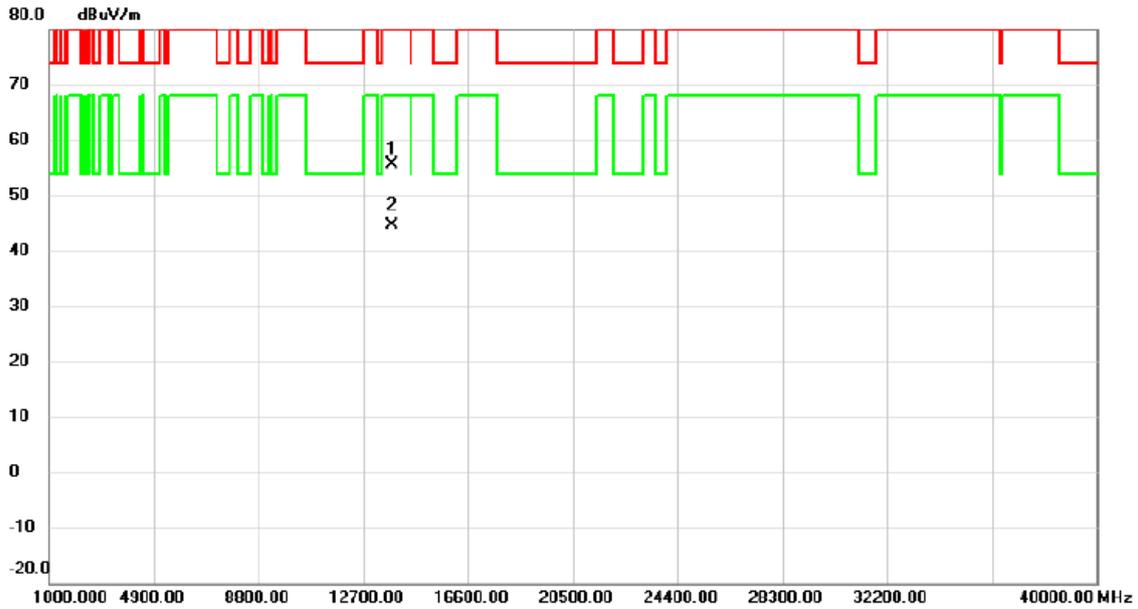
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13770.330	37.56	18.08	55.64	88.20	-32.56	peak	
2	*	13771.140	26.53	18.08	44.61	68.20	-23.59	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 7085 MHz	Polarization	Vertical
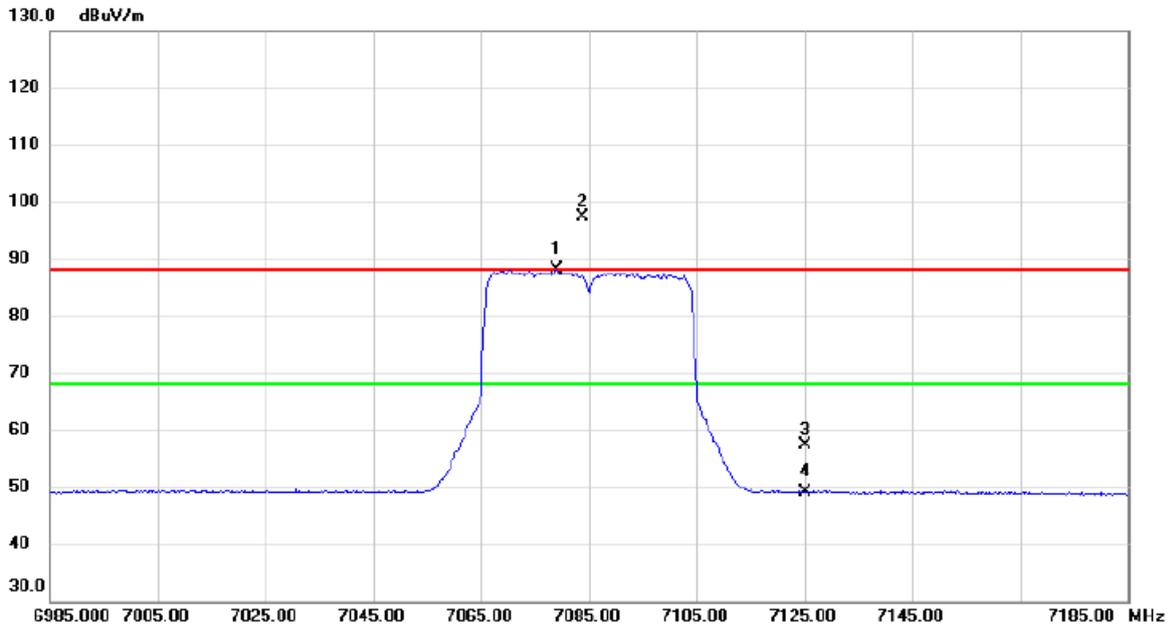
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1	*	7079.000	67.71	20.40	88.11	68.20	19.91	AVG	No Limit
2	X	7083.800	77.08	20.40	97.48	88.20	9.28	peak	No Limit
3		7125.000	36.84	20.46	57.30	88.20	-30.90	peak	
4		7125.000	28.64	20.46	49.10	68.20	-19.10	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 7085 MHz	Polarization	Vertical
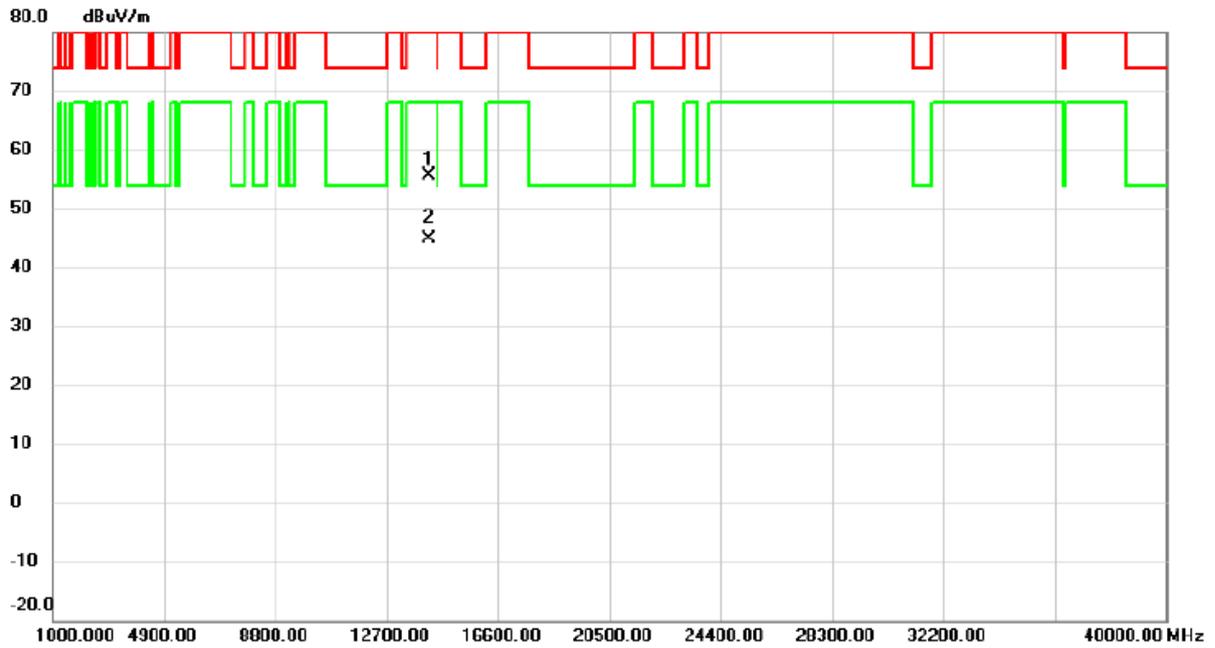
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14167.725	36.73	18.92	55.65	88.20	-32.55	peak	
2	*	14172.230	26.01	18.93	44.94	68.20	-23.26	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 7085 MHz		Polarization	Horizontal
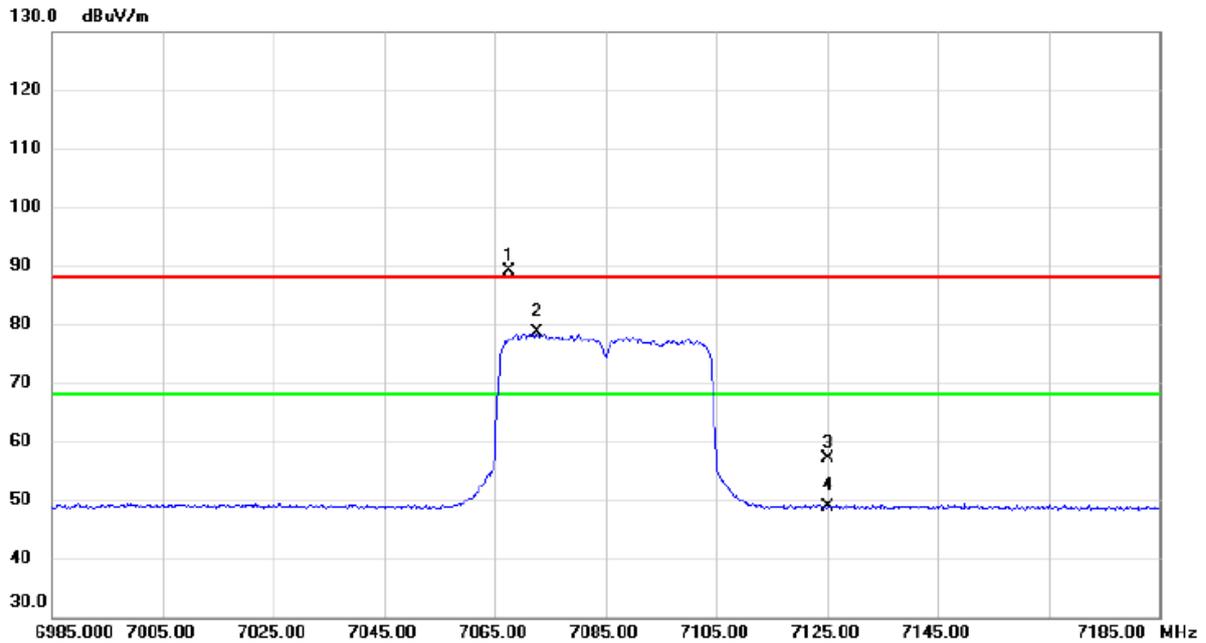
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	7067.600	68.73	20.38	89.11	88.20	0.91	peak	No Limit
2	*	7072.600	58.24	20.38	78.62	68.20	10.42	AVG	No Limit
3		7125.000	36.66	20.46	57.12	88.20	-31.08	peak	
4		7125.000	28.54	20.46	49.00	68.20	-19.20	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE40) Mode 7085 MHz	Polarization	Horizontal
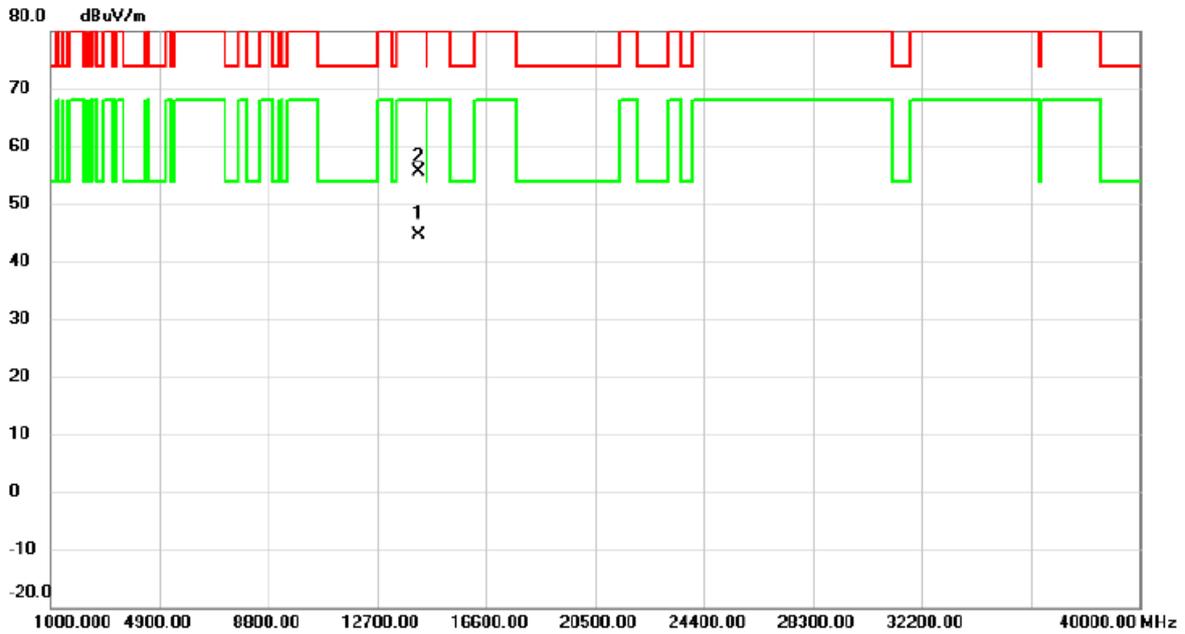
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	14168.190	25.70	18.92	44.62	68.20	-23.58	AVG	
2		14170.340	36.59	18.93	55.52	88.20	-32.68	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE80) Mode 6945 MHz	Polarization	Vertical
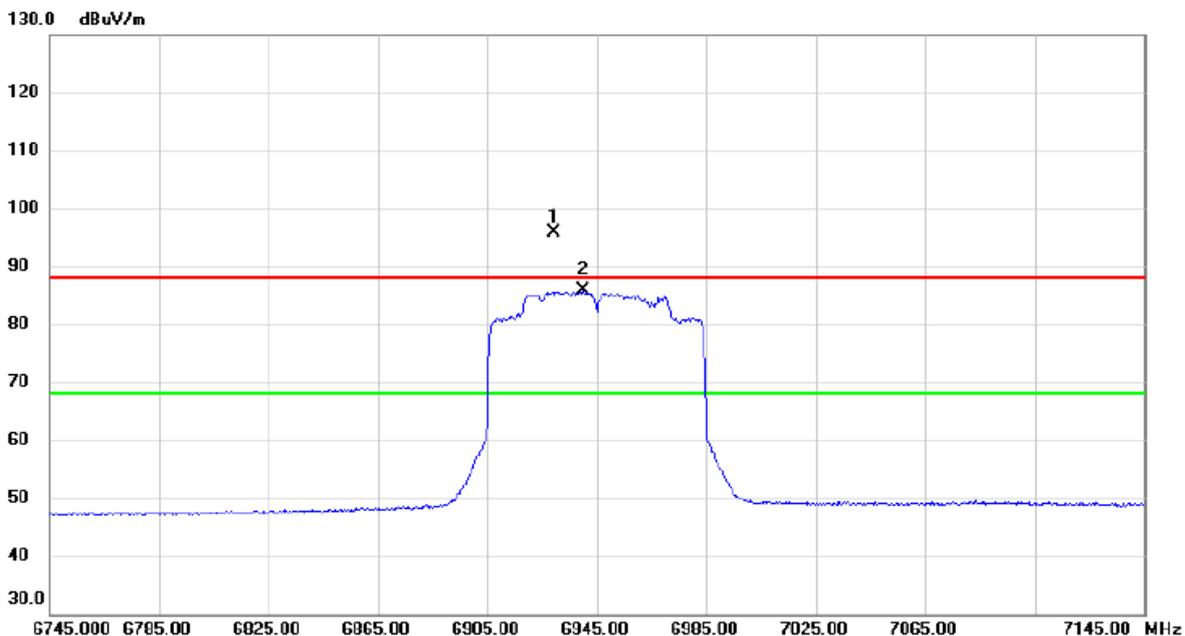
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	6929.400	75.97	19.95	95.92	88.20	7.72	peak	No Limit
2	*	6939.800	65.78	19.99	85.77	68.20	17.57	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE80) Mode 6945 MHz	Polarization	Vertical
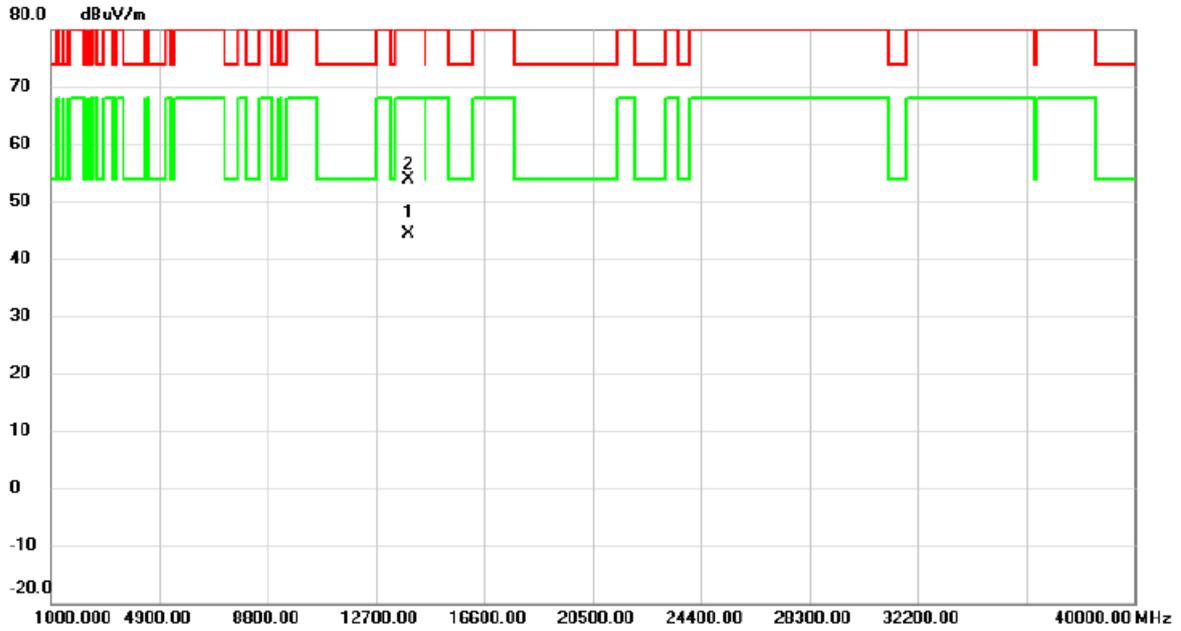
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	13893.540	26.14	18.35	44.49	68.20	-23.71	AVG	
2		13894.060	35.62	18.35	53.97	88.20	-34.23	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE80) Mode 6945 MHz	Polarization	Horizontal
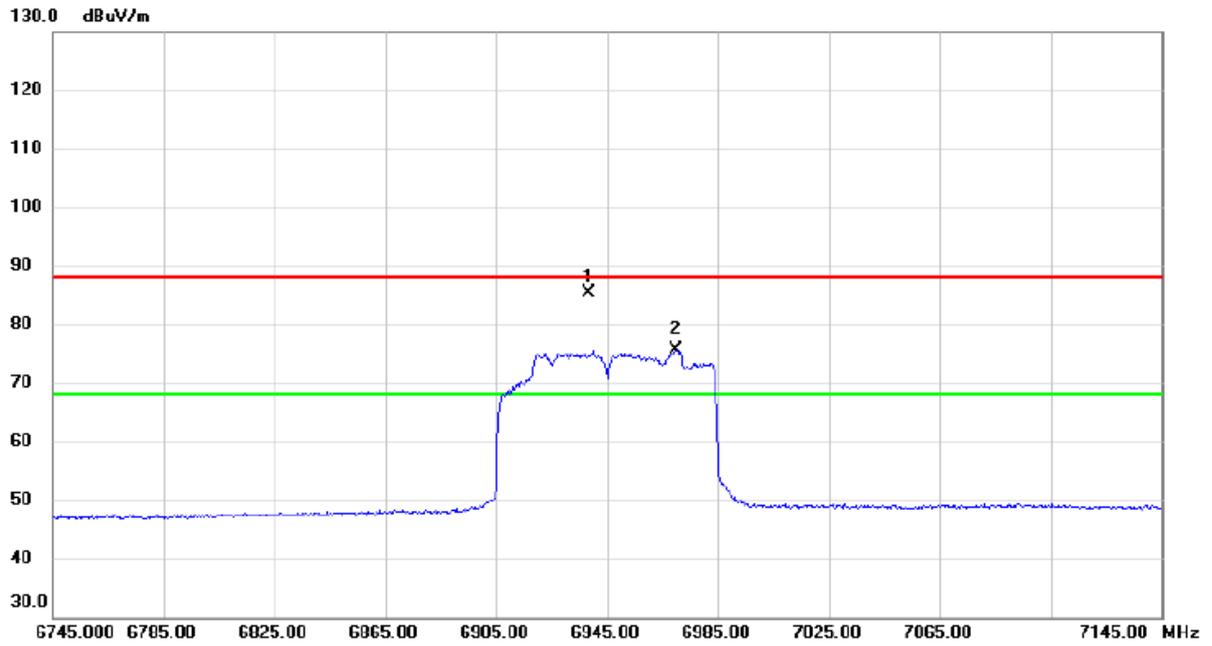
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		6938.200	65.46	19.99	85.45	88.20	-2.75	peak	No Limit
2	*	6969.800	55.59	20.15	75.74	68.20	7.54	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE80) Mode 6945 MHz	Polarization	Horizontal
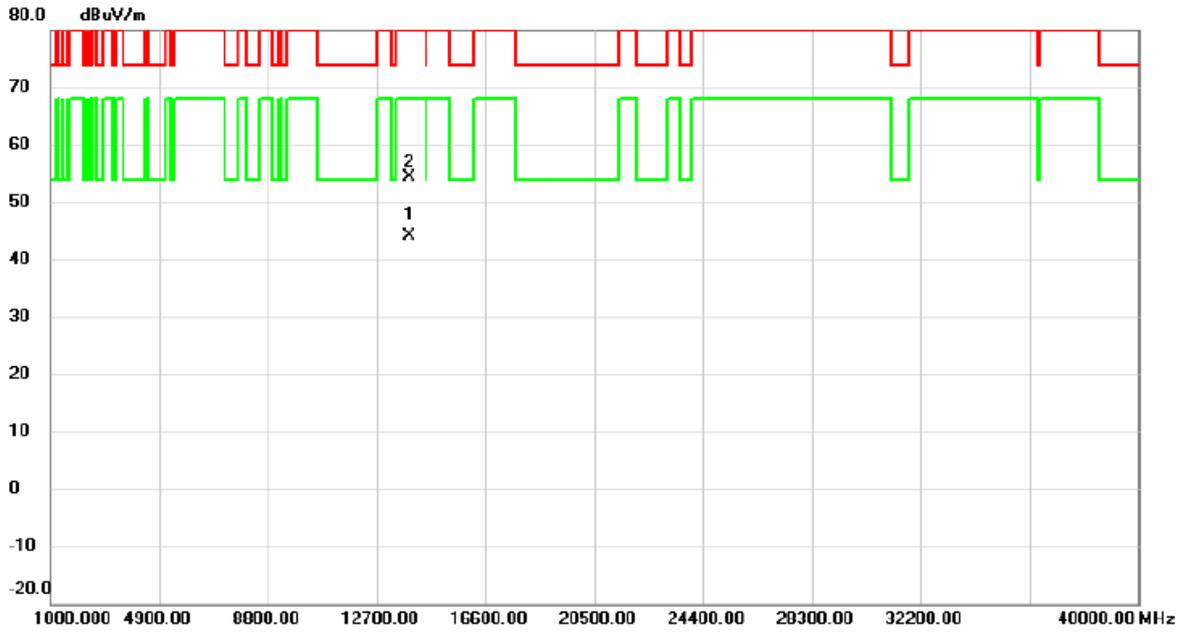
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	13885.280	25.91	18.32	44.23	68.20	-23.97	AVG	
2		13891.840	36.12	18.34	54.46	88.20	-33.74	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE80) Mode 7025 MHz	Polarization	Vertical
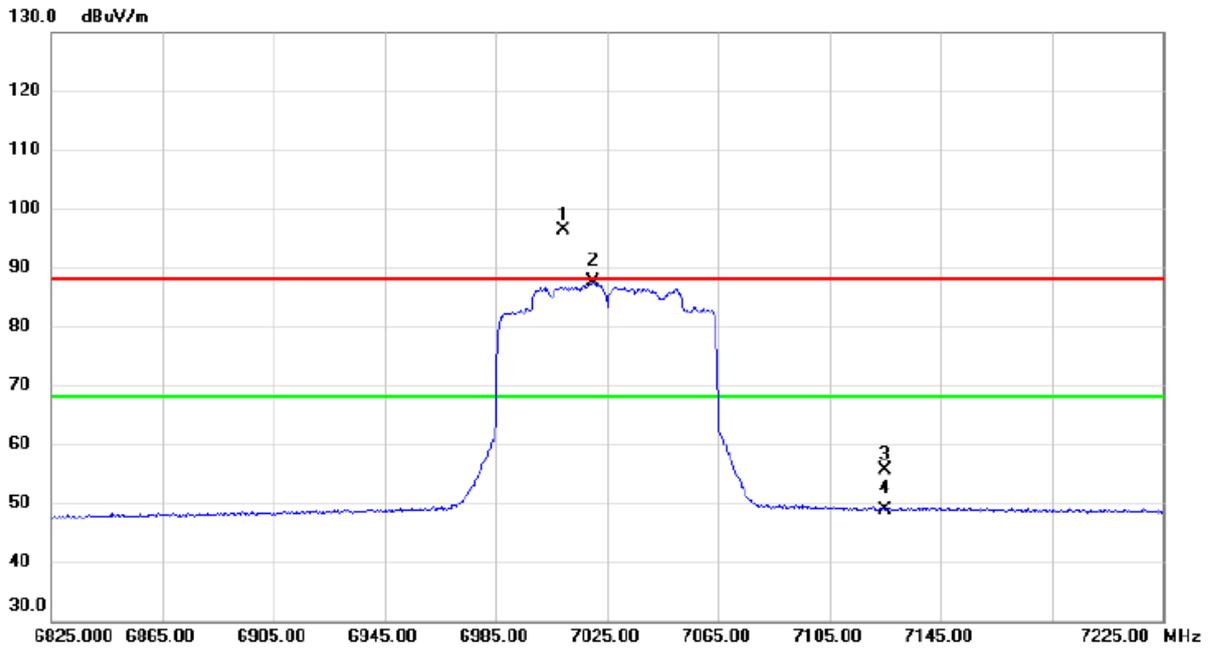
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	7009.400	76.09	20.30	96.39	88.20	8.19	peak	No Limit
2	*	7019.800	67.24	20.31	87.55	68.20	19.35	AVG	No Limit
3		7125.000	35.25	20.46	55.71	88.20	-32.49	peak	
4		7125.000	28.51	20.46	48.97	68.20	-19.23	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE80) Mode 7025 MHz	Polarization	Vertical
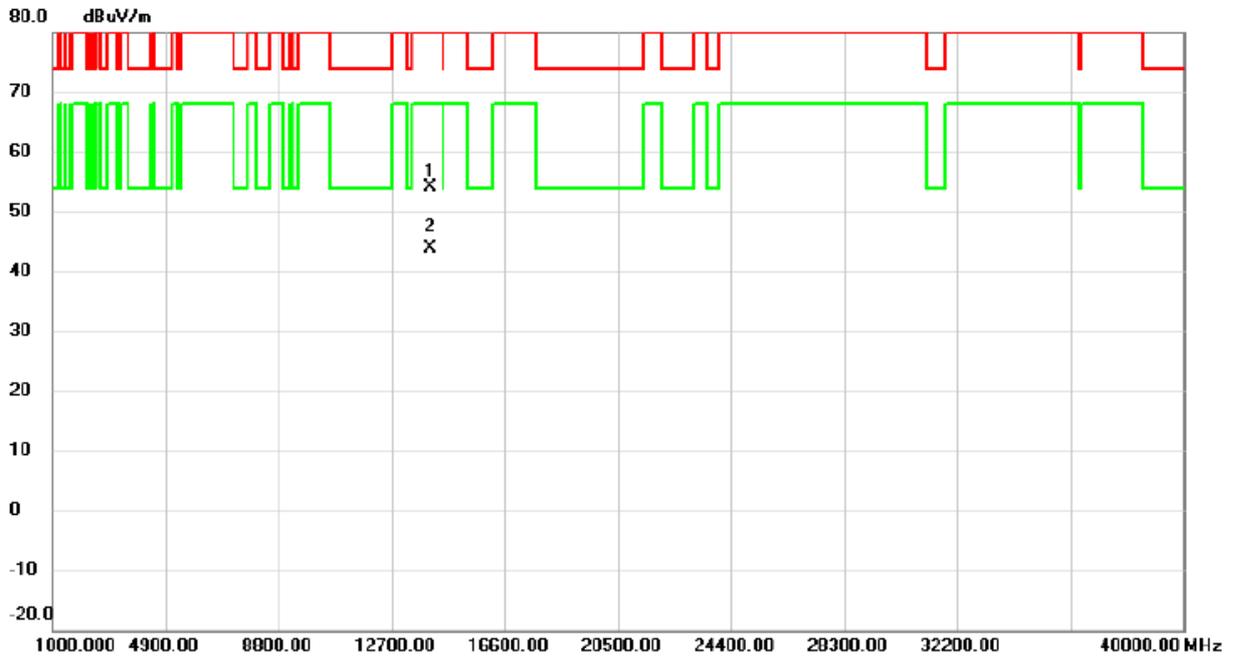
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		14047.040	35.41	18.67	54.08	88.20	-34.12	peak	
2	*	14049.110	25.20	18.68	43.88	68.20	-24.32	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE80) Mode 7025 MHz	Polarization	Horizontal
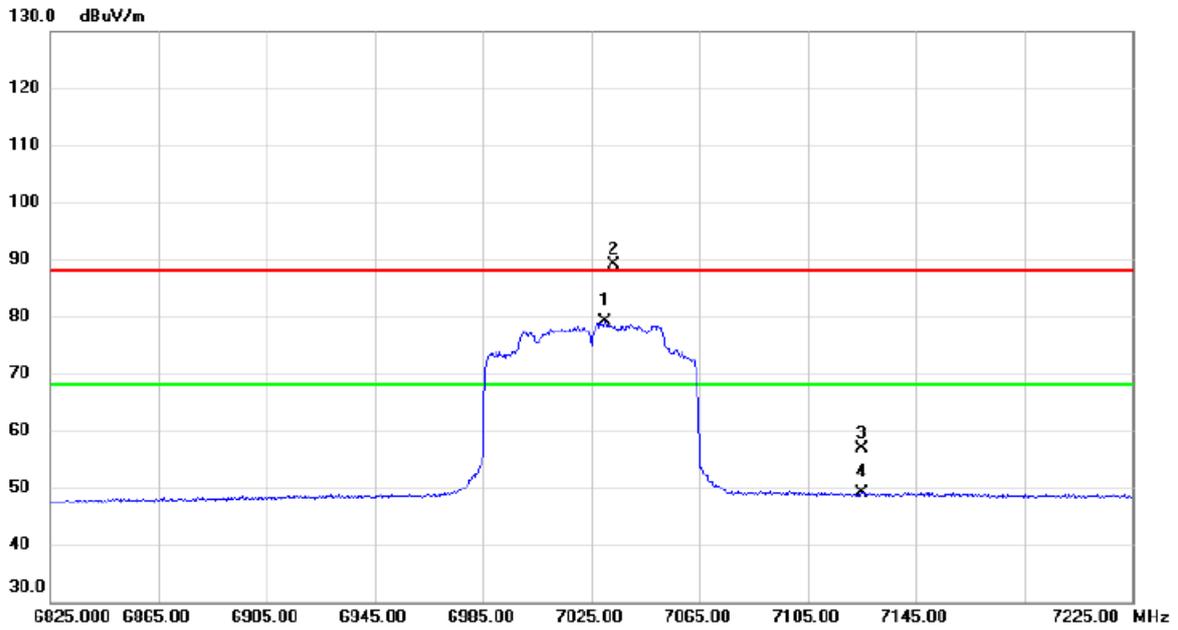
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	7030.200	58.72	20.33	79.05	68.20	10.85	AVG	No Limit
2	X	7033.400	68.86	20.33	89.19	88.20	0.99	peak	No Limit
3		7125.000	36.38	20.46	56.84	88.20	-31.36	peak	
4		7125.000	28.72	20.46	49.18	68.20	-19.02	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE80) Mode 7025 MHz	Polarization	Horizontal
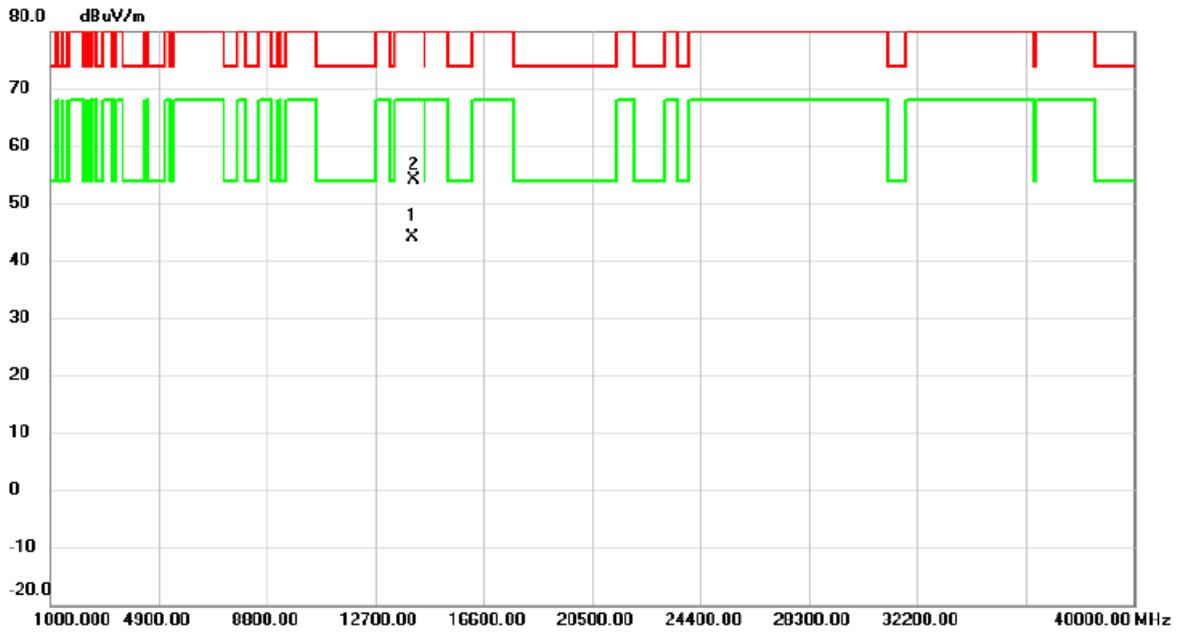
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	14049.200	25.45	18.68	44.13	68.20	-24.07	AVG	
2		14052.430	35.37	18.68	54.05	88.20	-34.15	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-8_TX AX(HE160) Mode 6985 MHz	Polarization	Vertical
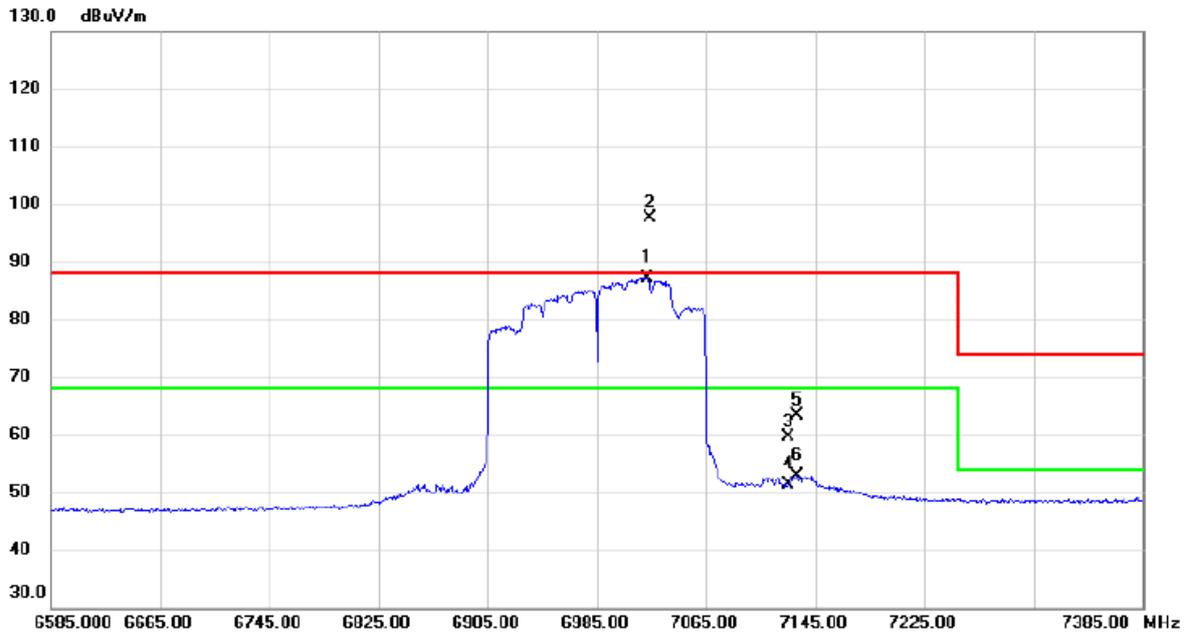
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	7021.800	66.90	20.31	87.21	68.20	19.01	AVG	No Limit
2	X	7024.200	77.41	20.31	97.72	88.20	9.52	peak	No Limit
3		7125.000	39.18	20.46	59.64	88.20	-28.56	peak	
4		7125.000	30.94	20.46	51.40	68.20	-16.80	AVG	
5		7132.000	42.81	20.46	63.27	88.20	-24.93	peak	
6		7132.200	32.54	20.46	53.00	68.20	-15.20	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE160) Mode 6985 MHz	Polarization	Vertical
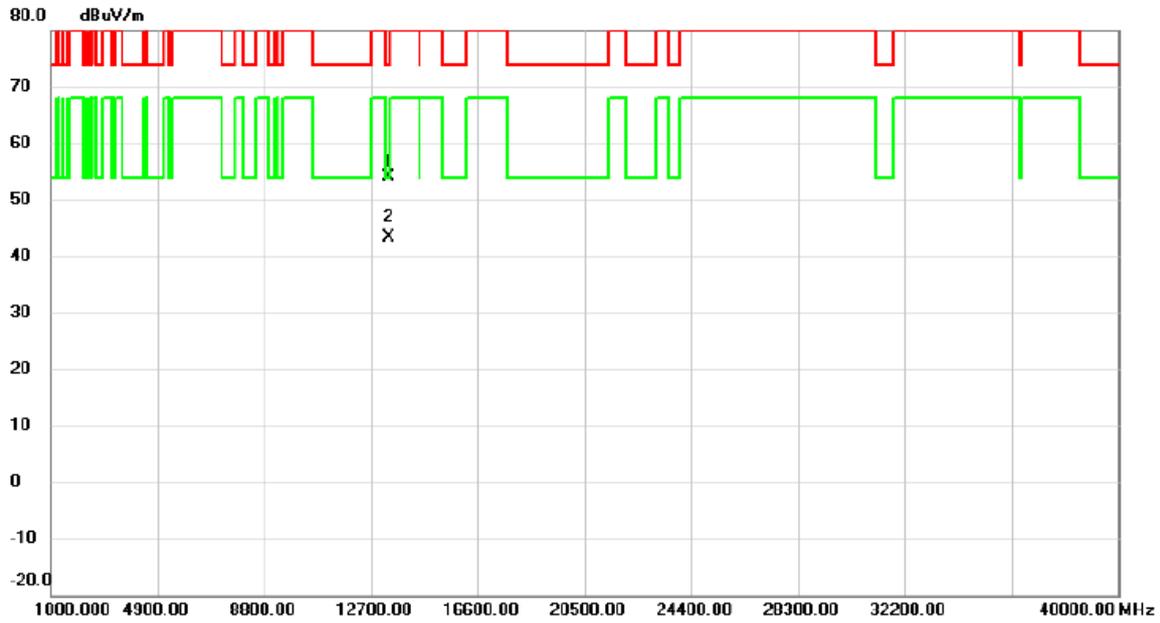
No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		13325.720	36.89	17.19	54.08	74.00	-19.92	peak	
2	*	13327.800	26.20	17.19	43.39	54.00	-10.61	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE160) Mode 6985 MHz	Polarization	Horizontal
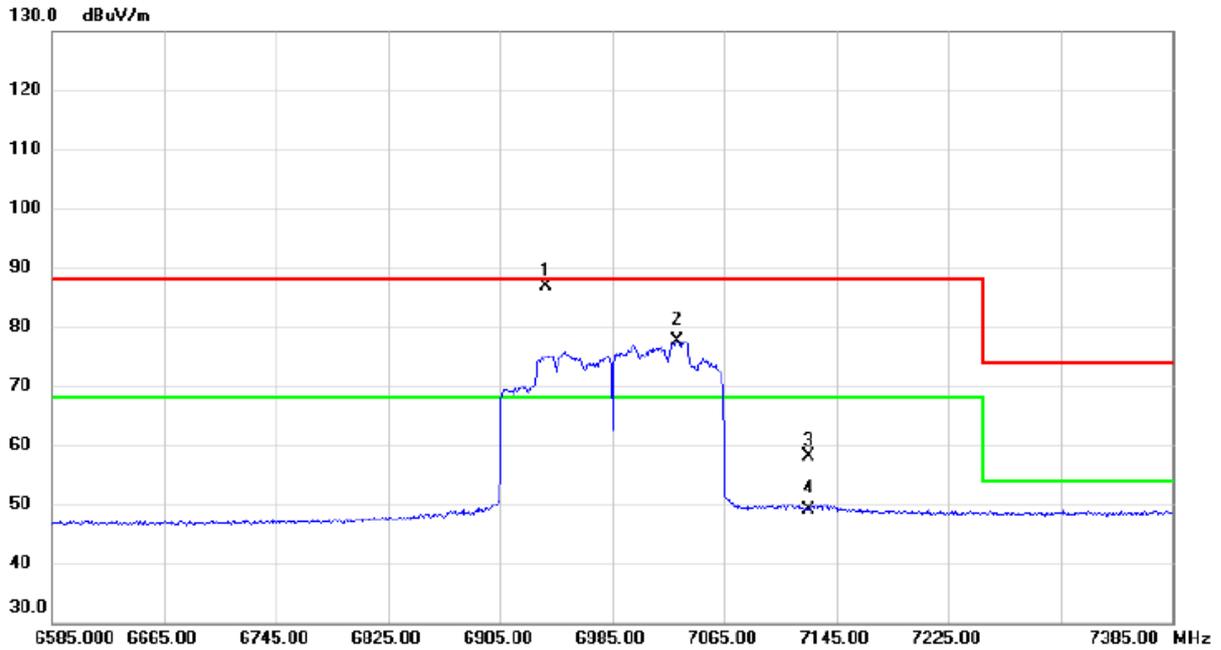
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin	Detector	Comment
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB		
1		6937.000	66.83	19.98	86.81	88.20	-1.39	peak	No Limit
2	*	7031.400	57.23	20.33	77.56	68.20	9.36	AVG	No Limit
3		7125.000	37.59	20.46	58.05	88.20	-30.15	peak	
4		7125.000	28.70	20.46	49.16	68.20	-19.04	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-8_TX AX(HE160) Mode 6985 MHz	Polarization	Horizontal
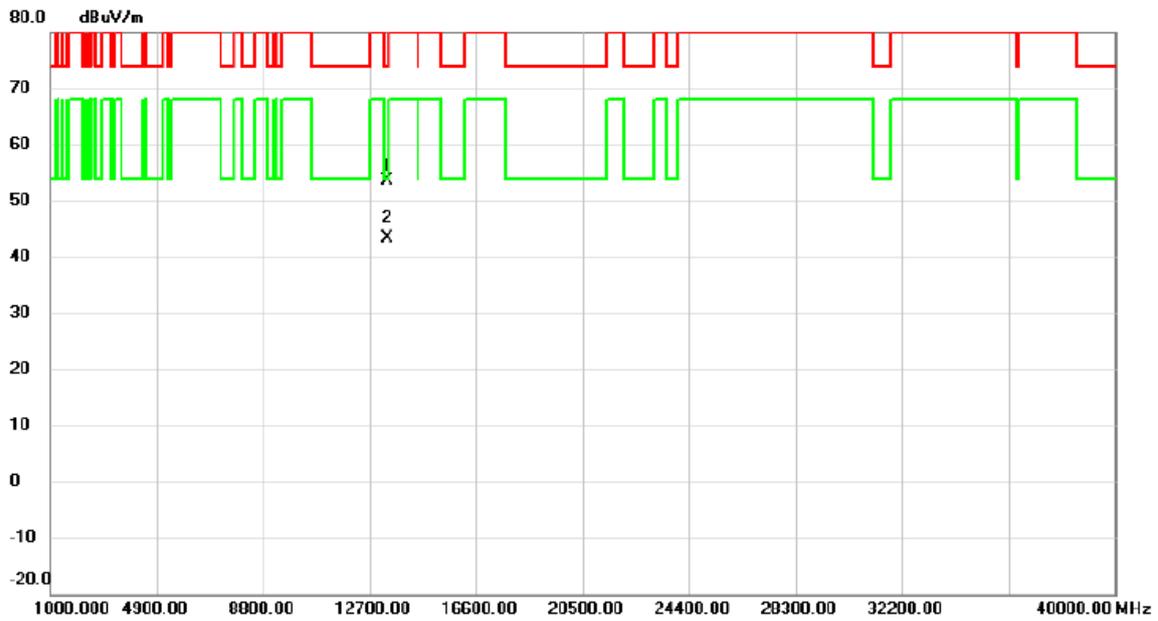
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13327.040	36.33	17.19	53.52	74.00	-20.48	peak	
2	*	13329.260	26.11	17.19	43.30	54.00	-10.70	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

| Test Mode	UNII-7+UNII-8_TX A Mode 6875 MHz		Polarization	Vertical
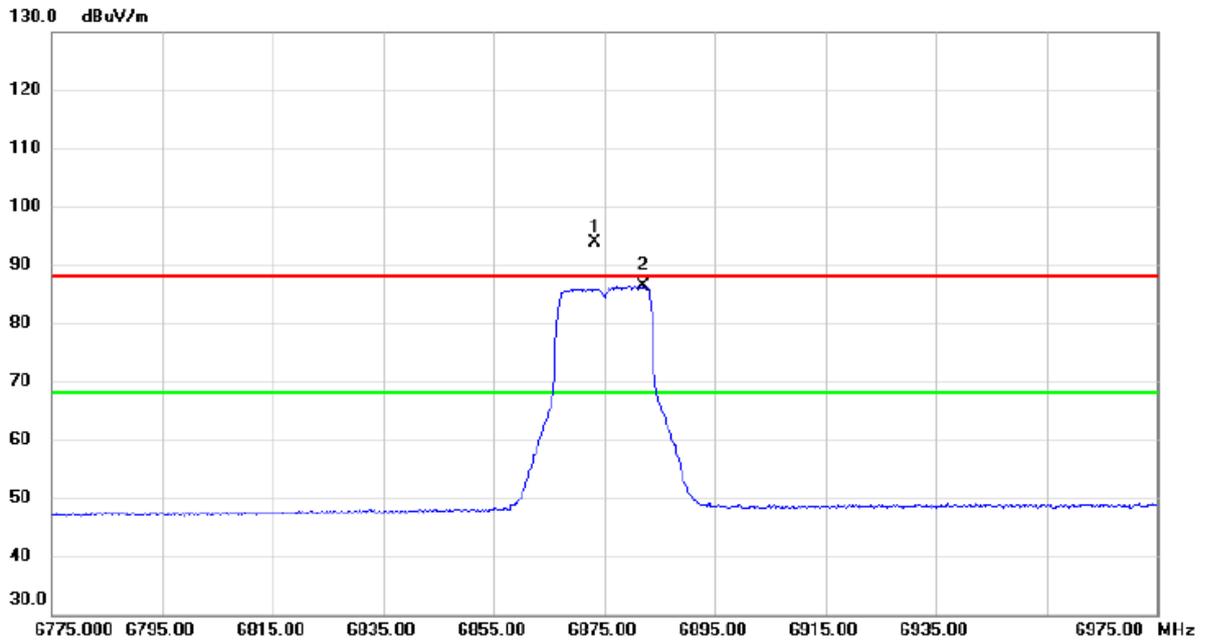
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	6873.400	74.22	19.68	93.90	88.20	5.70	peak	No Limit
2	*	6882.200	66.63	19.73	86.36	68.20	18.16	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX A Mode 6875 MHz		Polarization	Vertical
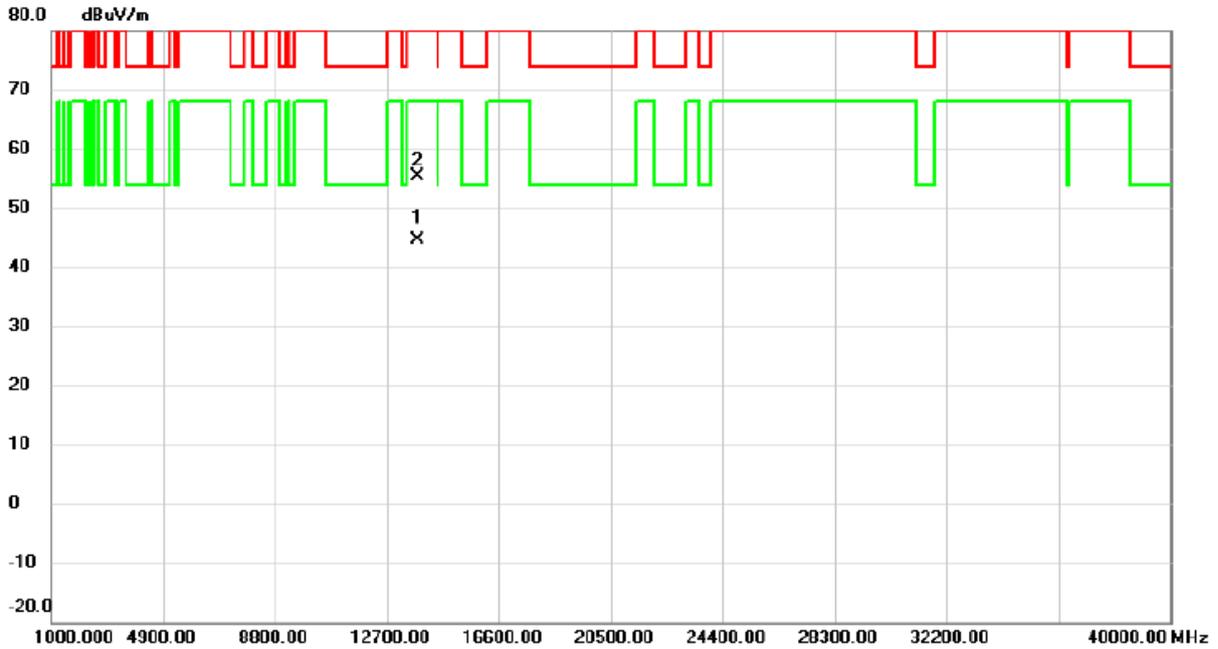
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	13745.700	26.65	18.02	44.67	68.20	-23.53	AVG	
2		13754.810	37.34	18.04	55.38	88.20	-32.82	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX A Mode 6875 MHz	Polarization	Horizontal
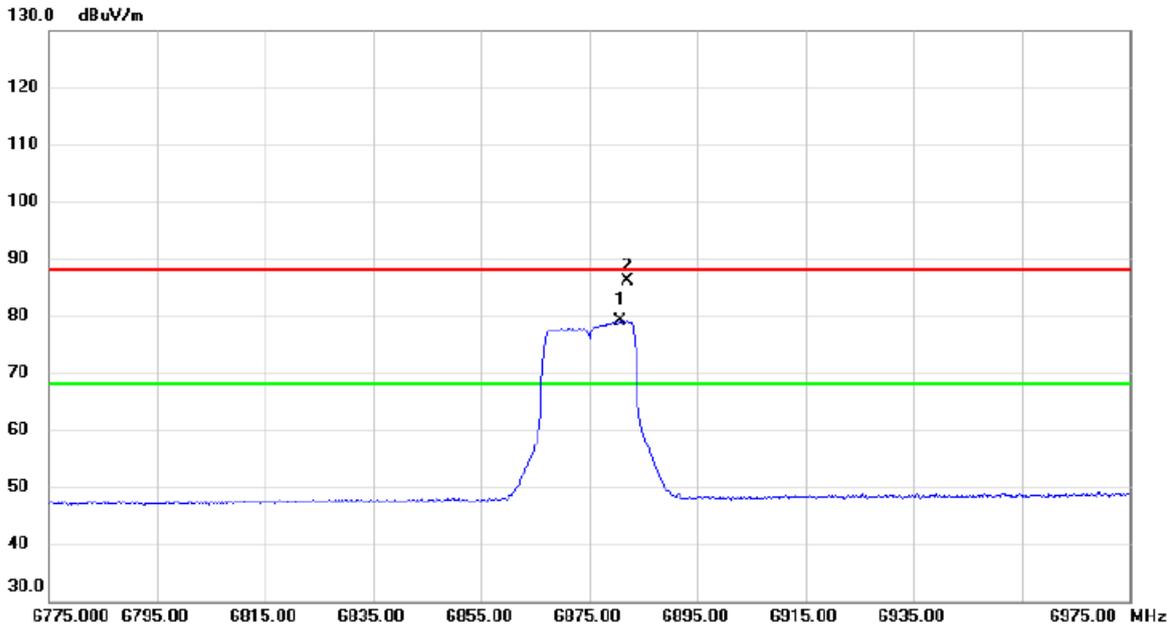
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	6880.800	59.34	19.72	79.06	68.20	10.86	AVG	No Limit
2		6882.200	66.30	19.73	86.03	88.20	-2.17	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX A Mode 6875 MHz		Polarization	Horizontal
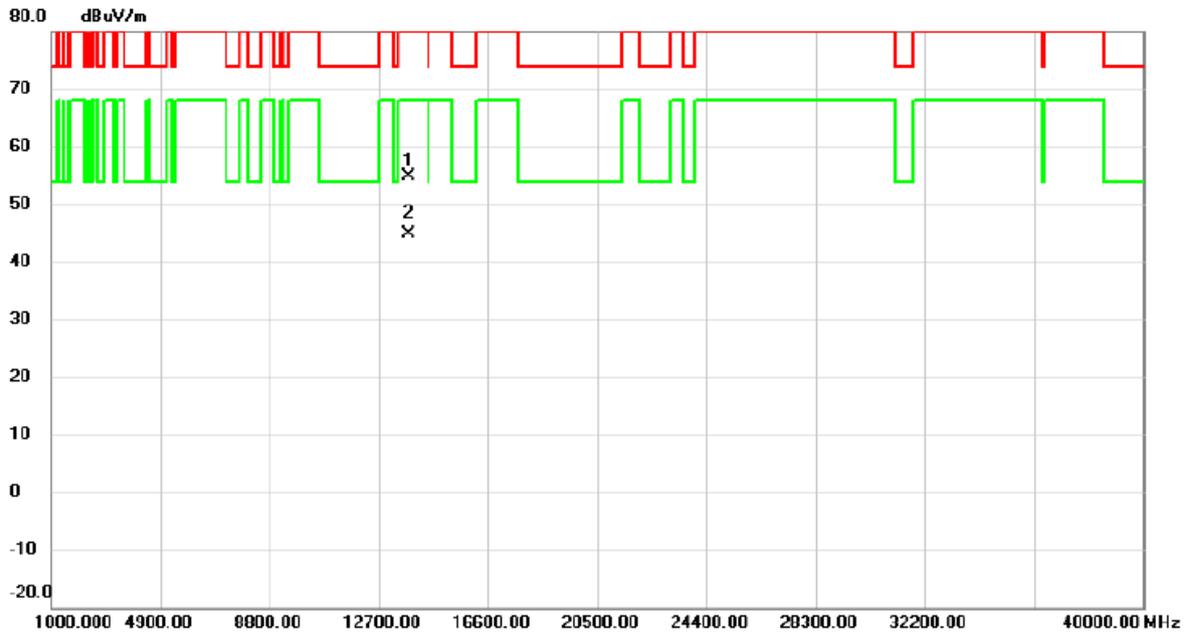
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1		13748.440	36.79	18.02	54.81	88.20	-33.39	peak	
2	*	13750.480	26.73	18.04	44.77	68.20	-23.43	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX AX(HE20) Mode 6875 MHz	Polarization	Vertical
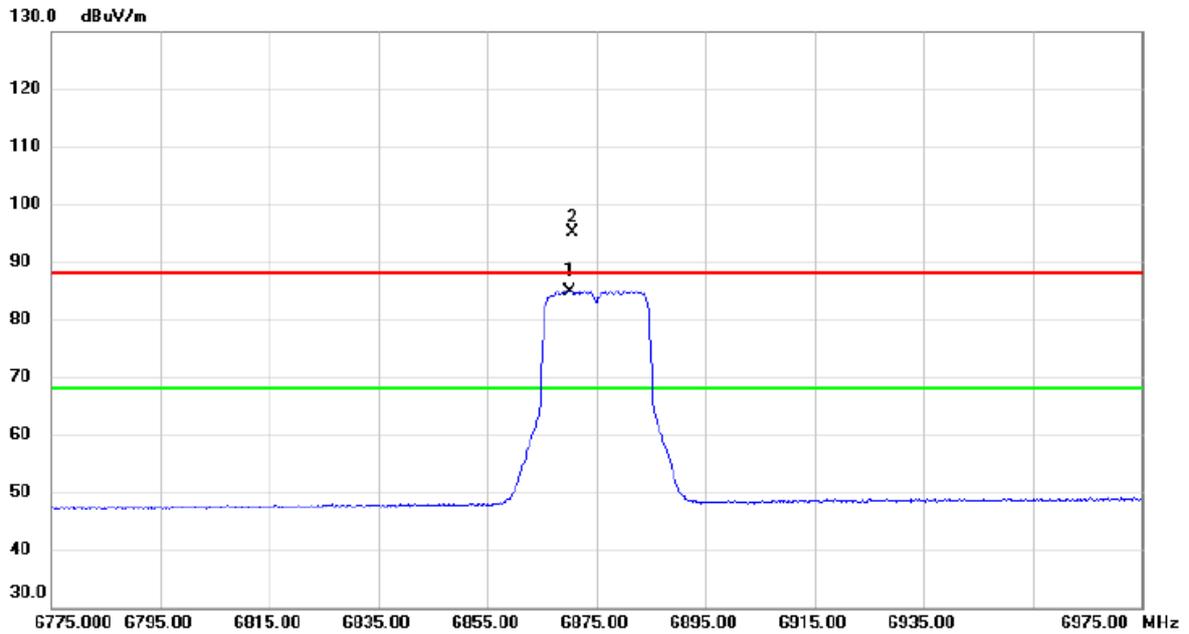
| No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure-ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1	*	6870.200	65.25	19.67	84.92	68.20	16.72	AVG	No Limit
2	X	6870.600	75.50	19.67	95.17	88.20	6.97	peak	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX AX(HE20) Mode 6875 MHz	Polarization	Vertical
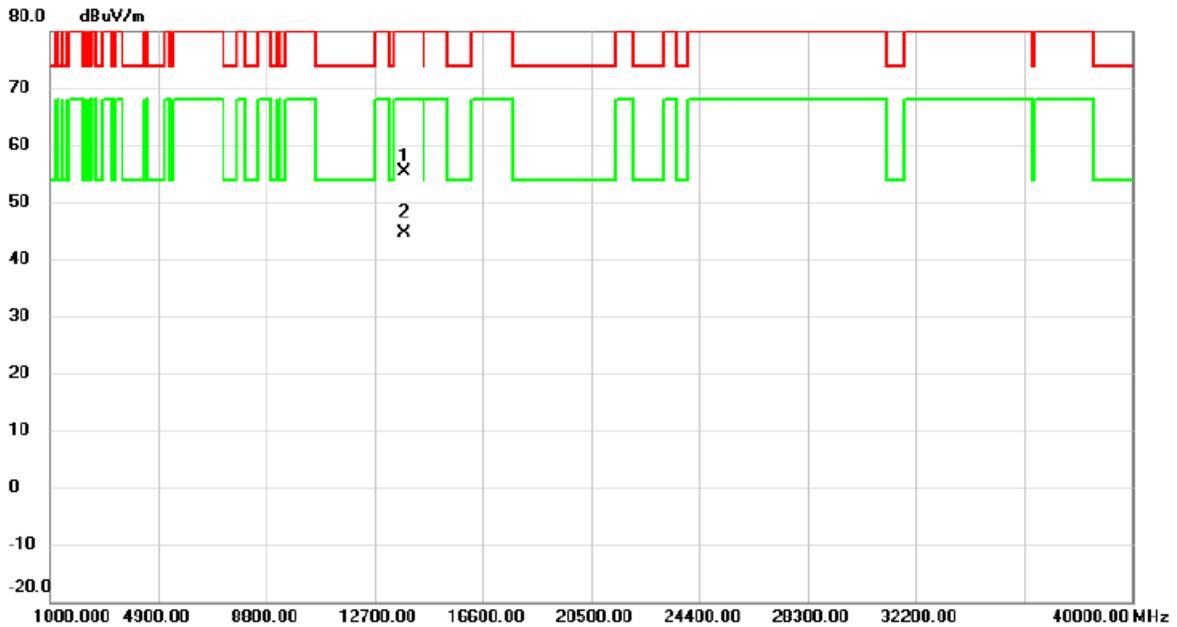
| No.	Mk.	Freq. MHz	Reading Level dBuV	Correct Factor dB	Measure- ment dBuV/m	Limit dBuV/m	Margin dB	Detector	Comment
1		13748.335	37.37	18.02	55.39	88.20	-32.81	peak	
2	*	13750.960	26.61	18.04	44.65	68.20	-23.55	AVG	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX AX(HE20) Mode 6875 MHz	Polarization	Horizontal
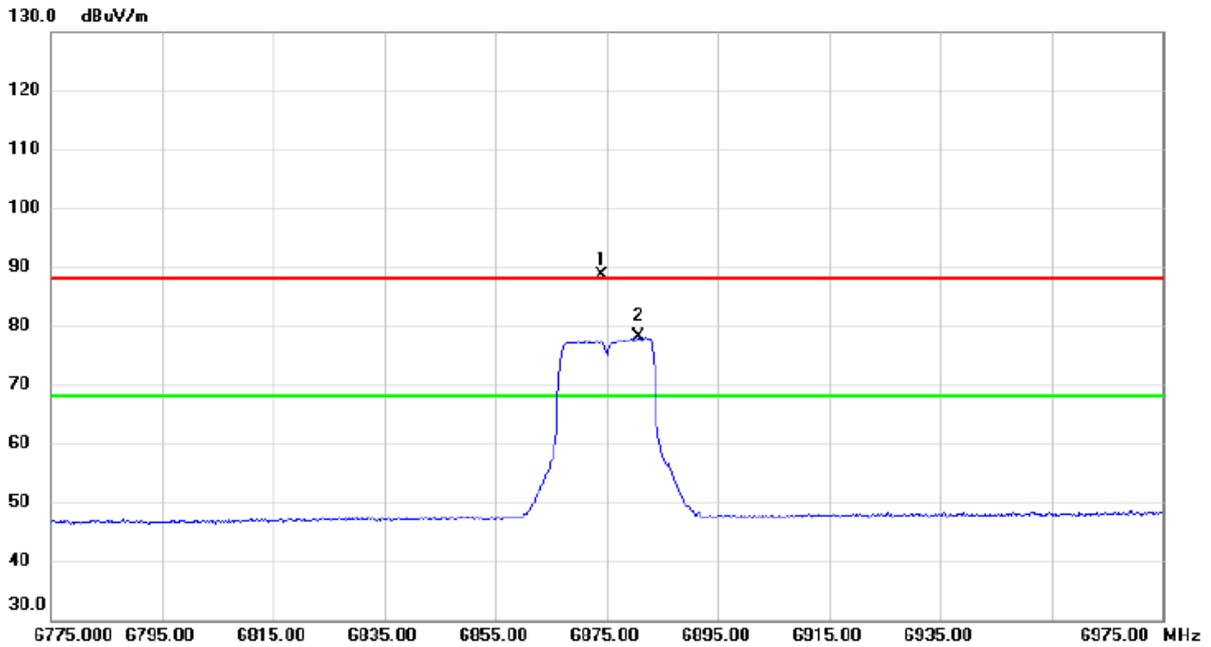
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	X	6874.200	68.95	19.69	88.64	88.20	0.44	peak	No Limit
2	*	6880.800	58.34	19.72	78.06	68.20	9.86	AVG	No Limit

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

Test Mode	UNII-7+UNII-8_TX AX(HE20) Mode 6875 MHz	Polarization	Horizontal
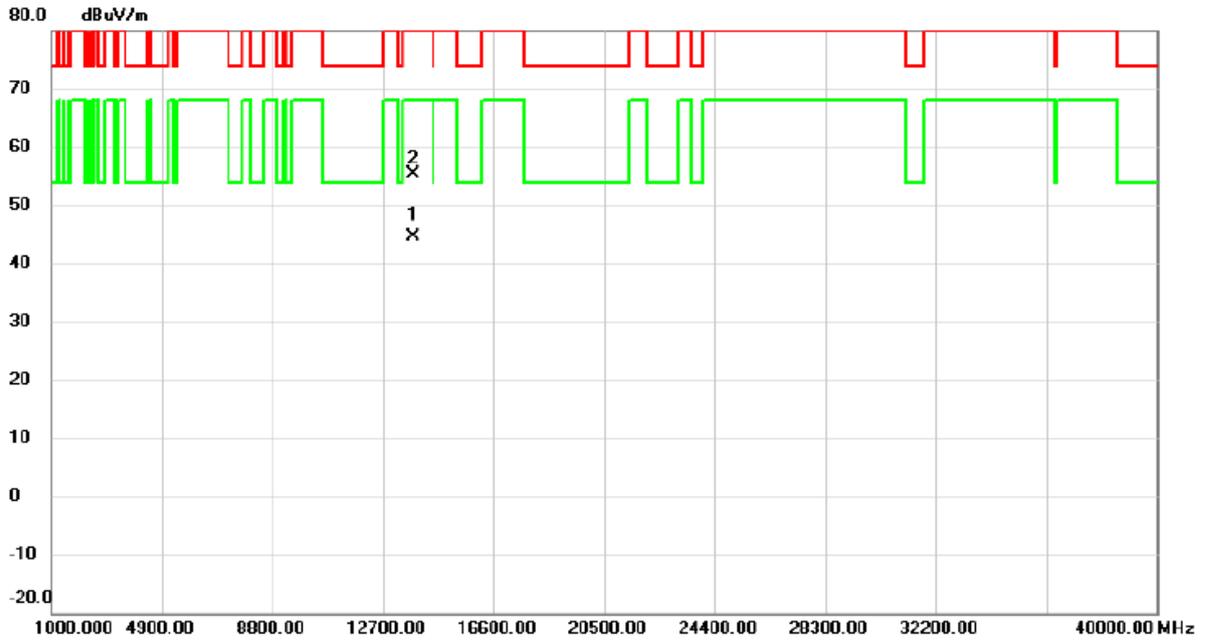
No.	Mk.	Freq.	Reading Level	Correct Factor	Measure-ment	Limit	Margin		
		MHz	dBuV	dB	dBuV/m	dBuV/m	dB	Detector	Comment
1	*	13750.695	26.68	18.04	44.72	68.20	-23.48	AVG	
2		13751.510	37.37	18.04	55.41	88.20	-32.79	peak	

REMARKS:
(1) Measurement Value = Reading Level + Correct Factor.
(2) Margin Level = Measurement Value - Limit Value.

End of Test Report