


单页尺寸:120*120mm

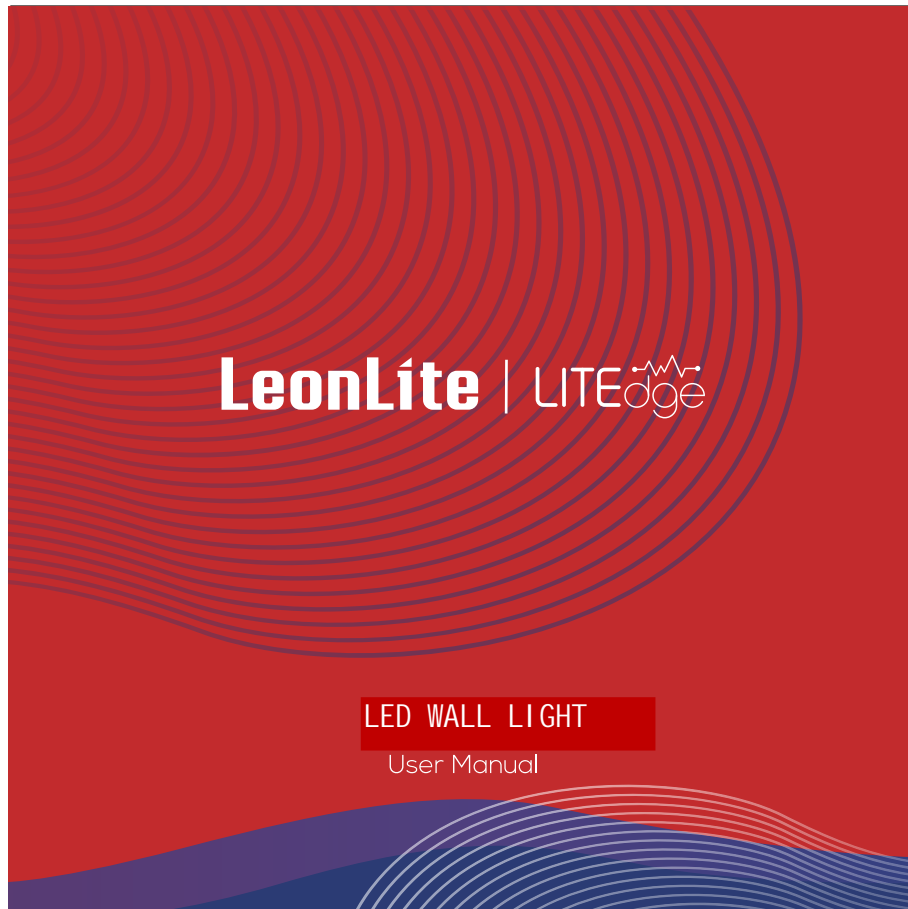

Thank you for choosing LEONLITE & LITEedge as the smart lighting solution for your home! Please follow the instructions to ensure the product functions properly and safely. We hope to keep providing new and innovative lighting solutions for your home.

APP DOWNLOAD

Check out the installation guides and video on our App:



1

WARNING




Here are some basic guidelines for working with electricity.

- Before working on a circuit, go to the main service panel and remove the fuse or trip the breaker that controls that circuit.
- Tape a sign to the panel warning others to leave the circuit alone while you work.
- Before touching any wires, use a voltage tester to make sure they are not live.
- Whenever you check for voltage in a receptacle, check both outlets - each may be controlled by a separate wiring circuit.
- When replacing fuses, turn off the main power first. Make sure your hands and feet are dry and place one hand behind your back to prevent electricity from making a complete circuit through your chest. Touch a plug fuse only by its insulated rim. Remove cartridge fuses with a fuse puller.
- Use tools with insulated handles and ladders made of wood or fiberglass.
- To protect children, place safety cover over any unused outlets.
- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


CAUTION: Before installation, refer to electrical connections. If you do not have electrical wiring experience, refer to a do-it-yourself wiring handbook or have your fixture installed by a qualified licensed electrician.

2

1. Shut off the main power at the circuit breaker or fuse panel before removing the old fixture.

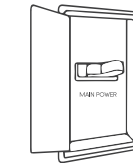

2. Remove the old fixture. Disconnect the wires.

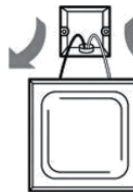

Safety Instructions

- PLEASE read this manual and retain it for future reference before starting the installation.
- PLEASE turn off the power at the fuse box or circuit breaker before installing.
- ONLY use on 100-265V circuits.
- DO NOT use this fixture near any source of heat.
- PLEASE keep this product out of the reach of children under 3 years old.

3


PACKAGE CONTENT

- Smart up and down wall lamp • 1
- Self-tapping screws • 4
- Plastic anchors • 4
- Flat-head screws • 2
- Wire nuts • 3


INSTALLATION

Mount The Light To a J-box


1. Unscrew the four screws on the fixture, then remove the mounting plate. Using flat-head screws attach the mounting plate to the junction box (not included).

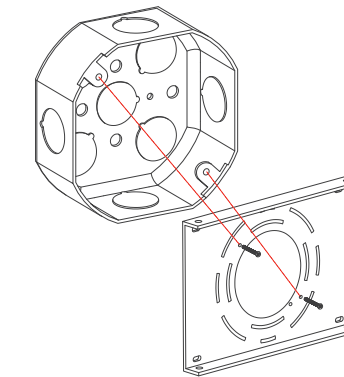


4

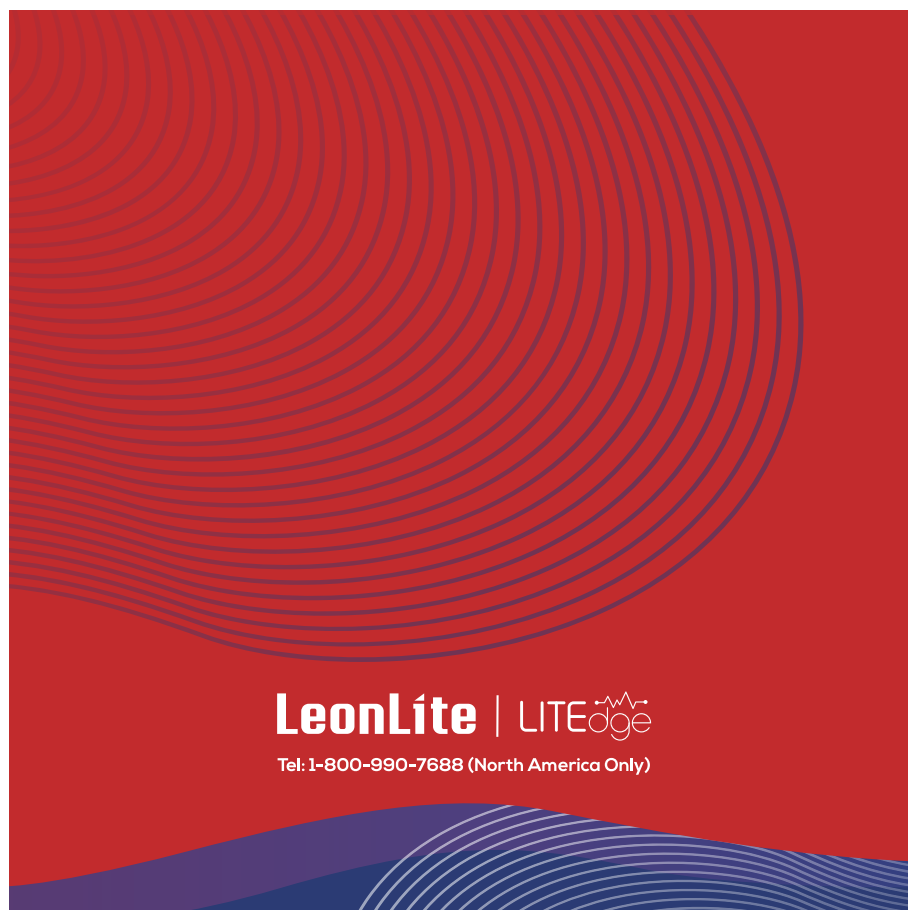

2. Using wire nuts connect wires. Connect the black wire to the live wire; the white wire to the neutral wire; the copper wire to the ground.

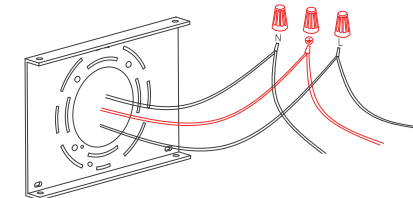


3. Using the four screws attach the fixture to the mounting plate. Turn on the power. The installation is now complete.

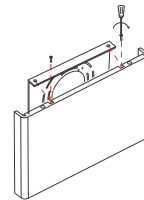


Mount The Light To a Wall

1. Mark the holes on the wall with the fixing holes on the four corners of the mounting plate.

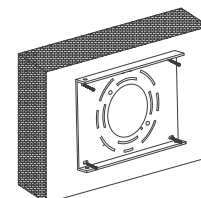


5


2. Use a drill (not included) to drill the holes in the wall as shown, the holes should be matched with M6-M8 self-tapping screws.

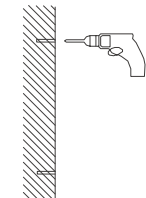

3. Carefully tap the plastic anchors into the holes with a hammer or rubber mallet (not included).

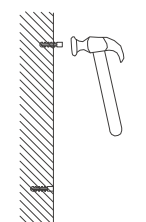


4. Using the four self-tapping screws attach the mounting plate to the wall.

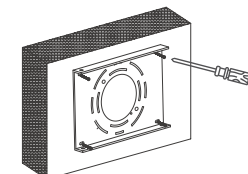


6

5. Using wire nuts connect wires. Connect the black wire to the live wire; the white wire to the neutral wire; the copper wire to the ground.

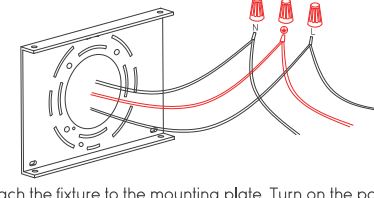

6. Using the four screws attach the fixture to the mounting plate. Turn on the power. The installation is now complete.

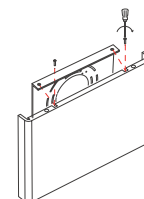

SPECIFICATIONS

Smart Up And Down Wall Lamp			
Power:	26W	30W	45W
Luminous flux:	1264lm	2370lm	3558lm
Voltage:	100-265V AC		
Working temperature:	-13°F-113°F		
CRI:	>80		
Color:	Multicolor		
Material:	Die-cast aluminum		
Beam angle:	10°		

7

CARE AND MAINTENANCE

- To clean the fixture, first, disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the exterior surface of the fixture.
- DO NOT use any cleaners with chemicals, harsh abrasives, or solvents. ONLY use a dry soft cloth to dust or wipe carefully.

TROUBLESHOOTING

Problem	Possible Cause	Solution
The bulb does not light.	The LED is burned out.	Discontinue the use of the lamp.
	The power is off.	Ensure the power supply is turned on.
	Faulty switch, Faulty wire connection.	Test or replace the switch, Check the wire.
The fuse blows or a circuit breaker trips when the light is turned on.	Crossed wires or power wire is grounding out.	Discontinue the use of the lamp. Check wire connections. Contact a qualified electrician or our customer service team.

IC STATEMENT

Operation is subject to the following two conditions.

1. This fixture may not cause interference.
2. This fixture must accept any interference, including interference that may cause undesired operation of the fixture.

WARRANTY

LEONLITE warrants that this product is free from defects in materials and workmanship for a period of 5 years from the day of purchase. If the product has been misused, damaged by accident or in any other way of improper use, this warranty becomes void.

8

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2A57V-JC