




User Manual

Smart WiFi Dimmer Switch

Model: ESWD16

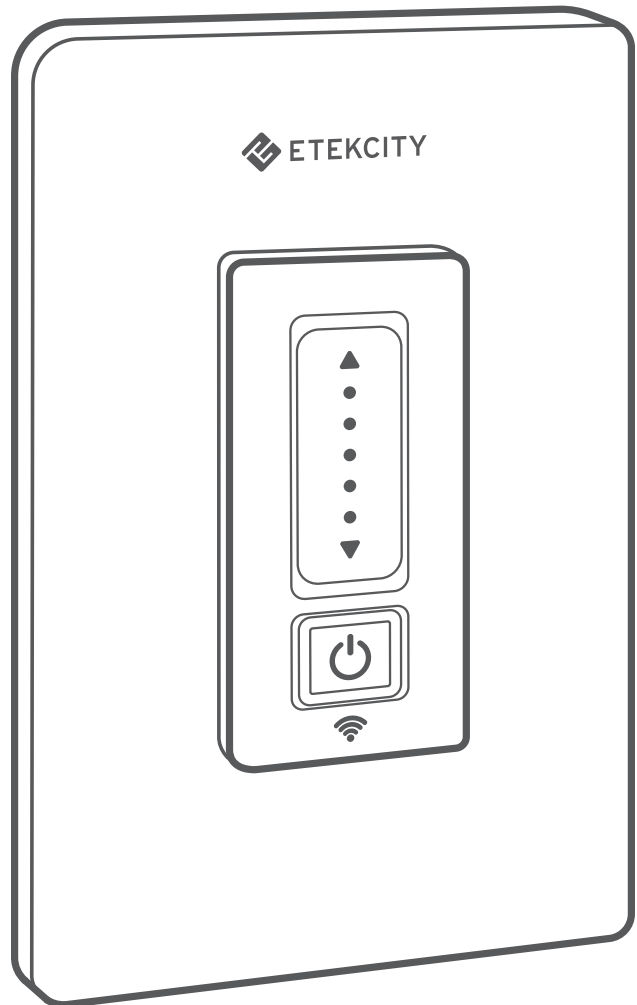

Questions or Concerns?

Mon-Fri, 9:00 am-5:00 pm PST/PDT
support@etekcity.com • (855) 686-3835

Thank you for purchasing the Smart WiFi Dimmer Light Switch by Etekcity.

The smart dimmer switch allows you to control lights, such as LED, fluorescent, halogen, and incandescent bulbs, using your iOS™ or Android™ smartphone. With the VeSync app, connect the smart dimmer switch to your home WiFi network to control your lights from anywhere, at any time.

If you have any questions or concerns, please reach out to our helpful Customer Support Team at **support@etekcity.com**. We hope you enjoy your new smart dimmer switch!

Become an Etekcitizen

Exclusive deals, giveaways, and product registration.
Better products for better living.
Find us here: **etekcity.com**

Table of Contents

Specifications	4
Safety Information	6
Product Requirements	8
Product Diagram	9
WiFi Indicator	11
Installation	12
• What You'll Need	12
• Checking Wires	13
• Connection Schematic	14
• About the Wires	15
• Removing the Old Light Switch	17
• Installing the Smart Dimmer Switch	18
VeSync App Setup	20
Configuration	21
Using the App	23
• Turning the Dimmer Switch On/Off	23
• Indicator Lights	23
• RGB Light	24
• Schedules	25
• Timer	30
Smart Dimmer Switch Settings	33
Share Your Smart Dimmer Switch	34
Delete a Smart Dimmer Switch	35
More Features	37
• Connecting with Amazon Alexa	37
• Connecting with Google Assistant	37
• Contact Customer Support	38
Maintaining Your Smart Light Switch	39
• Firmware Updates	39
• Resetting	39
Troubleshooting	40
Warranty Information	44
Customer Support	46


Specifications

Dimensions	4.92 x 3.14 x 1.67 in / 12.5 x 8 x 4.25 cm
Communication Mode	IEEE802.11b/g/n (WiFi)
Communication Frequency	2.4GHz
Wireless Distance (Switch to Router)	98-164 ft / 30-50 m (max visible range)
Maximum Switch Current	LED/CFL: 180W Halogen/Incandescent: 400W
Power	120V, 60Hz
Maximum Load	1800W incandescent
Operating Environment	14°-100°F / -10°-38°C
Storage and Transportation Environment	-4°-158°F / -20-70°C
Compatible Systems	iOS™ 8.0 or higher / Android™ 4.3 or higher

Note: *The number of lights your smart dimmer switch can control depends on the type of bulb and whether multiple dimmer switches are installed in a multi-switch box.*

For example, if the maximum load is 150W, and you use LED 10W bulbs, then the dimmer switch can support 15 bulbs. If you use LED 15W bulbs, the dimmer switch can support 10 bulbs.

Single-Switch Box:

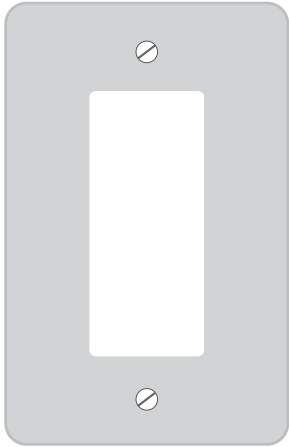


LED/CFL: Maximum 180W

Halogen/Incandescent:

Maximum 400W

Multi-Switch Box (with more than 2 dimmer switches installed):

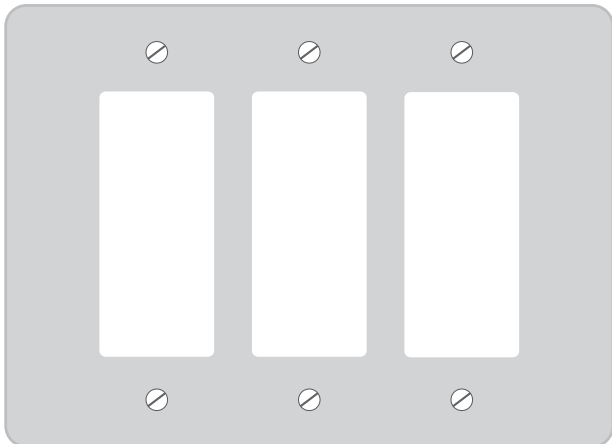

LED/CFL: Maximum 150W

Halogen/Incandescent:

Maximum 300W



Safety Information

To reduce the risk of injury and/or damage to this dimmer switch, please read and follow all instructions and safety guidelines in this manual.

Installation

WARNING: RISK OF ELECTRIC SHOCK OR FIRE.

- Before installing and wiring, **TURN OFF POWER** by locking the appropriate circuit breaker in the OFF position or removing the appropriate fuse. Use a non-contact voltage tester to ensure all electrical power is off. Installing and wiring with active electrical power may result in serious injury or death.
- **Only** install the smart dimmer switch if you are comfortable with electrical work. If not, contact a qualified electrician. Improper installation significantly increases the risk of fire, electric shock, and other injuries.
- The smart dimmer switch must be installed and used in accordance with the National Electric Code (NEC) or your local electrical code.
- **Do not** install the smart dimmer switch with wet hands or when standing on wet or damp surfaces.

Note: *Etekcitec cannot guarantee the quality of installation, and cannot cover associated costs.*

General Safety

- **Only** use your smart dimmer switch to control incandescent, LED, halogen, and compact fluorescent light bulbs. Using your smart dimmer switch for other purposes may result in serious injury, property damage, or death.
- **Only** use indoors, in a dry location with ambient temperature controls, avoiding extreme heat and freezing temperatures.
- **Do not** modify the smart dimmer switch hardware or software. This may cause injury or property damage, and will void the warranty.
- Household use **only**.

SAVE THESE INSTRUCTIONS



Product Requirements

- In-wall installation with hardwired connections
- Neutral wire
- Bulb with dimming capability


Note: *If a non-dimming bulb is used, it may burn out.*

- An electrical box that is more than 2 inches deep
- A smartphone running iOS 8.0 or higher, or running Android 4.3 or higher
- A 2.4GHz WiFi connection (supports 802.11b/g/n standard)

Note: *The smart dimmer switch is compatible with incandescent, LED, halogen, and compact fluorescent light bulbs.*



Product Diagram

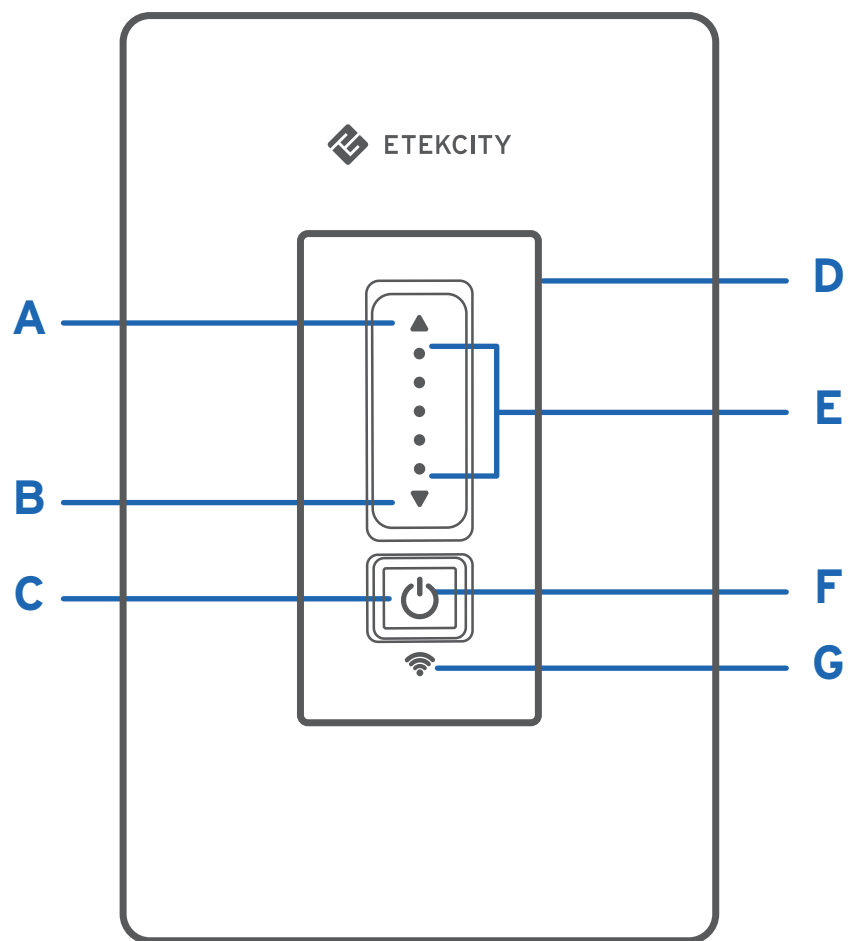

Front

- A.** Increase Button
- B.** Decrease Button
- C.** Power Button
- D.** RGB Light
- E.** Brightness Level Indicators
- F.** Power Indicator
- G.** WiFi Indicator



Increase / Decrease Buttons

- These buttons raise or lower the brightness level of the light.


Brightness Level Indicators

- The 5 indicators represent the 5 brightness levels. You can turn these indicator lights off in the VeSync app (see page 23).

RGB Light

- Lights up in a color of your choice. Use the VeSync app to set the color and to turn it on/off (see page 24).

Power Button / Indicator

- Use  to turn the light on/off.
- When the switch is OFF, the power indicator will be ON.
- When the switch is ON, the power indicator will be OFF.
- You can manually turn the indicator light off in the VeSync app (see page 23).

WiFi Indicator

WiFi Indicator	Status
WiFi Indicator is off	Switch is not configured.
	WiFi Indicator is turned off in the VeSync app.
WiFi Indicator is solid white	Switch configuration was successful.
WiFi Indicator blinks 1 time per second	Switch is in Configuration Mode (see page 21).
WiFi Indicator blinks 4 times per second (10 total times)	Switch is being reset (see page 39).
WiFi Indicator blinks 2 times per 5 seconds	Switch has not connected with router.
WiFi Indicator blinks 1 time per 5 seconds	Switch has connected with router, but is not connected to the internet.



Installation



Scan the QR code or click here for a video walkthrough of the installation guide.

Watching the video walkthrough is highly recommended.

What You'll Need

- Non-contact voltage tester
- Wire nuts (twist-on wire connectors)
- Pliers
- Philips-head screwdriver
- Flathead screwdriver
- Insulated gloves

CAUTION:

- **Only** install the smart dimmer switch if you are familiar and comfortable with electrical work. If not, contact a qualified electrician. Improper installation significantly increases the risk of fire, electric shock, injuries, or even death.
- Wear insulated gloves while installing the smart dimmer switch.


Checking Wires

1. Use the voltage tester to test a powered electrical cable to make sure the voltage tester is working. If the voltage tester lights up, it's working.
2. To avoid electric shock, **TURN OFF THE POWER** by turning off the circuit breaker before installation.

Note: *You may need to shut off more than 1 circuit breaker or switch to make sure the power is off.*

3. Unscrew and remove the faceplate from the old switch.
4. Use the voltage tester to test around the old switch to make sure that the power is **OFF**. Flip your switch on and off a few times to confirm. The voltage tester should not light up, and the light should not turn on.
5. Unscrew and pull out the old switch (without detaching the wires).
6. Check to see if there are 4 wires connected to your old switch. These wires are the ground, load, line (or "live"), and neutral wires. If you do not see at least 4 wires in the junction box, the smart dimmer switch may not be compatible with that junction box. You can check other switches in your home to see if there are compatible junction boxes.

Connection Schematic

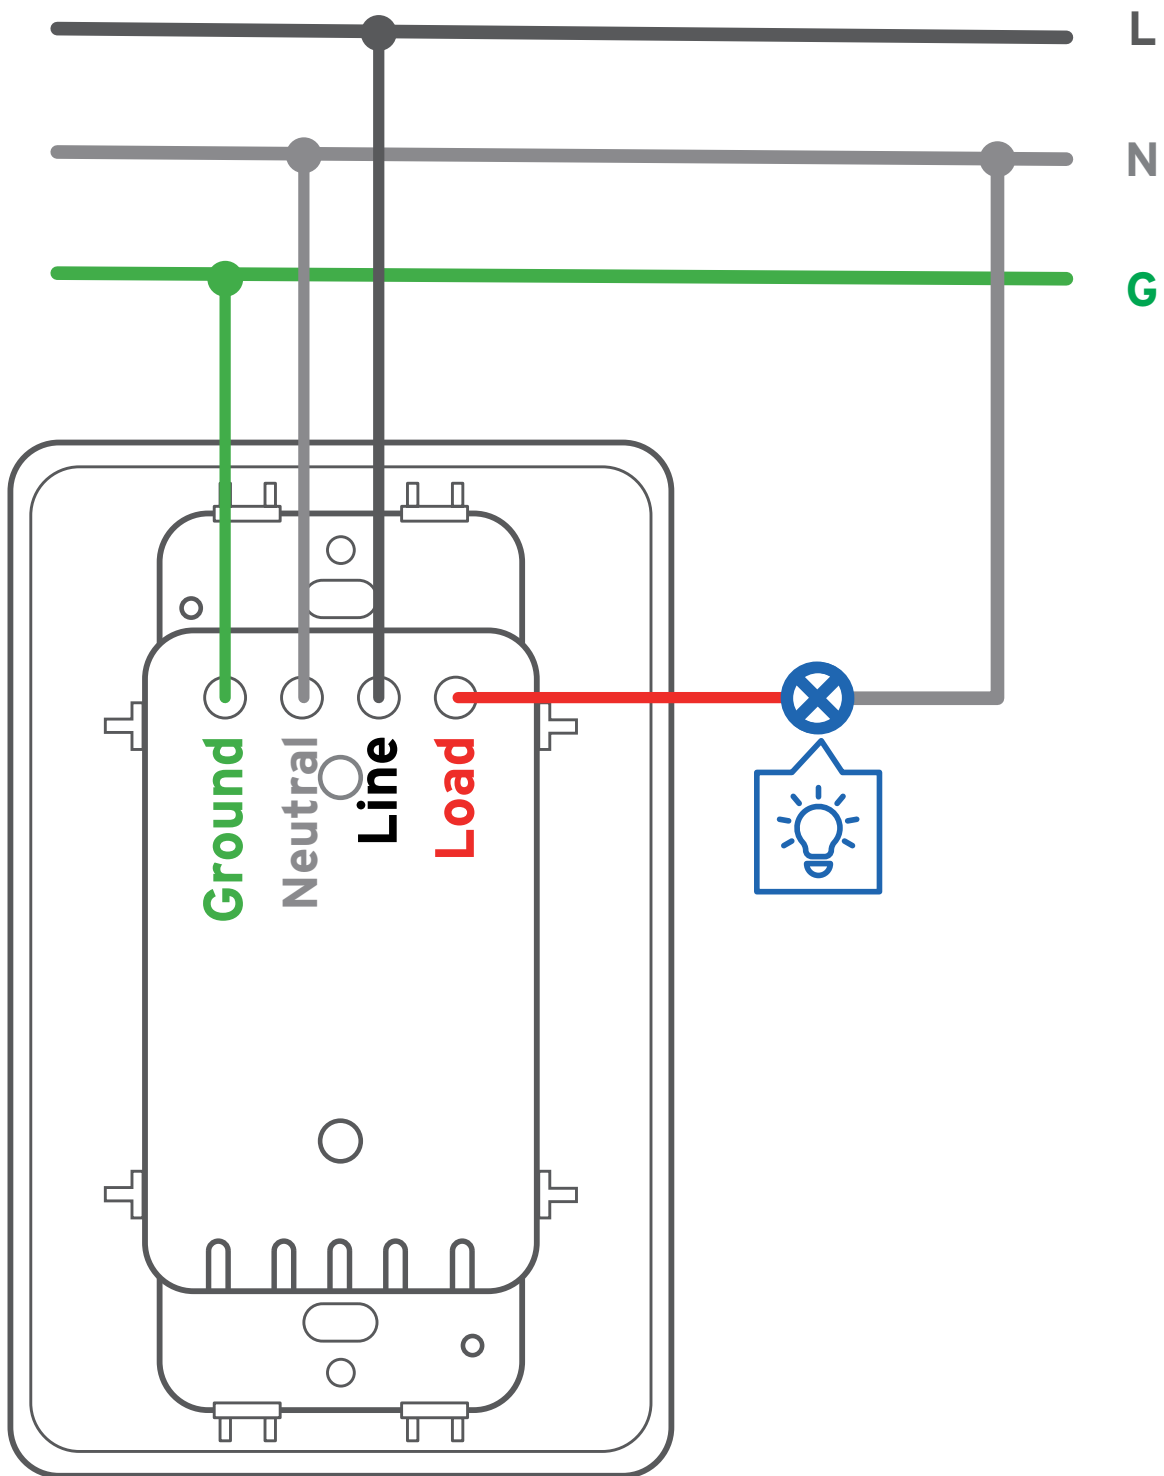

About the Wires



Load

- This wire connects the dimmer switch to appliances. This is the wire that the smart dimmer switch controls. All switches have a load wire.



Line ("Live")

- This wire brings electricity to the dimmer switch. All switches have a line wire.

CAUTION: Never twine the load wire and the line wire together or connect them both to power. Only the line wire should be connected to power.



Neutral

- Some old switches do not have a neutral wire. However, a neutral wire is required to install the smart dimmer switch. This is because the smart dimmer switch needs to be powered on at all times to operate.
- If you cannot find a neutral wire in your switch junction box, contact a qualified electrician to rewire the switch.

CAUTION: Never connect the neutral wire with any other wire.



Ground

- A ground wire is not required for the smart dimmer switch to work, as not all switches need ground wires.
- However, if a ground wire is present, it **must** be connected to the smart dimmer switch.




Wire Nuts

- These are the cap-like objects connecting wires together, also known as twist-on wire connectors.


Removing the Old Light Switch

1. After taking off the faceplate and checking the wires, use the voltage tester again to test for any current around the wires.
2. Unscrew a wire from the old light switch. Use pliers to straighten the wire. Then, screw a wire nut onto that wire.
3. Follow the same steps for the other 3 wires.

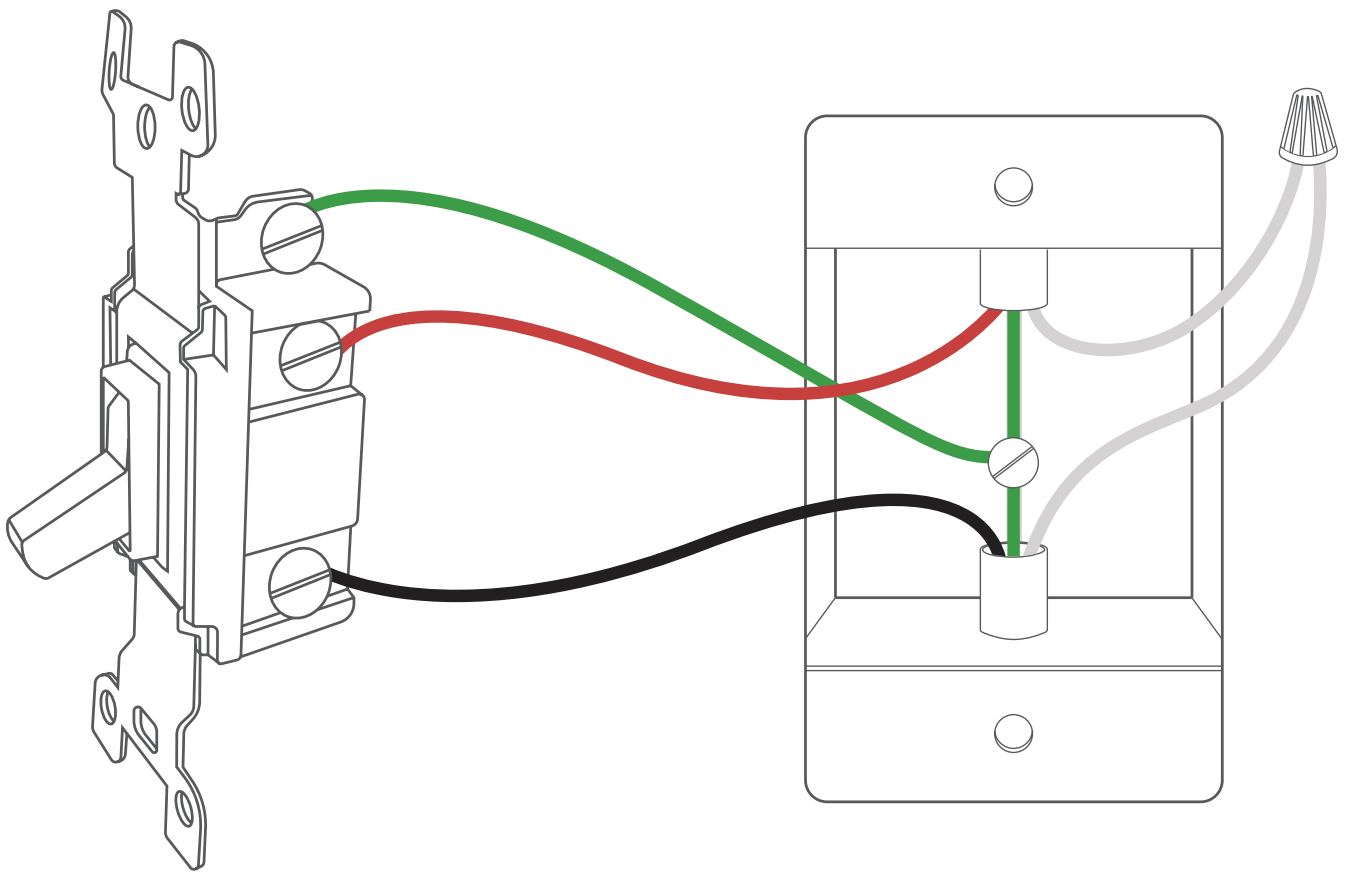

Installing the Smart Dimmer Switch

1. Make sure you understand the 4 wires on your smart dimmer switch and the wires inside the junction box. Check the labels on the switch next to each wire.

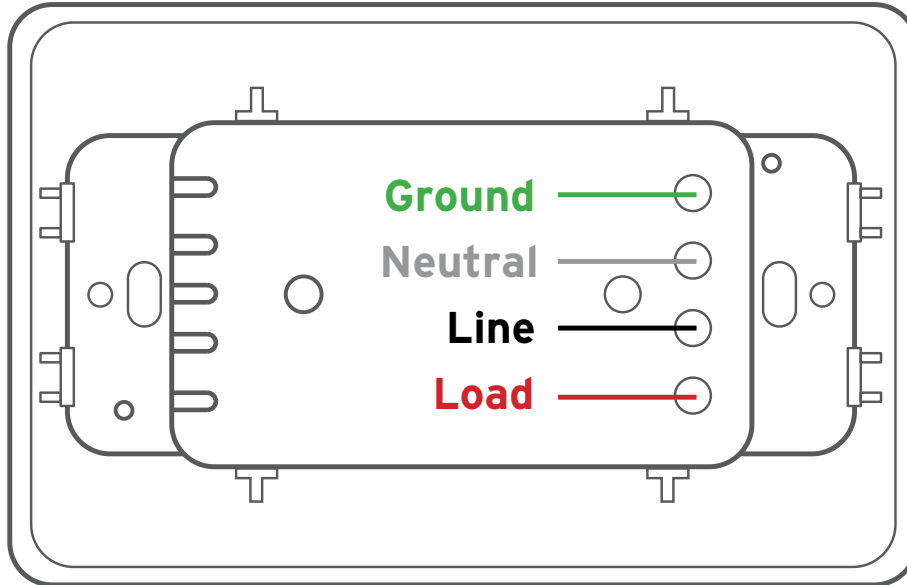

2. Connect the white wire to the neutral wire, which is usually white as well, by screwing a wire nut tightly around the 2 wires.

Note: *There will often be 2 neutral wires already connected by a wire nut. Connect all the neutral wires together with 1 wire nut.*

3. For extra safety, wrap electrical tape around the wires to make sure the copper conductor is fully concealed.

4. Connect the green wire to the ground wire, which is also usually green.
5. Connect the black line wire to the line wire, which is usually black or red.
6. Connect the red load wire to the load wire, which may be any color except green.
7. Push the wires and the wire nuts back into the junction box.
8. Attach the dimmer switch to the wall by screwing in the mounting screws.
9. Snap the smart dimmer switch faceplate on tightly.
10. Turn power back on at the circuit breaker, then test the dimmer switch by turning it on.



VeSync App Setup

Note: Due to continuing updates and improvements, the VeSync app may appear slightly different. In case of any differences, follow the in-app instructions.

1. To download the VeSync app, scan the QR code or search “VeSync” in the Apple App Store® or Google Play™ Store.

Note: For Android users, you must select **Allow** to use VeSync.

2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.




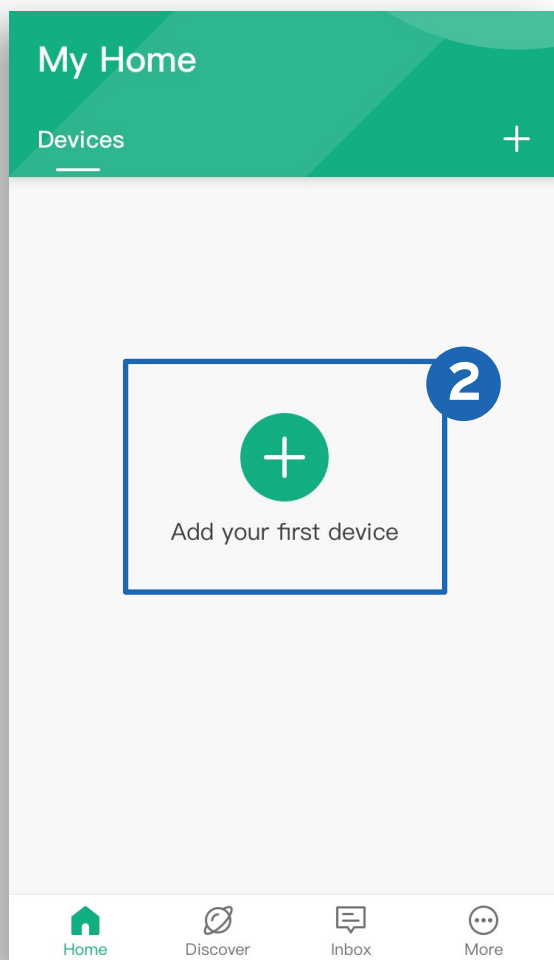
Note: You must create your own VeSync account to use third-party services and products, such as the Amazon® Echo™ or Google Home™. These will not work with the guest account. With a VeSync account, you can also allow your family or friends to control your smart dimmer switch.





Configuration


Set up your smart dimmer switch with the VeSync app.

1. After installing your smart dimmer switch, open the VeSync app.
2. Tap  to add your smart dimmer switch.



3. Tap **Switches**. Then, tap **Etekcify Dimmer Switch**.
4. Follow the in-app instructions to add your smart dimmer switch.

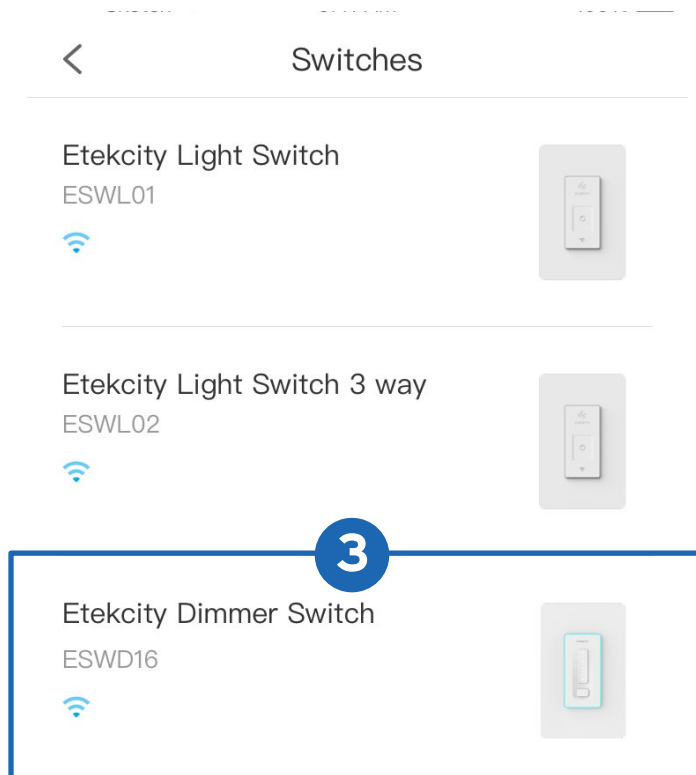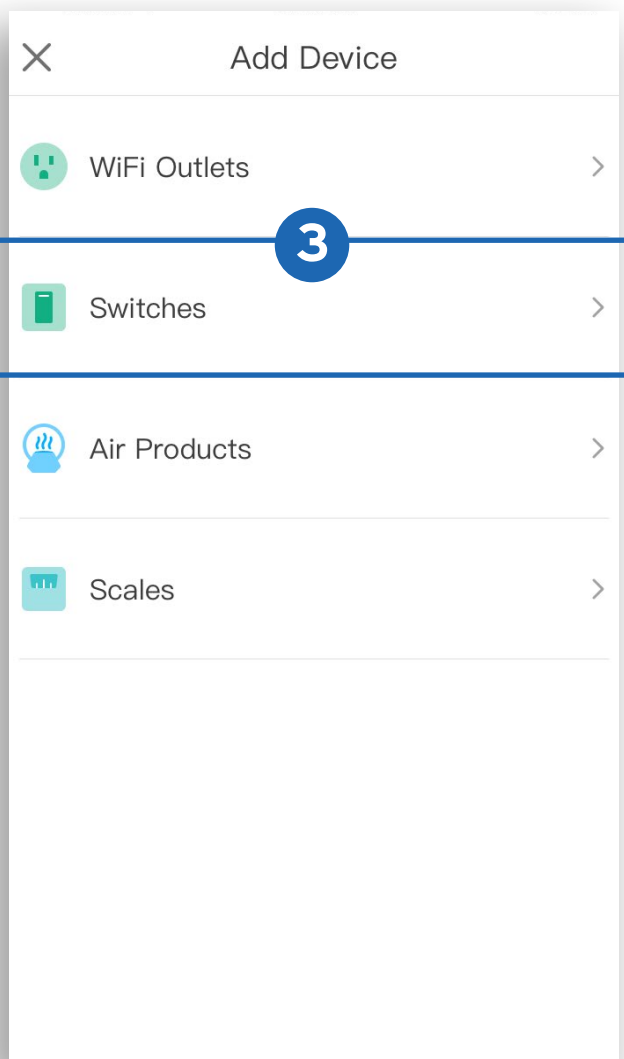


Note: After setup is complete, you can change the name and icon at any time by going to the smart dimmer switch screen and tapping .



Using the App

Turning the Dimmer Switch On/Off

To turn the dimmer switch on/off, tap  on the My Home screen or the smart dimmer switch screen in the VeSync app.

Note: *The dimmer switch will remain connected to the internet even when it is turned off.*




Dimmer switch is **off**



Dimmer switch is **on**

Indicator Lights

Tap  in the app to turn on/off the WiFi Indicator light, the Power Indicator light, and Brightness Level Indicator lights.





Indicator Lights are **on**





Indicator Lights are **off**

Note: *This does not control the RGB Light.*

RGB Light



1. Tap  to open the RGB Light settings.
2. Select the color of the RGB Light using the palette. Tap  to turn the RGB Light on/off.

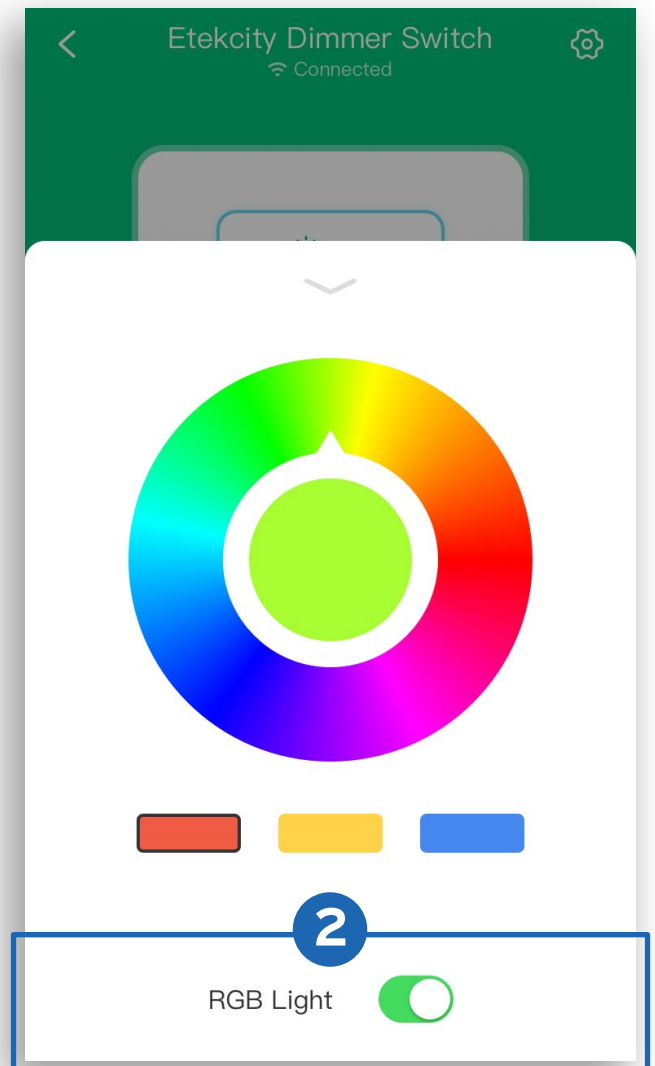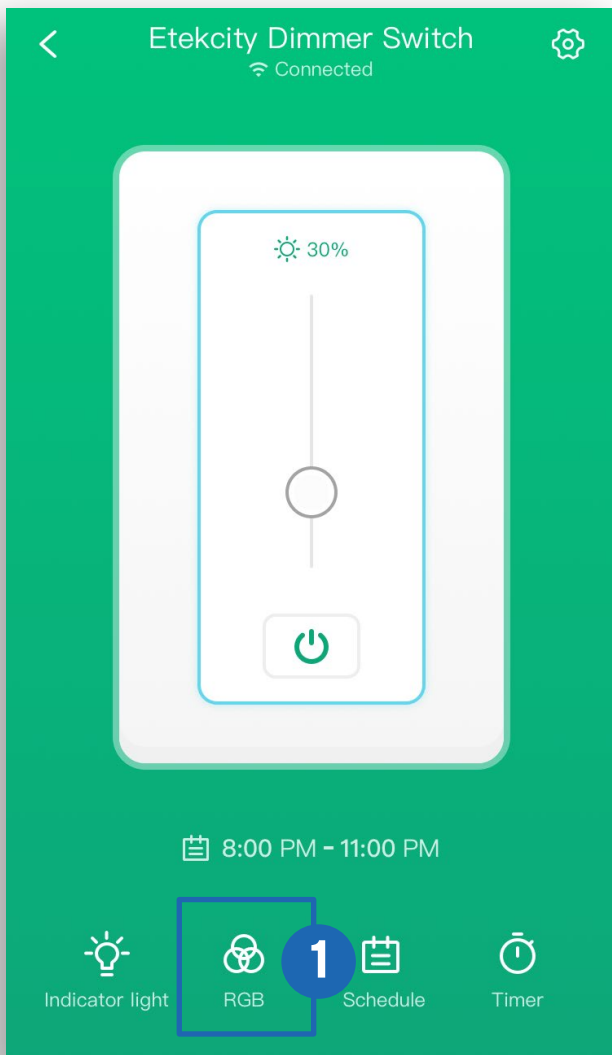



Schedules

You can use a schedule to turn your smart dimmer switch on/off.

1. Tap , then  **Create Schedule**.

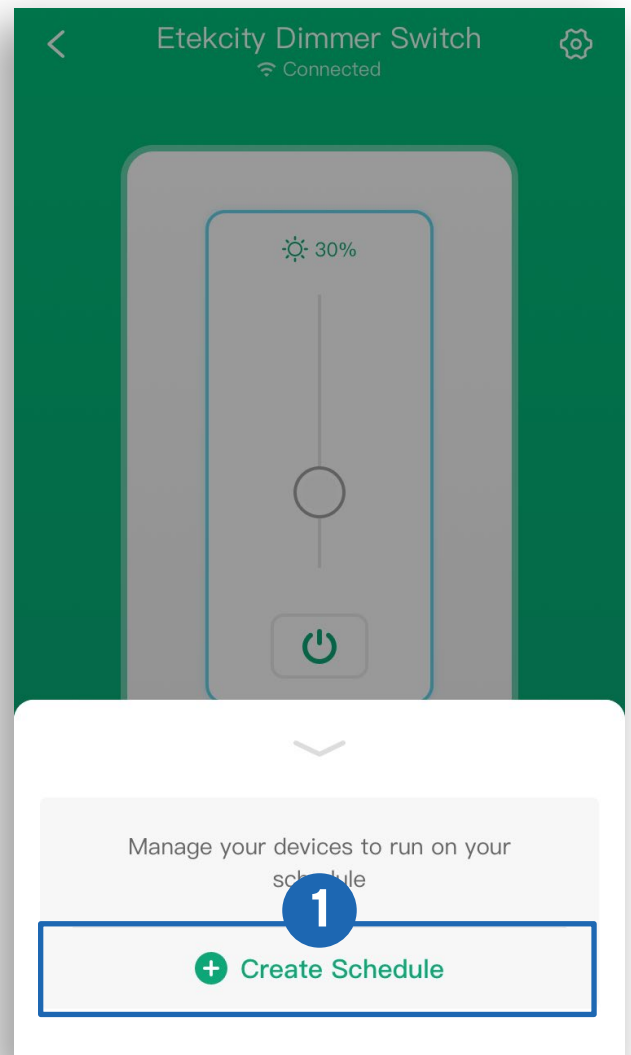
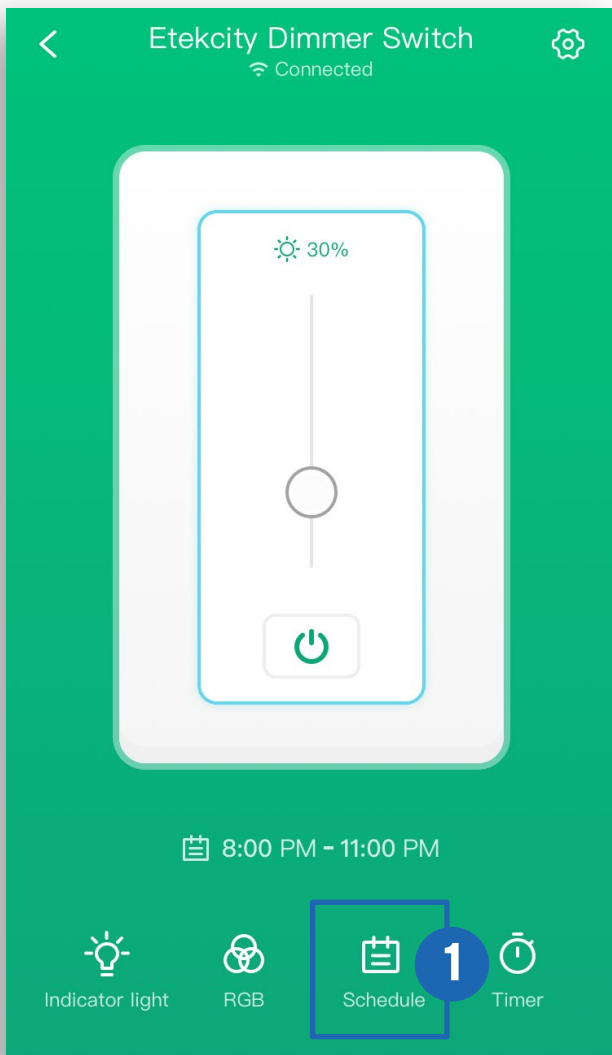


2. Tap **Start** and **End** to set the start and end times. Tap ✓ to confirm the times.

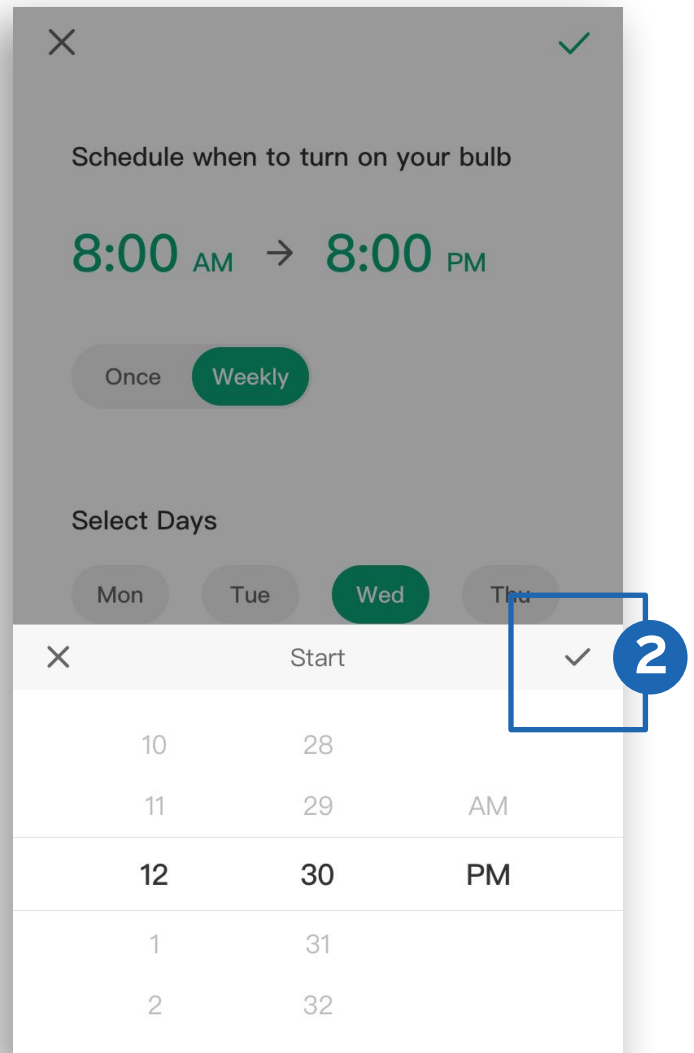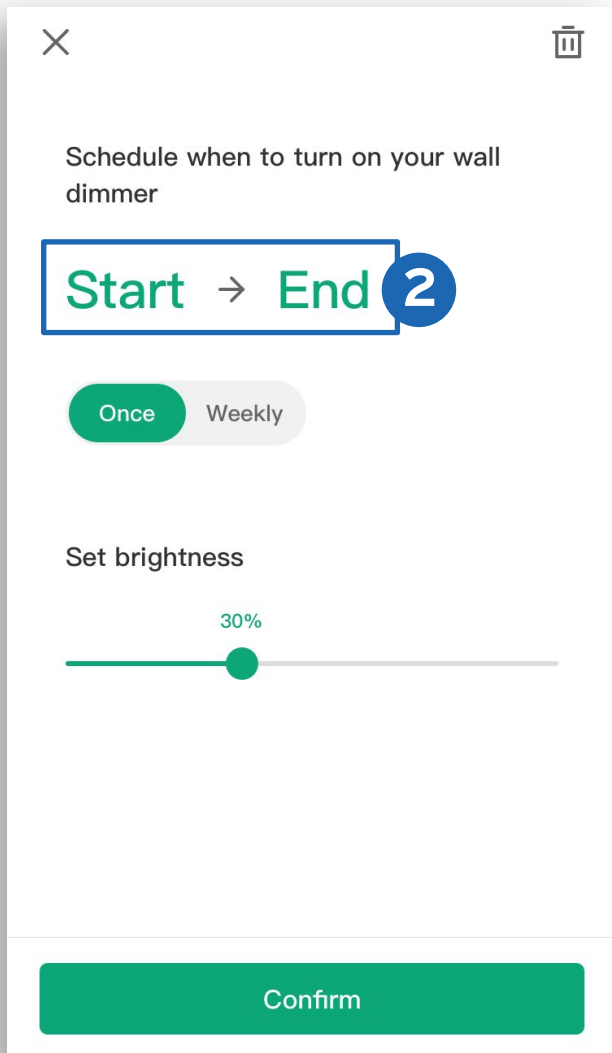




Note:

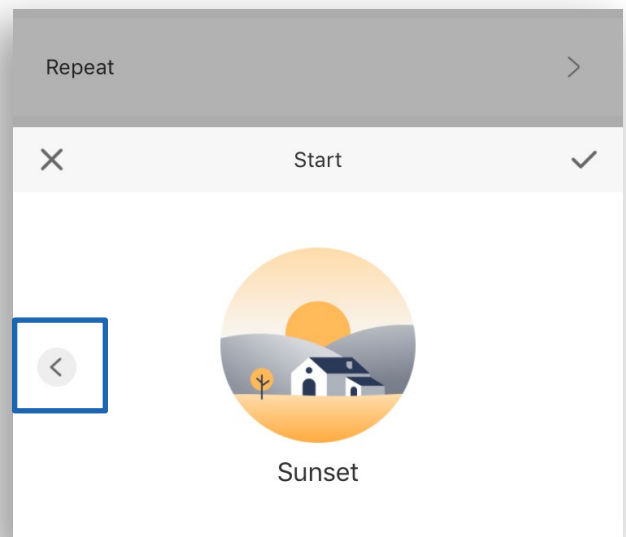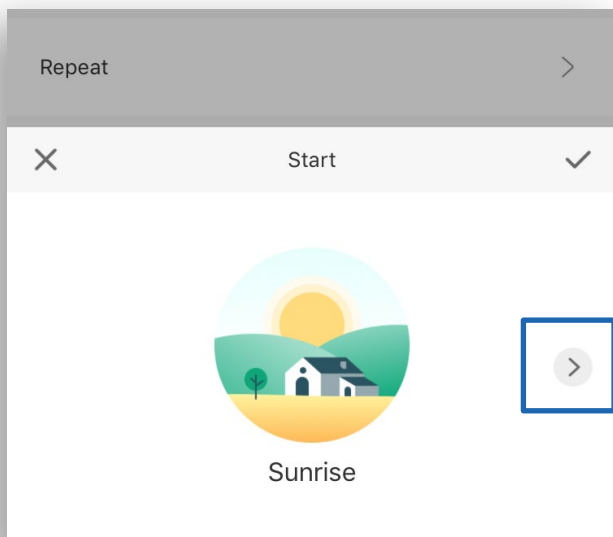
- The dimmer switch will turn off when the **End** time is reached.
- When selecting a time, tap < for “Sunrise” and > for “Sunset”. Allow the VeSync app to access your location to determine when sunrise and sunset are for your area.

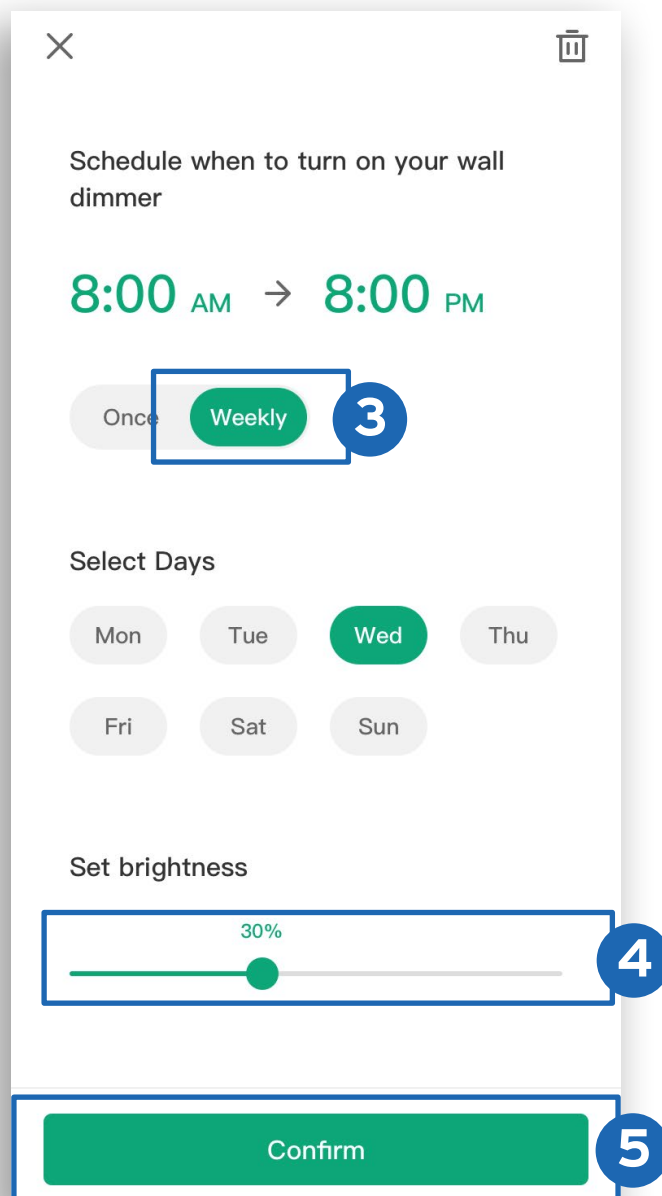

3. To repeat the schedule, tap **Weekly**, then tap the desired days.
4. Set a specific brightness level for the schedule between **16%-100%**.
5. Tap **Confirm** to save the schedule.





Tap **Schedule** to view a list of all schedules. To remove a schedule, swipe left and tap . Tap  to collapse the list of schedules.

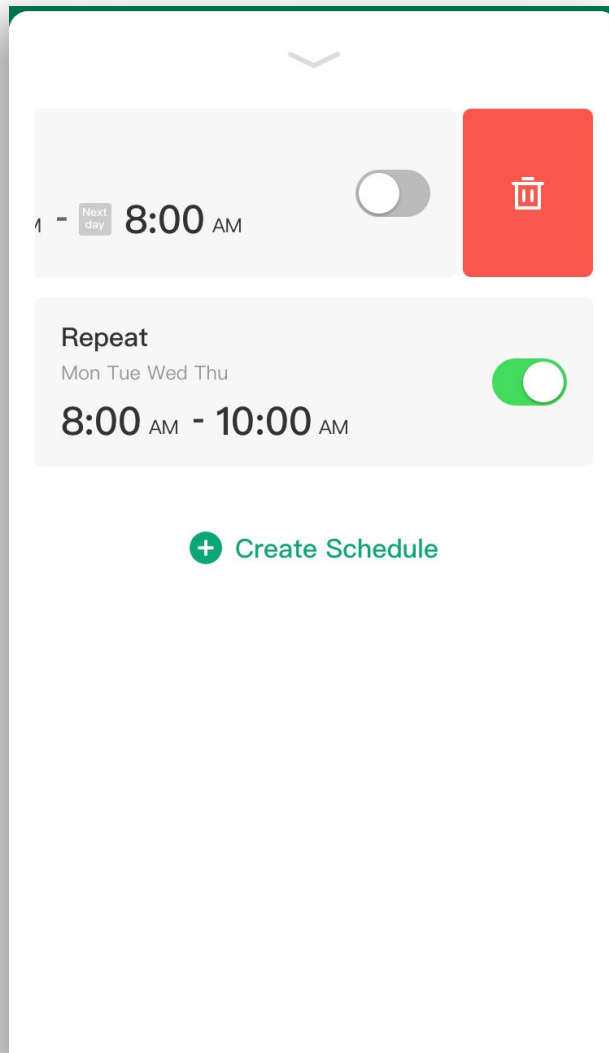


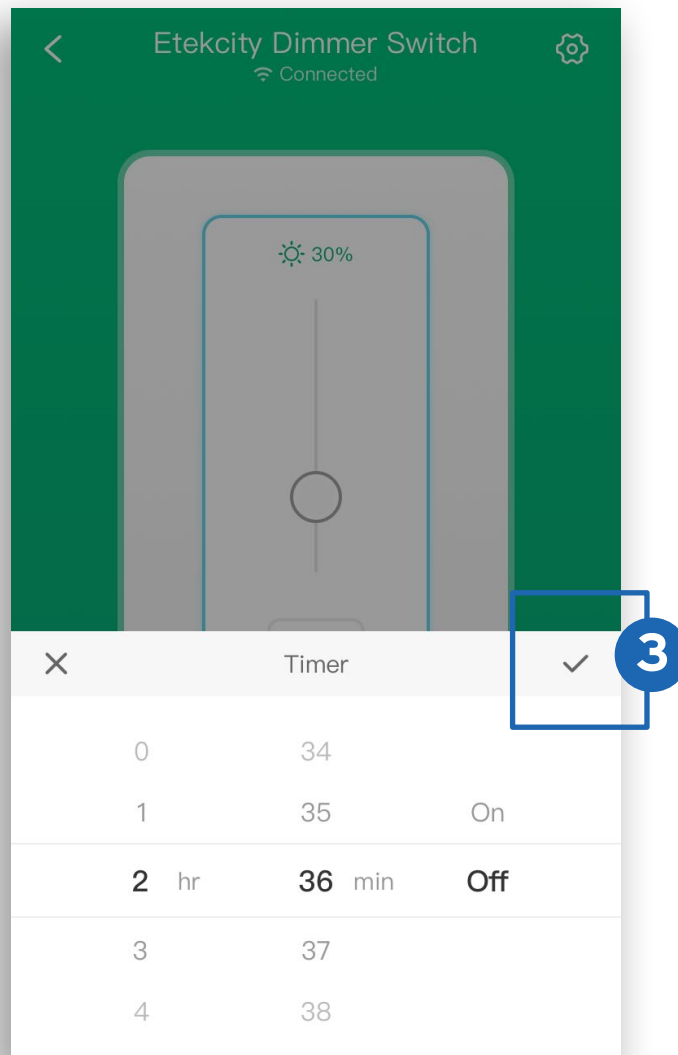
Timer



You can create a timer to turn your smart dimmer switch on/off.

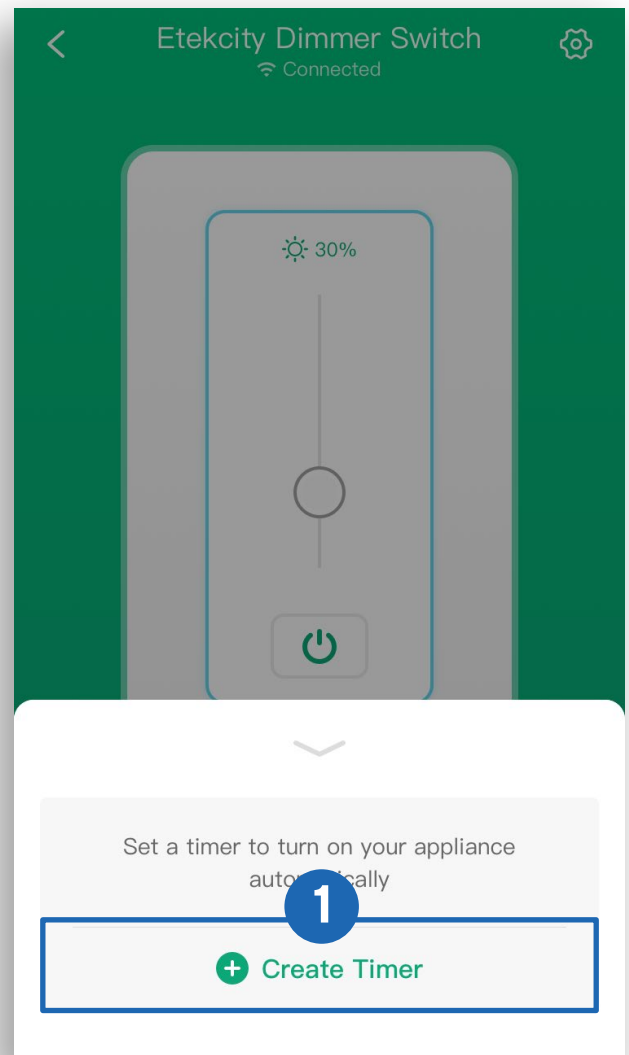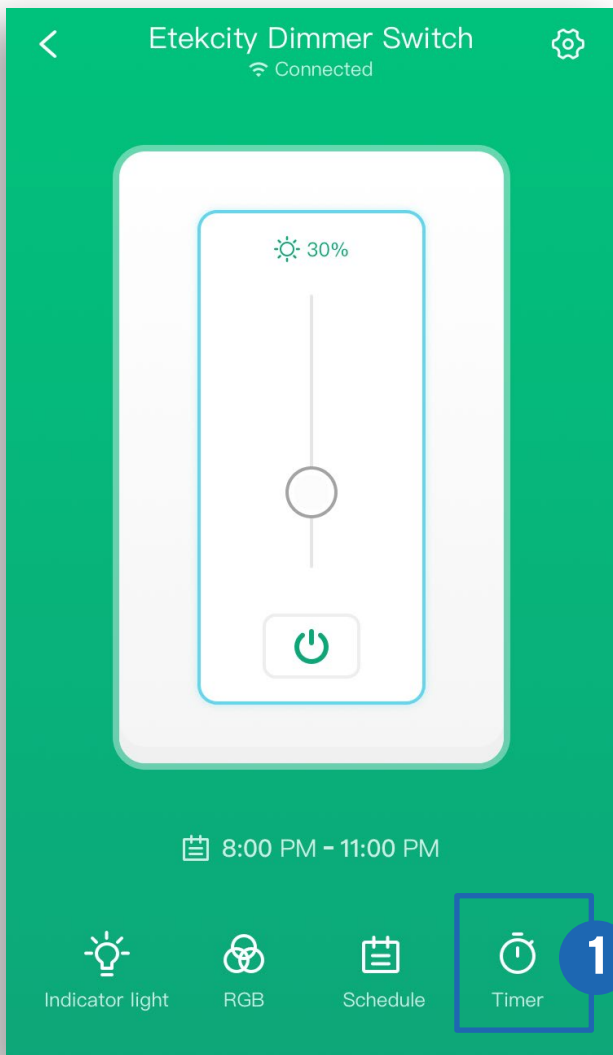


1. Tap , then  **Create Timer**.





2. Scroll up and down to set the time and tap **On** or **Off**.
3. Tap  to confirm and start the timer. When the timer finishes, the smart dimmer switch will turn on or off based on your selection.




4. Tap  to stop the timer. Tap  to restart the timer.

Tap  to view the timer. To remove the timer, swipe left and tap . Tap  to collapse the timer.

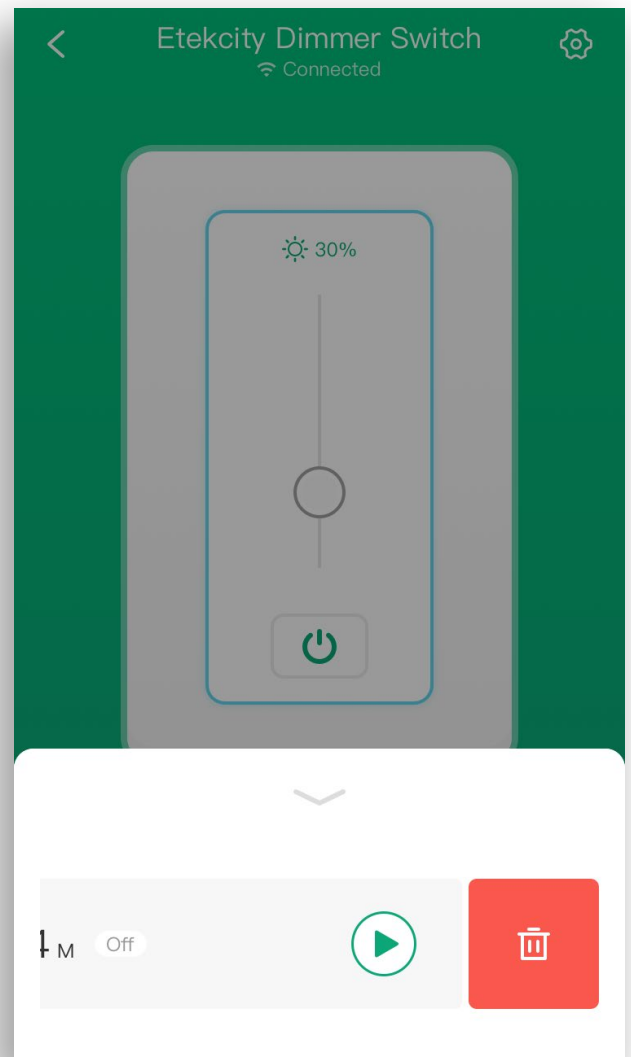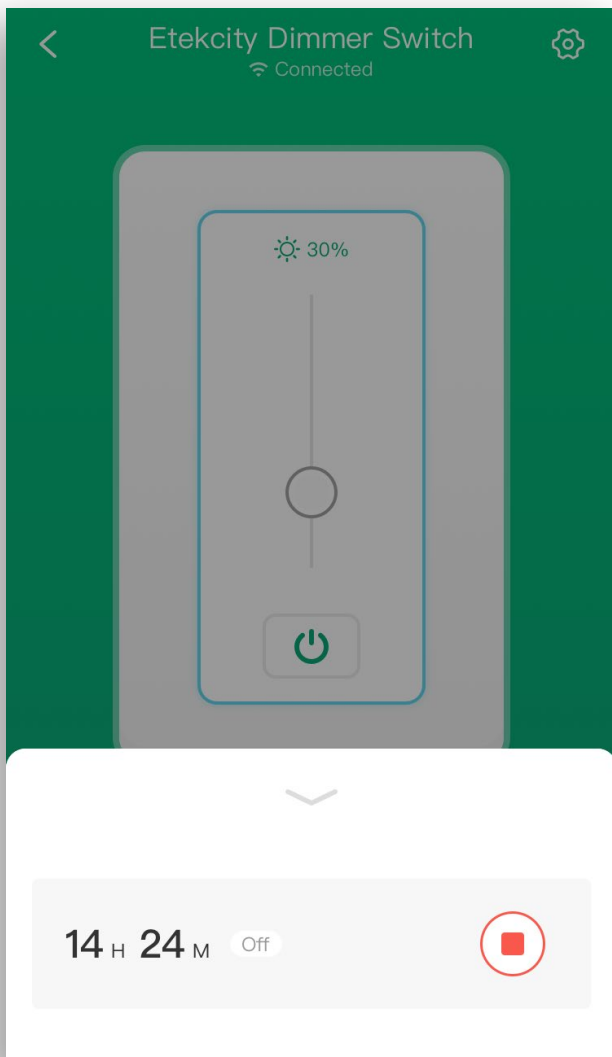

Smart Dimmer Switch Settings


Tap  to see Device Settings. Tap on any setting to change it.

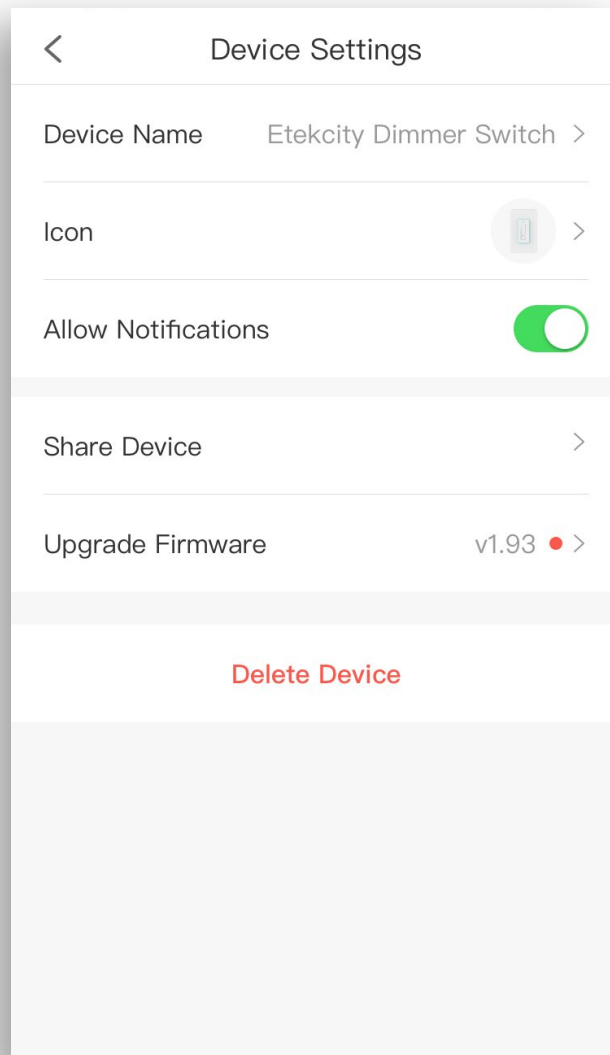


Share Your Smart Dimmer Switch

Use Share Device to allow someone else to control your smart dimmer switch (such as family, friends, roommates, or anyone you choose).


Note: People who you share your smart dimmer switch with cannot edit or delete any of your device settings.

1. Tap **+** on the “Share Device” screen.
2. Type in the email of the person you want to share your smart dimmer switch with. Tap **Invite**.
3. Tap  to remove people you have shared your smart dimmer switch with. They will no longer be able to control your smart dimmer switch.

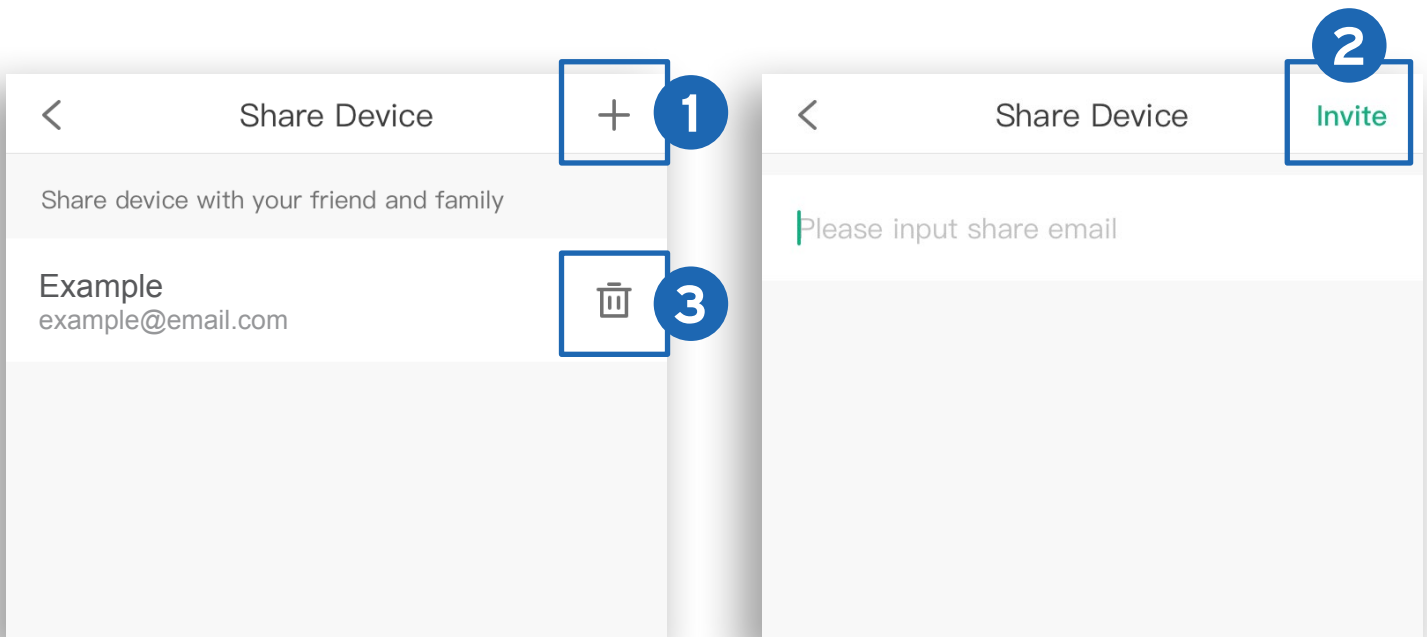

Delete the Smart Dimmer Switch


You can delete your smart dimmer switch from the VeSync app from the Device Settings screen. Tap **Delete Device**.

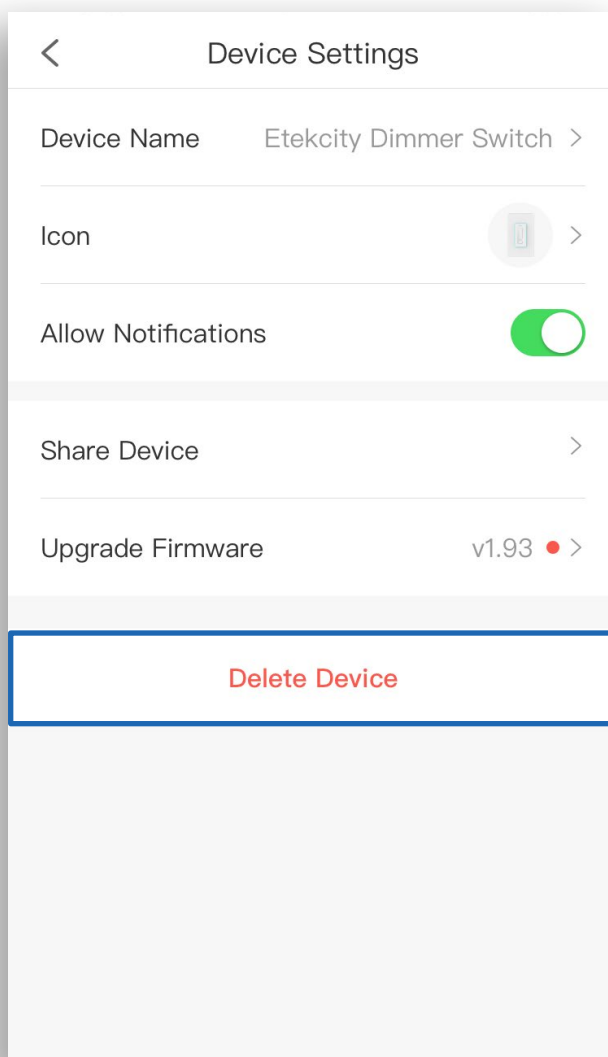


You can also delete your smart dimmer switch from the My Home screen in the VeSync app.

- A. iOS™:** Swipe left on the smart dimmer switch's name to delete.
- B. Android™:** Press and hold for 2 seconds on the smart dimmer switch's name to delete.

A

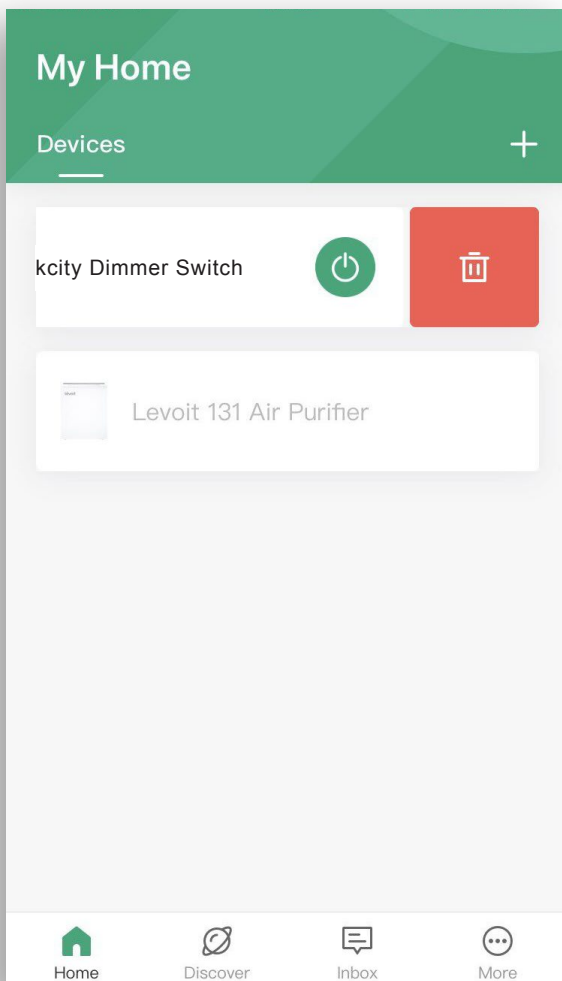

B

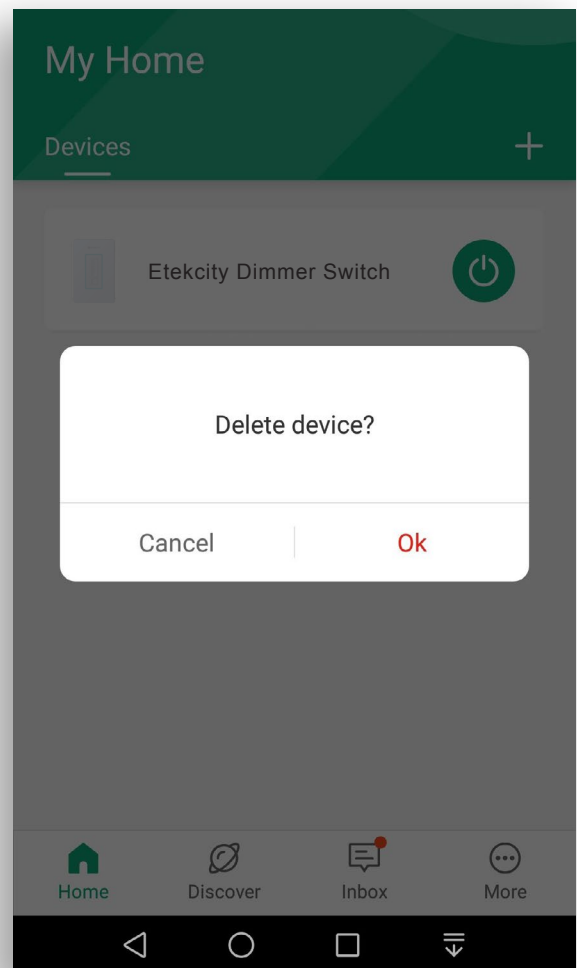

More Features

Connecting with Amazon® Alexa™

To view instructions in the VeSync app, tap **More**, then tap **Link to Alexa**.

Note: *You must create your own VeSync account to connect with Alexa.*

Connecting with Google Assistant™

To view instructions in the VeSync app, tap **More**, then tap **Link to Google Assistant**.

Note: *You must create your own VeSync account to connect with Google Assistant.*



Contact Customer Support

You can contact our friendly Customer Support Team through the VeSync app, in addition to the help line.

- To chat directly with our US office Customer Support Team, tap **Inbox** at the bottom of the screen. Then, tap **Online support** to send a chat message.

Note: *Chat hours are Mon-Fri, 9:00 am-5:00 pm PST/PDT. Messages sent outside chat hours will receive an email response.*

- To send feedback directly to our VeSync app team, tap **More** at the bottom of the screen, then tap **Contact Us**. Please note that our VeSync app team may have a longer response time.
- You can also contact **Customer Support** by email or phone (see page 46).



Maintaining Your Smart Dimmer Switch

Firmware Updates

To keep the smart dimmer switch up to date with the latest improvements and fixes, you should always update the firmware when available.

On the Device Settings screen, tap **Upgrade Firmware**.

Resetting

Resetting the smart dimmer switch can help you troubleshoot many issues you may have. Please keep in mind that resetting a device will erase all of your custom settings and restore the factory default settings.

Press and hold the power button for more than 15 seconds, or until the WiFi Indicator blinks white rapidly then turns solid white.



Troubleshooting

Why isn't my dimmer switch connecting to the VeSync app?

- During the setup process, you must be on a secure 2.4GHz WiFi network.
- Make sure the WiFi password you entered is correct.
- Try moving your router closer to your dimmer switch (164 ft / 50 m visible range is best).
- Make sure you don't have too many devices connected to your router (10 or fewer is best).
- Close and reopen the VeSync app.
- Clear your VeSync app cache.
- Reset your dimmer switch (see **Resetting**, page 39).

I can't find the "Etekcity" access point during configuration.

- Press and hold the power button on the dimmer switch for 5-15 seconds to trigger Configuration Mode. The "Etekcity" access point will appear in your list of available WiFi connections.
- During Configuration Mode, the LED light on the dimmer switch will slowly blink. You will have 10 minutes to pair the dimmer switch with your phone.

My dimmer switch is offline.

1. Make sure your router is connected to the internet, and your phone's network connection is working properly.
2. Delete the offline dimmer switch from the VeSync app. Swipe left (iOS) or tap and hold (Android), and tap **Delete**.
3. Reset the dimmer switch by pressing and holding the power button for more than 15 seconds. The LED light will blink rapidly then turn a solid white.

4. Once the dimmer switch has been deleted and reset, reconfigure your dimmer switch with the VeSync app (see page 21).
5. When the dimmer switch is online again, go to Device Settings, and tap **Upgrade Firmware**.

Note: *Power outages, internet outages, or changing WiFi routers may cause your dimmer switch to go offline.*



After adding my dimmer switch to the VeSync app, why won't the dimmer switch icon appear on the My Home screen?

- Refresh the VeSync menu by swiping down on the screen.
- Close and reopen the VeSync app.

Amazon Alexa or Google Assistant can't find my app or can't discover my dimmer switch.

- Make sure your wireless network router is close enough to your dimmer switch. The dimmer switch must be within a 164 ft / 50 m visible range from the router.
- Check that your Amazon Alexa or Google Assistant is working properly.

Why isn't my dimmer switch turning on/off as scheduled?

- Make sure that the schedule is still turned on. The toggle switch should look like , not .
- Make sure that your phone's Location Services are turned on.
- Make sure the dimmer switch is connected to a working network and is not offline.

If your problem is not listed, please contact **Customer Support** (see page 46).

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Notice

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.



Warranty Information

Product	Smart WiFi Dimmer Switch
Model	ESWD16
Default Warranty Period	1 year
For your own reference, we strongly recommend that you record your order ID and date of purchase.	

Terms & Policy

Etekcitey Corporation warrants all products to be of the highest quality in material, craftsmanship, and service, effective from the date of purchase to the end of the warranty period.

Etekcitey Corporation will replace any product found to be defective due to manufacturer flaws based on eligibility. Refunds are available within the first 30 days of purchase. Refunds are only available to the original purchaser of the product. This warranty extends only to personal use and does not extend to any product that has been used for commercial, rental, or any other use in which the product is not intended for. There are no warranties other than the warranties expressly set forth with each product.

This warranty is non-transferrable. Etekcitey Corporation is not responsible in any way for any damages, losses, or inconveniences caused by equipment failure or by user negligence, abuse, or use noncompliant with the user manual or any additional safety or use warnings included in the product packaging and manual.

This warranty does not apply to the following:

- Damage due to abuse, accident, alteration, misuse, tampering, or vandalism.
- Improper or inadequate maintenance.
- Damage in return transit.
- Unsupervised use by children under 18 years of age.

Etekcitey Corporation and its subsidiaries assume no liability for damage caused by the use of the product other than for its intended use or as instructed in the user manual. Some states do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Additional 1-Year Warranty

You can extend your 1-year warranty by an additional year. Log onto **www.etekcity.com/warranty** to register your new product for the extended warranty.

Please fill out all required fields and include your order ID, place of purchase, and purchase date, if applicable.

Defective Products & Returns

If you discover your product is defective within the specified warranty period, please contact Customer Support via **support@etekcity.com** with a copy of your invoice and order ID. **DO NOT** dispose of your product before contacting us. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.



Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Etekcitey Corporation

1202 N. Miller St., Suite A
Anaheim, CA 92806

Email: support@etekcity.com

Toll-Free: (855) 686-3835

Support Hours

Mon-Fri, 9:00 am-5:00 pm PST/PDT

**Please have your order invoice and order ID ready before contacting Customer Support.*



Connect with us @Etekcity



