

TR4 Transceiver

Indoor Meter Reading and Wireless Transceiver

Operation and Installation Guide



1| Product Overview

The NextCentury TR4 Transceiver introduces the next generation of superior wireless performance. Featuring Meter+™ technology, this Transceiver offers broad meter compatibility in a single model.

Engineered for long maintenance-free operation, the TR4 provides hourly-read precision with a 10-year battery life.

Meter+™ Advanced Compatibility

The TR4 Transceiver utilizes Meter+™ technology, making this single model compatible with virtually all modern encoded and pulse-output utility meters, including water, electric, gas, run-time, and thermal meter models.

- Single model supports a pulse or encoded meter
- Easy configuration, external programmer is not required
- Visual LED indicators to verify meter connections

Intelligent Wireless

The TR4 Transceiver builds on the previous generation's longest in-class wireless range, and now boasts up to 3x more range.

Utilizing two-way NextCentury RF Connect™ wireless, the TR4 has intelligent routing capabilities ensuring success in a variety of environments, from spread-out commercial properties to high-density apartment complexes in excess of 4,000 meter points.

The TR4 is a drop-in replacement for any previous generation NextCentury Transceiver. Wireless network operation is seamlessly compatible with all earlier generation Repeaters and Gateways.

A Superior Platform

Property setup, configuration, and usage data are managed on the **NextCentury Cloud Platform**. This robust management solution connects you to a wide range of features facilitating property setup and ongoing operation.

2| Technical Specifications

2.1 - Certifications

FCC: 2AB8I-TR4 (pending) IC: 20949-TR4 (pending)

2.2 - Wireless Communication

- Two-way NextCentury RF Connect™
- 902-928 MHz Unlicensed Band

2.3 - Meter Compatibility

- Pulse or encoded meter types (see section 3)
- Single model supports all configurations

2.4 - In-Field Configuration

- Simple meter configuration—no external programmer required

2.5 - Battery

- Preinstalled, field-replaceable CR18505
- Estimated 10-year battery life*

*Note: 10-year battery estimated with operating temperatures between 60°F-90°F, and 6-hr device check-in. Achieved battery life can be greater or less than 10 years depending on the meter type, system configuration, and lifetime operating temperature.

2.6 - Dimensions

- 3.3in x 1.8in x 1.3in (84mm x 46mm x 33mm)

2.7 - Operation Environment:

- -20°C to 60°C (-4°F to 140°F)
- Should be installed in an indoor, dry environment

3| Meter Compatibility

3.1 – Pulse Output Meters

- Passive pulse sensing (including reed switch, solid-state relay, contact relay, open-drain types)
- Active voltage sensing (max. 16 VDC)
- Supports tamper circuit to detect disconnect from meter (optional)


3.2 – Encoded Output Meters

- Neptune (Including ProRead, ECoder, and ProCoder register models)
- Sensus UI-1203 (Includes most meter models, from Sensus, Hersey, Mueller, Master Meter, Badger, Kamstrup, Elster, Metron-Farnier, and Zenner)
- GWF ECO (Includes all GWF encoder meters)
- Elster/AMCO K-Frame (Includes most meter models, from Elster, AMCO, ABB and Kent)

4| In-Field Installation

4.1 – Mounting Plate Installation


- Peel off backing on the included adhesive pad and mount onto the wall
- (Optional) For additional holding strength, the included screws and plastic anchors can be used. Pre-drill using a 7/32" (5.5mm) drill bit
- When used with the NextCentury M201 Water Meter, remove the TR4's mounting plate and slide onto the meter's included mounting adapter
- For third-party meters, the Zip Mount Adapter can be used

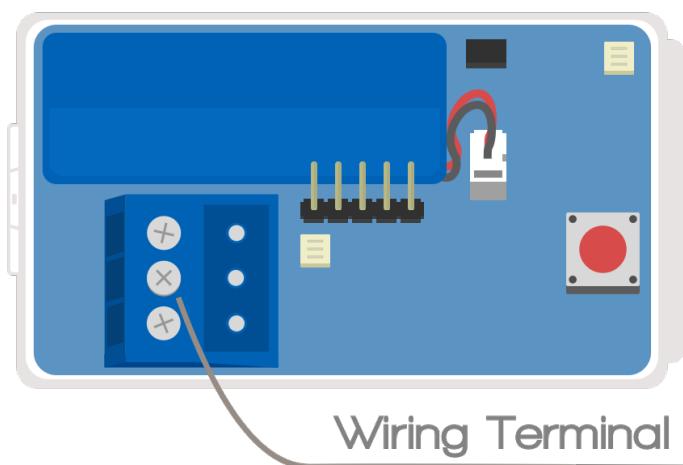

4.2 – Meter Wiring


- Strip meter wire ends to 3/16" (5 mm)
- Insert stripped wire ends into the blue terminal connector and tighten securely using a Phillips (PH-1) screwdriver

4.3 – Meter Wiring Diagram

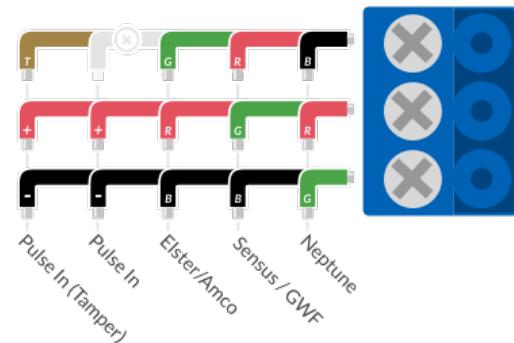

5| LED Indicators


The TR4 features two separate LED indicators with simple color-coded feedback.

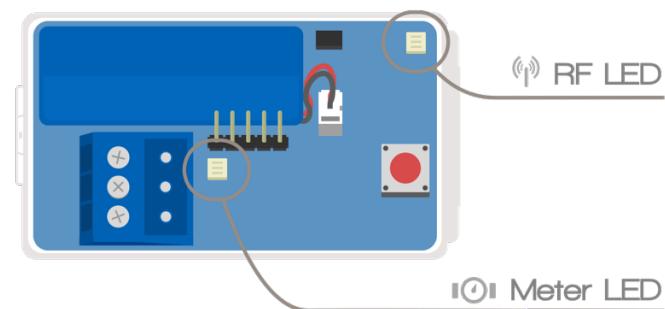


6| Configuring Meter Type

6.1 – Entering Configuration Mode

Note: The TR4 is configured for a pulse meter by default. No configuration change is necessary.

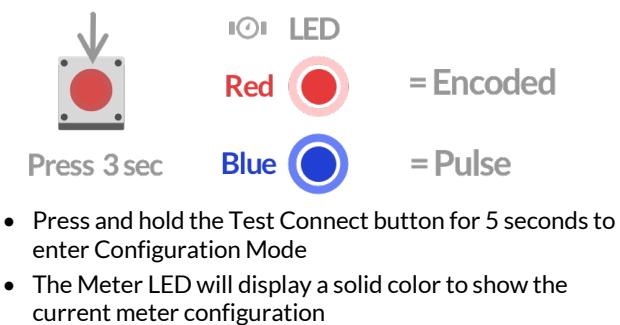

6.2 – Toggle Pulse or Encoded

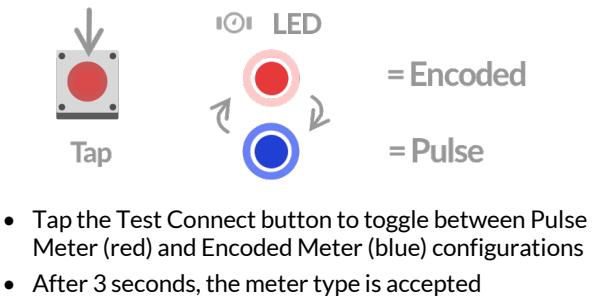

7| Pulse Meter

7.1 – Configure for Pulse

- Enter configuration mode
- If the Meter LED is solid blue, the TR4 is configured for a pulse meter (see previous section)

7.2 – Verify Meter Connection

A pulse from the connected meter is indicated by a fast blue blink of the Meter LED




8| Encoded Meter

8.1 – Encoded Meter

- To verify which meter type is currently configured, enter configuration mode
- If the Meter LED is solid red, the TR4 is configured for an encoded meter (see section 6)

8.2 – Verify Meter Connection

- Press the Test Button
- The TR4 will try to read the connected meter
- A green blink indicates the TR4 can read the meter
- A red blink indicates the meter could not be read and wiring should be checked

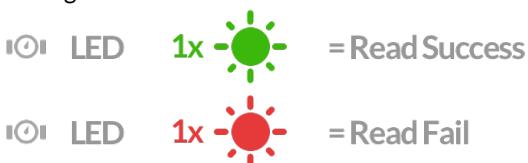

9| Programming & Wireless Check-In

9.1 – Property Setup

The NextCentury website or NCSS mobile app can be used to set up and configure the property, units, and meters. Visit support.nextcenturymeters.com for additional property setup details.


9.2 – Programming

Property programming is the process of associating Transceiver serial numbers to the meters they are reading. Scan the barcode to ensure the serial number is entered accurately.



9.3 – Gateway Device Management

After programming, the connected Gateway will automatically sync and communicate with the TR4.

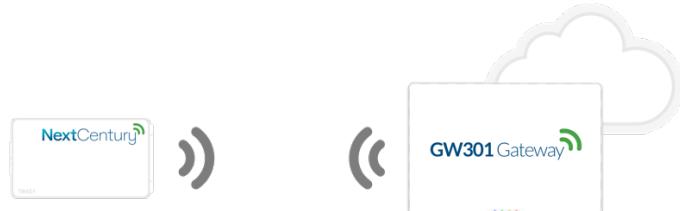

9.4 – Wireless Connection LED Indicators

The RF LED indicator provides feedback to easily check that the TR4 is within range of the property's Gateway (either directly, or through Repeaters)

- Tap the Test Connect button
- The TR4 RF LED will rapidly blink red, indicating it is transmitting
- The RF LED will then blink 2x green if a response is received from the Gateway



9.5 – Wireless Troubleshooting

If the RF LED does not blink green after tapping the Test Connect button, then the TR4 is not receiving a response from the Gateway. The following steps can help identify the issue:

- If the TR4 does not blink green, even when close to the Gateway, make sure it has been programmed to the property and the Gateway is online
- Try multiple times—if eventually a response is received, then an additional Repeater may be needed to improve the wireless network
- Move the TR4 closer to the Gateway or nearest Repeater. If a response is received, then an additional Repeater may be needed

10| Advanced Features & Troubleshooting

Visit support.nextcenturymeters.com for additional guides and troubleshooting information.

11| Television and Radio Interference

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Company Name may void the user's authority to operate the equipment.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

As per 47 CFR §15.19

(All other devices shall bear the following statement in a conspicuous location on the device:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

As per 47 CFR §15.21

The user's manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

ISED Statement

This radio transmitter (identify the device by certification number) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Immediately following the above notice, the manufacturer shall provide a list of all antenna types approved for use with the transmitter, indicating the maximum permissible antenna gain (in dBi).

8.4 User Manual Notice for Licence-Exempt Radio Apparatus

User manuals for license-exempt radio apparatus shall contain the following text, or an equivalent notice that shall be displayed in a conspicuous location, either in the user manual or on the device, or both:

This device complies with Innovation, Science and Economic Development Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and*
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.*

Cet appareil est conforme aux flux RSS exemptés de licence d'Innovation, Science et Développement économique Canada. L'opération est soumise aux deux conditions suivantes:

- (1) Cet appareil ne doit pas provoquer d'interférence; et*
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.*

ISED Radiation Exposure Statement

[English] Radiation Exposure Statement: This equipment complies with the IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

[French] Énoncé d'exposition aux rayonnements: Cet équipement est conforme aux limites d'exposition aux rayonnements ioniques RSS-102 Pour un environnement incontrôlé. Cet équipement doit être installé et utilisé avec un Distance minimale de 20 cm entre le radiateur et votre corps.

14 | Contact Information

For any questions or concerns, please contact NextCentury Submetering Solutions Product Support:

- Phone: (844) 538.8203
- Email: support@nextcenturymeters.com