


SHARED & ASSIGNED USE FUNCTIONALITY


Orbit locks with a touch-free RFID interface are operated by RFID credential or by Mobile ID. The DigiLink network application simplifies lock management, and admin and manager credentials allow for management access.

LOCK PARTS


Front Unit

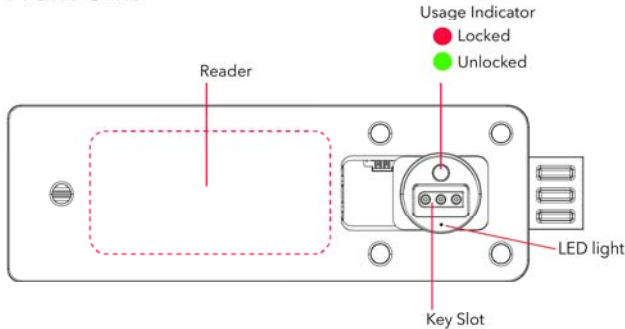

Deadbolt Rear Unit

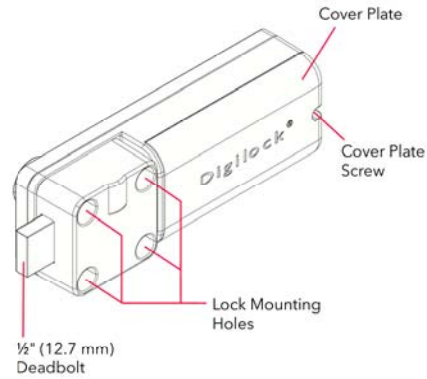

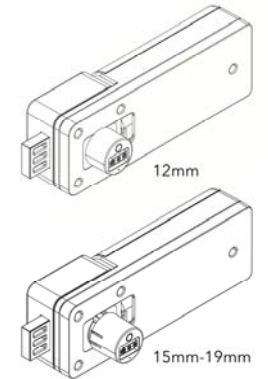


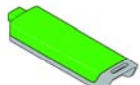
Key Insert Options



RFID Credentials



CREDENTIALS & ACCESSORIES

	 User RFID Credential & Mobile ID ¹	 Admin/Manager Credentials ²	 DigiLink App	 Power Jumper Key
Operates the lock	●	●	●	
Overrides user access		●	●	
Allows management inspection		●	●	
Remotely unlocks from any location			●	
Programs admin and manager credentials to the lock			●	
Assigns user credentials (in assigned use functionality)			●	
Sets lock functionality			●	
Provides external power				●

¹ An unlimited amount of user credentials may be assigned to each lock, in assigned use functionality.

² An unlimited amount of admin and manager credentials may be programmed to operate locks in both shared and assigned use functionality.

OPERATING INSTRUCTIONS - IN SHARED USE FUNCTIONALITY

In shared use functionality, the user presents an RFID credential or uses their Mobile ID to lock and unlock. Once unlocked, the lock is available for a different user.

Operate with a User RFID Credential

1a



Lock: Present any User RFID credential.


1a



Unlock: Present the same User RFID credential.

Operate with a User Mobile ID Credential

1a

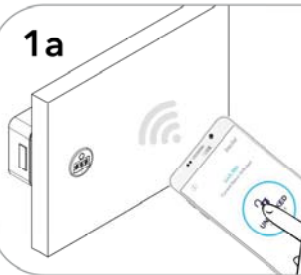

Lock: Present any Mobile ID credential and press the unlocked icon within the Mobile ID app to lock.

1b



2a



Unlock: Present the same Mobile ID credential and press the locked icon within the Mobile ID app to unlock.

2b



NOTE: Mobile ID app will show current status of the lock.

Operate with an Admin or Manager RFID Credential

1a



Lock: Present a valid Admin or Manager RFID credential.*


1a




Unlock: Present a valid Admin or Manager RFID credential.

*If an Admin or Manager Credential or Mobile ID credential is used to relock, the previous user credential will continue to operate the lock.

Operate with an Admin or Manager Mobile ID Credential

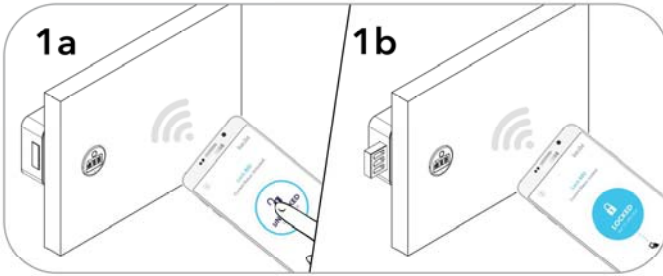


Lock: Present a valid Admin or Manager Mobile ID credential and press the unlocked icon within the Mobile ID app to lock.*

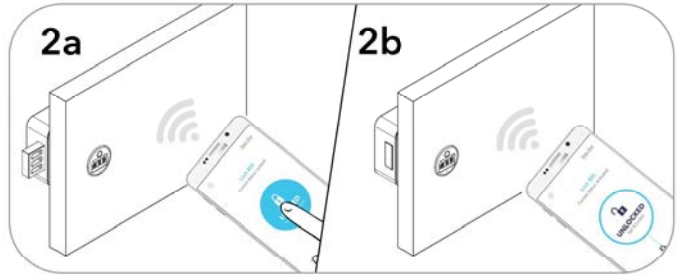

Unlock: Present a valid Admin or Manager Mobile ID credential and press the locked icon within the Mobile ID app to unlock.

NOTE: Mobile ID app will show current status of the lock.

Remote Unlock Using the DigiLink App

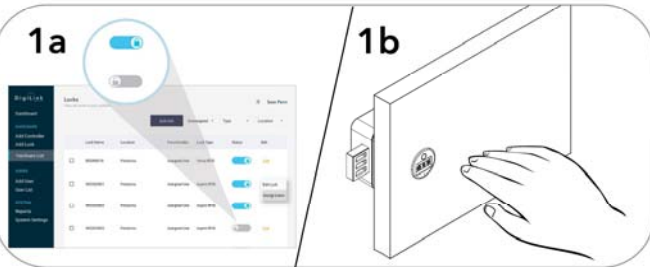

Unlock: Admin must locate the specific lock to be unlocked on the hardware list within the DigiLink app then toggle the switch next to the lock name to the unlocked position.
Once toggled, User must present hand to the lock interface to unlock.**

*If an Admin or Manager Credential or Mobile ID credential is used to relock, the previous user credential will continue to operate the lock.

**DigiLink app cannot be used to relock. Refer to operation instructions above to relock.

OPERATING INSTRUCTIONS - IN ASSIGNED USE FUNCTIONALITY - MANUAL RELOCKING BOLT


In assigned use functionality, users operate the lock with their assigned user credential(s) (either an RFID Credential or Mobile ID credential). When bolt retract time is set to "0", the bolt will not auto relock. User must present credential or Mobile ID to relock. If it is preferred that the lock(s) auto relock, refer to the [DigiLink Initialization and Registration Guide](#) to set auto relock preferences.

Operate with an Assigned RFID Credential



1a


Unlock: Present an assigned RFID credential.

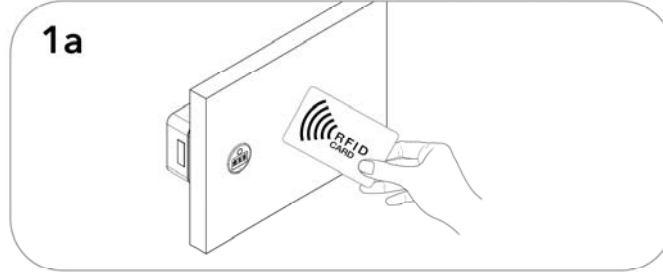


1a

Relock: Present an assigned RFID credential.

Operate with an Assigned Mobile ID Credential

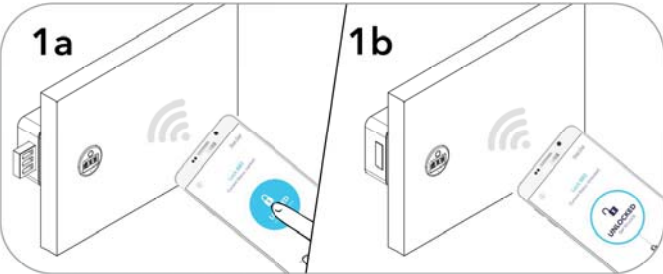


1a

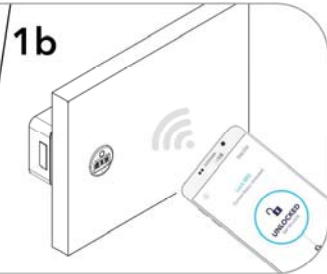

1b

Unlock: Present an assigned Mobile ID credential and press the locked icon within the Mobile ID app to unlock.

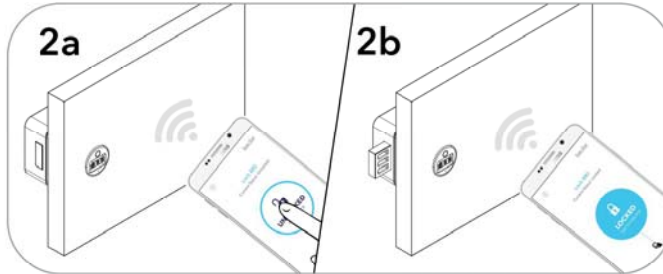

2a



2b

Relock: Present an assigned Mobile ID credential and press the unlocked icon within the Mobile ID app to lock.

NOTE: Mobile ID app will show current status of the lock.

Operate with an Admin or Manager RFID Credential



1a


Unlock: Present a valid Admin or Manager RFID credential.




1a

Relock: Present a valid Admin or Manager RFID credential.

Operate with an Admin or Manager Mobile ID Credential

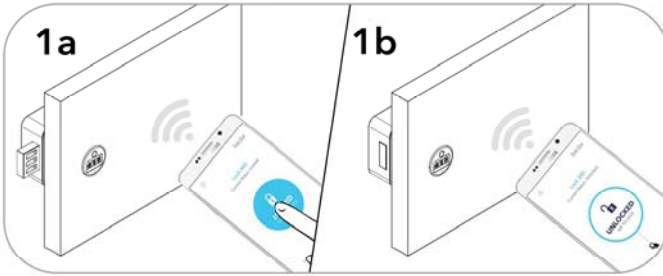


1a **Unlock:** Present a valid Admin or Manager Mobile ID credential and press the locked icon within the Mobile ID app to unlock.

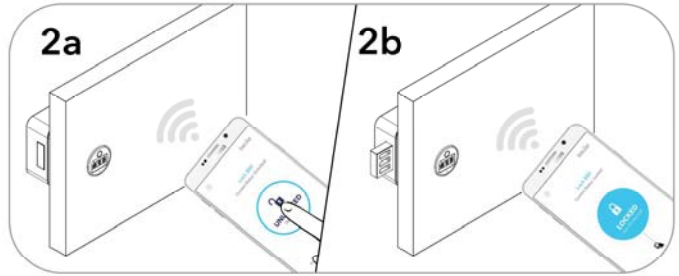

2a **Relock:** Present a valid Admin or Manager Mobile ID credential and press the unlocked icon within the Mobile ID app to lock.

NOTE: Mobile ID app will show current status of the lock.

Remote Unlock Using the DigiLink App

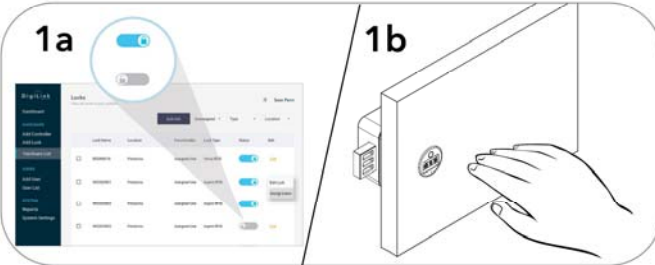

1a **Unlock:** Admin must locate the specific lock to be unlocked on the hardware list within the DigiLink app then toggle the switch next to the lock name to the unlocked position.
Once toggled, User must present hand to the lock interface to unlock.*

*DigiLink app cannot be used to relock. Refer to operation instructions above to relock.

OPERATING INSTRUCTIONS - IN ASSIGNED USE FUNCTIONALITY - AUTO RELOCKING BOLT

In assigned use functionality the bolt can be set to automatically relock within 1-10 seconds. Refer to the [DigiLink Initialization and Registration Guide](#) to set auto relock preferences.

Operate with an Assigned RFID Credential

1




Unlock: Present an assigned RFID credential.
Relock: Close the door.

Operate with an Assigned Mobile ID Credential

2a

2b

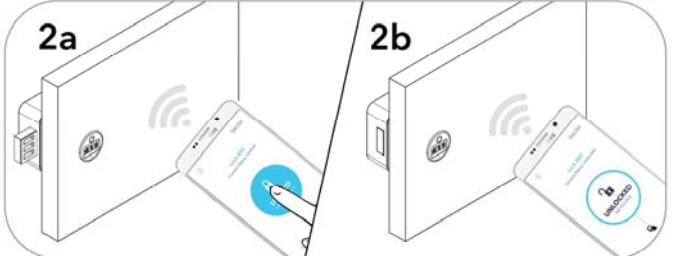

Unlock: Present an assigned Mobile ID credential and press the locked icon within the Mobile ID app to unlock.

Relock: Close the door.

NOTE: Mobile ID app will show current status of the lock.

Operate with an Admin or Manager RFID Credential

1




Unlock: Present a valid Admin or Manager RFID credential.
Relock: Close the door.

Operate with an Admin or Manager Mobile ID Credential

2a

2b

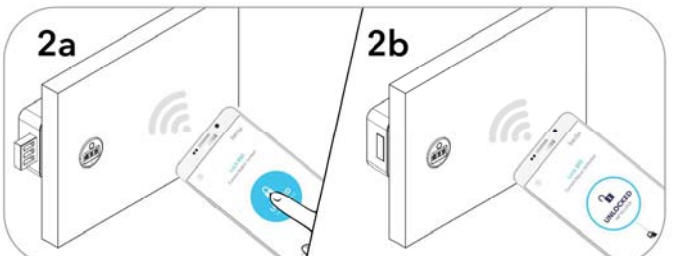

Unlock: Present a valid Admin or Manager Mobile ID credential and press the locked icon within the Mobile ID app to unlock.


Relock: Close the door.

NOTE: Mobile ID app will show current status of the lock.

Remote Unlock Using the DigiLink App

1a

1b

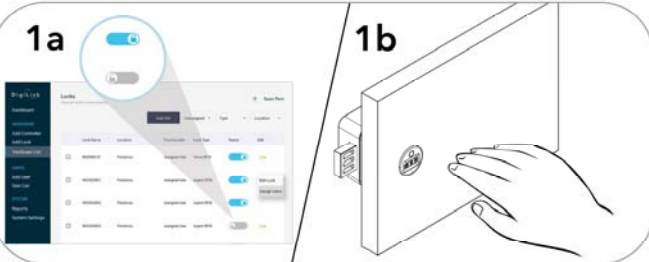

Unlock: Admin must locate the specific lock to be unlocked on the hardware list within the DigiLink app then toggle the switch next to the lock name to the unlocked position.
Once toggled, User must present hand to the lock interface to unlock.

Relock: Close the door.

SUPPORT

Error Condition Indicators

10 rapid beeps:

The lock is binding which means that either door alignment or stored items are preventing the lock from operating. Press on the door while operating the lock. If error condition persists, contact Digilock support for assistance.

2 sets of three beeps:

The batteries are low. Replace the batteries.

Does Not Unlock with an RFID Credential or Mobile ID

The lock does not recognize the RFID credential or Mobile ID. For immediate access, operate with a valid Admin or Manager credential or remotely unlock with the DigiLink app. If in assigned use functionality, follow the [Registering Users](#) and [Assign Users](#) instructions located in the [DigiLink Initialization and Registration Guide](#) to assign a user credential and assign user access to the lock(s).

Does Not Operate with an Admin or Manager Credential

The lock does not recognize the Admin or Manager credential. Follow instructions to [Assign Managers](#) located in the [DigiLink Initialization and Registration Guide](#). For immediate access, operate with another valid Admin or Manager credential or remotely unlock with the DigiLink app.


Does Not Operate with the DigiLink App

The lock may have not been added to the network. Follow the [Lock Initialization](#) instructions located in the [DigiLink Initialization and Registration Guide](#) to add the lock to the network. If the lock is still non-functional with the DigiLink app after following those instructions, contact Digilock support for additional assistance.

No Audible Feedback or LED


- The batteries may need to be replaced. For immediate access, operate with the DigiLink app or a Power Jumper Key.

USING THE POWER JUMPER KEY

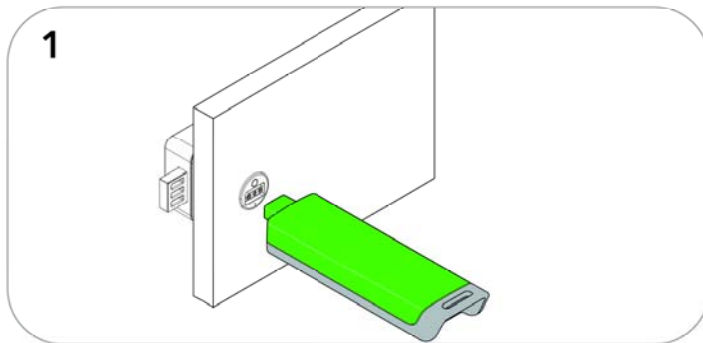


Insert the Power Jumper Key into the key slot. The LED will flash several times, a three tone beep will be heard and the LED will turn off.

IMPORTANT: Leave the key inserted until the lock is properly opened.

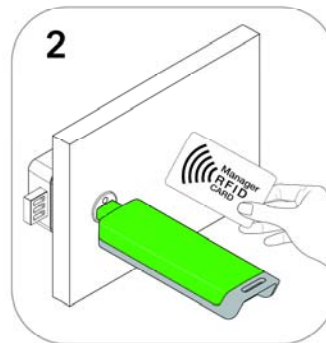

or

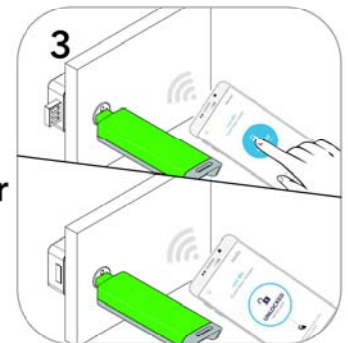

While the key is inserted, present a valid User, Admin, or Manager RFID credential or present a valid User, Admin, or Manager Mobile ID credential and press the locked icon within the Mobile ID app to unlock.


After gaining access to the lock, change the batteries as soon as possible. The batteries are located in the rear of the lock.

NOTE: Mobile ID app will show current status of the lock.


BATTERY REPLACEMENT

It is not necessary to remove the lock from the door. In case of battery failure while the door is locked, operate with a Power Jumper Key.


CAUTION: Risk of explosion or leakage if battery is replaced by an incorrect type, mixed with a different battery type, or inserted backwards. Replace all batteries of a set at the same time. Be sure to insert batteries with correct polarities. Remove exhausted batteries from product promptly and dispose of used batteries according to the battery manufacturer's instructions.

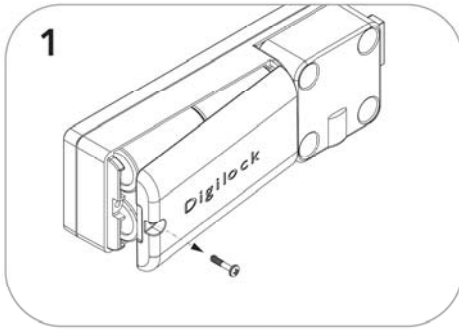

1 Remove the screw from the Cover Plate with a Phillips head screwdriver. Remove the Cover Plate by lifting the tab at the edge of the cover.

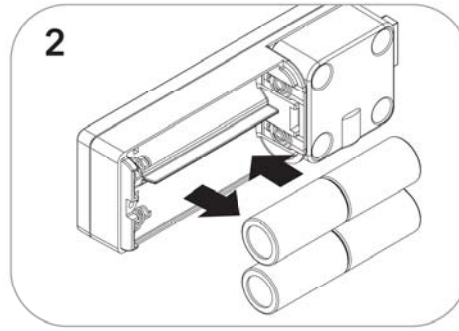

2 Remove the batteries from the housing. Replace with four premium lithium 123A batteries. Dispose or recycle used batteries according to local regulations.

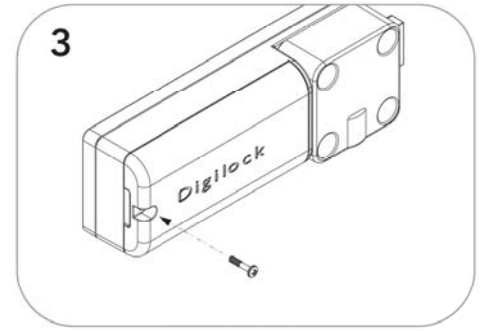

3 Replace the Cover Plate and secure with the screw.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.