# **PRODUCT USER MANUAL**



# EMBC01

## **TABLE OF CONTENTS**

1.	PURPOSE	2
	USER INSTRUCTIONS	
	2.1. STATE MACHINE DEFINITION	
3.	BATTERY REPLACEMENT INSTRUCTIONS	4
4.	FCC & IC AUTHORIZATION	5
5.	CE AUTHORIZATION	5





## 1. PURPOSE

This is the product user manual. It contains FCC/CE/IC information, battery replacement instructions and a general user's guide.



### 2. USER INSTRUCTIONS

EMBC01 is a Bluetooth low-energy proximity beacon. It is controlled by a push button switch operated by pressing on the center section of the coin like disc. Two LEDs, one red and one green will flash to indicate the state that the beacon is in according to the state machine description given below. The standard firmware provided with each beacon is V2.5.0, and implements the state machine described below, other state machines and beacon operations can be defined by reprogramming the EMBC01.

#### 2.1. STATE MACHINE DEFINITION

The state-diagram for the EMBC01 is shown in Figure 1. The firmware implements the following modes:

- Self-test
- Sleep-mode
- ID Short Range Mode
- ID Medium Range Mode
- ID Long Range Mode
- Lock Mode

Upon insertion of the battery, a self-test is performed, and the EMBC01 then enters a low-power sleep mode. On subsequent short button presses (less than 2 seconds), the green LED flashes once and iterates through ID Short Range Mode, ID Medium Range Mode, and ID Long Range Mode. On the next short button press, the red LED flashes once and then the EMBC01 enters the low power sleep mode again. Subsequent short presses iterates through these four modes again. In any state, if a long button press is performed (longer than 2 seconds), the green LED will flash twice and the EMBC01 will stay in that mode until the end of battery life.

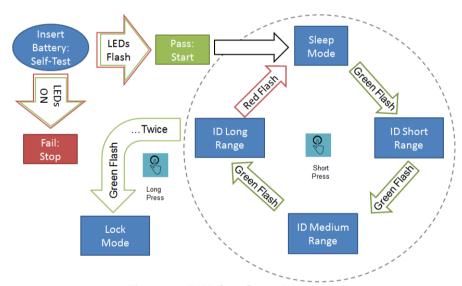


Figure 1: EMBC01 State-Diagram




## 3. BATTERY REPLACEMENT INSTRUCTIONS

The EMBC01 is powered by a single CR2032 battery. When the beacon stops functioning the battery will need to be replaced. The step-by-step sequence to replace the expired battery with a fresh one is given in the steps below.

Step 1: Open the beacon housing. Grasp the unit by the edges and pry the top off, exposing the circuit board, battery and battery holder.



Step 2: Remove the battery. Slide the battery out from the holder.

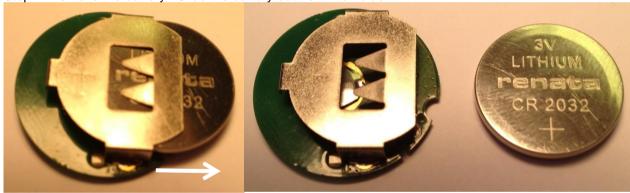

Step 3: Replace the battery with a new Renata CR2032 Lithium 3V battery. Reverse the sequence in step2 above. Care must be taken to insert with a slight downward pressure so as not to damage the metal dome switch that is located under the battery. On initial battery insertion both the red and green LEDs will flash momentarily to indicate the start-up diagnostics have been completed successfully.

Step 4: Reassemble the case making sure the top is securely positioned around the bottom housing.





### 4. FCC & IC AUTHORIZATION

This device complies with FCC Part 15 and Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

This device complies with Health Canada's Safety Code. The installer of this device should ensure that RF radiation is not emitted in excess of the Health Canada's requirement.

Cet appareil est conforme avec Santé Canada Code de sécurité 6. Le programme d'installation de cet appareil doit s'assurer que les rayonnements RF n'est pas émis au-delà de l'exigence de Santé Canada.

"Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

"Les changements ou modifications non expressément approuvés par la partie responsable de la conformité pourraient annuler l'autorité de l'utilisateur à utiliser cet équipement."

#### 5. CE AUTHORIZATION

Hereby, EM Microelectronic – Marin SA, declares that this EMBC01 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Par la présente EM Microelectronic – Marin SA déclare que l'appareil EMBC01 est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

The complete Declaration of Conformity can be found at http://www.emmicroelectronic.com/products/wireless-rf