

# Fan Coil Thermostat

MH8-FC/MH8-FC4

## Introduction

MCOHome Fan Coil Thermostat is a Z-Wave enabled device for indoor temperature control. It is mainly applied to a 2-pipe or 4-pipe Fan coil system. It can read room temperature and local time, and automatically control fan speed based on the temperature difference. The device is of high reliability and practicability. This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from any other manufacturers.

## Features:

- Capacitive touch buttons
- Tempered glass panel, PC alloy enclosure
- Precise temperature calibration function
- Non-volatile Memory, working state saved even power failure
- Intelligent on/off control of 3-speed fan, electric (ball) valve or air-valve
- Easily steel frame back plate installation



## Specification

- |   |   |
|---|---|
| ● Power Supply: AC85V~260V, 50/60HZ                       | ● Temp. Setting :5~35°C (41~95°F)   |
| ● Resistive Load: ≤3A                                     | ● Dimension: 86* 86*42mm  |
| ● Self Consumption: <1W                                   | ● Hole Pitch : 60-65mm ( 86 Standard junction box )                           |
| ● Temperature Sensor: NTC 15K                             | ● Z-Wave Frequency: 868.42MHz(EU)/ 908.4MHz(US) or other customized frequency |
| ● Display Accuracy: 0.1 °C                                |   |
| ● Working Environment: 0~55°C; <95% RH (Non-condensation) |   |

## Safety Information

To protect yourself and others from danger and to protect the device from damage, please read the safety information before using it.

## Important!


- A qualified electrician with the understanding of wiring diagrams and knowledge of electrical safety should complete installation following the instructions.
- Before installation, please confirm the real voltage complying with the device's specification. Cut off any power supply to secure the safety of people and device.
- During installation, protect the device from any physical damage by dropping or bumping. If happens, please contact the supplier for maintenance.
- Keep the device away from acid-base and other corrosive solids, liquids, gases, to avoid damage.
- Avoid overexertion during operation, to protect device from mechanical damage.
- Read all instructions and documentation and save for future reference.

## Installation & Wiring

### Location:

Thermostat is suggested to be installed indoor, a place with around 1.5m height above the floor where represents the average room temperature. It should be away from direct sunlight, any cover, or any heat source, to avoid false signal for temperature control.

**CAUTION: Cut off power supply at circuit breaker or fuse before installation to avoid fire, shock or death!**

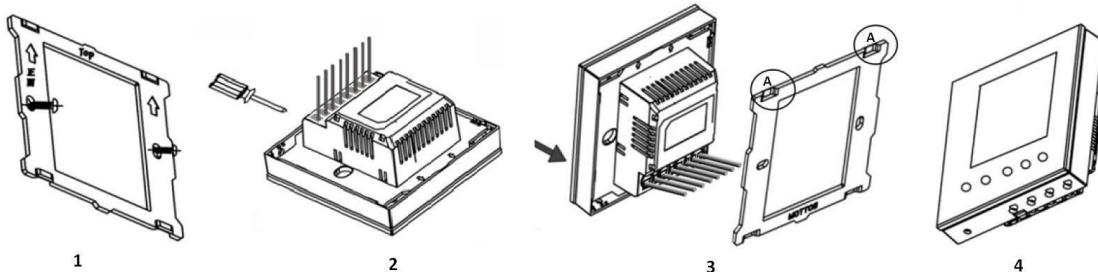


**Step 1:** Remove the steel frame from the device, and secure it onto the junction box with two screws.


**Step 2:** Insert all wires into the right terminals and tighten screws. The wiring diagram is shown below.

**Step 3:** Attach the wired device on “A” points of the steel frame as shown first, and then push the whole device into junction box.

**Step 4:** Confirm the device is well mounted, power on and it is ready to operate.

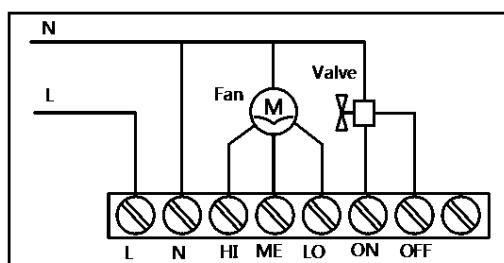


MH8-FC (2-pipe)

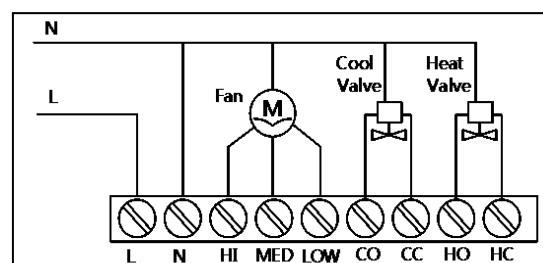

MH8-FC4 (4-pipe)

## Button & Display

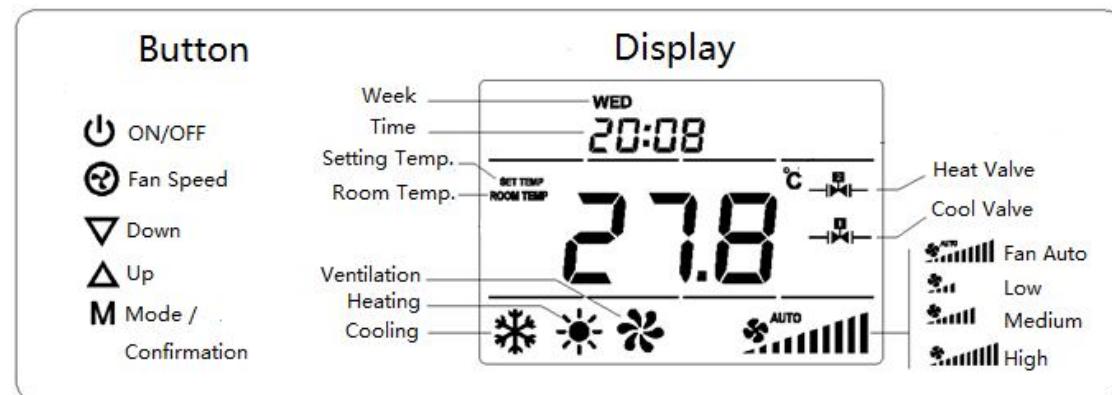

MH8-FC (2-pipe): Only  will display no matter heating or cooling

MH8-FC4 (4-pipe):  displays when cooling,  displays when heating.

## Operation

### On/Off Setting

When power on, thermostat will display “OFF”, press  to enter working interface.

When normal working, press  to turn off the device, “OFF” displays and all outputs are off.

### Local Time Setting

Press & hold “M” to enter local time setting. Touch “M” to switch among Week, Hour & Minute, and then press  or  to set the parameters of flashing item. Press “M”, or wait for 15s to save the value and return to display.

### Working Mode Setting

Touch “M” to enter working mode setting, the current mode flashing. Press  or  to switch among Cooling , Heating  & Ventilation  mode, then press “M”, or wait for 15s to confirm the choice.

### Temperature setting

Touch  or  to set local temperature value. Hold the buttons can set continuously. Press “M”, or wait for 15s to save and return to room temperature display.

### Fan Speed setting

In normal display, press  to switch among the fan Speed: “Low, Medium, High, Auto”; Then press “M”, or wait for 15s to confirm the choice.

**Note: In Ventilation mode, no Auto speed choice.**

#### ● Fan Manually control

If fan speed is manually set, the device still auto controls the fan in such situation:

Cooling Mode:

Room temperature  $\leq$  setting temperature, valve closes and fan stops;

Room temperature  $\geq$  setting temperature +1 °C, valve and fan opens.

Heating Mode:

Room temperature  $\geq$  setting temperature, valve closes and fan stops;

Room temperature  $\leq$  setting temperature -1 °C, valve and fan opens.

#### ● Fan Automation

Cooling Mode	a. Room temperature $\leq$ setting temperature, valve closes automatically, fan stops; b. Room temperature $\geq$ setting temperature +1 °C, fan turned on in low speed; c. Room temperature $\geq$ setting temperature +2 °C, fan turned on in medium speed; d. Room temperature $\geq$ setting temperature +3 °C, fan turned on in high speed;
Heating Mode	a. Room temperature $\geq$ setting temperature, valve closes automatically, fan stops; b. Room temperature $\leq$ setting temperature -1 °C, fan turned on in low speed; c. Room temperature $\leq$ setting temperature -2 °C, fan turned on in medium speed; d. Room temperature $\leq$ setting temperature -3 °C, fan turned on in high speed;

**Note: Fan will operate only if the valve opens.**

### Temperature Unit Setting

In normal display, press  and then  will flash, then hold  can switch between celsius °C and fahrenheit °F.

Note: In fahrenheit unit mode, °F will **not** be shown on the display.

### Temp. Sensor Error

If temperature sensor does not work, “E1” displays, fan stops and valve closes automatically.

### Parameter Setting

Under the shutdown state, press & hold **M** to enter parameter setting menu. The password is 5138 and press **M** to enter.

No.	Function	Range	Default	Remark
P-01	Screen Brightness	0-1	0	0: Dim without key touch 1: Always on
P-02	Fan work mode	0-1	0	0: fan and valve will be shutdown if room temp. reaches setting temp.; 1: only valve will be shutdown if room temp. reaches setting temp. The fan will continuously work in low speed.
P-03	Reserve			
P-04	Temp. Unit	0-1	0	0: Celsius 1: Fahrenheit
P-05	Beep	0-2	1	0 : Mute 1: Low 2: High
P-06	Power Failure Memory	0-2	0	When power on again: 0:device will be in shutdown state (“OFF”); 1: device will be in working interface; 2: device will stay the status before power failure.
P-07	Temp. Calibration	-5.0 ~ +5.0 °C	0°C	
P-08	Temp. upper limit	5-99.5 °C	35°C	Upper limit always > lower limit
P-09	Temp. lower limit	5-99.5 °C	5°C	
P-10	Factory restore		53	Write 55


### Z-Wave Operation

#### ● Including & Excluding of Z-Wave network

Under the shutdown state, press & hold  to enter interface for inclusion or exclusion of Z-Wave network. Before device included into network, “- - -” will display on the screen. Then press  once, device will enter learning mode to get a node ID. If inclusion is success, a node ID will display on the screen in a few seconds.

A node ID can always inform us whether the device is in the network or not.

**Note: Follow the same steps to exclude the device from the network.**

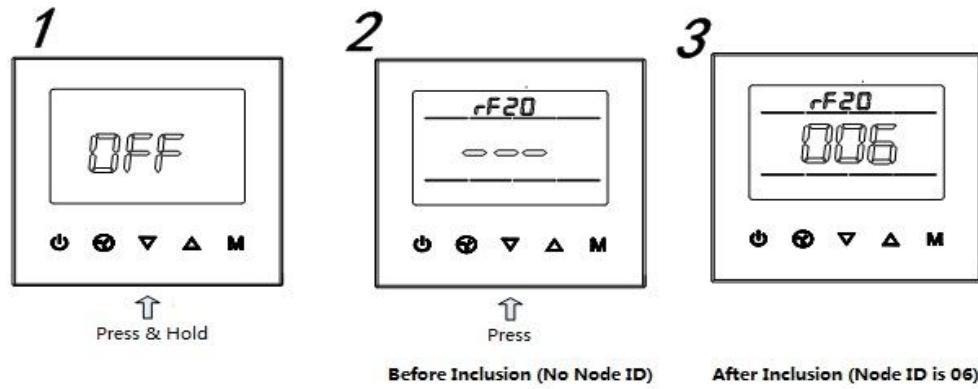

After inclusion, turn off the device and then turn it on. Now the device is ready to be operated by controller/ gateway in Z-Wave network.

- **Association Group**

Thermostat supports 1 association group. A gateway is suggested to associate with this group. Then if any changes happen, such as: temperature, working mode, fan state etc., the thermostat will report to this associated device (gateway). When the detected temperature change  $\geq 0.5^{\circ}\text{C}$ , device will send unsolicited report to the gateway.

- **Command Class supported by the device:**

```
COMMAND_CLASS_BASIC;
COMMAND_CLASS_THERMOSTAT_SETPOINT;
COMMAND_CLASS_THERMOSTAT_MODE;
COMMAND_CLASS_THERMOSTAT_FAN_MODE;
COMMAND_CLASS_THERMOSTAT_OPERATING_STATE;
COMMAND_CLASS_SENSOR_MULTILEVEL;
COMMAND_CLASS_ASSOCIATION;
COMMAND_CLASS_VERSION;
COMMAND_CLASS_MANUFACTURER_SPECIFIC
```

- **Z-Wave Parameters Setting:**

Add	Function	Byte	Options	Default	Remark
1	Upload temperature format automatically	1	0x00Celsius 0x01Fahrenheit 0x02Follow the main display	0x02	
2	Upload temperature automatically	1	0x00 OFF 0x01 Upload the difference value only 0x02 Timing upload mode only 0x03 Upload the difference+timing upload mode	0x03	
3	Upload temperature difference	2	Base on 0.1°C unit, 0x0005 by default, $5*0.1^{\circ}\text{C}=0.5^{\circ}\text{C}$ , 0x0003~0x03E8	0x0005	0.5°C

4	Upload time interval regularly	2	Base on 1s unit, it suggest to be set above 30s 0x000A~0xFFFF	0x001E	30S
FF	Factory setting	1	0x55 Restore the factory setting(write only)		Parameters setting back to default value, association groups deleted

### 1-year Limited Warranty

MCOHome warrants this product to be free from defects in material and workmanship under normal and proper use for one year from purchase date of the original purchaser. MCOHome will, at its option, either repair or replace any part of its products that prove defective by reason of improper workmanship or materials. THIS LIMITED WARRANTY DOES NOT COVER ANY DAMAGE TO THIS PRODUCT THAT RESULTS FROM IMPROPER INSTALLATION, ACCIDENT, ABUSE, MISUSE, NATURAL DISASTER, INSUFFICIENT OR EXCESSIVE ELECTRICAL SUPPLY, ABNORMAL MECHANICAL OR ENVIRONMENTAL CONDITIONS, OR ANY UNAUTHORIZED DISASSEMBLY, REPAIR OR MODIFICATION. This limited warranty shall not apply if: (i) the product was not used in accordance with any accompanying instructions, or (ii) the product was not used for its intended function. This limited warranty also does not apply to any product on which the original identification information has been altered, obliterated or removed, that has not been handled or packaged correctly, that has been sold as second-hand or that has been resold contrary to Country and other applicable export regulations.

#### FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.