

Copyright © 2022 by BTECH; <https://baofengtech.com/>

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law. For permission requests, write to the publisher.

Contributions taken from: Miklor.com Resource Site, and Jim Unroe, KC9HI. Used by permission. All rights reserved.

THANK YOU FOR YOUR PURCHASE OF THE BTECH GMRS-20V2. THIS RADIO WILL DELIVER INSTANT RELIABLE COMMUNICATION.

PLEASE READ THIS MANUAL CAREFULLY BEFORE USE

Contents

Part I. Chapter List	1
Chapter 1. – Getting Started	2
Unpacking and Inspecting	4
.....	5
GMRS-20V2: Overview of the Front Panel.....	6
Remote Speaker Jack Info	7
GMRS-20V2: Overview of the Rear Ports	8
Handheld Mic Keys Explanation	9
Handheld Mic Keys ICON Explanation	10
Programming Cable Info	11
Antenna Basics	12
Ground Plane:.....	12
Antenna Requirements	13
Chapter 2. - GMRS Information and FCC Declaration	15
GMRS Repeaters.....	15
FCC NOTICE AND DECLARATION.....	15
FCC LICENSE REQUIRED FOR GMRS OPERATION.....	16
GMRS Frequency Chart, Channel Guide	17

Chapter 3. – Basic Shortcuts and Use	18
Pound # Key.....	18
Star * Key.....	18
Turning the unit on.....	18
Turning the unit off.....	19
Adjusting the volume.....	19
Making a call.....	20
Channel selection.....	20
Channel mode.....	20
Chapter 4. – Programming Scanning Channels	21
Manual Programming.....	22
Adding GMRS Channels.....	22
Adding Receive/Scanner Channels.....	23
Deleting Channels.....	24
Computer programming	24
Chapter 5. – Other Settings.....	25
Toggle from High to Low Power.....	25
Keypad Lock-out.....	25
PTT ID Setting.....	25
DTMF RX Settings.....	25
DTMF TX Settings.....	26
DTMF Receive Settings, Transmit Setting (Call Key).....	27

2TONE Receive Settings, Transmit Setting (Call Key)	27
5Tone Receive Settings, Transmit Setting (Call Key)	27
Scanning modes	29
Time operation	29
Carrier operation	29
Search operation.....	29
SKIP Scanning Channels	30
Tone Scanning.....	30
Scanning for CTCSS and DCS Tones/Codes	30
Tri Watch (TMR)	33
Chapter 6. - Selective calling	35
CTCSS	37
DCS.....	38
1000Hz, 1450Hz, 1750Hz, 2100Hz Tone-burst	39
Part III. How-to and setup guides.	40
Chapter 7. - Customization	41
Text Display Colors	41
Sync Display Channels	42
Voice Operated Xmitter (VOX).....	43
Appendix A. – Menu Definitions	44

FCC Notice	54
Appendix B. - Technical specifications.....	56
General	56
Receiver	57
Transmit.....	57
DCS table.....	58
CTCSS table	61

Part I. Chapter List

Part one covers the basic setup and use of your mobile two-way transceiver.

CHAPTER 1. - GETTING STARTED

CHAPTER 2. - GMRS INFORMATION AND FCC DECLARATION

CHAPTER 3. - BASIC USE

CHAPTER 4. - PROGRAMMING SCANNING CHANNELS

CHAPTER 5. - OTHER SETTINGS

CHAPTER 6. - SELECTIVE CALLING

Chapter 1. – Getting Started

BEFORE PROCEEDING INSURE:

- Qualified technicians shall service this equipment only. Do not modify the radio for any reason.
- Use only BTECH supplied or approved accessories.
- **Turn off your radio prior to entering any area with explosive and flammable materials. Do NOT USE your transceiver at a gas/fuel station**
- For vehicles with an air bag, do not mount your radio in the area over an air bag or in the air bag deployment area.
- Do not expose the radio to direct sunlight over a long time, nor place it close to a heating source.
- If the unit emits smoke or an odor, you should immediately cut off the power supply. Then send the radio to the nearest service center or dealer
- Do not operate the mobile transceiver on high power unless it is necessary. Do not transmit for long periods of time, as it may overheat the transceiver.
- Keep the unit away from dusty, damp and wet environments
- Use the correct power supply (~13.8V); do not use incorrect or higher voltage (e.g. 24V)

Exposure to Radio Frequency Energy

Your BTECH radio is designed to comply with the following national and international standards and guidelines regarding

exposure of human being to radio frequency electromagnetic energy:

- United States Federal Communications Commission, Code of Federal Regulations: 47 CFR part 2 sub-part J
- American National Standards Institute (ANSI)/Institute of Electrical & Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineer (IEEE) C95. 1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-ionizing Radiation Protection (ICNIRP) 1998

To control your exposure and ensure compliance with the general population or uncontrolled environment exposure limits, transmit no more than 50% of the time. The radio generates measurable RF energy exposure only when transmitting.

Unpacking and Inspecting

- Please check the packaging of your radio for any signs of damage.
- Carefully open the box and confirm you received the items listed below.
- If you find the radio or the included accessories are damaged or lost, immediately contact your dealer.


What's in the Box



GMRS-20V2
Mobile Radio




Microphone



Power Cable (Direct Connect)



Mounting Screws
and Fuse




Mounting Bracket

FIND TUTORIALS, SUPPORT AND MORE


<https://www.facebook.com/BaoFeng.Tech.Radio> 

<https://www.youtube.com/c/Baofengtechradio> 

GMRS-20V2: Overview of the Front Panel

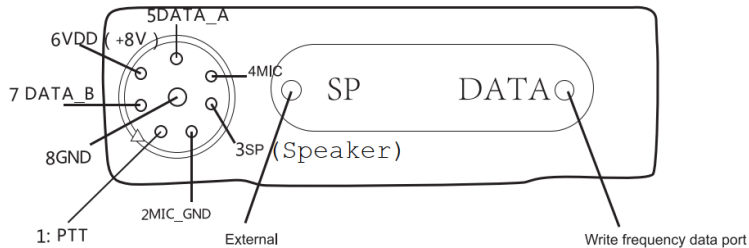

Note: the PC port is above the power supply




- 1: PTT ;
- 2: MIC_GND
- 3: SP (Speaker)
- 4: MIC
- 5: DATA_A
- 6: VDD (+8V)
- 7: DATA_B
- 8: GND


Remote Speaker Jack Info

This is the pinout of the speaker jack. It follows the TRRS wiring- you can run a cable from this jack into the AUX port on your car stereo if you desire. Then place the stereo in the AUX Input mode to hear the radio audio. *CAUTION- This is NOT a MONO speaker jack. It does require you follow the pinout below. use caution if plugging an external speaker directly in this jack.*

TRRS Line-Out Connector (Backward Compatible with TRS Stereo Speakers)

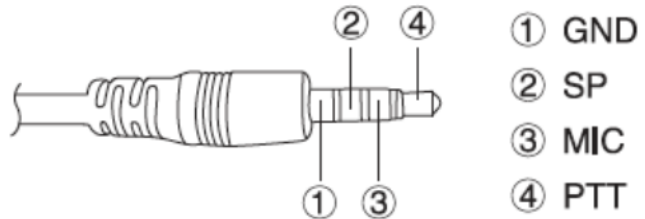

GMRS-20V2: Overview of the Rear Ports

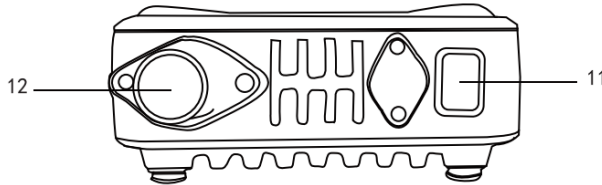


11: power cord

12: Antenna interface


Handheld Mic Keys Explanation

■ Hand microphone description

- ① Short press MOMI and long press power on
- ② Short press CALL and long press ALARM
- ③ "MENU" function key
- ④ "UP": frequency step upward
- ⑤ "DOWN": frequency step down
- ⑥ 6EXIT/VM *,exit AB channel switching, alarm function
- ⑦ * * /SCAN": frequency reversal function, scan, number * * *
- ⑧ "#/LOCK": keyboard lock function, number "#"
- ⑨ 0 ":the number 0
- ⑩ 1 ":the number 1
- ⑪ 2 ":the number 2
- ⑫ 3 ":the number 3
- ⑬ 4 ":the number 4
- ⑭ 5 ":the number 5
- ⑮ 6 ":the number 6
- ⑯ 7 ":the number 7
- ⑰ 8 ":the number 8
- ⑱ 9 ":the number 9

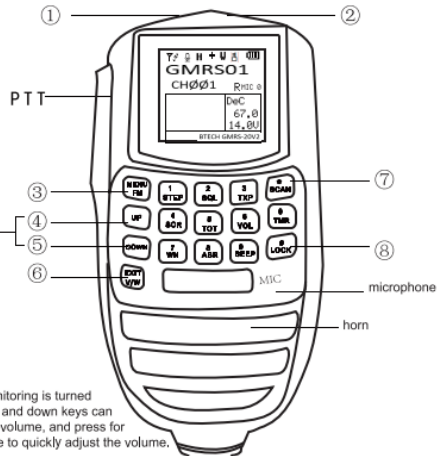

Handheld Mic Keys ICON Explanation

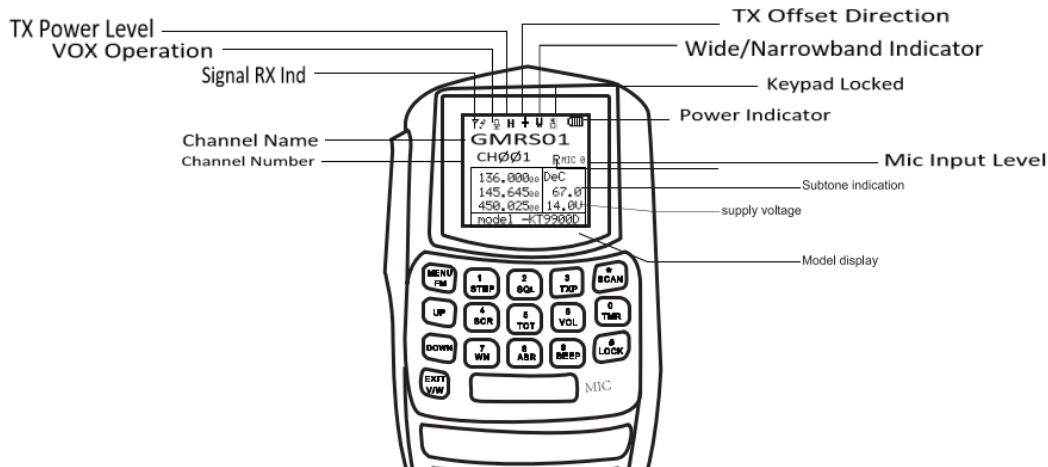

Programming Cable Info

PC-04 Cable available at: www.baofengtech.com/accessories

Programming software available at: www.baofengtech.com/download

Antenna Basics

Your Mobile Radio Kit does not include an Antenna. It is VERY Important to NOT transmit without an antenna or dummy load attached to the mobile radio. Doing so, will cause harm to the internal components of your radio.

You will want to choose a suitable antenna for the bands you plan on transmitting and receiving on. If you plan on transmitting on GMRS Channels you will want to ensure you have picked an antenna that states it is capable of working with 462-467MHz. If an antenna is not properly tuned for the frequency you transmit on – it can cause damage with the reflected power going back into the radio.

Pick an antenna with SWR of less than 1.5:1 to safely transmit

Ground Plane:

Antennas require an appropriate ground plane to properly work. This can be a car body (not a fiberglass car body, but some metal), or a set of ground radials for homebrewed antennas or commercially designed antennas which do not require an external set of radials.

Magnetically Mounted Antennas:

These antennas must be grounded to a metal surface, such as a vehicle body. Magnetic base antennas do not properly operate unless they are fully magnetically grounded first. This is usually accomplished via the metal car body. Magnetic Antennas do NOT function properly on Plastic or fiberglass bodies.

NMO or PL-259 Base Antennas:

These antennas will normally require a base or mobile hardware kit. These kits are grounded either through drill or clamp inserts on vehicles, magnetically mounted, or available as stationary base hardware kits. Some antennas may include a base station ground plane or ground radial kit.

CAUTION: When installing base antennas, stay clear of ALL power lines- they can kill you if you come in contact with them. Keep a minimum distance of 10 feet with the antenna and yourself from the lines.

Antenna Requirements

Antenna SWR Rating: 1.5:1 or less (on the radio frequencies in use.)

Antenna Impedance: 50 ohms (use 50 ohms rated coax and coax connectors)

Antenna Grounding: Ensure the antenna is mounted with a grounding plane

Visually Inspect Coax/Connectors for any Slits or Damage – moisture should not be allowed to penetrate fittings or your coax

To maximize the life of your radio, it is important to understand antenna basics before transmitting on your radio, transmitting without an antenna, or with high SWR (Standing Wave Ratio) – can void warranty support.

An Accurate SWR Meter is a great tool to have when selecting an antenna for your needs. You can monitor and confirm that your SWR is within safe levels when setting up your radio for the first time (periodically checking SWR and your antenna set-up is advised). You will need to use a SWR meter designed for the **UHF** band. Other meters will NOT read correctly. Another option is an “Antenna Analyzer”. With those you can sweep the entire UHF band and find the “sweet spot” or resonant point of your antenna. Use this information to tune for the LOWEST SWR or reflected power reading.

Chapter 2. - GMRS Information and FCC Declaration

*THE BTECH GMRS-20V2 IS FCC PART 95E CERTIFIED FOR GMRS USAGE
THE GMRS-20V2 REQUIRES A GMRS LICENSE TO TRANSMIT*

GMRS Repeaters

The channels that are labeled "REPT" run through repeaters that are set up for GMRS usage. Use these channels if you have permission from those that run your local repeater for GMRS channels.

FCC NOTICE AND DECLARATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation

The scanning receiver in this equipment is incapable of tuning, or readily altered, by the user to operate within the frequency bands allocated to the Domestic public Cellular Telecommunications Service in Part

FCC LICENSE REQUIRED FOR GMRS OPERATION

The GMRS-20V2 operates on GMRS (General Mobile Radio Service) frequencies, which require an FCC (Federal Communications Commission) license. You must be licensed prior to transmitting on all channels, which comprise of GMRS channels. Serious penalties could result for unlicensed use of GMRS channels, in violation of FCC rules, as stipulated in the Communications Act's Sections 501 and 502 (amended).

You will be issued a call sign by the FCC, which should be used for station identification when operating the radio on GMRS channels. You should also cooperate by engaging in permissible transmissions only, avoiding channel interference with other GMRS users, and being prudent with the length of your transmission time.

To obtain a license or ask questions about the license application, contact the FCC at 1-888-CALL FCC or go to the FCC's website: <https://www.fcc.gov/> and request form 605.

Or you can apply online direct for a GMRS license (<http://wireless.fcc.gov/uls/>) – a guide for this can be found at: <http://alcornema.com/gmrslisenceinfo.htm>

GMRS Frequency Chart, Channel Guide

GMRS FREQUENCY CHART

CH: Name	Ch. Freq	CH: Name	Ch. Freq	CH: Name	Ch. Freq	CH: Name	Ch. Freq	Offset
01: GMRS01*	462.56250	08: GMRS08**	467.5625	15: GMRS15	462.5500	23: REPT15	462.5500	+5MHz
02: GMRS02*	462.58750	09: GMRS09**	467.5875	16: GMRS16	462.5750	24: REPT16	462.5750	+5MHz
03: GMRS03*	462.61250	10: GMRS10**	467.6125	17: GMRS17	462.6000	25: REPT17	462.6000	+5MHz
04: GMRS04*	462.63750	11: GMRS11**	467.6375	18: GMRS18	462.6250	26: REPT18	462.6250	+5MHz
05: GMRS05*	462.66250	12: GMRS12**	467.6625	19: GMRS19	462.6500	27: REPT19	462.6500	+5MHz
06: GMRS06*	462.68750	13: GMRS13**	467.6875	20: GMRS20	462.6750	28: REPT20	462.6750	+5MHz
07: GMRS07*	462.71250	14: GMRS14**	467.7125	21: GMRS21	462.7000	29: REPT21	462.7000	+5MHz
				22: GMRS22	462.7250	30: REPT22	462.7250	+5MHz


* Per FCC GMRS Radio Guidelines; Channels 1-7 are limited to Low Power - 5watt output


**Per FCC GMRS Mobile Radio Guidelines Channels 8-14 transmitting is disabled; they can receive and monitor communications, but GMRS mobile radios cannot transmit on these channels.

Chapter 3. – Basic Shortcuts and Use


Pound # Key



Keypad Lock

A short momentary press of the  key enables power level adjustments on the current channel.

To enable or disable the keypad lock: press, and hold the  key for about two seconds. Repeat to unlock. The keypad lock will lock the microphone keypad. The PTT/MONI/and Power Buttons will not be locked when enabled.

Star * Key

A short momentary press of the  key enables the reverse function (reverses the Transmit and Receive settings according to Offset settings) This allows you to hear the signals into the system (repeater), to determine if simplex or direct radio to radio communications are possible.

To enable scanning, press and hold the  key for about two seconds. To quit scanning press the  exit key.

Turning the unit on

To turn the unit on, simply push and hold the ORANGE top button on the microphone until it turns on. If


your radio powers on correctly there should be an audible tone after about one second and the display will show a message or flash the LCD depending on settings


Turning the unit off

To turn the unit off, simply push and hold the ORANGE top button on the microphone until it turns off. The unit is now off.

Adjusting the volume

To turn up the volume, press the ORANGE microphone button (which will put the radio into MONI mode),

then use the  button to set desired level. Press the ORANGE button again to quiet the radio until a signal is received.

To turn the volume down, press the ORANGE microphone button then use the  button to set desired level.

Press the ORANGE button again to quiet the radio until a signal is received.

Making a call

Press and hold the PTT button on the side of the handheld mic to transmit. DELAY speaking for a count of 2 (think 1, 2) then speak your traffic. While transmitting, speak approximately 3-5cm (1-2 inches) from the microphone. When you release the PTT, your transceiver will go back to it receive mode.

Channel selection

Channel mode

The GMRS-20V2 is hard loaded with the 30 GMRS channels (see the GMRS Frequency Chart, Channel Guide in Chapter 2 for Channels and Transmitting restrictions). You can program additional analog scanning channels into memory channels 000 and 031-199.

You can use the  and  keys to navigate between channels.

Chapter 4. – Programming Scanning Channels

The BTECH GMRS-20V2 features 200 total memory channels that each can hold:

GMRS Channels, Receive frequencies, group signaling information, bandwidth, and a seven-character alphanumeric identifier or channel name ¹.

GMRS Channels (001-030) are the default programmed GMRS channels, you can remove and rearrange the memory locations as preferred, a radio menu reset will restore the radio to the default 30 channel lineup. Settings such as the calling (CTCSS or DCS) tone can be edited on any GMRS channels.

Channels 000-199 can be added or deleted via computer or manual programming as additional listen (receive) only channels or as GMRS channels.

Manual Programming

Adding GMRS Channels

You can add GMRS channels to the channel select list. It contains 30 channels from the factory. You can add you favorites at the end of the list to a maximum number of channels of 200 (channel 0 to 199).

1. Press the **MENU** key to enter the menu.
2. Enter "64" on the numeric keypad to get to the GMRS channel add menu item.
3. Press the **MENU** key to select.
4. Use the **▲** and **▼** keys to select an empty memory channel or enter it directly on the numerical keypad.
5. Enter the Channel number you want to add select one of the channels (1 to 30) from the list below (for example if you want to add GMRS 23 which is REPT 15, type 23)
6. Press the **MENU** key to confirm and save.
7. Press the **EXIT** key to exit the menu.

GMRS Frequency Chart, Channel Guide

GMRS FREQUENCY CHART								
CH: Name	Ch. Freq	CH: Name	Ch. Freq	CH: Name	Ch. Freq	CH: Name	Ch. Freq	Offset
01: GMRS01*	462.56250	08: GMRS08**	467.5625	15: GMRS15	462.5500	23: REPT15	462.5500	+5MHz
02: GMRS02*	462.58750	09: GMRS09**	467.5875	16: GMRS16	462.5750	24: REPT16	462.5750	+5MHz
03: GMRS03*	462.61250	10: GMRS10**	467.6125	17: GMRS17	462.6000	25: REPT17	462.6000	+5MHz
04: GMRS04*	462.63750	11: GMRS11**	467.6375	18: GMRS18	462.6250	26: REPT18	462.6250	+5MHz
05: GMRS05*	462.66250	12: GMRS12**	467.6625	19: GMRS19	462.6500	27: REPT19	462.6500	+5MHz
06: GMRS06*	462.68750	13: GMRS13**	467.6875	20: GMRS20	462.6750	28: REPT20	462.6750	+5MHz
07: GMRS07*	462.71250	14: GMRS14**	467.7125	21: GMRS21	462.7000	29: REPT21	462.7000	+5MHz
				22: GMRS22	462.7250	30: REPT22	462.7250	+5MHz

Adding Receive/Scanner Channels

To ADD a receive-only channel

1. press the **MENU** key to enter the menu.
2. Enter 46 on the numerical keypad to get to RCH-AD
3. Press **MENU** to select.
4. Use the **▲** and **▼** keys to select an empty memory channel or enter it directly on the numerical keypad.

5. Enter the frequency desired to add as a scanner/receive only channel (136-174MHz, 400-520MHz)
6. Press the **MENU** key to confirm and save.
7. Press the **EXIT** key to exit the menu.

Deleting Channels

To DELETE an added channel


1. Press the **MENU** key to enter the menu
2. Enter 47 on the numerical keypad to get to DEL-CH
3. Press **MENU** to select.
4. Use the **←** and **→** keys to select an empty memory channel or enter it directly on the numerical keypad.
5. Press the **→** key to confirm.
6. Press the **MENU** key to confirm and save.
7. Press the **EXIT** key to exit the menu.

Computer programming


The GMRS-20V2 kit does not include a programming cable. The GMRS-20V2 uses the PC04 Programming cable. To attain a cable visit: baofengtech.com The programming software is free at: baofengtech.com.

Chapter 5. – Other Settings

Toggle from High to Low Power

Also, a SHORT (momentary) press of the  key will switch from low to high power on each short press

Keypad Lock-out

Hold the microphone  for 2 seconds at standby to turn on/off the keypad lock-out function. (The Lock icon appears, when the radio is locked out), repeat to unlock.

PTT ID Setting

1. Use PC software to change PTT-ID code.
2. Set the Menu 18 settings on the radio to select the PTTID signal mode (2Tone, 5Tone, or DTMF),
3. Set the Menu 20 settings to select when the PTTID is transmitted.
4. Set the Menu 21 settings to program the PTTID transmit delay time.
5. When all the settings are set, when you transmit (Press the PTT) The radio will transmit the PTTID.





DTMF RX Settings







This radio has DTMF coding and decoding. Use the PC software to set the DTMF signal settings first.

DTMF TX Settings

In two-way radio systems, DTMF is most commonly used for automation systems and remote control. A common example would be in amateur radio repeaters where some repeaters are activated by sending out a DTMF sequence (usually a simple single-digit sequence).

Table 7.1. DTMF frequencies and corresponding codes

	1209 Hz	1336 Hz	1477 Hz	1633 Hz
697 Hz	1	2	3	A - 
770 Hz	4	5	6	B - 
852 Hz	7	8	9	C - 
941 Hz	*	0	#	D - 

The BTECH GMRS-20V2 has a full implementation of DTMF, including the A, B, C and D codes. The numerical keys, as well as the  and , keys correspond to the matching DTMF codes as you would expect. The A, B, C and D codes are located in the , ,  and  keys respectively (†).

Manually TX DTMF Tones: To manually send DTMF codes, press the key(s) while holding down the PTT key.

Automatically TX DTMF Tones:

Save it to Memory and Transmit: You can also program a DTMF tone to the saved calling list (requires the PC software) to the one of the 15 Memory call banks in the radio. To transmit select the Pre-set

DTMF saved setting on Menu 22 and then press the call key to send the saved DTMF TX tone.

DTMF Receive Settings, Transmit Setting (Call Key)

1. Press [MENU] Key select 18 OPTSIG, press [F] Key select DTMF function.
2. Press [MENU] Key select 22 S-INFO, press [F] Key select pre-code signal group (1-15). (The DTMF Signal must be saved first in the PC software setting under DTMF settings.)
3. If properly set up (on Menu 18 and 19), your radio will open the squelch when it receives the required DTMF signal.
4. Press [Call] Key to send the same DTMF you have selected in Menu 22.

2TONE Receive Settings, Transmit Setting (Call Key)

1. Press [MENU] Key select 18 OPTSIG, press [F] Key select 2TONE function.
2. Press [MENU] Key select 22 S-INFO, press [F] Key select pre-code signal group (1-15). (The 2Tone Signal must be saved first in the PC software setting under 2TONE settings.)
3. If properly set up (on Menu 18 and 19), your radio will open the squelch when it receives the required 2TONE signal.
4. Press [Call] Key to send the same 2TONE you have selected in Menu 22.

5Tone Receive Settings, Transmit Setting (Call Key)

1. Press [MENU] Key select 18 OPTSIG, press [F] Key select 5TONE function.

2. Press [MENU] Key select 22 S-INFO, press [F] Key select pre-code signal group (1-15). (The 5Tone Signal must be saved first in the PC software setting under 5TONE settings)
3. If properly set up (on Menu 18, and 19), your radio will open the squelch when it receives the required 5TONE signal.
4. Press [Call] Key to send the same 5TONE you have selected in Menu 22.

Scanning modes

The scanner is configurable to one of three ways of operation: Time, carrier or search, each of which is explained in further details in their respective section below.

1. Press the **MENU** key to enter the menu.
2. Enter “17” on your numeric keypad to come to scanner mode.
3. Press the **MENU** key to select.
4. Use the **▲** and **▼** keys to select scanning mode.
5. Press the **MENU** key to confirm and save.
6. Press the **EXIT** key to exit the menu.

Time operation

In Time Operation (TO) mode, the scanner stops when it detects a signal, and after a factory pre-set time out, it resumes scanning.

Carrier operation

In Carrier Operation (CO) mode, the scanner stops when it detects a signal, and after a factory preset time with no signal it resumes scanning.

Search operation

In Search Operation (SE) mode, the scanner stops when it detects a signal.

To resume scanning you must press and hold the ***SCAN** key again.

SKIP Scanning Channels

You can configure channels to be added or removed from the scanning list on the fly.

1. Press the **MENU** key to enter the menu.
2. Enter Menu Item 16 on your numeric keypad to come to scanning add mode.
3. Press the **MENU** key to select.
4. Use the **▲** and **▼** keys to select if the channel will be added or removed from the scanning list. On will add the channel to scan, off will remove from the scan list. The change will apply to the current channel selected
5. Press the **MENU** key to confirm and save.
6. Press the **EXIT** key to exit the menu.

Tone Scanning

Scanning for CTCSS and DCS Tones/Codes

CTCSS tone and DCS code scanning mode can be accessed with or without a signal being present. The scanning process itself only occurs while a signal is being received.

Not all repeaters requiring a CTCSS tone or DCS code for access will transmit one back. In that case, the transmitter of a station that can access the repeater would need to be scanned. In other words: this would be done by listening to stations on the repeater's input frequency.

Scanning for CTCSS Tone

(ACTIVE SIGNAL REQUIRED)

1. Press the **MENU** key to enter the menu.
2. Enter **1STEP 1STEP** on your numeric keypad to come to Menu 11: R-CTCS
3. Press the **MENU** key to select. **Insure you have a tone activated (and it is not off)**
4. Press the ***SCAN** to begin CTCSS scanning

The CTCSS frequency will change on the screen to indicate the radio is in CTCSS scanning mode. In this mode, whenever the radio is receiving an RF signal on the selected channel, the display will cycle through the CTCSS tones as they are being tested. Once the frequency of the received CTCSS tone is determined, the scan will stop and audio will be able to be heard from the repeater.

Press the **MENU** key to save the scanned tone into memory, then press the **EXIT** key to exit the menu.



Don't forget to set menu 11 back to OFF when the CTCSS tone is no longer required.

Scanning for a DCS tone

(ACTIVE SIGNAL REQUIRED)

1. Press the **MENU** key to enter the menu.
2. Enter **1STEP 0SQL** on your numeric keypad to come to Menu 10: R-DCS
3. Press the **MENU** key to select. **Insure you have a tone activated (and it is not off)**
4. Press the ***SCAN** to begin DCS scanning

The DCS code will change on the screen to indicate the radio is in DCS scanning mode. In this mode, whenever the radio is receiving an RF signal on the selected channel, the display will cycle through the DCS codes as they are being tested. Once the bits of the received DCS code are determined, the scan will stop and audio will be heard from the repeater.

Press the **MENU** key to save the scanned tone into memory then press the **EXIT** key to exit the menu.



Don't forget to set menu 10 back to OFF when the DCS tone is no longer required.

Tri Watch (TMR)

In certain situations, the ability to monitor two, or three channels at once can be an asset.

The BTECH GMRS-20V2 features Tri Watch functionality with the ability scan between three frequencies at a fixed interval and to lock the transmit frequency to one of the three channels it monitors

1. Press the **MENU** key to enter the menu.
2. Enter “0” on the numeric keypad to get to the TMR Watch Settings
3. Press **MENU** to select which channels are monitored (See Appendix A).
4. Use the **▲** and **▼** keys to enable or disable.
5. Press the **MENU** key to confirm.
6. Press the **EXIT** key to exit the menu.

Due to the way the BTECH GMRS-20V2 is constructed, whenever one of the A, B, or C Frequencies goes active, it will default to transmit on that channel for the time you have selected on Menu 54 – this can be turned off and is explained below:

Replying on the last active channel

1. Press the **MENU** key to enter the menu.
2. Enter 62 on the numeric keyboard to get to TMR-TX.
3. Press the **MENU** key to select.
4. Select TRACK to reply on the channel with the last activity.
5. Press the **MENU** key to confirm.
6. Press the **EXIT** key to exit the menu.
7. The radio will now transmit on the channel which had the last activity, the amount of time before it reverts to transmitting on the primary selected channel is set in menu 54

Locking the Default transmit channel

1. Press the **MENU** key to enter the menu.
2. Enter 62 on the numeric keypad to get to TMR-TX.
3. Press **MENU** to select.
4. Select FIXED to always reply on the primary selected channel. (Menu 54).
5. Press the **MENU** key to confirm.
6. Press the **EXIT** key to exit the menu.
7. The radio will now only transmit on the Main channel selected (The Main Frequency indicator arrow will be pointing at the display set as primary)

Chapter 6. - Selective calling

Sometimes when you're working with larger groups of people using the same channel, things can get very crowded, very fast. To minimize this problem, several methods of blocking out unwanted transmissions on your frequency have developed. In general, there are two forms of selective calling in two-way radio systems: Group calling, and individual calling.

Group calling, as the name suggest, is a one-to-many form of communication. Every radio in your working group is configured the same way and any radio will make contact with every other radio in the group.

Individual calling, sometimes also known as paging, is a one-to-one form of communication. Every radio is programmed with a unique ID code. And only by sending out a matching code can you get that radio to open up to your transmissions.

The BTECH GMRS-20V2 features three additional ways of group calling
(2TONE, 5TONE, AND DTMF CALLING ARE FOUND IN CHAPTER 5):

- *CTCSS*
- *DCS*
- Tone-burst (1000Hz, 1450Hz, 1750Hz, 2100Hz)



Using these features does NOT mean that others won't be able to listen in on your transmissions.

They only provide a method to filter out unwanted incoming transmissions. Any communications made while using these features will still be heard by anyone not employing filtering options of their own.

You can change the CTCSS or DCS settings while in memory (MR) mode.

CTCSS and 1750Hz tone-burst are also popular methods among amateur radio operators to open up repeaters.

CTCSS

CTCSS is set with menus 11 R-CTCS and 13 T-CTCS.

Procedure 8.1. CTCSS setup how-to

1. Press the **(MENU)** key to enter the menu.
2. Enter **(1STEP)** **(1STEP)** on the numeric keypad to get to receiver CTCSS.
3. Press **(MENU)** to select.
4. Enter desired CTCSS sub-tone frequency in hertz on the numeric keypad.
5. Press **(MENU)** to confirm and save.
6. Enter **(1STEP)** **(3SAVE)** on the numeric keypad to go to transmitter CTCSS.
7. Press **(MENU)** to select.
8. Enter desired CTCSS sub-tone frequency in hertz on the numeric keypad. Make sure it's the same frequency as that you entered for receiver CTCSS.
9. Press **(MENU)** to confirm and save.
10. Press **(EXIT)** to exit the menu system.

To turn CTCSS off, follow the same procedure but set it to off with the **(0SQL)** key instead of selecting a CTCSS sub-tone frequency.

For more information see the section called “11 R-CTCS - Receiver CTCSS” and the section called “13 T-CTCS - Transmitter CTCSS” in Appendix B, Menu definitions.

DCS

DCS is set with menus 10 R-DCS and 12 T-DCS.

For a complete list of available DCS codes, see Table C.1, “DCS Codes” in Appendix C, *Technical specifications*.

Procedure 8.2. DCS setup how-to

1. Press the **(MENU)** key to enter the menu.
2. Enter **(1STEP)(0SQL)** on the numeric keypad to get to receiver DCS.
3. Press **(MENU)** to select.
4. Scroll to the desired DCS code on the numeric keypad.
5. Press **(MENU)** to confirm and save.
6. Enter **(1STEP)(2TXP)** on the numeric keypad to go to transmitter DCS.
7. Press **(MENU)** to select.
8. Scroll to the desired DCS code on the numeric keypad. Make sure it's the same code as that you entered for receiver DCS.
9. Press **(MENU)** to confirm and save.
10. Press **(2TXP)** to exit the menu system.

To turn DCS off, follow the same procedure but set it to off with the **(0SQL)** key instead of selecting a DCS code.

For more information see the section called “10 R-DCS - Receiver DCS” and the section called “12 T-DCS - Transmitter DCS” in Appendix B, *Menu definitions*.

1000Hz, 1450Hz, 1750Hz, 2100Hz Tone-burst

To send out a tone-burst; you simultaneously will press the PTT key while holding down the Call button.

To configure which Tone Burst is transmitted select the Tone Burst desired from Menu Item 50 (REP-S)

PTT + **CALL** = Selected Tone Burst (Selectable in Menu 50: REP-S)

Part III. How-to and setup guides.

Part three covers is a collection of how-to documents to help you set up your radio for specific working environments.

Chapter 7. - Customization

Text Display Colors

The LCD on the BTECH Mobiles are backlit multi-color LEDs, the color of which can be pre-set from the menu system into a variety of colors.

To change the colors, follow these steps:

1. Press the **MENU** key to enter the menu.
2. Enter one of the following on your numeric keypad:
 - a. 33 to change the status icons text color
 - b. 34 to change the primary selected channel/frequency display text color
 - c. 35 to change the channel A text color
 - d. 36 to change the channel B text color
 - e. 37 to change the channel C text color
 - f. 38 to change the decode tone text color
 - g. 39 to change the voltage text display text color
 - h. 40 to change the status (bottom) bar display color
 - i. 41 to change the menu text display color
 - j. 42 to change the transmitting channel foreground text color
 - k. 43 to change the receiving channel foreground text color

3. Press **MENU** key to select.
4. Use the **▲** and **▼** keys to pick the desired color.
5. Press **MENU** to confirm and save.
6. Press **EXIT** to exit the menu.

Sync Display Channels

To sync channels on the display (simultaneously display channel name and frequency), follow these steps:

1. Press the **MENU** key to enter the menu.
2. Enter 32 on your numeric keypad to come to the Sync Menu
3. Press **MENU** key to select.
4. Use the **▲** and **▼** keys to select:
 - a. AB –To sync A/B Displays
 - b. AC – To sync A/C Displays
 - c. BC – To sync B/C Displays
 - d. ABC- to sync ABC Displays
5. Press **MENU** to confirm and save.
6. Press **EXIT** to exit the menu.

Use SYNC in Conjunction with Menus 27,28, & 29 to coordinate what is displayed on each line (Name, Frequency, or Channel Number) –See *Appendix B Menu definitions*

Voice Operated Xmitter (VOX).

VOX or voice operated transmitter (Xmitter) is allowing just your voice to key the transmitter to send a transmission. The microphone will switch the radio from receive to transmit by hearing any sound it can detect, including your voice. This should only be used in a quiet atmosphere, and any background noise which can be picked up will switch the radio from transmit to receive. By using this you do not use the PTT button on the side of the microphone to transmit.

To use VOX, follow these steps:

1. Press the **MENU** key to enter the menu.
2. Enter 30 on your numeric keypad to come to the VOX Menu
3. Press **MENU** key to select.
4. Select from Off, or any number (which sets the sensitivity level of the microphone to detect and switch) from 1 to 10, with 10 being the highest level (most sensitive)
5. Press **MENU** to confirm and save.
6. Press **EXIT** to exit the menu.

Appendix A. – Menu Definitions

0	TMR	Transmit Multi Receive	<p>OFF M+A M+B M+C M+AB M+AC M+BC M+ABC</p>	<p>This mode selects what displays are monitored in the background besides the primary selected channel. You can mix and match between all or partial channels to allow tri watch</p> <p>Selected Memory + Displays (A, B, C)</p> <p>M = Selected Memory A = Display A B = Display B C = Display C</p>
1	STEP	Frequency Step Size Setup	2.5 to 25. kHz	2.5, 5, 6.25, 10, 12.5, 25 kHz
2	SQL	Squelch Level	00 > 09	<p>10 squelch levels</p> <p>00 = minimum / normally open</p>
	TXP	Transmit Power	High	Full Power – 50W
			Mid	Mid Power – 20W
			Low	Low Power – 5W
4	AUTOLK	Auto Keypad Lock	ON	Keypad Auto Lock Enabled
			OFF	Keypad Auto Lock Disabled
5	TOT	TX Time Out	15 > 600 secs	15 second steps

		Timer		
6	APO	Auto Power Off	30 - 300 minutes	Time Set that radio will Power Off after last signal received.
			OFF	Turn off APO Option
7	WN	Bandwidth	Wideband	25.0 kHz
			Narrowband	12.5 kHz
8	ABR	Display Backlight Time	Off, 1-50 Sec	Time delay to shut off Display Backlight
9	BEEP	Beep Prompt	ON / OFF	Turn ON / OFF beep prompt
10	R-DCS	Receive - Digital Coded Squelch	D023N > D754I	Squelch opens when proper DCS code is detected
			OFF	Turns off Decode, all signals will be heard.
11	R-CTCS	Receive - Analog Tone Squelch	67.0 > 254.1 Hz	Squelch opens when proper CTCSS tone detected
			OFF	Turns off Decode, all signals will be heard.
12	T-DCS	Transmit - DCS Code	D023N > D754I	Transmits specified code
			OFF	No DCS code transmitted
13	T-CTCS	Transmit - CTCSS Code	67.0 > 254.1 Hz	Transmits specified tone
			OFF	No CTCSS tone transmitted
14	DTMFST	Determines when DTMF codes are heard through speaker	OFF	No DTMF tone heard
			KEY	Only manually keyed DTMF codes are heard
			ID	Only automatically keyed DTMF codes are heard
			BOTH	All DTMF codes are heard
15	BCL	Busy Channel Lockout	ON	Prevents transmit if active signal on the channel during scan

			OFF	No lockout
16	SC-ADD	Add Scan Channel	ON	Add channel to scan list
			OFF	Remove channel from scan list
17	SC-REV	Scan Resume Method	TO	(Time Operation) Scan stops when signal detected. The scan resumes after approximately 5 seconds (even if the channel is still active).
			CO	(Carrier Operation) Scan stops when signal detected. Scan resumes when signal disappears.
			SE	(Search Operation) Scan stops when signal detected. Scanning will not resume.
18	OPTSIG	Optional Signaling	OFF	No optional signaling
			DTMF	DTMF signaling selected
			2TONE	2TONE signaling selected
			5TONE	5TONE signaling selected
19	SPMUTE	Speaker Mute Settings	QT	Squelch opens for CTCSS/DCS tones only.
			AND	Squelch opens when CTCSS/DCS tone is recognized along with the optional signaling.
			OR	Squelch opens when either the CTCSS/DCS tone OR the optional signaling is recognized.
20	PTT-ID	PTT ID - When to send	OFF	Do not send
			BOT	Send at Beginning of Transmission
			EOT	Send at the End of Transmission
			BOTH	Send at both Beginning and End
21	PTT-LT	PTT ID - Transmit Delay	0 > 30	Set Delay Time before transmitting PTT-ID

22	S-INFO	Auto Group Dialing	Group Signal Code Memory	1 > 15 Can only be set with software
23	EMC-TP	Alarm Mode	OFF	Alarm Mode Completely Disabled
			ALARM	Turn on Alarm sound
			ANI	Send Alarm code and ID code
			BOTH	Both of the above
24	EMC-CH	Alarm Channel	000 > 200	Specified Alarm Channel
25	SIG-BP	Signal Beep	ON	Pager Ring at Reception of Matching 2Tone/5Tone/DTMF
			OFF	Tone OFF
26	CHNAME	Channel Name Edit	In Channel Mode, edits the Current Name	
27	CA-MDF	Channel A Display Mode	FREQ	In Channel Mode, display the selected format in display A
			CH	
			NAME	
28	CB-MDF	Channel B Display Mode	FREQ	In Channel Mode, display the selected format in display B
			CH	
			NAME	
29	CC-MDF	Channel C Display Mode	FREQ	In Channel Mode, display the selected format in display C
			CH	
			NAME	
30	CD-MDF	Channel D Display Mode	FREQ	In Channel Mode, display the selected format in display D
			CH	
			NAME	

31	VOX-T	VOX Delay	0-20 milliseconds	Delay before radio returns to receive after VOX turns on transmitter and user stops talking/ noise disappears from background
32	SYNC	Display Sync	OFF	Separate A/B/C channel display.
			AB	Synchronizes display AB, AC, BC, or ABC
			AC	
			BC	
			ABC	
33	ST-FC	Status Icons Color Foreground Color	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
34	MF-FC	Primary Selected Channel Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
35	SFA-FC	Display Channel A Text Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
36	SFB-FC	Display Channel B Text Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY

37	SFC-FC	Display Channel C Text Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
38	SUB-FC	Decode Tone Text Color Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
39	FM-FC	Voltage Text Display Color Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
40	SIG-FC	Status (Bottom) Bar Display Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
41	MENU-FC	Menu Text Display Color	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
42	TX-FC	Transmitting Channel Color Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY

43	RX-FC	Transmitting Channel Color Foreground Color (Text)	Select Color	WHITE, RED, BLUE, GREEN, YELLOW, INDIGO, PURPLE, GRAY
44	REP-SW	OFF		Turn off repeater function.
		RX		Used as a receiver when building a relay station (PTT key can't work)
		TX		Used as a transmitter when building a relay station
45	D-SUB	Subtone Display Switch	ON, OFF	Turn on or off Sub-audio
46	RCH-AD	Add RX Channel	000 > 199	Indicates channel number to be stored.
47	DEL-CH	Delete Channel	000 > 199	Indicates channel number to be deleted.
48	SFT-D	Frequency Shift Direction	OFF	No Offset (TX and RX same frequency or simplex)
			+	Plus shift in transmit frequency from receive frequency
			-	Minus shift in transmit frequency from receive frequency
49	OFFSET	Frequency Shift Offset Amount	00.00 > 69.99	Set Shift of SFT-D
50	ANI	ANI ID Code	Can only be set with software	
51	ANI-L	ANI Length	3, 4, 5	Length of ANI ID code
52	REP-S	Repeater Activation Tone	1000Hz 1450Hz 1750Hz	Audible tone for repeater activation (if required by system)

			2100Hz	
53	REP-M	Repeater Forwarding Mode (X-Band Repeater with 2 BTECH Mobiles)	OFF	Turns Off
			CARRI	Carrier Access
			CTDCS	DCS Access (requires DCS tone)
			TONE	CTCSS Access (Requires CTCSS tone)
			DTMF	DTMF Code Access
54	TMR-MR	TMR - Return Time Delay to Primary Channel	OFF	Function OFF - Transmits always on Primary Channel
			1 > 50 seconds	This is the delay time before returning to the primary channel after secondary signal is clear. Sets the PTT to the last received transmission channel. Time delay selectable
55	STE	Squelch Tail Elimination	OFF	Function OFF
			ON	Eliminates squelch tail at end of transmission on receiving radio.
56	RP-STE	Repeater Squelch Tail Elimination <i>(Requires a repeater using this function.)</i>	OFF	Function OFF
			1 > 10	Delay Time
57	RPT-DL	Repeater squelch tail delay.	OFF	Function OFF
			1 > 10	Delay Time
58	DTMF-G	DTMF Gain / Audio Level	0 > 60	0 = Lowest Audio Gain
				60 = Highest Gain
59	MIC-G	Microphone	0 > 127	0 = Lowest Audio Gain

		Gain /Audio Level		127 = Highest Gain
60	SKIPTX	Tri Frequency Operation: Randomize transmitting channels - with another corresponding mobile on the same 3 channels transmissions can be spread apart on the three channels in 2 modes.	OFF	Turns off Randomizing Transmit frequency.
			SKIP1	Randomizes in between after both transmitting and receiving, requires both a received and a transmission before going to another random frequency
			SKIP2	Alternates transmitting on A, B, C - each PTT press the radio will transmit on the next channel in order of their display (A-B-C-Repeat) <i>Requires a GMRS-20V2 on both ends with identical programming to work</i>
61	SC-MOD	Automatic Scan Resume Method	OFF	Scan is disabled with a Radio Reboot, or by Pressing a Menu Key / PTT
			PTT-SC	Scanning will resume after transmitting (or other Menu Operations)
			MEM-SC	Scan Memory during Radio Reboot: If scanning was active when the radio was powered down, the radio will resume scanning on restart. (Scanning also resumes after transmitting or other Menu Operations)
			PON-SC	Power on Scan: The radio will start scanning upon

				turning on - no matter what state it was in when powering down. Also, the radio will scan after Menu operations or transmitting
62	TMR-TX	Track		TRACKED is used in conjunction with Menu52 and will transmit in response to the active receiving channel (depending on the TMR delay time you have set on Menu 52 before returning to the primary selected channel.
		FIXED		FIXED- Will only TX on Primary Selected Channel
63	VOL	Volume Level	0,1,2,3....58	Adjust the output volume of the radio. The higher the number, the higher the volume
64	GCH-AD	Quick GMRS Channel Add	GCHxx	Quickly add GMRS channel. XX is the GMRS channel number to be added
65	SAVE	Battery Save Ratio	OFF, 1:1, 1:2, ... 1:8	Selects the ratio of sleep cycles to awake cycles(1:1, 1:2...1:8).The higher the number the longer increases the RX sleep cycle, but you may miss the first few syllables before the RX opens.
66	RESET	Initialize to Factory Defaults	VFO	Menu Initialization
			ALL	Resets to factory default arrangement. Menu and Channel Initialization

FCC Notice



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

Appendix B. - Technical specifications

General

Specification	Value
Frequency Range (MHz)	65-108 (Rx only) 136-174 (Rx) 400-520 (Rx) GMRS Channels (Rx/Tx) (Channels 001-007, 015-030) GMRS Channels (Rx Only) (Channels 008-014)
Memory channels	200
Frequency stability	2.5ppm
Frequency step (kHz)	2.5K/5.0K/6.25K/10.0K/12.5K/25.0K
Squelch Setup	CARRIER / CTCSS / DCS / 5Tone / 2TONE / DTMF
Antenna impedance	50 Ohm
Operating temperature	-20°C to +60°C
Supply voltage	13.8V DC±15%: 7A Peak GMRS-20V2
Dimension	GMRS-20V2: 4.0(W) x 1.50 (H) x 5.0 (D)in 2.2lb
Operating Temperature	-5°F - +140°F

Receiver

Receiver specifications

	Broadband	Narrow band
Sensitivity	$\leq 0.25\mu\text{V}$	$\leq 0.35\mu\text{V}$
Channel choice	$\geq 70\text{dB}$	$\geq 60\text{dB}$
Intermodulation	$\geq 65\text{dB}$	$\geq 60\text{dB}$
Spurious Rejection	$\geq 70\text{dB}$	$\geq 70\text{dB}$
Audio response	+1~-3dB (0.3-3KHz)	+1~-3dB (0.3~2.55KHz)
Signal to noise ratio	$\geq 45\text{dB}$	$\geq 40\text{dB}$
Audio Distortion	$\leq 5\%$	
Audio output power	$\geq 2\text{W}@10\%$	

Transmit

	Broadband	Narrow band
Output power	20W/ 5W - GMRS-20V2	
Modulation Mode	16K Φ F3E	11K Φ F3E
Channel Power	$\geq 70\text{dB}$	$\geq 60\text{B}$
Signal to noise ratio	$\geq 40\text{dB}$	$\geq 36\text{dB}$
Parasitic harmonic	$\geq 60\text{dB}$	$\geq 60\text{dB}$
Audio response	+1~-3dB (0.3-3KHz)	+1~-3dB (0.3-2.55KHz)
Audio distortion	$\leq 5\%$	

DCS table

Table C.1. DCS Codes

Number	Code	Number	Code	Number	Code	Number	Code
001	D023N	002	D025N	003	D026N	004	D031N
005	D032N	006	D036N	007	D043N	008	D047N
009	D051N	010	D053N	011	D054N	012	D065N
013	D071N	014	D072N	015	D073N	016	D074N
017	D114N	018	D115N	019	D116N	020	D122N
021	D125N	022	D131N	023	D132N	024	D134N
025	D143N	026	D145N	027	D152N	028	D155N
029	D156N	030	D162N	031	D165N	032	D172N
033	D174N	034	D205N	035	D212N	036	D223N
037	D225N	038	D226N	039	D243N	040	D244N
041	D245N	042	D246N	043	D251N	044	D252N
045	D255N	046	D261N	047	D263N	048	D265N
049	D266N	050	D271N	051	D274N	052	D306N
053	D311N	054	D315N	055	D325N	056	D331N
057	D332N	058	D343N	059	D346N	060	D351N
061	D356N	062	D364N	063	D365N	064	D371N
065	D411N	066	D412N	067	D413N	068	D423N
069	D431N	070	D432N	071	D445N	072	D446N

073	D452N	074	D454N	075	D455N	076	D462N
077	D464N	078	D465N	079	D466N	080	D503N
081	D506N	082	D516N	083	D523N	084	D526N
085	D532N	086	D546N	087	D565N	088	D606N
089	D612N	090	D624N	091	D627N	092	D631N
091	D627N	092	D631N	093	D632N	094	D645N
094	D645N	095	D654N	096	D662N	094	D645N
097	D664N	098	D703N	099	D718N	100	D723N
101	D731N	102	D732N	103	D734N	104	D743N
105	D754N	106	D023I	107	D025I	108	D026I
109	D031I	110	D032I	111	D036I	112	D043I
113	D047I	114	D051I	115	D053I	116	D054I
117	D065I	118	D071I	119	D072I	120	D073I
121	D074I	122	D114I	123	D115I	124	D116I
125	D122I	126	D125I	127	D131I	128	D132I
129	D134I	130	D143I	131	D145I	132	D152I
133	D155I	134	D156I	135	D162I	136	D165I
137	D172I	D174I	D205I	D212I	D223I	D225I	D226I
D243I	D244I	D245I	D246I	D251I	D252I	D255I	D261I
D263I	D266I	D271I	D274I	D306I	D311I	D315I	D325I
D331I	D332I	D343I	D346I	D351I	D356I	D364I	D365I
D371I	D411I	D412I	D413I	D423I	D431I	D432I	D445I

D446I	D452I	D454I	D455I	D462I	D464I	D465I	D466I
D503I	D506I	D516I	D523I	D526I	D532I	D546I	D565I
D606I	D612I	D624I	D627I	D631I	D632I	D645I	D654I
D662I	D664I	D703I	D712I	D723I	D731I	D732I	D734I
D743I	D754I						

CTCSS table

Table C.2. Default CTCSS Frequencies

Frequency	Frequency	Frequency	Frequency
67.0	69.3	71.9	74.4
77.0	79.7	82.5	85.4
88.5	91.5	94.8	97.4
100.0	103.5	107.2	110.9
114.8	118.8	123	127.3
131.8	136.5	141.3	146.2
151.4	156.7	159.8	162.2
165.5	167.9	171.3	173.8
177.8	179.9	183.5	186.2
189.9	192.8	196.6	199.5
203.5	206.5	210.7	218.1
225.7	229.1	233.6	241.8
250.3	254.1		

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.

FCC PART 95 Warning

This device operates on GMRS (General Mobile Radio Service) frequencies, which require an FCC (Federal Communications Commission) license. You must be licensed prior to transmitting on these frequencies. Serious penalties could result for unlicensed use of GMRS frequencies in violation of FCC rules, as stipulated in the Communications Act's Sections 501 and 502 (amended). You will be issued a call sign by the FCC, which should be used for station identification when operating the radio on GMRS frequencies. You should also cooperate by engaging in permissible transmissions only, avoiding channel interference with other GMRS users, and being prudent with the length of your transmission time.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 49cm between the radiator & your body.