

Akuvox

VP-R47P User Manual

Content

1 Welcome.....	6
2 Product Overview.....	8
2.1 Instruction.....	8
2.2 Technical Specification.....	9
2.3 Equipment Appearance And Interface Description.....	10
2.3.1 Interface Description.....	11
2.3.2 Keypad Description.....	11
2.4 Indicators.....	12
3 Installation.....	13
3.1 Equipment Packaging.....	13
3.2 Connecting Video Phone.....	13
3.3 Installation Considerations.....	14
4 Getting Started.....	15
4.1 Basic Operation.....	15
4.1.1 Main Screen Instruction.....	15
4.1.2 Status And Notifications Instruction.....	15
4.1.3 Using The Touchscreen.....	16
4.1.4 Startup And Shutdown.....	17
4.1.5 View / Turn Off Notifications.....	17
4.2 Connecting To Network And Wi-Fi.....	18
4.2.1 Configuring Static IP.....	18
4.2.2 Configuring DHCP.....	19
4.2.3 Configuring PPPOE.....	20
4.2.4 Configuring Wi-Fi.....	22
4.3 SIP Account Configuration.....	25
4.3.1 Add Account.....	26
4.3.2 SIP Account ON/OFF.....	27
4.3.3 Modify/Remove SIP Account.....	28
4.4 Sound.....	29
4.4.1 Silent Mode.....	30
4.4.2 Volumes.....	31
4.4.3 Ringtone.....	31
4.4.4 System Sound.....	31
4.5 Call Settings.....	32
4.5.1 Do Not Disturb.....	32

4.5.2 Call Waiting.....	33
4.5.3 Always forwarding&Forwarding Number.....	33
4.5.4 Call forwarding busy&Forwarding Number.....	33
4.5.5 No Answer Forwarding&Forwarding Number.....	34
4.5.6 Time out.....	34
4.5.7 Playtone.....	34
4.5.8 Intercom.....	34
4.6 Dial Plan.....	34
4.7 Personalize.....	35
4.7.1 Log Level.....	35
4.8 Reboot Manager.....	36
4.8.1 Reboot time.....	36
4.8.2 Status of time.....	36
4.8.3 Status of active.....	36
4.8.4 Reboot settings.....	36
4.9 Date & Time.....	36
4.10 Personalization Settings.....	39
4.10.1 Wallpaper.....	39
4.10.2 Widgets.....	40
4.10.3 Shortcuts.....	42
4.10.4 Modify Extended Bar.....	43
4.10.5 Ringtone.....	43
4.11 Backup & Reset.....	44

5 Function.....45

5.1 Call Function.....	45
5.1.1 Make A Call.....	45
5.1.2 Receive A Call.....	48
5.1.3 Call Options.....	50
5.1.4 Call Records.....	51
5.2 Contacts.....	53
5.2.1 Contacts.....	54
5.2.2 Group.....	57
5.3 Conference.....	58
4.3.1 Create 3-way conference.....	58
5.4 Transfer.....	60
4.4.1 Blind Transfer.....	60
4.4.2 Attended Transfer.....	60
5.5 Keypad Input.....	62
5.6 Webpage Browser.....	62
5.6.1 Open The Webpage.....	62
5.7 Camera.....	63
5.7.1 Photograph Mode.....	63
5.8 Gallery.....	65

5.8.1 View Photo & Picture & Video.....	65
5.9 Bluetooth.....	66
5.9.1 Turning Bluetooth On /Off.....	67
5.9.2 Changing Bluetooth Device Name.....	67
5.9.3 Paring VP-R47P With A Bluetooth Device.....	67
5.9.4 Un-pairing A Bluetooth Device.....	68
5.10 USB.....	68
5.11 Calendar.....	69
5.11.1 Add An Account.....	69
5.11.2 View Calendar.....	70
5.11.3 New Activities.....	70
5.11.4 Edit Activities.....	71
5.11.5 Delete Activities.....	71
5.12 Clock.....	72
5.12.1 Alarm.....	72
5.12.2 Countdown Timer.....	74
5.12.3 Stopwatch.....	75
5.13 Email.....	75
5.13.1 Add A New Email Account.....	75
5.14 Music.....	76
5.15 Explorer.....	77
5.16 Video Player.....	78
5.16.1 Floating Browse Mode.....	79
5.17 BLF.....	80
5.18 BLF List.....	81
5.19 Intercom.....	81
5.20 Call Return.....	82
5.21 Others.....	83
5.21.1 Apk Installer.....	83
5.21.2 Ping Tool.....	84
6 Software Upgrade.....	88
6.1 Immediate Update.....	88
6.1.1 Select Other Upgrade Package.....	89
6.1.2 Local Update.....	89
6.1.3 Remote Update.....	90
6.2 Auto Update Period.....	91
6.3 Upgrade on the web.....	92
6.4 Check Update After System Power On.....	93
7 System Maintenance.....	94
7.1 System State Inspection.....	94
7.2 IP Query.....	94
7.3 SIP Account Registration Query.....	95

7.4 Backup & Reset.....	96
7.5 Failure Process.....	97
8 Web Interface.....	99
8.1 Web login.....	99
8.2 Status->Basic.....	99
8.3 Account->Basic.....	100
8.4 Account->Advanced.....	103
8.5 Network ->Advanced.....	106
8.6 Phone ->Call Feature.....	107
8.7 Phone-> Ext Key.....	109
8.8 Phone->Dial Plan.....	110
8.9 Upgrade->Basic.....	111
8.10 Upgrade->Advanced.....	112
8.11 Security->Basic.....	113

1 Welcome

Thank you for purchasing Akuvox VP-R47P Multimedia VoIP Phone. The VP-R47P is an innovative smart desk phone loaded with tremendous value for business communications as well as unprecedented power for advanced custom business applications development and personalization. Featuring Android 4.2 system, a 7 inch capacitive touch screen TFT LCD, a 2M CMOS sensor camera, Bluetooth, integrated PoE and Wireless, VP-R47P provides excellent user experiences such as high quality video phone, smooth internet surfing, various 3rd party applications and daily information. Built with advanced security protection for privacy, this Multimedia VoIP Phone also features broad interoperability with most 3rd party SIP based devices, IPPBX and major IMS platforms. The VP-R47P represents the future multimedia terminal in modern Internet age.

This user manual is designed to help you understand how to configure and manage the VP-R47P Multimedia VoIP Phone. Besides demonstrating how to install this unit with ease, this manual will explain how to fully utilize the phone's voice calling features as well as explore all the built-in feature-rich applications.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ✓ Reorient or relocate the receiving antenna.
 - ✓ Increase the separation between the equipment and receiver.
 - ✓ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-

2 Product Overview

2.1 Instruction

VP-R47P is an Android-based multimedia terminal with a 7 inch touch screen and a 2M CMOS sensor camera. It supports H.264/H.263 codec with adaptive bandwidth adjustment. The 7 inch touch screen offers excellent user experiences such as high quality videophone, smooth internet surfing, various Android Apps and daily information.

VP-R47P provides 2 Ethernet ports, 1USB, 1HDMI, and one 3.5mm headset/audio port.



2.2 Technical Specification

Model	VP-R47P
Graphic Display	<ul style="list-style-type: none"> ● 7 inch capacitive touch screen TFT LCD, 800x480 pixels, 16:9 wide screen aspect ratio
Camera	<ul style="list-style-type: none"> ● 2 mega pixels CMOS camera, free rotation
Network Protocol	<ul style="list-style-type: none"> ● SIP RFC3261,TCP/UDP/IP,PPPOE,RTP/RTCP
Operation System	<ul style="list-style-type: none"> ● Android 4.2
Voice Codec	<ul style="list-style-type: none"> ● G.711A/U, G.723, G.729a/b, G.722, iLBC, ● AMR-NB, AMR-WB, OPUS
Video Codec	<ul style="list-style-type: none"> ● H.263, H.264
DTMF Modes	<ul style="list-style-type: none"> ● Inband, RFC2833, SIP INFO
Audio Features	<ul style="list-style-type: none"> ● VAD, CNG, Echo Canceller G.165/G.168
Video Features	<ul style="list-style-type: none"> ● QCIF, QVGA, CIF, 4CIF, VGA ● Video bitrate: 64kbps~2Mbps ● PIP ● Full Screen ● local video ON/OFF control
Others	<ul style="list-style-type: none"> ● Download content from the specified server ● Information receiving, storing, and rendering capabilities ● Web browser ● Contacts and Call records management ● Support playing local or online video
Network Interface	<ul style="list-style-type: none"> ● Dual switched 10/100Mbps port, optional PoE
Wi-Fi	<ul style="list-style-type: none"> ● IEEE802.11 b/g/n
Expansion Interface	<ul style="list-style-type: none"> ● USB 2.0, 3.5mm headset jack, HDMI
IP assignment	<ul style="list-style-type: none"> ● Static IP, DHCP, PPPoE
Management	<ul style="list-style-type: none"> ● LCD Menu Configuration,TR069, WebUI
Dimension	<ul style="list-style-type: none"> ● 218×230×93.7mm

2.3 Equipment Appearance And Interface Description

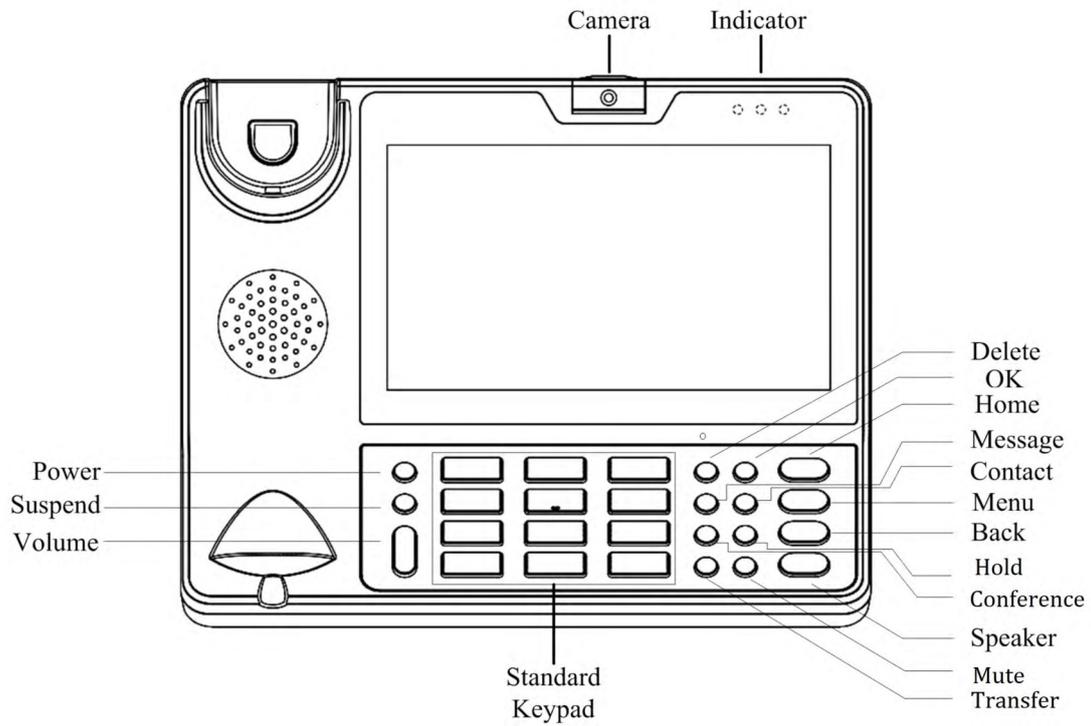


Figure 1-1 R47P Front View

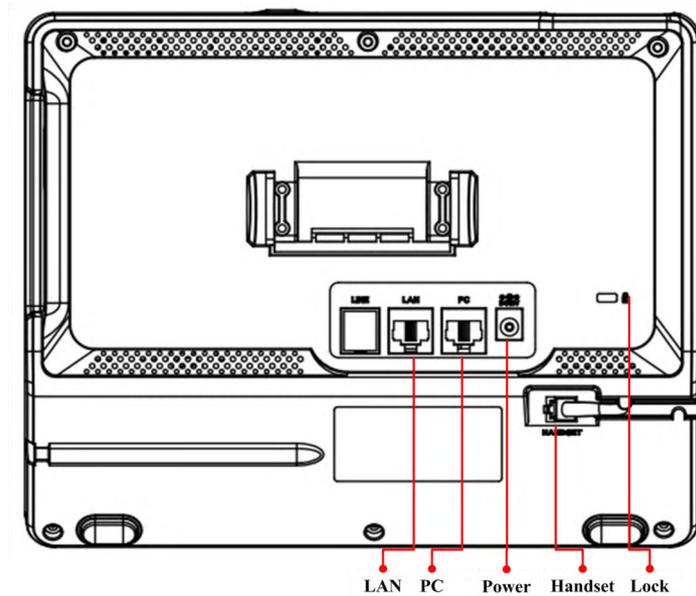


Figure 1-2 R47P Rear View

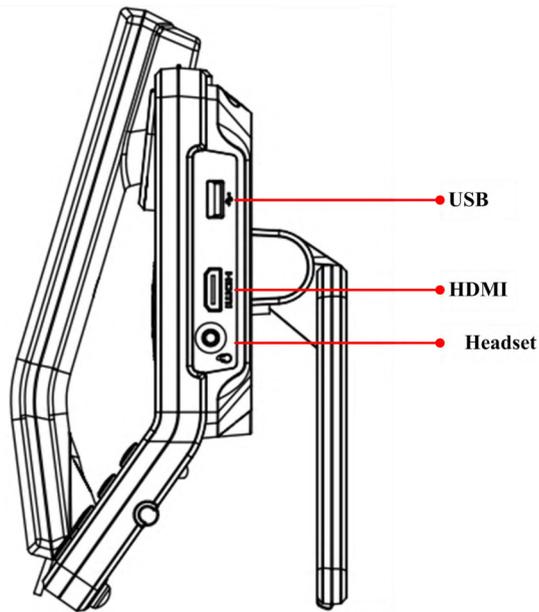


Figure 1-3 R47P Profile View

2.3.1 Interface Description

Interface	Description
Camera	Adjustable camera shooting angle, rotate down the camera to "off" angle.
USB interface	External USB storage device
Headset	Connect to 3.5mm stereo headphone, headset device
HDMI	Use HDMI cable to output the video to a TV screen
LAN	Network interface can be connected to a hub, switch or other network access devices. It also supports POE(Power over Ethernet) .
PC	Share the network access from LAN port, and for PC and other equipment connection
Power	Connect to 12V adapter, Power supply
Handset	Connect to handset
Lock	Lock the video phone with a Laptop lock

Note: If Power over Ethernet is being used, do not plug in the AC adapter.

2.3.2 Keypad Description

Interface	Description
Power	Turn on/off the LCD, Reboot, Silent mode
Suspend	Turn on/off the LCD, Reboot, Silent mode

Volume	Press + or – for the phone volume adjustment	
Standard Keypad	Input the number or symbol	
Function Key	Delete	Delete a character before the cursor
	OK	Same function with soft keyboard "Enter" key
	Message	Optional
	Contact	Enter Into the contacts list, you can view the local contact
	Conference	The first party is held in the case, according to a conference key, the first party can be combined to achieve a tripartite meeting
	Hold	To hold a call during the call
	Transfer	To transfer the current call to the third party
	Mute	The other party cannot heard the voice during the call
Home		Return to the main screen, and long press, it will display recently used applications
Menu		To call up the System or program setup menu
Back		Return to the previous menu
Speaker		Speaker

2.4 Indicators

Indicator Name	Icon	Status	Description
Power		ON	System is under working
		OFF	System is not working
Network Connection		ON	Network (LAN Port) is connected
		OFF	Network (LAN Port) is disconnected
Information		Flashing	Contains Miss Calls or Unread Message
		OFF	Normal status


3 Installation

3.1 Equipment Packaging

Name	Quantity
Main Case	1
Handset	1
Phone Cord	1
Power Adapter	1
Ethernet Cable	1
Quick Start Guide	1

3.2 Connecting Video Phone

- Connection diagram

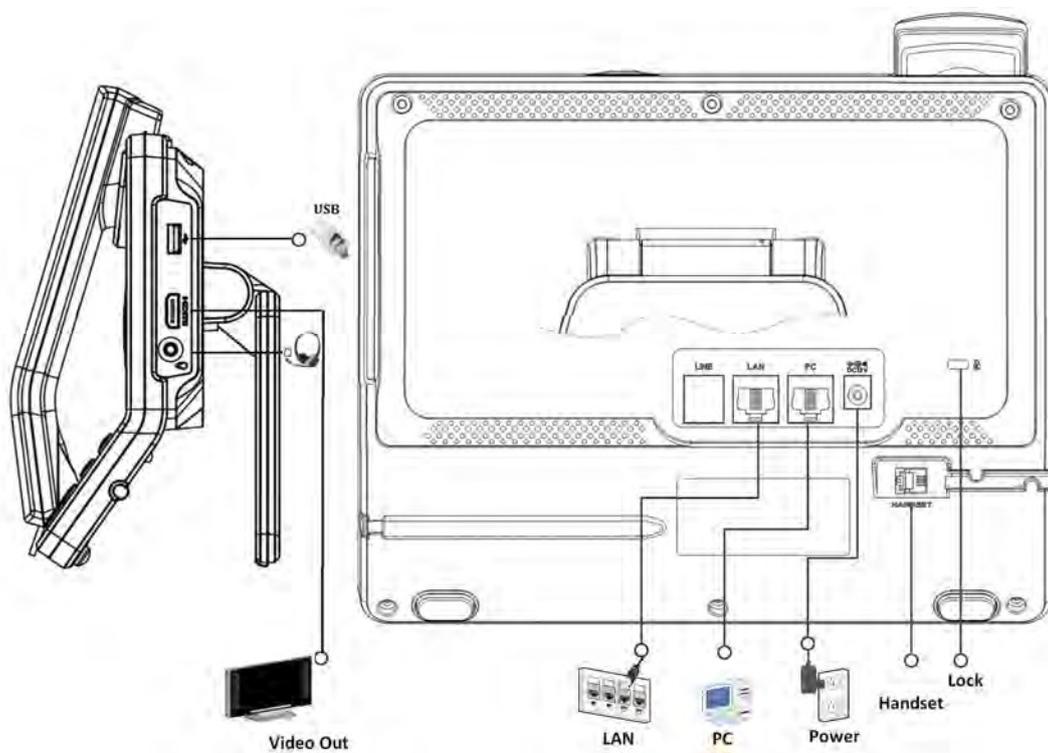

- **Connecting to Network**

Use the matched network cable to connect the LAN Port of the video phone to the Router or Switch. Viewing the top right corner of the screen, if the indicator light  is on, network cable is connected properly.

- **Connecting to PC**

Use the matched network cable to connect the PC Port of the video phone to the PC's Ethernet port. The PC can access to the internet network via PC Port of the video phone.

3.3 Installation Considerations

This product is a desktop product, and here are some safety recommendations about the installation and the usage:

- Do not use this product near water, such as: bath, washbasin, kitchen sink and other damp places and so on;
- Place the device in a place away from heat;
- Place the device away from traffic areas to prevent collisions;
- Please use the equipment with the matching power adapter or POE;

4 Getting Started

4.1 Basic Operation

4.1.1 Main Screen Instruction



- Status bar, at the top of the screen, displaying the status of system information.
- Do Not Disturb plug-in, When enabled DND, prohibit incoming calls in; Incoming call will be normal when DND is closed
- Favorite contacts plug-in, add more commonly used contacts from the address book, click the plug-in to add a contact, you can choose audio or video call out directly.
- Extended Screen Prompt, Display the location of current screen page; and show how many pages extended.
- Shortcuts, at the bottom of the screen, user can drag a shortcut to this region to achieve the replacement of the shortcut. Supports max four shortcuts.

4.1.2 Status And Notifications Instruction

The status bar in main screen is divided into two zones, notification area and status area, as shown below:



Status Area

Icon	Description
	Network is connected
	Network is not connected
	Mute mode
	Alarm clock is set
	PPPOE is connected
	PPPOE is failed

Notification Area

Icon	Description
	SIP account is registered
	Missed call, number means how many missed calls
	downloading
	uploading
	Receives a new email
	An event is coming

4.1.3 Using The Touchscreen

- **Tap**
To select items on the screen (e.g., setting options, apps); to press onscreen buttons; to type letters and symbols using the onscreen keyboard.
- **Touch and Hold**
Touch the item on the screen and hold it without lifting your finger from the screen till an action occurs.
For example, touch and hold on a picture to bring up operation options.


- **Drag**
Touch and hold an item for a few seconds first. Once the item has a red frame activated, or a move option shows up, keep your finger on the screen and move it until the target position is reached. Then lift your finger up to release.
- **Slide**
Move your finger fast across the screen to slide. To view different idle screens or menu pages, slide left or right; to view the status bar on top of the screen, place your finger on the bar and slide it down. If your finger stays on the screen for too long, the item may be selected and sliding won't occur.
- **Double-click**
Click on the screen twice in quick succession, for example, when user surfs in browser, you can quickly click twice on the page, the page can be enlarged.
- **Pinch**
Place two fingers on the screen, then pinch them together (zoom out) or spread them apart (zoom in). This could be used in a picture.

4.1.4 Startup And Shutdown

- **Startup**
Connect to the power supply, the system automatically starts up.
- **Shutdown**
If you do not use the device, directly remove the power supply, to save electricity.
- **Reboot**
If you need to restart the device, according to the following steps:
 - 1) Press and hold the "Power" button until the pop-up "Options" menu.
 - 2) Click the "Reboot"

4.1.5 View / Turn Off Notifications

When viewing notifications, simply press and hold the status bar, drag down, as shown below:

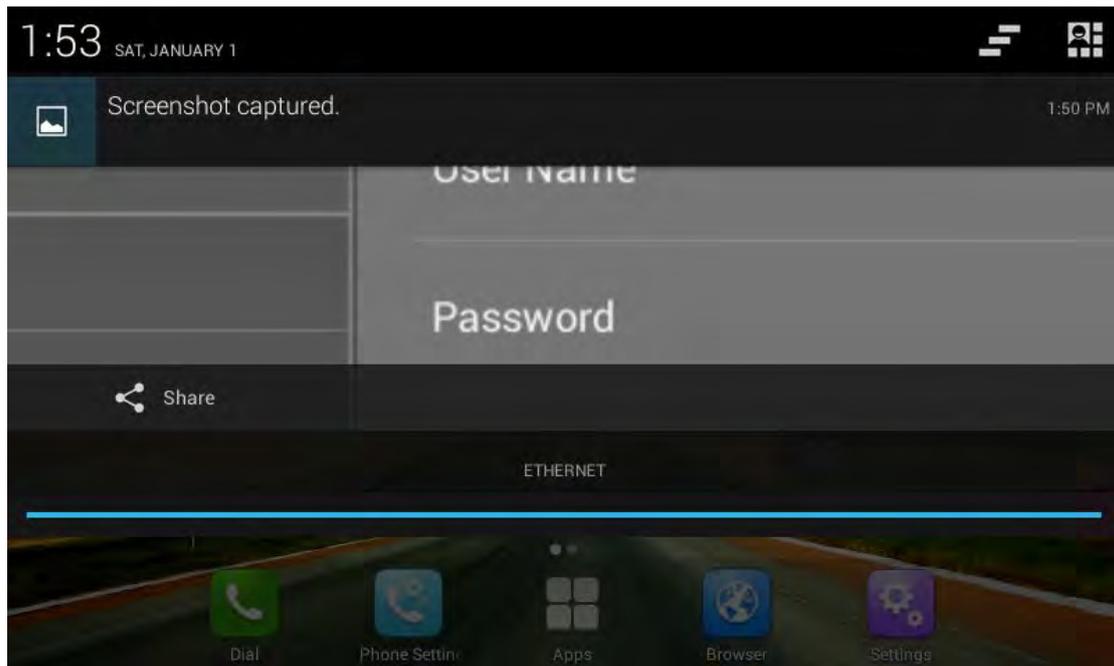

To turn off notifications, simply hold the notice at the bottom of the screen and then drag up or press the "Back" on the hard keyboard. Click on the icon  to clear up the notice

4.2 Connecting To Network And Wi-Fi

VP-R47P supports a variety of network connections (Ethernet, Wireless) and device connections Network connections includes four modes, Static IP, DHCP, PPPOE, Wi-Fi access. DHCP is the default configuration. Device connections include EHS headset, USB and Bluetooth device.

4.2.1 Configuring Static IP

You can select one of the following methods to enter the static IP configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks-> Ethernet-> Using static IP.
- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet -> Using static IP.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar

->SETTINGS-> ->Wireless & Networks-> Ethernet->Use static IP.

- Mode 4: In the main screen, tap ->Network Settings->LAN Connecting->Static IP.

Configuration page is shown as below:



Configuration parameter specification:

Parameter	Specification
IP address	set the IP address of the device
Subnet Mask	set the subnet mask of the device
Default Gateway	set the default gateway
DNS Server	set the DNS address
Alternative DNS Server	set the backup DNS address

4.2.2 Configuring DHCP

You can select one of the following methods to enter the DHCP configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks-> Ethernet-> uncheck Using static IP.
- Mode 2: In the main screen, tap -> Settings-> Wireless & Networks-> Ethernet-> uncheck Using static IP.

- Mode 3: Drag down the status bar, click shortcut icon  on the status bar
->SETTINGS> ->Wireless & Networks-> Ethernet-> uncheck Use static IP.
- Mode 4: In the main screen, tap  ->Network Settings->LAN Connecting->DHCP.

Configuration page is shown as below:



Note:

- 1) If DHCP acquired IP, it will display dynamic IP address information on the location of static IP configuration, cannot be modified, and there is a item of Use static DNS at the bottom the alternative DNS server, when checked, you can modify the primary DNS address and Secondary DNS address.
- 2) If DHCP is failed, the IP address will show as: 0.0.0.0.


4.2.3 Configuring PPPOE

You can select one of the following methods to enter the PPPOE configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks -> Ethernet ->More ->PPPOE.

- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet -> More ->PPPOE.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar ->SETTINGS  ->Wireless & Networks-> Ethernet-> More ->PPPOE.
- Mode 4: In the main screen, tap  ->Network Settings->LAN Connecting->PPPOE

Configuration page is shown as below:

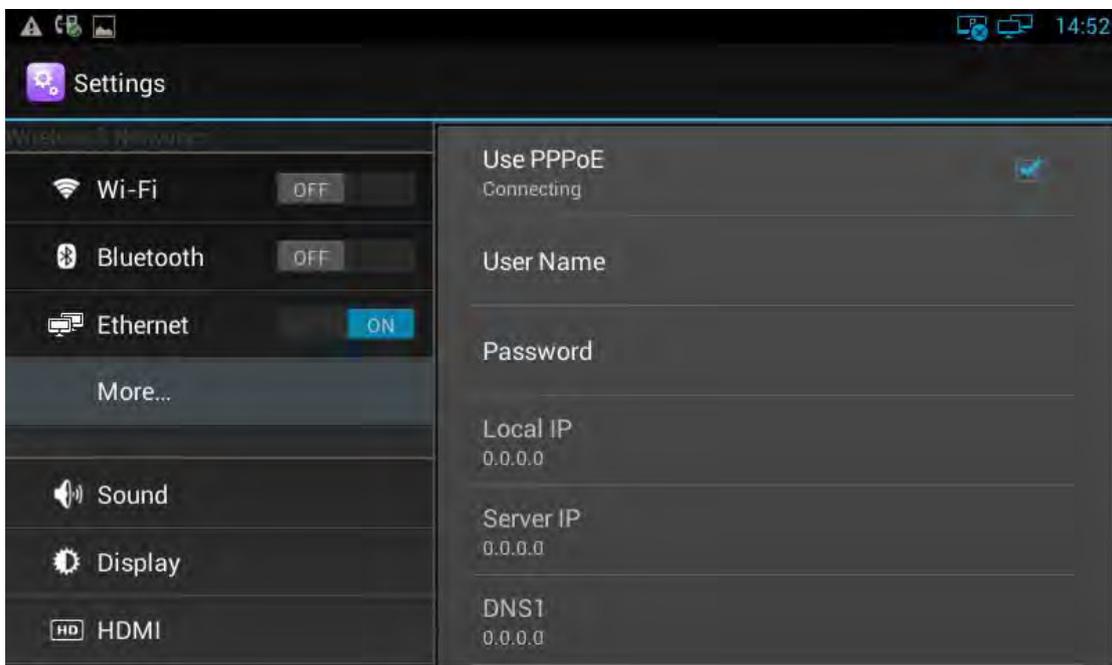

Parameter specification:

Parameter	Specification
Use PPPOE	Check  is to enable PPPOE, otherwise, disable.
User Name	PPPOE account, provided by ISP
Password	PPPOE password, provided by ISP

Proceed as follows:

- 1) Check Use PPPOE
- 2) Enter the correct user name and password of PPPOE

Note:

- 1) After dialing, can display the acquired IP address, server IP, the primary DNS, Secondary DNS information, status as connected
- 2) Not Dial, IP address information will be 0.0.0.0
- 3) There is a redial entry under Alternate DNS, click redial, then re-launch a PPPOE dial-up process, re-dial.


4.2.4 Configuring Wi-Fi

You can select one of the following methods to enter the Wi-Fi configuration:


- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Wireless & Networks-> Ethernet->Wi-Fi.
- Mode 2: In the main screen, tap  -> Settings-> Wireless & Networks-> Ethernet-> Wi-Fi.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar



Configuration page is shown as below:

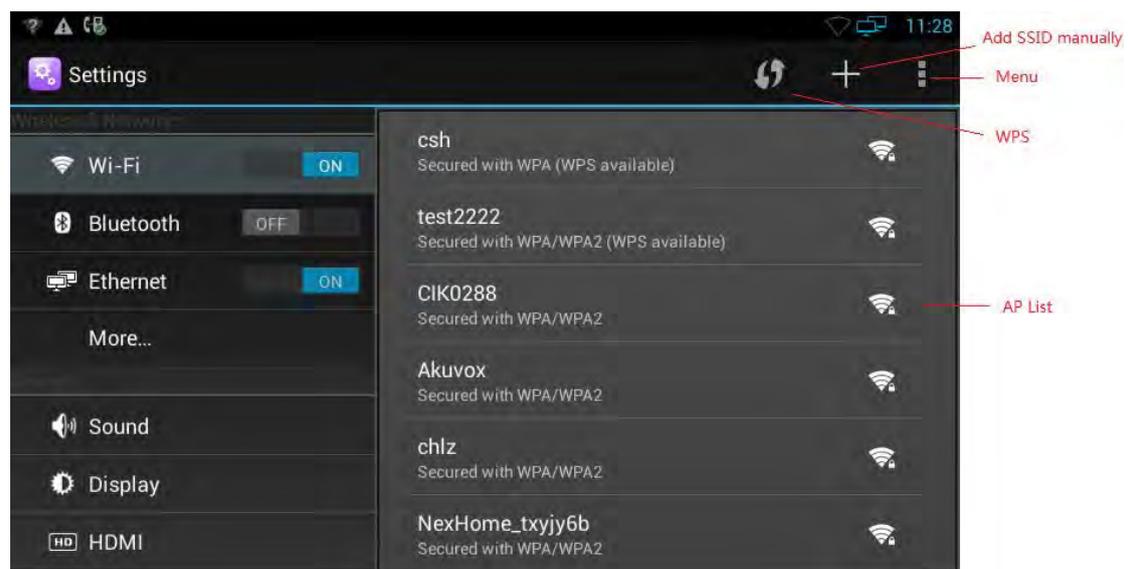


- 1) When the Wi-Fi switch is turned on, the video phone can list and display all Wi-Fi AP searched in the environment;
- 2) When connects to available AP in the environment, if a Wi-Fi AP is without password protection, there is no lock icon on Wi-Fi signal, it will automatically connect when clicked;
- 3) If a Wi-Fi AP is encryption, Wi-Fi signal will be added the lock icon, and when checked, it will pop up a dialog box to enter a password. If the password is incorrect, the connection will not be successful, as shown below:

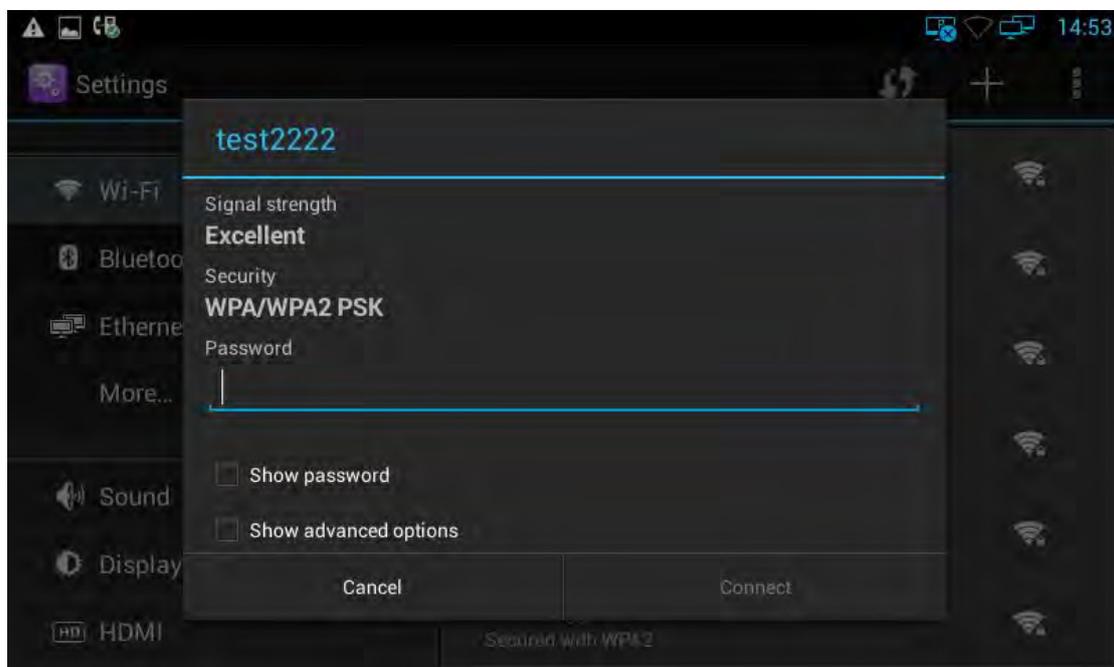

- 4) check Show advanced options, you can set Proxy server and IP mode.

- Proxy Settings

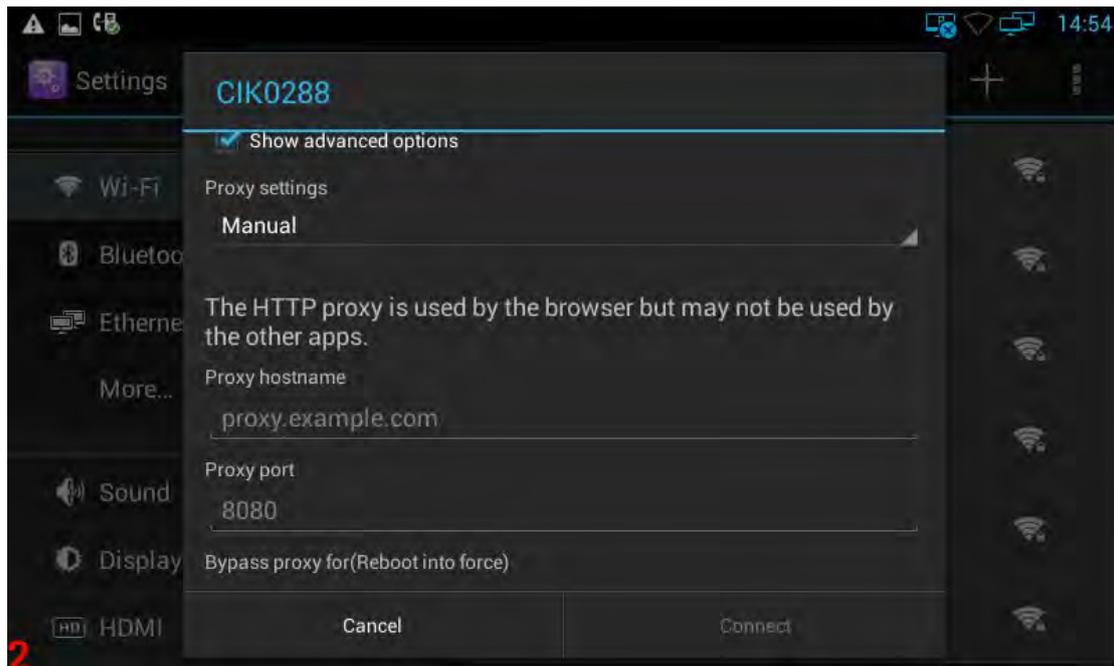

● IP settings(Static IP):




5) Long press on the connected Wi-Fi AP, it will pop-up a dialog box, you can forget the network or modify the network. Long press on the non-connected Wi-Fi AP, it will pop up a dialog box, and you can click and connect to network.

6) Click WPS button, if the wireless router has WPS function, and the router WPS button is pressed, the video phone will be able to connect to the Wi-Fi without entering a password.

7) Press “+”symbol, you can add a SSID manually.

- 8) Click Menu, you can do the operations such as: Scan(scan the new wi-fi AP), WPS Pin Entry(enter the PIN on the Router, the phone will no need to input the wi-fi password), Wi-Fi Direct and Advanced.
- 9) In Advanced Menu, shown as below:

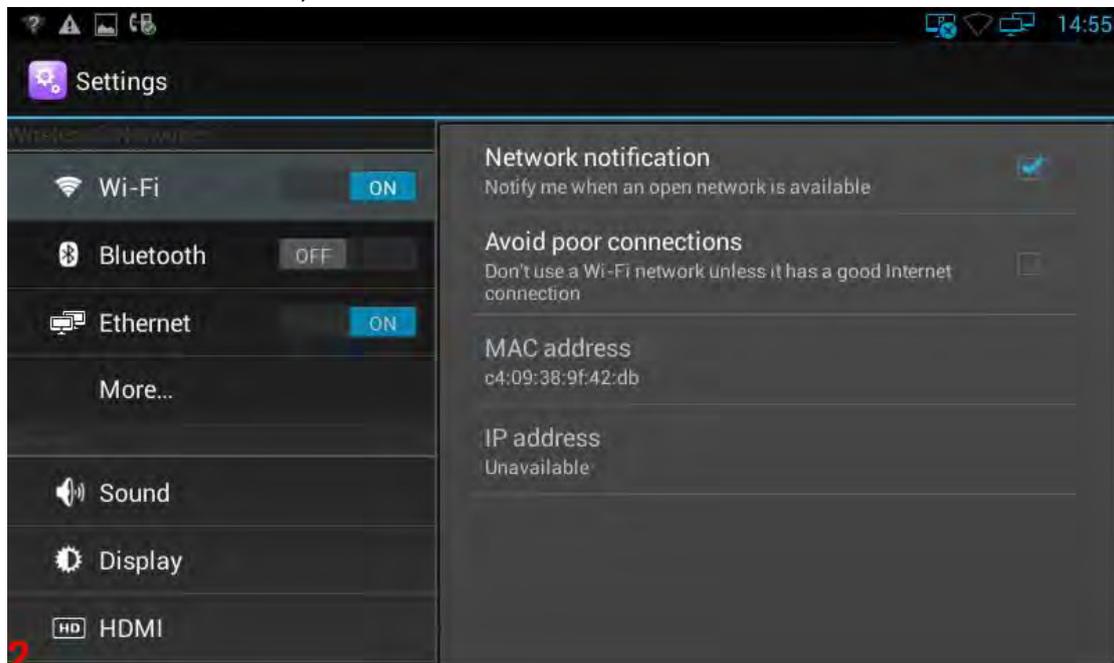


- a. Check Network notification, it will notify you when an open network is available;
- b. Check Avoid poor connections, it will prompt that don't use a WiFi network unless it has a good internet connection;
- c. View the Wi-Fi Mac address and IP address;

4.3 SIP Account Configuration

You can select one of the following methods to enter the SIP account configuration:


- Mode 1: In the main screen, Click  -> then click .
- Mode 2: In the main screen, click  -> then Click  -> and then click .
- Mode 3: Directly pick up the handset or press Speaker -> then click .
- Mode 4: click Browser, input IP address to enter login interface. Input username: admin, password is admin, click Login into web, then click Account-Basic;

4.3.1 Add Account

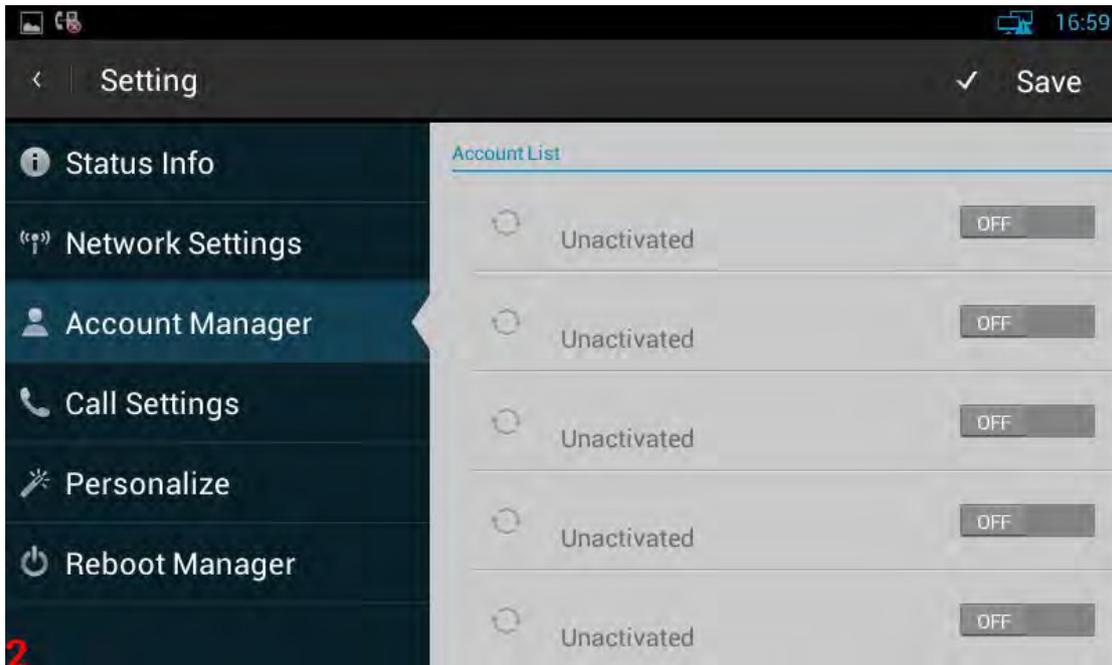

Click an account to enter Account Editor



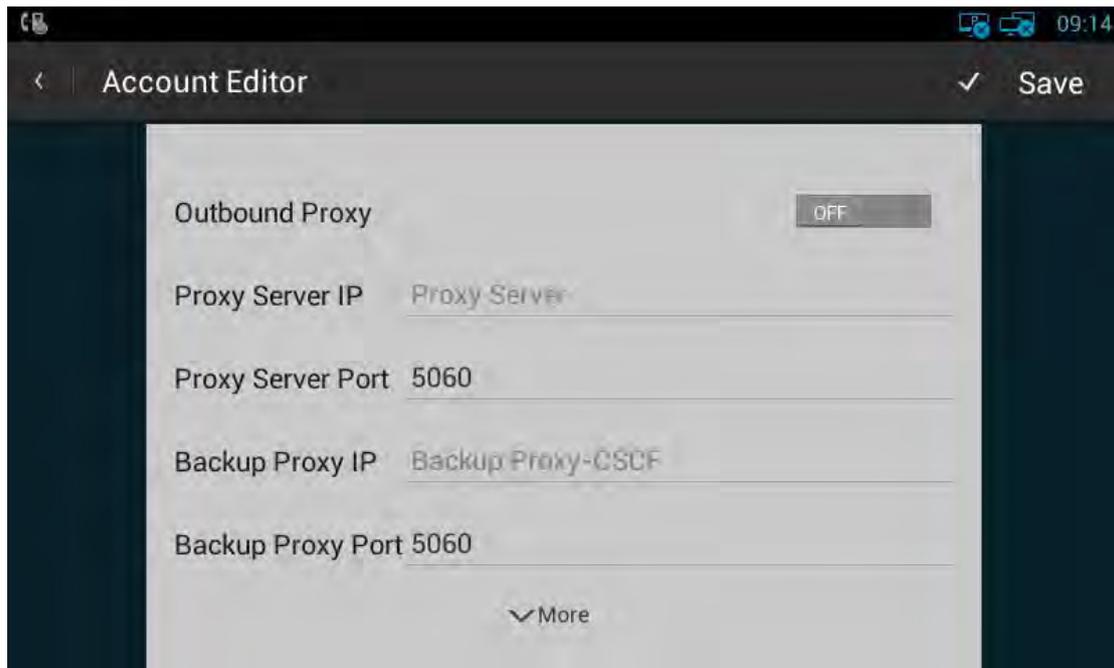

Configuration parameters are described as follows:


Parameter	Specification
Register Name	SIP Account ID provided by ISP
User Name	SIP User Name provided by ISP
Password	SIP Password provided by ISP
Display Name	SIP Display name
Reg Server IP	SIP Register Server, format: domain/IP, for example: 194.168.1.2
Reg Server Port	The default port is 5060.
Proxy Server IP	SIP Proxy Server, format: domain/IP, for example: 194.168.1.2
Proxy Server Port	The default port is 5060.
Backup Proxy IP	SIP Backup Proxy Server, format: domain/IP,for example: 194.168.1.2
Backup Proxy Port	The default port is 5060.

After all the parameters are configured, Click "save" button to save the configurations, then the sip account is added successfully. Then active the account.


4.3.2 SIP Account ON/OFF

After SIP account is configured and registered successfully, it will display the prompt "Registered" in the Account Manager, and the icon  will be displayed on

the status bar. See the below picture:

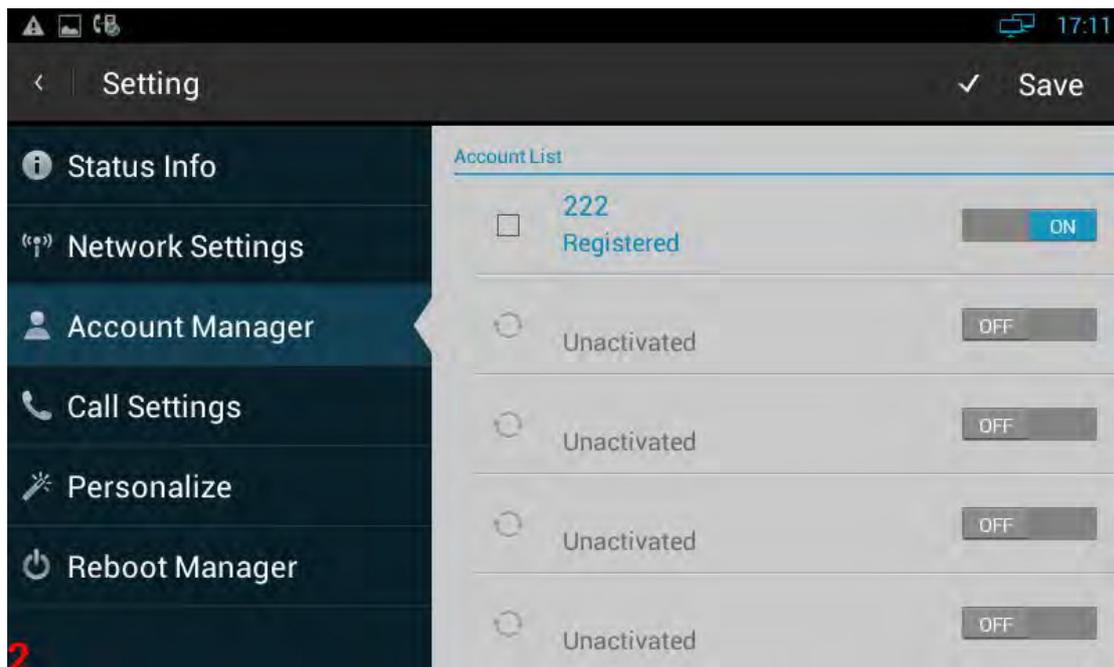


- a. If you want to disable the account, please click 
- b. If the sip account is failed to register, the failure code will be displayed under the account, and then you can check with the account configuration or network connection. See the below picture:

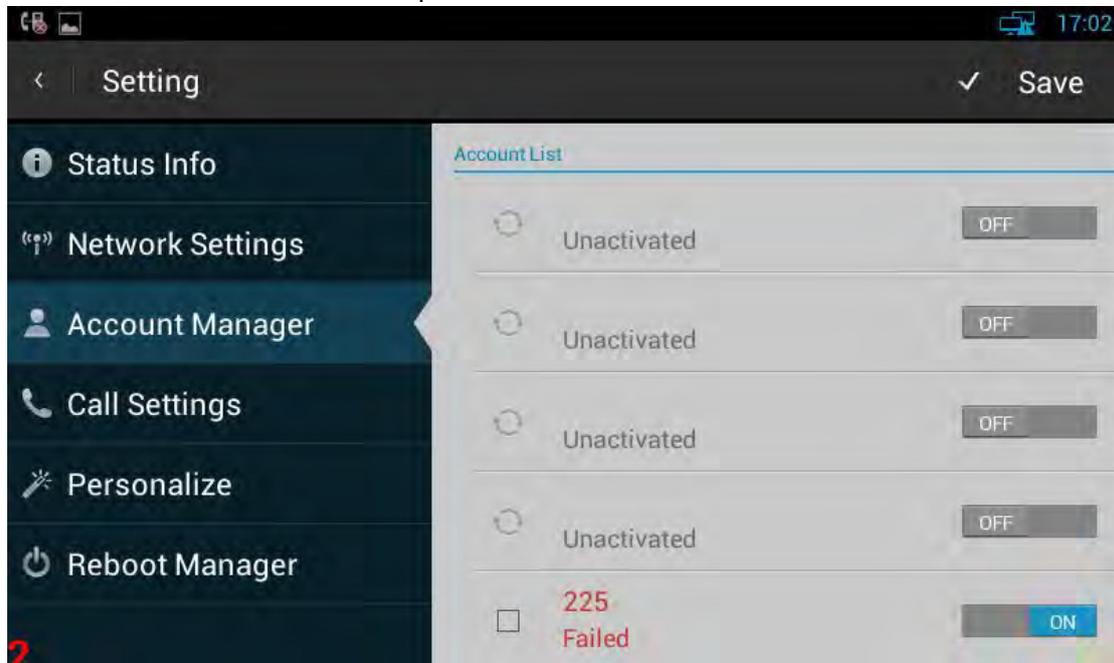

4.3.3 Modify/Remove SIP Account

- 1) Modify the sip account: Directly click the account to modify;

- 2) Remove the sip account: Click the box of the account which you want to delete, and then press "Clear Account".

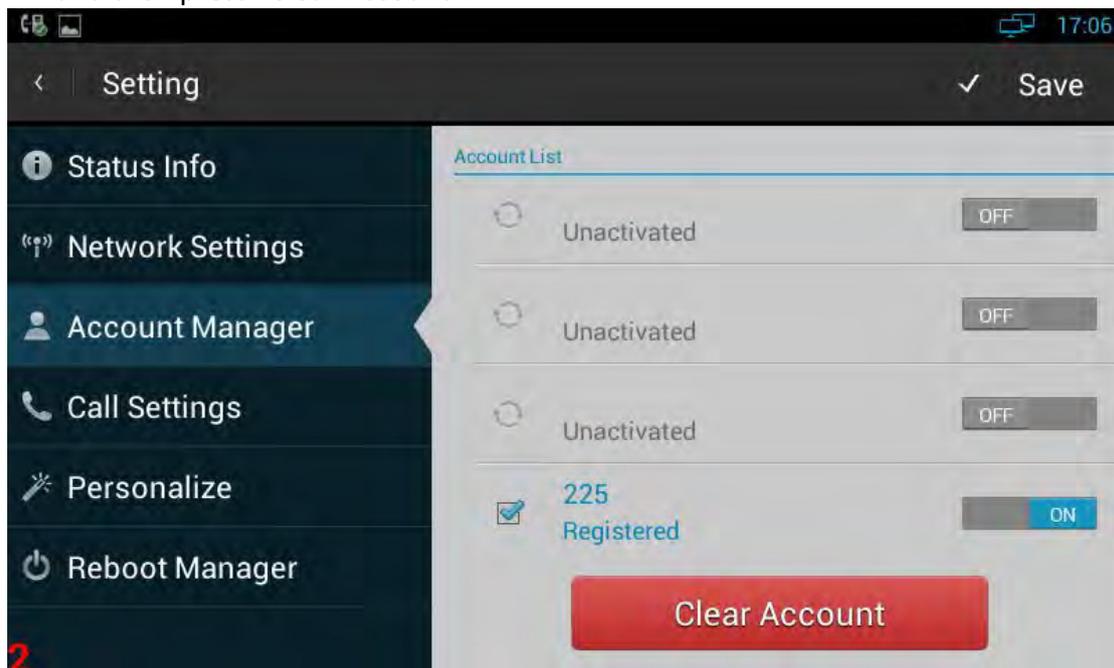


4.4 Sound

You can select one of the following methods to enter the Sound configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Sound.
- Mode 2: In the main screen, click  -> Settings -> Sound.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar ->SETTINGS ->Sound.


Configuration page is shown as below:

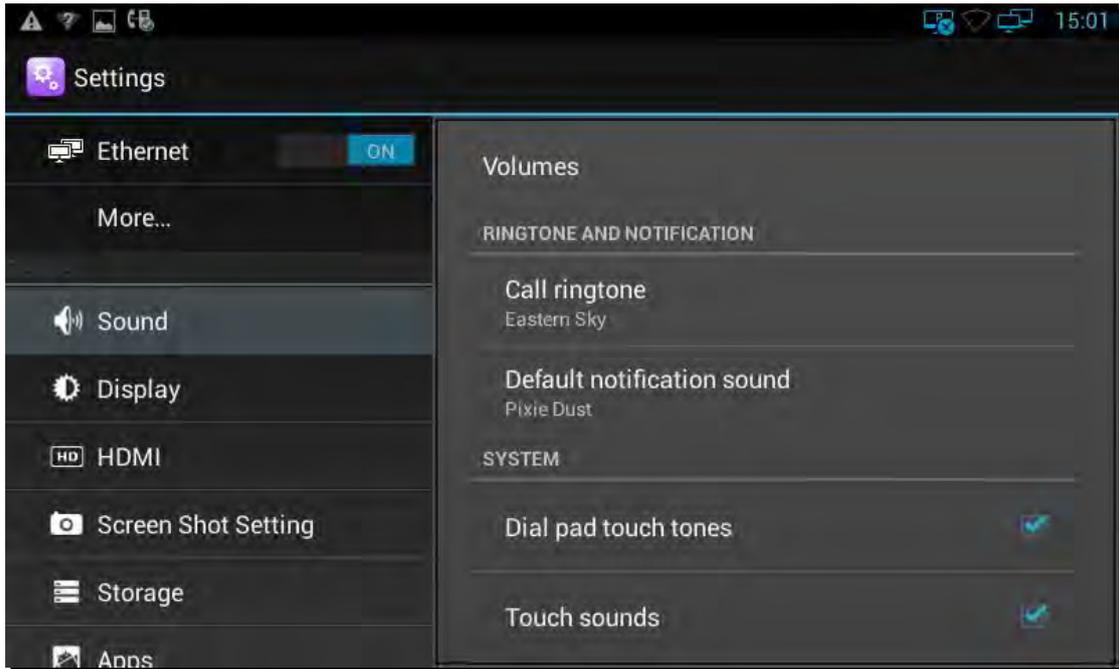

Including Volume, Ringtone and Notification, Dial pad touch tones and Touch sound.


4.4.1 Silent Mode

Long press the Power button, then choose Silent mode in the pop-up menu. In addition to the media and the alarm sound, the rest sound is mute. As shown in the picture below:

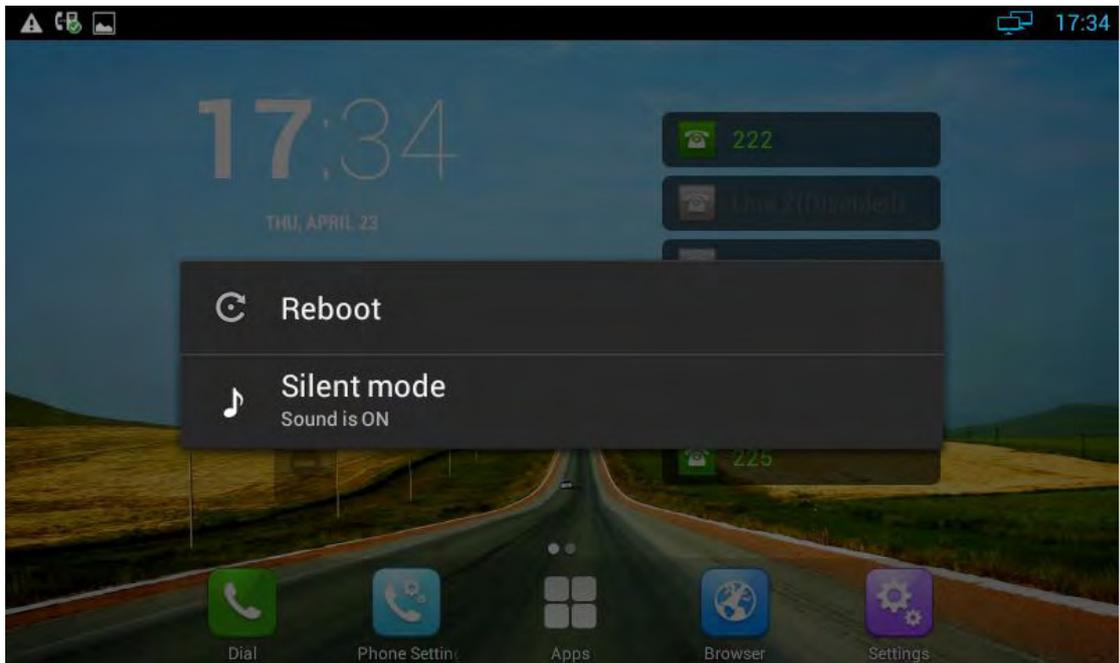

4.4.2 Volumes

In Sound configuration page, click "Volumes", the volume configure is shown as below:

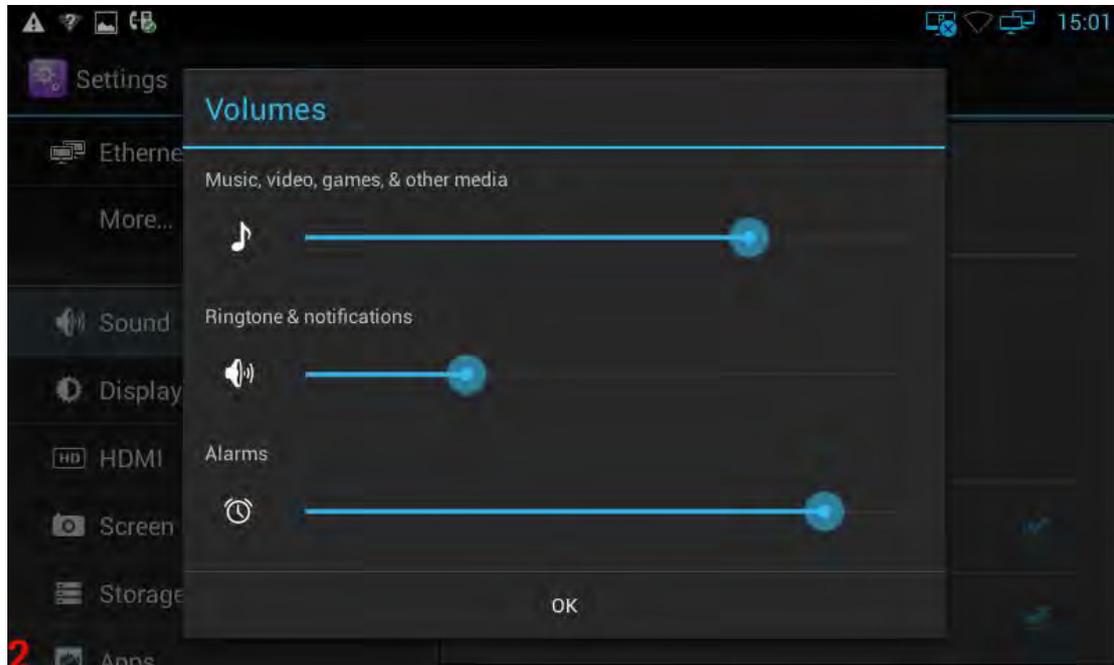

- Volume options include ringtones and notifications, Media, Alarm clock.
- You can hold and drag the slide button or just directly click a volume location to adjust the volume. Finally click "OK" button to save.
- The volume settings, you can also press the keyboard "volume+ -" button to increase or decrease the volume. Usually, "volume + -" button is to adjust for ringtone or notification volume, but in the broadcast media, pressing "volume + -" button is to adjust for media volume.

4.4.3 Ringtone



The ringtone settings, including the default ringtone and default notification tone. In the sound interface, select the default ringtone or default notification tone, and then click the ringtone you want to set, after the selection, it will be a short play ring. Finally, click "OK".

4.4.4 System Sound

If you want to enable Dial pad touch tones and Touch sounds, please go to Sound

configuration page to click the correspond sound. Dial pad touch tones and Touch sounds are enabled in default configuration.

4.5 Call Settings

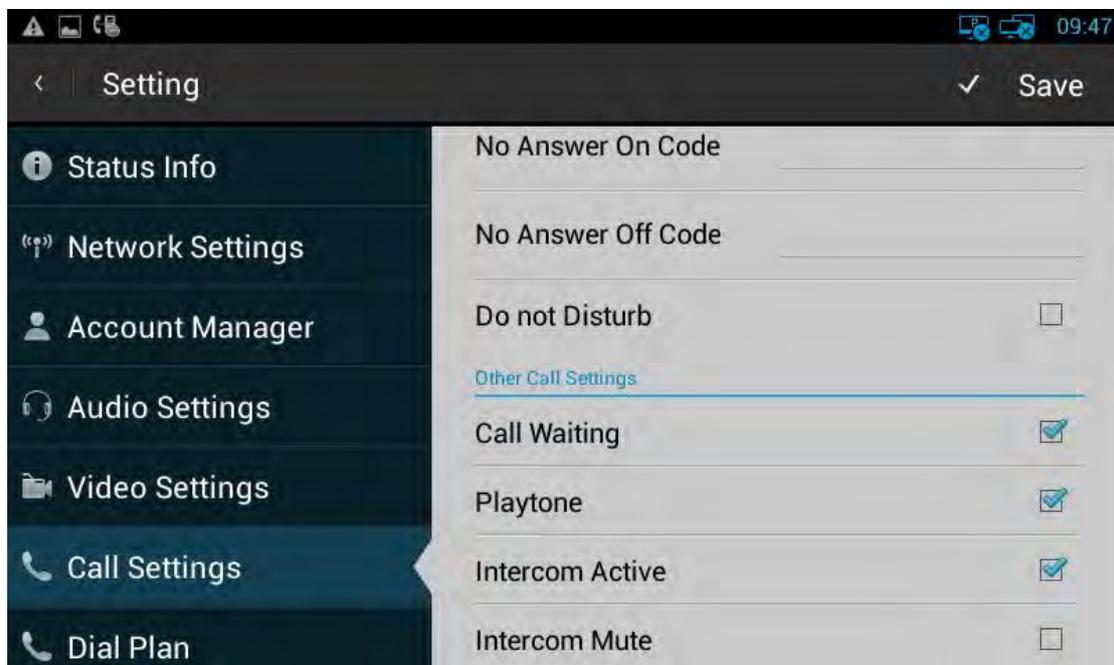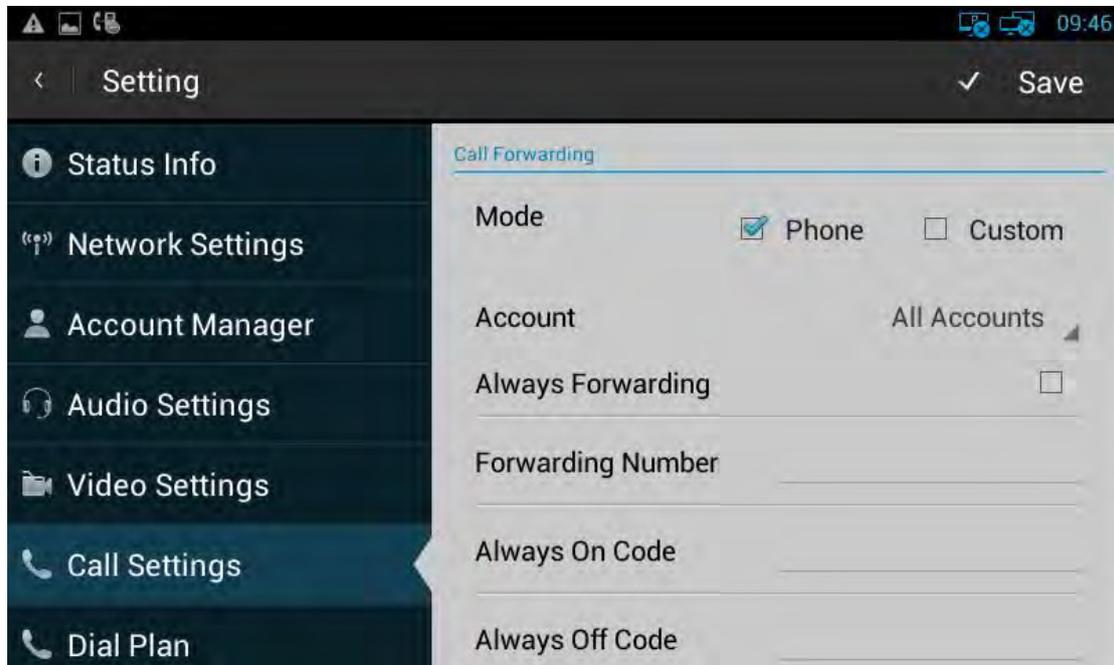

4.5.1 Do Not Disturb

DND function is to prevent foreign phone from disturbing, if open DND, external

phone call is unable to call in, turned off by default.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding
2. Select the desired account.
3. Enable Do not Disturb.

4.5.2 Call Waiting

Open call waiting, if enable call waiting, after establishment of a conversation, there are a third party call in, then video phone will have a new call tips, you can choose to answer or reject the call. If you close the call waiting, then the third party cannot call in, will prompt a busy tone, turned on by default.

Configuration on the phone:

1. Phone Settings->Call Settings->Other Call Settings
2. Enable Call Waiting.

4.5.3 Always forwarding&Forwarding Number

All the incoming calls will be the Switched unconditionally to specified number.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding
2. Select the desired account.
3. Enable Always Number.
4. Input the number you want to forward.

4.5.4 Call forwarding busy&Forwarding Number

The incoming calls will be the Switched to specified number when the phone is busy.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding.
2. Select the desired account.
3. Enable Call Forwarding Busy.
4. Input the number you want to forward.

4.5.5 No Answer Forwarding&Forwarding Number

The incoming calls will be the Switched to the specified number when the ring tone is time out without answer.

Configuration on the phone:

1. Phone Settings->Call Settings->Call Forwarding.
2. Select the desired account.
3. Enable No Answer Forwarding.
4. Input the number you want to forward.

4.5.6 Time out

Setup the no answer forwarding time. When the call is beyond the time(the default is 30 seconds)without answer ,it will transfer to the target number.

4.5.7 Playtone

The caller will hear the tone when waiting.

4.5.8 Intercom

It is used to answer the incoming call automatically after users set up the intercom function. In default situation, the IP phone Akuvox R47P will answer the intercom incoming calling automatically and make a noise. You can set the phone to enable silent mode when picking up the intercom call so that the other will not hear you.


4.6 Dial Plan

Rule: Allow user to select Replace rule or Dial-now to display or edit.


Rules Modify: Allow user to modify selected rules information, for replace rule, you can modify related accounts, prefix and replace.

Area Code: Area codes are also known as NPAs (Numbering Plan Areas). They usually indicate different geographical areas within one country. If entered numbers match the predefined area code rule, the IP phone will automatically prefix outgoing number with area code.

Note: There is only one area code rule supported.

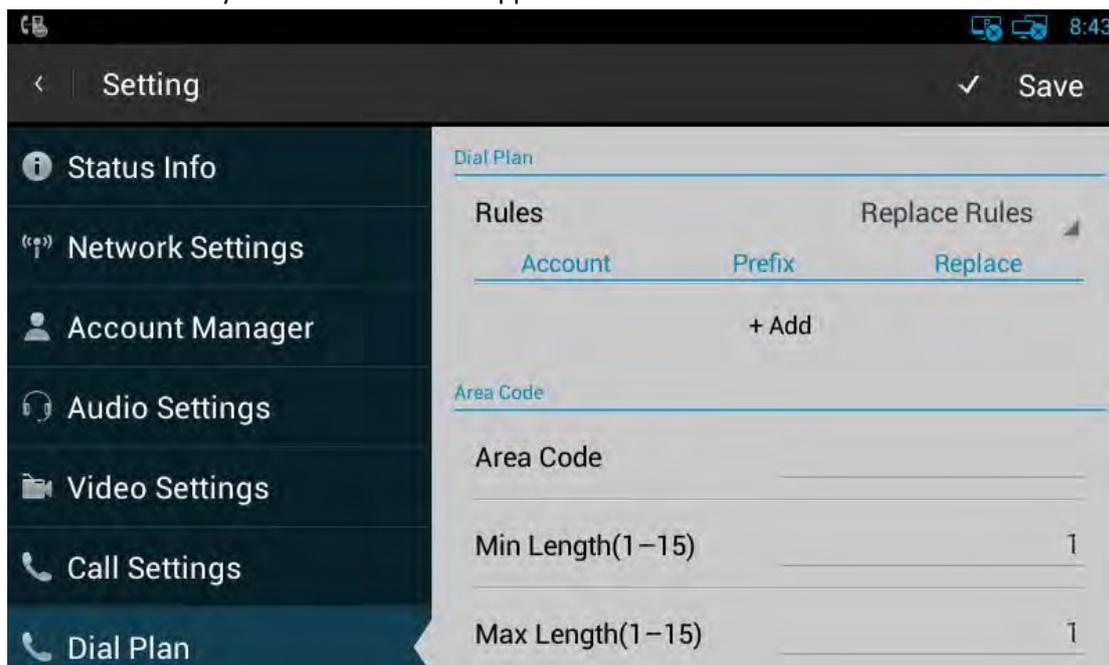

4.7 Personalize

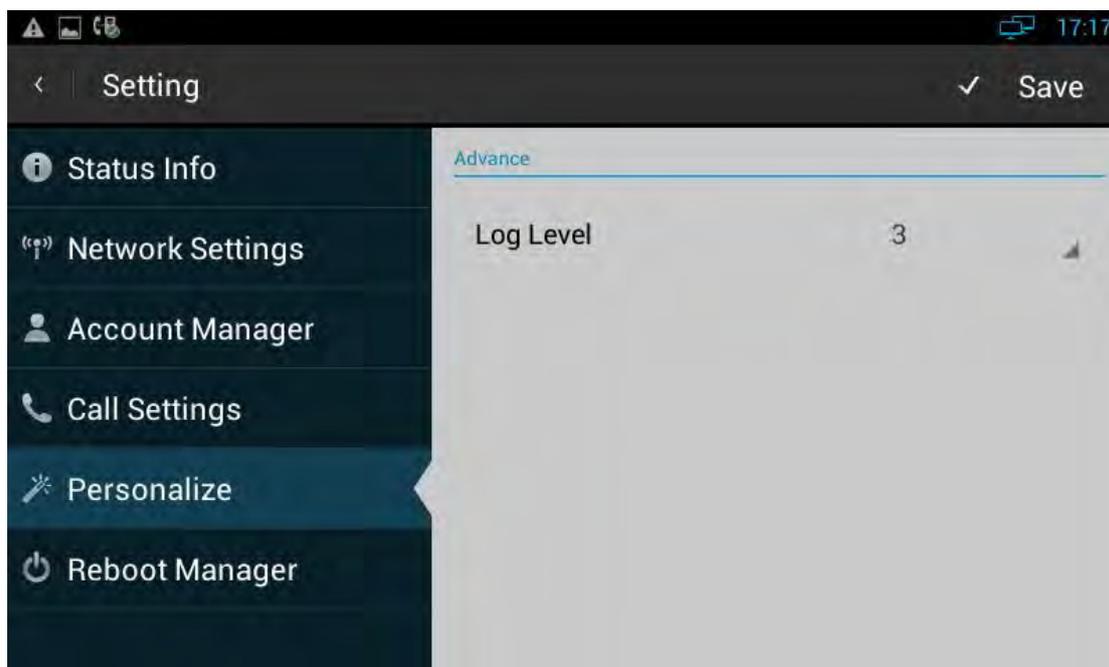

4.7.1 Log Level

The Log level is divided into seven levels: EMERG, ALERT, CRIT, ERR, WARNING, NOTICE, INFO, DEBUG, log class is from low to high. The default setting is EMERG, which is the lowest grade log.

4.8 Reboot Manager

4.8.1 Reboot time


User can setup the reboot date and hour you want .

4.8.2 Status of time

If the status is enable ,users can edit the reboot time you want.

4.8.3 Status of active

Enable/disable the reboot function

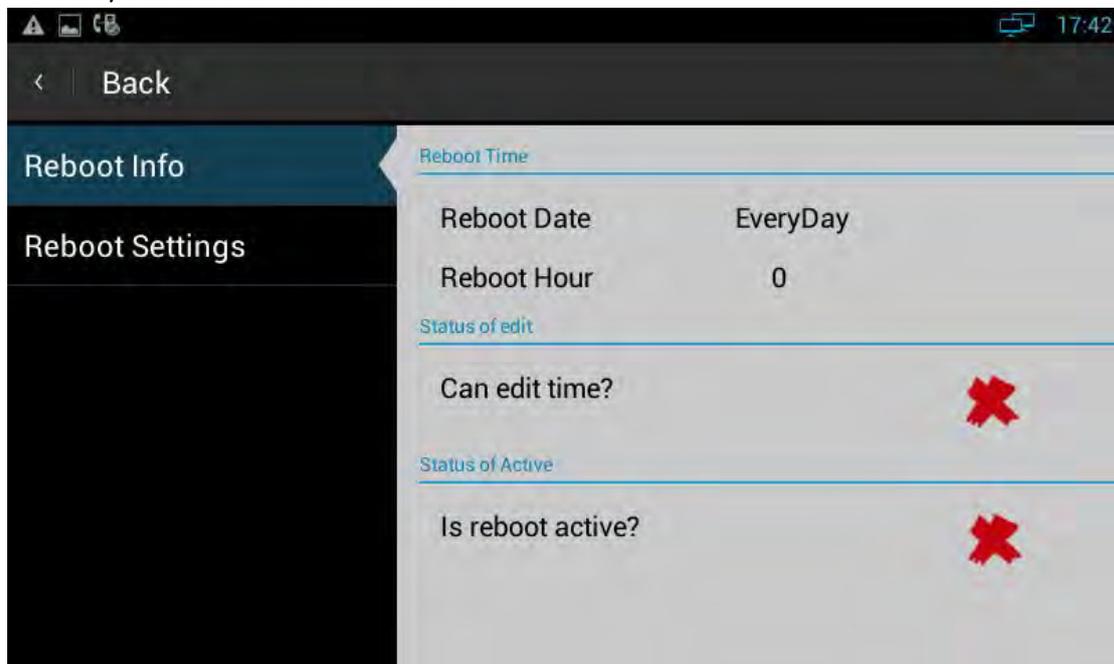

4.8.4 Reboot settings

Click the icon  to reboot.

4.9 Date & Time


You can select one of the following methods to enter Date & Time configuration:

- Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System

Settings-> Date & time.


- Mode 2: In the main screen, tap -> Settings-> Date & time.
- Mode 3: Drag down the status bar, click shortcut icon  on the status bar
->SETTINGS> -> Date & time.

The configuration page is shown as below:

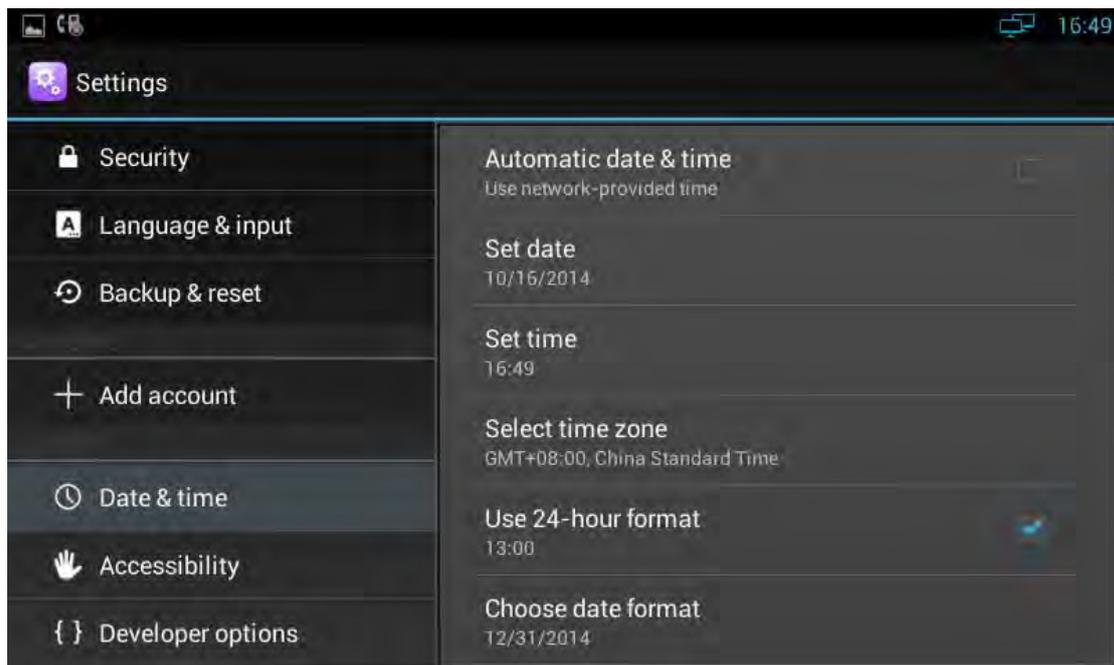


If you want to manually set the date and time, firstly, remove the click "Automatic data & time", and then set the date, time, select a time zone. Check Use 24-hour format, and then "1:00 PM" will change to "13:00".

Click "Set date", pop-up date set interface, as shown below:

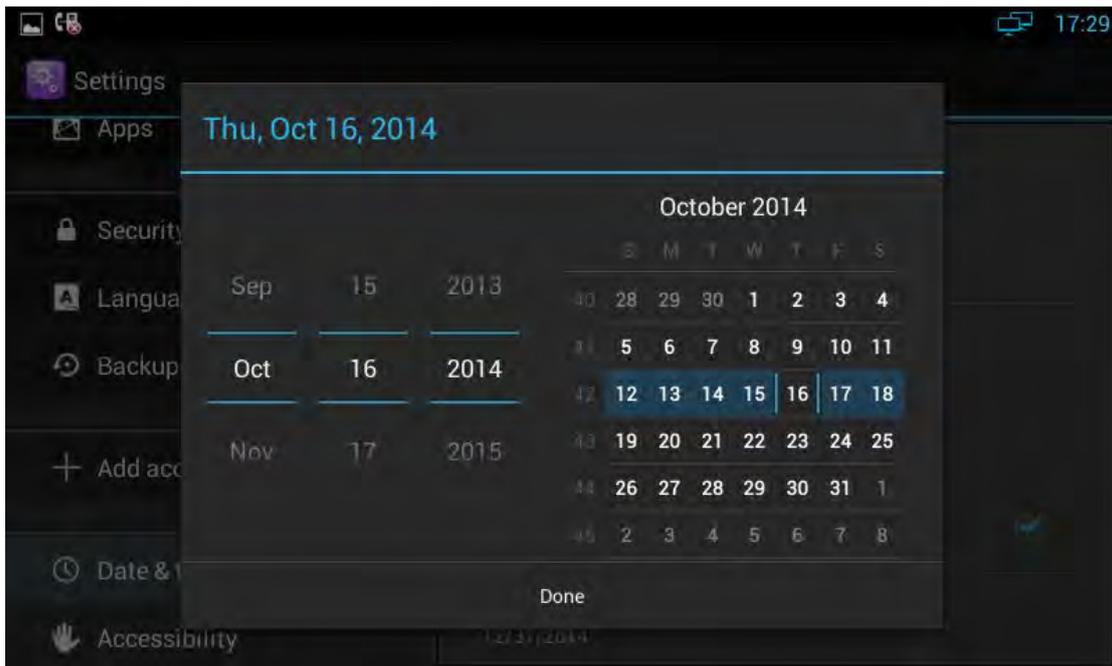


You can increase or decrease the corresponding value by dragging upper or lower, also can directly input corresponding value in input field, and then click the "Done" button.

Click "Set time, time settings, as shown below:

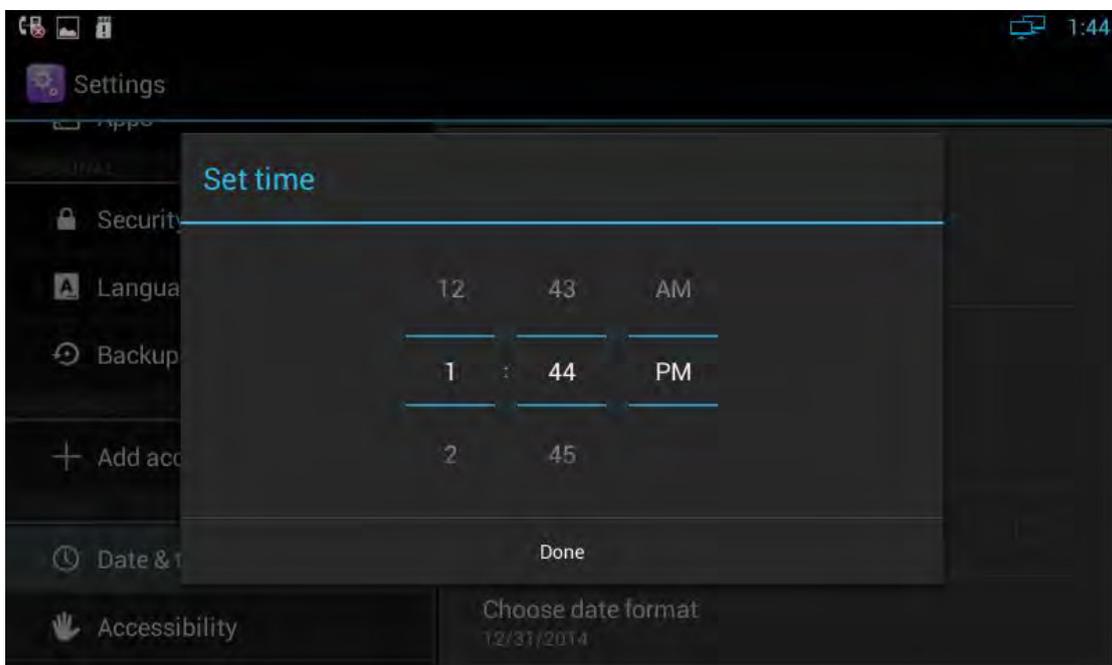

In the figure, uncheck Use 24-hour format, you can increase or decrease the corresponding time value by dragging upper and lower. Click "AM" button, it will change to "morning", and then click "PM" button, then changed back to "afternoon".

If check Use 24-hour format, time setting interface as shown below:

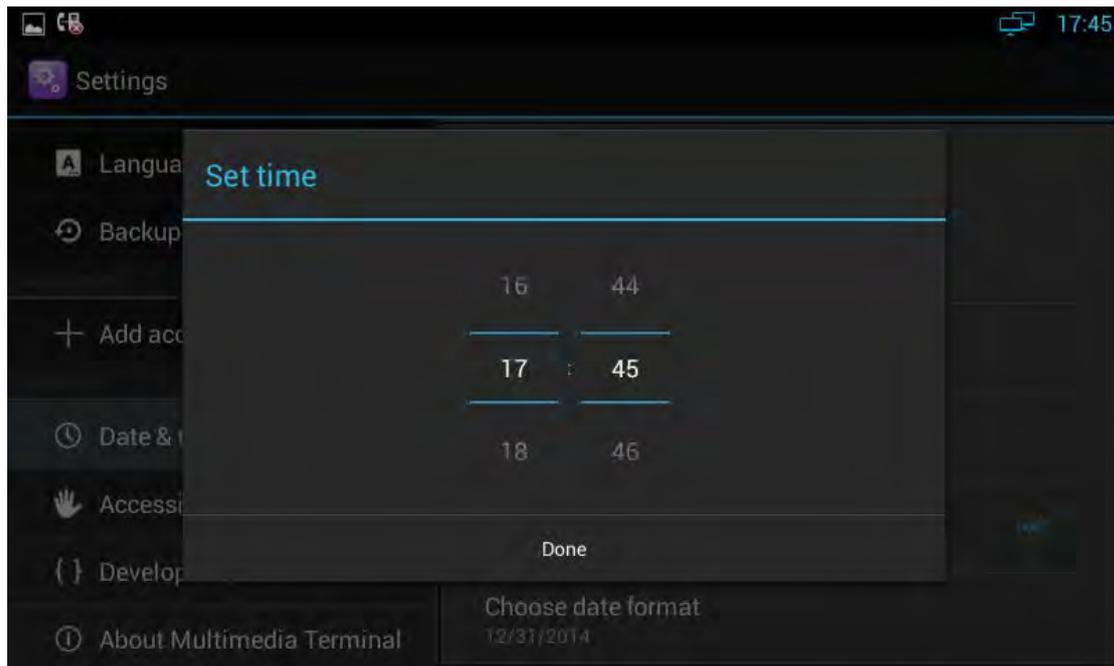

4.10 Personalization Settings

According to personalized settings, you can make the equipment more characteristic.

4.10.1 Wallpaper

You can use the following three ways to change your favorite wallpaper.

Mode 1:


1) You can choose one of the following steps to enter into the choice of wallpaper source:

- In the main screen, Press "Menu" on the keyboard-> wallpaper, it will pop up wallpaper selection interface to select a wallpaper source.
- In the main screen, Press on the blank part of desktop, it will pop up menu option, select "wallpaper".

2) Perform one of the following steps:

- In "Wallpapers", click the picture you want to set as wallpaper, and then click "Set wallpaper".
- Click "Gallery", In the library, click the corresponding picture folder, select the picture you want to set as wallpaper, then press and hold the clip frame picture, drag the clip box, crop the picture finally click "OK".

When clipping, if want to change clip size of the box, press clipping frame, the border follows the direction of the arrow to be shown in the figure, you can drag it to the border or outside the borders, to change the size of the crop box.

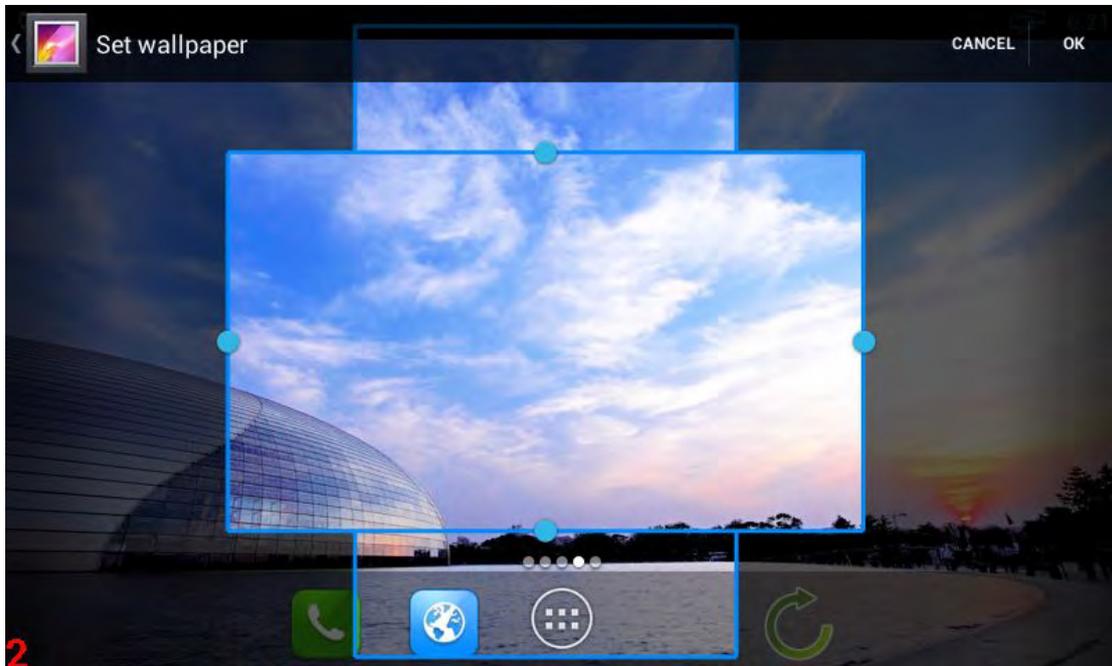

Mode 2:

Browse pictures in the gallery, and then follow the second step in mode 1 to set the wallpaper.

Mode 3:

- 1) Browse a picture In a browser (or pictures on the page), press and hold the picture.
- 2) Pop-up a new operation window, click on the "Set as wallpaper" and wait for a short time, you can set the picture as wallpaper.


4.10.2 Widgets

Applet can be convenient for your use, you can select from the available options

4.10.2.1 Add A Widget

- 1) In the main screen, Click , left-slide the screen, choose and add a widget. The

following window:

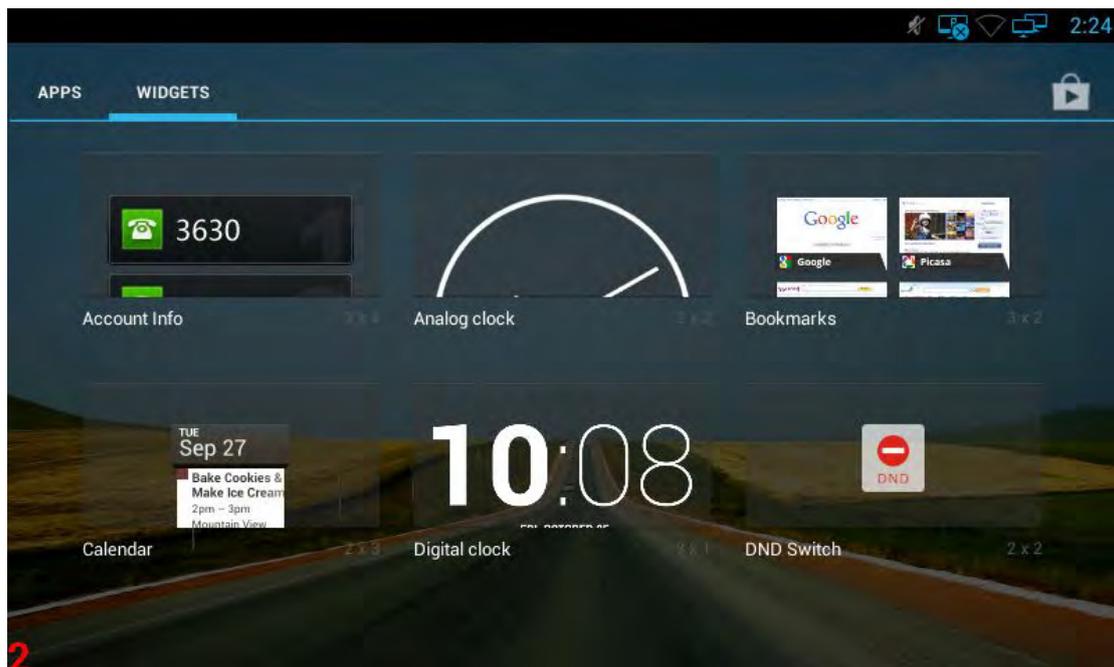

2) Each widget has indicated the name and the location, press and hold the component, put it to the designated location on the desktop.

4.10.2.2 Modify An Added Widget

If you want to modify the location of added widgets on the desktop, hold the widget until the icon  appears on the upper left corner of the screen, you can drag the widget to the corresponding position of the desktop.

If you want to change the space size of added widgets on the desktop, press and hold the widget until the icon  appears on the upper left corner of the screen, do not move, fingers away from the screen, the widget will appear frame border, as shown below:



At this time, you can press the arrow button to drag the border to change the size of the widget frame. And then only need to press “Back” button on the keyboard to save the change.

4.10.2.3 Delete A Widget

Hold the widget until the icon  appears on the upper left corner of the screen, you can drag the widget to  to delete the widget.

4.10.3 Shortcuts

You can add the shortcuts such as Application, Webpage bookmarks and so on to the main screen desktop.

4.10.3.1 Add A Shortcut

In the main screen, Click , left-slide the screen, choose and add a shortcut, press and hold the component, put it to the designated location on the desktop

4.10.3.2 Modify A Shortcut


If you want to modify the location of shortcut on the desktop, hold the shortcut until the icon  appears on the upper left corner of the screen, you can drag the shortcut to the corresponding position of the desktop.

4.10.3.3 Delete A Shortcut

Hold the shortcut until the icon  appears on the upper left corner of the screen, you can drag the shortcut to  to delete the shortcut.

4.10.4 Modify Extended Bar

You can modify the quick start program on the extended bar at the bottom of the screen. The default extended bar as shown below:

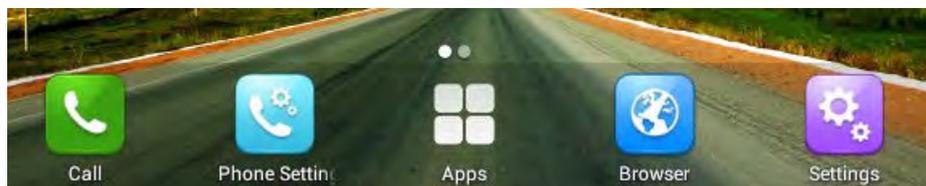

In the main screen, hold the shortcut until the icon  appears on the upper left corner of the screen, you can drag the shortcut to  to delete the shortcut or replace with another shortcut.

4.10.5 Ringtone

You can select the ringtone provided by video phone, and you can also download music from the Internet, and then set the favorite music as a ringtone.

If you choose the ringtone provided by video phone, please refer to Sound settings.

If you choose the music downloaded from the Internet as a ringtone, please follow the below steps:

1) Click  -> Music(App).

2) See the music list in App, select and press a music, and then In the pop-up menu options, select "Ringtone" -> "Phone"

4.11 Backup & Reset

1) Click Setting ;

2) Click "Backup & reset";

3) Click "Factory data reset";

4) Click "Reset Multimedia Terminal"

5) Click "Erase everything".

5 Function

5.1 Call Function

Video phone supports voice calls and video calls. Please ensure that the device has been configured SIP account successfully before using the call function. SIP account configuration refers to section 3.3.

5.1.1 Make A Call

You can directly dial from the keypad, from the contact or from call records.

5.1.1.1 Dial Out Directly

1) You can choose one of the following steps to enter into the dialing interface:

- Directly pick up the handle.
- Press “Speaker” button on the keypad.
- In the main screen, Click .
- In the main screen, select  -> .


Dialing interface is shown as below:



1) By pressing the number keys on the dial interface or directly pressing the number on keypad. To delete a number, press the  on the dial interface, or press Delete button on the keypad.

2) If you want to make an audio call, please click "Audio Call"; if you want to make a video call, please click "Video Call".

3) If you have registered a multiple of available SIP accounts, when finishing dialing, you can click line  button to choose the outgoing account for the number, as shown below:

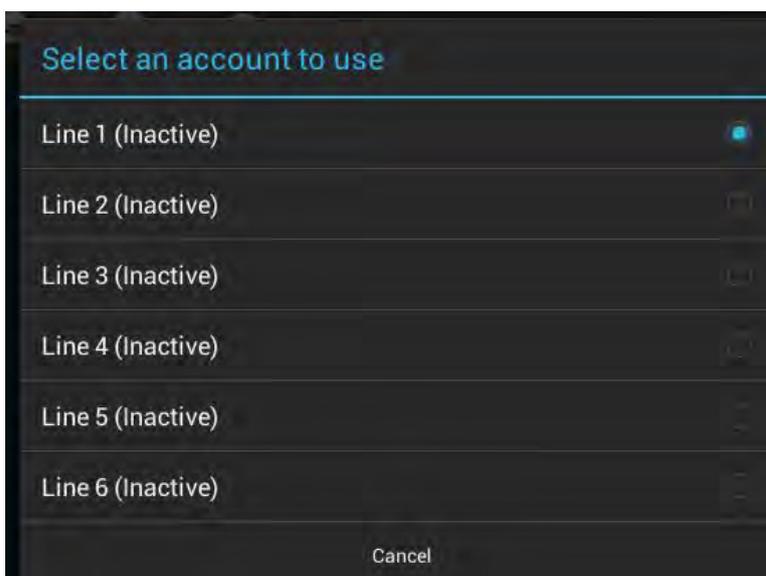


5.1.1.2 Dial Out From Contact

You can choose one of the following steps to enter into the contacts:

- In dialing interface, Click the icon



Contact is shown as below:

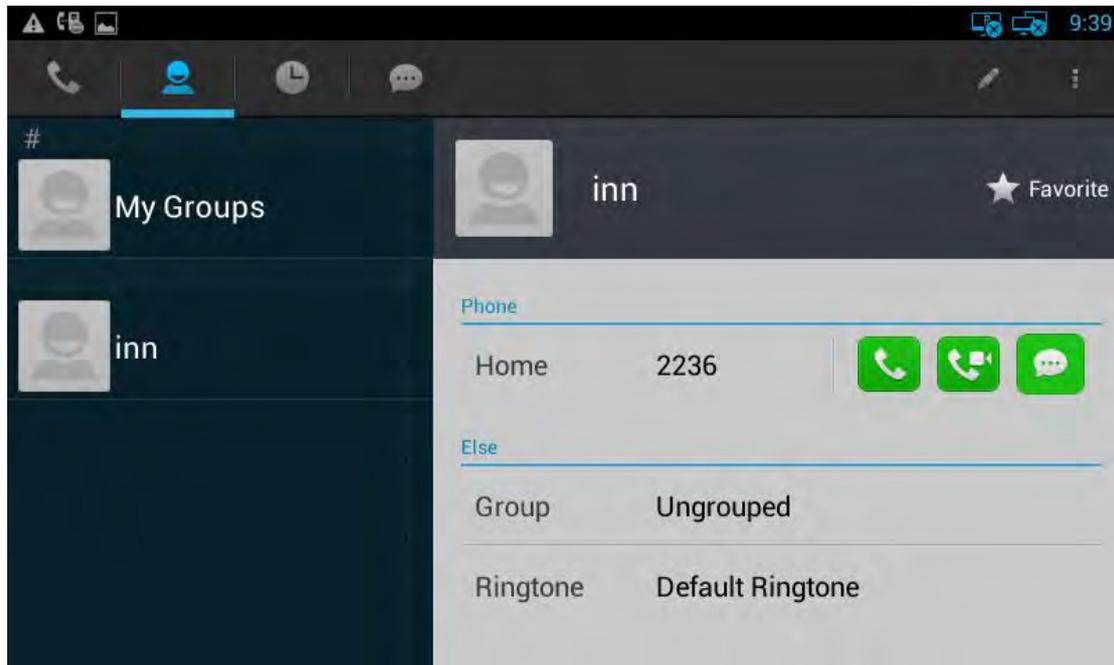

Contact supports rapid locating the contact through first letter.

- 1) Click the contact in Contacts, and you can view the details on the right side.

As shown in below picture:



- 2) You can click  to make an audio call, click  to make a video call, or click  to send the message.

5.1.1.3 Contacts Fuzzy Matching Query

Video phone supports contacts fuzzy matching queried, intuitive, concise dialing interface for the intelligent input, greatly reducing the number of buttons, achieve rapid, effective positioning search, avoid duplication of invalid operation, saving time.

For example, to find Terry, only press the number keys 81 to locate the contact

quickly.

When input no number, displaying the current call records; when input numbers, list the current matching results. Click the contact, and it will enter the telephone number to dial automatically.


5.1.2 Receive A Call

Incoming calls include audio and video calls. If the caller has been stored in the contacts, it will show the contact name, otherwise the caller number will be displayed.

5.1.2.1 Answer A Call

1) Answer an audio call


When receiving an audio call, as shown below:

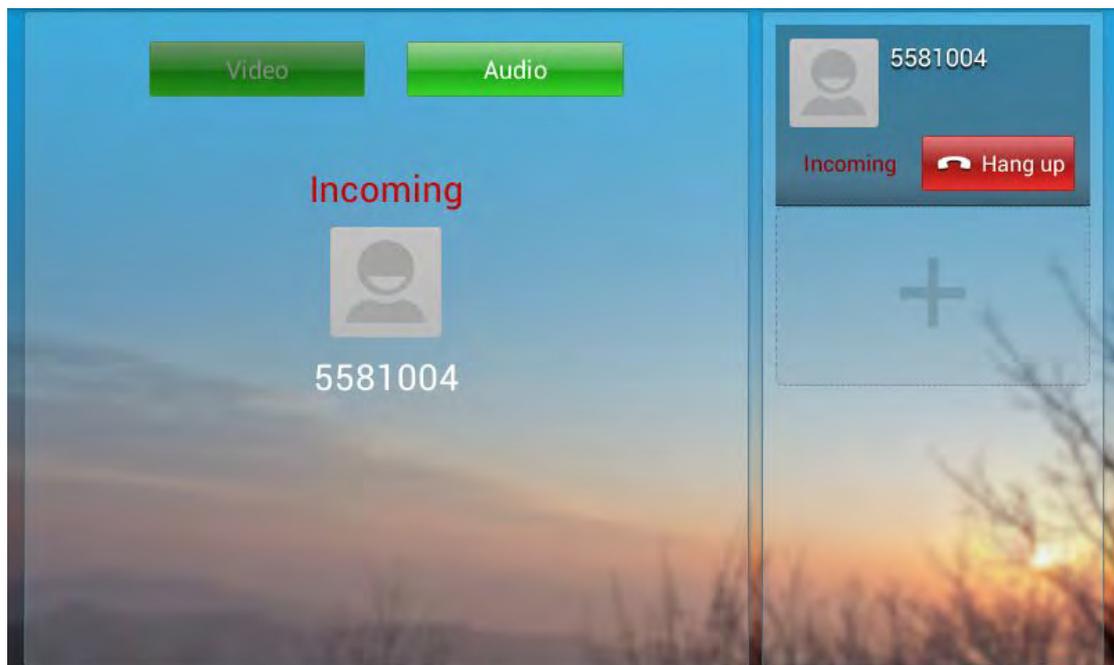

Click "Audio" or pick up the phone to answer.

2) Answer a video call


When receiving a video call, as shown below:

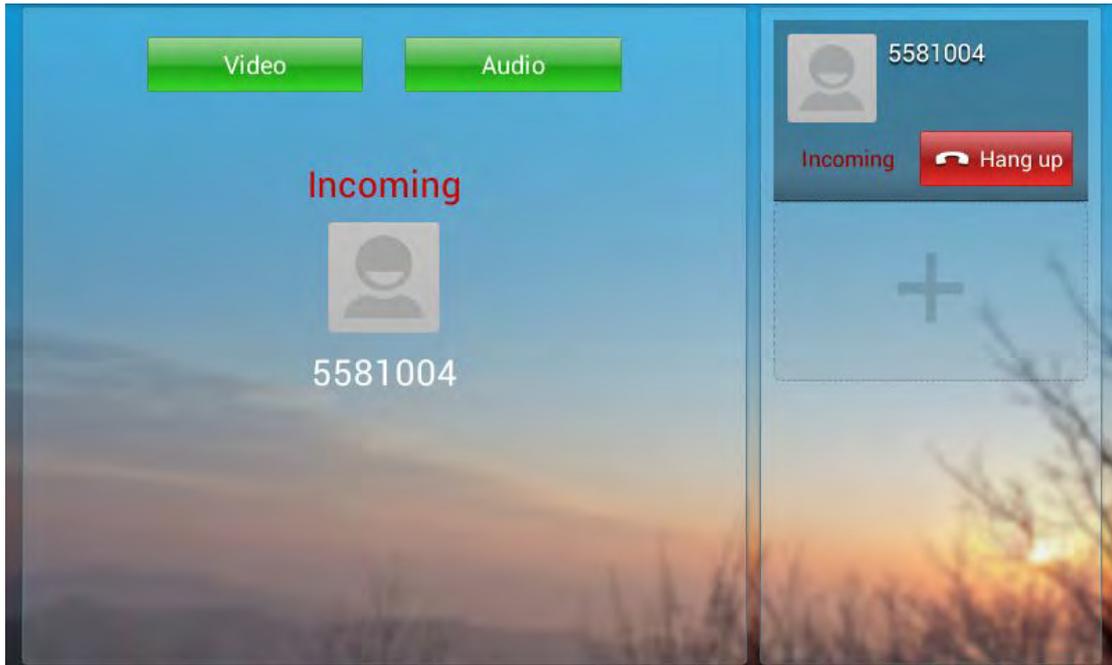

Click "Audio" to establish the audio call, and video is not visible; click "Video" to establish the video call, and video is visible. Pick up the handle is to answer the call as a video call.

3) Answer a video invite

During an audio call, if a video invite is requested, it will pop up the following window:

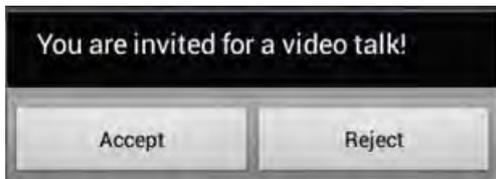

Click "Accept" to accept the video invite, and then the call will change to video call; Click "Reject" to reject the video invite, audio call will retain. 10s without any operation, the video invite will terminate.

5.1.2.2 Reject A Call

If you want to reject a call, click  in calling interface.


If you want to reject a call from a number, you can add the number to the blacklist, please refer to the specific operation 4.2

5.1.3 Call Options

Call options as shown below:



Call options are described as below:

	Click the button to hold the current call.
	Click the button to resume the current call.
	Mute
	Click to switch to video call
	Click to switch to audio call
	Click to switch to Speaker
	Click to switch to handset
	Extended function
	Function under development

5.1.3.1 Dialing Interface

Click the " keyboard" in the conversation, screen will appear the soft keyboard. Input the number by soft keyboard or keypad on the phone.

5.1.3.2 Video Options


During video call you can switch picture through the button on the video interface.

	Switch to full screen
---	-----------------------

	View local video
	View the other part video

5.1.3.3 Multiple Calls

- The Phone supports more than 3 line calls. The line information is on the right side of call interface.
- During a call, you can click on the button  to add a new call. And when click on this button, the current call will be hold.
- During a call, you can click on any line in the list to resume the call.

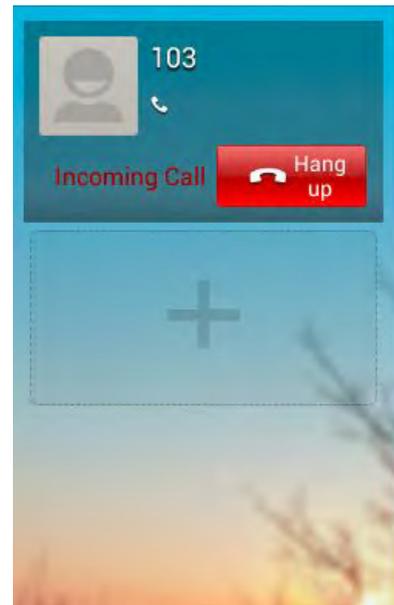

5.1.4 Call Records


5.1.4.1 View Call Records

When got a missed call, the screen will display the missed call notification in above status bar. You can hold the status bar and drag down to open the notification, and then click the missed call notification to view call records.

You can also directly through the dialing interface to view call records:

1) In the main screen, click  or in the main screen, click  ->  .

2) Click  :

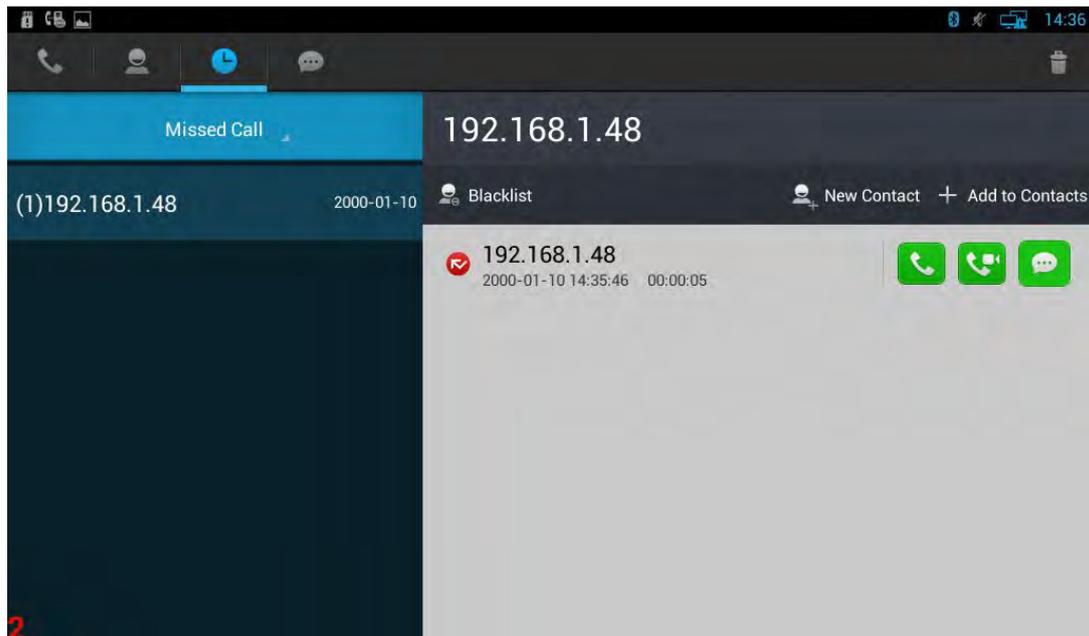

1) you can click the drop-down list  to choose the call record types, it supports for all call, missed call, received call, dialed call and forwarded call five types of call information.

2) Call records are shown on the left, and show the total number in the bracket. Click the number or contact, and you can view all the call records details on the right.

5.1.4.2 Call From Call Records

In Missed Call, Received Call, Dialed Call or Forwarded Call, you can choose one of the following steps to initiate a call:


- Click a contact or a number in the list
- If you want to initiate an audio call directly, please click the icon  in call records;
- If you want to initiate an audio call directly, please click the icon  in call records
- If you want to send a message directly, please click the icon  in call records;

5.1.4.3 Delete Call Records

- 1) If you want to delete one call record, steps as below:
 - Long press the call record you want to delete;
 - Pop-up a menu, press “Confirm” to confirm the deletion.
- 2) If you want to delete multiple call records, steps as below:
 - Press the icon  on the top right corner;
 - Click the call records you want to delete;
 - Click 
- 3) If you want to delete all call records, steps as below:
 - Press the icon  on the top right corner;
 - Click  to select all records;
 - Click 

5.1.4.4 Add A Contact From Call Records


If you want to save a contact from the call records, or merge the contact into the existing contact, you can do the following operations:

- Click the number in the call records list;
- If you want add a new contact, click “New Contact” . A new contact page will pop up. Refer to Chapter 6.2.1.1 for details
- If you want to merge the contact into the existing contact,, click “Add to Contacts” , Choose the existing contact and then click "OK".

5.2 Contacts

You can choose the following method to enter into Contacts interface:

- Enter the dialing interface, and then click the icon 

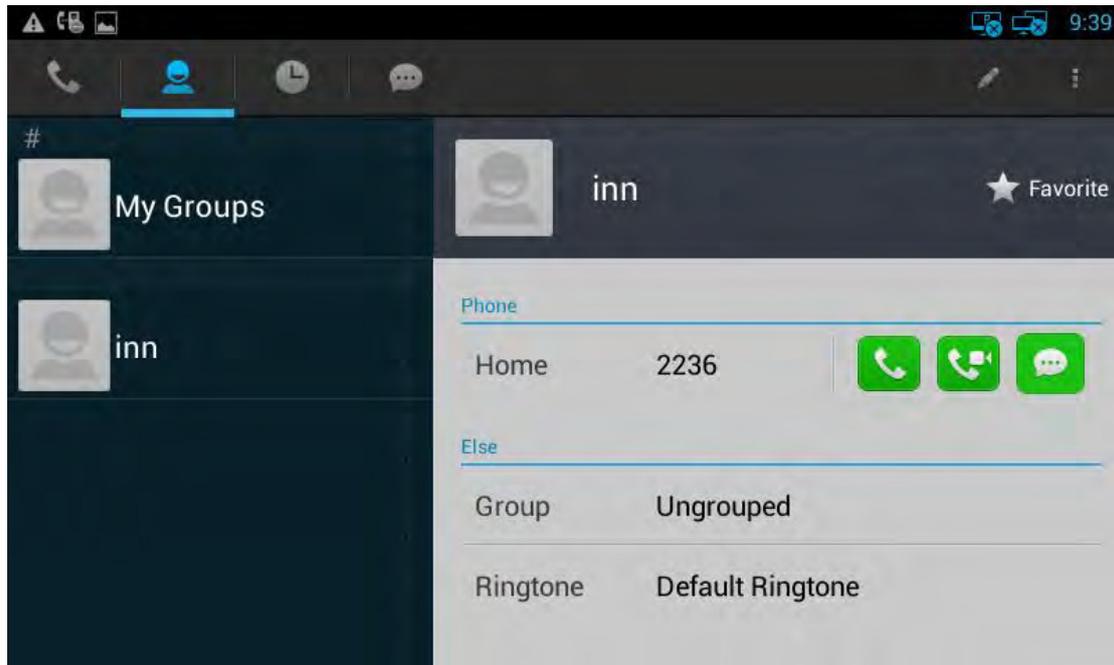


5.2.1 Contacts

You can view, audio call, video call, add, edit, delete the contacts.


5.2.1.1 Add A New Contact

- 1) Click the icon  on the top right corner, and click “New Contact” in the drop-down window;
- 2) The new contact interface is as shown:

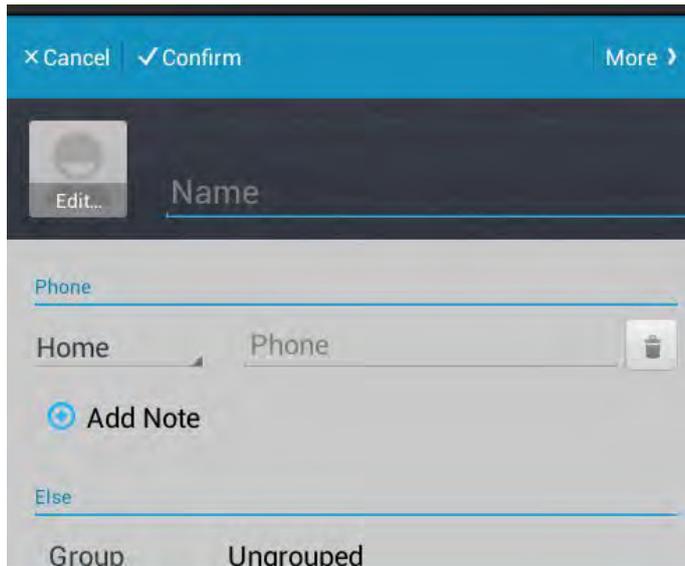

	Edit the contact photo, Browse the image from “Take Photo” or “Choose photo from Gallery”
	Delete the note
	Cancel the edit
	Save the contact
	Some more information

If you want to add some more information, please click , it will pop up the page of contact details, as shown:

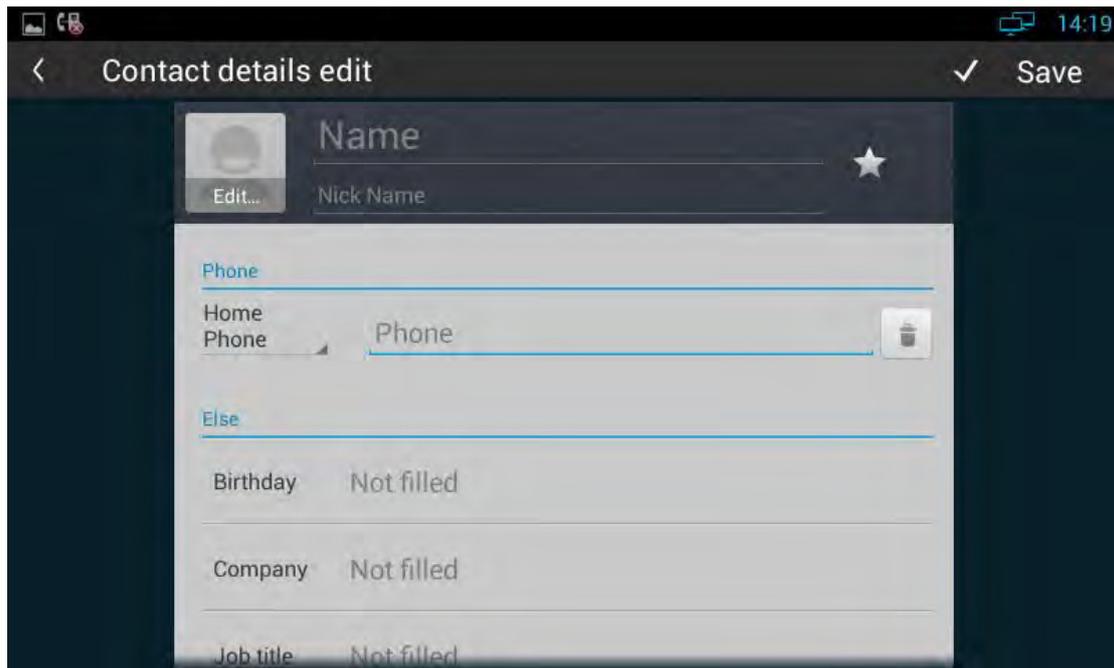

Click  to save the contact.

5.2.1.2 Modify The Contact

- 1) Select the contact you need to modify in the contact list;
- 2) Click ;
- 3) Enter into contact edit page, you can edit the contact information.

5.2.1.3 Delete The Contact


You can choose one of the following methods to delete the contacts:

- Long press the contact you need to delete from your contact list, and tap “Confirm” in the pop-up Remove Contact dialog box;
- Select the contact, click , select "Remove", click “the contact” and “Confirm” to delete.

5.2.2 Group

Group, it will be convenient for you to have contact group management. Contacts should at least belong to a group, the default is no group.

In the contact page, click “My Groups” to view the groups, as shown:

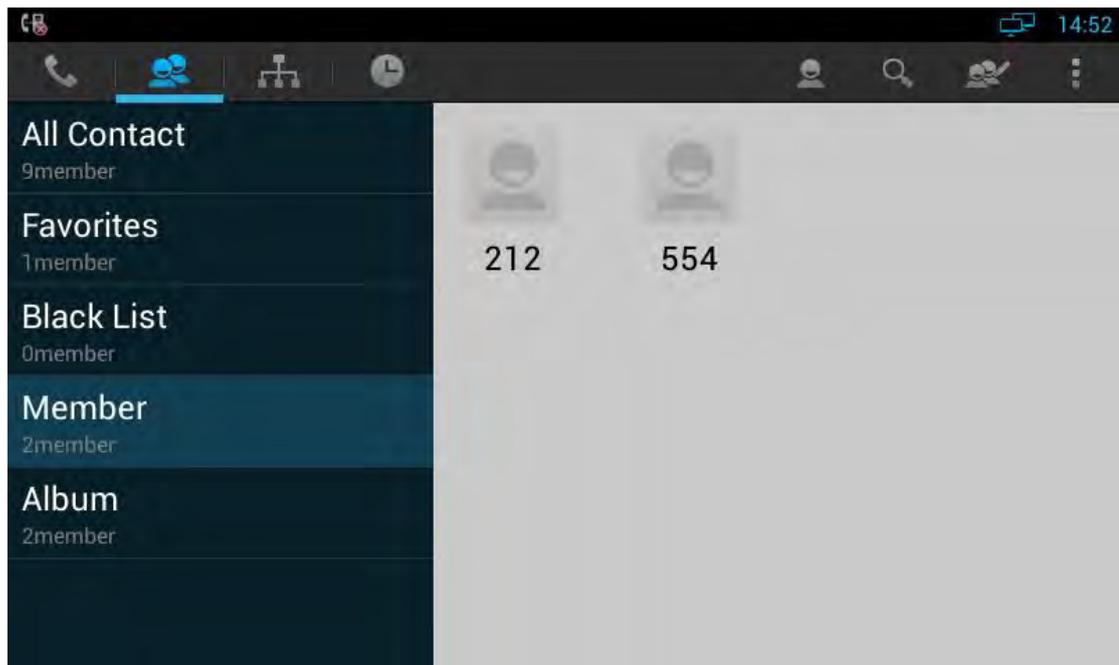

5.2.2.1 Add A New Group

- 1) Click ;
- 2) Choose “New group”;
- 3) Input a new group name in pop-up dialog box;
- 4) Click “Confirm” to save.

5.2.2.2 Rename A Group

- 1) Click the group you want to rename in contact page;
 - 2) Click ;
 - 3) Input the new name you want directly;
- (**Note:** the system default group cannot be renamed)

4) Click “Confirm” to save.

5.2.2.3 Remove A Group

- 1) In Contact page, click the group you need to delete, and then click ;
- 2) Click “Remove Group”, and then click “OK”.

(Note: the system default group cannot be deleted)

5.2.2.4 Edit A Group

- 1) In Contact page, click the group you need to edit.
- 2) Click  and display the tool bar




	Exit the group edit.
	Add contacts to the group, click the contacts in left list, and then click “OK” to add.
	Remove contacts from the group, click the contacts in right list, and then click “OK” to remove.

5.3 Conference


You can use the conference feature to hold a 3-way conference by pressing the Conference soft key to invite the current talking and one line talking held to attend conference.


4.3.1 Create 3-way conference

1. Create talking with first party;
2. Press  to create a new talking;
3. Input the number of second party and press the Video Call or Audio Call to make a call;

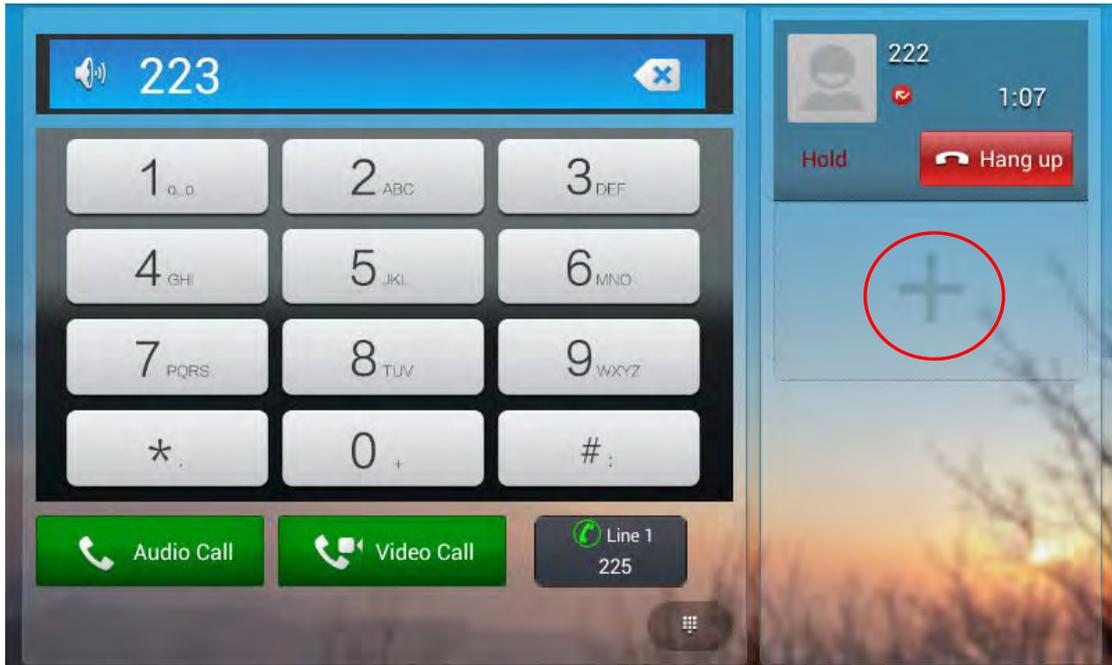

4. When the second party answers your call, press the Conference softkey or the Conference key on the keypad to start 3-way conference.

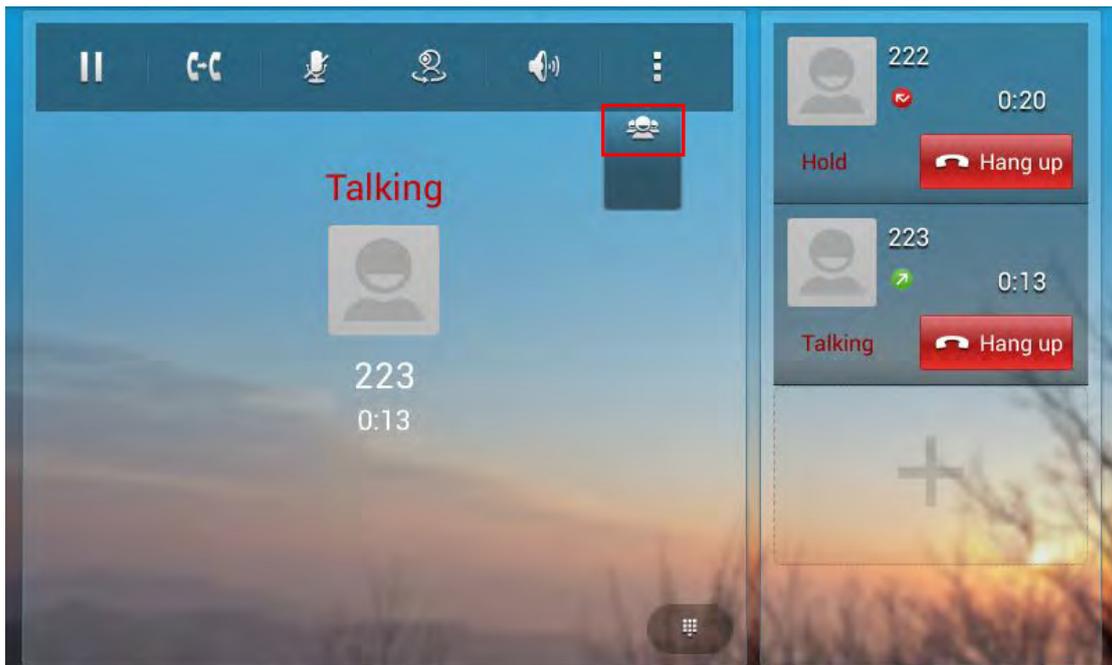

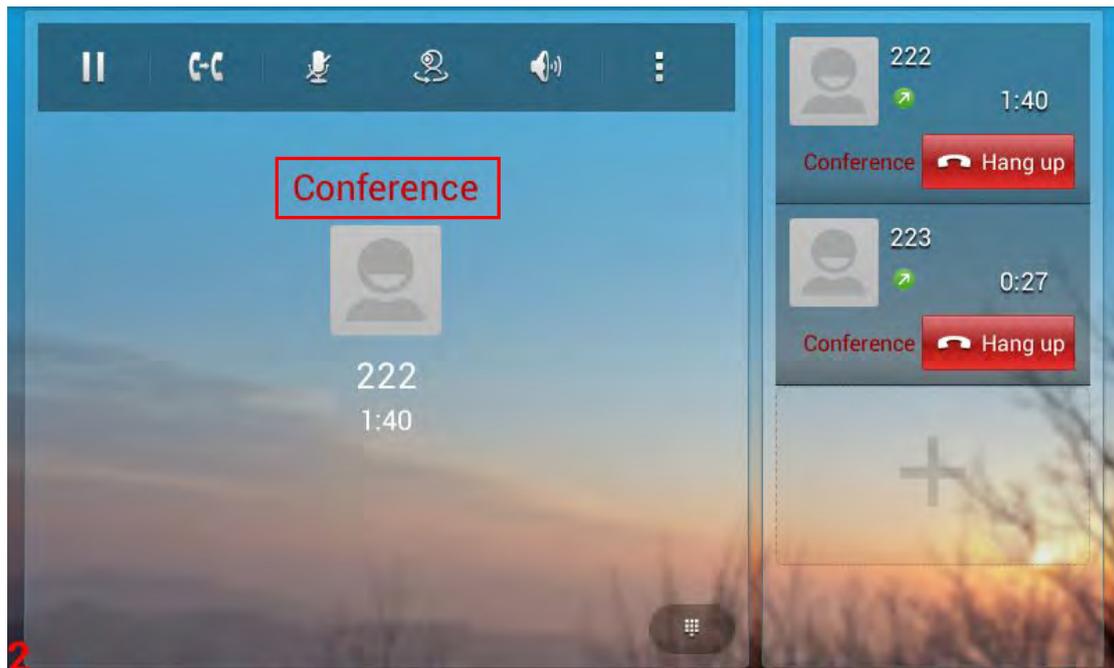



5.4 Transfer

4.4.1 Blind Transfer

1. When the IP phone blind transfers a call.
2. Pick up a call, press transfer key on the keypad or click .
3. Drag down the current call into the gray box
4. Press  to enter the target number, then click Confirm.
5. Click Blind to transfer the number.

4.4.2 Attended Transfer

1. Pick up a call, press transfer key on the keypad or click .
2. Drag down the current call into the gray box
3. Press  to enter the target number, then click Confirm.
4. Click Attended to transfer the number.

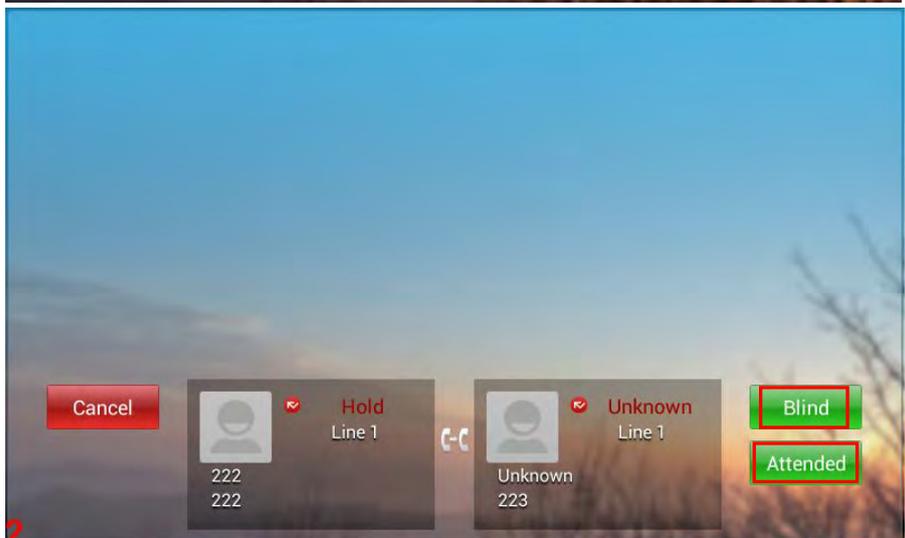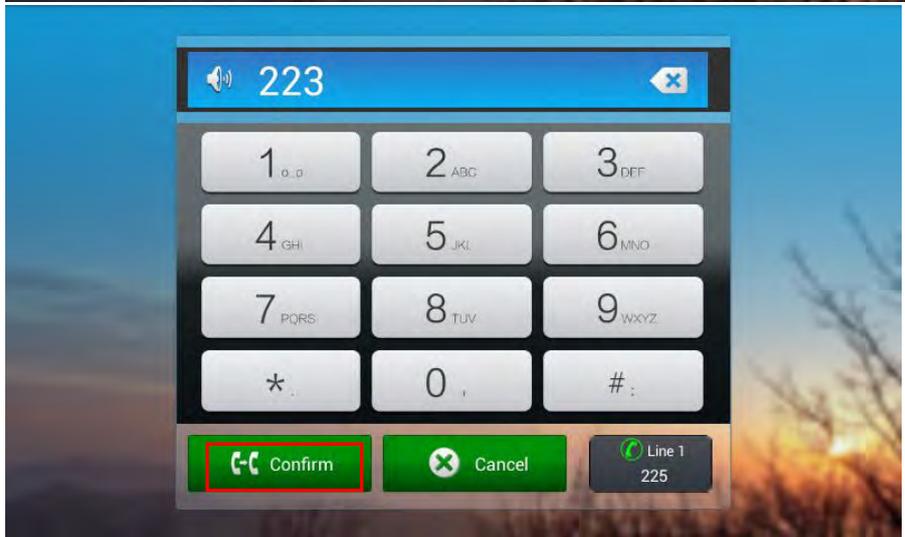

5.5 Keypad Input

Only numbers, * and # can be input by keypad. The default Input method is Android keyboard. You can also download your preferred input method from the internet.

5.6 Webpage Browser

This section describes the default web browser in the video phone, and you can also download your preferred browser through the internet.

You can use one of the following methods to run the browser:

- Mode 1: In the main screen, click  ;
- Mode 2: In the main screen, click  -> .


5.6.1 Open The Webpage

5.6.1.1 Browser Address Bar

Run the browser, enter the URL in the address bar or direct input the information to search. After the input, you can click “Go” on the soft keyboard to complete.

5.6.1.2 Bookmark And Browsing History

Run the browser, click  to view the “bookmark”:

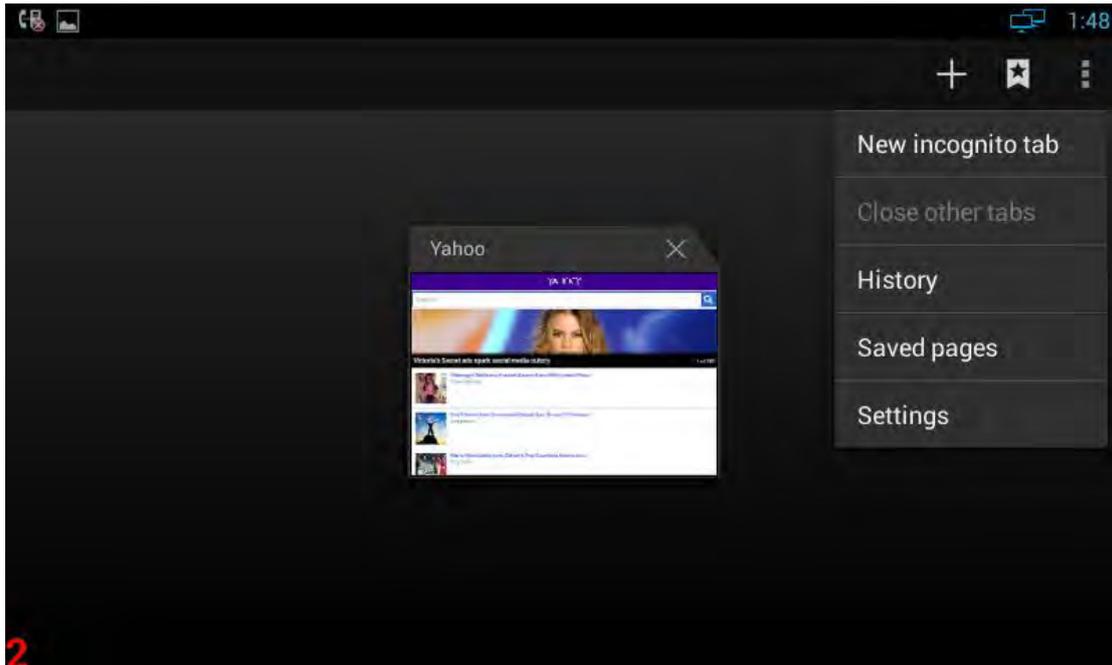

	Add a new webpage
	View the bookmark and browsing history
	Others

5.7 Camera

Open the camera: in the main screen, click  -> .

You can view your photos and videos in "Gallery"

5.7.1 Photograph Mode

Turn on the camera, and the default mode is photograph mode.

5.7.1.1 Basic Setting

Click on the upper right corner  or long press on the screen to pop up the

menu

	Setting
	White balance setting

5.7.1.2 Mode Switch




Click on the lower right corner  to switch the mode.

	Panoramic camera mode
	Video mode
	Photo mode

5.7.1.3 Take A Photograph



You can click on the center button  on the right side to take pictures. It supports automatic focusing, if you want to adjust the focal length, please use two fingers to press on the screen, shrinkage or expansion to adjust the focal length.

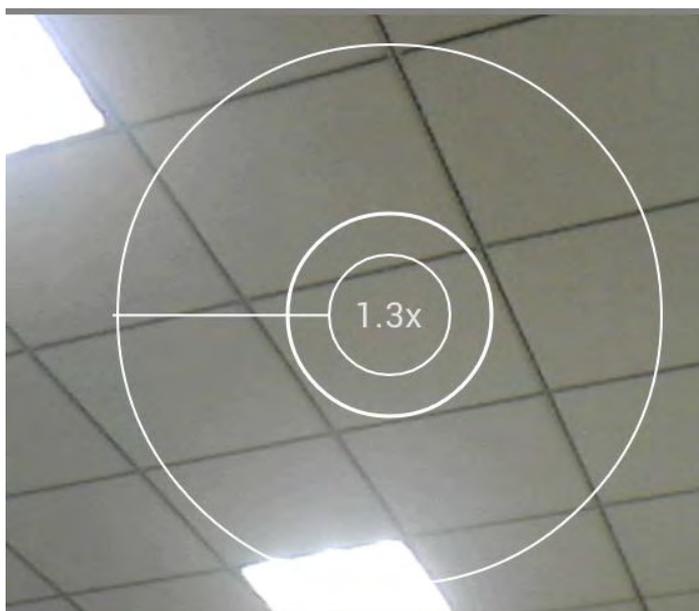

5.7.1.4 Take A Video

Click  ->  to switch to video mode.

Click , video starts when the icon turns to . And click  to stop the video recording and save.

5.8 Gallery


You can use Gallery to view photos or videos, and you can also view the picture or video downloaded from the Internet. You can edit the photo or picture and set it as wallpaper.

You can follow the below method to enter into the gallery:

In the main screen, click  -> 

5.8.1 View Photo & Picture & Video

Enter the gallery, and you can view all photos, pictures in the device, as shown below:

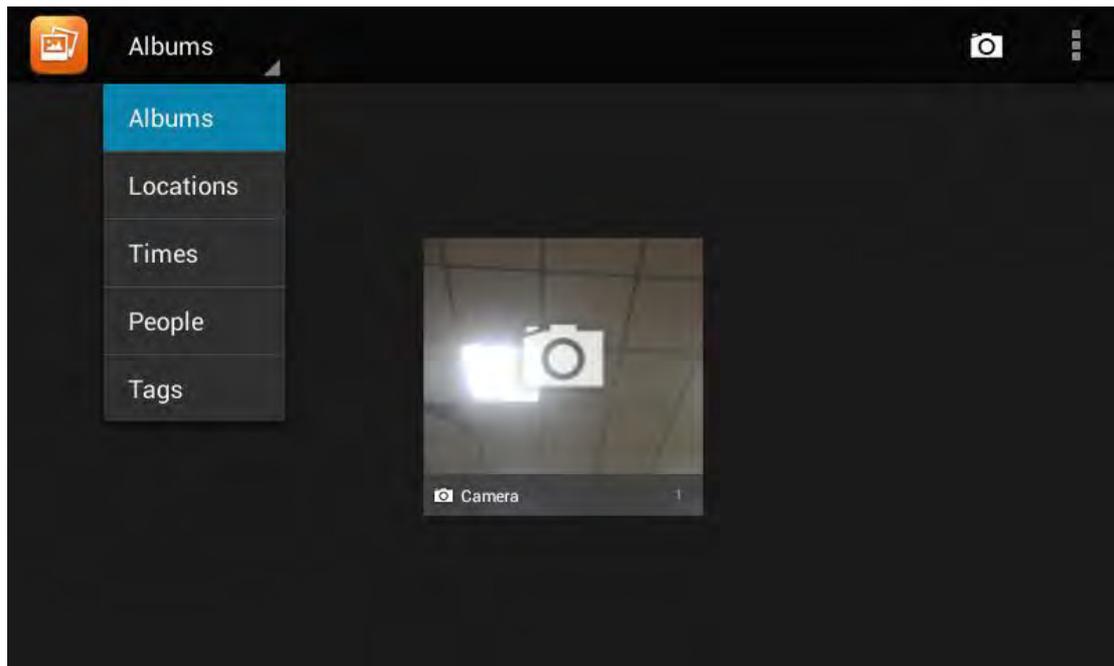

Click the icon on the upper left corner, and you can view photos and videos in groups in the drop-down list. Click on the folder to view all the photos.

While viewing photos, you can use two fingers to press on the screen, shrinkage or expansion to shrink or enlarge the image.

5.9 Bluetooth

Bluetooth is a proprietary, open wireless technology standard for exchanging data over short distances from fixed and mobile devices, creating personal area networks with high levels of security. On VP-R47P, users could use Bluetooth to transfer files, share contact information with other Bluetooth portable devices by installing Bluetooth Application, or use Bluetooth headset for making calls.

To connect to a Bluetooth device, turn on VP-R47P's Bluetooth radio first. The first time when using a new Bluetooth device with the VP-R47P, "pair" the device with VP-R47P so that both devices know how to connect securely to each other. After that, users could simply connect to a paired device. Turn off Bluetooth if it's not used.

Bluetooth related settings are under VP-R47P's Settings application → Wireless & networks. Users could access it via the following two ways:

- In the main Screen, press  button -> System Settings -> Wireless &

Networks;

- Press on screen  and click on  -> Wireless & Networks.

5.9.1 Turning Bluetooth On /Off

- Go to VP-R47P's Settings;
- Click on Wireless & Networks;
- Click or untick the option for Bluetooth.

5.9.2 Changing Bluetooth Device Name

The VP-R47P uses "VP-R47P" as Bluetooth device name by default. The device name will be visible to other devices when connecting them. Follow the steps below to change the name:

- Go to VP-R47P's Settings;
- Click on Wireless & networks;
- Click on Bluetooth, and click Bluetooth to turn it on;
- Click on Bluetooth settings → Rename, and enter a new name. Once done, click "OK".

5.9.3 Pairing VP-R47P With A Bluetooth Device

Before connecting VP-R47P with other Bluetooth device, users must pair them first. They will stay paired afterwards unless they are unpaired.

- Go to VP-R47P's Settings;
- Click on Wireless & networks;
- Click on Bluetooth, and tick Bluetooth to turn it on;
- Click on SEARCH FOR DEVICE;
- The VP-R47P scans and displays the IDs of all available Bluetooth devices in range. If the device you would like to pair with does not show up in the list,

ensure that the other device is turned on and set to be discoverable;

- If the VP-R47P stops scanning before the other device is ready, touch SEARCH FOR DEVICE;
- The discovered device will show in the available devices list with device ID. If it's unpaired, it will show "Pairing" under the device ID. Make sure the Bluetooth device is active in pairing mode. Then tap on the device ID on the VP-R47P to pair them. Confirm the passkey in the prompted message (if any). Or if PIN is required, please refer to the device's documentation or other procedures to obtain the PIN.

5.9.4 Un-pairing A Bluetooth Device

After successfully paired, the VP-R47P will show item "PAIRED DEVICES" above the Bluetooth device ID in the scan list.

Once it's connected, users could also tap on to the Bluetooth device ID needed to be unpair, then tap on Unpair in the prompted message.

5.10 USB

The video phone supports USB connection for keyboard and USB storage devices. To use USB keyboard, simply plug it into the USB port on the right side of the video phone and it will be ready to use.

To connect and access USB storage device:

- Insert USB storage device into USB port at the right side of video phone;
- It will take a few seconds for the video phone to prepare the connection;
- To access USB storage, click on the screen  -> Explorer -> USB, to access and manage your data.

5.11 Calendar

To start the calendar:

- In the main screen, click  -> Calendar;


As shown below:



If one day has activity, color will appear on the calendar to remind.

5.11.1 Add An Account

While using the calendar at the first time, it will remind you to add an account.

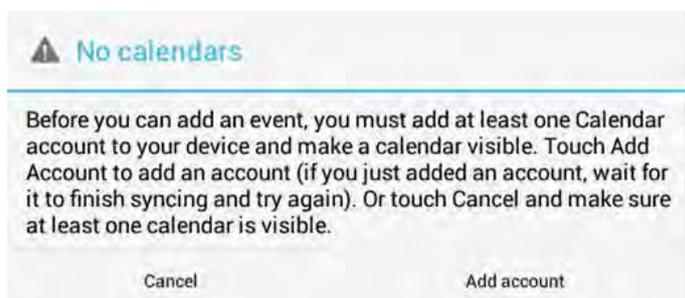

Click "Add account" to add an account, and then synchronize all the schedules of the account to the calendar.

5.11.2 View Calendar

The calendar will display weekly by default, and you can slide the calendar up and down to view the different weeks. In order to view the activities or create the new activities, you can also make the calendar display daily or monthly. While using daily or monthly displaying, you can slide the calendar left and right to view the different day or month.

Click the date on the upper left corner, it will display the drop-down list

Day	October 1
Week	Sep 28 – Oct 4
Month	October
Agenda	October 1

, Calendar displaying mode can be selected as daily, weekly or monthly.

5.11.3 New Activities

1) While Calendar is displaying as daily or weekly, you can use the following methods to create a the new activity:

- Click on the date, and then click on the time period;

- Click on 

2) Input the details of the activity, as shown below:

Event name

Location

FROM
Wed, Oct 1, 2014 01:00

TO
Wed, Oct 1, 2014 02:00

ALL DAY

(GMT+8:00) Beijing

GUESTS
Guests

GUESTS
Guests

Description

REPETITION
One-time event

REMINDERS
10 minutes Notification

Add reminder

SHOW ME AS
Busy

PRIVACY
Default

3) Click “Done” to finish.

5.11.4 Edit Activities

You can click on schedule needed to be modified to edit the schedule.

5.11.5 Delete Activities

While viewing the activity, you can click “DELETE” on the upper right corner to delete


the activity.

5.12 Clock

Enter the Clock:

- In the main screen, click  -> Clock;

As shown below:

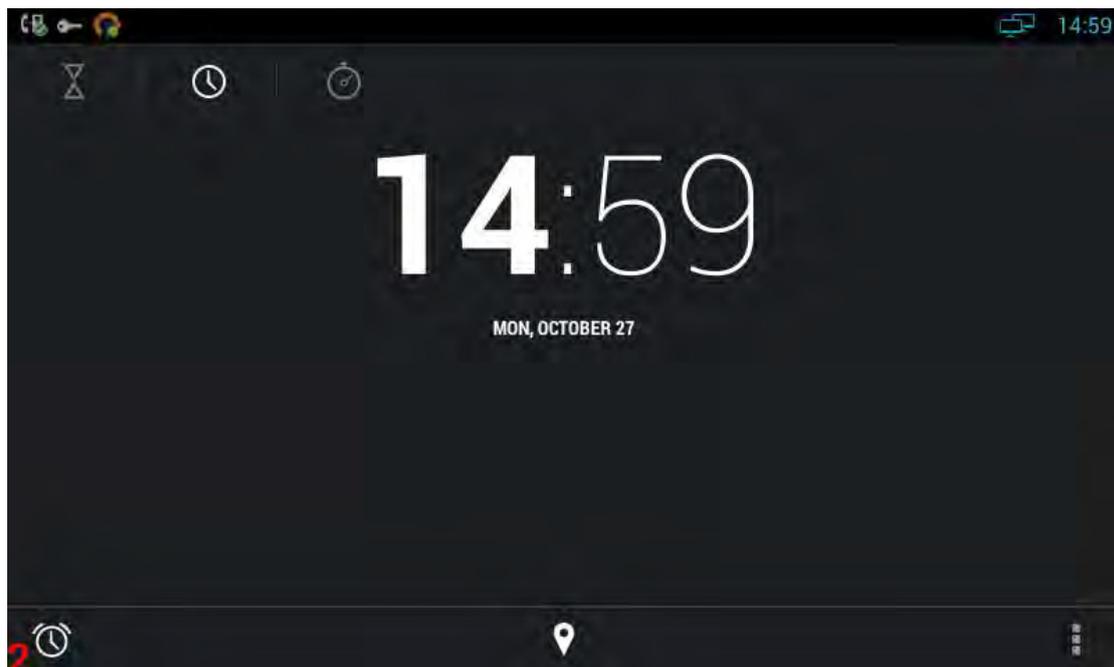


Description:

	Alarm
	Countdown timer
	Stopwatch
	Time zone
	Others

5.12.1 Alarm


You can add one or multiple alarms:

1) Click ;

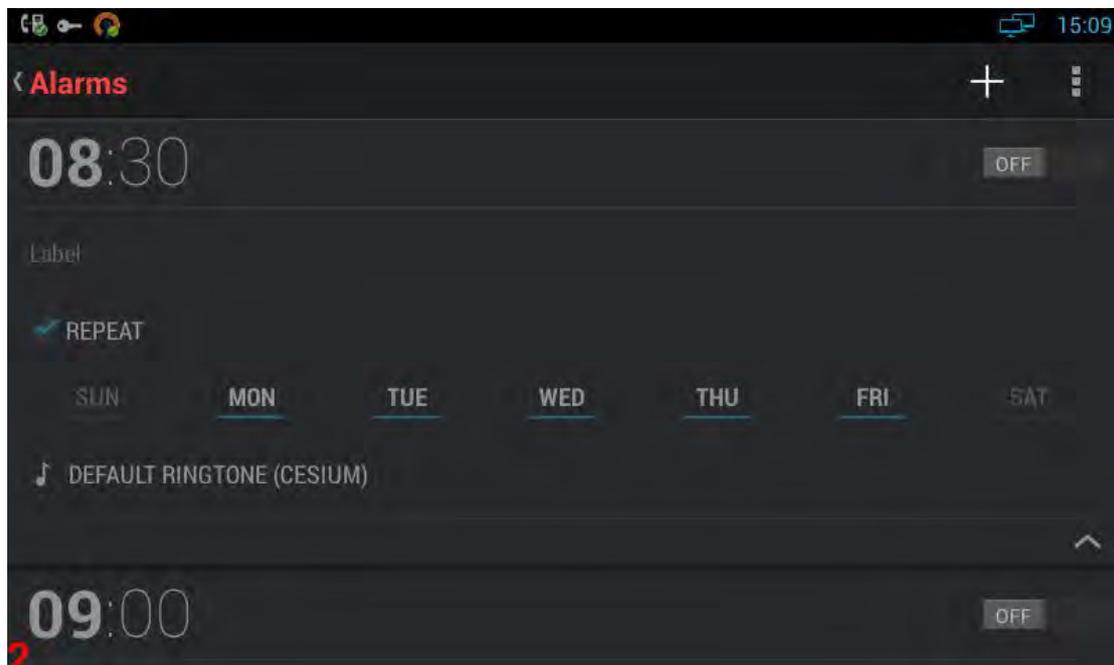

2) Click ;

3) Input the time of alarm:

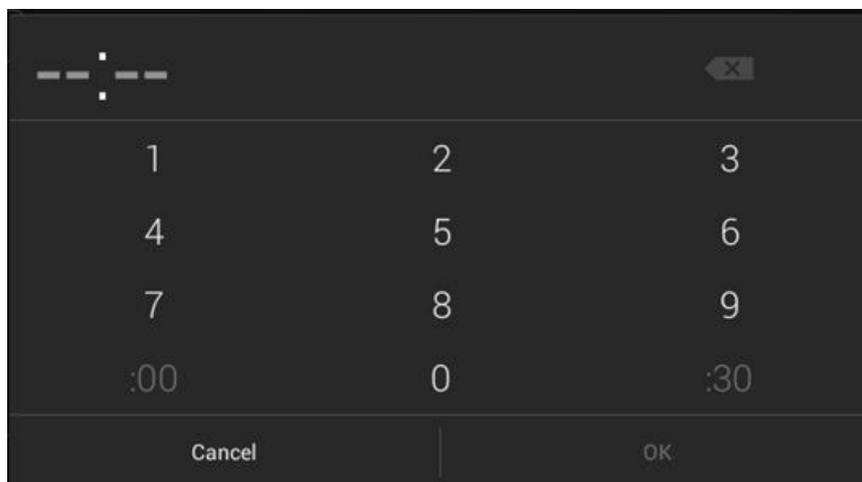

4) If you want to repeat the alarm in some days of a week, please click “REPEAT”;

5) You can choose the ringtone of the alarm.

5.12.1.1 Enable/Disable Alarm

You can click ON/OFF to enable or disable the alarm.

Note: if power off the phone, the alarm will also be off.

5.12.1.2 Modify Alarm

If you want to modify the status of the alarm, including time, repeat data, alarm ringtone, you can directly click on the alarm.


5.12.1.3 Delete Alarm

In Alarm page, you can use the following method to delete the alarm:

- Press and hold the alarm, after pop-up the dialog box, click  , and then click “OK”

5.12.2 Countdown Timer

- 1) Click 
- 2) Click the number to set the countdown time.
- 3) Click “START”

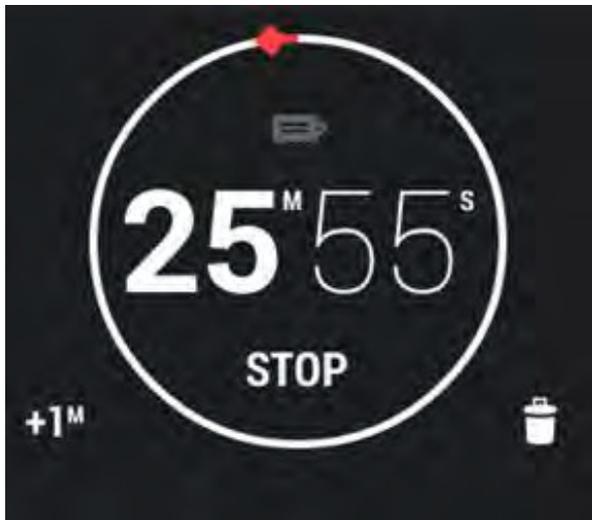

Click on the time in the page of countdown timer can stop or continue the time, and the other buttons are described as followed:

	Add one minute to countdown timer
	Delete the current countdown timer

5.12.3 Stopwatch

- 1) Click ;
- 2) Click "START" or "STOP" to start or stop the stopwatch;
- 3) Click the time icon to start a new time;
- 4) When the time is on hold, click to reset the timer.

5.13 Email

Email Application can let you use POP3 or IMAP service to send and receive e-mail.


Start Email:

- In the main screen, click  ->Email

5.13.1 Add A New Email Account

Make sure the email account has enabled POP3 or IMAP service, and you can add many accounts.

- 1) Please choose one of the following methods to start:
 - If you haven't added an e-mail account yet, while starting the e-mail application, you will be asked to set up your account, as shown below

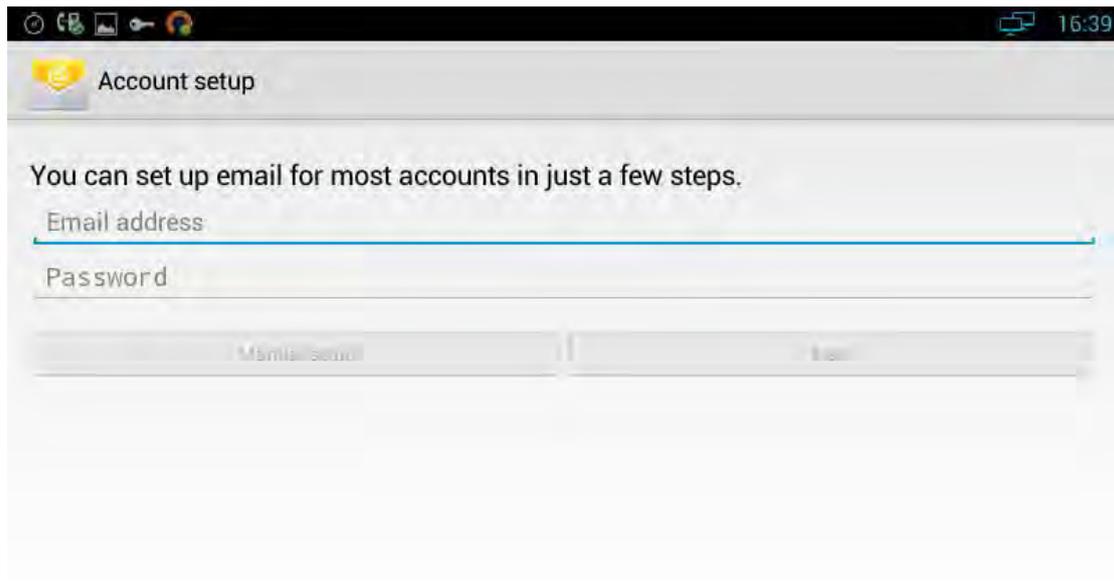

- If you have already set up an email account, In the main Email page, Press “Menu” button, and then click “Account”, and last press “Menu” to “Add Account”.

2) Input the email account and password, and then click “Next”;


If there is no account type in the equipment database you want to set, the device will require you to enter more detailed information (the receiving server settings and outgoing server settings).

3) Input the account name and your name, click OK.

5.14 Music

In the main screen, click  ->Music.

The music page is shown as below:

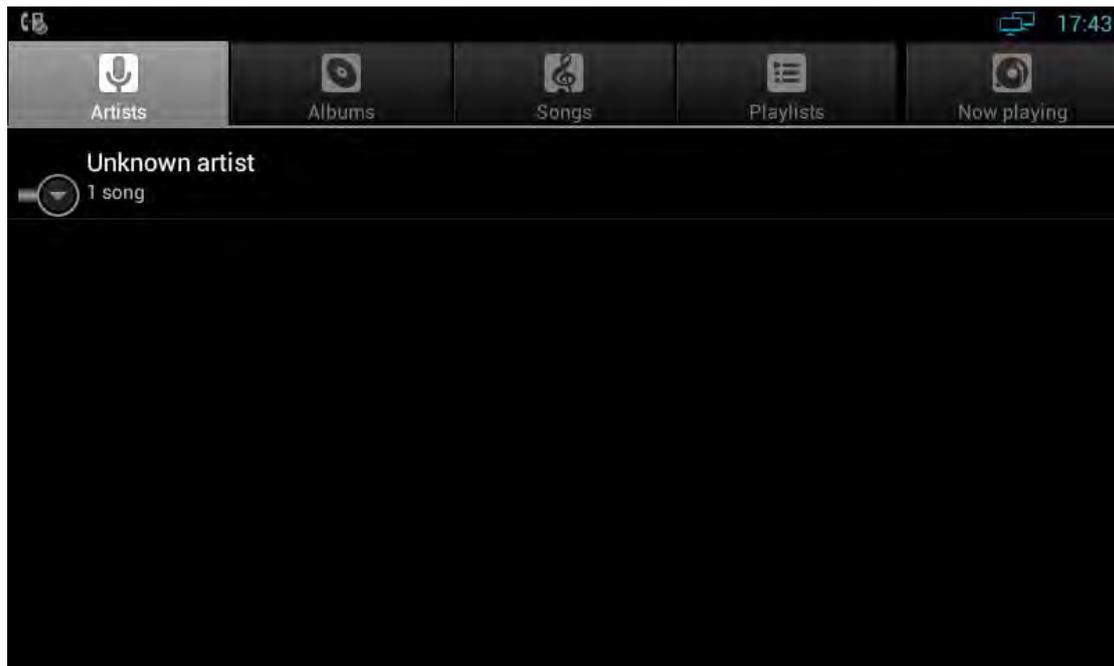


You can click the labels of Artists, Albums or Songs to view all songs. You can also view or play the songs from the playlists.

To view the currently playing song, please click the "now playing" label

5.15 Explorer

You can use explorer to manage the files in the device.

In the main screen, click  -> Explorer, as shown below:

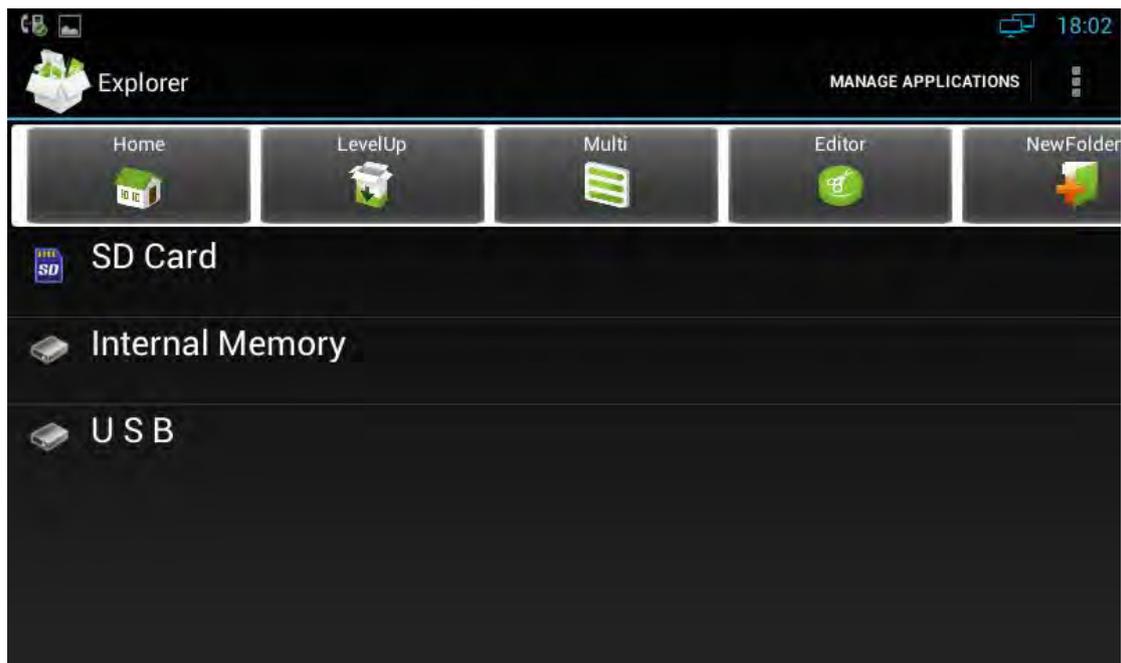


 Home	Home Page
 LevelUp	Upper Layer
 Multi	Multiple Choices, And the selected file will change to blue color.
 Editor	Editor, you can do Copy, Delete, Move, Paste, Rename, Send, Create shortcut operations.
 NewFolder	New Folder
 Back	Previous File
 Next	Next File
 SD Card	If you insert a SD card, you can view the files in SD card. (Optional)
 Internal Memory	View the internal files of the device
 USB	View the files in inserted USB device

5.16 Video Player

You can use video player to play local videos.

To run the video player: In the main screen, click  -> Video

After entering, you can click on the list of videos to watch. As shown below:

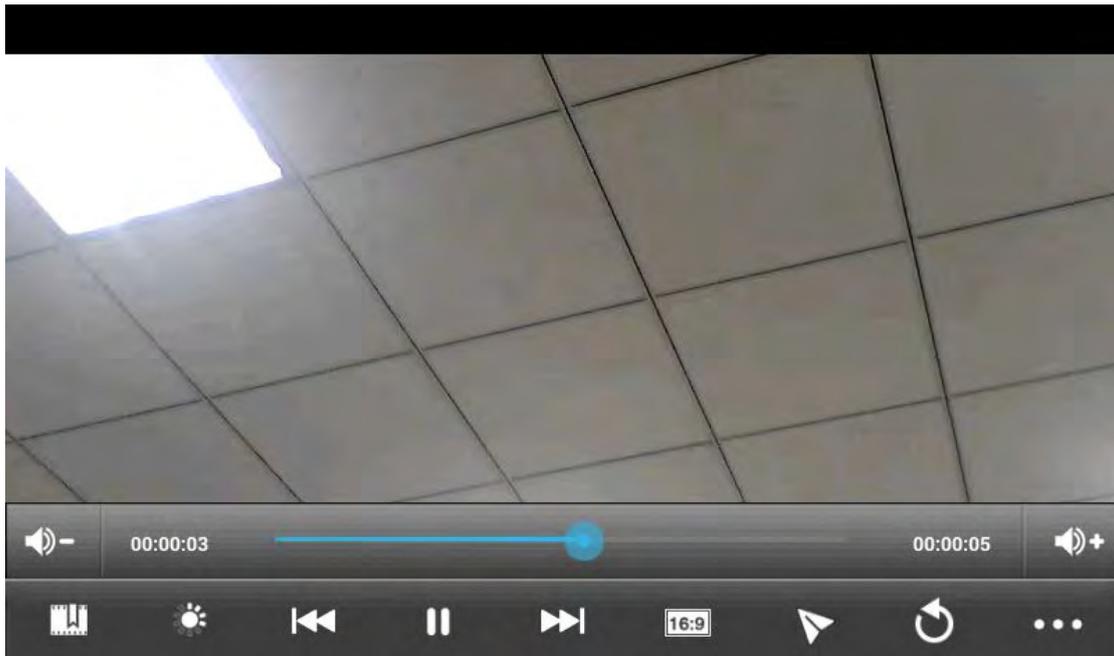

	Bookmark
	Screen Brightness Adjustment
	The previous video, and long press to make video fast backward.
	Hold/Play
	The next video, and long press to make video fast forward.
	Screen size adjustment, four type of video sizes: original size, full screen, 16:9, 4:3
	Floating browse mode
	Others

5.16.1 Floating Browse Mode

Click on  during playing a video to enter the floating browse mode. As shown:



You can click on  to play the video, click  to shrink the floating window. And use two fingers to press on the screen, shrinkage or expansion to adjust the window size.

If you want to close the floating window, please long press the floating window until it displays  icon in the center, click on the icon to close the floating window.

5.17 BLF

Busy Lamp Field (BLF) is used to monitor a specific user for status changes on IP phones. For example, you can configure a BLF key on a supervisor's phone to monitor the phone user status (busy or idle). When the monitored user places a call, a busy indicator on the supervisor's phone indicates that the user's phone is in use.

To setup BLF: web-> phone-> Extkey. Set the Type as BLF ,and configure the value and account.

Key	Type	Label	Value	Account	Extension
Key 1	BLF		2000	Account 1	
Key 2	N/A			Account 1	
Key 3	N/A			Account 1	
Key 4	N/A			Account 1	
Key 5	N/A			Account 1	

Note :
 Max length of characters for input box:
 255: Broadsoft Phonebook server address
 127: Remote Phonebook URL & AUTOP Manual Update Server URL
 63: The rest of input boxes

Warning :

5.18 BLF List

BLF List: While using BroadSoft platform, the accounts which are monitored by the sip phone will reply the subscribe news in the form of xml list to improve efficiency.


BLF List Code: While using BroadSoft platform, when press BLF List key configured the BLF LIST CODE, can Pick up call or Barge in call.

Note: BLFListCode is supported by Broadsoft platform, Please consult your administrator further information.

5.19 Intercom

To configure Intercom via web interface:

PATH: Phone-> Ext Key. Configure the type as Intercom, and setup the value and account

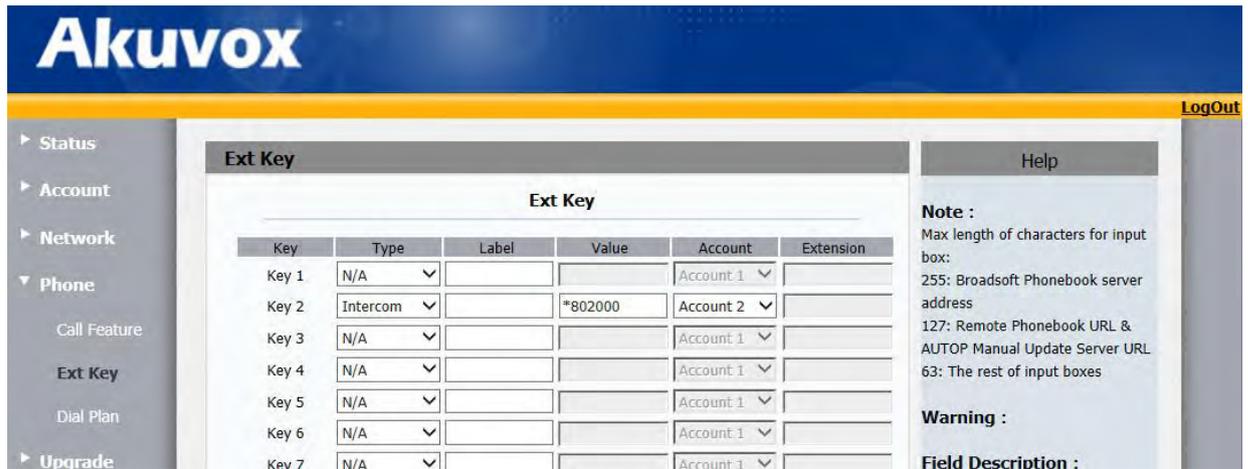

1. Press the Intercom key when the phone is available. The phone will connect the extension number of remote user automatically.
2. Answer the intercom incoming calling.
3. In default situation, the IP phone Akuvox R47P will answer the intercom incoming calling automatically and make a noise. You can set the phone to enable silent mode when picking up the intercom call so that the other will not hear you.

The features of intercom:


Intercom Feature	Note
Allow Intercom	Enable or disable Auto-receive intercom
Intercom Mute	Enable or disable Mute mode after receiving intercom incoming

5.20 Call Return

This function can be used to call the latest dialed call record automatically.

To configure Intercom via web interface:

PATH: Phone-> Ext Key. Configure the type as Call Return

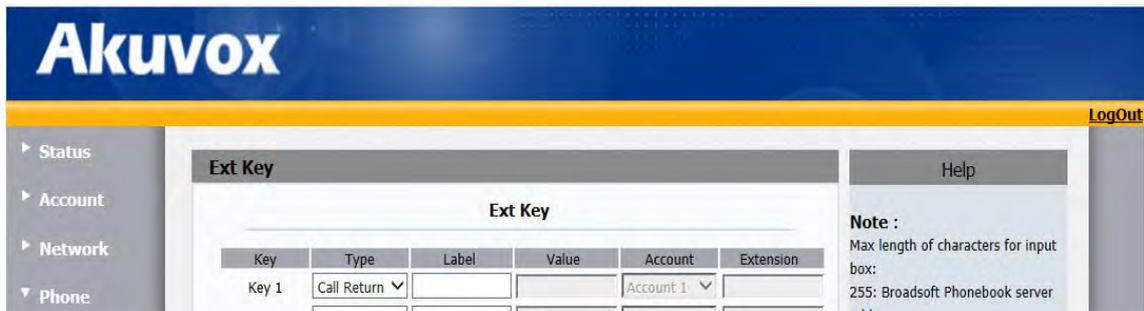


5.21 Others

5.21.1 Apk Installer

You can use Apk Installer to install the apk application

In the main screen, click  -> Apk Installer. As shown below:

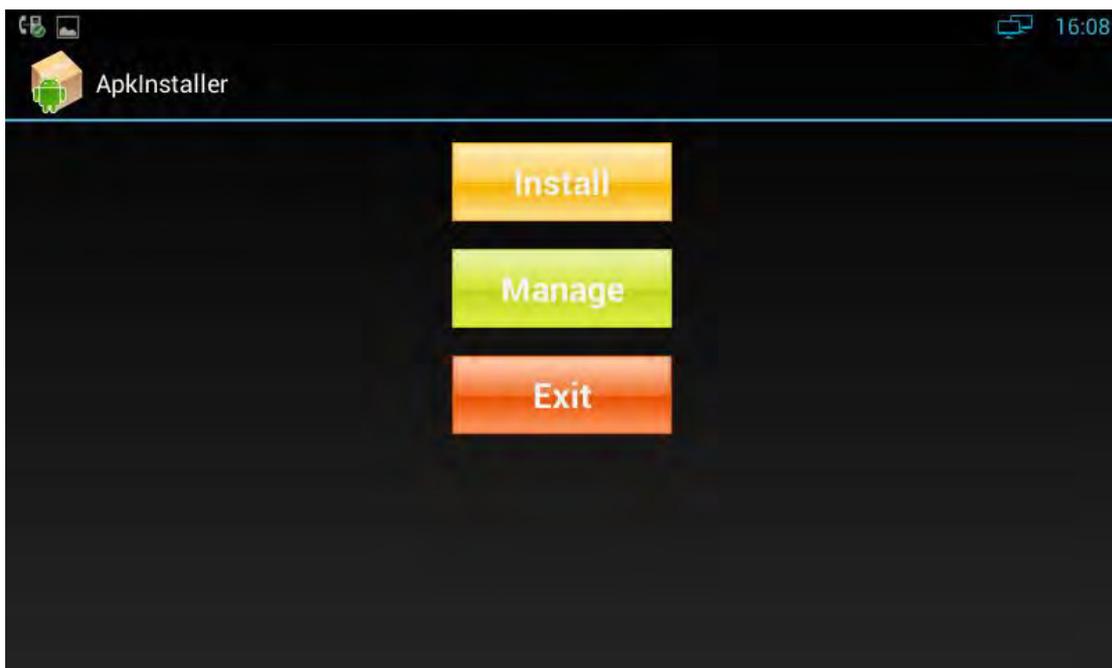

5.21.1.1 Install

You can click "Install", and then browse the path:



The system will list all the Apk applications under the path, click the Apk to install.

5.21.1.2 Manage


You can click on "Manage" button to browse the Apk installed in the system.

5.21.2 Ping Tool

You can use the Ping tool for Ping query, network packet capture and view the log information.

5.21.2.1 Ping Query

Ping query interface is as shown:

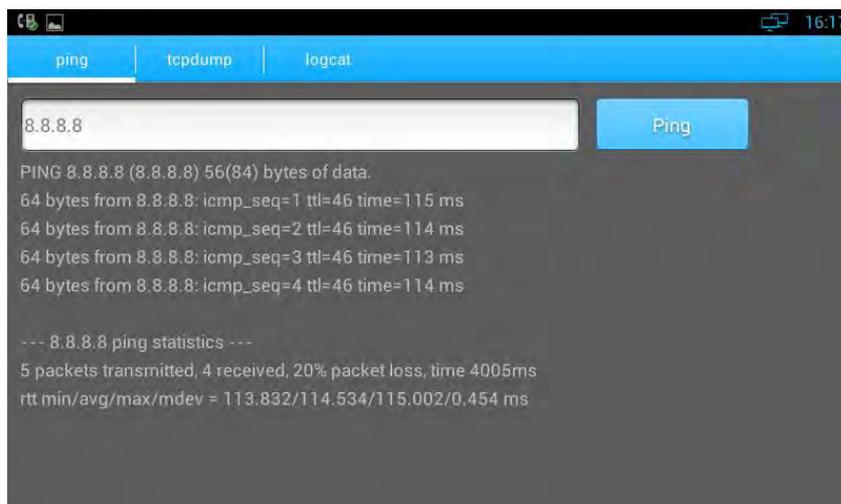


You can input the address you want to Ping, click the Ping button, you can view the Ping query results. If you take a long Ping query, in the input box, please manually

enter the Ping + address, such as: , and then click the Ping button.

5.21.2.2 Tcpcap

Log captured tool interface is as shown:

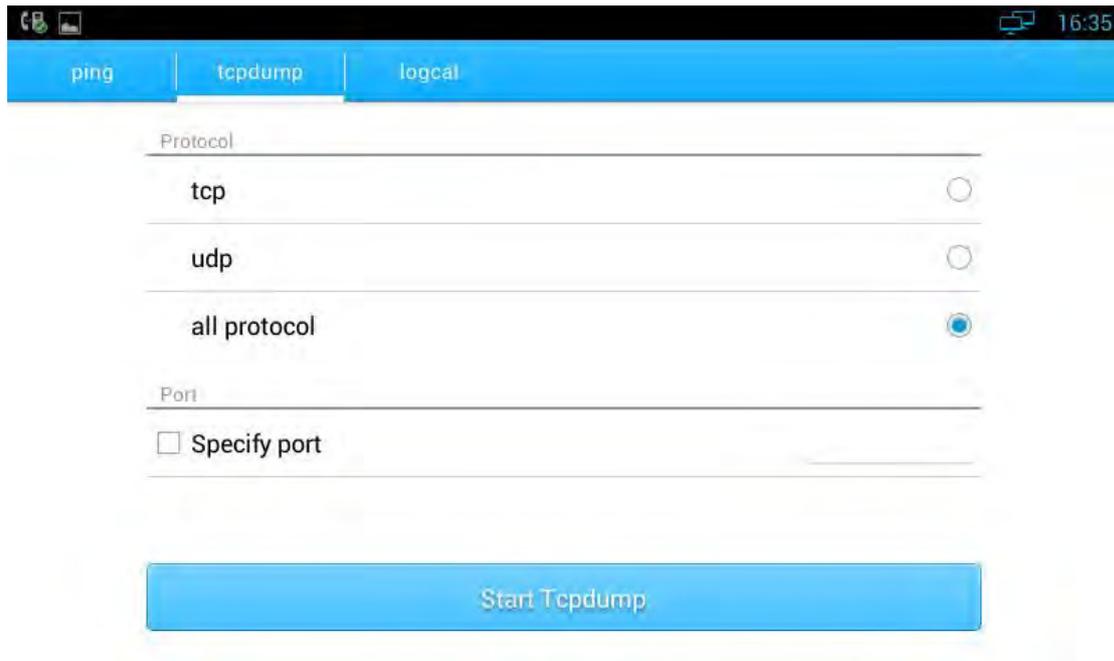

You can choose what type protocol and specified port you need to capture the logs. Press “Start Tcpcap” to start the log captured.

If you want to finish the log captured, you can press “Stop Tcpcap” to stop the capture, and the system will prompt the file saved path. You can use Wireshark and other tools on PC to read the logs.

5.21.2.3 Logcat


Logcat interface is as shown:

```

E/org.starnet.vsip.service.impl.VsipSipService( 6380): 2 REGISTRATION_NOK
E/com.sn.xoa.service.NativeService( 6380): =====callbackReg is ID=2 , SipCode=403 , Phrase=null ,
Type=REGISTRATION_NOK
I/System.out( 6380): refreshAccountDisplay()=====1
I/System.out( 6380): refreshAccountDisplay()=====2
E/com.sn.xoa.contact.ContactManager( 6380): the key already set
D/screenshot(28538): handleMessageDelayTime=3
D/R47 ( 1185): libcontroller pid1185,tid1663,I7: (Control.cpp-OnMessage-396): Msg<0x800001> is
OnMessage, wParam = 0, lParam = 1, nDataLen = 79
D/R47 ( 1185): libcontroller pid1185,tid1663,I6: (BalanceData.cpp-GetBalanceByUrl-117): Create UriThread
Thread success
D/R47 ( 1185): libcontroller pid1185,tid31394,I6: (BalanceData.cpp-GetBalanceByUrlThread-136):
GetBalanceByUrl thread start, tid = 31394
D/R47 ( 1185): libcontroller pid1185,tid31394,I7: (BalanceData.cpp-GetBalanceByUrlThread-164): Url is http:/
/116.122.37.85/VSServices/Export.ashx?f=GetClientBalance&pin=07074168427
D/R47 ( 1185): libcontroller pid1185,tid31394,I7: =====pj_http_req_create finish.=====
D/R47 ( 1185): libcontroller pid1185,tid31394,I7: =====pj_http_req_start finish.=====
D/dalvikvm( 7544): GC_CONCURRENT freed 2029K, 24% free 6909K/8996K, paused 4ms+9ms, total 42ms
D/screenshot(28538): handleMessageDelayTime=2

```

You can use  to search the log information, and select the log level through the drop-down list.

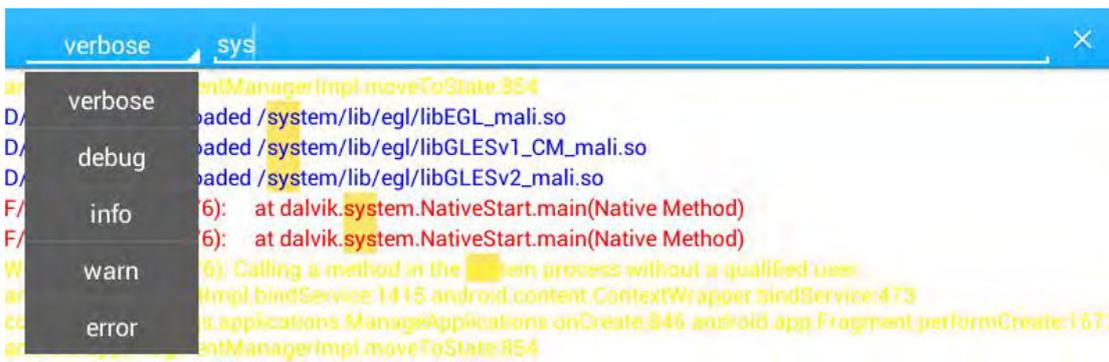

Or click  to see more options.

if you need to save the log, please click , select "Save"

If you need to highlight the log information, please click , select "highlight", and then the log will be showed as different color.

6 Software Upgrade

6.1 Immediate Update

Choose one way below to enter the system upgrade interface:

- In the main screen, press “Menu” on board -> System Settings -> System -> About Multimedia Terminal -> System Upgrade -> System Update Now
- In the main screen, tap on settings icon  -> System -> Multimedia Terminal -> System Upgrade -> System Update Now

Update interface as shown:


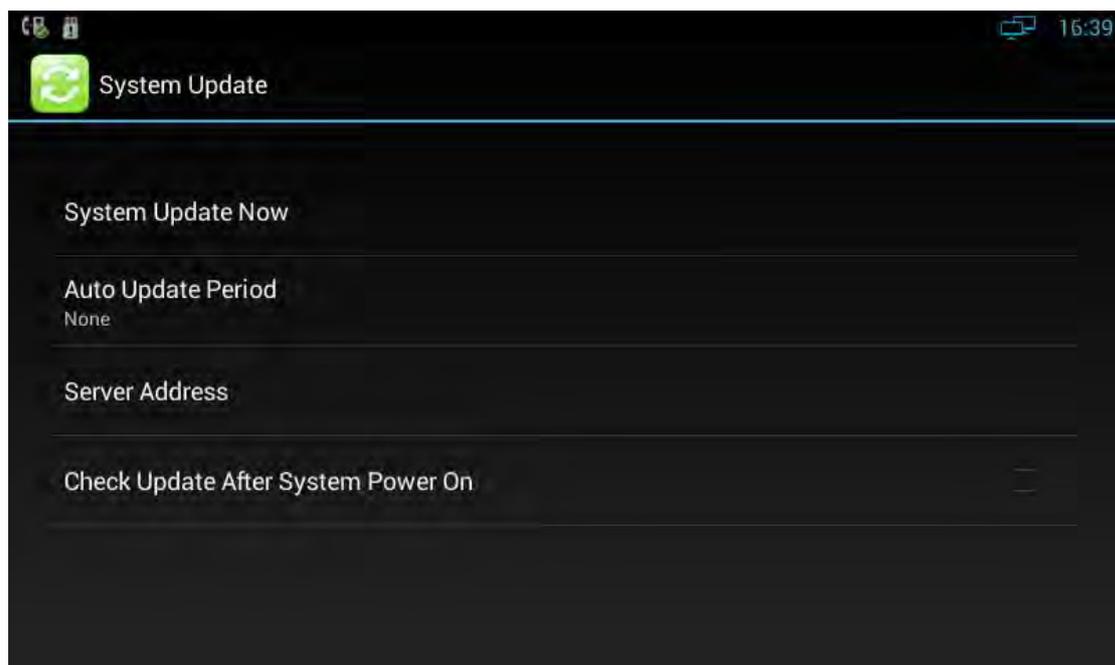


Figure 5-1

Three ways to update immediately: Select other upgrade package, Local Update, Remote Upgrade, as shown:

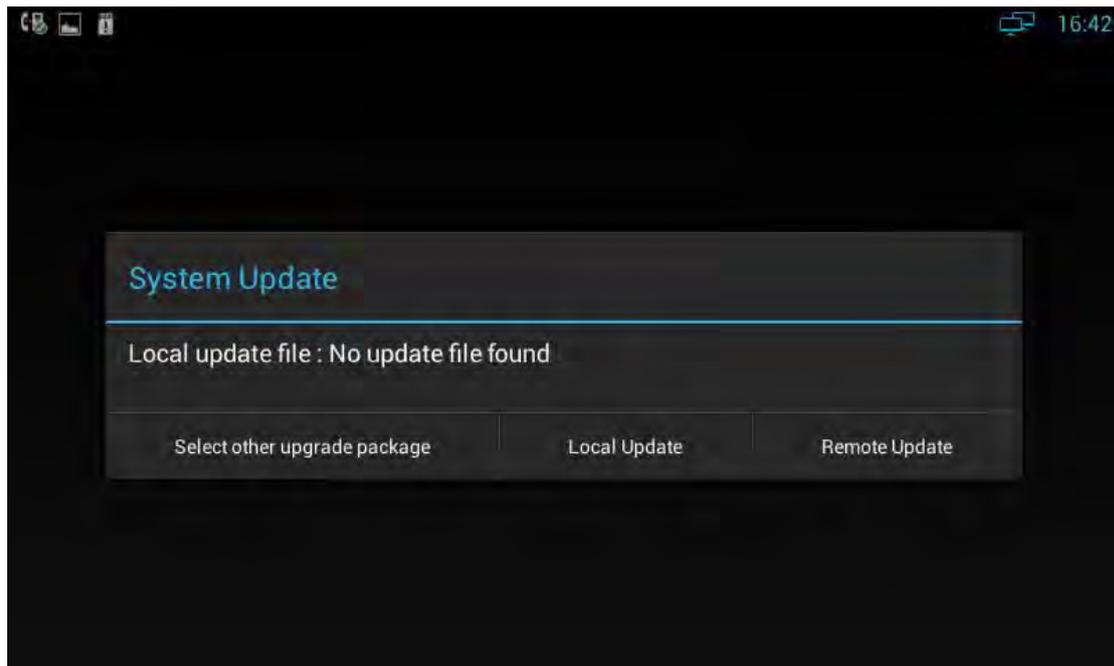

6.1.1 Select Other Upgrade Package

1) Via USB to Upgrade

Put upgrade package into USB, insert USB, then click “Select other upgrade package”, find “/mut/usb_storage”, find the upgrade package, then click “OK” to upgrade.


2) Via Internal Memory to Upgrade

Use USB to copy the upgrade package into Internal Memory, then press “Select other upgrade package”, find “/mnt/sdcard”, find upgrade document, then click “OK” to upgrade.

6.1.2 Local Update

1) Via USB to Upgrade

Change the name of upgrade package into upgrade.zip, then copy it into USB, insert USB, enter the upgrade interface, you will find the path of upgrade package, because video phone has searched it automatically, click “Local Update” to start upgrading, as shown:

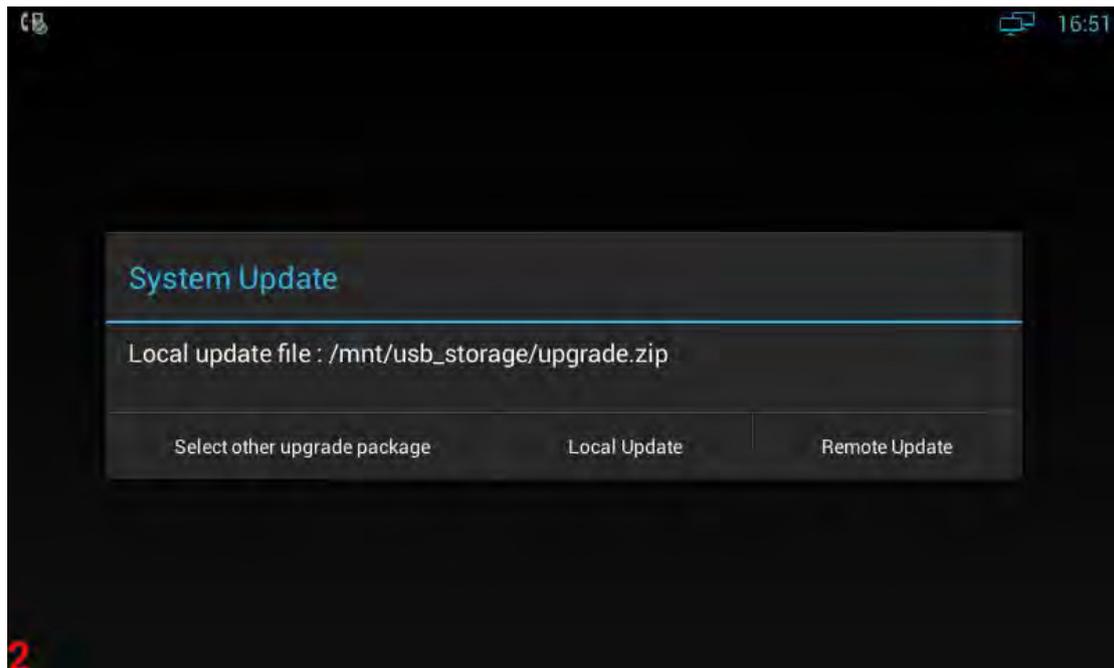


2) Via built-in SD Card to upgrade


First, change the name of upgrade package into upgrade.zip, then copy it into USB, and then use USB to copy the upgrade package into Internal Memory, enter the upgrade interface, you will find the path of upgrade package: /mnt/sdcard/upgrade.zip, because video phone has searched it automatically, press "Local Update" to start upgrading.

6.1.3 Remote Update

1) Enter the interface in figure 5-1, click "Server Address", and input the server address that contains upgrade package. As shown:

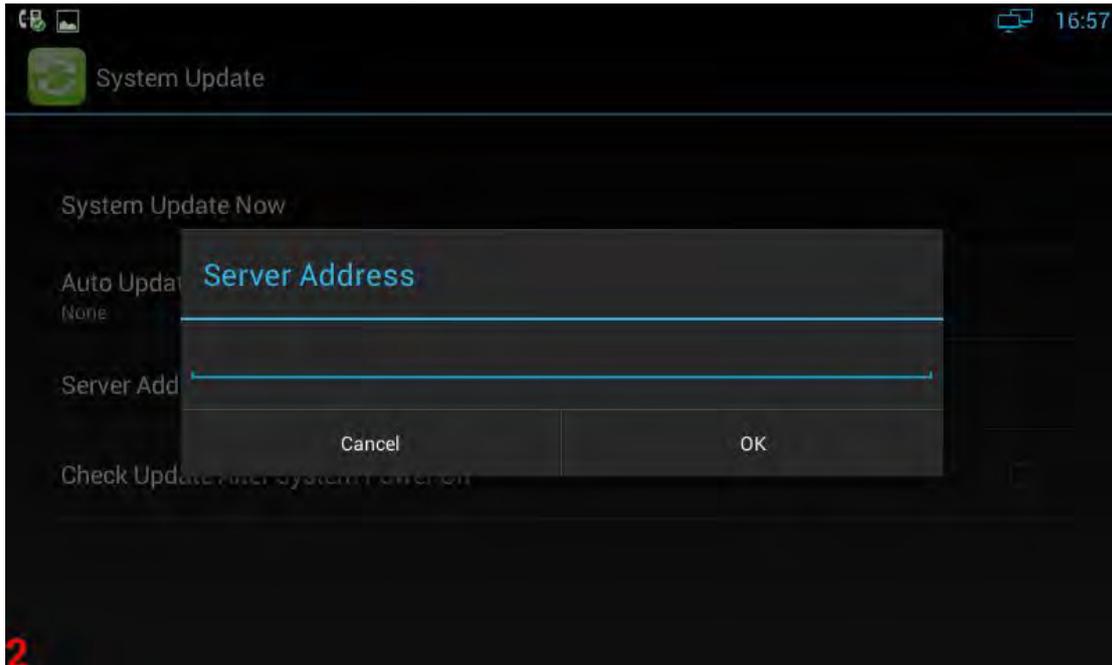

- 2) Click "Remote Upgrade", video phone will check the new version automatically. If exist a new version, it will prompt. Press "OK" to download upgrade document.
- 3) After finish downloading, it prompts "Download update image success! You need to restart system for update! ", press reboot now, and then system will upgrade automatically. As shown:

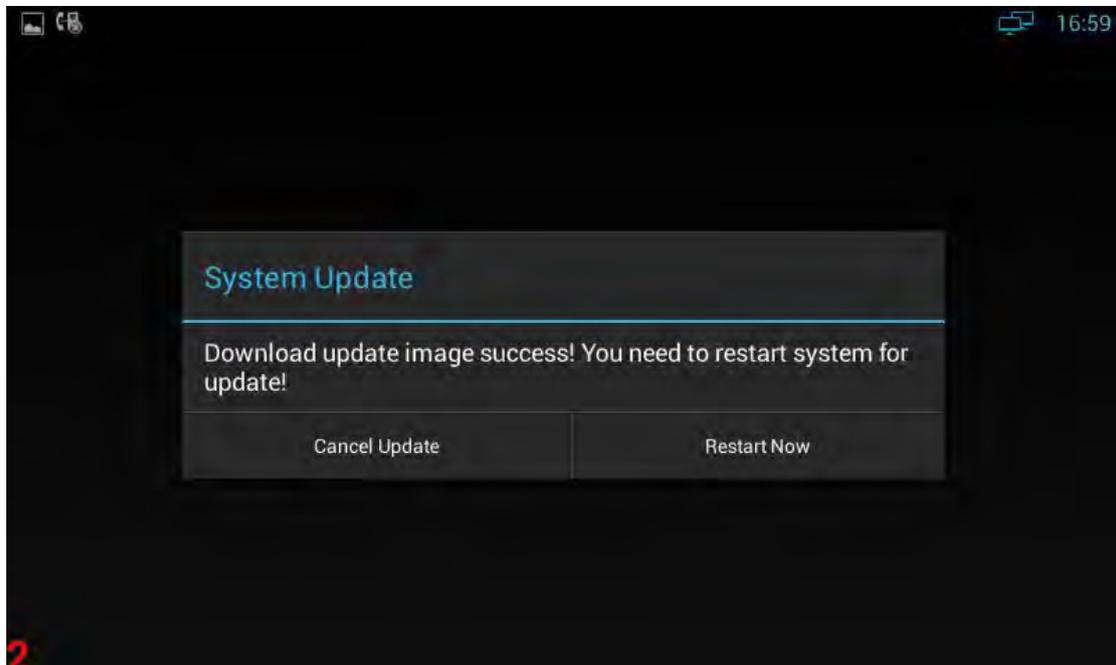


6.2 Auto Update Period

Auto Update Period includes four modes: None, One Day, One Week, and One Month.


The terminal will detect the new version automatically in time, if there is, the status bar will show “There is a new version, please update!”. Click and download the image for upgrade.

As shown:

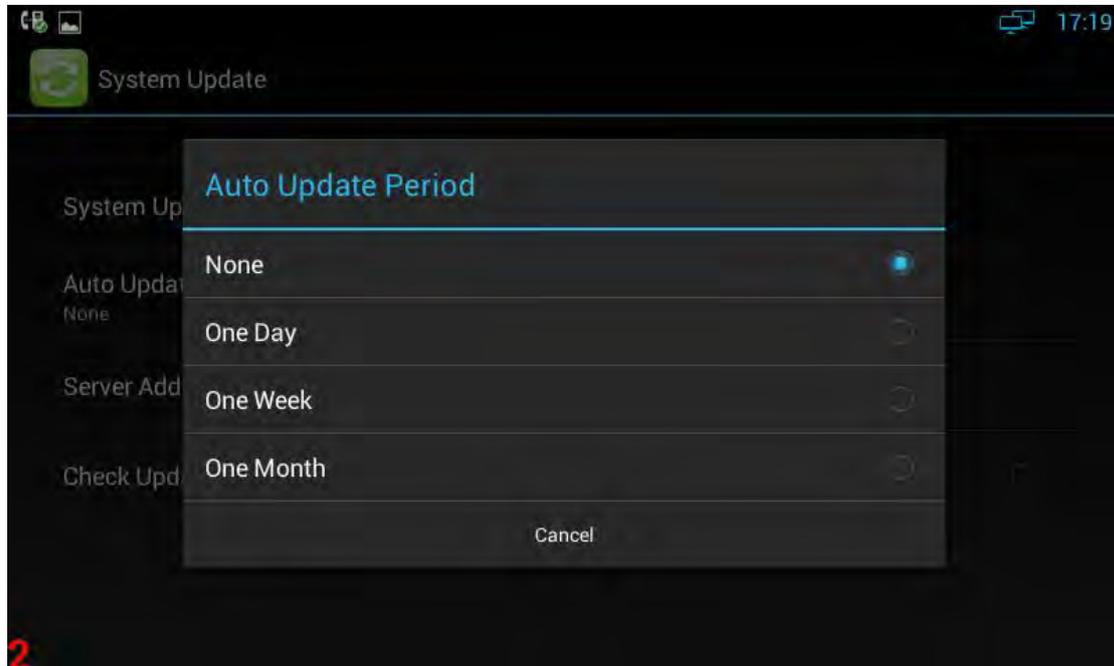

6.3 Upgrade on the web


1. Click Upgrade->Basic
2. Choose the software you want to update from the computer.
3. Click .

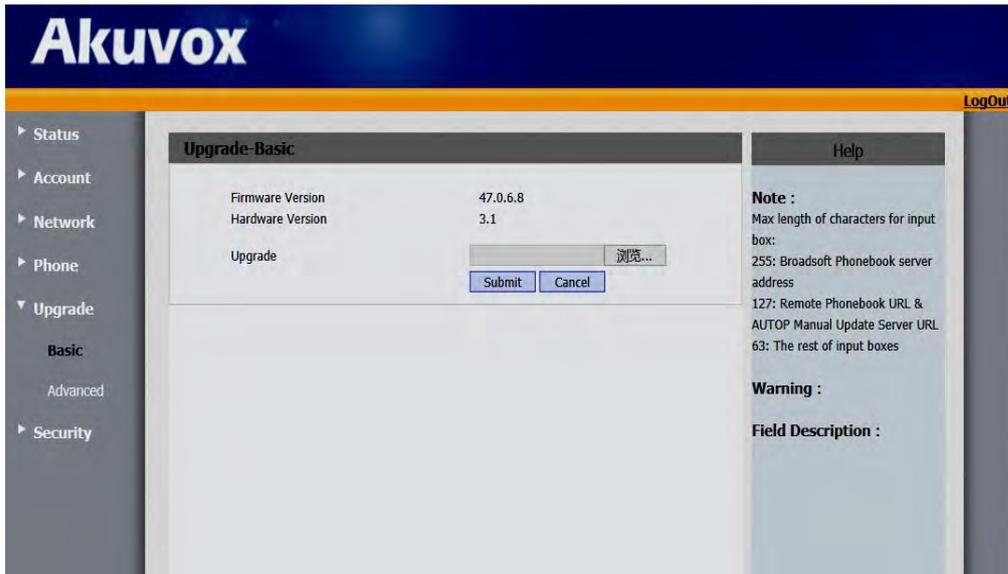

6.4 Check Update After System Power On

Click “Check Update After System Power On” in figure 5-1. Every time you power on, the system will check the new version automatically. If there is a new one, the status bar will notice: “System has new version, please update now!”, click and download the image for upgrade.

As shown:

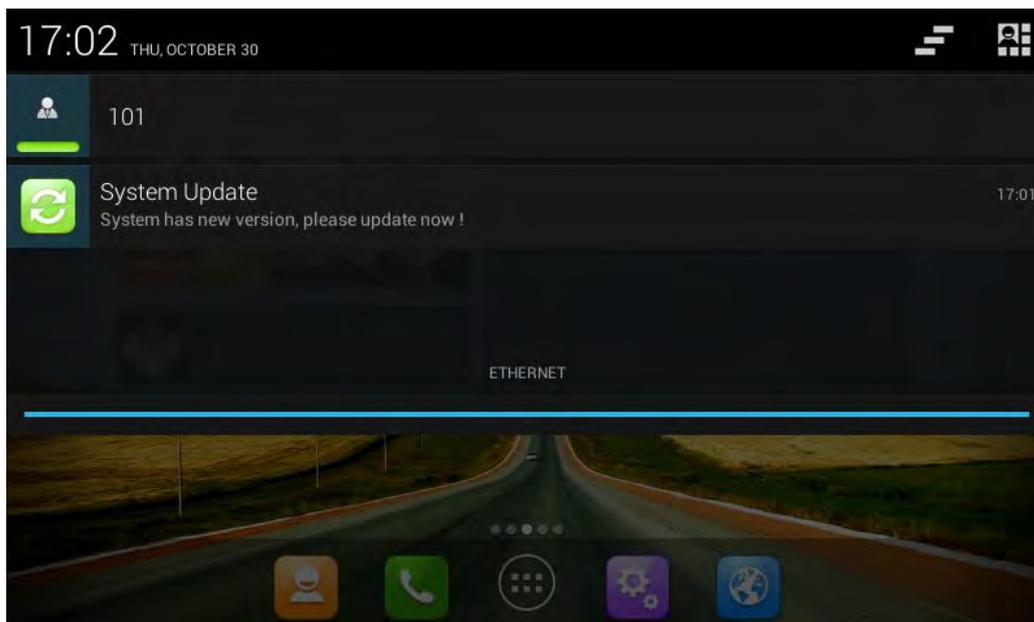

7 System Maintenance

7.1 System State Inspection

Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> About Multimedia Terminal

Mode 2: In the main screen, click  ->  -> About Multimedia Terminal
It will display phone status, software version and hardware version in this item.

7.2 IP Query

Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Ethernet

Mode 2: In the main screen, click  ->  -> Ethernet


Mode 3: Press Speaker button or pick up to enter the dialing interface, click  on upper right corner -> enter the setting interface, check Status Info;

Mode 4: Slide down the top-left , click the account, enter the setting interface, check Status Info;

Mode 1 and Mode 2 can check IP address, subnet mask, gateway, DNS server etc. in Ethernet:



Mode 3 and Mode 4 can check the corresponding network information in setting interface.

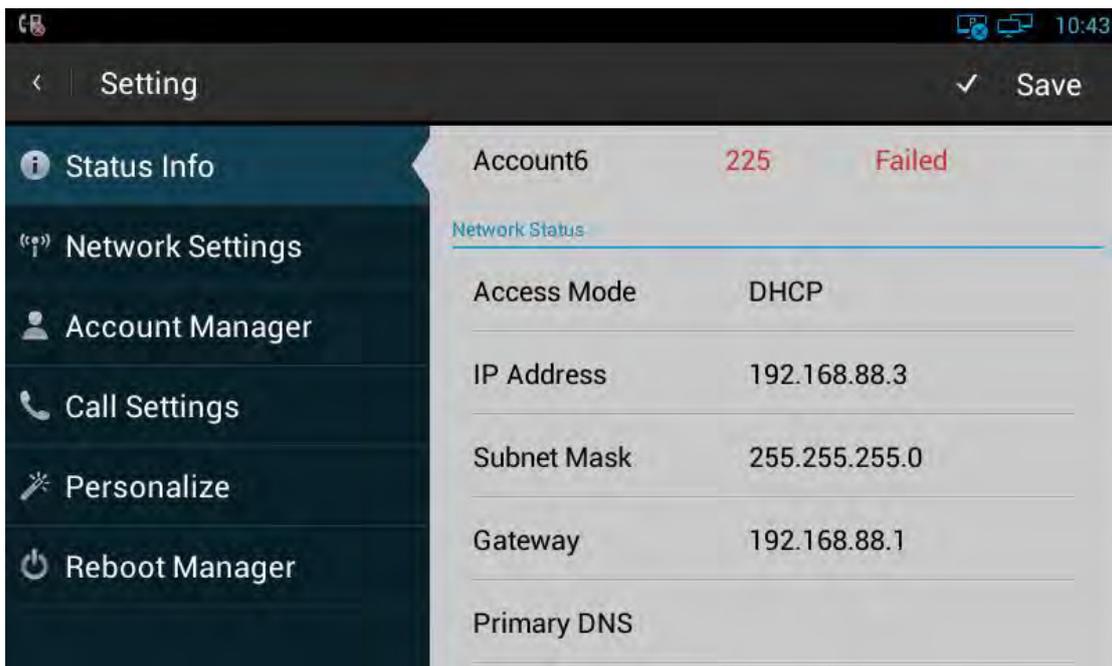

7.3 SIP Account Registration Query

You can choose one of the following methods to enter the SIP account registration query: If the account is successfully registered, the icon will be light up in notification area of phone.

Mode 1: Press Speaker button or pick up to enter the dialing interface, click  on upper right corner, check Account Manager.


Mode 2: Slide down the top-left , click the account, enter the setup interface, check Account Manager.

7.4 Backup & Reset

Mode 1: In the main screen, press "Menu" key on the hard keyboard-> System Settings-> Backup & reset

Mode 2: In the main screen, click  ->  -> Backup & reset

Click "Factory data reset", click "Reset Multimedia Terminal", then the phone will restore to factory settings.

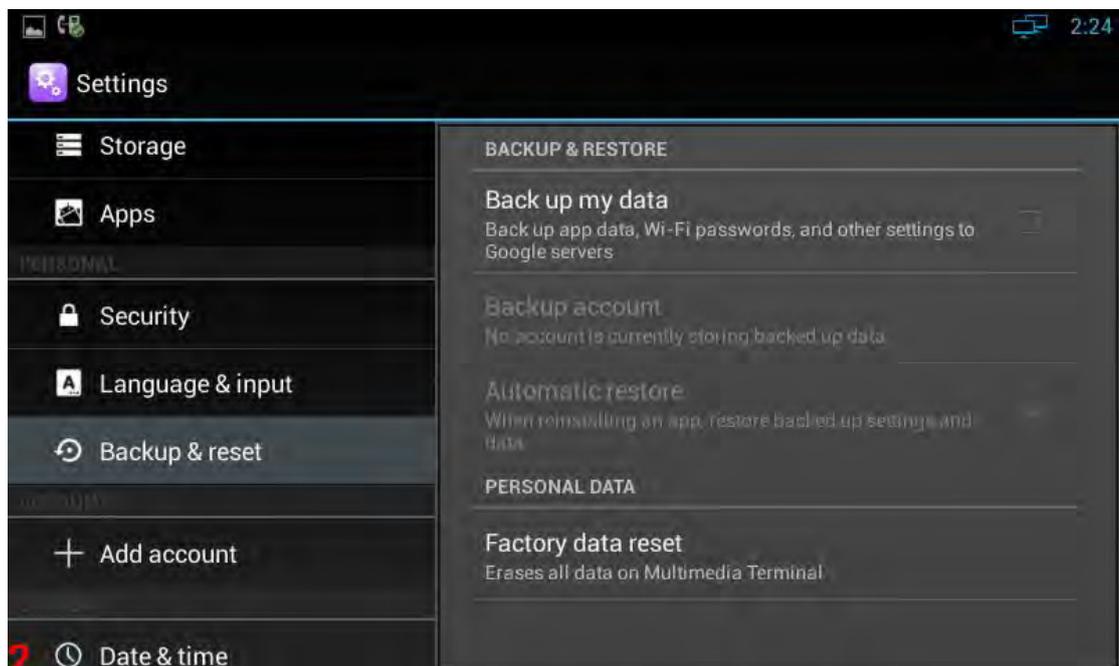

7.5 Failure Process

Failure 1: Power LED is off

- Please check whether the adapter fits this product requirement;
- Please check whether the outlet is working properly.

Failure 2: No voice when pick up the handle

- Please check whether the connection of handset and base is working properly;
- Please adjust the volume + key on keyboard when off-hook the phone, Observe the display of “volume” prompt. Please pay attention that the volume key in on-hook and off-hook situation is to adjust the ring volume and media volume (call volume) separately. These two adjustments are unrelated. Adjust the volume won't change call volume when on-hook the phone.

Failure 3: Phone can't dial properly

- Please check whether there is  at the top-right of screen. If not, please check whether the cable in LAN port is loose;
- Please check the IP address of phone via configuration (go to 5.2, “network configuration”);
- If it's now in LAN, please check whether the IP address of phone is conflict with other IP address in LAN.
- If the network connection is properly, please check whether the icon  of successful registration is in the notification area. If there is no explanation of configuration failure, please contact network administrator to recover it.


Failure 4: No ringing when incoming a call


- Please make sure the handle is completely hung on the base
- Please adjust the volume + key on keyboard when on-hook the phone, Observe the display of “volume” prompt. Please pay attention that the volume key in on-hook and off-hook situation is to adjust the ring volume and media volume

(call volume) separately. These two adjustments are unrelated. Adjust the volume won't change ring volume when off-hook the phone.

8 Web Interface


8.1 Web login

1. Open the browser on your computer.
2. Input the IP address in the address bar.
3. Enter the user name and password (user name: admin, password: admin), then click .

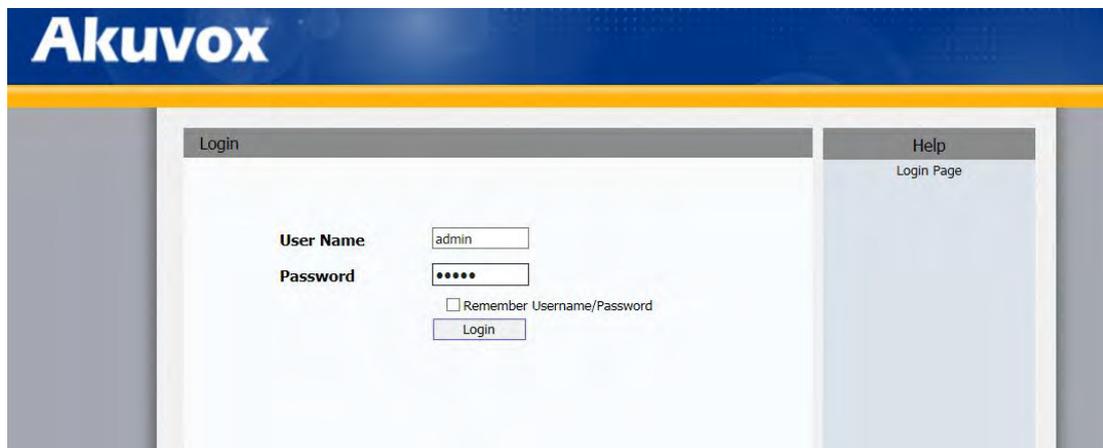

8.2 Status->Basic

Click Status->Basic to check the phone information.

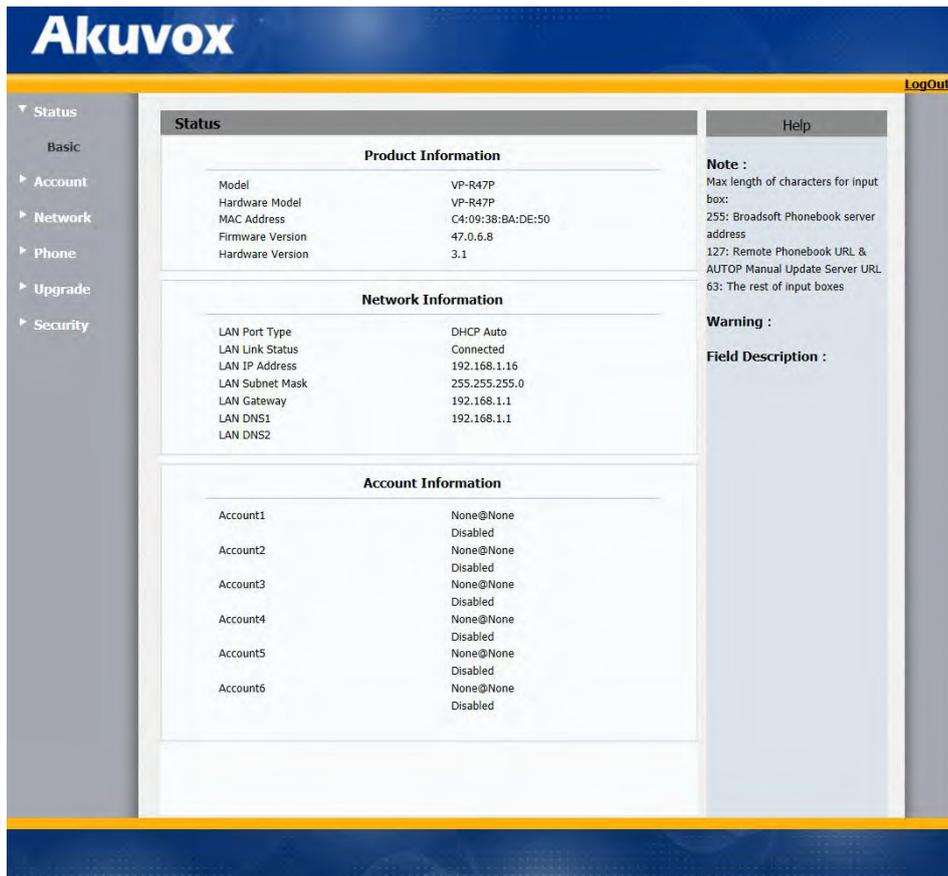

Sections	Description
Product Information	To display the device's information such as Model name, MAC address (IP device's physical address), Hardware Model, Firmware version and Hardware firmware.
Network Information	To display the device's Networking status(LAN Port),such as Port Type(which could be DHCP/Static/PPPoE), Link Status, IP Address, Subnet Mask, Gateway, Primary DNS server, Secondary DNS server.
Account Information	To display device's Account information and Registration status (account username, registered server's address, Register result).

8.3 Account->Basic

- 1.Click Account->Basic.
- 2.Select the desired account(from account 1 to account 6),then enable the Account Active.
- 3.Filled the registration parameters you need.
- 4.Click .

- ▶ Status
- ▼ Account
 - Basic
 - Advanced
- ▶ Network
- ▶ Phone
- ▶ Upgrade
- ▶ Security

Account-Basic

Help

SIP Account

Status	Disabled
Account	Account 1
Account Active	Enabled
Display Label	222
Display Name	222
Register Name	222
User Name	222
Password	***

SIP Server 1

Server IP	192.168.35.48	Port	5060
Registration Period	1800	(30~65535s)	

SIP Server 2

Server IP		Port	5060
Registration Period	1800	(30~65535s)	

Outbound Proxy Server

Enable Outbound	Disabled		
Server IP		Port	5060
Backup Server IP		Port	5060

Transport Type

Transport Type	UDP
----------------	-----

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :

Field Description :

Submit Shortcut

Sections	Description
SIP Account	<p>To display and configure the specific Account settings.</p> <ul style="list-style-type: none"> ● Status: To display register result. ● Display Label: Which is displayed on the phone's LCD screen. ● Display Name: Which is sent to the other call party for displaying. ● Register Name: Allocated by SIP server provider, used for authentication. ● User Name: Allocated by your SIP server provide, used for authentication. ● Password: Used for authorization.
SIP Server 1	<p>To display and configure Primary SIP server settings.</p> <ul style="list-style-type: none"> ● Server IP: SIP server address, it could be an URL or IP address. ● Registration Period: The registration will expire after Registration period, the IP phone will re-register automatically within registration period.
SIP Server 2	<p>To display and configure Secondary SIP server settings. This is for redundancy, if registering to Primary SIP server fails, the IP phone will go to Secondary SIP server for registering.</p> <p>Note: Secondary SIP server is used for redundancy, it can be left blank if there is not redundancy SIP server in user's environment.</p>
Outbound Proxy Server	<p>To display and configure Outbound Proxy server settings. An outbound proxy server is used to receive all initiating request messages and route them to the designated SIP server.</p> <p>Note: If configured, all SIP request messages from the IP phone will be sent to the outbound proxy server forcefully.</p>
Transport Type	<p>To display and configure Transport type for SIP message</p> <ul style="list-style-type: none"> ● UDP: UDP is an unreliable but very efficient transport layer protocol. ● TCP: Reliable but less-efficient transport layer protocol.

8.4 Account->Advanced

1. Click Account->Advanced.
2. Filled the corresponding parameters you need.

- ▶ Status
- ▼ Account
 - Basic
 - Advanced**
- ▶ Network
- ▶ Phone
- ▶ Upgrade
- ▶ Security

Account-Advanced

SIP Account

Account

Codecs

Disabled Codecs	Enabled Codecs
	PCMU PCMA G729 G722
<input type="button" value=" >>"/> <input type="button" value=" <<"/>	<input type="button" value=" ↑"/> <input type="button" value=" ↓"/>

Subscribe

MWI Subscribe	<input type="text" value="Disabled"/>
MWI Subscribe Period	<input type="text" value="1800"/> (120~65535s)
Voice Mail Number	<input type="text"/>
BLF Expire	<input type="text" value="1800"/> (120~65535s)
ACD Expire	<input type="text" value="1800"/> (120~65535s)

DTMF

Type	<input type="text" value="RFC2833"/>
How To Notify DTMF	<input type="text" value="Disabled"/>
DTMF Payload	<input type="text" value="101"/> (96~127)

Call

Max Local SIP Port	<input type="text" value="5062"/> (1024~65535)
Min Local SIP Port	<input type="text" value="5062"/> (1024~65535)
Caller ID Header	<input type="text" value="FROM"/>
Auto Answer	<input type="text" value="Disabled"/>
Provisional Response ACK	<input type="text" value="Disabled"/>
Register with user=phone	<input type="text" value="Disabled"/>
Invite with user=phone	<input type="text" value="Disabled"/>
Anonymous Call	<input type="text" value="Disabled"/>
Anonymous Call Rejection	<input type="text" value="Disabled"/>
Missed Call Log	<input type="text" value="Enabled"/>
Prevent SIP Hacking	<input type="text" value="Disabled"/>

Session Timer

Active	<input type="text" value="Disabled"/>
Session Expire	<input type="text" value="1800"/> (90~7200s)
Session Refresher	<input type="text" value="UAC"/>

BLFList

BLFList URI	<input type="text"/>
BLFList Pickup Code	<input type="text"/>
BLFList Bargain Code	<input type="text"/>

NAT

UDP Keep Alive Messages	<input type="text" value="Enabled"/>
UDP Alive Msg Interval	<input type="text" value="30"/> (5~60s)
RPort	<input type="text" value="Disabled"/>

User Agent

User Agent	<input type="text"/>
------------	----------------------

Help

Note :
 Max length of characters for input box:
 255: Broadsoft Phonebook server address
 127: Remote Phonebook URL & AUTOP Manual Update Server URL
 63: The rest of input boxes

Warning :

Field Description :

Submit Shortcut

Sections	Description
SIP Account	To display current Account settings or to select which account to display.
Codecs	To display and configure available/unavailable codecs list. Codec means coder-decoder which is used to transfer analog signal to digital signal or vice versa. Familiar codecs are PCMU(G711U), PCMA(G711A), G722 (wid-bandth codecs),G729 and so on.
DTMF	To display and configure DTMF settings. <ul style="list-style-type: none"> ● Type: Support Inband,Info,RFC2833 or their combination. ● How To Notify DTMF: Only available when DTMF Type is Info/Info+Inband/Info+RFC2833. ● DTMF Payload: To configure payload type for DTMF. Note: By default, DTMF type is RFC2833 which is the standard. Type Inband uses inband frequency to indicate DTMF tone which is most used to be compatible to traditional telephone server. Type Info use SIP Info message to indicate DTMF message.
Call	To display and configure call-related features. <ul style="list-style-type: none"> ● Max Local SIP Port: To configure maximum local sip port for designated account. ● Min Local SIP Port: To configure minimum local sip port for designated account. ● Caller ID Header: To configure which Caller ID format to fetch for displaying on Phone UI. ● Auto Answer: If enabled, IP phone will be auto-answered when there is an incoming call for designated account. ● Provisional Response ACK: 100% reliability for all provisional message, this means it will send ACK every time the IP phone receive a provisional SIP message from SIP server. ● User=phone: If enabled, IP phone will send user=phone within SIP message. ● Anonymous Call: If enabled, all outgoing call for the designated account will ben anonymous number. ● Anonymouse Call Rejection: If enabled, all incoming anonym-out call for the designated account will be rejected. ● Missed Call Log: To display the miss call log. ● Prevent SIP Hacking: Enable to prevent SIP from hacking.
Session Timer	To display or configure session timer settings. <ul style="list-style-type: none"> ● Active: To enable or disable this feature, If enable, the

	<p>ongoing call will be disconnected automatically once the session expired unless it's been refreshed by UAC or UAS.</p> <ul style="list-style-type: none"> ● Session Expire: Configure session expire time. ● Session Refresher: To configure who should be response for refreshing a session. <p>Note: UAC means User Agent Client, here stands for IP phone. UAS means User Agent Server, here stands for SIP server.</p>
User Agent	<p>One can customize User Angent field in the SIP message; If user agent is set to specific value, user could see the information from PCAP. If user agent is not set by default, user could see the company name, model number and firmware version from PCAP</p>

8.5 Network ->Advanced

1. Click Network->Advanced
2. Filled the corresponding parameters you need.

Sections	Description
Local RTP	<p>To display and configure Local RTP settings.</p> <ul style="list-style-type: none"> ● Max RTP Port: Determine the maximum port that RTP

	<p>stream can use.</p> <ul style="list-style-type: none"> ● Min RTP Port: Determine the minimum port that RTP stream can use.
--	--

8.6 Phone ->Call Feature

1. Click Phone->Call Feature
2. Filled the corresponding parameters you need.

Akuvox Logout

► Status
► Account
► Network
► Phone
 Call Feature
 Ext Key
 Dial Plan
► Upgrade
► Security

Phone-Call Feature

Mode: Phone Custom

Forward Transfer

Account: All Account
Always Forward: Disabled
Target Number:
On Code:
Off Code:
Busy Forward: Disabled
Target Number:
On Code:
Off Code:
No Answer Forward: Disabled
No Answer Ring Time: 30
Target Number:
On Code:
Off Code:

DND

Account: All Account
DND: Disabled
Return Code When DND: 486(Busy Here)
DND On Code:
DND Off Code:

Call Waiting

Call Waiting Enable: Enabled
Call Waiting Tone: Enabled
On Code:
Off Code:

Intercom

Active: Enabled
Intercom Mute: Disabled

Others

Return Code When Refuse: 486(Busy Here)
Auto Answer Delay: 0 (0~5s)
Direct IP: Enabled

Submit Cancel

Help

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :

Field Description :

Submit Shortcut
Submit Cancel

Sections	Description
Forward Transfer	<p>To display and configure Forward setting.</p> <p>Note: There are three types of forward: Always Forward, Busy Forward and No answer Forward.</p> <ul style="list-style-type: none"> ● Always Forward: Any incoming call will be forwarded in any situation. ● Busy Forward: An incoming call will be forwarded if IP phone is busy. ● No answer Forward: An incoming call will be forwarded if it's no answer after a specific time.
Call Waiting	<p>To enable or disable Call Waiting.</p> <ul style="list-style-type: none"> ● Call Waiting Enable: If enabled, it allows IP phones to receive a new incoming call when there is already an active call. ● Call Waiting Tone: If enabled, it allows IP phones to play the call waiting tone to the waiting callee.
DND	<ul style="list-style-type: none"> ● DND(Do Not Disturb) allows IP phones to ignore any incoming calls. ● Return Code when DND: Determine what response code should be sent back to server when there is an incoming call if DND on. ● DND On Code: The Code used to turn on DND on server's side, if configured, IP phone will send a SIP message to server to turn on DND on server side if you press DND when DND is off. ● DND Off Code: The Code used to turn off DND on server's side, if configured, IP phone will send a SIP message to server to turn off DND on server side if you press DND when DND is on.
Intercom	<p>Intercom allow user to establish a call directly with the callee.</p> <ul style="list-style-type: none"> ● Active: To enable or disable Intercom feature. ● Intercom Mute: If enabled, once the call established, the callee will be muted.
Others	<ul style="list-style-type: none"> ● Return Code When Refuse: Allows user to assign specific code as return code to SIP server when an incoming call is rejected. ● Auto Answer Delay: To configure delay time before an incoming call is automatically answered.

8.7 Phone-> Ext Key

1. Click Phone-> Ext Key
2. Select the Type, Account, input the Label, Value.
3. Click

The screenshot shows the Akuvox web interface. The main content area is titled "Ext Key" and contains a table for configuring 20 keys. The table has columns for Key, Type, Label, Value, Account, and Extension. Key 1 is configured with Type "BLF" and Value "102". All other keys have Type "N/A". The Account column is set to "Account 1" for all keys. The Extension column is empty for all keys. Below the table are "Submit" and "Cancel" buttons.

The sidebar menu on the left includes: Status, Account, Network, Phone (with sub-items: Call Feature, Ext Key, Dial Plan), Upgrade, and Security. The "Ext Key" item is highlighted.

The help section on the right contains the following text:

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes


Warning :

Field Description :

Submit Shortcut

8.8 Phone->Dial Plan

Click Phone-> Dial Plan

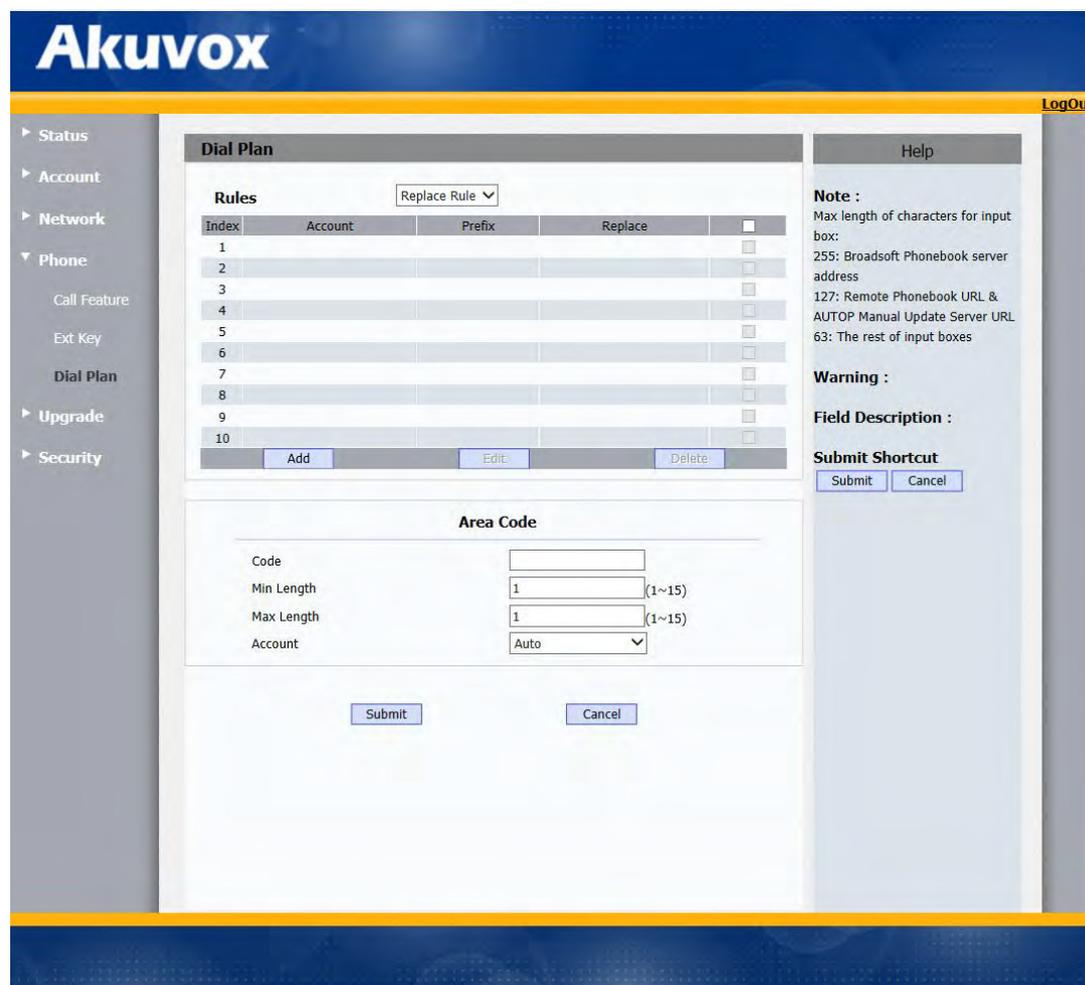


Sections	Description
Rules	Allow user to select Replace rule or Dial-now to display or edit.
Dial Now Delay	Allow user configure dial now delay time for dial now. It means user can configure the IP phone to dial out the phone number automatically after the designated delay time if it match any dial now rule.
Rules Modify	Allow user to modify selected rules information, for dial-now rule, user can modify related accounts, Dial now Rule itself.
Area Code	Area codes are also known as NPAs(Numbering Plan Areas). They usually indicate different geographical areas within one country. If entered numbers match the predefined area code rule, the IP phone will automatically prefix outgoing number with area code.

Note: There is only one area code rule supported.

8.9 Upgrade->Basic

1. Click Upgrade->Basic
2. Choose the software you want to update from the computer.
3. Click

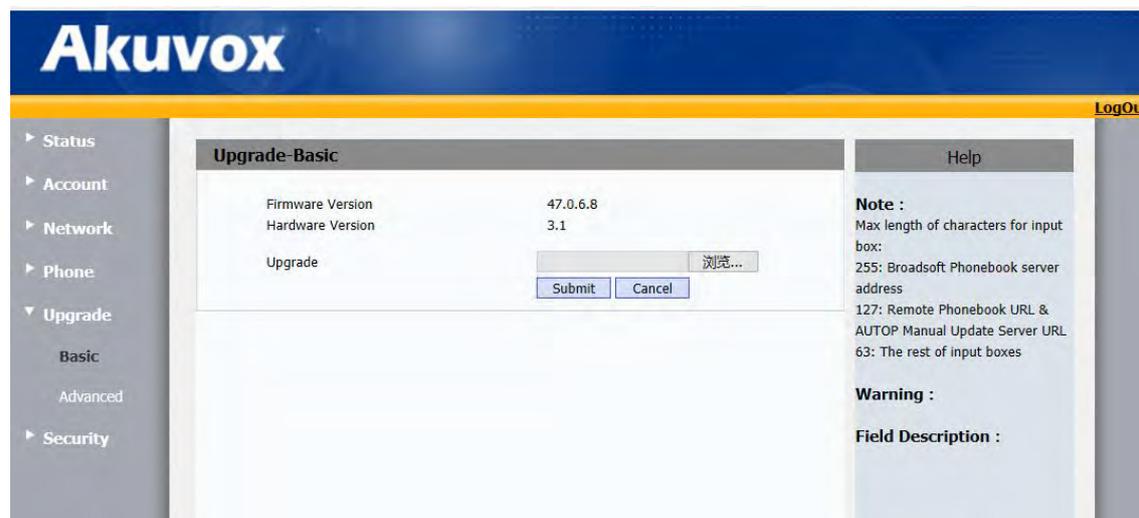

Sections	Description
Firmware version	To display firmware version, firmware version starts with MODEL name.
Hardware Version	To display Hardware version.
Upgrade	To select upgrading rom file from local or a remote server automatically. Note: Please make sure it's right file format for right model.

8.10 Upgrade->Advanced

1. Click Upgrade->Advanced
2. Filled the corresponding parameters you need.

Akuvox LogOut

Upgrade-Advanced

PNP Option

PNP Config:

Manual Update Server

URL:

User Name:

Password:

Common AES Key:

AES Key(MAC):

AutoP

Mode:

Schedule: Hour(0~23)

AutoP Immediately:

Clear MD5:

Export Autop Template:

System Log

LogLevel:

Help

Note :
Max length of characters for input box:
255: Broadsoft Phonebook server address
127: Remote Phonebook URL & AUTOP Manual Update Server URL
63: The rest of input boxes

Warning :

Field Description :

Submit Shortcut


Sections	Description
PNP Option	To display and configure PNP setting for Auto Provisioning. <ul style="list-style-type: none"> ● PNP: Plug and Play, once PNP is enabled, the phone will send SIP subscription message to PNP server automatically to get Auto Provisioning server's address. By default, this SIP message is sent to multicast address 224.0.1.75(PNP server address by standard).
Manual Update Server	To display and configure manual update server's settings. <ul style="list-style-type: none"> ● URL: Auto provisioning server address. ● User name: Configure if server needs a username to access, otherwise left blank. ● Password: Configure if server needs a password to access, otherwise left blank.

	<ul style="list-style-type: none"> ● Common AES Key: Used for IP phone to decipher common Auto Provisioning configuration file. ● AES Key (MAC): Used for IP phone to decipher MAC-oriented auto provisioning configuration file(for example, file name could be 0c1105888888.conf if IP phone's MAC address is 0c1105888888). <p>Note: AES is one of many encryption, it should be configure only configure filed is ciphered with AES, otherwise left blank.</p>
AutoP	<p>To display and configure Auto Provisioning mode settings. This Auto Provisioning mode is actually self-explanatory. For example, mode "Power on" means IP phone will go to do Provisioning every time it powers on.</p>
System Log	<p>To display syslog level and export syslog file. Syslog level: From level 0~7.The higher level means the more specific syslog is saved to a temporary file. By default, it's level 3. Export Log: Click to export temporary syslog file to local PC.</p>

8.11 Security->Basic

- 1.Choose the user name (admin or user).
- 2.Enter the current password.
- 3.Enter the new password.
- 4.Confirm the new password.

Note: Security is configurable via web only.

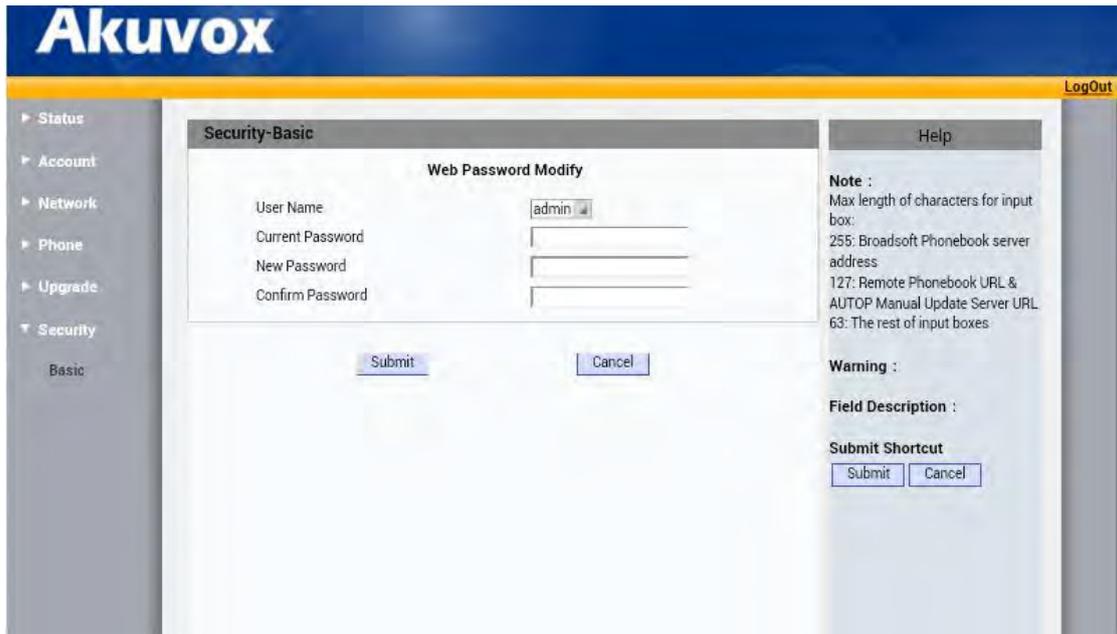

Sections	Description
Web Password Modify	To modify user's password. <ul style="list-style-type: none"> ● User Name: Choose the character you are.(admin or user) ● Current Password: The current password you used. ● New Password: Input new password you intend to use. ● Confirm Password: Repeat the new password.