


Alcatel-Lucent Enterprise
OmniAccess Stellar OAW-AP1301H
Series
Installation Guide

060535-10 Rev. A

060535-10 Rev. A



enterprise.alcatel-lucent.com
Alcatel-Lucent and the Alcatel-Lucent Enterprise logo are trademarks of Alcatel-Lucent. To view other trademarks used by affiliated companies of ALE holding, visit: enterprise.alcatel-lucent.com/trademarks. All other trademarks are the property of their respective owners. The information presented is subject to ALE without notice. Neither ALE Holding nor any of its affiliates assumes any responsibility for inaccuracies contained herein. (2021)

Introduction


The Multi-functional Alcatel-Lucent OmniAccess® Stellar OAW-AP1301H access point is a highly versatile, and performance rich access point providing operational simplicity and a quality user experience. The OmniAccess Stellar OAW-AP1301H indoor WiFi access point provides high-performance Gigabit WiFi for in-room applications such as hotels, classrooms, dormitories, clinics, remote/home office and more.

The AP1301H offers Gigabit ethernet uplink, 3x Gigabit downlink one of which supports 802.3af PSE to power the attached device, one pair of RJ-45 pass through ports, and a USB 2.0 port.

The AP1301H ships with a mounting plate to attach the AP to a single-gang wall-box (most international variations covered). A desk mount kit can be ordered separately.

Package Contents

Figure 1

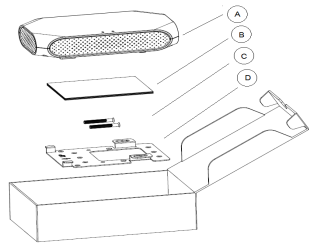


- A. OAW-AP1301H Access Point
- B. Documents:
- 1) Installation Guide (this document)
 - 2) Quick Start Guide
 - 3) User Guide Info Card
 - 4) Regulatory Compliance and Safety Information
- C. (2x) #6-32 slotted screws
- D. Single-gang wall-box mounting plate

Inform your supplier if there are any incorrect, missing, or damaged parts. If possible, retain the carton, including the original packing materials. Use these materials to repack and return the unit to the supplier if needed.

Hardware Overview

The following sections outline the hardware components of the OAW-AP1301H access point.

Figure 2 OAW-AP1301H Front View

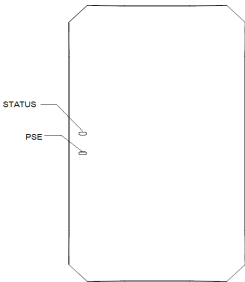

LED


The LED displays located on the front of the access point indicate the following functions:

STATUS: System status (Tri-color LED)

PSE: PoE-PSE status

For the details of the LED status, please refer to the Quick Start Guide.

Figure 3 OAW-AP1301H Rear View

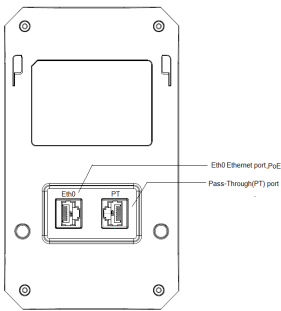

Ethernet Ports

The OAW-AP1301H access point is equipped with four active Ethernet ports. One is shown in Figure 3 (Eth0) and the others are shown in Figure 4 (Eth1-Eth3/PSE). In addition, the OAW-1301H AP has one pair of RJ-45 passive pass through ports, which provide an electrical connection between the back and the bottom of the access point.

Figure 4 OAW-AP1301H Bottom View




Table 1

| Interface | Description |
|----------------|--|
| Eth0 | 1 × 10/100/1000Base-T auto-sensing uplink connectivity (RJ-45) port. IEEE 802.3af/802.3at PoE compliant. |
| Eth1- -Eth2 | 2 x 10/100/1000Base-T auto-sensing downlink connectivity (RJ-45) ports. |
| ☆Eth3/PSE | 1 × 10/100/1000Base-T auto-sensing downlink connectivity (RJ-45) port. IEEE 802.3af PoE-PSE compliant. |
| PT | One pair passive Pass-Through ports (two RJ-45, back and bottom) |

☆ Note: When the AP1301H is powered by an 802.3at or DC power source, the PoE-out (PoE-PSE) functionality is enabled on port Eth3/PSE, supplying (1) maximum output of 12W while USB is active, or (2) maximum output of 14.5W while USB is inactive.

Figure 5 Gigabit Ethernet Port Pin-Out

Table 2

| Eth0 Port Pinout | | | |
|------------------|-----|-------------|--------------------------------------|
| Connector | Pin | Signal Name | Function |
| | 1 | BI_DA+ | Bi-directional pair +A, PoE Negative |
| | 2 | BI_DA- | Bi-directional pair -A, PoE Negative |
| | 3 | BI_DB+ | Bi-directional pair +B, PoE Positive |
| | 4 | BI_DC+ | Bi-directional pair +C, PoE Positive |
| | 5 | BI_DC- | Bi-directional pair -C, PoE Positive |
| | 6 | BI_DB- | Bi-directional pair -B, PoE Positive |
| | 7 | BI_DD+ | Bi-directional pair +D, PoE Negative |
| | 8 | BI_DD- | Bi-directional pair -D, PoE Negative |


Table 3

| Eth1-Eth2 Port Pinout | | | |
|-----------------------|-----|-------------|------------------------|
| Connector | Pin | Signal Name | Function |
| | 1 | BI_DA+ | Bi-directional pair +A |
| | 2 | BI_DA- | Bi-directional pair -A |
| | 3 | BI_DB+ | Bi-directional pair +B |
| | 4 | BI_DC+ | Bi-directional pair +C |
| | 5 | BI_DC- | Bi-directional pair -C |
| | 6 | BI_DB- | Bi-directional pair -B |
| | 7 | BI_DD+ | Bi-directional pair +D |
| | 8 | BI_DD- | Bi-directional pair -D |

Table 4

| Eth3/PSE Port Pinout | | | |
|----------------------|-----|-------------|--------------------------------------|
| Connector | Pin | Signal Name | Function |
| | 1 | BI_DA+ | Bi-directional pair +A |
| | 2 | BI_DA- | Bi-directional pair -A |
| | 3 | BI_DB+ | Bi-directional pair +B |
| | 4 | BI_DC+ | Bi-directional pair +C, PoE Positive |
| | 5 | BI_DC- | Bi-directional pair -C, PoE Positive |
| | 6 | BI_DB- | Bi-directional pair -B |
| | 7 | BI_DD+ | Bi-directional pair +D, PoE Negative |
| | 8 | BI_DD- | Bi-directional pair -D, PoE Negative |

Figure 6 OAW-AP1301H Side View



USB Interface

The OAW-AP1301H access point is equipped with a USB 2.0 interface (Type A). When active, the USB port can supply up to 5V/0.5A power to an attached device.

Reset button

Factory reset. Press reset button for 5s, AP LEDs will quickly flash for 3s, then AP will restart and restore factory configurations.

Power

The OAW-AP1301H access point supports direct DC power adapter (48V DC nominal, sold separately) and Power over Ethernet (PoE).

The DC power connector port is located on the side of the device, as shown in Figure 6.

When both power sources are available, DC power takes priority over PoE. OmniAccess Stellar AP supports the power adapter provided by ALE ONLY.

The PoE-in allows the Eth0 port to draw power from an 802.3at (preferred) source, or an 802.3af (optional) source.

When powered by an 802.3at or DC power source, the PoE-out (PoE-PSE) functionality is enabled on port Eth3/PSE.

Before You Begin

Refer to the sections below before beginning the installation process.

Pre-Installation Checklist

Before installing your OAW-AP1301H access point, be sure that you have the following items:

- Gigabit Ethernet cable of required length.
- One of the following power sources:
 - IEEE 802.3af/at compliant Power over Ethernet (PoE) source.
 - ALE AC-DC adapter (sold separately). Output voltage DC 48V, output current ≥ 0.6 A is recommended.
- A PC terminal or a notebook

Identifying Specific Installation Locations

The OAW-AP1301H access point must be secured to an ALE-approved wall or to a desk mount kit (sold separately).

The installation position should be as close as possible to the center of the required coverage area and should be free from obstructions or obvious sources of interference.

- Minimize the number of obstructions (such as walls) between the AP and user terminals.
- Electronic equipment or devices (such as microwave ovens) which may produce radio frequency noise should be away from the installation position of the

AP.

It is strictly prohibited to install around stagnant water, water seepage, leakage or condensation. Avoid cable condensation or water seepage along the cables connecting to the AP.

Installing the Access Point

The OAW-AP1301H can be mounted into a single-gang wall-box with shipped mounting plate.

Installing all ALE access points requires professional training. The AP must be professionally installed by a qualified engineer familiar with WLAN system. Failure to properly install this product may result in physical injury and/or damage to property.

Use the steps below to install your OAW-AP1301H.

- Begin by removing the existing data wall plate (if applicable).
- Make sure that there is an uplink Ethernet cable with RJ-45 plug in the wall-box. If not, please crimp an RJ-45 plug (not supplied) on the Ethernet cable.
- Align the mounting holes of the AP1301H mounting plate with mounting holes in your gang box, as shown in Figure 7 and Figure 8. For worldwide single gang outlet box, the mounting plate has two sets of mounting holes to meet the individual installation position requirement.

Figure 7 Mounting Plate to Gang Box(1)


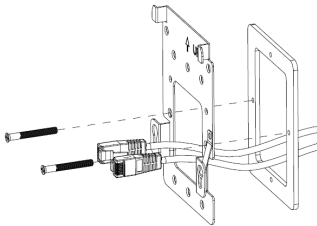


Figure 8 Mounting Plate to Gang Box (2)

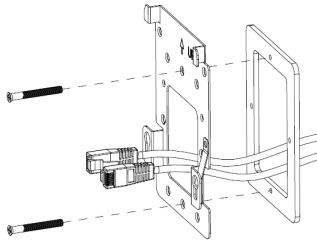


- Insert the two included slotted screws and tighten them to secure the mounting plate.
- Connect the uplink Ethernet cable to the Eth0 port on the back of the AP1301H. Do the same for the PT port, if used.

- Align the mounting slots on the back of the AP1301H with the corresponding mounting posts on the wall mounting plate as shown in Figure 9.

- Push the access point against the posts and downward until the posts engage the slots at the top of the slots.

Figure 9 Attaching OAW-AP1301H to wall mounting plate

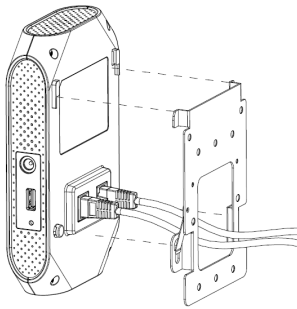

Verifying Post-Installation Connectivity

The integrated LED on the access point can be used to verify that the AP is receiving power and initializing successfully.

Product Specifications

Dimensions/Weight

- Single AP excluding packing box and accessories:
 - 95 mm (W) x 34.45 mm (D) x 161.5 mm (H)
 - 3.74" (W) x 1.35" (D) x 6.35" (H)
 - 237g/0.522lb
- Single AP including packing box and accessories:
 - 115 mm (W) x 54 mm (D) x 182 mm (H)
 - 4.52" (W) x 2.13" (D) x 7.17" (H)
 - 417g/0.919lb

Power

- Supports direct DC power and Power over Ethernet (PoE)
- Power over Ethernet (PoE): 48 V DC (nominal) IEEE 802.3af / 802.3at compliant source
- Maximum power consumption with PSE function and USB load: 25W

Environmental

- Operating :
 - Temperature: 0°C to +45°C (+32°F to +113°F)
 - Humidity: 5% to 95% non-condensing
- Storage and transportation :
 - Temperature: -40°C to +70°C (-40°F to +158°F)

For additional specifications on this product, please refer to the Datasheet.

Contacting Alcatel-Lucent Enterprise

| Website Support | |
|-------------------|---|
| Main Site | http://enterprise.alcatel-lucent.com |
| Support Site | http://support.esd.alcatel-lucent.com |
| Telephone Support | |
| North America | 1-800-995-2696 |
| Latin America | 1-877-919-9526 |
| Europe | +800 00200100 (Toll Free) or +1(650)385-2193 |
| Asia Pacific | +65 6240 8484 |
| Other Region | 1-818-878-4507 |

Alcatel-Lucent Enterprise
OAW-AP1301H Regulatory Compliance
and Safety Information

xxxxxx-xx Rev. A

xxxxxx-xx Rev. A



■ Introduction

This document contains domestic and international regulatory compliance information for the access point OAW-AP1301H. To ensure that this device complies with the regulatory standards for your region, please refer to the content below.

FCC Part 15:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF exposure warning
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This product may not be collocated or operated in conjunction with any other antenna or transmitter
This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

For EU
ALE USA Inc., hereby declares that these models are compliant with the essential requirements and other provisions of Directive 2014/53/EU. For the complete CE DoC, please access the website below to get more information:
<https://businessportal2.alcatel-lucent.com/>

Waste Electrical and Electronic Equipment (WEEE) Statement



ALE products are subject to separate collection and treatment in the EU Member States, Norway, and Switzerland when they are at end of life, and therefore are marked with the symbol shown. The treatment applied to these products in these countries shall be compliant with the applicable national laws which are under the implementing of Directive 2012/19/EU on Waste of Electrical and Electronic Equipment (WEEE).

European Union RoHS

ALE products are compliant with the EU Restriction of Hazardous Substances Directive 2011/65/EU (RoHS). EU RoHS restricts the use of specific hazardous materials in the manufacture of electrical and electronic equipment. The restricted materials under the Directive are Lead (including Solder used in printed circuit assemblies), Cadmium, Mercury, equivalent Chromium, and Bromine.

■ Global RF health information:

RF Radiation Exposure Statement: This equipment complies with FCC and CE RF radiation exposure limits. This equipment should be installed and operated with a minimum distance of 20 cm between the equipment and a human's body for 2.4 GHz and 5 GHz operations. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

| | | | | |
|----|----|----|----|----|
| | | | | |
| AT | BE | BG | CZ | DK |
| EE | FR | DE | IS | IE |
| IT | EL | ES | CY | LV |
| LI | LT | LU | HU | MT |
| NL | NO | PL | PT | RO |
| SI | SK | TR | FI | SE |
| CH | UK | HR | | |

IC Radiation Exposure Statement for Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent is otropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

User manuals for transmitters equipped with detachable antennas shall also contain the following notice in a conspicuous location:

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Caution:
The device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

Mise en garde:

The Alcatel-Lucent name and logo are trademarks of Nokia used under license by ALE. To view other trademarks used by affiliated companies of ALE Holding, visit: www.al-enterprise.com/en/legal/trademarks-copyright. All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Neither ALE Holding nor any of its affiliates assumes any responsibility for inaccuracies contained herein. (2021)

Le dispositif destiné à être utilisé dans la bande de fréquences 5150-5250 MHz est destiné uniquement à une utilisation en intérieur afin de réduire le risque de brouillage préjudiciable causé par les systèmes mobiles à satellites dans le même canal;

IMPORTANT NOTE:
Radiation Exposure Statement:
This equipment complies with “Industry Canada RSS-102 for radiation exposure limits set forth for an uncontrolled environment”.
This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Déclarationd'exposition aux radiations:
Cetéquipementestconforme aux limitesd'exposition aux rayonnements IC établies pour un environnement non contrôlé.
Cetéquipementdoitêtreinstallé et utilisé avec un minimum de 20cm de distance entre la source de rayonnement et votre corps.

Industry Canada - Emissions compliance statement

This Class B digital apparatus complies with Canadian ICES-003.
Avis de Conformité à la Réglementationd' Industrie Canada.
Cetappareilnumérique de la classe B est conform à la norme NMB-003 du Canada.

Canada ICES-003 (B) / NMB-003 (B)

[REMAINING SECTIONS INTENTIONALLY LEFT BLANK]