User Manual v1.0





Contents

Features	3
Slide Arm technology	3

Stabilized Video and Photo Camera System	4
HD Video Transmission	4
Vision position System	5
User Instructions	5
Warning	5
Get To Know O ₂	5
GDU Mini App Download	6
Product Registration	6
UAV Legal Registration	6
Safety Overview	6
Product Overview	7
Aircraft and Remote controller Preparation	7
Aircraft Part Diagram	9
Remote controller Part Diagram	10
Aircraft	11
Aircraft Status Indicator	11
Flight Mode	13
Automatic Return Home	14
Vision Position System	15
Smart Flight Function	17
Propellers	22
Battery	24
Remote controller	27
Prepare the Remote controller	27
Mobile Phone Installation	28
HD Video Transmission System	29
Gimbal Camera	29
Aircraft Control	30
Frequency Matching	33
Flight Mode Selection	33


Upgrading the Remote controller	34
Gimbal Camera	34
Camera Overview	34
Gimbal Overview	35
GDU Mini App	35
Drone	36
Media	42
Explore	44
Me	46
Flight	46
Preflight Check	46
Magnetometer Calibration	47
General Flight Operations	50
Technical Parameters	52
Certification Information	54

Features

Slide Arm technology

The aircraft's slided arms and folding landing pad and blade are designed to form a functional and

portable structure without sacrificing strength or flexibility.

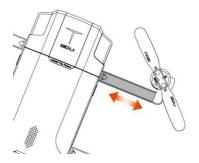

Stabilized Video and Photo Camera System

Using new <u>integrated</u> control algorithms and a high-precision three-axis stabilization design, 4K ultra-high-definition videos and 13,000,000-pixel photos can be taken <u>on a stable platform</u>, <u>offering excellent photographic effects and recording experiences</u>.



HD Video Transmission

The aircraft is <u>equipped</u> with <u>a HD</u> transmission module for real-time transmission of HD videos and <u>photography</u>. The transmission <u>range</u> is 1 km for O_2 products and 7 km for O_2 Plus products




Smart Lock Prop

In order to fully protect your safety, the propeller of the GDU O₂ series enjoys dual protection. Designed with 2 small set screws and a second proprietary locking mechanism, the props on the O2 will ensure they stay secured during flight.



Vision position System

Our advanced forward and downward is onboard the GDU 02 series, thus achieving intelligent obstacle avoidance, follow me, vision circle, and gesture shot. With the powerful vision system, the aircraft is made more intelligent.

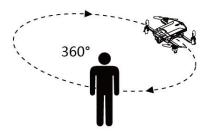

User Instructions

Warning

Thank you for using this GDU product. Improper operation of any special electronic products may result in damages, personal injury, and even death, and the user should bear the legal consequences of these actions. The product must not be used by juveniles under the age of 18. In order to ensure a positive operating experience and to protect your personal safety, please carefully read the following documents before use.

"Disclaimer"

"List of Items"

"User Manual"

"Quick Operations Guide"

"Battery Safety Guide"

"Daily Maintenance Manual"

**The parameters in the documents only represent the delivery status. The actual parameters will prevail.

Get To Know O2

In addition to this document, GDU also provides a basic instructional video.

You can <u>log in to the</u> official website <u>at http://www.gdu-tech.com/cn/</u> or <u>by</u> scanning the QR code below to <u>access</u> and <u>view</u> the teaching video, <u>which will give you an</u> intuitive <u>understanding of</u> how to use the product. It is recommended to watch the teaching video in <u>a WIFI-supported</u>

environment.



GDU Mini App Download

For an optimal operating experience, please download the GDU Mini App by logging on the official website www.gdu-tech.com or by scanning the QR code below, and then install the GDU Mini App.



Please either use the iOS8.0 or the Android5.0 OS or above to install the GDU Mini APP.

Product Registration

To ensure complete after-sales services, please log on to the official website www.gdu-tech.com and register your product. Registration will not affect your normal use of the product, but it is recommended to promptly complete registration to become a GDU member. You can obtain the latest official event information and occasional promotional information as recommended by GDU.

UAV Legal Registration

As per the *Provisions on Real-time Registration Management of Civil Unmanned Aerial Vehicles* of the Civil Aviation Administration of China, all UAV owners must register their real name and fill any related information at time of purchasing their UAV in the official government UAV registration system (http://uas.caac.gov.cn), and paste the registration mark on the hull of the UAV.

X The personal information of the user will be kept strictly confidential after registration.

Safety Overview

1. Environmental Requirements

• Do not use the aircraft under severe weather conditions such as rain, lightning, <u>heavy winds</u>, heavy fog, dust, and extreme cold.

- Signals will be blocked by buildings, trees, and other environmental obstructions resulting in possible GPS positioning failure or control disconnection. Please only use the product in open spaces.
- Please use the product<u>only</u> within <u>your own</u> visual range, and <u>avoid any</u> obstacles, people, water, etc.
- Do not use the product in <u>proximity to high-voltage communications towers</u>, <u>in order to prevent interference with remote controller signals</u>.
- Be careful when using the product at altitudes of 4000m, or as performance is greatly reduced and aircraft could be dangerous to operate.
- Please <u>only</u> use the product in legally <u>permitted</u> areas.

2. Operating Instructions

- Do not call or answer the phone while product is in flight. Pay close attention to the GDU Mini App interface to ensure a safe flight.
- After receiving a low power alert signal, please return and land as soon as possible.
- The <u>aircraft</u> will be forced to return upon receiving <u>an emergency</u> low power <u>alert</u>. <u>Please</u> control the aircraft to <u>allow it to</u> land into a safe place.
- After landing, first turn off the <u>aircraft's</u> power supply, <u>then conduct any</u> other operations.
- Do not stop the motor in mid-flight except in case of emergency, in order to prevent any injuries caused by the falling aircraft.
- The propellers <u>are</u> dangerous <u>when</u> rotating at high speed. Please keep a safe distance <u>from</u> the aircraft in order to ensure <u>your</u> safety.


3. Maintenance

- Please replace the battery promptly in the case the battery exhibits damage, bulging, or leakage.
- <u>If</u> the motors produce_abnormal sounds, this may be caused by bearing wear. Please replace the motor by contacting Customer Support.
- Promptly replace <u>any</u> deformed or damaged propeller blade<u>s</u>.
- Keep the gimnal camera lens clean. Only use the special cleaning kit to wipe it.


Product Overview

Aircraft and Remote controller Preparation

1. Remove the cover from the aircraft.

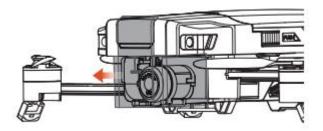


- **X** The cover is used for protecting the <u>equipped</u> gimbal camera. Confirm that the holder cover has been removed before using the aircraft.
- **X** It is recommended to install the holder cover to protect the gimbal camera **whenever** the aircraft is not in use.
- 2. Pull out <u>each of the</u> aircraft arms to the limit mark, and fully unfold the propellers and landing feet to completely.

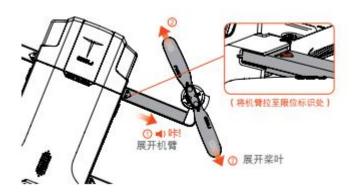


展开机臂	Extend the propeller
展开桨叶	Extend the blade
(将机臂拉至限位标识处)	(Pull the arm to the limit mark)
咔!	Click!

- **While extending the arm**, Be sure to pull firmly and carefully and do not extend past limit marks.
- **While retracting the arm**, Firmly push the arm back to the proper position, while being sure to guide props into their grooves, until the clicking sound is heard.
- 3. Correctly position the remote controller antennae.

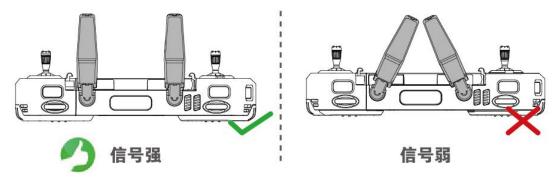


信号强	Strong signal
信号弱	Weak signal

Aircraft Part <u>Diagram</u>

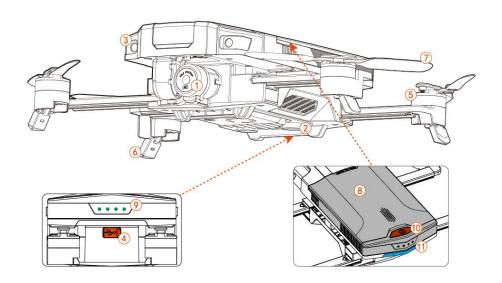

1. Integrated gimbal camera	7. Propeller
2. Downward vision system	8. Battery
3. Forward vision system	9. Battery power indicator
4. Parameter/data adjustment interface (MicroUSB)	10. Power switch
5. Motor	11. Aircraft tail indicator
6. Landing feet	

Remote controller Part Diagram

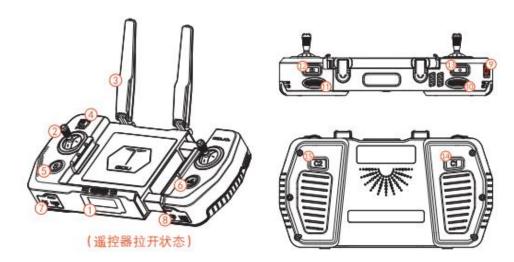

(遥控器拉开状态)

(Remote controller in the extended state)

1. Status display	9. Power button
2. Stick	10. Gimbal orientation control thumbwheel
3. Antenna	11. Gimbal tilt control thumbwheel
4. Flight mode switch	12. Camera button
5. Auto take-off	13. Video button
6. RTH	14. Custom function button C1
7. USB update, debugging, and charging interface	15. Custom function button C2
8. Micro USB slot	

RTH: return to the takeoff home point and land.



起飞点 Takeoff point

Auto landing: meaning that the aircraft will land.



垂直降落点	Auto landing point
-------	--------------------

Aircraft

Aircraft Status Indicator

The flight status of GDU O₂ series <u>aircraft</u> is shown according to the tail indicator.

飞行状态指示灯定义图		
	状态说明	机尾指示灯
开机自检	自检成功	● 灭—无灯
刀机日包	自检失败	● 红一常亮
	标准模式	● 绿一常亮
正常状态	运动模式	o 绿一慢闪
正市认应	返航模式	● 绿一快闪
	姿态模式	○ 黄一慢闪
磁力计校准	进入校准模式	● 黄一常亮
	水平方向校准成功	○ 白一常亮
加払りリイズ/圧	磁力计校准成功 ● 绿	● 绿一常亮
	磁力计校准失败	⊙ 黄一快闪
	低电量	○ 红一慢闪
	严重低电量	⊙ 红一快闪
异常状态	与遥控器失联	● 红一常亮
	禁飞警示区	⊙ 黄一快闪
	禁飞区	○ 红一快闪
	光流无效	● 红黄一快闪

Definitions of Flight Status Indicators		
	Status Description	Tail Indicator
Self-check after startup	Self-check success	OFF - none
	Self-check failure	Red - ON
Normal status	Standard mode	Green - ON
	Sport mode	O Green - flashing slowly
	Return mode	Green - flashing quickly
	ATTI mode	Yellow - flashing slowly

Magnetometer calibration	Calibration start	Yellow - ON
	Calibration success in horizontal direction	O White - ON
	Success of magnetometer calibration	Green - ON
	Failure of magnetometer calibration	O Yellow - flashing quickly
Abnormal status	Low power	Red - flashing slowly
	Severe low power	Red - flashing quickly
	Loss of connection with remote controller	Red - ON
	Close to NFZ (No Fly Zone)	Yellow - flashing quickly
	NFZ (No Fly Zone)	Red - flashing quickly
	Vision position ineffective	Red/yellow - flashing quickly

Flight Mode

The GDU O₂ series product supports two flight modes:

1. Standard mode (maximum flight speed: 5m/s)

Accurate hovering and smart flight can be achieved through the use of the GPS module and vision position system.

If the GPS signal is strong, the aircraft will be positioned through GPS;

If the GPS signal is too weak, and the light levels meet the needs of the vision position system, then the aircraft will be positioned through the vision position system;

If the GPS signal is weak and the light condition do not meet the needs of the vision position system, the aircraft will not hover accurately, and the GDU Mini App will prompt the user to land.

2. Sport mode (maximum flight speed: 15m/s)

The aircraft will hover accurately using the GPS module. The maximum flight speed can be

increased by adjusting the aircraft control sensitivity.

Attention! If the sport mode is selected during the flight process, the forward vision system will automatically shut down, and the aircraft will cease actively braking and avoiding obstacles. The user must pay attention to the surrounding environment and control the aircraft to avoid obstacles along the flight route.

Attention! The flight speed and landing speed of the aircraft will be higher in sport mode than in standard mode, so the braking distance will significantly increase. In a windless environment, the user should reserve a braking distance of 30m at least to ensure flight safety.

Attention! The control sensitivity of the aircraft will be significantly improved in sport mode. The aircraft will respond strongly and fly far in response to even minor operations of the remote controller. In actual flight situations, the user should ensure sufficient flying space to ensure flight safety.

Automatic Return Home

The GDU O₂ series product has the function of automatic return home in three modes, i.e. "Automatic return home", "Low power return" and "Communication loss return."

If a return point has been recorded successfully before takeoff, the aircraft will automatically return and land in the takeoff area once the user triggers automatic return home mode, low power return mode, or communication (between the remote controller and aircraft) loss control mode.

The return point, also known as the HOME point, is defined as the valid GPS coordinates recorded at the time of takeoff or when flight conditions enjoy strong GPS signals. A return point is valid only for the current flight.

If automatic return is triggered, the aircraft will return at the current height if the distance between the aircraft and return point is less than 20m. Otherwise, the aircraft will rise to the preset height (if the current height is above the set height, the aircraft will fly at the current height), fly to directly above the return point, and then slowly land.

X Please set the return height in the flight setting interface of the GDU Mini App.

1. Automatic return home

Automatic return can be triggered during the flight process by pressing the "Return" button on the remote controller or by clicking "b" in the GDU Mini App interface. During the return process, the user can press the "Return" button or click "b" in the GDU Mini App interface to exit the return cycle and regain active control.

2. Low power return

Three mechanisms are provided: low power alarm, low power return, and emergency low power landing.

Low power alert

If the remaining power is 30% or less of total power, the low power alert will be triggered, the red indicator will flash slowly, and the GDU Mini App will remind the user of the low power levels.

Low power return

If the remaining power is 20% or less of total power, the aircraft will be forced to return automatically. During the return process, the aircraft can be controlled by remote controller (assuming standard signal levels).

• Emergency low power landing

If the remaining power is 8% or less of total power, this will constitute a power emergency, and the aircraft will be forced to land vertically.

- X The throttle lever can be adjusted to position the aircraft into a more appropriate position before landing.
- X If the battery power is too low for the aircraft to return, the user should immediately land the aircraft.

3. Communication loss return

If the GPS signal is strong, and the compass is operating normally, then a return point will be successfully recorded by the aircraft. If the remote controller's signal is interrupted, the aircraft will remain hovering. If the duration of signal interruption exceeds 3s, the aircraft will automatically return. Under WIFI control, if the duration of APP signal interruption exceeds 30s, the aircraft will then also return automatically. If normal signal conditions are recovered during the return process, the aircraft will continue returning, but the user can press the "Return" button

on the remote controller or click "on the GDU Mini App interface to exit the return process.


WIFI control is only applicable to GDU O2.

Vision Position System

The vision position system includes the forward vision system and the downward vision system. The forward vision system on two sides of the nose includes two lenses, and used for sensing obstacles by visual distance identification. The downward vision system at the bottom of the aircraft includes optical and ultrasonic sensors, and used to obtain the location information of the aircraft with optical sensor to provide the location reference along the horizontal axis. The current flight height can be judged through ultrasonic sensor, thus providing a vertical height reference and allowing flight at a fixed height.


Observation Range

See the figure below for the observation ranges of the forward vision system and downward vision system. If obstacles exist outside these ranges, the aircraft cannot effectively avoid them; please fly carefully.

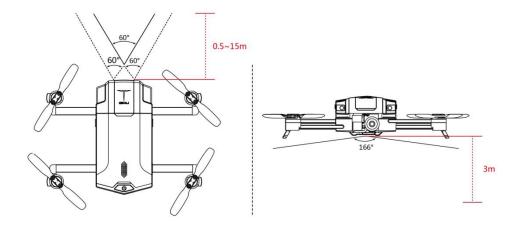

Downward Vision System Application Scenario

The downward vision system is effective with height less than 3m, in poor GPS signal conditions. It is particularly applicable to indoor flight.

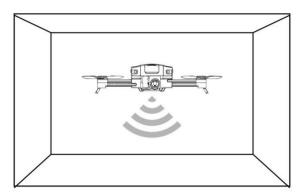


Operating Steps

- 1. Use the remote controller to switch the flight mode into standard mode.
- 2. Turn on the aircraft's power supply. Wait until the flight status indicator is a steady green ON.
- 3. Engage the sticks to start the aircraft. The downward vision system will work automatically without requiring manual activation.

Forward Vision System Application Scenario

The forward vision system is available in standard mode under well-lit conditions, and can be used for observing and avoiding clear obstacles during flight.

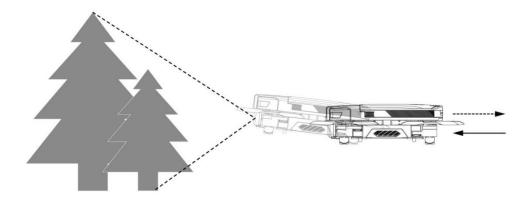

The accuracy of the vision position system is likely to be influenced by light intensity and surface <u>of obstacles</u>, and ultrasonic positioning may be <u>inaccurate if</u> the drone flies close to sound-absorbing materials. Therefore, be careful <u>not to rely on</u> the vision position system in the following conditions:

- Light intensity: less than 10lux or more than 10,000lux.
- Operating temperature: below -10°C or above 55°C.
- Flight altitude: more than 4,000m.
- Excessively flight speed.
- Pure color surfaces (such as pure black, pure red, pure white and pure green).
- Highly reflective surfaces.
- Near water or transparent objects.
- Surface of moving objects.
- Strong or rapid changing light.
- Surface with strong <u>ultrasonic</u> absorbing objects.
- Surfaces with no clear textures.
- Surface with high<u>ly repetitive or patterned</u> textures.
- Surface sloped at more than 30 degrees.
- Small obstacles (area: less than 1m²).

Smart Flight Function

Pay attention to the following items before enabling the **smart** flight function:

1. Ensure good light conditions.

- 2. Ensure that the cameras of the forward and downward vision systems are clea<u>n</u> and free of blemishes.
- 3. Ensure that the aircraft is fully charged and in standard mode.
- 4. Ensure that the power-on self-check results of the GDU Mini App comply with the preflight requirements.
- 5. The aircraft should fly more than 3m above the ground after the Follow/Around function is enabled.
- 6. Always pay attention to surrounding objects <u>along the aircraft's</u> Follow/Around route, and be ready to <u>switch to</u> manual control or click "STOP" on the GDU Mini APP to avoid collision in case of emergency.
- 7. Pedestrians should be kept more than 5m away from aircraft in Follow/Around mode.
- 8. Be careful <u>when</u> enabl<u>ing</u> the Follow/Around function if the <u>target is</u> moving significantly or is beyond <u>visual</u> range.
- 9. Communication may be interrupted in the complex outdoor electromagnetic environment. In case of communication interruption, then safely approach the aircraft. If possible, click "Automatic return home" to prevent the aircraft from losing control as a result of the ensuing communication loss.
- 10. Please observe the local laws and regulations <u>regarding</u> privacy while using the Follow function.
- 11. If the gesture shot <u>function</u> is enabled, the aircraft should be hovered at about 3m away from the <u>main user</u> and at <u>a</u> height of less than 1.5 times the height of the <u>main user</u>.

Obstacle Avoidance

This function is used for high-precision and rapid detection and avoidance of obstacles, so that the aircraft will automatically avoid obstacles during flight.

Operating steps:

1. Enable the obstacle avoidance mode.

Click "Start shooting" to enter the flight interface. Enable "Vision-based obstacle avoidance" and "Display radar map" by clicking "Settings" - "Flight setting". The_obstacle avoidance_mode will_then be enabled.

- 2. After obstacle avoidance mode is enabled:
- 1) <u>The GDU Mini App will display the distance of frontward obstacles. Obstacles detected by the vision system will be displayed at a range of up to 8m.</u> The radar map <u>display</u> on <u>the GDU Mini APP will turn green, yellow, and red according to distance.</u>
- 2) The aircraft will stop at 1.5m away from <u>any</u> obstacle, <u>and</u> Forward <u>commands on the</u> stick will be <u>rendered</u> invalid. If the obstacle moves towards the aircraft, the aircraft will move backwards and <u>maintain</u> a safe distance of <u>at least 1.5m</u> from the obstacle.

Follow Me

Operating steps:

- 1. Click the <u>smart</u> function button "(s)", and select "Follow Me" in the pop-up interface to enter Follow me mode. <u>A target selection</u> prompt will appear.
- 2. Select the target by <u>one of</u> two means:
- A. Double-click: double-click the face or pedestrian <u>icon on</u> the screen to detect the target. After the target is selected, <u>a</u> green cursor prompt will appear <u>on</u> the screen.
- B. Box selection: press <u>your finger on</u> the screen and drag <u>a</u> box until the selected area fully <u>covers</u> the target outline. After the target is selected, <u>a</u> green cursor prompt will appear <u>on</u> the screen.

Once the target is selected, the aircraft will track the object <u>using</u> the gimbal camera, and follow the target <u>at</u> a certain distance.

3. Stop Follow Me mode or reselect the target.

The "STOP" button is located on the left of the GDU Mini APP <u>flight interface</u>. Click it to <u>cancel</u> the current follow me <u>command</u>. Then "EXIT" will appear, and the aircraft will hover. Follow me mode can be enabled again by double-clicking or box selection <u>as described above</u>. Then "EXIT" will change to "STOP", and the aircraft will <u>switch to</u> Follow me mode.

4. If "EXIT" is clicked, the aircraft will exit Follow me mode and hover in its current position.

Vision Circle

Operating steps:

- 1. Click the <u>smart</u> function button ", and select "Vision circle" in the pop-up interface to enter Vision circle_mode. The prompt for the user to select the target will <u>then_appear</u>.
- 2. Select the target by means of double-clicking or box selection. The aircraft will then fly around the target.

The direction and speed of <u>flight around</u> the target can be adjusted through the slide bar <u>on</u> the GDU Mini APP interface.

- 3. Stop the Vision circle mode or reselect target.
- 1) The "STOP" button is located on the left of the <u>GDU Mini App</u> flight interface. Click it to exit Vision circle mode. Then "EXIT" will appear, and the aircraft will hover. Vision circle mode can be <u>re-</u>enabled by double-clicking or box selection. Then "EXIT" will change to "STOP", and the aircraft will fly in Vision circle mode.
- 4. If "EXIT" is clicked, the aircraft will exit Vision circle mode and hover in its current position.

Gesture Shot

Operating steps:

1. Click the <u>smart</u> function button "in the <u>GDU Mini App</u> flight interface. Select "Gesture Shot" in the pop-up interface to enter Gesture shot mode. This mode supports two functions: photo and video.

1) Photo

Make a V () gesture in front of the gimbal camera. After this gesture is recognized successfully, the GDU Mini APP will commence a 3 second countdown. The user should pose during this time. The photo will be taken at the end of the countdown.

2) Video

Make a palm () gesture in front of the gimbal camera. After this gesture is recognized successfully, release the gesture. Video recording will commence.

Make the palm () gesture again. After this gesture is recognized successfully, the GDU Mini APP will prompt you to stop recording. Release the gesture, and video recording will be stopped.

2. If "EXIT" is clicked, the aircraft will exit Gesture Shot mode and hover in its current position.

Point of Interest

Operating step:

- 1. Click the <u>smart</u> function button " in the GDU Mini App flight interface. Select "Point of Interest" in the pop-up interface to enter Point of Interest mode.
- 2. <u>Position the aircraft</u> above the interest point. Set a radius around this point, and click "Start <u>circling.</u>" The aircraft will fly around this point clockwise at 2m/s at its current height within a certain radius.
- 3. If "EXIT" is clicked, the aircraft will exit Point of Interest mode and hover in its current position.

Dronie

Operating steps:

1. Click the <u>smart</u> function button "in the <u>GDU Mini App</u> flight interface. Select "Dronie" in the pop-up interface to enter Dronie Shooting mode.

- 2. Dragging a box around the target. The user should set the flight distance, select <u>either</u> video or photo <u>mode along with</u> the control mode, and then click "Start flight". The aircraft will rise while flying backwards. At the same time, photo<u>s will be taken</u>. After shooting, the aircraft will return and hover in place, as per the <u>established</u> settings.
- 3. If "EXIT" is clicked, the aircraft will exit the Droniemode and hover in its current position.

Rocket

Operating steps:

- 1. Click the <u>smart</u> function button "in the <u>GDU Mini App</u> flight interface. Select "Rocket" in the pop-up interface to enter the Rocket <u>mode</u>.
- 2. The user should set the flight distance, select video or photo mode along with the control mode, and then click "Start flight". The aircraft will rise vertically, and the target will be shot vertically. After shooting, the aircraft will return and hover in place, as per the settings.
- 3. If "EXIT" is clicked, the aircraft will exit Rocket mode and hover in its current position.


Propellers

The GDU O_2 system is provided with folding propellers divided into Type \underline{A} and Type \underline{B} , corresponding to the different rotational directions of the motor.


Propeller	Type <u>A</u>	Type <u>B</u>
Schematic Diagram	GDU a O	O b
Installation location	On the <u>clockwise rotating</u> motor shaft	On the counterclockwise rotating motor shaft

Propeller Disassembly

The <u>base</u> of blade, <u>the motor</u>, and <u>the arm's</u> inner surface are marked with <u>either A</u> or <u>B</u>. The letters on these three parts must <u>match during</u> the installation process.

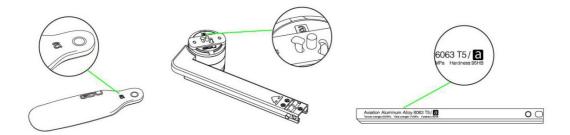

The process of propeller installation is as follows. First, select the same type of propeller as per the letter on the motor. With the letter <u>facing</u> upwards, press the blade into the clamp. Then press the clamp into the slot of the motor shaft, and turn the Type <u>A</u> propeller leftwards 45 degrees and <u>the</u> Type <u>B</u> propeller rightwards 45 degrees, until the holes at <u>the</u> two ends are aligned with the stop pins. Finally, tighten the screws.

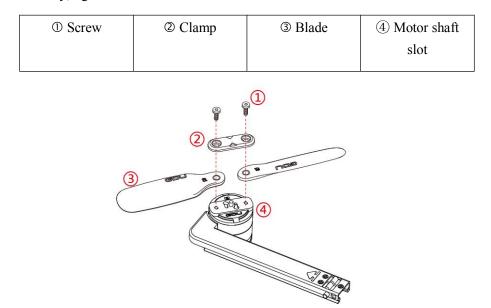

The process of propeller disassembly is as follows. First, remove the screws. Then rotate the clamp of <u>the</u> Type <u>A</u> propeller rightwards or the clamp of Type <u>B</u> propeller leftwards 45 degrees, <u>then</u> remove the clamp. Finally, remove the propeller.

Anti-Shooting Propellers

The anti-shooting propellers <u>provide</u> a safety guarantee in addition to screw locking. Even if the screws are loose, the anti-shooting propellers prevent the propellers from being released. The hook of the propeller clamp fits with the slot of <u>the</u> motor shaft. The motor shaft cannot be removed until the clamp is rotated to a proper angle.

Battery


The product is provided with a high-performance smart lithium battery (4000mAh and 11.4V).

Power On and Off

Press the power switch once and <u>hold</u> for 2_seconds to power on/off the aircraft.


Power Check

Press the power switch once to check the remaining power when the aircraft is OFF.

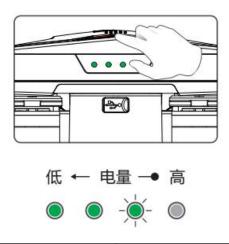

低	Low
电量	Power
高	High

Power Indicator

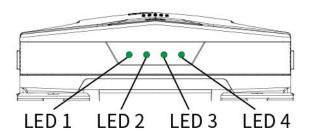


24

LED1	LED2	LED3	LED4	Current Power
Flashing fast	None	None	None	0-5%
Flashing	None	None	None	6%-25%
ON	Flashing	None	None	26%-50%
ON	ON	Flashing	None	51%-75%
ON	ON	ON	Flashing	76%-100%
ON	ON	ON	ON	100%

Charging

Power off the <u>aircraft</u>. Remove the battery and charge with a designated charger. The charging time is within $2\underline{\text{hours}}$.

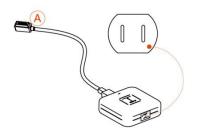






充电时长: <2小时

输入电压: 100~240V	Input voltage: 100-240V
充电时长: <2小时	Charging time: less than 2_hours

If the battery and remote controller are charged at the same time, the charging time is within 2.5_hours.

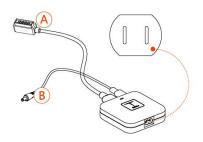





输入电压:100~240V	Input voltage: 100-240V
充电时长:A+B小于2.5小时	Charging time: less than 2.5_hours (A+B)


<u>During</u> the charging process, the charger indicator will flash. If the indicators flash green, it means that the battery is being charged. If the indicator is OFF, it means that the battery has been fully charged, and the charger should be <u>immediately</u> disconnected.

Charging Indicator


LED1	LED2	LED3	LED4	Current Power
	О	О	О	0%-25%
		О	О	25%-50%
			О	50%-75%
				75%-100%
О	О	О	О	Full

Battery Removal

(i) Press the buttons on **both** sides at the same time. (ii) Remove the battery by pulling backwards.

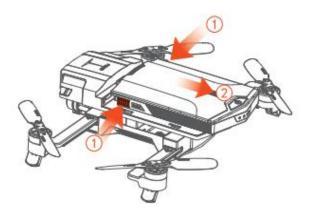

Align the battery with the locking_slot of the body, and insert the battery by pushing forwards.

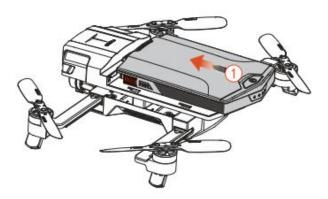

- **X** Insert or remove the battery with the aircraft powered OFF. After flight, remove the battery.
- **X** The battery <u>contains</u> hazardous chemicals. Prior to use, please carefully read the Battery Safety Guide and the <u>warnings written</u> on the battery.

Remote controller

The remote controller of GDU O₂ product is equipped with the advanced automatic frequency-switching wireless communication system. Your mobile phone can be easily inserted on the remote controller. The wireless HD video transmission system is integrated in the remote controller. Using the GDU Mini App, the user can watch HD real-time footage on their mobile phone. The parameters of the aircraft can be fully displayed on the screen.

Prepare the Remote controller

Power on and off

Press the remote controller until you heard the prompt tone to power on/off the aircraft.

Power Check

Press the remote controller for 1 second in the OFF state, and check its power on the left side of the screen. If the aircraft is connected to the remote controller, check the power of the aircraft on the right side of the screen.




Description of Remote controller Screen

Connection of Remote controller and Aircraft



Charging of Remote controller

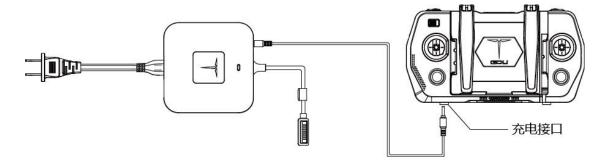


Only charge the remote controller in its OFF state. Check whether the remote controller is fully charged according to the charger's indicator light color. If the power indicator flashes in red, it means that the remote controller is being charged. If the power indicator shows a steady ON in green, it means that the remote controller has been fully charged. The charging duration is generally within 2 hours. A fully charged remote controller can be used for about 1.5 hours.


X Please use designated chargers to charge battery and remote controller. GDU will not be responsible for <u>any damages or</u> faults caused by not using original accessories.

Mobile Phone Installation


1. Use the appropriate data cable with micro USB side inserted into the slot.

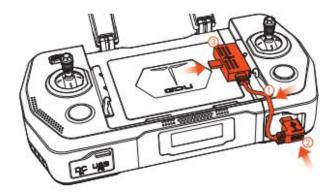

2. Adjust the length of remote controller, clamp the mobile phone into the appropriate position, and connect the other end to the <u>mobile phone's</u> charging interface.

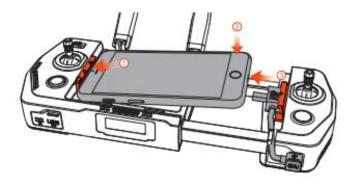

3. After flying, remove the mobile phone and fix the data cable back into the slot.

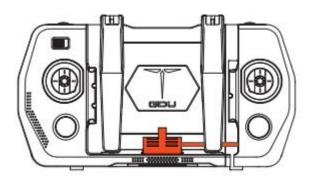

The remote comes equipped with a Lightning cable by default. If requires, please replace it with the Micro USB cable.


HD Video Transmission System

The GDU O₂ series product is provided with <u>an HD</u> video transmission module for <u>the</u> real-time transmission of 720P HD images. The transmission <u>range</u> is 1km for O₂ and 7km for O₂Plus,

Gimbal Camera_

The control dial wheels on the controller controls yaw and pitch. Back-to-center could let the

gimbal return to the initialization place. The "Photo" button and "Video" buttons are used for controlling the camera in real-time.

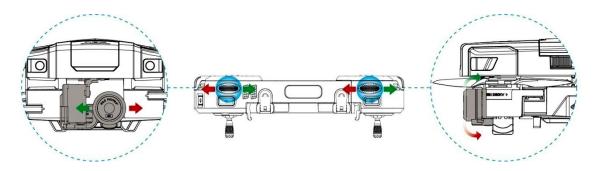


- **X** The Back-to-center button <u>can</u> be customized.
- **X** The gimbal camera can also be controlled by the GDU Mini App. See details in APP.

Aircraft Control

The remote controller supports three modes: <u>American</u> (Mode 1), Japan<u>ese</u> (Mode 3) and Chin<u>ese</u> (Mode 2). The control sticks are defined as follows.


1. <u>American</u> (Mode 1): throttle and rotation on left stick, and left/right and forward/backward on right stick.

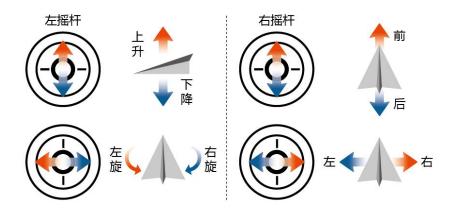

左摇杆	Left stick
右摇杆	Right stick
上升	Up
下 降	Down

左旋	Turn left
右旋	Turn right
前	Forward
后	Backward
左	Left
右	Right

2. Japanese (Mode 3): forward/backward and rotation on left stick; throttle and left/right on right stick.

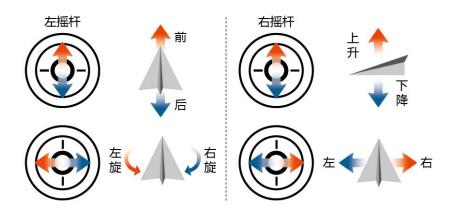


3.

左摇杆	Left stick
右摇杆	Right stick
上升	Up
下 降	Down
左旋	Turn left
右旋	Turn right

前	Forward
后	Backward
左	Left
右	Right

4. Chinese (Mode 2): forward/backward and left/right on left stick; throttle and rotation on right stick.

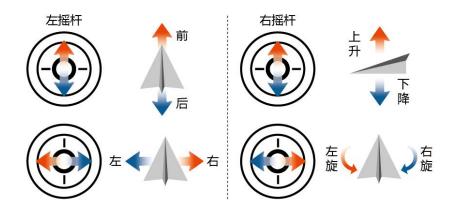

5.

左摇杆	Left stick
右摇杆	Right stick
上升	Up
下 降	Down
左旋	Turn left
右旋	Turn right
前	Forward
后	Backward
左	Left

右 Right

The default mode is <u>American</u> (Mode 1). You can change the operating mode of the remote controller in <u>the</u> Control settings interface of <u>the</u> GDU Mini App.

Frequency Matching


Frequency matching of the remote controller and built-in receiver has been <u>performed</u> before delivery, so the user can directly <u>access</u> the remote controller. If the aircraft or remote controller is replaced, frequency matching should be <u>re</u>done. It is not necessary to connect the mobile phone to the remote controller during frequency matching.

Frequency matching steps:

- 1. With the remote controller OFF, press the Return button and power switch at the same time. The remote controller will utter a prompt sound and "MATCHING..." will appear on the screen.
- 2. Turn on the power supply of the aircraft.
- 3. Connect the mobile phone to the aircraft. WIFI network: GDU-02-A-xxx; password: 12345678.
- 4. Run the GDU Mini App and click "Start shooting" to enter the flight interface.
- 5. Click "Settings" in the upper right corner. Then click "Remote controller matching" in the "Control settings" interface.
- 6. If matching succeeds, "MATCH SUCCESS" will appear on the remote controller screen.
- 7. If matching fails, repeat the above steps.

Flight Mode Selection

<u>Use the remote controller's flight mode switch to switch among flight modes</u>. Push the switch to the left to enable standard mode and to the right to enable sport mode.

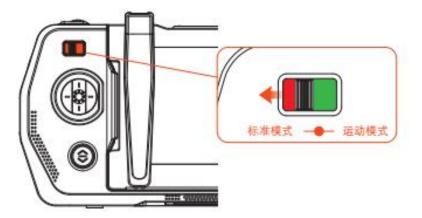

标准模式	Standard mode

33



Sport mode

Upgrading the **Remote controller**

Upgrading the remote controller <u>includes upgrading of both the</u> operation <u>system</u> and <u>the</u> video transmission <u>system</u>.

Operation_system upgrading: download "O₂ remote controller upgrade software" from the official website www.gdu-tech.com to your PC, connect the remote controller to the PC, open the software, and click "Upgrade".

Video transmission upgrading: once the information of the WIFI video transmission version is detected, the GDU Mini APP will automatically remind the user to upgrade the version. The user can upgrade the video transmission version by following the prompts.

Gimbal Camera

Camera Overview


GDU O₂ is equipped with a Sony 1/3 inch CMOS camera, with a resolution up to 13,000,000 pixels. With a low-distortion wide-angle lens of 25.5mm equivalent focal length, premium images can be captured.

The camera supports 4K video recording at 30 fps and photographs of a maximum of 13M pixels. Using the advanced image processing technology, high-quality videos and photos can be provided. The camera also supports various shooting modes, including single shooting (12MP), time-lapse shooting, continuous shooting (12MP/5 photos/second), timed shooting and zoom shooting.

HD videos can be previewed in real-time through the GDU mini App.

Memory

The capacity of the built-in memory is 16G for the O₂ and 32G for the O₂Plus. The videos and photos in the memory can be copied by connecting one end the USB cable to the PC and the other end to the aircraft, and then turning on the aircraft's power. The user can also download their videos and photos from the media interface of the GDU Mini APP.



34


* In order to ensure camera stability, the duration of <u>any</u> single recording should be less than 20min

Gimbal Overview

The three-axis stabilized gimbal <u>provides</u> a stable platform for the camera, so as to shoot high quality images during high-speed flight.

With this high-precision three-axis anti-shake gimbal, the variations in accuracy will be 0.05° or less. Even in case of heavy maneuvering, photography will remain accurate to within 0.1° or less, thus preventing shaking and enabling HD video recording and image acquisition.

The <u>aircraft's</u> orientation angle and roll angle <u>range</u> are -30° to +30°, and pitch angle <u>range</u> is -90° to +30°, which ensures shooting stability <u>regardless of the aircraft's motions</u>.

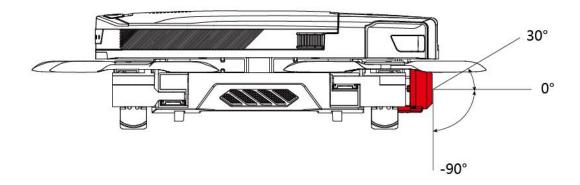

- ***** Before takeoff, keep the aircraft on flat, broad ground and prevent the gimbal camera from coming in contact with any object.
- If the aircraft is kept on uneven ground or grass and the gimbal camera is subject to collision against any foreign object or large external force, motor stalling and other errors may occur.
- ****** Flight in fog or clouds may result in condensation or damage the aircraft and camera. In this case, dry the gimbal camera and drone immediately.
- **A** short vibration prompt after startup is normal. Do not <u>physically</u> turn the gimbal camera.
- **X** Before flight, check whether the lens is clean. Do not touch the lens by hand. Wipe any stains with scratch free, lint free cloth.

GDU Mini App

<u>The GDU Mini APP</u> is application software designed by GDU for O₂ series products. The user can use the software to control the aircraft, the gimbal camera and its gimbal, thus

<u>enabling</u> the functions of flight control, shooting/recording, <u>course</u> planning, parameter settings, <u>media</u> sharing, etc.

The GDU Mini APP is composed of four modules: Drone, Media, Explore and Me.

X The interfaces and functions of the app will be regularly upgraded. Please refer to the latest APP version.


Drone

The Drone page includes: real-time weather, flight index view, aircraft appearance, and aircraft connection status. Click "Start" to enter the flight interface.



Flight Interface

Before entering the flight interface, select Smart shot or Classic shot. The <u>se</u> are provided for different users, and their functional interfaces are difference.

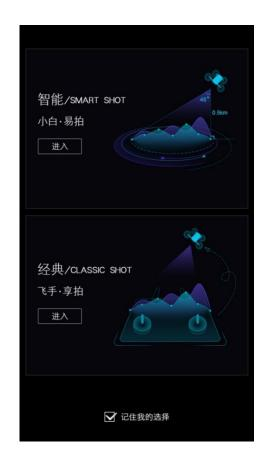

Classic Shot Mode




①Home

click to return to the Home page of APP.

②GPS status

shows the number of GPS.


- 3 Aircraft power
- : shows the remaining power of the aircraft.
- (4) Aircraft connection status



- (5) Altitude
- : shows the current flight altitude.
- 6 Flight distance
- : shows the current flight distance.
- 7 Settings
- ettings, video transmission settings, camera settings and general settings.
- ® Remote controller power
- show the remaining power of the remote controller.
- 9Gimbal pitch adjustment
- adjust the pitch angle of the gimbal camera.
- 10 Photo/video switching
- click it to switch between photo/video modes.
- (1) Photo/video button
- : shows the current shooting mode: photo or video.
- [®] Cloud media

- eview the media files in the memory of the <u>currently</u> connected aircraft.
- (13) Camera settings
- click to open the camera function parameters, which can be adjusted.
- 14) RTH
- : click to return and land.
- (15) Auto take-off/Vertical landing button
- : shows the takeoff button before takeoff; shows vertical landing button after takeoff.
- **16** Compass
- : shows the current orientation and heading.
- 1 Switch to map
- : click to switch to the map interface.

Smart Shot Mode

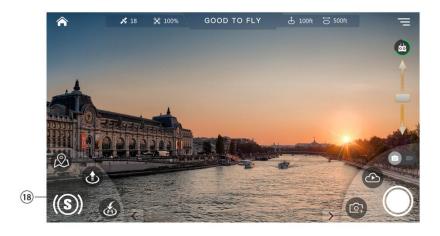

18 Smart function

- main functions of the flight interface in smart shot mode include: Follow Me, Vision circle, Point of Interest, Gesture Shot, Dronie, Rocket, etc.
- **X** See the smart flight function for specific operations.
- **X** The smart functions will be upgraded continuously. Please refer to the latest APP version.

Map interface:



- [®] Map switching 切换地图
- click to change the map display among 2D map, satellite map and hybrid map.
- @Waypoint
- click to activate the waypoint function, where you can set and upload flying mark points that the aircraft will follow.
- 2 Positioning
- elick to locate the aircraft's current position.
- 22 Electronic fence
- the aircraft will fly safely within the set electronic fence.
- 23 Clear

- click to clear <u>any</u> non-uploaded waypoints or electronic fences in the map interface.
- 24 Switch to flight interface
- click to return to the flight interface.

Settings:



控制设置	Control Settings
控制手型	Control mode
美国手	American (Mode 1)
中國手	Chinese (Mode 2)
日本手	Japanese (Mode 3)
上升/下牌	Up/Down
· 在稱/有特	Turn Left/Right
前进/磁道	Forwards/Backwards
· 庾左/向右	Left/Right
操控模式	Flight mode
自定义按键	Customizable buttons
智能	Smart
未定义	Undefined

② Control settings

Switch the control mode, customize C1\C2 buttons and match RC with drone.

26 Flight settings

Set altitude/distance limit, return altitude and visual obstacle avoidance.

② Camera settings

Set preview resolution ratio, video resolution ratio, photo resolution ratio and storage.

28 General settings

Set the grid, sound, param units, magnetometer, calibrate map coordinates and view drone information.

Media

The user can view downloaded photos and videos through the media center, or <u>edit photos</u> and videos <u>using</u> the appropriate editor. The<u>se</u> edited works can <u>then</u> be shared to social networks.


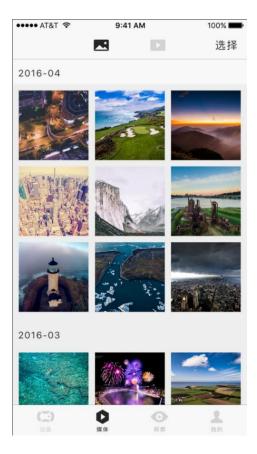


Photo editing:


Retouch and Color Correction

11.5

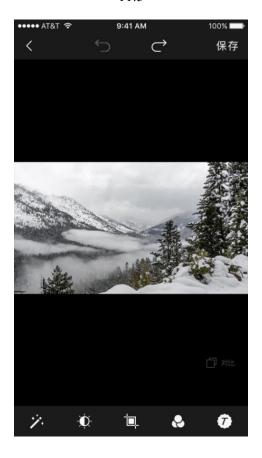

Video editing:

 $Single-video\ editing,\ multi-video\ stitching,\ and \underline{adding\ video\ themes}\ (filter+music)$

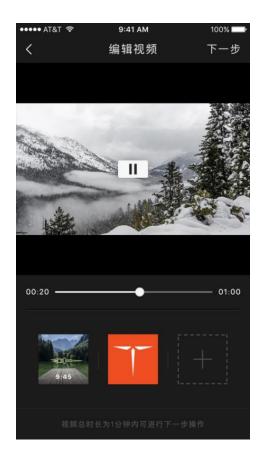

Explore

The Explore interface shows the wonderful aerial <u>artworks</u> uploaded by the user. After uploading <u>is</u> successful, the works will be synchronously shared on social media platforms.



Sharing:



X The supported third-party platforms will be added continuously <u>as the app is</u> upgraded. Please refer to the latest APP vision.

Me

In the GDU Personal Center, the user can modify the <u>ir</u> personal information, view the <u>ir</u> published works and collected favorites and visit the Official GDU Store.



- * The language of the app interface should be the same as the system language of the mobile device.
 Change the system language of the mobile device before changing the interface language.
- **X** At present, the <a href="map: interface only supports Chinese Simplified and English. The language package will be added later, and please refer to the latest APP version."

Flight

Preflight Check

- Check all parts of the aircraft before each flight. If there is any damage, please repair/replace before trying to fly the aircraft
- Check whether the aircraft battery, remote control and mobile phone have sufficient power.
- Ensure that the arm and landing pad have been <u>fully</u> extended in place and the propeller has been installed securely.

- Check whether the remote controller is properly connected to the aircraft.
- Always operate with the latest firmware. And check whether the GDU Mini APP and the remote controller are connected normally.
- Check whether the motor and gimbal camera work normally after the aircraft is started.

Magnetometer Calibration

Calibrate the magnetometer according to the following procedures in <u>an</u> open space. For more information, watch the related teaching video.

Steps:

- 1. Power on the remote control and then the aircraft, then connect the mobile phone to the remote controller. At this time, the aircraft will begin its self-check, accompanied by a beeping sound.
- 2. After the beep stops, click on APP, and select page of "General Settings"; click "Calibrate" on the right; it enters into mode of compass calibration when the yellow light keeps on, the magnetometer calibration mode is enabled.



通用设置	General Settings
显示网格	Grid
音效提示	Sound
参数单位	Param units
磁力计	Magnetometer
飞行器信息	Drone information
公制	Metric/Imperial



飞机状态	Drone Status
自检状态	Self-check status
告鑒状态	Warmings
正常	Normal
2告警	2 alarm
遥控器电量低	Low controller battery
GPS很够	Weak GPS signal
操控模式	Flight mode
经典	Classic
飞行模式	Flight mode
标准模式	Standard mode
控制手型	Control Mode
美国手	American (Mode 1)
磁力计	Magnetometer
正常	Normal
校磁	Calibrate

禁飞区	NFZ (No Fly Zone)
禁飞区外	Outside of the NFZ (No Fly Zone)

3. Start magnetometer calibration. Hold the aircraft and rotate it clock-wisely and horizontally. Observe the color of the LED indicator light in the aircraft and go to the next step when the LED indicator turns solid white light. Otherwise, please return to the step 2.



请远离金属或带磁、带电物体,并使飞行器离地1.5米左右的距离	Keep the aircraft away from
	metal, magnetic materials,
	or live objects, and at about
	1.5_meters above the ground.
OTEN THE RESIDENCE OF THE PROPERTY OF THE PROP	CTED 1. 1
STEP1 请按照图像提示,水平旋转飞行器	STEP 1: horizontally rotate
	the aircraft according to the_
	displayed image prompts.
校准中	<u>Calibration in progress</u>

4. Hold the aircraft <u>carefully</u>. With the nose <u>facing</u> downward, rotate the aircraft clockwise_<u>vertically</u> and observe the <u>aircraft's</u> indicators. If the tail indicator is solid green, <u>vertical</u> magnetometer calibration_is <u>successful</u>. Otherwise, magnetometer calibration failed, please return to Step 2.



请远离金属或带磁、带电物体,并使飞行器离地1.5米左右的距离	Keep the aircraft away from metal, magnetic, or live object and at about 1.5 m above the ground.
STEP2 请按照图像所示,竖直旋转飞行器	STEP 2: vertically rotate the aircraft according to the displayed image prompts.
校准中	Calibration in progress

- **X** Do not move the aircraft while it is inself-check.
- X Calibrate the magnetometer before the <u>aircraft's</u> first use or <u>after any</u> significant change in flight area. Otherwise, the aircraft will not be unlocked for flight.
- X Calibrate the magnetometer in cases of serious drift or if the aircraft fails to fly along a straight line.
- Monot calibrate the magnetometer indoors or near <u>large</u> metal objects, or in the place with strong electric and magnetic fields.
- **X** Do not **touch** mobile phones, watches, keys, or other metal objects while calibrating the magnetometer.

General Flight Operations

Select <u>a</u> flat and open <u>space</u>, and turn on the power of <u>both</u> the remote controller and aircraft. After the magnetometer is calibrated successfully, the indicator of the aircraft will become green. The aircraft <u>should</u> be kept horizontal, and the user should face the tail of the aircraft.

Manual Take-off/Landing

Unlock the aircraft by pushing the sticks down inward. After the motor is started, release two sticks at the same time, and slowly push the throttle up or press the Takeoff button. The aircraft will then take off.

解锁:





(内八字解锁飞行器)

起飞:



① 缓慢向上推动油门杆



② 按遥控器上一键起飞按键

解锁:	Unlock:

(内八字解锁飞行器)	(Unlock the aircraft by pushing the sticks down inward)
起飞:	Takeoff:
缓慢向上推动油门杆	slowly push the throttle up
按遥控器上一键起飞按键	Press the Takeoff button on the remote controller

During the flight, push the throttle downward slowly and the aircraft will land slowly. At this time, push the throttle to its lowest place and hold for two seconds. The motor will stop and then loosen the throttle to lock the aircraft.

降落:



① 缓慢向下推动油门杆至 飞行器落地,电机停转



② 按遥控器上一键返航按键



③ 按遥控器上垂直降落按键

降落:	Landing:
① 缓慢向下推动油门杆至 飞行器落地,电机停转	(i) Slowly push the throttle down until the aircraft lands onto the ground and the motor stops running.
② 按遥控器上一键返航 按键	(ii) Press the RTH button on the remote controller.
③ 按遥控器上垂直降落按键	(iii) Press the Vertical Landing button on the remote controller.

Automatic Take-off/Landing

The aircraft must fly within 80m of the controller if being piloted using the GDU Mini APP. Operating steps:

- 1. Power on the aircraft, and connect the mobile phone to aircraft. WIFI: GDU-02-A-xxx; password: 12345678.
 - 2. Run GDU Mini APP. Click "Start" to enter the flight interface.

- 3. Conduct pre-flight check according to the prompts.
- 4. Press the Takeoff button and confirm that the safety takeoff conditions <u>have been</u> met. The aircraft will hover at 1.5_meters above the ground. At the same time, the virtual sticks will appear in the interface.

Landing

- 1. Click the RTH or Vertical Landing button and confirm that the safety landing conditions have been.met.before.landing.
 - 2. The user can click "\overline{\mathbb{N}}" in the screen to exit landing.
 - 3. The aircraft will land on the ground, and the motor will automatically stop running.
 - 4. Power off the aircraft.
- In case of <u>emergency</u> in the air, the stick can <u>issue an</u> emergency stop, which will result in the aircraft_falling to the ground.
- **X** If flight is controlled by the controller, <u>it</u> can be connected <u>to a mobile phone</u> for real-time viewing of the flight interface.
- **<u>Marcher Solution</u>** X Mini APP is only applicable to O2 products.
- ****** Before the flight, please put the head of the aircraft forward and keep over 10 feet away from the aircraft.
- X Do not unlock the aircraft on steep slopes or hillsides.

Technical Parameters

• Aircraft

Takeoff weight (excluding hood) 730g

Takeoff weight (including hood) 846g

Maximum ascend speed 5m/s (sport mode)

Maximum descend speed 3m/s

Maximum horizontal speed 15m/s (sport mode, in windless condition above

sea level)

Maximum flight altitude 3500m

Maximum hovering time 20min (in windless condition)

Operating temperature 0°C to 40°C

Satellite positioning module GPS/GLONASS, dual-mode

•Gimbal camera

Controllable angle range Pitch: -90° to 30°

Roll: -30° to 30°

Yaw: -30° to 30°

•Forward vision system

Sensing range 0.5-15m

Operating condition Obstacles with clear texture and adequate lighting

conditions (>15lux)

• Downward vision system

Speed measurement range Flight speed: ≤10m/S (at 2m height, with adequate

light)

Height measurement range 0.3-3 m

Accurate hovering range 0.3-13 m

Operating environment Clear texture on the ground and adequate lighting

conditions (>15lux)

• Camera

Image sensor 1/3-inch CMOS with 13M effective pixels

Lens FOV 79.8° equivalent focal length 25.5 mm F/2.2

Distortion <1.5%

ISO range Auto 100 - 1600

Electronic shutter speed Auto

Maximum photo resolution 4208*3120

Video resolution 4K: 3840×2160 @ 25 fps

1080P: 1920×1080 @ 30fps

720P: 1280×720 @ 30fps

Image format JPG

Video format MP4

Built-in memory: 16G (O₂) or 32G (O₂Plus)

• Remote controller

Operating frequency 5.8GHz (O₂) or 2.4GHz (O₂Plus and O₂X)

Video transmission distance 1km (O₂) or 7km (O₂Plus)

Operating temperature $0 \text{ to } 40^{\circ}\text{C}$

Battery 1200mAh

Operating voltage 7.6V

USB type Lightning, Micro USB and Type C

• Charger

Voltage 13.05 V

Rated power 39.15 W

• Battery

Capacity 4000mAh

Voltage 11.4 V

Type LiPo 3S

Energy 45.6Wh

Overall weight About 283g

Maximum charging power 78W

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.