

# MX-SERIES

*Introducing EZ Connect*

## SERVICE MANUAL



 **Proxess**

To learn more: visit [www.proxess.com](http://www.proxess.com)  
or call 303-317-6656

# TABLE OF CONTENTS

<b><u>INTRODUCTION</u></b>	<b><u>3</u></b>
DOCUMENTATION PACKAGE	3
CERTIFICATIONS AND STANDARDS	3
TECHNICAL SUPPORT	4
<b><u>FUNCTIONS</u></b>	<b><u>4</u></b>
LOCK FUNCTIONS LETTER CHART	4
<b><u>LOCK PARTS</u></b>	<b><u>5</u></b>
PARTS BLOWUP	5
PARTS NUMBER CHART	5
CASE AND STRIKE DIMENSIONS	6
CYLINDER/KEYING	6
TRIM PARTS	7
<b><u>MAINTENANCE</u></b>	<b><u>7</u></b>
TOOLS FOR MAINTENANCE	7
TROUBLESHOOTING HARDWARE	8
<b><u>INSTALLATION MANUAL</u></b>	<b><u>9</u></b>
MORTISE INSTALLATION DOOR PREP	10
MORTISE INTALLATION INSTRUCTIONS	12
MORTISE INSTALLATION TEMPLATE	21
<b><u>ADDITIONAL RESOURCES</u></b>	<b><u>22</u></b>
SERVICE EQUIPMENT	22
SOFTWARE SOLUTIONS	23
<b><u>FCC Staatement</u></b>	<b><u>24</u></b>

## COPYRIGHT

Copyright ©2018 Proxess, LLC. All rights reserved. Printed in the United States of America. Information in this document is subject to change without notice and does not represent a commitment on the part of Proxess, LLC. The software described in this document are furnished under a license agreement or nondisclosure agreement. This publication is intended to be an accurate description and set of instructions pertaining to its subject matter. However, as with any publication of this complexity, errors or omissions are possible. Please call Proxess corporate offices at (303) 317-6656 if you see any errors or have any questions. No part of this manual and/or databases may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose, without the express written permission of Proxess, LLC. This document is distributed as is, without warranty of any kind, either express or implied, respecting the contents of this book, including but not limited to implied warranties for the publication's quality, performance, merchantability, or fitness for any particular purpose. Neither Proxess, LLC nor its dealers or distributors shall be liable to the user or any other person or entity with respect to any liability, loss, or damage caused or alleged to be caused directly or indirectly by this publication.

## INTRODUCTION

The *Proxess MX-Series Service Manual* contains important information to assist you in maintaining your Proxess Mortise Lockset.

## CERTIFICATIONS AND STANDARD

- ANSI/BHMA A156.25 (Indoor/Outdoor)
- ANSI/BHMA A156.2 Grade 1
- ULC S319 PDR
- FCC Part 15
- RoHS
- ULC Canada
- UL10C Fire-Rated
- UL10B Neutral Pressure Rated
- ADA Compliant
- Industry Canada (IC)

## TECHNICAL SUPPORT

The first source for technical answers is this MX Series Service Manual. All documentation and training materials are also available on our website: [www.proxess.com](http://www.proxess.com). If you are not able to find an answer in this manual, contact your local Proxess Representative. If you do not know your local Proxess Representative, contact the Customer Service Department at Proxess (303)-317-6656.


## LOCK FUNCTIONS

Mortise Lock Functions			
Name	Similar ANSI # Mech	Description	Proxess Electronic Equivalent Function
Entrance	F109	Turn/Push button locking. Pushing and turning button on inside locks outside knob/lever requiring use of a key until button is manually unlocked. Push button locking. Pushing button locks the outside knob/lever until unlocked by key or by turning the inside lever/knob. Inside knob/lever always free.	Enable toggle schedule and double present credential to outside reader to lock/unlock door
Storeroom	F86	Outside knob/lever always rigid. Key required for entry. Inside always free.	A valid credential should provide momentary unlocking and allow entry by that user, with the latch relocking in an administrator defined time (usually 5-8 seconds)..
Office	F82	Push button locking. Button on inside locks outside knob/lever until unlocked by key, or by rotating the inside knob/lever. Inside knob/lever always free. Deadlocking latch bolt.	A valid credential should provide momentary unlocking and allow entry by that user, with the latch relocking in an administrator defined time (usually 5-8 seconds)..
Classroom no Lockdown	F84	Classroom/Office or Utility Room. Key locks/unlock outer knob or lever. Inside always free.	Enable toggle schedule and double present credential to outside reader to lock/unlock door.
Classroom w/Lockdown (Intruder)	F110	Deadlocking latch bolt operated by lever from either side. Key either inside or outside locks or unlocks outside lever. Inside lever always operates latch bolt.	Enable toggle schedule and double present credential to outside reader to lock/unlock door. Lockdown performed by gesture.
Classroom w/Lockdown (Intruder)	F110	Deadlocking latch bolt operated by lever from either side. Key either inside or outside locks or unlocks outside lever. Inside lever always operates latch bolt.	Enable toggle schedule and double present credential to outside reader to lock/unlock door. Lockdown performed by gesture.
Classroom w/Holdback	F85	Deadlocking latch bolt by knobs. Outside knob is locked by key in outside knob. Inside knob is always free. Latch may be held back by depressing latch and rotating key.	Enable toggle schedule and double present credential to outside reader to lock/unlock door. (electronic equivalent to F84, because unlocked door allows free entry)
Canadian Function		Deadlocking latch bolt by levers except when outside lever is locked by push button. Outside lever locked by pressing push button only.	Future Use Function
Patio	F77	Outside knob/lever locked by push button on inside knob/lever. Rotating inside knob/lever or closing door releases/unlocks button. Emergency release in outside knob/lever.	Future Use Function
Secured Privacy		Outside knob/lever locked by pushbutton on inside knob/lever. Rotating inside knob/lever or closing door releases/unlocks button. Emergency push button in outside knob unlocks door.	Future Use Function
Hotel Guest Room	F93	Outside knob fixed. Entrance by key only. Push button in inside knob activates visual occupancy indicator, allowing only emergency master key to operate. Rotation of inside spanner button provides lockout feature by keeping indicator projected.	A valid credential should provide momentary unlocking and allow entry by that user, with the latch relocking in an administrator defined time (no visual indicators)
Dormitory	F90	Deadlocking latch bolt by levers except when locked by push button in inside lever. Key in outside lever locks or unlocks outside lever and releases the button. Closing door releases push button. Inside lever always free.	Enable toggle schedule and double present credential to outside reader to lock/unlock door. (Closing door will NOT unlock the outside lever)
Service Station	F92	Deadlocking latch bolt by lever from either side except when outside lever is locked by Universal push button in inside lever. Inside lever is always free. When outside lever is locked, latch bolt may be retracted by turning key or rotating inside lever. Turning key, rotating inside lever or closing door releases Universal push button and outside lever, except when Universal push button has been rotated to a position which keeps the outside lever locked at all times.	Enable toggle schedule and double present credential to outside reader to lock/unlock door.
Exit Latch	F89	Deadlocking latch bolt by inside lever. Outside lever inoperable.	Mechanical lockset
Privacy	F76	Outside knob/lever locked by pushbutton on inside knob/lever. Rotating inside knob/lever or closing door releases/unlocks button. Emergency push button in outside knob unlocks door.	Mechanical lockset
Passage	F75	Doors that don't require locking.	Mechanical lockset

# LOCK PARTS

## PARTS BLOWUP

### DEADBOLT (B) FUNCTIONS

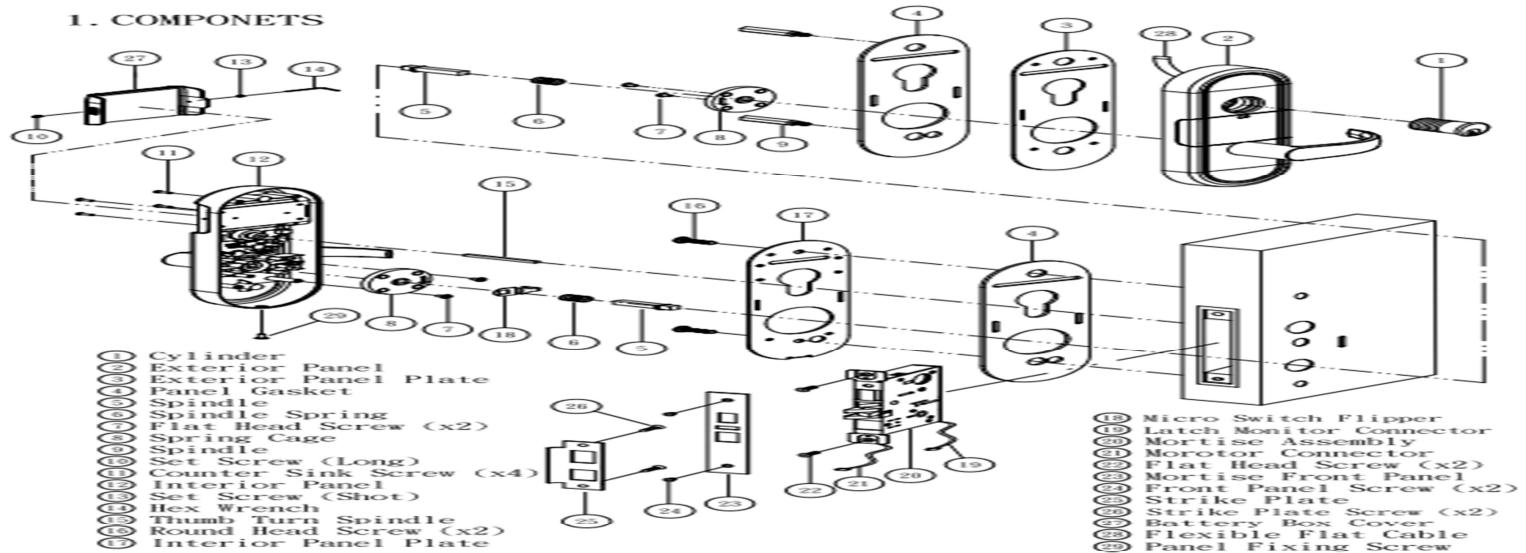


## PART NUMBERS AND DESCRIPTIONS

ITEM	PART NUMBER	DESCRIPTION
1	M00-0031A	Cylinder
2	M00-0006A	Exterior Trim
3	M00-0018A	Exterior Backplate
4	M00-0020A	Gasket
5	M00-0013A	Spindle
6	M00-0014A	Spindle Spring
7	M00-0033A	Flat Head Screw (x2)
8	M00-0015A	Spring Cage
9	M00-0013A	Spindle
10	M00-0035A	Set Screw (Long)
11	M00-0037A	Counter Sink Screw (x4)
12	M00-0007A	Interior Trim
13	M00-0036A	Set Screw (Short)
14	M00-0042A	Hex Wrench
15	M00-0016A	Thumb Turn Spindle
16	M00-0038A	Round Hex Screw (x2)
17	M00-0017A	Interior Backplate
18	M00-0008A	Micro-Switch Flipper
19		Latch Monitor Connector

ITEM	PART NUMBER	DESCRIPTION
20	M01-0011A	Mortise Chassis for Bolt Functions
	M02-0011A	Mortise Chassis for Latch Only
21		Motor Connector
22	M00-0034A	Flat Head Screw (x2)
23	M01-0012A	Chassis Faceplate for Bolt Functions
	M02-0012A	Chassis Faceplate for Latch Only
24	M00-0039A	Front Panel Screw (x2)
25	M01-0030A	Strike Plate for Bolt Functions
	M02-0030A	Strike Plate for Latch Only
26	M00-0040A	Strike Plate Screw (x2)
27	M00-0005A	Battery Cover
28	M00-0021B	6-Pin Cable
29	M00-0041A	Trim Fixing Screw
30	M06-0001A	for Angled Return
	M08-0001A	For Curved Return

## PROXESS MX CASE AND STRIKE DIMENSIONS

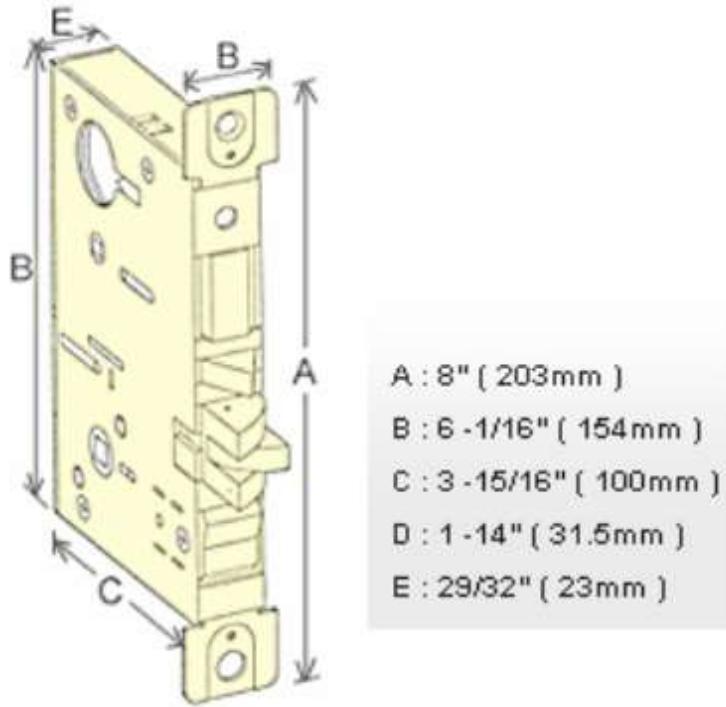


## CYLINDER/KEYING

Due to the extra thick trim that houses RF and battery components, Proxess mortise locks will require special length (1 3/4 inch) cylinders. When using other manufacturers' cylinders, ensure that you have the proper 1 3/4 inch long cylinder.


Proxess locks are supplied with only small format removable cores and we strongly recommend that these locks are keyed differently than other cylinders in the existing lock system. Keys for Proxess locks are meant to be used only in emergency situations that require a mechanical key bypass. Proxess software monitors when a mechanical key is used. Proxess supplies custom keyed cores to match existing Proxess locks/systems. You will see a core mark on the face of the core. Simply provide your account name and this core mark in order to receive custom "matching" keying. Most Proxess cores contain several "spool" segments standard as a safeguard to resist picking. The software will notify the administrator of entry audits when access was gained by a key or in the unlikely event the lock was picked.

## TRIM PARTS

### STRIKE PLATES



SL



SB

ITEM	PART NUMBER	DESCRIPTION
SL	M02-0030A	Latch only strike plate
SB	M01-0030A	Bolt and latch strike plate

### LEVERS



6




8


ITEM	PART NUMBER	DESCRIPTION
6	M06-0001A	Angled Return
8	M08-0001A	Curved Return

## MAINTENANCE


### TOOLS FOR MAINTENANCE

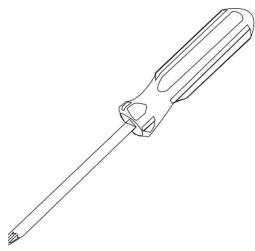

Philips Screwdriver, #2



Core Turn Knob Tool

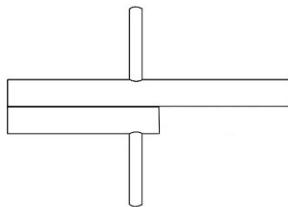

Cylinder and Core Testing Wrench

## TROUBLESHOOTING HARDWARE

The following table illustrates possible causes and solutions for common problems after installing the lock hardware.

PROBLEM	CAUSE	SOLUTION
<b>No beeps or blinks when the batteries are installed</b>	Improper plug connection  Reversed battery or dead batteries  Pinched wires or damaged cabling	Check all wiring and connectors to make sure the connectors are secure, and the cable is not pinched  Check the position of the batteries to make sure they are seated correctly  Ensure the internal cabling is routed properly and cables have not been damaged during assembly
<b>LED does not beep or blink on exterior when presented</b>	Batteries are dead and need to be replaced	Replace the batteries, synchronize the lock with the MPD and try the credential again
<b>MPD (Mobile phone device) does not connect to the lock</b>	Bluetooth is not enabled on the MPD	Enable Bluetooth in Settings
<b>Red LED When credential is presented (Access Denied).</b>	Improper Credential Permissions	Ensure the credential has appropriate access to the door.
	Lockset is in Lockdown	Have administrator take the lockset out of lockdown, or program the necessary credential to have "Pass-Through" privileges. (See software manual).
<b>MPD does not connect to the lock</b>	Bluetooth is not enabled on the MPD	Enable Bluetooth in Settings

### The Proxess Mortise lockset will indicate certain conditions with a series of Beeps and Blinks.

Operation indicators (Usually non-repeating)	Description
3 Red Beep/Blinks	The lockset has been set to toggle unlocked.
3 Green Beep/Blinks	The lockset has been set to toggle locked.
Warning Indicators (Will continue until problem resolved)	Description
3 Red Beeps (No Beeping)	Battery Low
3 Amber Beep/Blinks	Battery Critical
3 Double-Red Beep/Blinks	Battery Critical
3 Double-Red Beep/Blinks	Lockset Not Synchronized
Start-Up Sequence Beep/Blinks	
If a problem with the lockset occurs there may be a sequence of Beep/Blink indicators during start-up that will help to determine the problem. These will be 3 short Beep/Blinks followed by a series of longer Beep/Blinks. Please note them and contact a Proxess customer service representative.	

# INSTALLATION INSTRUCTIONS

The following pages contain the Installation Manual for the MX- Series Mortise Lock

## A. CHECKLIST (4 AA BATTERIES INCLUDED)

**Parts List: Each Proxess MX-Series lockset includes**


- **Door Preparation Template**
- **Mortise Lever Lockset with Installation Instructions**
  - **Exterior lock assembly (include housing, lever and cylinder drive unit)**
  - **Interior lock assembly**
  - **Cylinder**
- **Hardware box includes:**
  - **ASA Strike Plate (Deadbolt or Latch Only)**
  - **Spindle Pack Includes:**
    - **Spindle x4 pcs**
    - **Thumb Turn Spindle**
    - **Micro Switch CAM**
    - **Spindle Spring**
    - **Round Head Screw x2 pcs**
  - **Spring Cage Pack Includes:**
    - **Spring Cage x2 pcs**
    - **Flat Head Screw x4 pcs**
  - **Screw Pack includes:**
    - **(SB1) Set Screw (Long)**
    - **(SB2) Set Screw (Short)**
    - **(SB3) Counter Sink Screw x4 pcs**
    - **(SB4) Front Panel Screw x2 pcs**
    - **(SB5) Strike Plate Screw x2 pcs**
    - **(SB6) Panel Set Screw**
    - **(SB7) Hex Wrench**

## B. Door Preparation

Measure the desired height from the floor to the door handle.

Use the Mortise Lock Installation Template for prepping the Mortise door holes.



- Using the provided template, drill out the proper holes in the door.
  - Use a  $\frac{3}{4}$  inch hole saw to drill the hole for routing the cables through. If you do not have a hole saw, use a  $\frac{1}{2}$  inch drill bit and drill two holes.

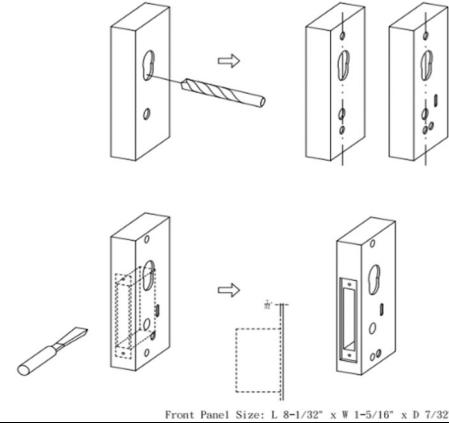

## Lock Handing

Note: The lock is right handed by default. To rehand the lock, you will need to change the lock bolt orientation.



Indicates Key Side

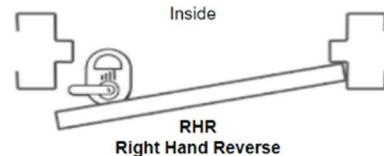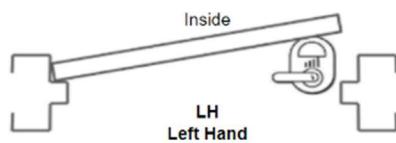

## C. Left Hand and Right Hand Reverse Set Up (See D for RH and LHR Set Up)



### C.1 Latchbolt Orientation Set up

- Remove the front panel set screw (24) and the front panel (23).
- Then, unscrew the latch set screw.
- Pull out the latchbolt, turn it  $180^\circ$ , and replace it in the chassis.
- Then, screw back in the set screw.

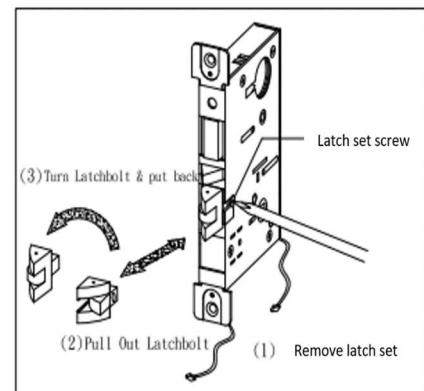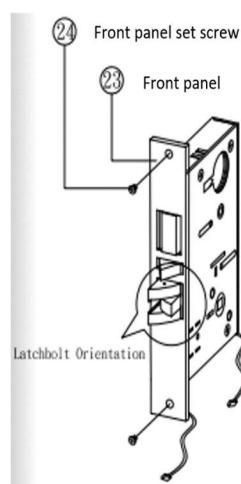

C.2 Remove Free Wheeling Lever Set Screw	C.3 Proper Spring Cage Orientation Set Up (For Left Hand or Right-Hand Reverse)
<p>See below. Note: arrow "B" must point down.</p> <p>Only remove the screw from the reader/ external side of the Mortise assembly.</p>	<ol style="list-style-type: none"> <li>1. For Exterior Panel Spring Cage- Place the spring cage on the exterior side of the trim. Arrow should point clockwise or in the direction you want the handle to engage the latch.</li> <li>2. Then, screw in the two set screws.</li> </ol> <p>For Interior Panel Spring Cage – Arrow should point counterclockwise.</p>

#### D. Right Hand and Left-Hand Reverse Setup

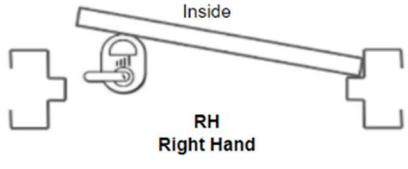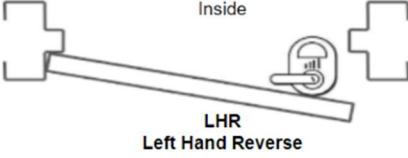 Indicates Key Side	
	
<b>D.1 Default factory assembly is set for both RH and LHR</b>	<b>D.2 Remove Free Wheeling Lever Set Screw</b>


<p><b>Do not remove the latchbolt.</b></p> <ol style="list-style-type: none"> <li>1. Remove the front panel set screw (24) and the front panel (23).</li> </ol>	<p>See below. Note: Arrow B must point down.</p> <p>Only remove the screw from the reader/ external side of the Mortise assembly.</p>
---	---

### D.3 Proper Spring Cage Orientation Set Up (For Right Hand or Left Hand Reverse)

The factory default setting will work with LHR and RH. The arrow should point in the direction you want the handle to engage with the latch.

For Exterior Panel Spring Cage – Arrow should point counterclockwise.



For Interior Panel Spring Cage – Arrow should point clockwise.

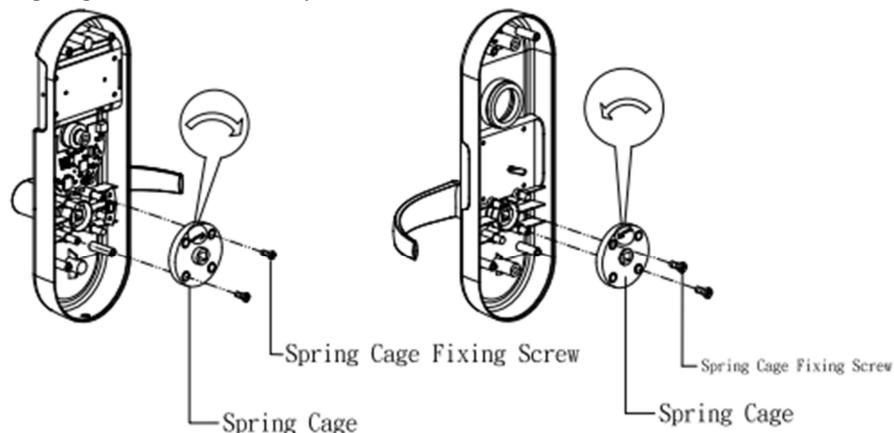

## Hardware Installation


### E. Mortise Chassis Installation

1. Route the cables through the door hole. Use pliers if necessary.
2. Slide Latch Monitoring Cable (19) and Motor Cable (20) through the door hole as shown.
3. Then, slide Mortise Lock chassis (20) into the door and screws (22) as shown (Do not fasten screws at this point). It may be easiest with a second person to hold the chassis.

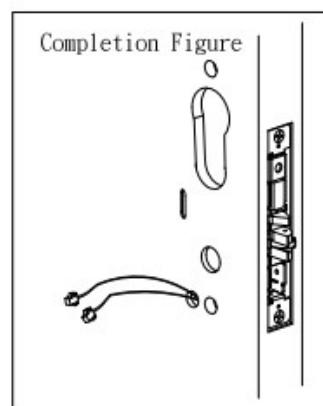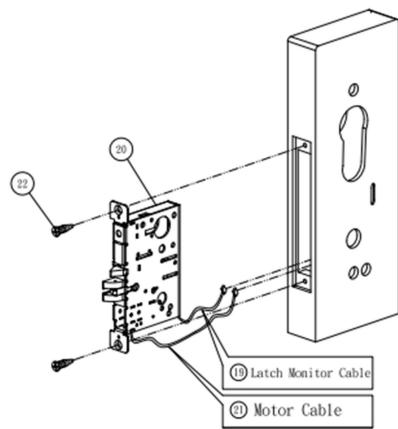


### F. External Panel Installation

Insert Hex Bolts (9) onto the Exterior Trim (2).

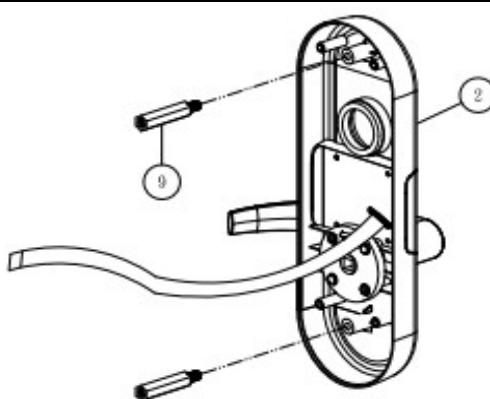

## F.1 External Panel Installation


1. Ensure Ribbon Cable is secure in Exterior Trim first. Note that cable cannot be folded.
2. Then install Exterior Backplate and Gasket onto the Exterior Trim.

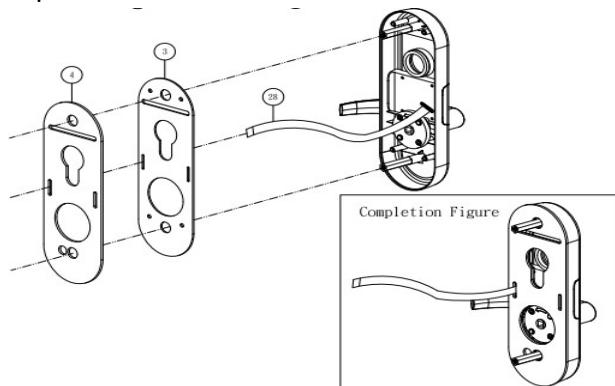

## F.2 Insert Spindle

1. Insert the spindle (5) and spindle spring (6) into the spring cage.

Ensure the lever rotates smoothly and drives the spindle properly.

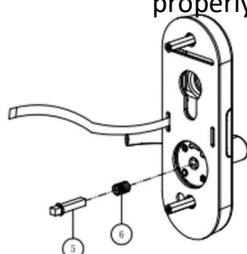


Having a hard time installing the spindle? Make sure the handle is 90° perpendicular to the trim in the desired orientation. Shifting the handle slightly may help particularly troublesome spindles.

NOTE: Pay close attention to the spring. The small spring is not attached to anything and can be easily misplaced.

## F.4 Insert the Exterior Panel Assembly into the door


(Ensure the handle moves freely)

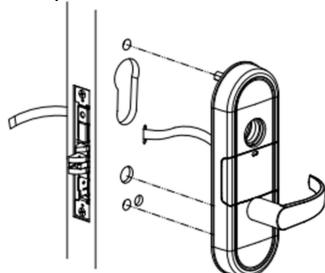

## F.3 Insert Ribbon Cable


1. Insert the ribbon cable into the oval opening on the side of the door.
2. Pull the ribbon cable through the other side of the door.


If necessary, use pliers to route the cable. Make sure the cable is not bent or pinched.

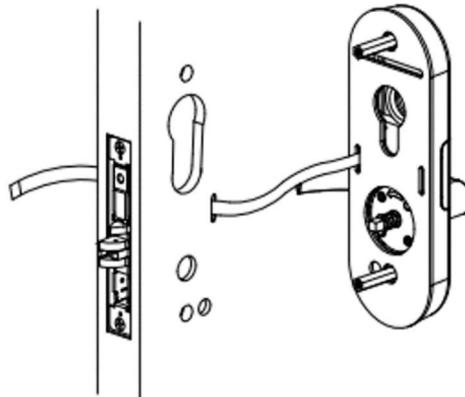


## F.5 Install Interior Backplate

1. Insert the ribbon cable into the Interior Gasket (4) and Interior Backplate (17).
2. Fasten the two set screws (16).

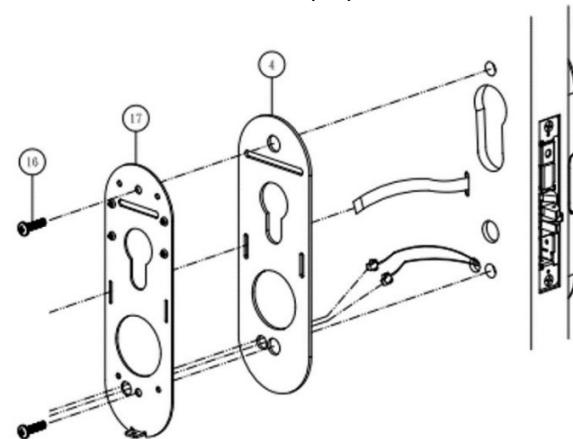

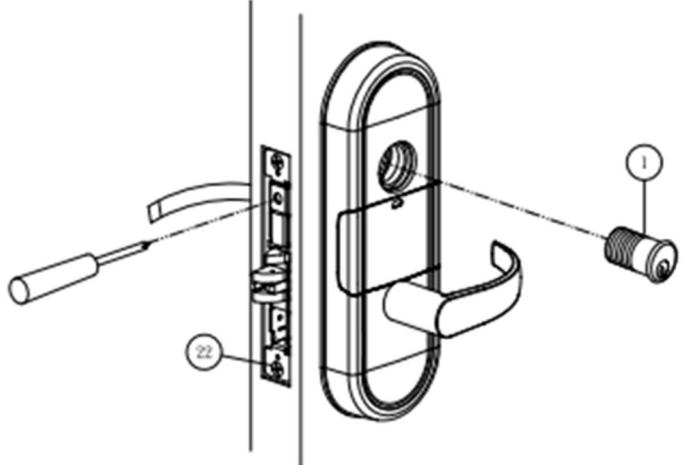F.6 Install Cylinder	F.7 Tighten Cylinder and Backplate
<ol style="list-style-type: none"> <li>1. Loosen the cylinder set screw in the mortise chassis to insert the cylinder.</li> <li>2. Insert the cylinder (1) into the front panel and ensure it sits flush with the front plate.</li> </ol>	<ol style="list-style-type: none"> <li>1. Insert the screwdriver into the side of the lock and tighten the cylinder.</li> <li>2. Then, tighten the mortise lock set screw (22).</li> <li>3. )Tighten interior backplate (17).</li> </ol> 


### Step F Completed

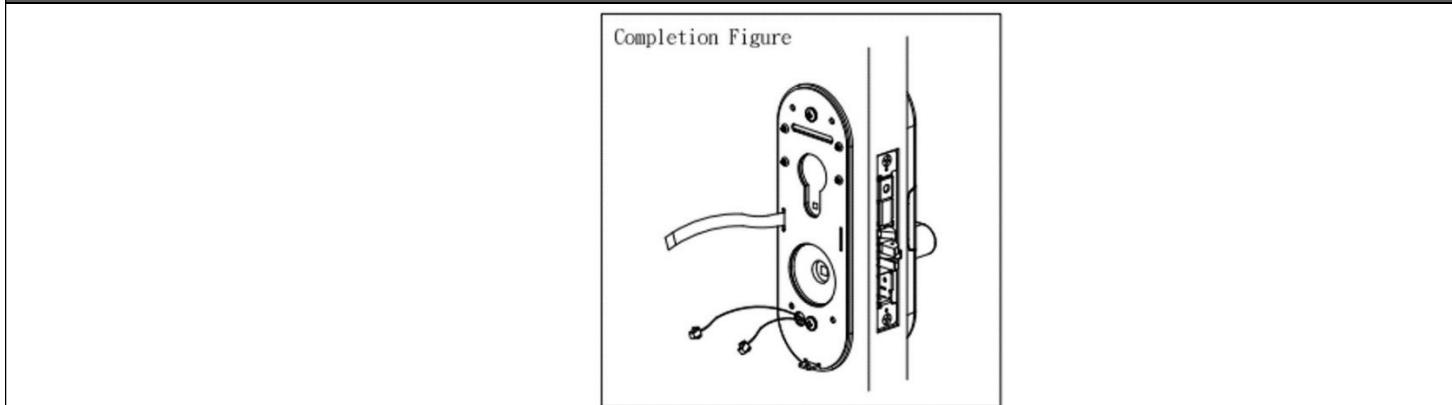


## G. Interior Assembly Preparation

### G.1 Remove Battery Cover

Use Hex Wrench (14) to loosen long (10) and short set screws (13).

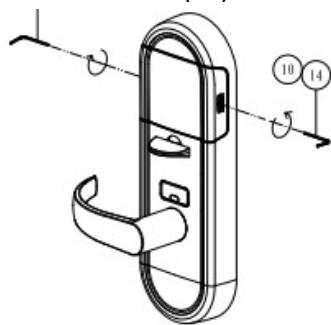


Next remove the battery cover (27).

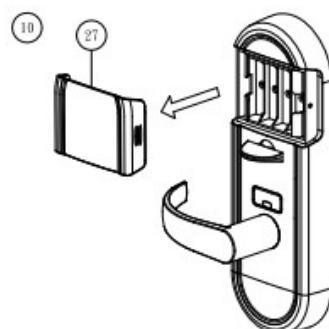


## G.2 Inserting Micro Switch CAM

1. Insert the Micro Switch Cam (18) on the spring cage as shown. Make sure the switch is engaged.
2. Then, move (18) to the right and align it with the spindle slot as shown.

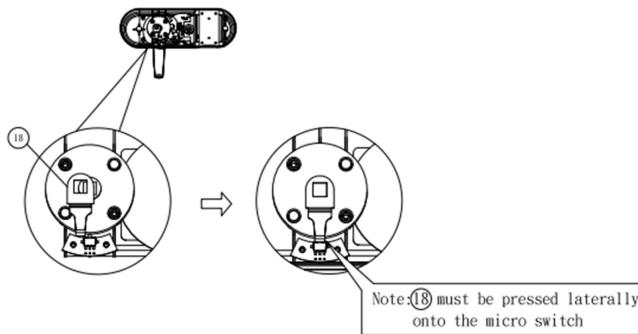

## G.3 Inserting Spindles


Insert spindle (5) and spring (6) into the spring cage as shown.

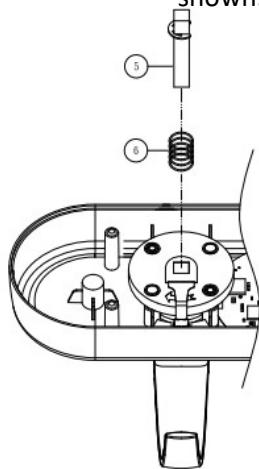


**Note: The spring is not attached to anything and can be easily misplaced. Use caution when installing the spring.**

## G.4 Engaging the Micro Switch

Turn the lever to make sure (18) is properly engaged with the Micro Switch.

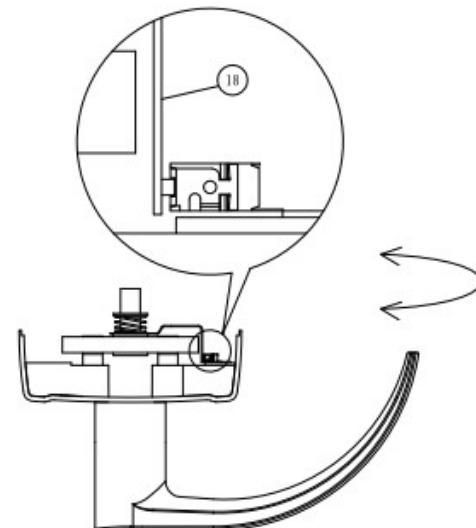


## Step G Completed

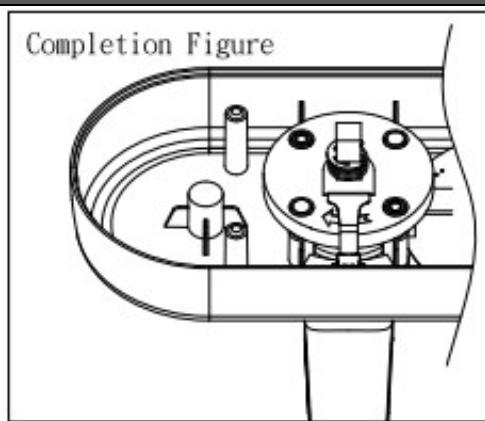

## **H. Interior Panel Installation**

### **H.1 Installing Thumb Turn Spindle and Connectors**

Insert Thumb Turn Spindle (15).

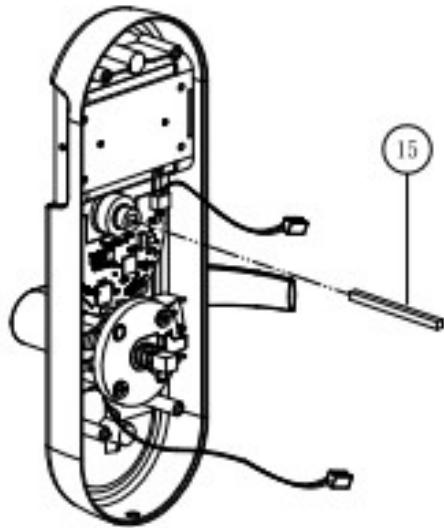

**H.2-3 Completed**

Completion Figure









**H.2 Then align the spindles with the chassis and place it onto the interior backplate.**

Ensure that the thumbturn is horizontal when the deadbolt is in, and vertical when the deadbolt is out/thrown.

**H.5 Insert the 4 battery compartment screws and bottom set screws to finish installing the interior trim.**

**H.4 Turn the lever to ensure proper latch engagement. The latchbolt should retract.**

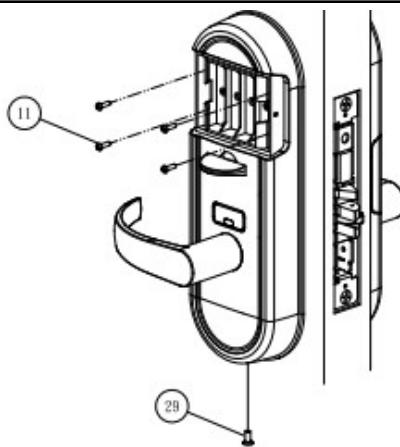

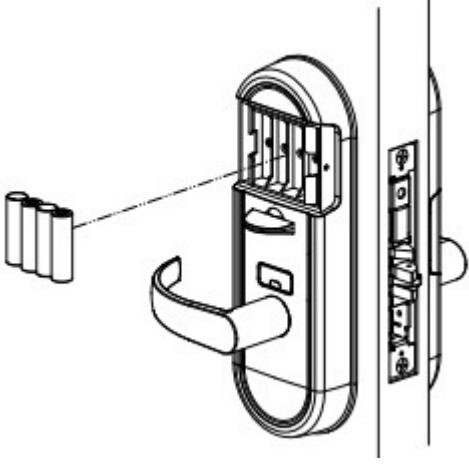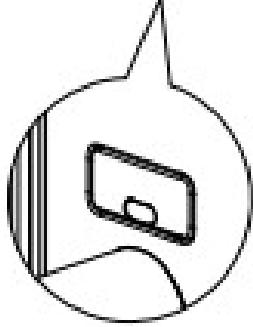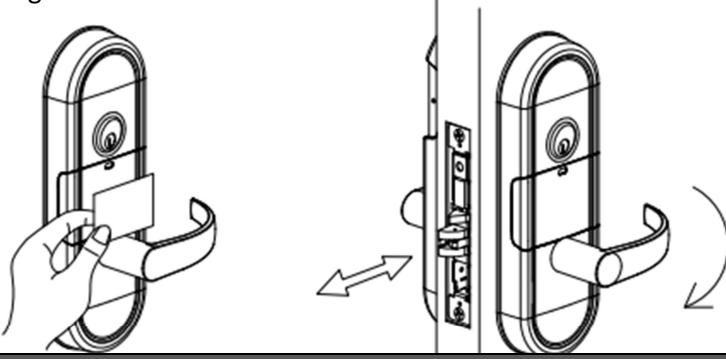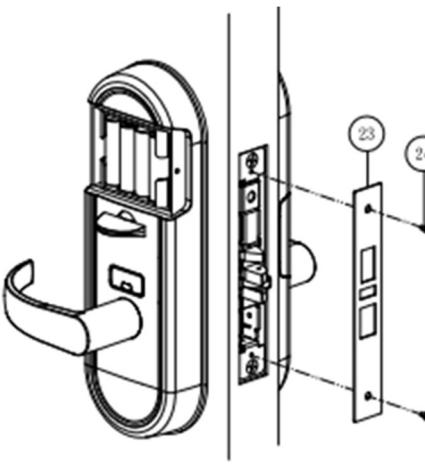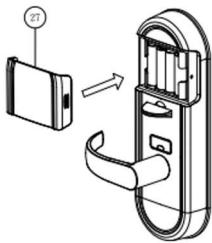
<b>I. Operation Test</b>	
<b>I.1 Insert AA Alkaline batteries (x4) into the battery compartment</b>	<b>I.2 Green light will turn on and you will hear a beep, indication that the power is on</b>
	 <b>I.3 Turn the lever and make sure the lever is free to rotate</b>
<b>I.4 Testing the Lock</b>	
<ol style="list-style-type: none"> <li>1. Take the credential, place it in front of the panel and wait for one second. The green light will flash and you should hear a beep.</li> <li>2. Turn the handle to actuate the latch and the door can be opened. After about 5-6 seconds, the door will automatically lock again.</li> </ol>	
<b>I.5 If the latch cannot be actuated, go back to I.1.</b>	
<b>I.6 Thumb turn lever function test (F15 only).</b>  Turn thumb turn lever, deadbolt latch will extend; deadbolt latch will work with Cylinder Emergency Key.	<b>I.7 Fasten mortise chassis plate on with the chassis plate screws after all function tests work properly.</b>
<b>I.8 Insert Battery Cover (27) onto the Exterior Trim.</b>	
<b>I.9 Tighten the Battery Cover into place.</b>	
	


## J. Strike Plate Installation

J.1 Use the template provided to create the strike plate mounting hole on the door frame.


J.2 Insert the strike plate set screws (25) and (26).

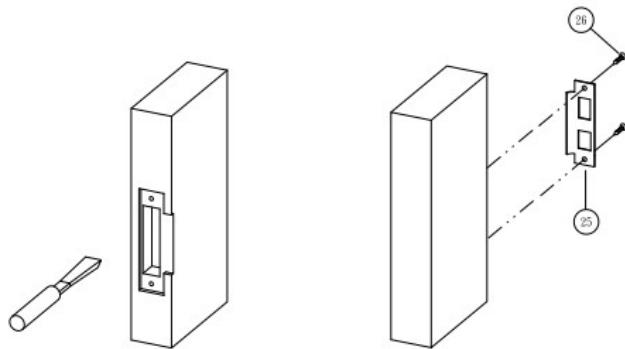

J.3 Repeat Section I.4 and Complete Installation.

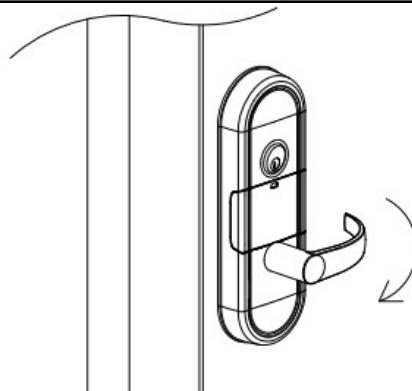


**INSTALLATION TEMPLATE – FOR REFERENCE ONLY:**  
*(USE THE TEMPLATE FROM MX INSTALLATION MANUAL FOR ACURATE DIMENSIONS)*

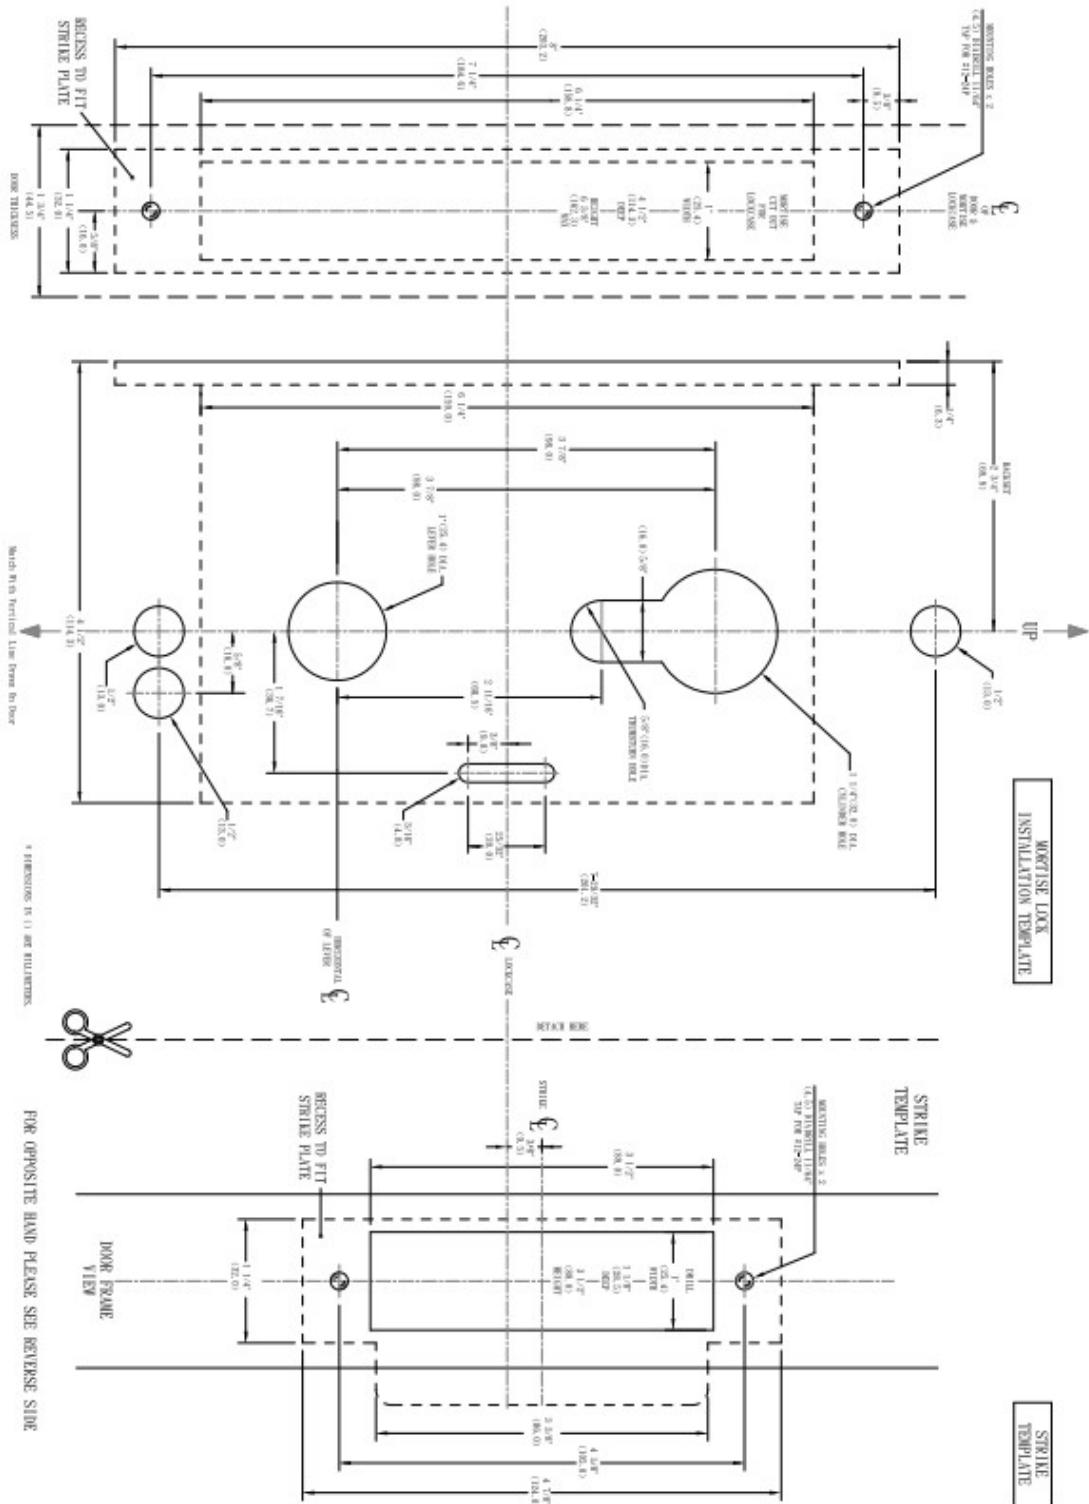

## ADDITIONAL RESOURCES

### SERVICE EQUIPMENT

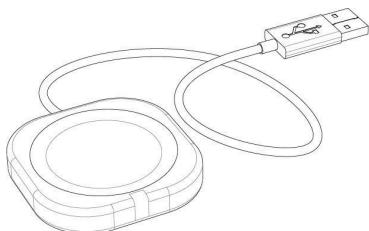

#### ENR™

##### ***Enrollment Reader and Programmer***


Proxess' ENR™ makes the credential enrollment process intuitive and simple. Just place a credential on the desktop reader and a pop-up window automatically appears. From here you can create a new user, assign this card to an existing user, or view the details of an existing cardholder.



#### NX™ Smart Credentials

##### ***Network on Card Smart Credentials***


Proxess systems utilize the most advanced and flexible credential technology in the industry, DESFire EV2, and add six layers of protection, encryption and mutual authentication, providing the most secure credentials in the industry.

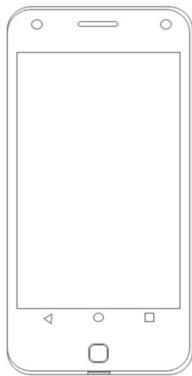

#### MPD Mobile Programming Device

##### ***Android Mobile Phone with no Sim Card***

The Mobile Programming Device is used with the Proxess LoxiQ™ software to build door groups, access profiles, time schedules, and so much more. It can also be used to assign high security Network on Card credentials to personalized profiles with the Proxess Enrollment Reader and On-the-Go Converter. Proxess software is currently compatible with only Android devices. However, we are excited to develop software with IOS capabilities. Please check our website for the latest capabilities for Proxess products.

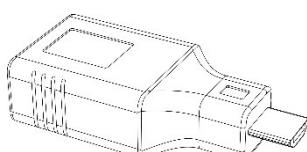

#### OTG On-the-Go Converter

The On-the-Go Converter is provided with the Mobile Programming Device and Enrollment Reader to assign credentials. Proxess offers OTG converters for both Micro USB and Type C devices.

*For additional information about service equipment and Proxess products, please visit our website:*

*[www.proxess.com](http://www.proxess.com)*

## SOFTWARE SOLUTIONS FOR LOCKSET PROGRAMMING

### LoxIQ™

LoxIQ™ is a software app created by Proxess, LLC. Instead of requiring all the expensive components of an access system (approx. \$3k/dr), LoxIQ™ requires only the locks, a phone, and a programmer. Although the system has the capability of unlimited doors and users, it is typically implemented in smaller systems of 100 doors/users or less...Expandable to full server system software.

For more information about LoxIQ™, please visit our website:

<http://www.proxess.com/Proxess/media/Proxess/Documents/loxIq-datasheet-20190114.pdf?ext=.pdf>

### ProxessIQ™

ProxessIQ™ is the scalable access control software, supporting Proxess intelligent wireless locksets and door controllers. A ProxessIQ™ system can begin with a single wire-free lockset and incrementally expand to an unlimited number of locations, doors and users.

For more information about ProxessIQ™, please visit our website:

<http://www.proxess.com/Proxess/media/Proxess/Documents/ProxessIQ-Scalable-ACS.pdf?ext=.pdf>

### Proxess Sync™

The Proxess Sync™ mobile phone App synchronizes changes from the AxessIQ™ software to LoxIQ™ locksets across the country. It is the simplest to use configuration App, requiring just a click to perform the synchronizations. Strictly a performance App, it is secure and uncompromising. All of the configuration changes are securely made on the PC software and the App user simply clicks to have the changes executed.

For more information about Proxess Sync™, please visit our website:

[http://www.proxess.com/Proxess/media/Proxess/Images/Solutions/Proxess-Sync-DS-Pg-1-\(1\).pdf?ext=.pdf](http://www.proxess.com/Proxess/media/Proxess/Images/Solutions/Proxess-Sync-DS-Pg-1-(1).pdf?ext=.pdf)

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

*This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.*

### User Manual Notice required by Section 8.4 of ISED RSS-Gen Issue 5

#### Industry Canada Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

#### Industrie Canada l'énoncé

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

FCC ID: 2AKUZPXB01

IC: 22335-PXH01

Product Marketing Name: MX-Series Mortise Lockset

Contains FCC ID: SH6MDBT50Q

Models (HVINS):

- PXH01-CX03-B (CX-Series Cylindrical Lockset)
- PXH01-CX03-DC (CX-Series Lockset)
- PXH01-MX02-B (MX-Series Mortise Lockset)
- PXH01-MX02-DC (MX-Series Mortise Lockset)

## UL STATEMENT (Pending)

Outside lever is normally locked. Inside lever always allows egress.

Unit shall not interfere with the operation of Panic Hardware.

Wireless communications, Wi-Fi, Bluetooth, Door Position, and Request to Exit features are not part of UL Listed product.

Tested to compliance with UL 294 5th Edition Class I.