

# WS0300 Professional WIFI Weather Station with Wireless 8 Channel Remote Monitoring User Manual

## 1.Introduction

Thank you for your purchase of the WS0300 Professional WIFI Wireless Weather station. The following user guide provides step by step instructions for installation, operation and troubleshooting.

## 2.Warnings

**!Warning:** Any metal object may attract a lightning strike, including your weather station mounting pole. Never install the weather station in a storm.



**!Warning:** Installing your weather station in a high location may result in injury or death. Perform as much of the initial check out and operation.






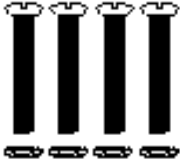
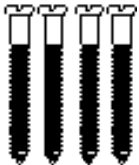
## 3.Getting Started



The WS0300 weather station consists of a display console (receiver), a sensor array with Integrated Outdoor Transmitter and mounting hardware.

### Parts List

The WS0300 weather station consists of the following parts (as referenced in Figure 1 ).

QTY	Item	Image
1	Display Console Frame Dimensions (LxHxW): 215X22X158mm LCD Dimensions (LxW): 170 x 125mm	
1	Integrated Outdoor Transmitter Dimensions (LxHxW) : 330x150x280mm	

QTY	Item	Image
1	Thermo-hygrometer transmitter (FT007TH) Dimensions (LxHxW): 114.5 x 50.0 x 19mm	
1	Foot Mounting (with pole insert) Dimensions: 84x 152 x 216mm	
1	Mounting Bracket Back Plate (pole mount) Dimensions: 76 x 102 x 38mm	
1	Mounting Pole Dimensions: 76 x 76 x 25mm	
2	Pole mounting nuts (M3) / bolts Ø3	
4	Pole mounting nuts (M5) / bolts (Ø5)	
4	Tapping screws	

QTY	Item	Image
1	Manual	
1	Power Adapter	


**Figure 1**

### 3.2 Recommend Tools

- Precision screwdriver (for small Phillips screws)
- Compass or GPS (for wind direction calibration)
- Adjustable Wrench
- Hammer and nail for hanging remote thermo-hygrometer transmitter.


### 3.3 Sensor Assembly Set Up

The following illustration shows the full segment for Thermo-Hygrometer , WIND,RAIN and UV INDEX sensor. purposes only ,as shown in Figure 2.

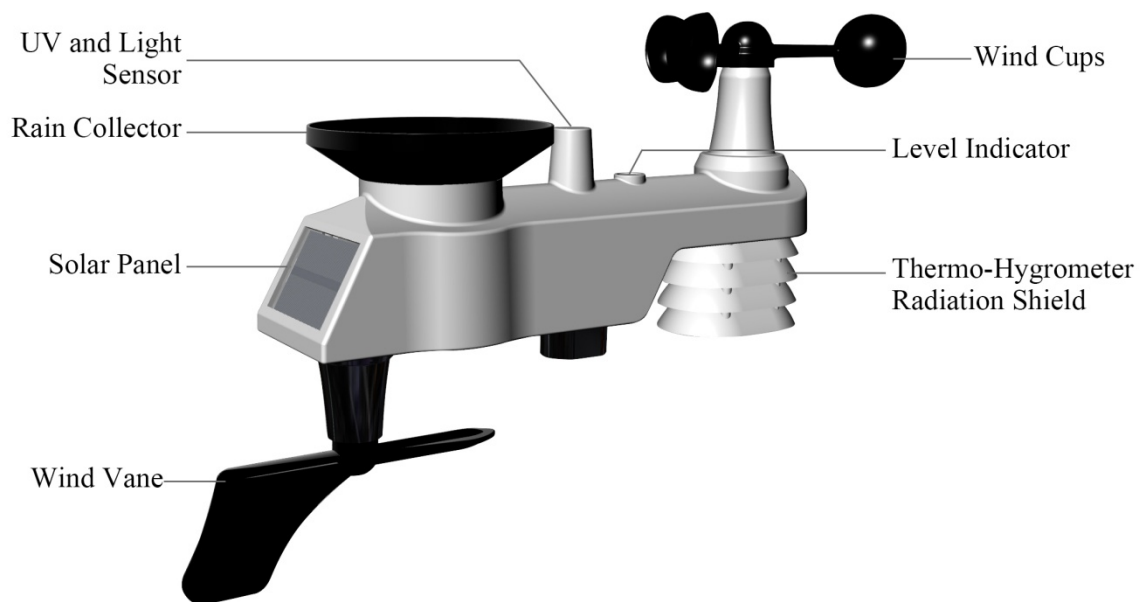

**Figure 2**

**3.3.1 Insert batteries into the transmitter.** Locate the battery door on the transmitter, push and open the battery compartment, as show in Figure 3.

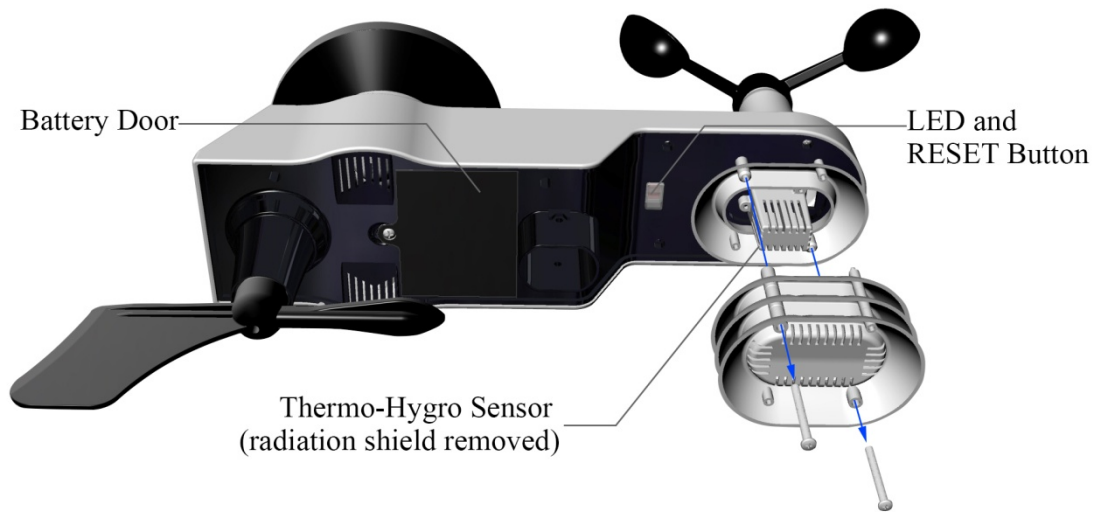

**Figure 3**

Remove the battery door on the back of the sensor by removing the set screw, as shown in Figure 4.




**Figure 4**


Inserting 3xAA batteries in the battery compartment, as show in Figure 5.




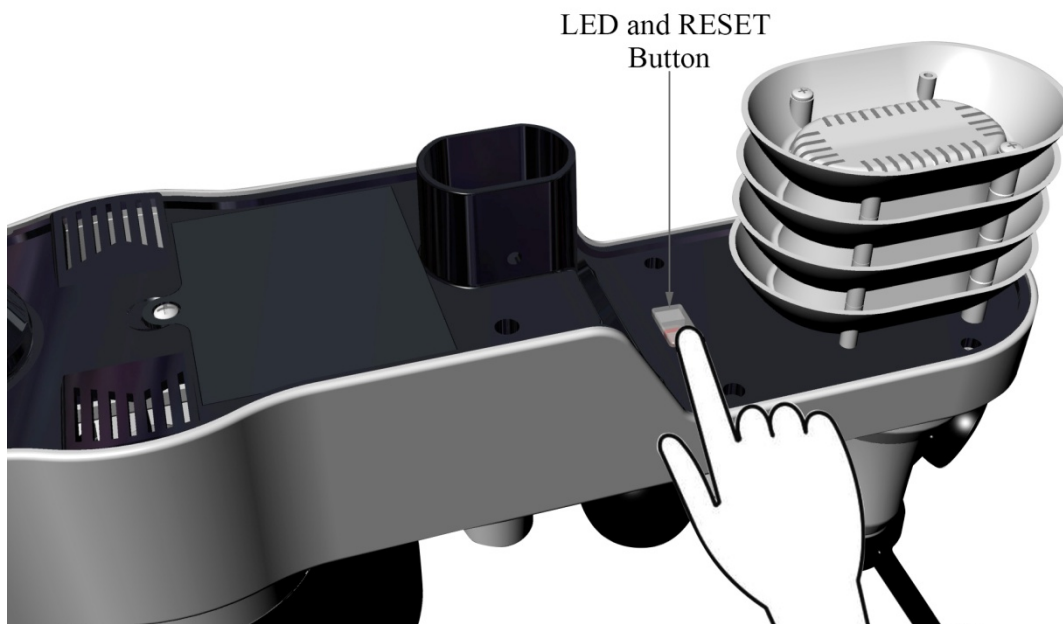
**Figure 5**

Close the battery door. Make sure the gasket (around the battery compartment) is properly seated in its trace prior to closing the door. Tighten the set screw.

 **Note:** Do not install the batteries backwards. You can permanently damage the sensors. The solar panel does not charge the batteries, so rechargeable batteries are not needed or recommended.


 **Note:** We recommend installing Lithium AA batteries for sensors. The sensor LED indicator will light for 3 seconds, and then flash once per 16 seconds thereafter. Each time it flashes, the sensor is transmitting data. Replace the battery door and push to tighten it.

 **Note:** If the sensor does not power up after inserting the batteries, press the reset button shown in Figure 6.



**Figure 6**

**3.3.2 Insert batteries into the thermo-hygrometer transmitter.** Remove the battery door on the back of the sensor by removing the set screw, as shown in Figure 7.

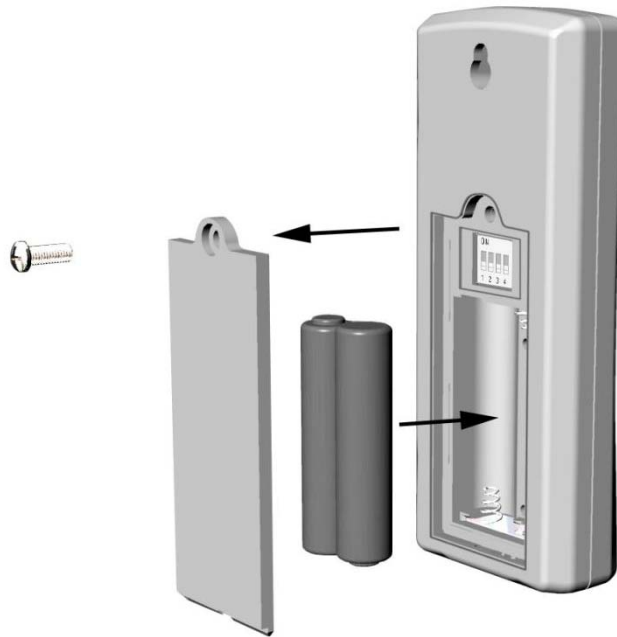

**Figure 7**

1. **BEFORE** inserting the batteries, locate the dip switches on the inside cover of the lid of the transmitter.  
Figure 8 displays all four switches in the OFF position (factory default setting).




**Figure8**

2. **Channel Number:** The WS0300 supports up to eight transmitters. To set each channel number (the default is Channel 1), change Dip Switches 1, 2 and 3, as referenced in Table 1.
3. **Temperature Units of Measure:** To change the transmitter display units of measure ( $^{\circ}\text{F}$  vs.  $^{\circ}\text{C}$ ), change Dip Switch 4, as referenced in Table 1.

DIP SWITCH				FUNCTION
1	2	3	4	
DOWN	DOWN	DOWN	---	Channel 1
DOWN	DOWN	UP	---	Channel 2
DOWN	UP	DOWN	---	Channel 3
DOWN	UP	UP	---	Channel 4
UP	DOWN	DOWN	---	Channel 5
UP	DOWN	UP	---	Channel 6
UP	UP	DOWN	---	Channel 7
UP	UP	UP	---	Channel 8
---	---	---	DOWN	°F
---	---	---	UP	°C

**Table 1**

4. Insert two AAA batteries.
5. After inserting the batteries, the remote sensor LED indicator will light for 4 seconds, and then flash once per 60 seconds thereafter. Each time it flashes, the sensor is transmitting data.
6. Verify the correct channel number (CH) and temperature units of measure (°F vs. °C) are on the display, as shown in Figure 9.

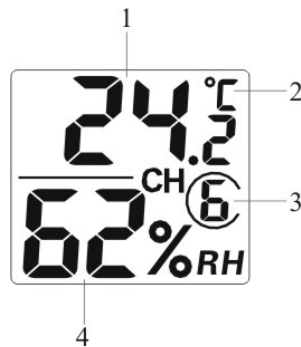

**Figure 9**

- (1) temperature
  - (2) temperature units (°F vs. °C)
  - (3) channel number
  - (4) relative humidity
7. Close the battery door. Make sure the gasket (around the battery compartment) is properly seated in its trace prior to closing the door. Tighten the set screw.

## 3.4 Display Console

### 3.4.1 Display Console Layout

The display console layout is shown in Figure 10

**Note:** The following illustration shows the full segment LCD display for description purposes only and will not appear like this during normal operation.



**Figure 10**


- |  |  |
|--|--|
| <ol style="list-style-type: none"> <li>1. Outdoor temperature display</li> <li>2. WIFI network</li> <li>3. Outdoor humidity display</li> <li>4. Outdoor humidity HI/LO alarm icon</li> <li>5. Min/Max reset for 24h icon</li> <li>6. Rainfall display(RATE, 24h, WEEK,MONTH, TOTAL)</li> <li>7. Rainfall units of measure</li> <li>8. Indoor temperature and humidity HI/LO alarm icon</li> <li>9. Indoor temperature and humidity display</li> <li>10. Time alarm icon</li> <li>11. Time and date</li> <li>12. Humidity units of measure (%)</li> <li>13. UV Index display</li> <li>14. Sunshine intensity</li> <li>15. MOON phase</li> <li>16. Sunlight units of measure</li> <li>17. Sensor Heat index display</li> <li>18. Sensor Heat index(heat index; dew point)</li> </ol> | <ol style="list-style-type: none"> <li>19. Outdoor temperature and humidity display</li> <li>20. Scroll mode indicator</li> <li>21. Channel 1-8 indicator</li> <li>22. Pressure (REL and ABS) display</li> <li>23. Pressure units of measure</li> <li>24. Wind speed average display</li> <li>25. Wind gust display</li> <li>26. Wind speed units of measure</li> <li>27. Wind chill and feels like HI/Lo alarm icon</li> <li>28. Wind direction</li> <li>29. OUT dew point and AT(Apparent Temperature) display icon</li> <li>30. Integrated outdoor transmitter Low power indicator</li> <li>31. Temperature units (°F or °C)</li> <li>32. Outdoor temperature HI/LO alarm icon</li> <li>33. Weather forecast</li> </ol> |
|--|--|

### 3.4.2 Display Console Set Up

**It is recommended to plug in the power supply to reduce the battery**




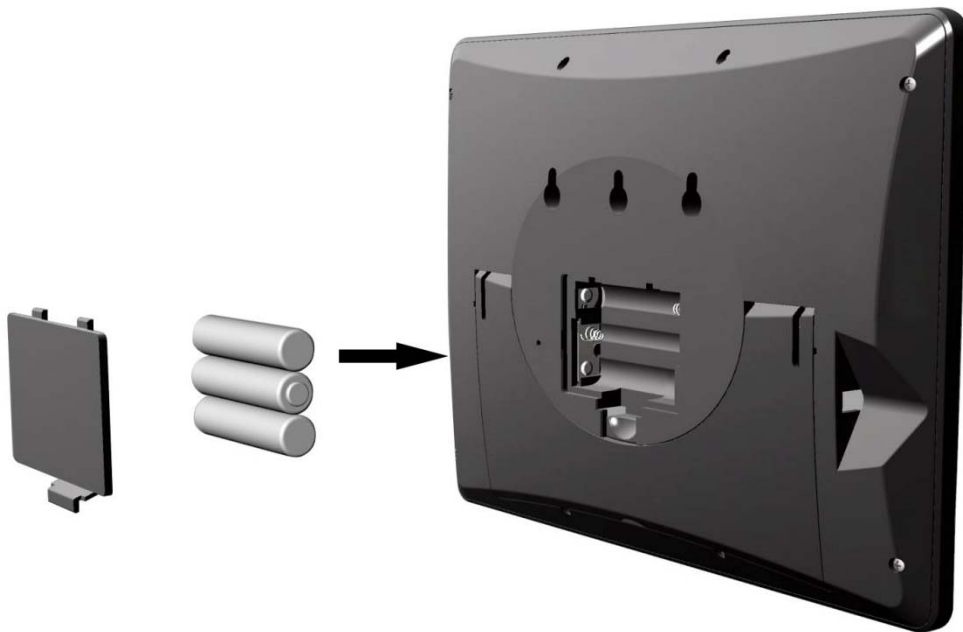
## consumption and extend the service life.

 **Note:** The sensor array must be powered and updating before powering up the console, or the console will time out searching for the sensors. Power the console last.

Make certain the weather station sensor array is at least 3m away from the console and within 30m of the console. If the weather station is too close or too far away, it may not receive a proper signal. If you have more than one Thermo-hygrometer transmitter, make sure they are all powered up and transmitting on different channels.

Remove the battery door on the back of the display, as shown in Figure 11. Insert three AAA (alkaline or lithium) batteries in the back of the display console. The display will beep once and all of the LCD segments will light up for a few seconds to verify all segments are operating properly.

 **Note:** The character contrast is best from a slightly elevated viewing angle.



**Figure 11**

Replace the battery door, and fold out the desk stand and place the console in the upright position.

The unit will instantly display indoor temperature, humidity, pressure, tendency, moon phase, and time. The wind speed, wind gust, wind direction, rain, UV/Sunlight, thermo-hygrometer sensors, Integrated outdoor temperature and humidity will update on the display within a few minutes. Do not Press any menu buttons until the outside transmitter report in, otherwise the outdoor sensor search mode will be terminated. When the outdoor transmitter data has been received, the console will automatically switch to the normal mode from which all further settings can be performed.

While in the search mode, the remote search icon  will be constantly displayed.

If you have more than one thermo-hygrometer sensor (up to eight thermo-hygrometer sensors are supported), the display will automatically toggle between sensors until all sensors have reported in.

If it does not update, please reference the troubleshooting guide in Section 18.




 **Note:** The power adapter is intended to be correctly oriented in a vertical or floor mounted position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.



Figure 12

 **Note:** If the power adapter is plugged in, **BL ON** will display in the time area for three seconds when powered up. Conversely, if the power adapter is not plugged in, **AC OFF** will be displayed, the icon  will display .

### 3.4.2 Sensor Operation Verification

The following steps verify proper operation of the sensors prior to installing the sensor array.

1. Verify proper operation of the rain gauge. Tip the sensor array back and forth several times. You should hear a “clicking” sound within the rain gauge. Verify the rain reading on the display console is not reading 0.00. Each “click” represents 0.3mm of rainfall.
2. Verify proper operating of the wind speed. Rotate the wind cups manually or with a constant speed fan. Verify the wind speed is not reading 0.0.
3. Verify proper operation of the indoor and outdoor temperature. Verify the indoor and outdoor temperature match closely with the console and sensor array in the same location (about 3m apart). The sensors should be within 2°C (the accuracy is  $\pm 1^\circ\text{C}$ ). Allow about 30 minutes for both sensors to stabilize.
4. Verify proper operation of the indoor and outdoor humidity. Verify the indoor and outdoor humidity match closely with the console and sensor array in the same location (about 3m apart). The sensors should be within 10% (the accuracy is  $\pm 5\%$ ). Allow about 30 minutes for both sensors to stabilize.

## 4. Weather Station Installation

**4.1 Pre Installation Checkout** Before installing your weather station in the permanent location, we recommend operating the weather station for one week in a temporary location with easy access. This will allow you to check out all of the

functions, insure proper operation, and familiarize you with the weather station and calibration procedures. This will also allow you to test the wireless range of the weather station.

## 4.2 Site Survey

Perform a site survey before installing the weather station. Consider the following:

1. You must clean the rain gauge once per year and change the batteries every two years. Provide easy access to the weather station.
2. Avoid radiant heat transfer from buildings and structures. In general, install the sensor array at least 5' from any building, structure, ground, or roof top.
3. Avoid wind and rain obstructions. The rule of thumb is to install the sensor array at least four times the distance of the height of the tallest obstruction. For example, if the building is 6m tall, install  $4 \times 6m = 24m$  away. Use common sense. If the weather station is installed next to a tall building, the wind and rain will not be accurate.
4. **Wireless Range.** The radio communication between receiver and transmitter in an open field can reach a distance of up to 100 m, providing there are no interfering obstacles such as buildings, trees, vehicles, high voltage lines. Wireless signals will not penetrate metal buildings. Most applications will only reach 30m due to building obstructions, walls and interference.
5. Radio interference such as PCs, radios or TV sets can, in the worst case, entirely cut off radio communication. Please take this into consideration when choosing console or mounting locations.

## 4.3 Best Practices for Wireless Communication

Wireless communication is susceptible to interference, distance, walls and metal barriers. We recommend the following best practices for trouble free wireless communication.

1. **Electro-Magnetic Interference (EMI).** Keep the console several feet away from computer monitors and TVs.
2. **Radio Frequency Interference (RFI).** If you have other 433 MHz devices and communication is intermittent, try turning off these other devices for troubleshooting purposes. You may need to relocate the transmitters or receivers to avoid intermittent communication.
3. **Line of Sight Rating.** This device is rated at 100 m line of sight (no interference, barriers or walls) but typically you will get 30 m maximum under most real-world installations, which include passing through barriers or walls.
4. **Metal Barriers.** Radio frequency will not pass through metal barriers such as aluminum siding. If you have metal siding, align the remote and console through a window to get a clear line of sight.

The following is a table of reception loss vs. the transmission medium. Each “wall” or obstruction decreases the transmission range by the factor shown below.

Medium	RF Signal Strength Reduction
Glass (untreated)	5-15%
Plastics	10-15%
Wood	10-40%
Brick	10-40%
Concrete	40-80%
Metal	90-100%

## 5.Final Installation of Sensors

### Integrated outdoor transmitter installation.

Professional Wireless Weather Station can be used in both the Northern and Southern Hemispheres.


Prior to installation, you will need to calibrate the wind direction.

#### 5.1. Northern Hemispheres (NOR).

The cardinal directions (N, S, E, W) molded on the body of the outdoor sensor are indicators for the Northern Hemisphere only.


**Step 1:** There is a “S” indicator on the wind vane that indicates South, as shown in Figure 13. Align this “S” marker in the direction of South.

**Step 2:** Console operation is set to Northern Hemispheres ( **NOR** in the time area) in Location division.

 **Note:** There are four alphabet letter of “N”, ”E”, ”S” and “W” around the wind direction, representing for the direction of North, East, South and West. Wind direction sensor has to be adjusted so that the directions on the sensor are matching with your real location. Permanent wind direction error will be introduced when the wind direction sensor is not positioned correctly during installation.



Northern Hemispheres

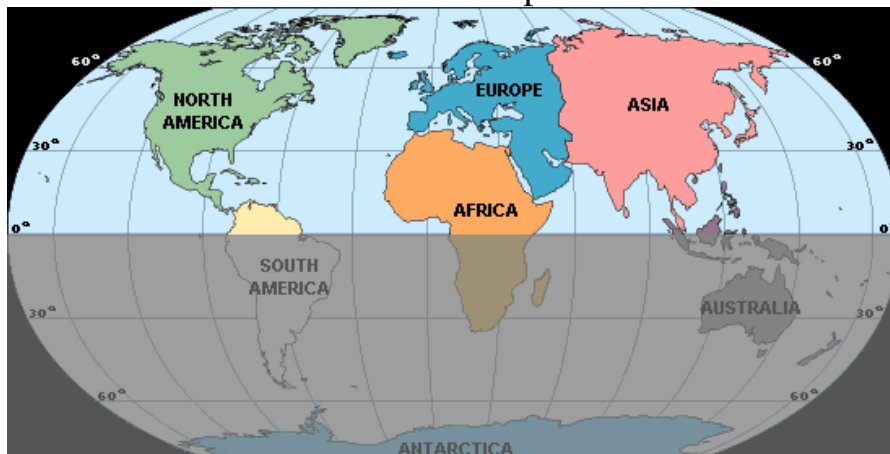

Southern Hemispheres


**Figure 13**

**5.2. Southern Hemispheres (SOU).**

For Southern Hemisphere installations, ignore these(N, S, E, W) and face **the solar panel to the North** (and in a sunny position) when it comes to installing the Integrated outdoor transmitter.

**Step 1:** Install the Integrated outdoor transmitter and face the solar panel North.

**Step 2:** Console operation is set to Southern Hemispheres ( **SOU** in the time area) in Location division.


 **Note:** Console has to be location division setting so that the directions on the sensor are matching with your real location. Permanent wind direction error ( read approximately 180° ) will be introduced when the wind direction sensor is not positioned correctly during installation.

Fasten the integrated transmitter to mounting pole brackets with foot-mounting, two  $\phi 3$  bolts and M3 nuts , as shown in Figure 14



**Figure 14**


Tighten the mounting pole to your existing mounting pole with the four  $\phi 5$  Bolts and M5 Nuts assembly, or fix on the wall with four tapping screw, as shown in Figure15.

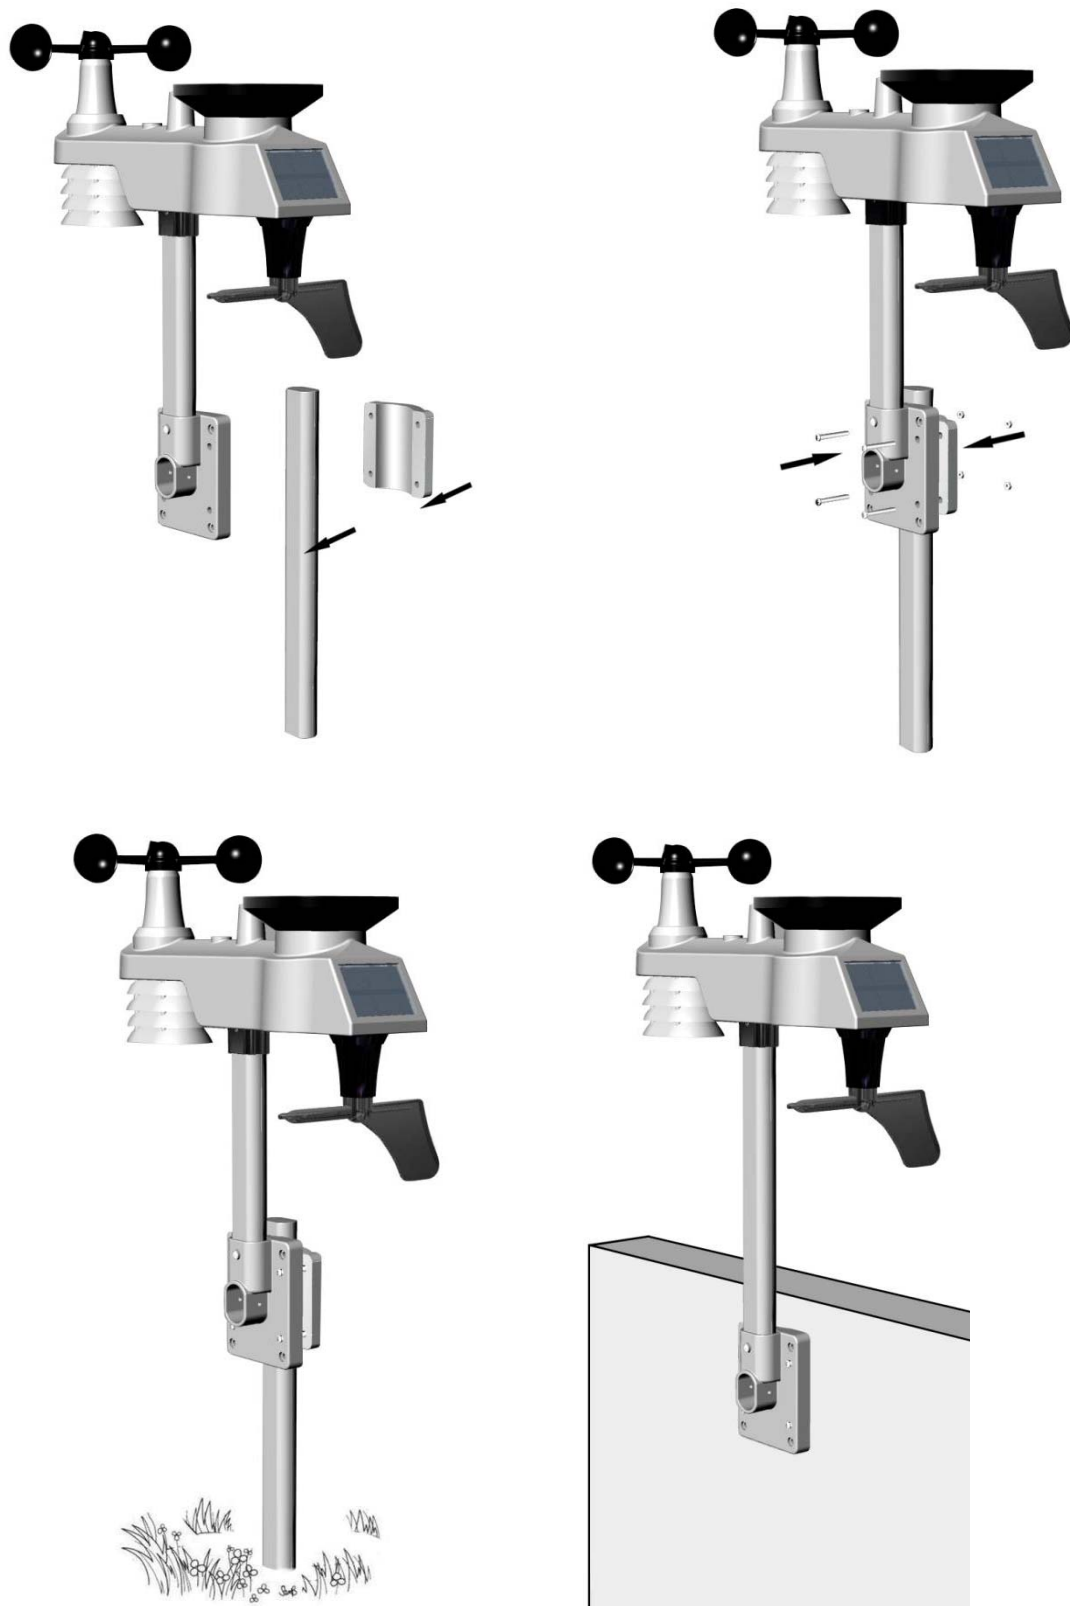

**Figure 15**

**.Thermo-hygrometer Transmitter installation.** It is recommended you mount the Thermo-hygrometer sensor outside in a shaded area. A north facing wall is preferred because it is in the shade most of the day. Direct sunlight and radiant heat sources will result in inaccurate temperature readings. Although the sensor is water resistant, it is best to

mount in a well protected area, such as under an eave. Use a screw or nail (not included) to affix the remote sensor to the wall, as shown in Figure 16.

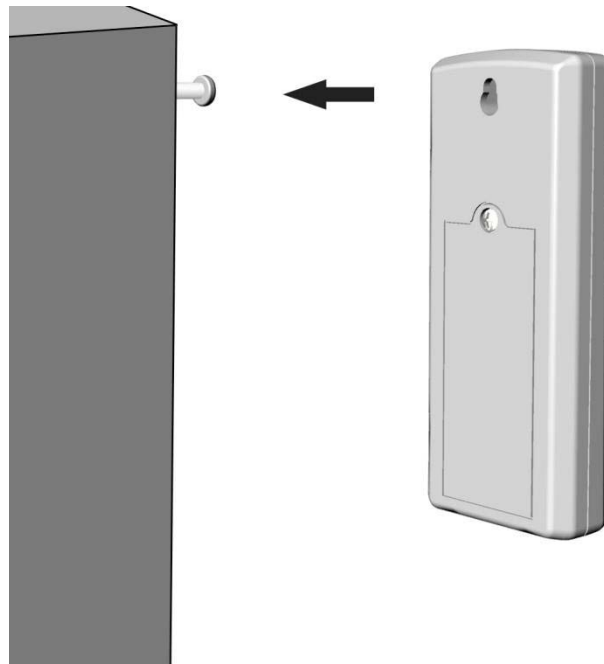


**Figure 16**

## **6.Low Battery Icon**


A low battery indicator icon is shown in the display window for thermo-hygrometer sensor. When the low battery icon appears (the battery voltage is lower than 2.4V), replace the batteries in the sensor with fresh batteries. Be sure to never mix old and new batteries, and never mix battery types such as alkaline and lithium together.

A low battery indicator icon is shown in the display window for Integrated outdoor transmitter. When the low battery icon appears (the battery voltage is lower than 3.6V), replace the batteries in the sensor with fresh batteries. Be sure to never mix old and new batteries, and never mix battery types such as alkaline and lithium together.

## **7.Console Operation**

 **Note:** The console has five keys for easy operation: **MIN/MAX/-**-key, **ALARM** key, **SET/MODE** key, **CHANNEL/+** and **SNOOZE** key.

### **7.1 Quick Display Mode**

 **Note:** To exit the Quick Display Mode at any time, press the **SNOOZE** key of the display console.


While in Normal Mode, press (do not hold) the **SET/MODE** key to enter the Quick Display Mode as follows:


- once for time, time/week and date,
- twice for indoor temperature, dew point,
- three for rainfall.
- four for outdoor dew point temperature
- Five for wind average

- Six for pressure
  - Seven for sensor dew point
1. **Time, Time/Week and Date.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between time, time/week and date.
  2. **Indoor Temperature.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between temperature and dew point
  3. **Rainfall.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between rate, 24h, week, month and total.  
To clear the total rain, press the **CHANNEL/+** or **MIN/MAX/-** button until total rain is displayed. The total rain will flash. Press and hold the **SET** button for five seconds until total rain reads 0.0.
  4. **Outdoor Dew Point.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between AT ( Apparent Temperature) and dew point.
  5. **Wind Average.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between current, 2mins and 10 minutes.
  6. **Absolute Pressure and Relative Pressure.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between absolute pressure and relative pressure.
  7. **Sensor Heat Index.** Press the **CHANNEL/+** or **MIN/MAX/-** key to toggle between sensor heat index and dew point..

## 7.2 Set (Program) Mode

While in Normal Mode, press **and hold** the **SET(MODE)** key for at least three seconds to enter the Set Mode. The first setting will begin flashing. You can press the **SET(MODE)** key again to skip any step, as defined below.

 **Note:** In the Set mode, press the [+] key or [-] key to change or scroll the value. Hold the [+] key or [-] key for three seconds to increase/decrease rapidly.

 **Note:** To exit the Set mode at any time, press the **SNOOZE** button of the display console.

1. **Time SYNC(default: ON).** Press the **SET** key again to set the network time sync. Press the [+] key or [-] key to switch between SYNC time ON and SYNC time OFF of measure.
2. **12/24 Hour Format (default: 24h):** Press the **SET(MODE)** key again to adjust the 12/24 hour format setting (FMT). Press the [+] key or [-] key to change between 12 hour and 24 hour format.
3. **Change Hour.** Press the **SET(MODE)** key again to set the hour. Press the [+] key or [-] key to adjust the hour up or down. Note the PM icon is present during afternoon hours.
4. **Change Minute.** Press the **SET(MODE)** key again to set the minute. Press the [+] key or [-] key to adjust the minute up or down.
5. **Date Format (default: MM-DD):** Press the **SET(MODE)** key again to enter the day/month format mode. Press the [+] key to switch between MM-DD-YY, DD-MM-YY.
6. **Change Month.** Press the **SET(MODE)** key again to set the calendar month. Press the [+] key or [-] key to adjust the calendar month.
7. **Change Day.** Press the **SET(MODE)** key again to set the calendar day. Press the [+] key or [-] key to adjust the calendar day.
8. **Change Year.** Press the **SET(MODE)** key again to set the calendar year. Press the [+] key or [-] key to adjust the calendar year.
9. **Max/Min Clearing (default: ON).** Press the **SET(MODE)** key again to set the max/min clearing mode (CLR). The Max/Min can be programmed to clear daily (at




midnight) or manually. Press the [+] key or [-] key to switch between “Clears 24h” and Clears Manually.

10. **Temperature Units of Measure (default: °C):**. Press the **SET(MODE)** key again to change the temperature units of measure (the **UNITSET** icon will be displayed). Press the [+] key or [-] key to switch between °F and °C units of measure.
11. **Wind Speed Units of Measure (default: m/s)**. Press the **SET(MODE)** key again to change the wind speed units of measure . Press the [+] key or [-] key to toggle the wind speed units between m/s, km/h, mph, knots or bft.
12. **Rainfall Units of Measure (default: mm)**. Press the **SET(MODE)** key again to change the Rainfall units of measure. Press[+] key or [-] key to toggle the rainfall units between mm and inch.
13. **Barometric Pressure Display Units(default: hPa)**. Press the **SET(MODE)** key again to change the pressure units of measure. Press the [+] key or [-] key to toggle the pressure units between mmhg, inHg or hPa.
14. **Pressure Threshold Setting (default level 2)**. Press the **SET(MODE)** key again to change the pressure threshold. Press the [+] key or [-] key to change pressure threshold 2 mbar/hour to 4 mbar/hour.(For detailed information of this part please refer to 15.5)
15. **Weather Icons Setting (default: partly cloudy)**. Press the **SET(MODE)** key again to change the initial weather icon. Press the [+] key or [-] key to select the initial weather icon of Sunny, Cloudy, Partly Cloudy or Rainy. (For detailed information of this part please refer to 15.1 and 15.2)
16. **Sunlight Display Units(default: W/m<sup>2</sup>)**. Press the **SET(MODE)** key again to change the sunlight units of measure. Press the [+] key or [-] key to toggle the sunlight units between , **W/m<sup>2</sup>**, **fc** or lux.

**8.Location division.(default: Northern Hemisphere)**.Press the **SET(MODE)** key again to change the location division. Press the [+] key or [-] key to toggle the sunlight units Northern Hemisphere (NOR)or Southern Hemisphere(SOU). (**refer to 5.0 Final Installation of Integrated outdoor transmitter**)

## 7.3 Chanel Selection

Press the **CHANNEL/+** button to switch the display between remote thermo-hygrometer sensors 1 through 8, and scroll mode . In scroll mode, all of the detected thermo-hygrometer sensors will be displayed in five second intervals.


## 7.4 Sensor Search Mode

If a sensor loses communication, dashes (--.) will be displayed. If a specific channel is lost, press the **CH/+** button to display that channel prior to entering the search mode.


To reacquire the lost signal, press and hold the **CH/+** button for 3 seconds to enter the sensor search mode.

The icon **AIO** will appear in the time area. You can synchronize one or all of individual sensors. press the [+] or [-] key to toggle between the following sensors:

- **AIO**. Synchronizes Integrated outdoor transmitter
- **CH\***. Synchronizes Channel 1-8 Sensors (dependent on which channel is displayed before entering the Sensor Search Mode).
- **ALL**. Synchronizes All Sensors.
- **NOT**. Do nothing and exit the Sensor Search Mode.

After selecting one of the above options, press the **SET(MODE)** key to resync, and the display will return to normal mode. **Do not press any buttons** until the synchronization is complete. The remote search icon  will display constantly for 3 minutes until the signal is reacquired.

## 7.5 Reset Min/Max record

 **Note:** If you own more than one thermo-hygrometer sensor, the minimum and maximum value of all channels will be cleared in the reset mode.

In normal mode, press (do not hold) the **MIN/MAX/-** key, the **MAX** icon will be displayed in date area. Press the **SET/MODE** key to view max values of rainfall (rate, 24h, week or month) , pressure (ABS or REL), outdoor temperature and humidity((AT or dew point), indoor temperature and humidity (temp or dew point) and sensor temperature and humidity, sensor dew point or heat index.

Press the **MIN/MAX/-** key for three seconds to clear all max values. ( the rainfall, wind speed, wind gust, pressure, temperature and humidity maximum values. The maximum values will now display the current values ) .

Press the **CHANNEL/+** button to switch the display between remote thermo-hygrometer sensors 1 through 8 to view Max values.

Press the **MIN/MAX/-** key again (do not hold), the **MIN** icon will be displayed. Press the **SET/MODE** key to view min values of pressure (ABS or REL), outdoor temperature/humidity((AT or dew point), indoor temperature/humidity(temp or dew point), sensor temperature humidity, sensor dew point(dew point or heat index).

Press the **MIN/MAX/-** key for three seconds to clear all min values.(the pressure, temperature and humidity minimum values. The minimum values will now display the current values).

Press the **CHANNEL/+** button to switch the display between remote thermo-hygrometer sensors 1 through 8 to view Min values.

Press the **SNOOZE** key to exit the min/max checking and cleaning mode, return to normal display mode.

## 7.6 Snooze Mode

If the alarm sounds, and you wish to silence the alarm, press the **SNOOZE** key, the backlight will turn on. The alarm icon will continue to flash and the alarm will silence for five minute. press any key (**MIN/MAX/+** ,**SET/MODE**, **ALARM**,**CHANNEL/+**) to permanently exit the **Snooze** mode.

## 7.7 Back light Mode


If the LED is off, Press the **SNOOZE** button once. The backlight will turn on for five seconds, and if no operation is performed for three seconds, the backlight will turn off.

The backlight operation is different when operating on batteries to save power.

## ADJUSTABLE BACKLIGHT BRIGHTNESS

There are 3 levels of brightness of backlight. When the backlight is on press SNOOZE key to switch between the 3 levels.

When backlight is off, press and hold the **SNOOZE** key for two seconds, the backlight will turn on permanently, and **BL ON** icon will be displayed for three seconds in the date area. To turn off the backlight at any time press and hold the **SNOOZE** key for two seconds. **BL OFF** icon will be displayed for three seconds in the date field.


 **Note:** If plugged into AC power, the time area will display AC ON and the backlight will remain on. It is not recommended leaving the backlight on for a long period of time when operating on batteries only, or the batteries will run down quickly.

## 8. Alarm Mode

The WS0300 includes the following alarms:

- Time (There are two alarms for time. Alarm 1 and Alarm 2)
- Outdoor Temperature
- Outdoor Humidity
- Outdoor AT(Apparent Temperature)
- Outdoor Dew Point
- Outdoor Feels Like Temperature
- Outdoor Dew Point
- Wind Gust
- Wind Average
- Rate Rainfall
- 24 Hour Rainfall
- Absolute Pressure
- Relative Pressure
- Indoor Temperature
- Indoor Humidity
- Indoor Dew Point
- UV Index
- Sunlight
- Sensor(CH1) Temperature
- Sensor(CH1) Humidity
- Sensor(CH1) Heat Index
- Sensor(CH1) Dew Point

### 8.1 Alarm Operation

When an alarm condition is exceeded, the alarm icon will flash  (visual) and the alarm beeper will sound (audible). To silence the beeper, press any key.

### 8.2 Viewing the High and Low Alarms

To view the current alarm settings, press the **ALARM** key to enter the alarm mode. HI AL 1 will be displayed in the date area. At the same time Alarm 1 time and HI alarm parameters of indoor temperature/humidity, outdoor temperature/humidity, rain rate, AT, feels like, wind gust, wind average, absolute pressure, UV index, Sunlight, Sensor(CH1) temperature/humidity and dew point are displayed. Press **SET/MODE** key to view Alarm

2 time and HI alarm parameters of indoor dew point, 24h rainfall, outdoor dew point, relative pressure and Sensor(CH1) heat index.

Press **ALARM** key again to view the LOW alarms along with the alarm clock time the same way HI alarms.

Press the **SNOOZE** key at any time to return to the normal mode.

## 8.3 Setting the Alarms

Press **ALARM** key to enter the alarm mode.

Press and hold the **SET/MODE** key for three seconds. The first alarm parameter will begin flashing (alarm hour).

To save the alarm setting and proceed to the next alarm parameter, Press (do not hold) the **SET/MODE** key.

To adjust the alarm parameter, press the [+] or [-] key to increase or decrease the alarm settings, or press and hold the [+] or [-] key for three seconds to increase or decrease the alarm settings rapidly.


Press the **ALARM** key to turn on (the alarm icon will appear ) and off the alarm.


Press the **SNOOZE** key once at any time to return to the normal mode. After 30 seconds of inactivity, the alarm mode will time out and return to normal mode.

The following is a list of the individual alarm parameters that are set (in order):

1. Alarm hour(alarm 1)
2. Alarm minute(alarm 1)
3. Alarm hour(alarm 2)
4. Alarm minute(alarm 2)
5. Outdoor temperature high alarm
6. Outdoor temperature low alarm
7. Outdoor humidity high alarm
8. Outdoor humidity low alarm
9. Outdoor AT high alarm
10. Outdoor AT low alarm
11. Outdoor dew point high alarm
12. Outdoor dew point low alarm
13. Outdoor feels like high alarm
14. Outdoor feels like low alarm
15. Wind Gust high alarm
16. Wind Average high alarm
17. Rainfall (RATE) high alarm
18. Rainfall (24h) high alarm
19. Absolute pressure high alarm
20. Absolute pressure low alarm
21. Relative pressure high alarm
22. Relative pressure low alarm
23. Indoor temperature high alarm
24. Indoor temperature low alarm

25. Indoor humidity high alarm
26. Indoor humidity low alarm
27. Indoor dew point high alarm
28. Indoor dew point low alarm
29. UV Index high alarm
30. Sunlight high alarm
31. Sensor(CH1) Temperature high alarm
32. Sensor(CH1) Temperature low alarm
33. Sensor(CH1) Humidity high alarm
34. Sensor(CH1) Humidity low alarm
35. Sensor(CH1) Heat Index high alarm
36. Sensor(CH1) Heat Index low alarm
37. Sensor(CH1) Dew Point high alarm
38. Sensor(CH1) Dew Point low alarm

 **Note:** To prevent repetitive temperature alarming, there is a 0.5 °C tolerance band. For example, if you set the high alarm to 26.7 °C and silence the alarm, the alarm icon will continue to flash until the temperature falls below 26.2°C, at which point, the alarm will reset and must increase above 26.7 °C to activate again.

 **Note:** To prevent repetitive alarming of humidity, there is a 4% tolerance band in humidity alarm. For example, if you set the high alarm to 60% and silence the alarm, the alarm icon will continue to flash until the humidity falls below 56%, at which point, the alarm will reset and must increase above 60% to activate again.


## 8.4 Alarm and Command Key Beeper ON/OFF Mode


The beeper can be silenced for both alarms and key strokes.

In normal mode, press and hold the **ALARM** key for three seconds to toggle the beeper on or off (depending on the current setting).

The **BZON** (beeper on) or **BZOFF** (beeper off) icon will appear in the time area for three seconds. press and hold the **ALARM** key again for three seconds to toggle the **BZON** or **BZOFF** command.

## 9.WiFi Connection Status

When the console successfully connects to your Wi-Fi router, the Wi-Fi signal icon  will appear on the LCD display(behind the Outdoor humidity). If the Wi-Fi signal is not stable or the console is trying to connect to the router, the icon will flash. If the icon disappears, it means the console is not connected to the Wi-Fi router.

 **Note:** If you own a dual band router (2.4 GHz and 5.0 GHz),make sure you connect to the 2.4 GHz band, otherwise it will fail to connect the weather station to WiFi.

## 10. Time Server Sync Status

After the console has connected to the internet, it will attempt to connect to the internet time server to obtain the time. Once the connection succeeds and the console's time has

updated, the SYNC icon **SYNC** will appear on the LCD. The time will automatically synchronize to the internet per an hour.

 **Note:**Time synchronize method: Synchronized through internet UTC time server.

## WiFi Connection and Weather Servers

### 11. Register with WeatherCloud.net

Note: This is best done on a computer desktop or laptop.

Visit : <https://weathercloud.net/> and enter a Username, Email and Password (**It is your Login password of the website, not your email password. So no privacy will be exposed.**)

#### 11.1 Sign Up

1) Click Sign up as below



Figure 17

2) As shown below, enter a Username, Email and Password then Click Sign up.

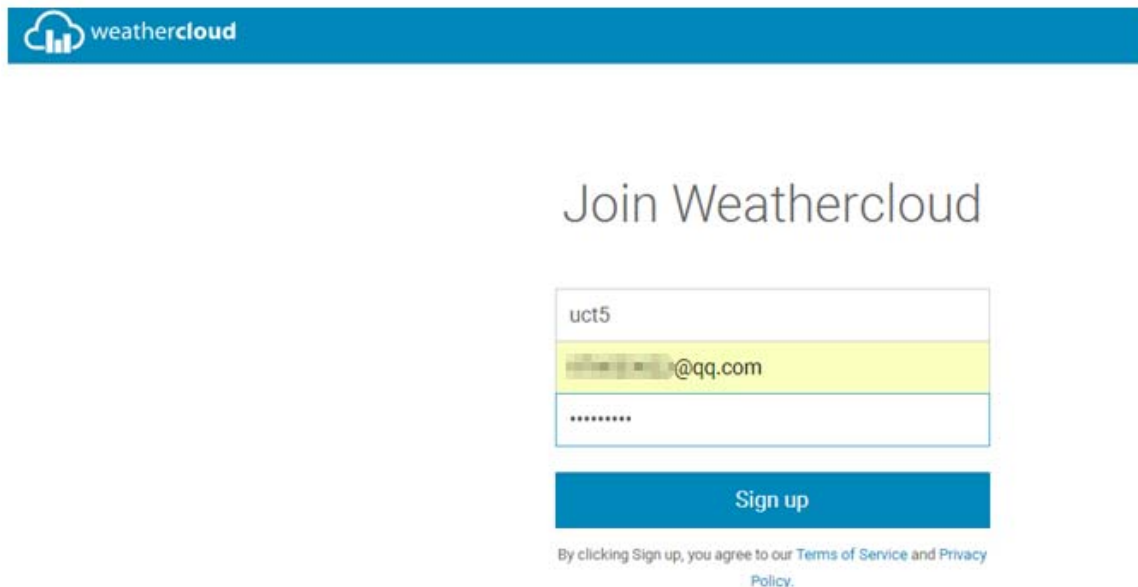
A screenshot of the WeatherCloud.net registration form. At the top left is the WeatherCloud logo. The main heading is 'Join Weathercloud'. Below this are three input fields: a text field containing 'uct5', an email field containing '\*\*\*\*\*@qq.com', and a password field containing '\*\*\*\*\*'. Below the fields is a blue 'Sign up' button. At the bottom, there is a small disclaimer: 'By clicking Sign up, you agree to our Terms of Service and Privacy Policy.'

Figure 18

3) As shown below, an email will be received in your registered mailbox .

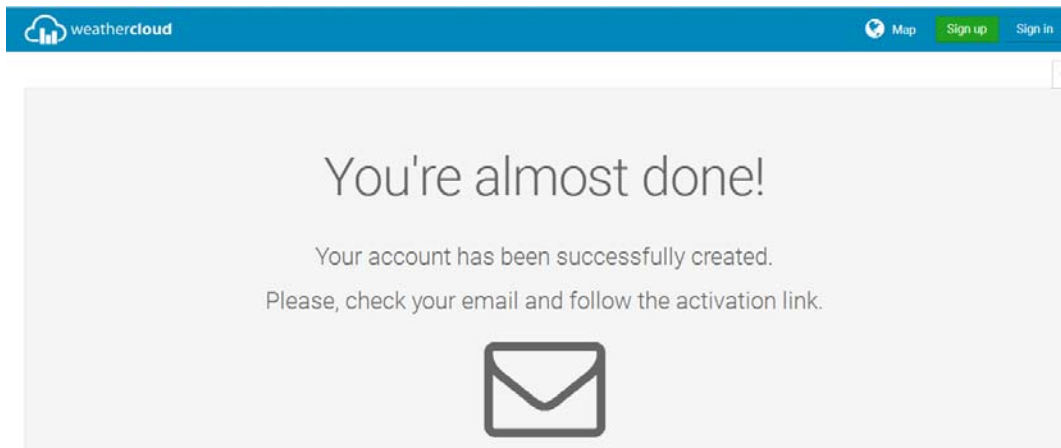


Figure 19

4) As shown below, open your mail and log in to the Web address in the mail.

Hello [redacted]


Thanks for registering and welcome to Weathercloud!

To activate your new account please click on the link below or copy and paste the URL into your browser:

<https://app.weathercloud.net/page/activate/key/Lyfkalj48ZJwAvPMzys7X0F3a5RuXwF7LG4xhhu6Hh6LvhzNgKI2i1aYUjmNm1lv>

Figure 20

5) As shown below, click “here” to enter the homepage of the weathercloud website.

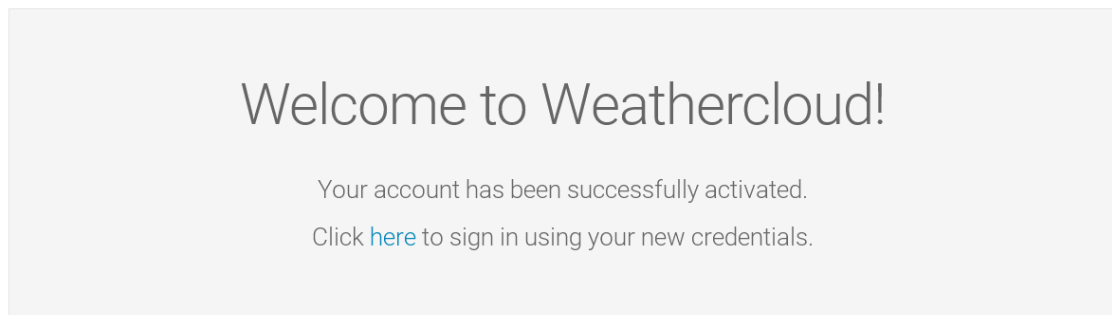


Weathercloud uses cookies and similar technologies to customize the content we provide and to analyze the navigation in order to offer you a better, faster and safer experience. To use Weathercloud, you must agree to the use we make of these technologies. [Read more.](#)

I agree

Figure 21

6) As shown below, enter the email address and password you just registered to enter the weathercloud website.

# Sign in

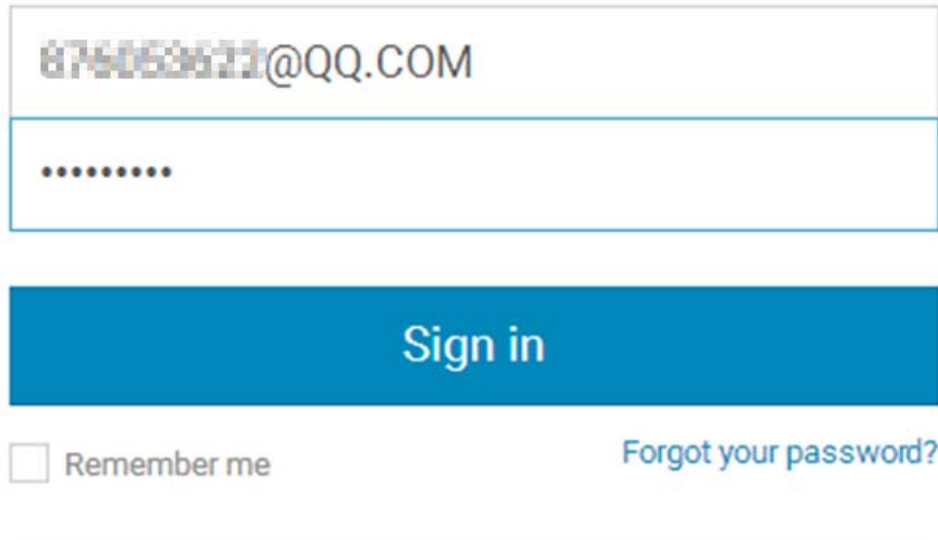

676053977@QQ.COM

.....

**Sign in**

Remember me [Forgot your password?](#)

Not a member yet? [Sign up for free.](#)

Figure 22

## 11.2 Add a weather station device (it may take a few minutes).

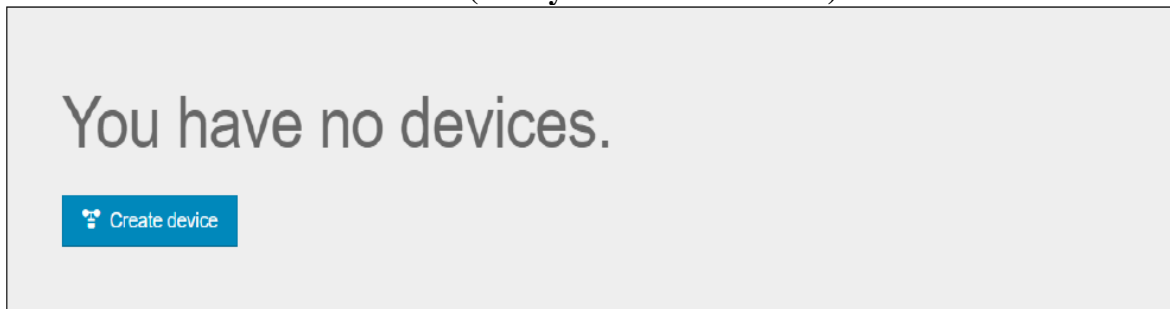


Figure 23

- 1) After sign up you will be prompted to add a device/ Select “Create device” and enter your station’s information:  
Blanks with red \* must be filled in.



Name *	<input type="text" value="FT0300"/>	Country *	<input type="text" value="Hong Kong"/>
Model *	<input type="text" value="Ultimeter 100 Series"/>	State / Province *	<input type="text" value="Hong Kong"/>
Link type *	<input type="text" value="Weather Display"/>	City *	<input type="text" value="Hong Kong"/>
Website	<input type="text" value="www.example.com"/>	Time zone *	<input type="text" value="(UTC+08:00) Hong Kong"/>
Description	<input type="text"/>		
		<input type="button" value="Get coordinates"/>	
		Latitude *	<input type="text" value="23.241346102386135"/>
		Longitude *	<input type="text" value="118.125"/>
		Elevation	<input type="text" value="0.0"/> m

Figure 24

Note: You can select any Model number and Link type in the above blanks.  
 2) As shown below, click Get coordinates to identify your location of on the map, then click Done to confirm..

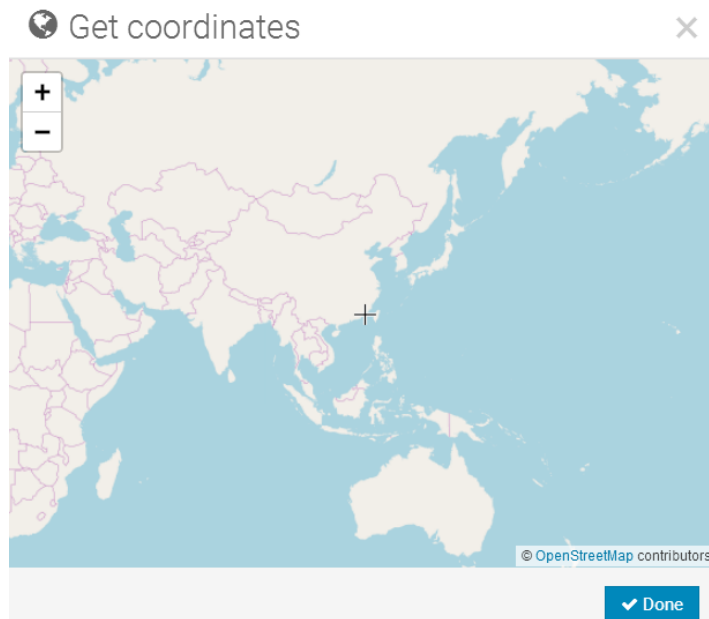


Figure 25

3) As shown below, click Create.

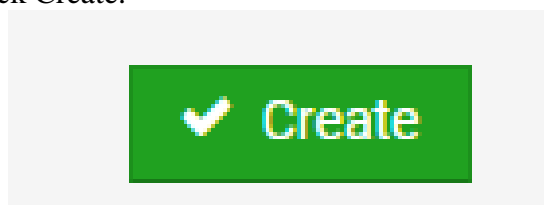


Figure 26

4) As shown below, after registering successfully, please record the Weathercloud ID and Key information for later use. (Refer to 13.6)

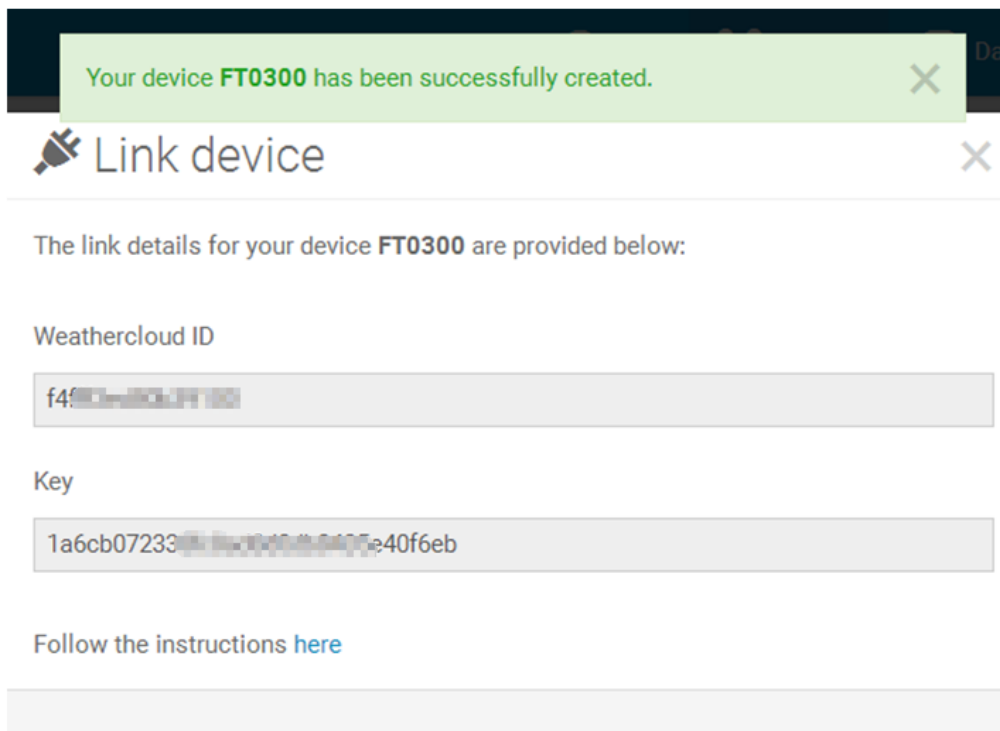


Figure 27

## 12. Register at Wunderground.com (Weather Underground)

 **Note:** The Weather Underground website is subject to change.

Visit: <https://Wunderground.com> , and select the Join link in the upper right and corner and create a Free Account.

1) as shown below , Click Join

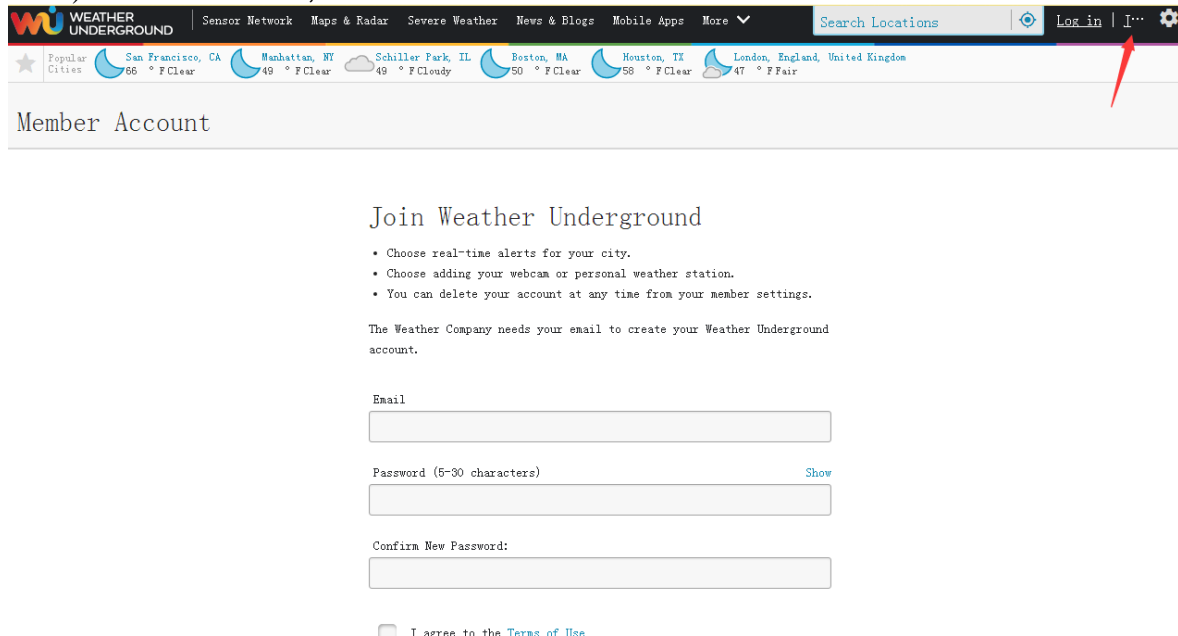


Figure 28

2) As shown below, enter a Username, Email and Password (***It is your Login password of the website, not your email password. So no privacy will be exposed.***). Click Sign up for free.

## Join Weather Underground

- Choose real-time alerts for your city.
- Choose adding your webcam or personal weather station.
- You can delete your account at any time from your member settings.

The Weather Company needs your email to create your Weather Underground account.

Email  ✓

Password (5-30 characters)  Show ✓

Confirm New Password:

I agree to the [Terms of Use](#)

[Sign up for free](#)

[Already have an account? Sign in](#)

Figure 29

3) As shown below, registration is done successfully.


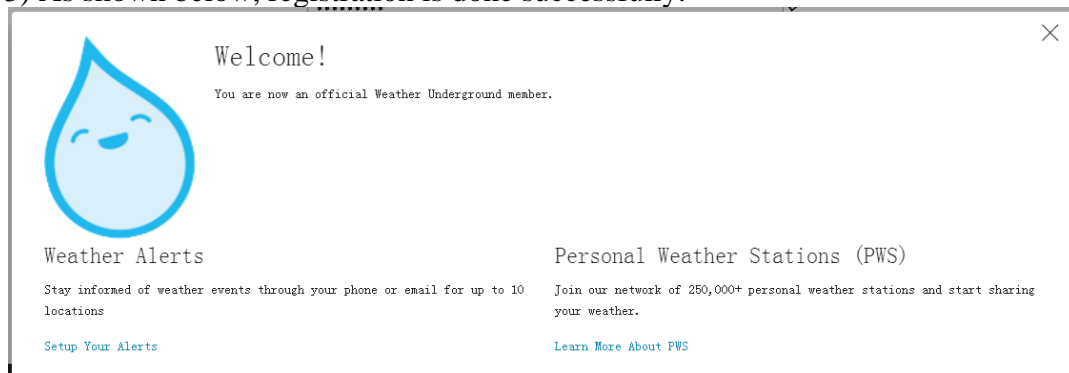


Figure 30

4) As shown below, click Log in and enter the email address and password you just registered.

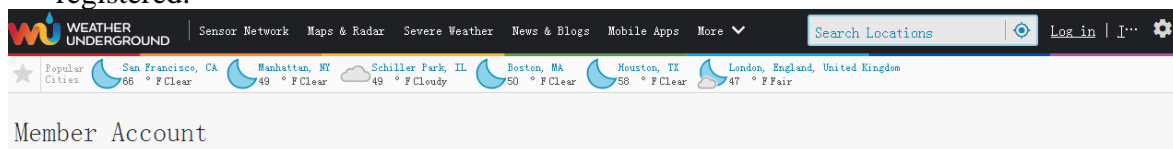

### Sign in to Weather Underground!

Email

Password  [Forgot your password?](#)

[Sign in](#)

[Don't have an account? Sign up](#)

[Terms of Use](#) | [Privacy Policy](#)

Please read these terms carefully. By using Weather Underground or signing up for an account, you're agreeing to these terms.

5) As shown in the below, click My Profile. Then enter Member Settings.

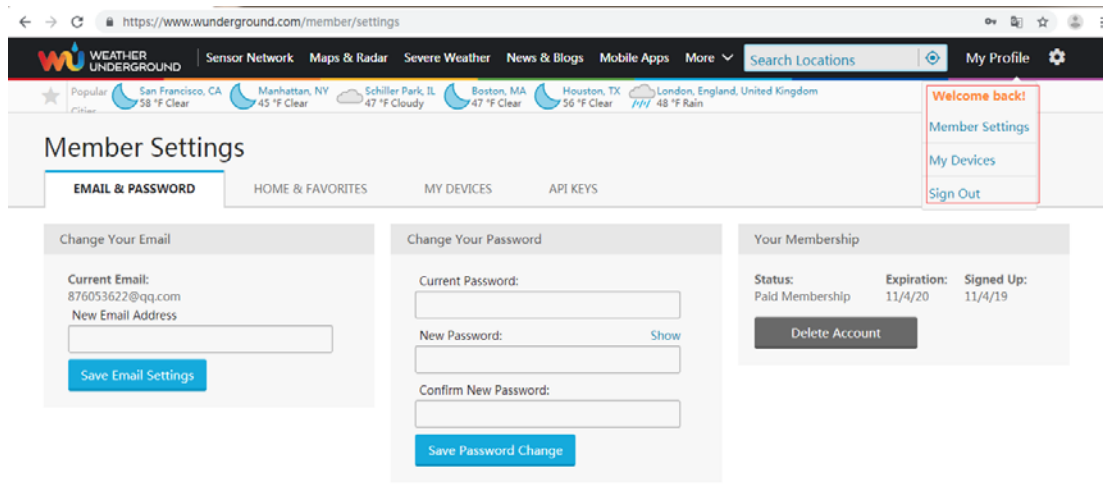


Figure 32

6) As shown below, click Update home location.

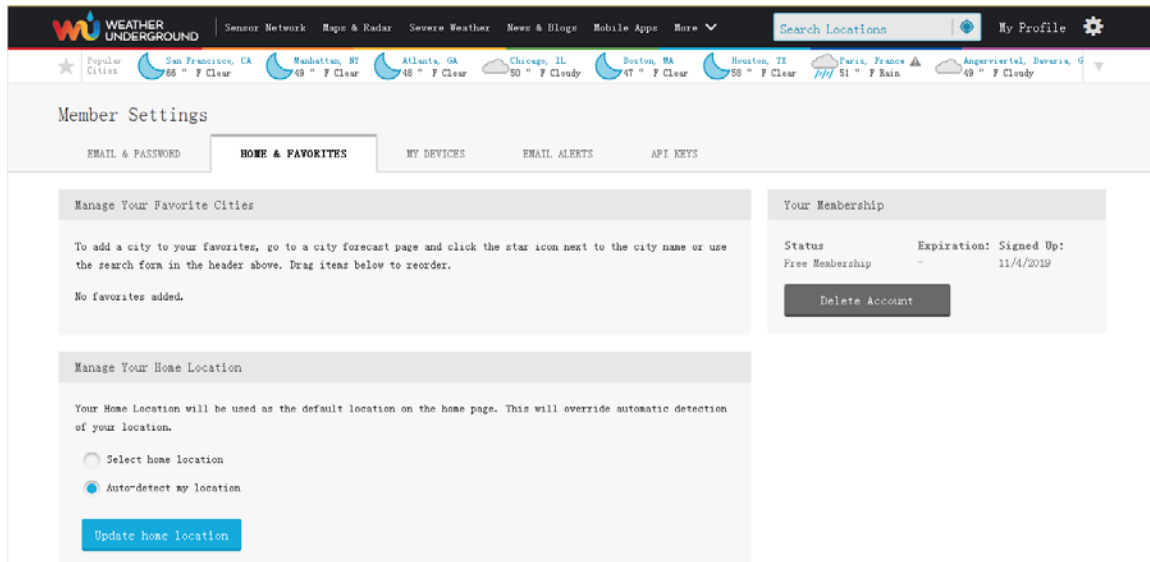


Figure 33

7) As shown below, you will then be prompted to add a device/ Select “Add New Device

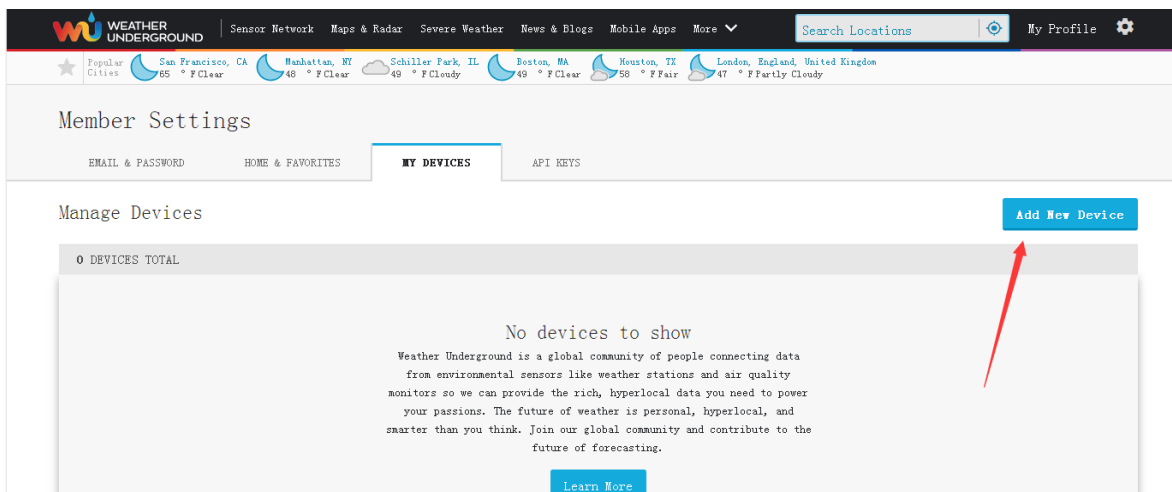


Figure 34

8) As shown below, click Personal Weather Station.

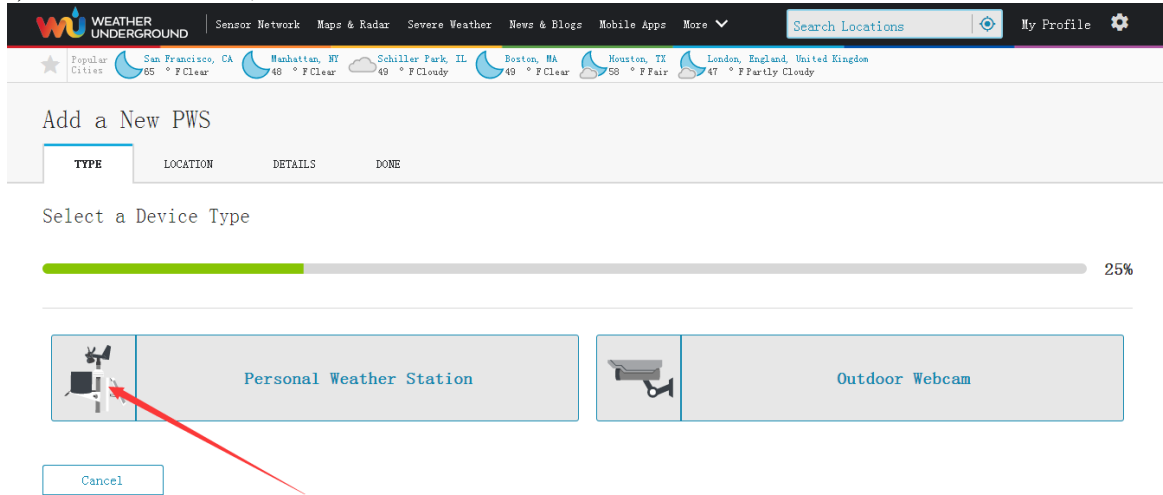
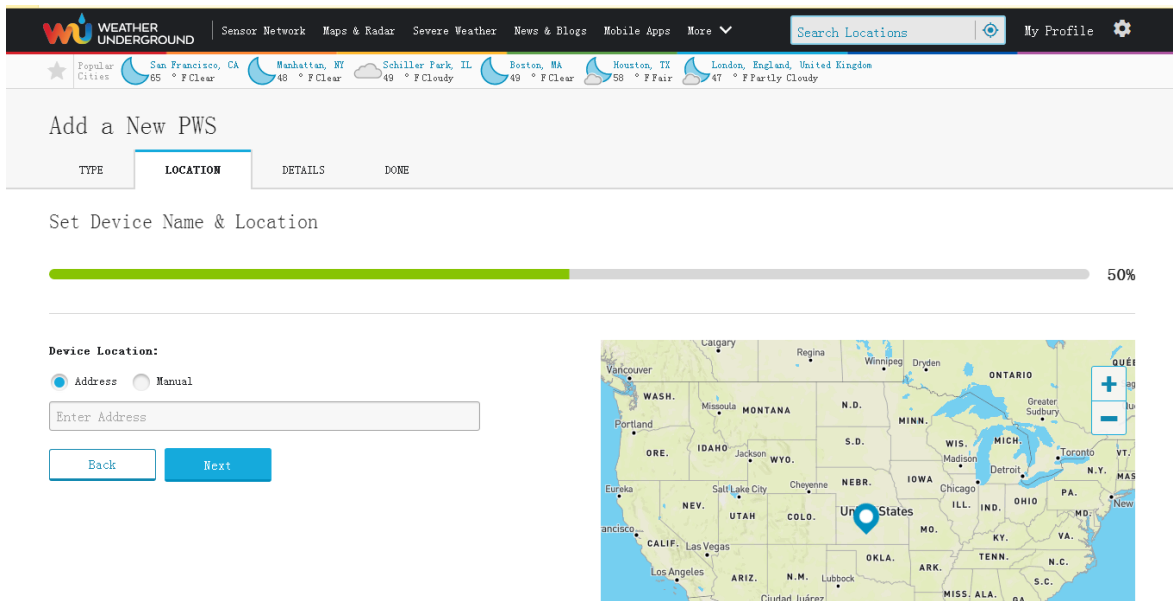


Figure 35

9) As shown below, select Address by inputting an address or select Manual to position your address automatically. Then click Next:



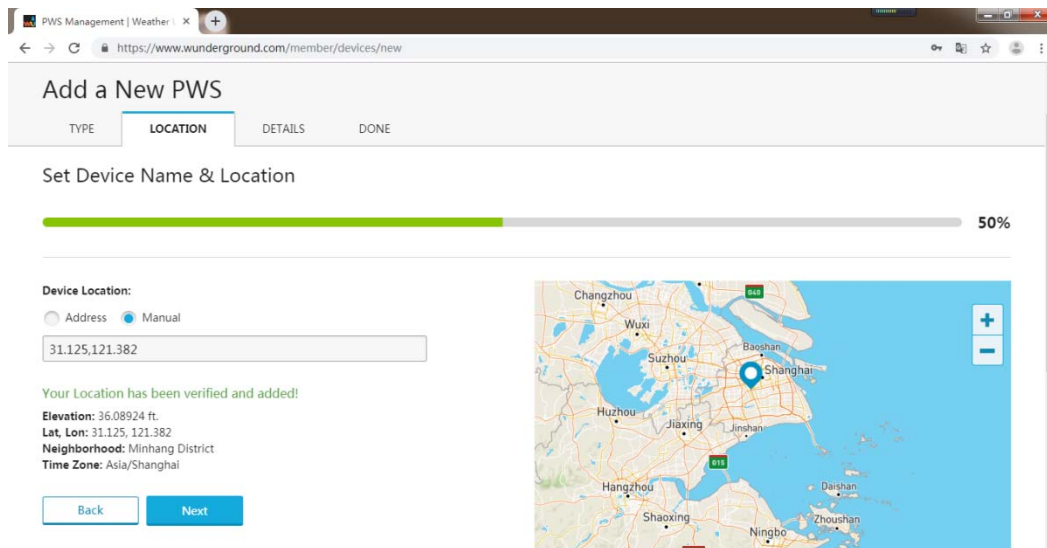


Figure 36

10) As shown below, you will then be prompted to add a device/ Select “Create device”, then click I Accept and Next:  
 Blanks with red (Required) must be filled in.  
 Note: You can select any wifi weather station model in Device Hardware blank.

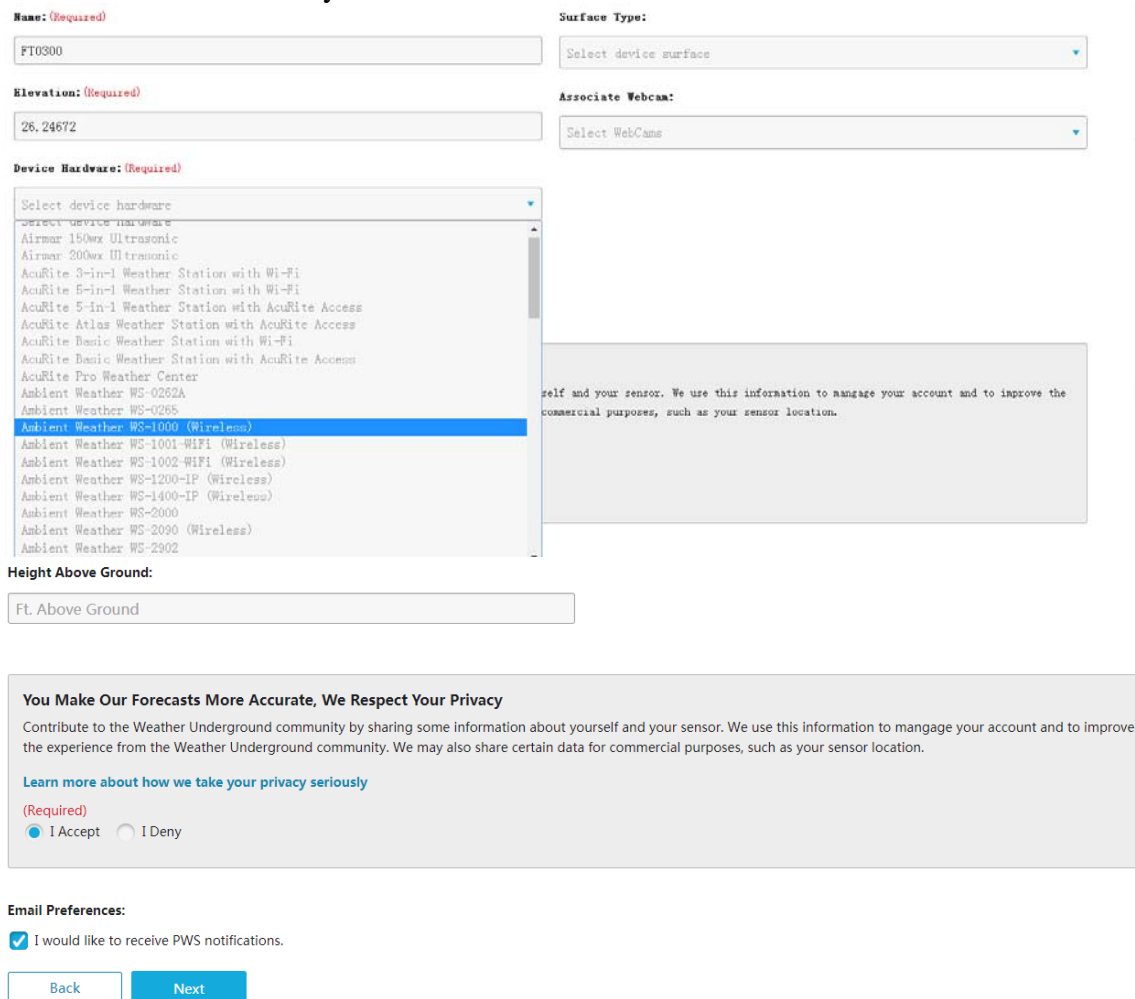


Figure 37

11) As shown below, after registering the host successfully, please record Station ID and Station Key information for later use (refer to 13.6).

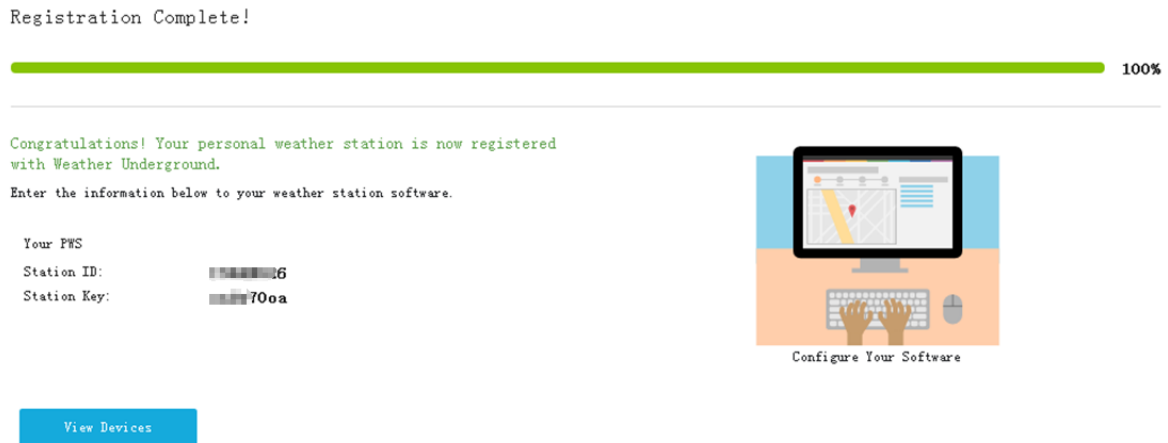


Figure 38

12) As shown below, registration is done successfully.

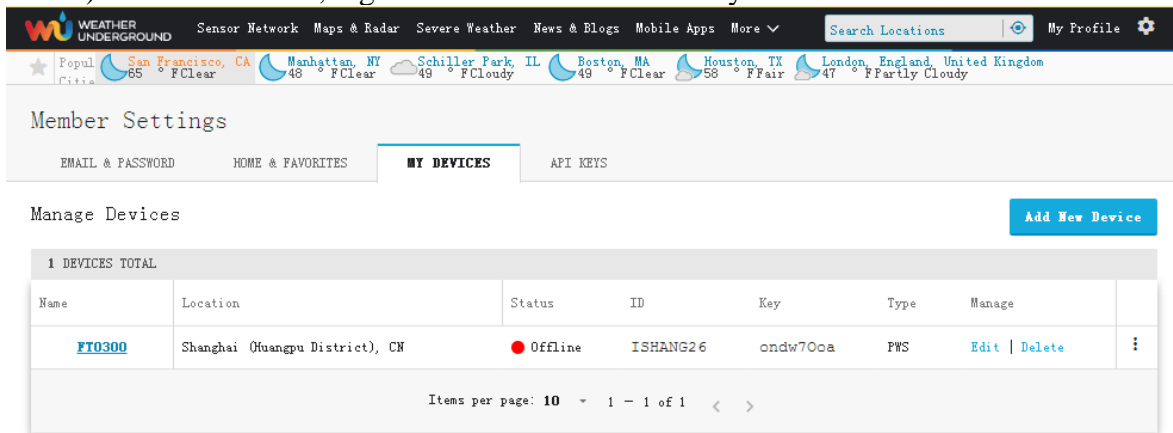



Figure 39

## 13. WiFi Setup (Connect your Device to the Console's WiFi)

When you first power up (AC) the console, or press and hold the MIN/MAX/- button for three seconds in normal mode, the console icon (behind the Outdoor humidity)  will flash to signify that it has entered WAP (wireless access point) mode, and is ready to enter for WiFi settings.


You can use your desktop, laptop, tablet, or smart phone to connect to the console's WiFi. The console's network name begins with WeatherHome, followed by a unique code.

**Note that when the console programming is complete, you will resume your default WiFi connection.**

**Note that you cannot connect two or more devices at the same time when WAP mode.**



**13.1: Example 1:** Connect to the console WiFi server with a PC.

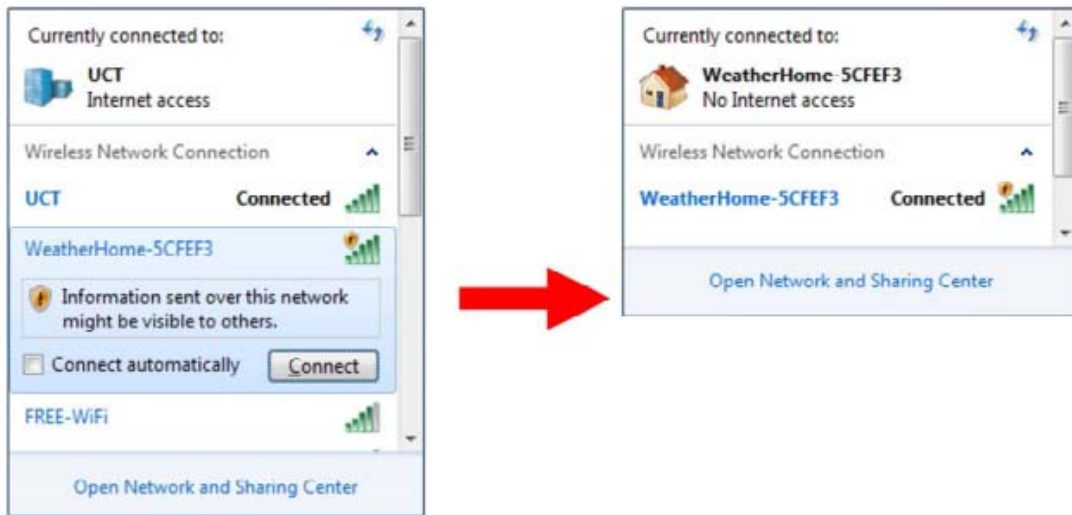
Choose WiFi network settings from Windows (or search "Change Wi-Fi Settings" from Windows), and Connect to the WeatherHome----- WiFi network, as shown in Figure 40 (your WiFi network name may be slightly different, but will always begin with WeatherHome -).



**Figure 40**

**13.2: Example 2.** Connect to the console WiFi server with a Mac.

Choose the Settings icon  and  Network . Connect to the WeatherHome----- WiFi network, as shown in Figure 41 (your WiFi network name may be slightly different, but will always begin with WeatherHome----- ).

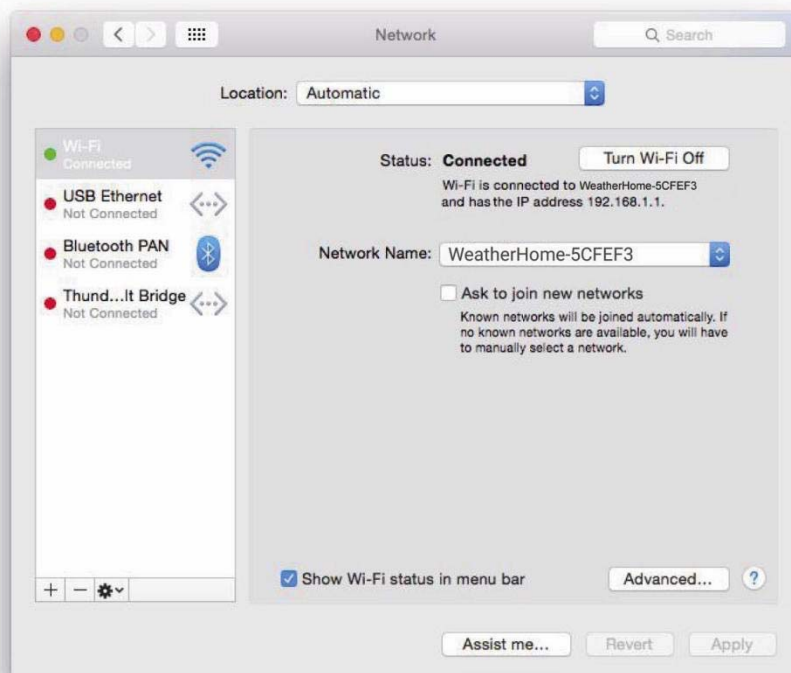

**Figure 41**

**13.3: Example 3.** Connect to the console WiFi server with an iPhone or iPad.


Choose the Settings icon  and Wi-Fi. Connect to the WeatherHome----- WiFi network, as shown in Figure 42 (your WiFi network name may be slightly different, but will always begin with WeatherHome-----).





Figure 42

13.4: Example 4. Connect to the console WiFi server with an Android.

From the Apps icon, choose the Settings icon  and Wi-Fi. Connect to the WeatherHome----- WiFi network, as shown in Figure 43 (your WiFi network name may be slightly different, but will always begin with WeatherHome----- ).

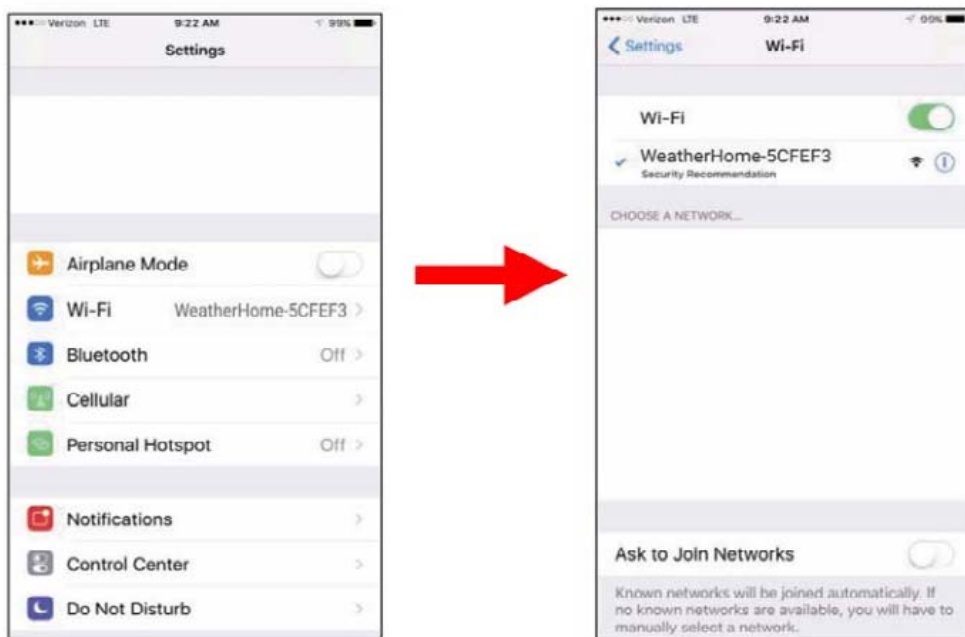



Figure 43

13.5. Once connected, enter the following IP address into any browser's address bar: <http://192.168.5.1> to access the console's web interface.

 **Note:** Some browsers will treat 192.168.5.1 as a search, so make sure you include the header <http://>, or: <http://192.168.5.1> not 192.168.5.1

**13.6.** Enter the following information into the web interface (Figure 44). Make sure all of the information is entered prior to selecting Save. If you choose not to upload Wunderground.com, or upload weathercloud.net, leave the check boxes unchecked.

The screenshot shows a mobile browser interface for 'Weather Home Setup'. At the top, the address bar shows 'http://192.168.5.1/'. The page is divided into several sections:

- Weather Home Setup:** The main title with a logo.
- Wi-Fi network setup:** Contains a 'Network' dropdown menu and a 'Password' text input field. A checkmark icon is visible next to the password field.
- Weather server setup:** This section includes three upload options:
  - 'Upload wunderground.com' (checked): Includes an 'ID' text input field and a 'Password' text input field.
  - 'Upload ambientweather.net' (checked): Includes a 'MAC' text input field.
  - 'Upload weathercloud.net' (unchecked): Includes an 'ID' text input field and a 'Key' text input field.
- Time Zone Setup:** Includes a 'Time Zone' dropdown menu and a checkbox for 'Automatically adjust clock for Daylight Saving Time'.
- Internet Time Server Setup:** Includes a 'Server' text input field containing 'time.nist.gov'.
- Save:** A large blue button at the bottom of the form.

Red arrows point from the explanatory text on the right to the corresponding UI elements in the screenshot.

**Figure 44**



**Notes:** Hidden SSIDs. If you have a hidden SSID, enter the SSID manually.

**Time Zone Settings(default: 0h).** based on the number of hours from Coordinated Universal Time, or Greenwich Mean Time (GMT).

The following table provides times zones throughout the world. Locations in the eastern hemisphere are positive, and locations in the western hemisphere are negative.

Hours from GMT	Time Zone	Cities
-12	IDLW: International Date Line West	---
-11	NT: Nome	Nome, AK
-10	AHST: Alaska-Hawaii Standard CAT: Central Alaska HST: Hawaii Standard	Honolulu, HI
-9	YST: Yukon Standard	Yukon Territory
-8	PST: Pacific Standard	Los Angeles, CA, USA
-7	MST: Mountain Standard	Denver, CO, USA
-6	CST: Central Standard	Chicago, IL, USA
-5	EST: Eastern Standard	New York, NY, USA
-4	AST: Atlantic Standard	Caracas
-3	---	São Paulo, Brazil
-2	AT: Azores	Azores, Cape Verde Islands
-1	WAT: West Africa	---
0	GMT: Greenwich Mean WET: Western European	London, England
1	CET: Central European	Paris, France
2	EET: Eastern European	Athens, Greece
3	BT: Baghdad	Moscow, Russia
4	---	Abu Dhabi, UAE
5	---	Tashkent
6	---	Astana
7	---	Bangkok
8	CCT: China Coast	Beijing

Hours from GMT	Time Zone	Cities
9	JST: Japan Standard	Tokyo
10	GST: Guam Standard	Sydney
11	---	Magadan
12	IDLE: International Date Line East NZST: New Zealand Standard	Wellington, New Zealand

**13.7.** If all of the information you entered is correct press save to confirm(Figure 45). If it does not, check your web interface information again.







**Figure 45**


**13.8.** Once the setup is completed, disconnect your device from the console WiFi. Otherwise, the console will automatically exit WAP mode. (Figure 46)



**Figure 46**

If the connection is successful, the Wi-Fi console's status Wi-Fi icon  will stop flashing and remain on.

 **NOTE:** When the console successfully connects to your any website of weather servers, the data signal icon  will appear on the LCD display(behind the Outdoor humidity). If the data signal icon  is flashing, the console is currently uploading to the

server. If the icon  disappears, the console is not connected to the weather server for more than 30 minutes.

### 13.9 Viewing your Data on Weather Underground

Visit: <http://www.wunderground.com/personal-weather-station/dashboard?ID=STATIONID>

where STATIONID is your personal station ID (example, KCALOSAN782).

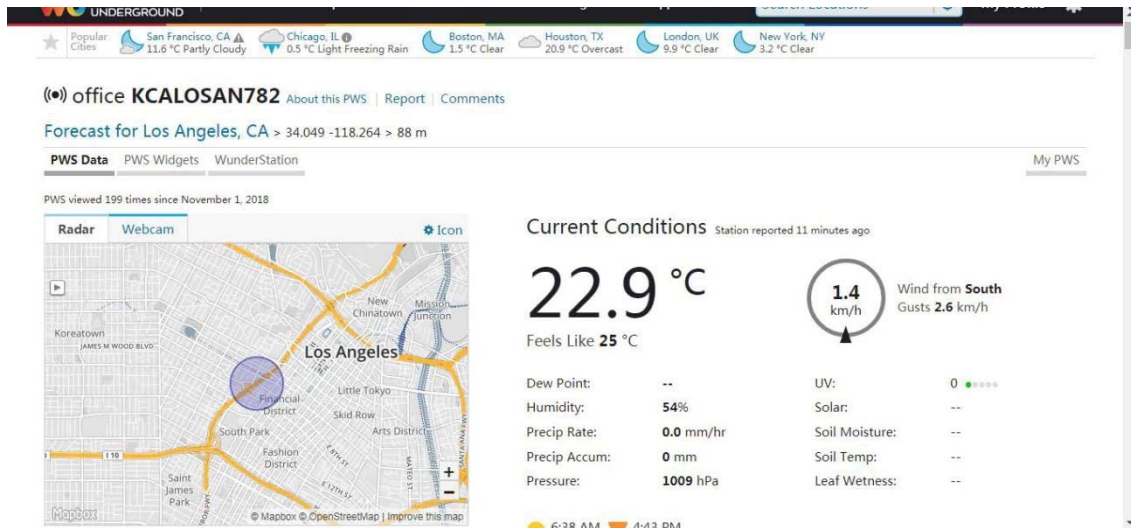



Figure 47

#### Multiple Sensor Features

Wunderground.com does not support multiple sensor channels.

 **Note:** The current temperature and humidity data is the Integrated Outdoor Transmitter.


### 13.10. View your data on Weathercloud.

Visit the website [www.weathercloud.net](http://www.weathercloud.net) and sign in with your e-mail address and password. Then you will go to the weather data of your weather station automatically.

## 14. Upgrade firmware

You may get the latest firmware of the console as below

14.1. When you first power up(AC) the console, or press and hold the MIN/MAX/-(WiFi) button for three seconds in normal mode, the console icon(behind the Outdoor humidity))

 will flash to signify that it has entered WAP (wireless access point) mode, and is ready to enter for WIFI settings.

14.2. Use your smart phone, tablet, or computer to connect to the console through WiFi(reference: **Example 1-4 of WiFi Setting** ).


14.3. Once connected, enter the following IP address into the browser's address bar:

<http://192.168.5.1/upgrade.html>




**Figure 48**

14.4. Once connection succeeds, it will jump to “Upload Setting” screen automatically.

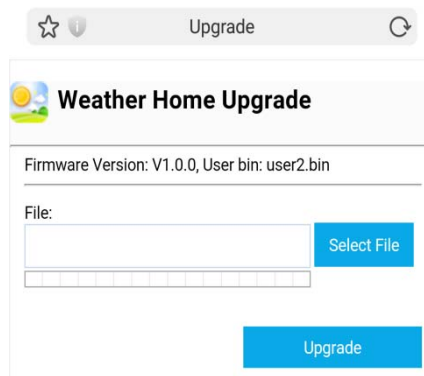


**Figure 49**

14.5. Press Select File key to select the upgraded firmware as figure 50.

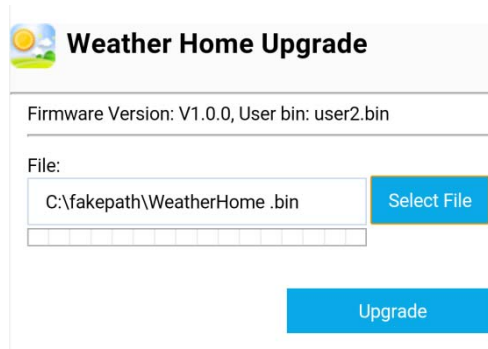

**Figure 50**

14.6. If update successfully when press Upgrade key. Then you will see.

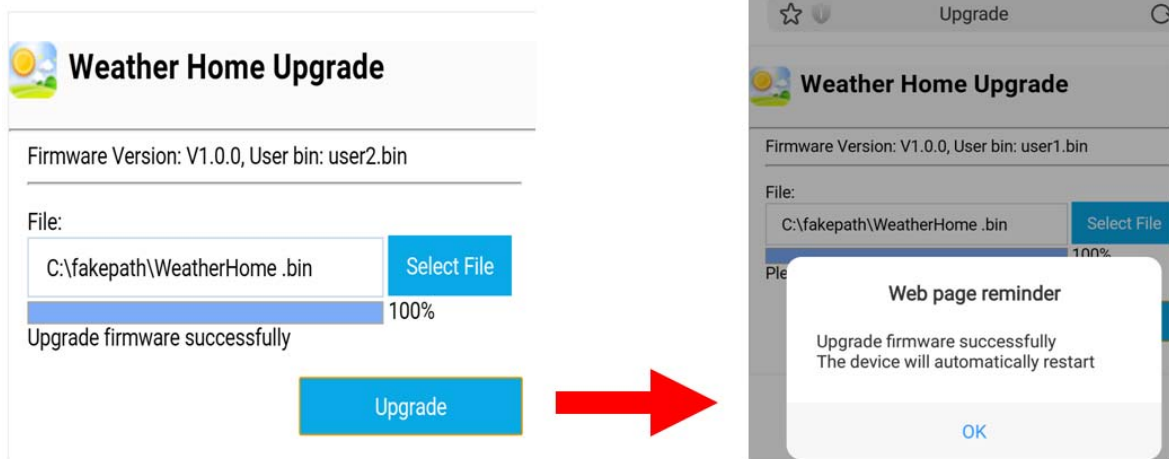

**Figure 51**


NOTE: In this upgrade only Wifi firmware is updated. The console does not reset.

14.7. Once the upgrade is completed, the console will automatically exit WAP mode.

## 15. Other Console Features





The following section describes additional features and display icons.

### 15.1 Weather Forecasting

 **Note:** The weather forecast or pressure tendency is based on the rate of change of barometric pressure. In general, when the pressure increases, the weather improves (sunny to partly cloudy) and when the pressure decreases, the weather degrades (cloudy to rain).

The weather forecast is an estimation or generalization of weather changes in the next 24 to 48 hours, and varies from location to location. The tendency is simply a tool for projecting weather conditions and is never to be relied upon as an accurate method to predict the weather.


### 15.2 Weather Icons

Condition	Icon	Description
Sunny		Pressure is rising and the previous condition is partly cloudy.
Partly Cloudy		Pressure is falling and the previous condition is sunny or Pressure is rising and the previous condition is cloudy.
Cloudy		Pressure is falling and the previous condition is partly cloudy or Pressure is rising and the previous condition is rainy.
Rainy		Pressure is falling and the previous condition is cloudy.

### 15.3 Moon Phase

The following moon phases are displayed based on the calendar date.



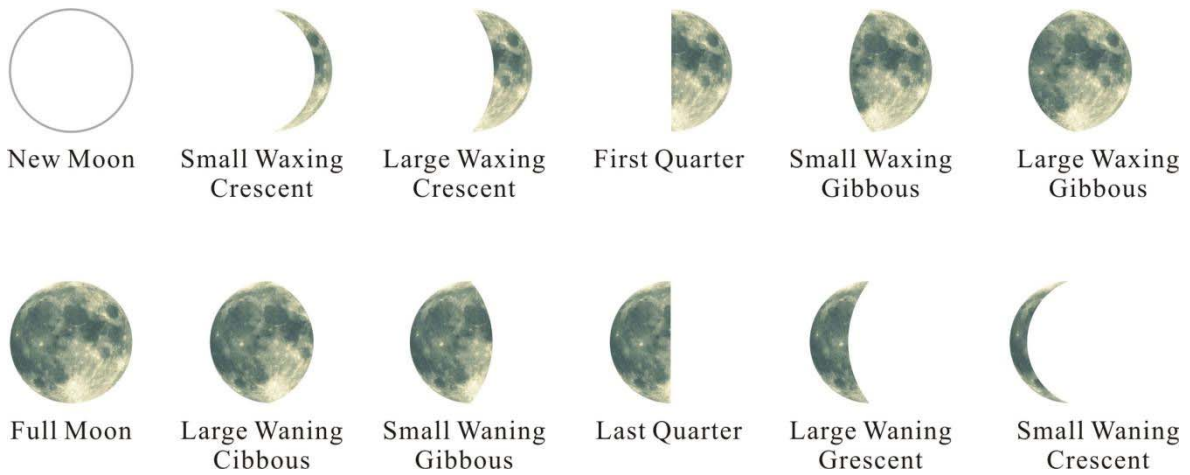

### 15.4 Feels Like Temperature and AT

Feels like temperature is a combination of Heat Index and Wind Chill.

At temperatures less than 4.4C(40°F), the wind chill is displayed, as shown in the National Weather Service Wind Chill Table below:

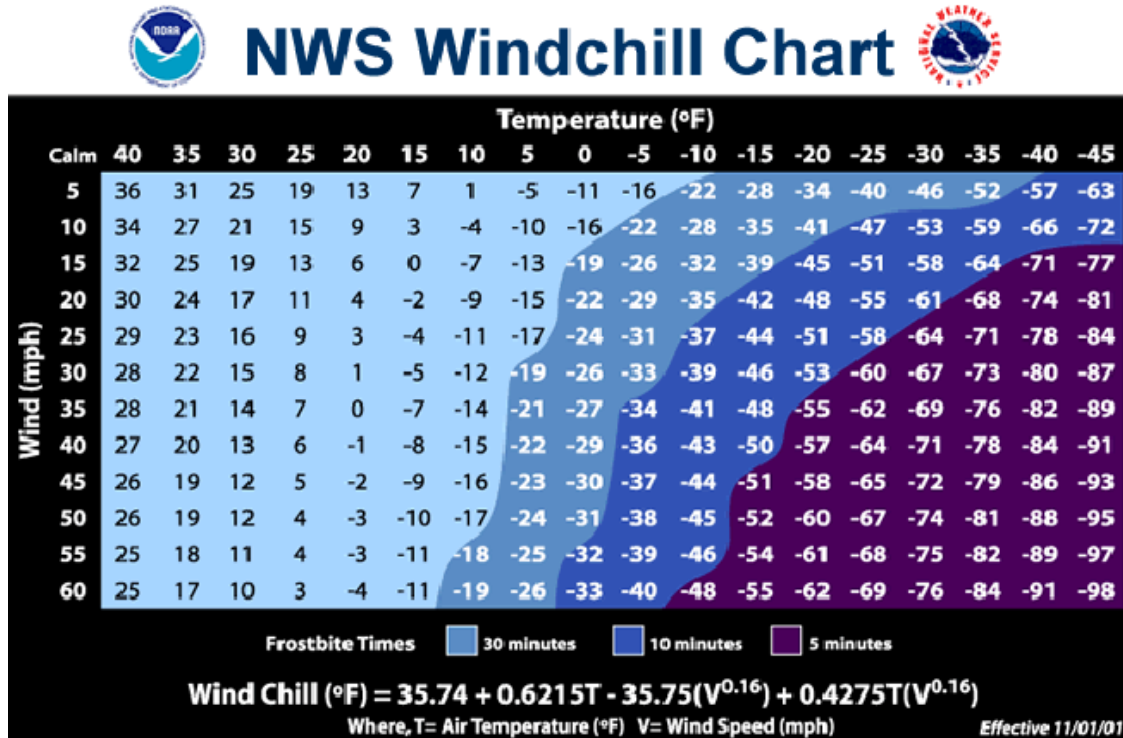


Figure 17

At temperatures greater than 26.7C(80°F), the heat index is displayed, as shown in the National Weather Service Heat Index Table below:



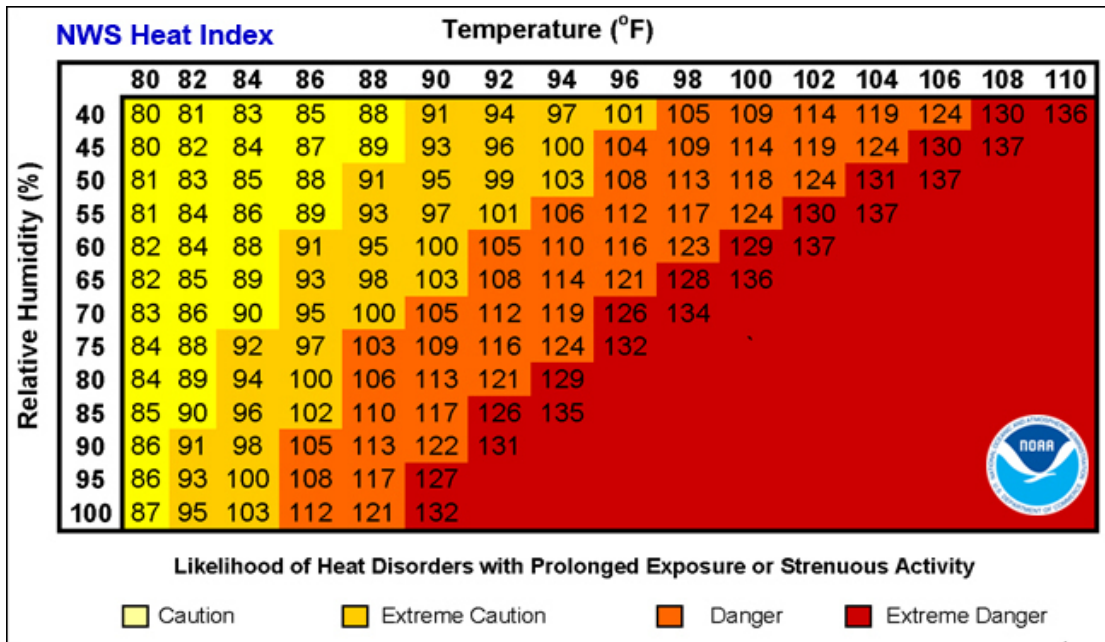


Figure 18

When the temperature is between 4.4C (40°F) and 26.7C (80°F), the OUT temperature is displayed (Feels Like temperature is the same as OUT temperature).

**The concept of apparent temperature (AT)** is a linear regression that is not restricted, and is more appropriate to outside conditions because it includes wind. and was intended as an assessment of what exposed body surfaces feel like in cold, windy conditions. Regression equations of this universal scale are formulated for indoors, outdoors in shade but exposed to wind, and outdoors exposed to wind and solar radiation. Of these, outdoors in shade but exposed to wind, has been chosen as most informative.

## 15.5 Pressure Threshold Setting

The pressure threshold (the negative or positive rate of change of pressure signifying a change in the weather) can be adjusted from 2 mbar/hour to 4 mbar/hour (default level 2 mbar/hour).

The lower the level pressure threshold setting, the higher sensitivity for weather forecast changes. Locations that experience frequent changes in air pressure require a higher setting compared to locations where the air pressure is typically stagnant.

## 16.6 Restore Factory Default

To restore the console to factory default (WiFi network ,Weather server and display), press the MIN/MAX/- key while installing the batteries at the same time. Wait 3 seconds after installing the batteries to let go of the MIN/MAX /- key.

## 16.Specifications

### 16.1 Wireless Specifications

- Line of sight wireless transmission (in open air): 100m.
- Frequency: 433 MHz
- Thermo-hygrometer Transmitter update interval: 60 seconds

- Integrated Outdoor transmitter interval: 16 seconds

## 16.2 Measurement Specifications

The following table provides specifications for the measured parameters.

Measurement	Range	Accuracy	Resolution
Indoor Temperature	0 to 60 °C	± 1 °C	0.1 °C
Outdoor Temperature	-40 to 60 °C	± 1 °C	0.1 °C
Indoor Humidity	10 to 99 %	± 5% (only guaranteed between 20 to 90%)	1 %
Outdoor Humidity	10 to 99%	± 5% (only guaranteed between 20 to 90%)	1 %
Sensors 1-8 Temperature	-40 to 60 °C	± 1 °C	0.1 °C
Sensors 1-8 Humidity	10 to 99%	± 5% (only guaranteed between 20 to 90%)	1 %
UV Index	1 to 15+	± 1	± 1
Sunlight	0 to 200klux	± 15%	± 15%
Rain	0 to 9999mm	<15mm:±1 mm, 15mm to 9999mm:±7%	<1000mm (0.3mm) >1000mm (1mm)
Wind Direction	0 - 360 °	± 10° (16 point compass)	± 1° (16 point compass)
Wind Speed	0 to 50 m/s	2 m/s ~10 m/s: ±3m/s, 10m/s ~50 m/s: ±10% (whichever is greater)	0.1 m/s
Barometric Pressure:	300 to 1100 hpa	± 3 hpa	0.1 hpa

## 16.3 Power Consumption

- Base station (display console) : 3 x AAA 1.5V Alkaline or Lithium batteries (not included)
- Adaptor: 6V~ 500mA (included)
- Thermo-hygrometer Sensor : 2 x AAA alkaline batteries or Lithium batteries (not included)
- Integrated Outdoor Transmitter: 3xAAA alkaline batteries or Lithium batteries (not included)
- Battery life: Minimum 12 months for base station with excellent reception. Intermittent reception may reduce the battery life.  
Minimum 12 months for Integrated Outdoor Transmitter (use lithium batteries in cold weather climates less than -20 °C), The primary power source is the solar panel. The batteries provide backup power when there is limited solar energy

Minimum 12 months for sensors (use lithium batteries in cold weather climates less than -20 °C)

### 16.4 WiFi Specifications

1. WiFi Standard: 802.11 b/g/n
2. WiFi Console RF Frequency: 2.4 GHz
3. Setup User Interface (UI) support setup device: Build-in WiFi with WAP mode smart device, including laptops, computers, smart phones and smart pads.
4. Recommend web browser for setup UI: Web browser support of HTML 5, such as the latest versions of Chrome, Safari, IE, Edge, Firefox or Opera.
5. Line of sight WiFi RF transmission (in open air): 20meter (80 feet)

### 17.Maintenance

1.Clean the rain gauge of Integrated Outdoor Transmitter once every 3 months.

- Unscrew the rain collector funnel by turning it 30°counter clockwise.
- Gently remove the rain collector funnel.
- Clean and remove any debris or insects.
- Install the collector funnel after it has been cleaned and completely dried.






Figure 52

2. Replace the wind, rain and thermo-hygrometer transmitter batteries once every 1-2 years

### 18. Troubleshooting Guide.

Problem	Solution
---------	----------

Problem	Solution
<p>Wireless remote not reporting in to console.</p> <p>There are dashes (--.) on the display console.</p>	<p>If any of the sensor communication is lost, dashes (--.) will be displayed on the screen. To reacquire the signal, press and hold the <b>CHANNEL/+</b> button for 3 seconds, choose the lost sensor and the remote search icon  will be constantly displayed. Once the signal is reacquired, the remote search icon  will turn off, and the current values will be displayed.</p> <p>The maximum line of sight communication range is 100 m and 30 m under most conditions. Move the sensor assembly closer to the display console.</p> <p>If the sensor assembly is too close (less than 1.5m), move the sensor assembly away from the display console.</p> <p>Make sure the remote sensor LCD display is working and the transmitter light is flashing once per 60 seconds.</p> <p>Install a fresh set of batteries in the remote thermo-hygrometer. For cold weather environments, install lithium batteries.</p> <p>Make sure the remote sensors are not transmitting through solid metal (acts as an RF shield), or earth barrier (down a hill).</p> <p>Move the display console around electrical noise generating devices, such as computers, TVs and other wireless transmitters or receivers.</p> <p>Move the remote sensor to a higher location. Move the remote sensor to a closer location.</p>
<p>Temperature sensor reads too high in the day time.</p>	<p>Make sure the thermo-hygrometer is mounted in a shaded area. The pre preferred location is a north facing wall because it is in the shade most of the day.</p>
<p>Indoor and Outdoor Temperature do not agree</p>	<p>Allow up to one hour for the sensors to stabilize due to signal filtering. The indoor and outdoor temperature sensors should agree within 2 °C (the sensor accuracy is ± 1 °C).</p> <p>Use the calibration feature to match the indoor and outdoor temperature to a known source.</p>
<p>Indoor and Outdoor Humidity do not agree</p>	<p>Allow up to one hour for the sensors to stabilize due to signal filtering. The indoor and outdoor humidity sensors should agree within 10 % (the sensor accuracy is ± 5 %).</p> <p>Use the calibration feature to match the indoor and outdoor humidity to a known source.</p>
<p>Display console contrast is weak</p>	<p>Replace console batteries with a fresh set of batteries.</p>

Problem	Solution
<p>WiFi does not display on console.</p>	<p>Check your router for problems.</p> <ol style="list-style-type: none"> <li>1. <b>Check WiFi symbol on the display.</b> If wireless connectivity is successful the WiFi icon  will be displayed in the time field.</li> <li>2. Make sure your modem WiFi settings are correct (network name, and password).</li> <li>3. Make sure the console is plugged into AC power. The console will not connect to WiFi when powered by batteries only.</li> <li>4. The console only supports and connects to 2.4 GHz routers. If you own a 5 GHz router, and it is a dual band router, you will need to disable the 5 GHz band, and enable the 2.4 GHz band.</li> <li>5. The console does not support guest networks.</li> </ol>
<p>Data not reporting to <a href="http://www.wunderground.com">www.wunderground.com</a> or <a href="http://www.weathercloud.net">www.weathercloud.net</a></p>	<ol style="list-style-type: none"> <li>1. <b>Confirm your password or key is correct. It is the password you registered on Wunderground.com.</b> Your Wunderground.com password cannot begin with a non-alphanumeric character (a limitation of Wundeground.com, not the station). Example, \$worknet is not a valid password, but worknet\$ is valid.</li> <li>2. <b>Confirm your station ID is correct.</b></li> <li>3. Make sure the date and time is correct on the console. If incorrect, you may be reporting old data, not real time data.</li> <li>4. Make sure your time zone is set properly. If incorrect, you may be reporting old data, not real time data.</li> <li>5. Check your router firewall settings. The console sends data via Port 80.</li> </ol>

# FCC Statement

## **Statement according to FCC part 15.19:**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

## **Statement according to FCC part 15.21:**

Modifications not expressly approved by this company could void the user's authority to operate the equipment.

## **Statement according to FCC part 15.105:**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.