



E220-400T30S User Manual



CONTENTS

1. OVERVIEW	3
1.1 INTRODUCTION	3
1.2 FEATURES	3
1.3 APPLICATION	4
2. SPECIFICATION AND PARAMETER	4
2.1 LIMIT PARAMETER.....	4
2.2 OPERATING PARAMETER	4
3 SIZE AND PIN DEFINITION	6
4. CONNECT TO MCU	8
5 FUNCTION DESCRIPTION	9
5.1 FIXED TRANSMISSION	9
5.2 BROADCASTING TRANSMISSION	9
5.3 BROADCASTING ADDRESS.....	10
5.4 MONITOR ADDRESS	10
5.5 RESET	10
5.6 AUX DESCRIPTION.....	10
5.6.1 Indication of UART output	10
5.6.2 Indication of wireless transmitting	11
5.6.3 Configuration procedure of module	11
5.6.4 Notes for AUX	11
6 OPERATING MODE	12
6.1 MODE SWITCHING	12
6.2 NORMAL MODE (MODE 0)	13
6.3 WOR TRANSMITTING MODE (MODE 1)	13
6.4 WOR RECEIVING MODE (MODE 2)	13
6.5 DEEP SLEEP MODE (MODE 3)	14
7 REGISTER READ AND WRITE CONTROL	14
7.1 COMMAND FORMAT	14
7.2 REGISTER DESCRIPTION	15
7.3 FACTORY DEFAULT PARAMETER	17
8 CONFIGURATION INSTRUCTIONS ON COMPUTER	18
9 HARDWARE DESIGN	18
10 FAQ	19
10.1 COMMUNICATION RANGE IS TOO SHORT.....	19
10.2 MODULE IS EASY TO DAMAGE	20
10.3 BER(BIT ERROR RATE) IS HIGH	20
11 PRODUCTION GUIDANCE	20

11.1 REFLOW SOLDERING TEMPERATURE	20
11.2 REFLOW SOLDERING CURVE	21
12 E220 SERIES	21
13 ANTENNA RECOMMENDATION	22
14 PACKAGE FOR BATCH ORDER	23
REVISION HISTORY	23
FCC STATEMENT	24
ABOUT US	24

1. Overview

1.1 Introduction

E220-400T30S is a wireless serial port module (UART) based on SEMTECH's SX1268, working at 433.125, TTL level output, compatible with 3.3V and 5V IO port voltage.



Compared with the traditional SX1278 solution, it has a longer transmission distance, faster speed, lower power consumption, and smaller size; it supports functions such as air wake-up, wireless configuration, carrier monitoring, automatic relay. communication keys and sub-package length setting. Ebyte provides customized development services on it. An obvious advantage is that SX1268 covers wider frequency range.

1.2 Features

- SX1268 LoRa chip brings lower power consumption, further communication distance and stronger anti-interference ability;
- Communication distance tested is up to 10 km;
- software multi-level adjustable;
- The communication allows users to set key that cannot be read, greatly improving the user data privacy;
- Wireless parameters configuration, sent via wireless instruction packet, or read a wireless remote configuration module parameter;
- Air wake up, that is, ultra-low power consumption function, suitable for a battery-powered application solutions;
- Supports fixed transmission, radio transmission, channel to monitor;
- Supports the global license-free ISM 433MHz for global meter reading;
- Parameters automatically saved when power off, it will work according to previous parameters once powered on.
- Effective watchdog design, once an exception occurs, the module will be in automatic restart, and can continue to work on previous parameter;
- Supports RSSI for evaluating signal quality, improving communication network, and ranging;
- Supports LBT for monitoring channel environmental noise before sending data, and for improving communication.
- Supports air data rate of 2.4kbps~62.5kbps;
- Supports 3.0V~5.5V power supply, power supply over 5.0 V can guarantee the best performance;
- Industrial grade standard design, support -40 ~ 85 °C for working over a long time;
- Dual antenna (IPEX and stamp hole) optional, good for secondary development and integration.

1.3 Application

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors;
- Wireless alarm security system;
- Building automation solutions;
- Wireless industrial-grade remote control;
- Health care products;
- Advanced Meter Reading Architecture(AMI);
- Automotive industry applications.

2. Specification and parameter

2.1 Limit parameter





Main parameter	Performance		Remark
	Min.	Max.	
Power supply (V)	0	5.5	Voltage over 5.5V will cause permanent damage to module
Blocking power (dBm)	-	10	Chances of burn is slim when modules are used in short distance
Operating temperature (°C)	-40	85	/

2.2 Operating parameter

Main parameter		Performance			Remark
		Min.	Typ.	Max.	
Operating voltage (V)		3.0	5.0	5.5	≥5.0 V ensures output power
Communication level (V)		-	3.3	-	For 5V TTL, it may be at risk of burning down
Operating temperature (°C)		-40	-	85	Industrial design
Operating frequency (MHz)		433.125	-	433.125	Support ISM band
Power consumption	TX current (mA)	-	610	-	Instant power consumption
	RX current (mA)	-	17	-	-
	Sleep current (μA)	-	3	-	Software is shut down
Receiving sensitivity (dBm)		-	-129	-	-124dbm,BW_L=125kHz,SF = 7,LORA™; -129dbm,BW_L=125kHz,SF = 9,LORA™; -121dbm,BW_L=250kHz,SF = 7,LORA™; -129dbm,BW_L=250kHz,SF =

				10,LORA™; -117dbm,BW_L=500kHz,SF = 7,LORA™; -127dbm,BW_L=500kHz,SF = 11,LORA™;
Air data rate (bps)	2.4k	2.4k	62.5k	Controlled via user's programming
Distance for reference	10km			Test condition: clear and open area, antenna gain: 0dBi, antenna height: 2.5m, air data rate: 2.4kbps
TX length	240 Byte			Can be configured via command as 32/64/128/240 bytes per packet to transmit
Buffer	256 Byte			-
Modulation	GFSK			-
	LoRa			-
Communication interface	UART			TTL level
Package	SMD			-
Connector	1.27 mm			-
Size	40.5*25 mm			-
Antenna	IPEX/stamp hole			50 ohm impedance

3 Size and pin definition

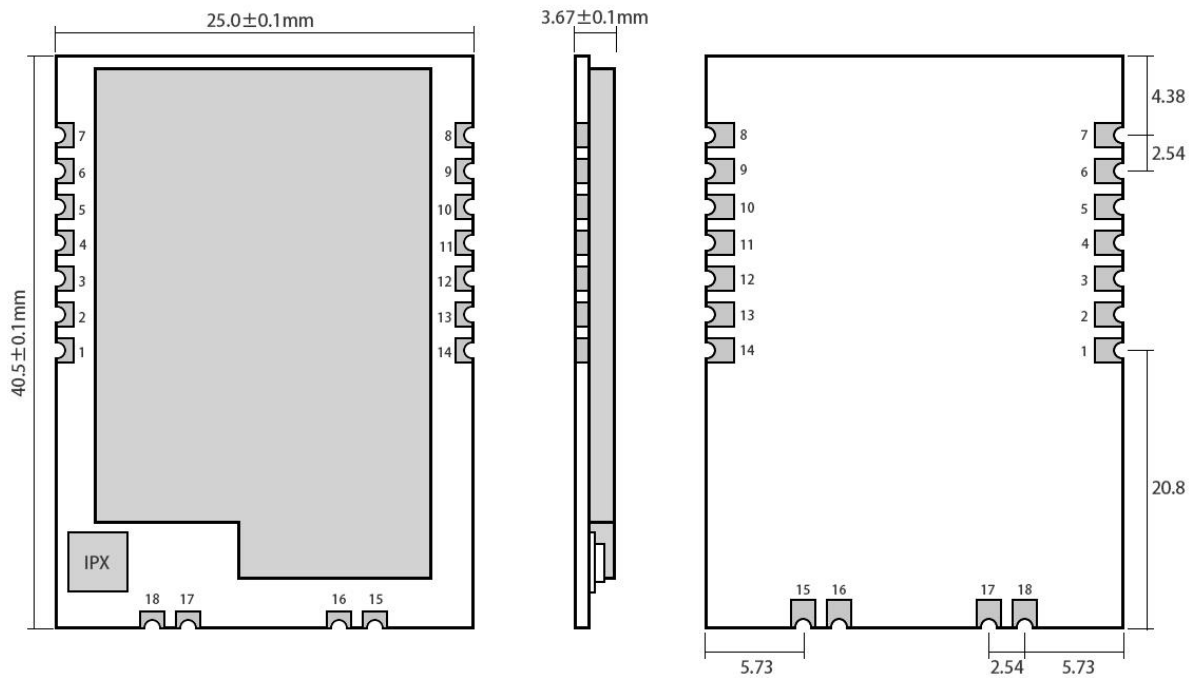


Pad quantity : 18
Unit: mm

No.	Name	Direction	Function
1	GND	-	Ground
2	GND	-	Ground
3	GND	-	Ground
4	GND	-	Ground
5	M0	Input (weak pull-up)	Work with M1 to decide 4 working modes of module (not suspended, if not used, could be grounded).
6	M1	Input (weak pull-up)	Work with M0 to decide 4 working modes of module (not suspended, if not used, could be grounded).
7	RXD	Input	TTL UART inputs, connects to external (MCU, PC) TXD output pin. Can be configured as open-drain or pull-up input. Ground

8	TXD	Output	TTL UART outputs, connects to external RXD (MCU, PC) input pin. Can be configured as open-drain or push-pull output
9	AUX	Output	To indicate module 's working status & wakes up the external MCU. During the procedure of self-check initialization, the pin outputs low level. Can be configured as push-pull output (can be suspended).
10	VCC	-	Power supply : 3.0~ 5.5V DC
11	GND	-	Ground
12	NC	-	Can be suspended
13	GND	-	Ground
14	NC	-	Can be suspended
15	NC	-	Can be suspended
16	NC	-	Can be suspended
17	NC	-	Can be suspended
18	NC	-	Can be suspended
19	GND	-	Ground
20	GND	-	Ground
21	ANT	-	Ground
22	GND	-	High frequency signal output, 50 ohm characteristic impedance


4. Connect to MCU

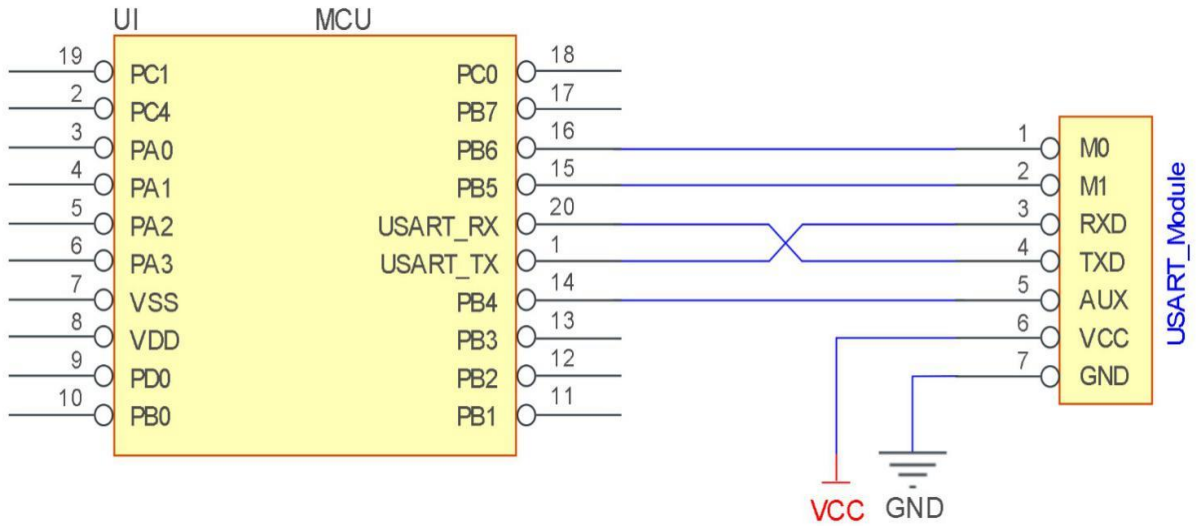

No.	Description (STM8L MCU)
1	The UART module is TTL level.
2	For some MCU works at 5VDC, it may need to add 4-10k pull-up resistor for the TXD & AUX pin.

5 Function description

5.1 Fixed transmission

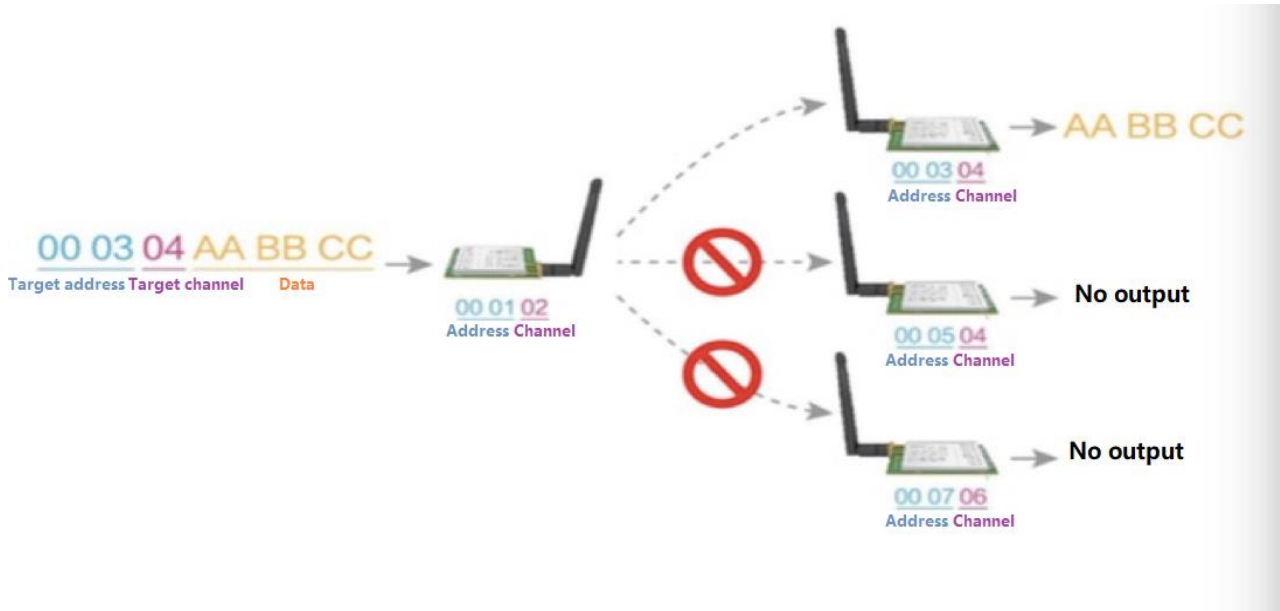

5.2 Broadcasting transmission



5.3 Broadcasting address

- For example: Set the address of module A as 0xFFFF or 0x0000, and the channel as 0x04;
- When module is the transmitter (transparent transmission), all modules under channel 0x04 will receive the data, the purpose of broadcast is realized.

5.4 Monitor address

- For example: Set the address of module A as 0xFFFF or 0x0000, and the channel as 0x04;
- When module A is the receiver, it can receive the data sent from all modules under channel 0x04, the purpose of monitor is realized.

5.5 Reset


When the module is powered, AUX outputs low level immediately, conducts hardware self-check and sets the operating mode based on user's parameters. During the process, the AUX remains low level. After the process completed, the AUX outputs high level and starts to work as per the operating mode combined by M1 and M0. Therefore, users need to wait the AUX rising edge as the start of module's normal work.

5.6 AUX description

- AUX Pin can be used as indication for wireless send & receive buffer and self-check.
- It can indicate whether there are data that are not sent yet via wireless way, or whether all wireless data has been sent through UART, or whether the module is still in the process of self-check initialization.

5.6.1 Indication of UART output


- To wake up external MCU

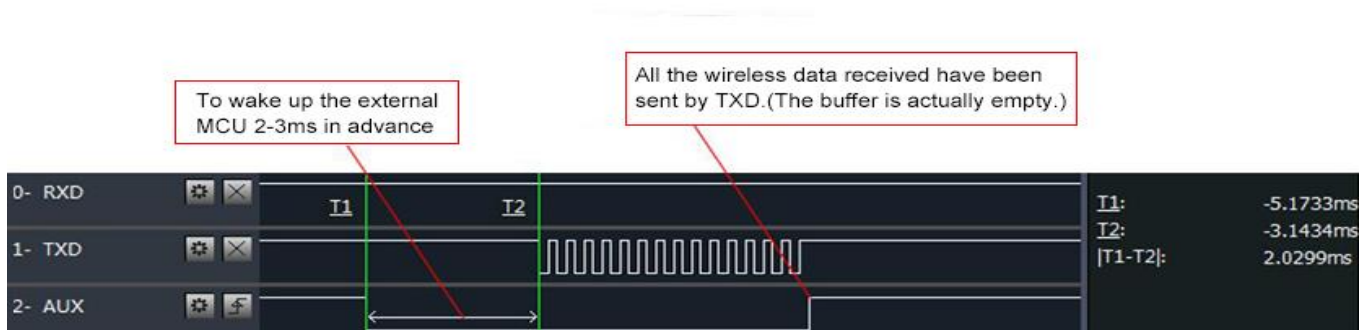

Timing Sequence Diagram of AUX when TXD pin transmits


5.6.2 Indication of wireless transmitting

Buffer (empty): the internal 256 bytes data in the buffer are written to the RFIC (Auto sub-packaging). When AUX=1, the user can input data less than 256 bytes continuously without overflow. Buffer (not empty): when AUX=0, the internal 256 bytes data in the buffer have not been written to the RFIC completely. If the user starts to transmit data at this circumstance, it may cause overtime when the module is waiting for the user data, or transmitting wireless sub package. When AUX = 1, it does not mean that all the UART data of the module have been transmitted already, perhaps the last packet of data is still in transmission.

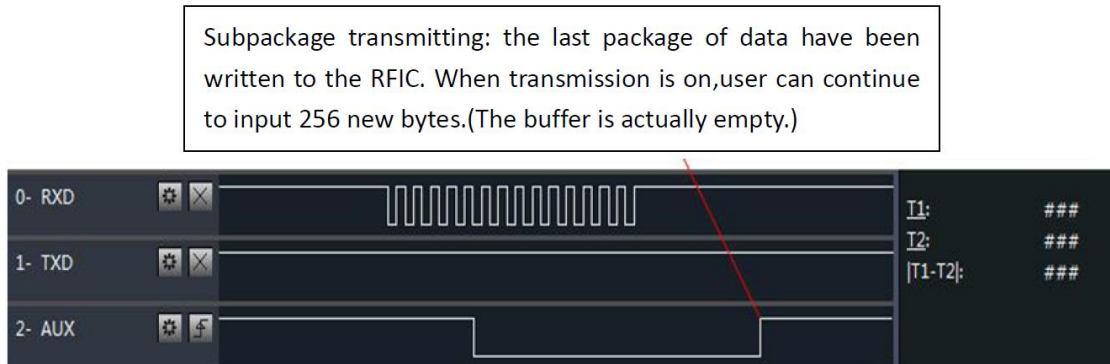

5.6.3 Configuration procedure of module

- Only happened when power-on resetting or exiting sleep mode

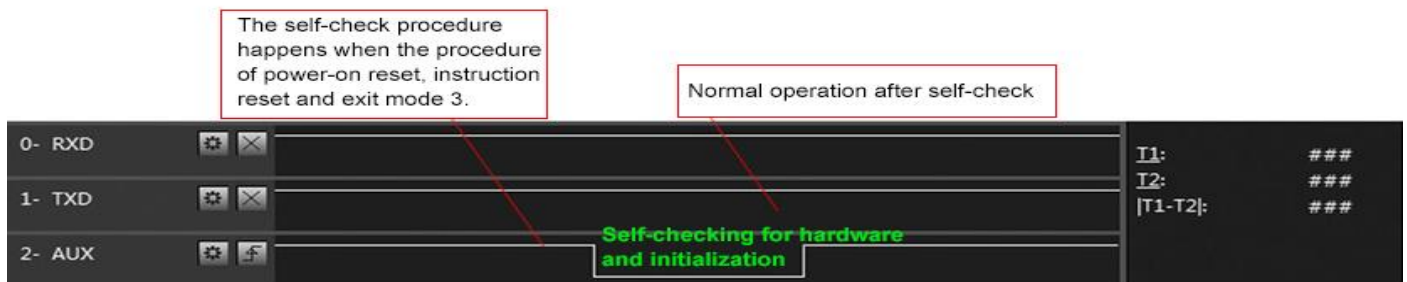

Timing Sequence Diagram of AUX when self-check

5.6.4 Notes for AUX

No.	Description
1	For function 1 & function 2 mentioned above, the priority should be given to the one with low level output, which means if it meets each of any low level output condition, AUX outputs low level, if none of the low level condition is met, AUX outputs high level.
2	When AUX outputs low level, it means the module is busy & cannot conduct operating mode checking. Within 1ms since AUX outputs high level, the mode switch will be completed.
3	After switching to new operating mode, it will not work in the new mode immediately until AUX rising edge lasts for 2ms . If AUX stays on the high level, the operating mode switch can be effected immediately.

4	When the user switches to other operating modes from mode 3 (sleep mode) or it's still in reset process, the module will reset user parameters, during which AUX outputs low level.
5	Due to the characteristics of the LoRa modulation method, the information transmission delay is much longer than that of FSK. For example, at 2.4kbps airspeed, the 100-byte transmission delay is about 1.5 seconds. It is recommended that customers do not transmit large amounts of data at low airspeeds, so as to avoid communication abnormalities caused by data loss due to data accumulation.

6 Operating mode

There are four operating modes, which are set by M1 and M0, the details are as follows:

Mode(0-3)	M1	M0	Description	Remark
0 Normal mode	0	0	UART and wireless channel are open, transparent transmission is on	-
1 WOR transmitting mode	0	1	Can be defined as WOR transmitter and WOR receiver	Supports wake up over air
2 WOR receiving mode	1	0	Only work as WOR receiver	-
3 Deep sleep mode	1	1	For parameter configuration	-

6.1 Mode switching

No.	Remark
1	<ul style="list-style-type: none"> ● Users can combine M1 and M0 with high and low levels to determine the operating mode. Two GPIOs of the MCU can be used to control mode switching; ● After changing M1 and M0: If the module is idle, after 1ms, it can start working according to the new mode; ● If the serial port data of the module has not been transmitted through the wireless, the new working mode can be switched after the transmission is completed; ● If the module receives the wireless data and transmits the data through the serial port, it needs to finish transmission before switching the new working mode; ● Therefore, mode switching can only be valid when AUX output is 1, otherwise it will delay switching.
2	<ul style="list-style-type: none"> ● For example, users continuously inputs a large amount of data and simultaneously performs mode switching. At this time, the switching mode operation is invalid; the module will process all the user data before performing the new mode detection; ● Therefore, the general recommendation is to detect the output state of the AUX pin and switch after 2ms when the output is high.
3	<ul style="list-style-type: none"> ● When the module is switched from other modes to sleep mode, if the data has not been processed yet; ● The module will process these data (including receiving and sending) before entering sleep mode. This feature can be used for fast sleep, which saves power; for example, the transmitter module works in mode 0, the user transmits the serial port data "12345", and then does not have to wait for the AUX pin to be idle (high level), and can directly switch to sleep mode. And the user's main MCU immediately sleeps, the module will automatically transmit the user data through the wireless, and automatically enters sleep within 1ms; ● This saves MCU's working time and reduces power consumption.

4	<ul style="list-style-type: none"> ● Similarly, any mode switching can use this feature. After the module processes the current mode event, it will automatically enter the new mode within 1ms; thus eliminating the need for the user to query AUX and achieve the purpose of fast switching; ● For example, switching from the transmit mode to the receive mode; the user MCU can also enter sleep before the mode switch, and use the external interrupt function to acquire the AUX change, thereby performing mode switching.
5	<ul style="list-style-type: none"> ● This operation mode is very flexible and efficient, and is designed according to the user's MCU's operation convenience, and can reduce the workload of the entire system as much as possible, improve system efficiency, and reduce power consumption.

6.2 Normal mode (Mode 0)

Type	M0 = 0, M1 = 0
Transmitting	Users can input data through the serial port and the module will start wireless transmission.
Receiving	The module wireless receiving function is turned on, and after receiving the wireless data, it will be output through the serial port TXD pin.

6.3 WOR transmitting mode (Mode 1)

Type	M0 = 1, M1 = 0
Transmitting	Wireless data transmitting is enabled
Receiving	Wireless data receiving is enabled

6.4 WOR receiving mode (Mode 2)

Type	M0 = 0, M1 = 1
Transmitting	Wireless transmitting off
Receiving	Wireless receiving on

6.5 Deep sleep mode (Mode 3)

Type	M0 = 1, M1 = 1
Transmitting	Unable to transmit wireless data
Receiving	Unable to receive wireless data
Configuration	Users can access the registers to configure the module's operation state.
Note	When from the sleep mode to other modes, the module will reconfigure the parameters. During the configuration process, AUX will remain low; After configuration, it outputs high level, we suggest that user test rising edge T_BUSY.

7 Register read and write control

7.1 Command format

In configuration mode (mode 2: M1 = 1, M0 = 0), the list of supported commands are as follows (only 9600, 8N1 format is supported when):

No.	Command format	Description
1	Set register	Command: C0+starting address+length+parameters Response: C1+starting address+length+parameters E.g 1: Channel is 0x09 command starting address length parameter Send: C0 05 01 09 Return: C1 05 01 09 E.g 2: Configure module address (0x1234), network address (0x00), serial port (9600 8N1) and air data rate (2.4K). Send: C0 00 04 12 34 00 61 Return: C1 00 04 12 34 00 61
2	Read register	Command: C1+starting address+ length Response: C1+starting address+length+parameters E.g 1: Read channel command starting address length parameter Send: C1 05 01 09 Return: C1 05 01 09 E.g 2: Read module address, network address, serial port and air data rate. Send: C1 00 04 Return: C1 00 04 12 34 00 61
3	Set temporary registers	Command: C2+starting address+parameters Response: C1+starting address+length+parameters E.g 1: Channel is 0x09 command starting address length parameter Send: C2 05 01 09 Return: C1 05 01 09

		E.g 2: Configure module address (0x1234), network address (0x00), serial port (9600 8N1) and air data rate (2.4K). Send: C2 00 04 12 34 00 61 Return: C1 00 04 12 34 00 61															
5	Wireless configuration	Command: CF CF + normal command Respond: CF CF + normal respond E.g 1: Channel is 0x09 <table border="1"> <thead> <tr> <th>Command head</th> <th>command</th> <th>starting address</th> <th>length</th> <th>parameter</th> </tr> </thead> <tbody> <tr> <td>Send: CF CF</td> <td>C0</td> <td>05</td> <td>01</td> <td>09</td> </tr> <tr> <td>Return: CF CF</td> <td>C1</td> <td>05</td> <td>01</td> <td>09</td> </tr> </tbody> </table> E.g 2: Configure module address (0x1234), network address (0x00), serial port (9600 8N1) and air data rate (2.4K). Send: CF CF C2 00 04 12 34 00 61 Return: CF CF C1 00 04 12 34 00 61	Command head	command	starting address	length	parameter	Send: CF CF	C0	05	01	09	Return: CF CF	C1	05	01	09
Command head	command	starting address	length	parameter													
Send: CF CF	C0	05	01	09													
Return: CF CF	C1	05	01	09													
6	Wrong format	Wrong format respond: FF FF FF															

7.2 Register description

Address	Read or write	Name	Description	Remark																																																		
00H	Read/Wr ite	ADDH	ADDH (default 0)	<ul style="list-style-type: none"> The module address is high byte and low byte. Note: When the module address is FFFF, it can be used as the broadcast and monitor address, that is the module will not perform address filtering. 																																																		
01H	Read/Wr ite	ADDL	ADDL (default 0)																																																			
02H	Read/Wr ite	REG0	<table border="0"> <tr> <td>7, 6, 5</td> <td>UART: Serial port rate (bps)</td> </tr> <tr> <td>000:</td> <td>1200</td> </tr> <tr> <td>001:</td> <td>2400</td> </tr> <tr> <td>010:</td> <td>4800</td> </tr> <tr> <td>011:</td> <td>9600 (default)</td> </tr> <tr> <td>100:</td> <td>19200</td> </tr> <tr> <td>101:</td> <td>38400</td> </tr> <tr> <td>110:</td> <td>57600</td> </tr> <tr> <td>111:</td> <td>115200</td> </tr> <tr> <td colspan="2">-----</td> </tr> <tr> <td>4, 3:</td> <td>Serial parity bit</td> </tr> <tr> <td>00:</td> <td>8N1 (default)</td> </tr> <tr> <td>01:</td> <td>8O1</td> </tr> <tr> <td>10:</td> <td>8E1</td> </tr> <tr> <td>11:</td> <td>8N1 (equal to 00)</td> </tr> <tr> <td colspan="2">-----</td> </tr> <tr> <td>2, 1, 0,</td> <td>air data rate</td> </tr> <tr> <td>000:</td> <td>2.4k (default)</td> </tr> <tr> <td>001:</td> <td>2.4k (default)</td> </tr> <tr> <td>010:</td> <td>2.4k (default)</td> </tr> <tr> <td>011:</td> <td>4.8k</td> </tr> <tr> <td>100:</td> <td>9.6k</td> </tr> <tr> <td>101:</td> <td>19.2k</td> </tr> <tr> <td>110:</td> <td>38.4k</td> </tr> <tr> <td>111:</td> <td>62.5k</td> </tr> </table>	7, 6, 5	UART: Serial port rate (bps)	000:	1200	001:	2400	010:	4800	011:	9600 (default)	100:	19200	101:	38400	110:	57600	111:	115200	-----		4, 3:	Serial parity bit	00:	8N1 (default)	01:	8O1	10:	8E1	11:	8N1 (equal to 00)	-----		2, 1, 0,	air data rate	000:	2.4k (default)	001:	2.4k (default)	010:	2.4k (default)	011:	4.8k	100:	9.6k	101:	19.2k	110:	38.4k	111:	62.5k	<ul style="list-style-type: none"> For the two modules that communicate with each other, the serial port baud rate can be different, and the verification method can also be different. When transmitting large packets continuously, users need to consider the data blocking caused by the same baud rate, and data may even be lost. It is generally recommended that both parties have the same baud rate. <ul style="list-style-type: none"> Both parties must be the same The higher the rate, the shorter the distance
7, 6, 5	UART: Serial port rate (bps)																																																					
000:	1200																																																					
001:	2400																																																					
010:	4800																																																					
011:	9600 (default)																																																					
100:	19200																																																					
101:	38400																																																					
110:	57600																																																					
111:	115200																																																					

4, 3:	Serial parity bit																																																					
00:	8N1 (default)																																																					
01:	8O1																																																					
10:	8E1																																																					
11:	8N1 (equal to 00)																																																					

2, 1, 0,	air data rate																																																					
000:	2.4k (default)																																																					
001:	2.4k (default)																																																					
010:	2.4k (default)																																																					
011:	4.8k																																																					
100:	9.6k																																																					
101:	19.2k																																																					
110:	38.4k																																																					
111:	62.5k																																																					

03H	Read/Wr ite	REG1	<p>7, 6: Sub packet setting 00: 240 bytes (default) 01: 128 bytes 10: 64 bytes 11: 32 bytes</p> <p>-----</p> <p>5 : RSSI Ambient noise enable 1: Enable 0: Disable (default)</p> <p>-----</p> <p>4, 3, 2 Reserve</p> <p>-----</p> <p>1, 0: Transmitting power</p>	<ul style="list-style-type: none"> When the data is smaller than the sub packet length, the serial output of the receiving end is an uninterrupted continuous output. When the data is larger than the sub packet length, the receiving end serial port will output the sub packet. <p>-----</p> <ul style="list-style-type: none"> When enabled, the C0 C1 C2 C3 command can be sent in the transmitting mode or WOR transmitting mode to read the register. Register 0x00: Current ambient noise rssi Register 0x01: rssi when the data was received last time. (Current channel noise is: dBm =-RSSI/2) Command format: C0 C1 C2 C3 + starting address + read length Returns: C1 + address address + read length + read valid value E.g: send C0 C1 C2 C3 00 01 Return C1 00 01 rssi <p>-----</p> <ul style="list-style-type: none"> Power and current are nonlinear, and power efficiency is highest at maximum power. The current does not decrease in proportion to the decrease in power.
04H	Read/Wr ite	REG2	Channel control (CH) 0-83 represents a total of 84 channels	<ul style="list-style-type: none"> Frequency= 410.125 + CH *1M

05H	Read/Write	REG3	<p>7 Enable RSSI 1: Enable 0: Disable (default)</p> <p>-----</p> <p>6 Fixed point transmission 1: Fixed point transmission mode 0: Transparent transmission mode (default)</p> <p>-----</p> <p>5 N/A 1: - 0: -</p> <p>-----</p> <p>4 N/A 1: - 0: -</p> <p>-----</p> <p>3 N/A 1: WOR transmitter The module receiving and transmitting functions are turned on, and a wake-up code is added when transmitting data. Receiving is turned on. 0: WOR receiver (default) The module is unable to transmit data and works in WOR monitoring mode. The monitoring period is as follows (WOR cycle), which can save a lot of power.</p> <p>-----</p> <p>2, 1, 0, WOR cycle 000: 500ms 001: 1000ms 010: 1500ms 011: 2000ms 100: 2500ms 101: 3000ms 110: 3500ms 111: 4000ms</p>	<ul style="list-style-type: none"> When enabled, the module receives wireless data and it will follow an RSSI strength byte after output via the serial port TXD In fixed point transmission, the module recognizes the first three bytes of the serial data as: address high + address low + channel and takes it as the wireless transmitting target. Valid only for mode 1. <ol style="list-style-type: none"> In the receiving mode of WOR, the module can modify the delay time after wake-up, the default time is 0; The receiving end needs to send the command C0 09 02 03 E8 in the configuration mode (C0 is the write command, 09 is the register starting address, 02 is the length, 03 E8 is the set delay, the maximum FFFF is 65535ms, set to 0 turns off the wake-up delay.) Data can be sent within the delay Valid only for mode 1. Period $T = (1 + WOR) * 500ms$, maximum 4000ms, minimum 500ms The longer the WOR monitoring interval period, the lower the average power consumption, but the greater the data delay Both the transmitter and the receiver must be the same (very important).
06H	Write	CRYPT_H	Key high byte (default 0)	<ul style="list-style-type: none"> Write only, read returns 0 Used for user encryption to avoid intercepting airborne wireless data by similar modules. The module will internally use these two bytes as a calculation factor to transform and encrypt the over-the-air wireless signal.
07H	Write	CRYPT_L	Key low byte (default 0)	
08H~	Read	Version	Version information 1 byte	<ul style="list-style-type: none"> Version information 1 byte

7.3 Factory default parameter

Factory default parameters: C0 00 00 62 00 00

8 Configuration instructions on computer

- The following figure shows the E220-400T30S configuration host computer display interface, the user can switch to the command mode through M0M1, and quickly configure and read the parameters on computer.



- In the configuration on computer, the module address, frequency channel, network ID, and key are all in decimal mode. The range of values of each parameter is:

Network address: 0-65535

Frequency channel: 0-83

Network ID: 0-255

Key: 0-65535

9 Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible,

and the module needs to be reliably grounded.;

- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation.;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other parts with large electromagnetic interference.;
- High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of the module and routed in the Bottom Layer;
- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees;
- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference.If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz , for example: USB3.0;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

10 FAQ

10.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the

distance).

- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

10.2 Module is easy to damage

- Please check the power supply source, ensure it is in right range, voltage higher than max value will damage the module.
- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure antistatic measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

10.3 BER(Bit Error Rate) is high

- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;


11 Production guidance

11.1 Reflow soldering temperature

Profile Feature	Sn-Pb Assembly	Pb-Free Assembly
Solder Paste	Sn63/Pb37	Sn96.5/Ag3/Cu0.5
Preheat Temperature min (T _{min})	100°C	150°C
Preheat temperature max (T _{max})	150°C	200°C
Preheat Time (T _{min} to T _{max})(t _s)	60-120 sec	60-120 sec
Average ramp-up rate(T _{max} to T _p)	3°C/second max	3°C/second max
Liquidous Temperature (TL)	183°C	217°C
Time (t _L) Maintained Above (TL)	60-90 sec	30-90 sec
Peak temperature (T _p)	220-235°C	230-250°C

Average ramp-down rate (Tp to T _{smax})	6°C/second max	6°C/second max
Time 25°C to peak temperature	max 6 minutes	max 8 minutes

11.2 Reflow soldering curve

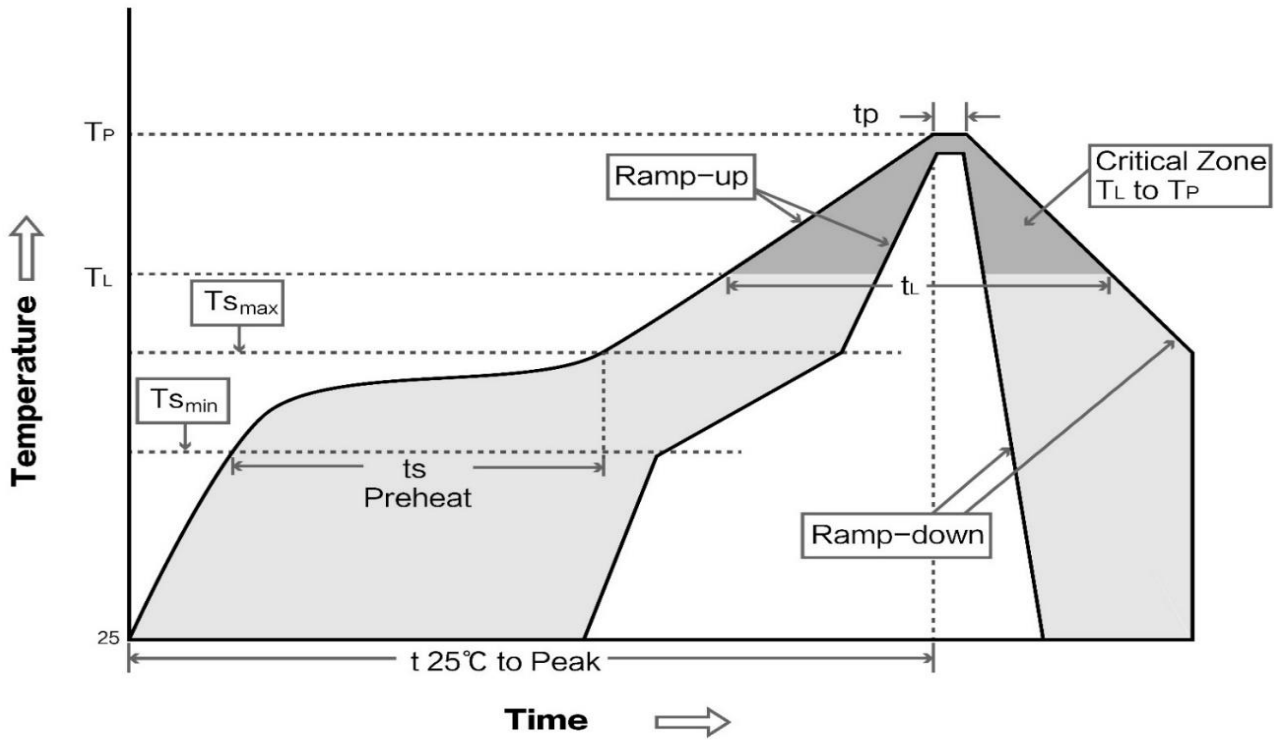

12 E220 series

Model No.	Core IC	Frequency Hz	Tx power dBm	Distance km	Package	Interface
E220-900M30S	SX1262	868/915M	30	11	SMD	SPI
E220-900M22S	SX1262	868/915M	22	6	SMD	SPI
E220-400M30S	SX1268	433/470M	30	11	SMD	SPI
E220-400M22S	SX1268	433/470M	22	6	SMD	SPI
E220-900T30D	SX1262	868/915M	30	10	DIP	TTL
E220-900T22D	SX1262	868/915M	22	5	DIP	TTL
E220-400T30D	SX1268	433/470M	30	10	DIP	TTL
E220-400T22D	SX1268	433/470M	22	5	DIP	TTL


E220-900T30S	SX1262	868/915M	30	10	SMD	TTL
E220-900T22S	SX1262	868/915M	22	5	SMD	TTL
E220-400T30S	SX1268	433/470M	30	10	SMD	TTL
E220-400T22S	SX1268	433/470M	22	5	SMD	TTL

13 Antenna recommendation

The antenna is an important role in the communication process. A good antenna can largely improve the communication system. Therefore, we recommend some antennas for wireless modules with excellent performance and reasonable price.

Model No.	Type	Frequency Hz	Interface	Gain dBi	Height	Cable	Function feature
TX433-NP-4310	Flexible pcb antenna	433M	SMA-J	2	43.8*9.5mm	-	Embedded FPC antenna
TX433-JW-5	Rubber antenna	433M	SMA-J	2	50mm	-	Flexible & omnidirectional
TX433-JWG-7	Rubber antenna	433M	SMA-J	2.5	75mm	-	Flexible & omnidirectional
TX433-JK-20	Rubber antenna	433M	SMA-J	3	210mm	-	Flexible & omnidirectional
TX433-JK-11	Rubber antenna	433M	SMA-J	2.5	110mm	-	Flexible & omnidirectional
TX433-XP-200	Sucker antenna	433M	SMA-J	4	19cm	200cm	Sucker antenna, high gain
TX433-XP-100	Sucker antenna	433M	SMA-J	3.5	18.5cm	100cm	Sucker antenna, high gain
TX433-XP-300	Sucker antenna	433M	SMA-J	6	96.5cm	300cm	Car sucker antenna, ultra high gain
TX433-JZG-6	Rubber antenna	433M	SMA-J	2.5	52mm	-	Short straight & omnidirectional
TX433-JZ-5	Rubber antenna	433M	SMA-J	2	52mm	-	Short straight & omnidirectional

14 Package for batch order

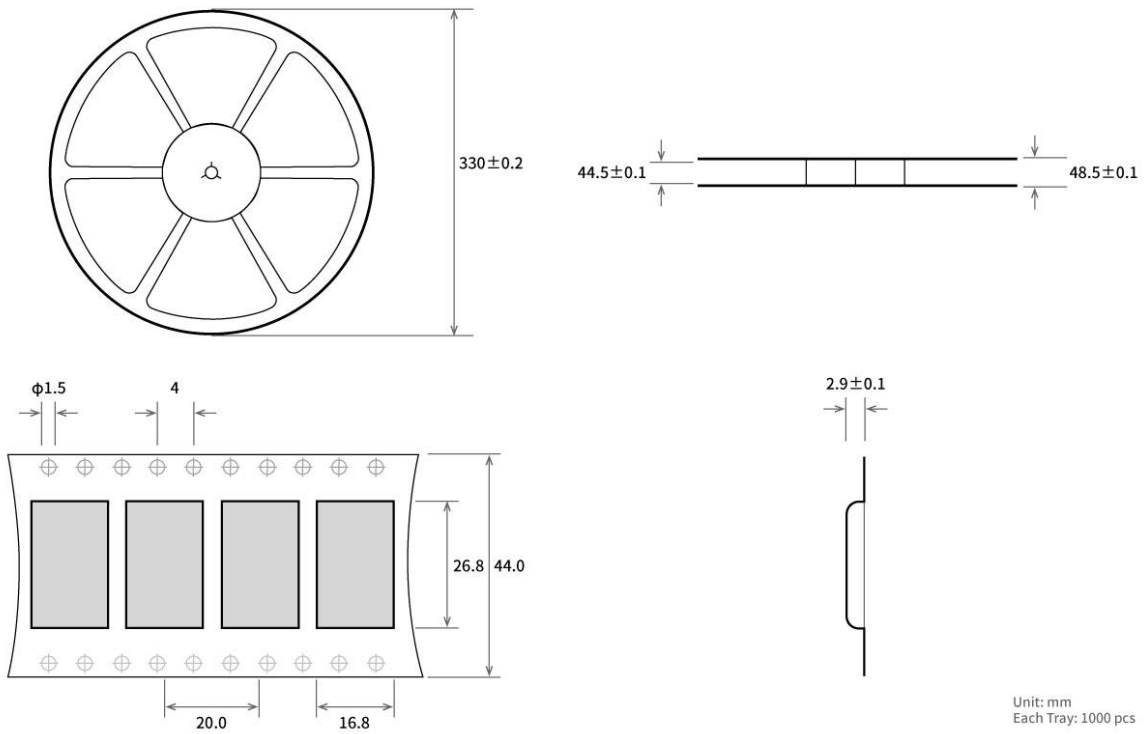

Revision history

Version	Date	Description	Issued by
1.0	2020-07-08	Initial version	Ken

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

About us

Technical support: support@cdebyte.com

Documents and RF Setting download link: www.ebyte.com

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

Official hotline:028-61399028

Web: www.ebyte.com

Address: , Building B5, Mould Industrial Park, 199# Xiqu Ave, High-tech Zone, Chengdu, 611731, Sichuan, China



Chengdu Ebyte Electronic Technology Co.,Ltd.

Integration instructions for host product manufacturers according to KDB 996369 D03 OEM Manual v01

2.2 List of applicable FCC rules

CFR 47 FCC PART 15 SUBPART C has been investigated. It is applicable to the modular transmitter

2.3 Specific operational use conditions

This module is stand-alone modular. If the end product will involve the Multiple simultaneously transmitting condition or different operational conditions for a stand-alone modular transmitter in a host, host manufacturer have to consult with module manufacturer for the installation method in end system.

2.4 Limited module procedures

Not applicable

2.5 Trace antenna designs

Not applicable

2.6 RF exposure considerations

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

2.7 Antennas

This radio transmitter E220-400T30S has been approved by Federal Communications Commission to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Antenna No.	Operate frequency band	Antenna Type	Maximum antenna gain
Antenna 1	433.125MHz	External Antenna	0dBi

2.8 Label and compliance information

The final end product must be labeled in a visible area with the following" Contains FCC ID: 2ALPH-E220".

2.9 Information on test modes and additional testing requirements

Host manufacturer is strongly recommended to confirm compliance with FCC requirements for the transmitter when the module is installed in the host.

2.10 Additional testing, Part 15 Subpart B disclaimer

Host manufacturer is responsible for compliance of the host system with module installed with all other applicable requirements for the system such as Part 15 B.