

Features & Benefits:

DISPLAY UNIT & OUTDOOR SENSOR

- 1. Time display
- 2. Alarm and snooze icons
- 3. Outdoor sensor signal strength
- 4. Calendar
- 5. Icons weather forecast
- 6. Weekday
- 7. Moon phase
- 8. Heat index/Dew point
- 9. Channel external sensor
- 10. Outdoor comfortable level/moldy index
- 11. Outdoor temperature and humidity
- 12. Indoor temperature alert
- 13. Tendency indoor temperature
- 14. Indoor temperature max/min record
- 15. Indoor comfortable level/moldy index
- 16. Tendency indoor humidity
- 17. Display low battery indicator
- 18. Indoor temperature and humidity
- 19. SET button
- 20. CH button
- 21. ALERT button
- 22. DOWN button
- 23. UP button
- 24. Wall mount hole
- 25. SNZ/LIGHT button
- 26. Stand bracket
- 27. Battery Compartment 3xAAA (batteries not included)
- 28. External power supply socket
- 29. Outdoor sensor display
- 30. Wireless signal indicator(Flashes when data is being sent to the display unit)
- 31. Integrated hang hole
- 32. TX channel selector, select external sensor channel
- 33. Compartment 2xAAA batteries (batteries not included)
- 34. Switch °C/°F unit by poking into the small hole with tool.(Such as unfurled paperclip, a needle, or pretty much anything else that is slim and pointy)

Package Contents:

- 1. Display Unit
- 2. Outdoor Sensor
- 3. USB Line
- 4. Instructions Manual

Getting started:

- 1. Inserting the batteries/connecting the USB line with a computer, HUB or power bank.
- 2. Place 3xAAA batteries into the color weather station.
- 3. Place 2xAAA batteries into the wireless weather sensor.
- 4. Place or hang the sensor outdoors.

Installing or Replacing Batteries:

We recommend using high quality batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended. The outdoor sensor requires lithium batteries in low temperature conditions. Cold temperatures can cause alkaline batteries to function improperly.

Note: Do not mix old and new batteries. Do not mix alkaline, standard, and/or rechargeable batteries.

Default settings

- 1.Default time: 12:00(US) 0:00(EU)
 - 2. Default date: 01/01 (Year: 2020, date form: M/D[US],date form: D/M [EU])
 - 3. Default week: WED(Language: ENG, 7 languages can be selected,[US]) MIT (Language: GER, 7 languages can be selected,[EU])
 - 4. Weather forecast: Partly Sunny
 - 5. Default temperature: °F(US)/ °C(EU)
 - 6. Default alarm: AM 6:30, default snooze time: 5min.
- The LCD display fully for 3 seconds when changing new battery or resetting, then with a sound BI into the normal state, after testing temperature, receiving RF for 3 minutes.

Display / Keys Details:

There are totally 6 keys for touching on this color weather station including SET, CH, ALERT, DOWN, UP and the SNZ/LIGHT.

1. SET buttons:

- a. Press and hold for 3 seconds during normal mode to enter setting mode.
- b. Press SET button during normal mode to enter alarm mode.

2. CH button:

- a. Press this button to select the channel.
- c. In normal display mode, press and hold to search RF.

3. ALERT button

- a. Press the ALERT button to enter alert mode, use UP or DOWN to open or close alert.
- b. Press and hold the ALERT button to enter alert setting.

4. DOWN button:

- a. Press to decrease the setting value during setting.
- b. Press and hold 2 seconds button for fast adjust during setting mode.
- c. In normal display mode, press this button to display max/min

- temperature/humidity.
- d. Press and hold the “DOWN” button 2 seconds to clear the record of MAX/MIN temperature and humidity when display shows MAX or MIN temperature and humidity.

5. UP buttons:

- a. Press to increase the setting value during setting.
- b. Press and hold 2 seconds button for fast adjust during setting mode.
- c. In normal display mode, press this button to display heat index/dew point/moldy index/comfortable level.

6. SNZ/LIGHT button:

- a. Press this button to open backlight for 10 seconds (without USB line).
- b. Press to activate the snooze function when alarming.
- c. Press this button to change the brightness of backlight (Only with USB line).

Manually Setting the Time, Date & Units:

Press and hold down the "SET" button for 2 seconds the 12/24 hour mode starts to flash, use “UP” and “DOWN” buttons to set the correct 12/24 hour mode. Press "SET" button to confirm your setting, the hour display starts to flash, use “UP” or “DOWN” buttons to set the correct hour. Press "SET" button to confirm your setting, the minute display starts to flash, use “UP” or “DOWN” buttons to set the correct minute. Press "SET" button to confirm your setting, the Month and Date icon display starts to flash, use “UP” or “DOWN” buttons to set the date display on Month/Date Press "SET" button to confirm your setting, the year display starts to flash, use “UP” or “DOWN” buttons to set the correct year. Press "SET" button to confirm your setting, the month display starts to flash, use “UP” or “DOWN” buttons to set the correct month. Press "SET" button to confirm your setting, the date display starts to flash, use “UP” or “DOWN” buttons to set the correct date. Press "SET" button to confirm your setting, the language start to flash, use “UP” or “DOWN” buttons set the correct language. The language order is: ENG, DAN, SPA,DUT, ITA, FRE,GER(US). GER, FRE, ITA, DUT, SPA, DAN, ENG(EU). Press "SET" button to confirm your setting, the temperature units start to flash, use “UP” or “DOWN” buttons set the correct units. Press "SET" button to confirm your setting and to end the setting procedures, enter the normal mode.

NOTE: You will automatically exit settings mode if no buttons are pressed for 20 seconds. Enter settings mode again at any time by pressing and holding the SET button for 2 seconds.Under normal mode, press **SET** button to enter alarm mode.

Setting the Alarm:

- a. Press SET button to enter alarm mode Under the normal mode, press **SET** button to enter alarm mode. Press and hold the **SET** button for about 2 seconds to set the alarm time. The alarm hour will begin blinking on the display where the clock time is usually shown.
- b. To adjust the alarm hour, press the “UP” or “DOWN” buttons (press and hold to fast adjust). When alarm hour is set to your satisfaction, press the **SET** button to proceed to the alarm minute preference. Press the “UP” or “DOWN” buttons (press and hold to fast adjust), press the SET button again to exit alarm settings. When you setting the alarm, the alarm is default turn on.
- c. To turn the alarm ON or OFF, press the **SET** button to enter alarm mode, press the **UP** or **DOWN** button to ON or OFF the alarm. The “🔔” symbol should show next to the clock display when alarm is set to ON. Press the **UP** or **DOWN** button again to turn off the alarm, when the alarm is set to OFF, the “🔔” symbol should not display.
- d. When the alarm is in operation it will begin beeping with one short beep and continue with many short beeps if the alarm rings longer than 20 seconds. You can snooze the alarm for 5 minutes by pressing the **SNZ/LIGHT** button.

Indoor / outdoor temperature and humidity:

- 1. Indoor temperature 13.9°F ~ 122°F (-9.9°C ~ 50°C), display LL.L when below 13.9°F (-9.9°C)and display HH.H when higher than 122°F (50°C).
- 2. Outdoor temperature -40°F ~ 155°F (-40°C ~ 70°C), display LL.L when below -40°F (-40°C) and display HH.H when higher than 155°F (70°C).
- 3. Temperature resolution: 0.1°F(US)/°C(EU)
- 4. Indoor and outdoor humidity range: 20%-95%, display 20% when below 20% and display 95% when higher than 95%.
- 6. Humidity resolution: 1 %RH
- 7. When alarm ringing, temperature and humidity test will be stopped.

Accuracy Temperature Accuracy Range:

- 1. Temperature accuracy:
(-40°C ~ -20°C): ±4°C
(-20°C~0°C): ±2°C
(0°C~50°C):±1°C

Note: when the temperature in 122°F ~ 155°F(50°C~70°C) range, the temperature is only for reference.

Humidity Accuracy Range:

- +/- 5 % RH (@77°F(25°C) , 30%RH to 50%RH);
- +/- 10 % RH (@77°F(25°C) , 20%RH to 29%RH, 51%RH to 95%RH)

Temperature Alert Set:

- 1. In standard mode, press “ALERT” to enter alert mode ,press and hold “ALERT” to set temperature alert function, use “UP” or “DOWN” to open or close temperature alert function.
- 2. Press “ALERT” to set and order is: outdoor temperature upper limit→ outdoor temperature lower limit→ outdoor humidity upper limit→ outdoor humidity lower limit→ indoor temperature upper limit→ indoor temperature lower limit→ indoor humidity upper limit→ indoor humidity lower limit→ exit.
- 3. In set mode, press “UP” to go ahead by once. Hold “UP” to go ahead at 8 steps per second.
- 4. In set mode, press “DOWN” to back by once. Hold “DOWN” to go back at 8 steps per second.
- 5. Press or no handling in 20s will exit.

Temperature Alert

- 1. Temperature and alert icon will flash when alert.
- 2. In temperature alert status, alert temperature icon will twinkle and temperature will always display.
- 3. Temperature alarm sound:
 - a. Two BIs /second
 - b. Alarm 5s for every minute
 - c. Not stop alarm until meet stop conditions.
- 4. Alarm stop conditions:
 - a. Press any button to stop alarm but temperature and alert icon will continuously flash.
 - b. When temperature go back into alert range.
 - c. Press “ALERT” to enter alert mode, use “UP” or “DOWN” to turn off the temperature alert function.

Indoor and Outdoor Comfort Display:

Too dry	1%~25%
Dry	26%~39%
Comfort OK	40%~75%
Wet	76%~83%
Too wet	84%~99%

Indoor and Outdoor Moldy Display:

Temp. Range	Humidity Range	Mold Risk
T<9.4°C (T<49°F)	H<=48%	0
	49%<=H<=78%	0
	79%<=H<=87%	0
	H>=88%	0
9.4°C <=T<=26.6°C (49°F <=T<=79.9°F)	H<=48%	0
	49%<=H<=78%	LOW
	79%<=H<=87%	MED
	H>=88%	MED
26.7°C<=T<=30.5°C) (80°F <=T<=86.9°F)	H<=48%	LOW
	49%<=H<=78%	LOW
	79%<=H<=87%	MED
	H>=88%	HI
26.7°C<=T<=30.5°C) (80°F <=T<=86.9°F)	H<=48%	LOW
	49%<=H<=78%	MED
	79%<=H<=87%	MED
	H>=88%	HI
30.6°C <=T<=40°C (87°F <=T<=104°F)	H<=48%	0

Setting the Temperature Units:

- a. The default temperature unit is Fahrenheit or Celsius degrees (°F (US)/°C(EU))
- b. To switch the temperature unit, press and hold the SET button. You will see 12/24 hour mode flashing.
- c. Press the SET button 8 more times to scroll through the other settings. You will see °F/°C flashing.
- d. Press UP or DOWN to switch from Celsius or Fahrenheit.
- e. Press SET to confirm your selection and exit.

Checking the MAX/MIN temperature and humidity

- a. Press the “DOWN” button to check MAX/MIN temperature and humidity.
- b. Press and hold the “DOWN” button to clear the record of MAX/MIN temperature and humidity when display shows MAX or MIN temperature and humidity.

Setting the Channel:

Setting the channel connection between the display unit and outdoor sensor:

- a. To change the channel on the display unit between 1, 2, 3 &1-3 sequential display, press the “CH” button. The channel setting will display on the above of the outdoor temperature.
- b. Open the battery compartment , move the button to select the channel.
- c. ALWAYS MAKE SURE THE CHANNEL CHOSEN ON THE DISPLAY UNIT MATCHES THE CHANNEL OPTION CHOSEN ON THE OUTDOOR SENSOR.

Back Light:

When the display unit is powered by battery only the back light will be off to preserve the battery. Press the **SNZ/LIGHT** button to turn the back light on for 10 seconds.

When the display unit is powered by the USB line the back light will always remain on. Press the **SNZ/LIGHT** button to adjust the brightness of the back light between HIGH /LOW/ OFF.

Low Battery Indicator:


If the low battery indicator is displayed on the LCD for either the outdoor sensor or the display unit, immediately change the batteries to prevent disruptions in communications of the devices.

Weather Forecast:

The unit predicts weather condition of the next 12-24 hours based on the change of temperature and humidity.

Weather change parameters: the weather forecast is based on the change of the outdoor temperature and humidity (channel 1), if the monitor fail to receive the signal, the weather forecast will be based on the indoor temperature and humidity.

The following icons will show:

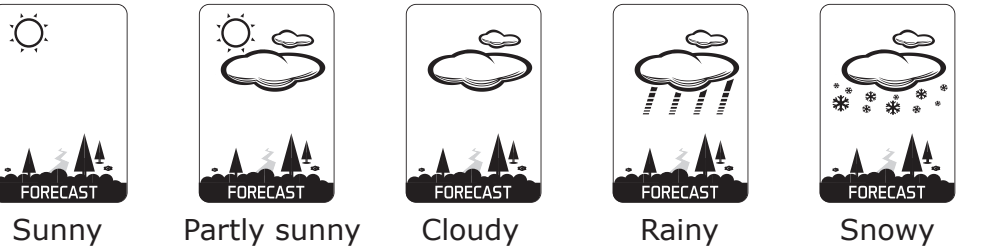

NOTE:


- a. The weather forecast is based on outdoor temperature and humidity change and is about 40-45% correct.
- b. The weather forecast can be more accurate only under the condition of natural ventilation, in indoor conditions, especially in air-conditioned rooms, there will be not accurate.

Moon Phase



Important Placement Guidelines:

- a. To ensure accurate temperature measurement, place units out of direct sunlight and away from any heat sources or vents.
- b. Display unit and outdoor sensor must be within 200ft (60m) of each other.
- c. To maximize wireless range, place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.
- d. To prevent wireless interference, place both units at least 3ft (1 m) away from electronic devices (TV, computer, microwave, radio, etc.)
- e. Place the display unit in a dry area free of dirt and dust. Display unit stands up right for tabletop/countertop use.

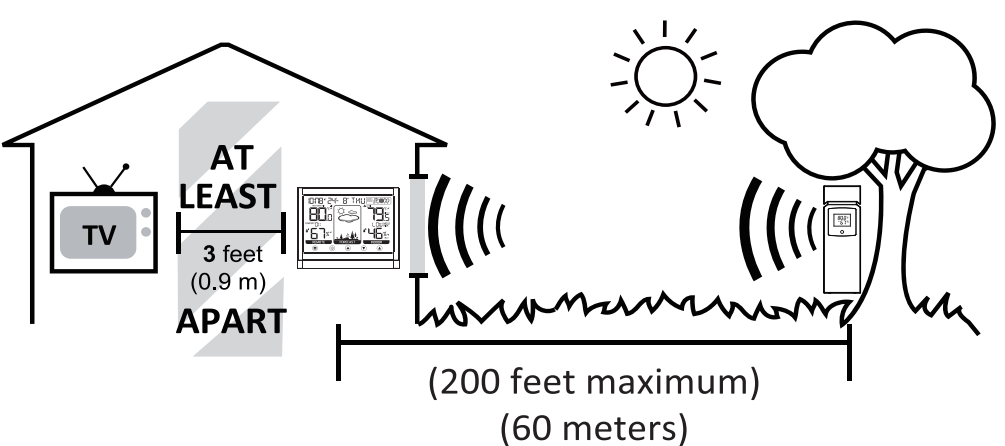

Outdoor Sensor Placement:

The sensor must be placed outside to observe outdoor conditions. It is water resistant (IP4) and designed for general outdoor use, however, to prevent damage place the sensor in an area which is protected from the direct weather elements and direct sunshine. The best location is 4 to 8 feet above the ground with permanent shade and plenty of fresh air to circulate around the sensor.

Outdoor Sensor Function:

- a. Once the display unit has been set up and the channel synchronized with the outdoor sensor, the display unit will begin the registration process. It can take up to 3 minutes to complete the registration, where the display unit will search for an RF (Radio Frequency) signal from the outdoor sensor. The outdoor sensor signal strength will show the connection strength to the outdoor sensor. If there are no bars or if bars are not showing at its maximum strength (4 bars) (3) try placing the outdoor sensor or display unit elsewhere for better connection.
- b. If the RF Signal was lost and not reconnected, the outdoor temperature and humidity level will begin to flash after 1 hour of lost connection. If no connection was found after 2 hours only a dotted line ` - - - ` will be displayed in place of the temperature and humidity level.
- c. To manually restart the RF registration, press and hold the “📶” button for 3 seconds. The display unit will now search for the RF signal for the next 3 minutes.

Trouble Shooting:

Problem	Possible Solution
Outdoor reading is flashing or showing dashes	Flashing of the outdoor reading is generally an indication of wireless interference. This thermometer is arranged to communicate with three external sensors. One of these comes with the unit, the remaining two are optional. 1. Bring both of the sensor and display indoors, side by side and remove batteries from each. Power the thermometer as described in Getting started. 2. Set the selector in the outdoor sensor to the desired transmission channel (1, 2, or 3). Automatic data will be transmitted. 3. Press the CH button more times to select the channel set on the external sensor. Sequentially selects channel 1, channel 2, channel 3, and sequentially display for 3 channels.
No outdoor sensor reception	1. Reload the batteries of both outdoor sensor and main unit. Please refer to the SENSOR SETUP section. 2. Press and hold the CH button to receive RF signal. 3. Always make sure the channel chosen on the display unit matches the channel option chosen on the outdoor sensor. 4. Relocate the main unit and/or the outdoor sensor. The units must be within 200ft (60m) of each other. 5. Make sure both units are placed at least 3 ft (1m) away from electronics that may interfere with the wireless communication (such as TV, microwave, computer, radio, etc). 6. Do not use heavy duty or rechargeable batteries. The outdoor sensor requires lithium batteries in low temperature conditions. Cold temperatures would cause alkaline batteries work improperly. 7. Do not mix old and new batteries.
Inaccurate temperature	1. Make sure both the main unit and sensor are placed out of direct sunlight and away from any heat sources or vents. 2. Do not tamper with the internal components. 3. Temperature accuracy: (-40°C ~ -20°C): ±4°C (-20°C~0°C): ±2°C (0°C~50°C):±1°C
"HH/LL" display in indoor and/or outdoor temperature	If the temperature is higher than the detection range, HH will display on screen for indication; if lower than the detection range, LL will display on screen for indication.

If your Geevon product does not operate properly after trying the troubleshooting steps, contact the seller on your order page or shoot an email to : support@geevon.com.

Week Display

English	German	French	Italian	Dutch	Spanish	Danish
ENG	GER	FRE	ITA	DUT	SPA	DAN
MON	MON	LUN	LUN	MAA	LUN	MAN
TUE	DIE	MAR	MAR	WIN	MAR	TIR
WED	MIT	MER	MER	WOE	MIE	ONS
THU	DON	JEU	GIO	DON	JUE	TOR
FRI	FRE	VEN	VEN	VRI	VIE	FRE
SAT	SAM	SAM	SAB	ZAT	SAB	LOR
SUN	SON	DIM	DOM	ZON	DOM	SON

FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.