


User Manual

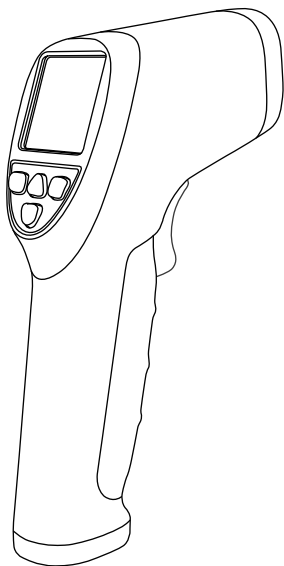

BROCHURE

Notices

1. Please read the user manual carefully before using this product.
2. The working voltage of this barcode scanner is 3.3V, charging voltage 5V. Please use our original USB cable to ensure the scanner work properly.

3. Copyright and Patent Right

Our company has applied for patent rights, copyrights and software copyrights for this product and its accessories(including hardware, setting software, documentations,appearance,etc.)

4. OThe company reserves all rights and the company reserves the right to make any changes to the product to improve its reliability, improve its function or design. The company shall not be responsible for any product liability related to or arising from the application or use of any products, circuits, or other applications described herein.

5. Package Includes:

Standard Package: : Barcode scanner (1 piece),
WIFI dongle (1 piece),
USB cable (1 piece),
User manual (1 piece).

Optional Accessory: Base

Optional Function: Vibration

6. The contents of this manual are subject to change without prior notice.

Contents

1. Notices.....	1
2. Introduction&Features.....	3
3. Application&Parameters.....	4
4. Working Environment&Related Regulations.....	5
5. Outside Introduction.....	6-7
6. Connections Introductions.....	8
7. Initialization Settings&Version Information.....	9
8. Bluetooth Pairing Method.....	9
9. Pull up/Hide keyboard (IOS system)&Caps Lock Switch&Caps Lock Switch..	10
10. 2.4G Wireless Pairing Method.....	11
11. Sound/Vibration Setting.....	12
12. Sleep Time Setting.....	12
13. Ending Character Setting.....	13
14. Keyboard Language Setting.....	14-15
15. Transmission Speed Setting&Bluetooth Protocol.....	16
16. Working Modes&Clear Total Number Setting.....	17-18
17. Change Bluetooth Name.....	19
18. Hide Pre-characters/Post-characters.....	20-21
19. Add Time As Prefix or Suffix&Update Time.....	22-23
20. Screen Show Products Information Settings.....	24-25
21. Screen Language Setting.....	28
22. Prefix/Suffix Setting.....	27-28
23. 2.4G Wireless COM-Port Mode Setting.....	29
24. Enable/Disable HID Searching by Pressing Scan Button 8S Settings.....	30
25. Temperature test settings & temperature upload settings.....	31
26. AppendixA: Controlled Characters.....	32-34
27. AppendixB: Displayable Characters.....	35-38
28. FAQ (Frequently Asked Questions)	39
29. Buzzer description.....	40

Introduction

Our company's barcode scanner series are with strong scanning light source and enhanced long distance scanning technology, making it possible for long distance fast scanning capability for damage, dirty and poor quality printed barcodes under various ambient light conditions.

It is durable in use, since it is protected by the industrial safety technique. High volume buzzer is another hint of success scanning besides LED light.

Features

Support bluetooth, 2.4G wireless and USB transmission

16M storage space which support to store 50000 codes

Unique power management system, long-time standby

Support to decode plenty of 1D and 2D codes

Imported triggers, long life and good feeling

Can work with Android/IOS/Windows/Mac

Support bluetooth HID、SPP and BLE.

Low power consumption, sleep time can be set

2.4G wireless transmission distance: 100 meters (Outdoor)

Bluetooth transmission distance: 15 meters (Indoor)

USB charge and USB transmission at same time

Application

* Use in Business (electrical appliances, library, clothing, medicine, cosmetics, etc.), retail stores, post office, telecommunications industry, warehouse, logistics, public security system, customs systems, bank system, medical system, etc widely.

* Compatible with Microsoft, Android, Linux and other operating systems.

* Multi-national keyboard language

Parameters

Wireless transmission: Bluetooth & 2.4G

Storage Space: 16MB

CPU: ARM Cortex 32bits

Bluetooth Module: Bluetooth 4.1 Module

Decode Types: 1D: Codabar, Code 11, Code 93, MSI,

Code 128, UCC/EAN-128, Code 39, EAN-8,

EAN-13, UPC-A, ISBN, Industrial 25, Interleaved 25,

Standard 25, 2/5 Matrix,

2D: QR, Data Matrix, PDF417, Aztec, Hanxin ,

Micro PDF417 (Optional)

Indicators: LED light、Buzzer、Vibrator (Optional)

Battery Capacity: 1800mA

Charge Voltage/Current: 5V/1A

Working Time: 1D ≤ 24H 2D ≤ 16H (5seconds/one scan)

Charge Time: ≤ 4H

Standby Time: >30day

Working Environment

Working Temperature: 32° F to 104° F / 0° C to 40° C

Storage Temperature: -40° F to 140° F / -40° C to 60° C

Humidity: 5% to 95% relative humidity (no condensation)

Ruggedness: Resist about 6 times drops from 1.5m to concrete ground

Ambient Light Immunity: Under normal office and factory ambient lighting conditions, or exposed to the sun

won't take any effect to it.


Electrostatic discharge: In line with 15KV air discharge and 8KV contact discharge requirements

Related Regulations


Electrical safety: In accordance with UL1950、CSA C22.2 No.950、
EN60950/IEC950 EMI/RFI: FCC Part 15 Class B、
European Union EMC Directive、Taiwan EMC、

Environment Terms: In accordance with RoHS directive 2002/95/EEC

Outside Introduction

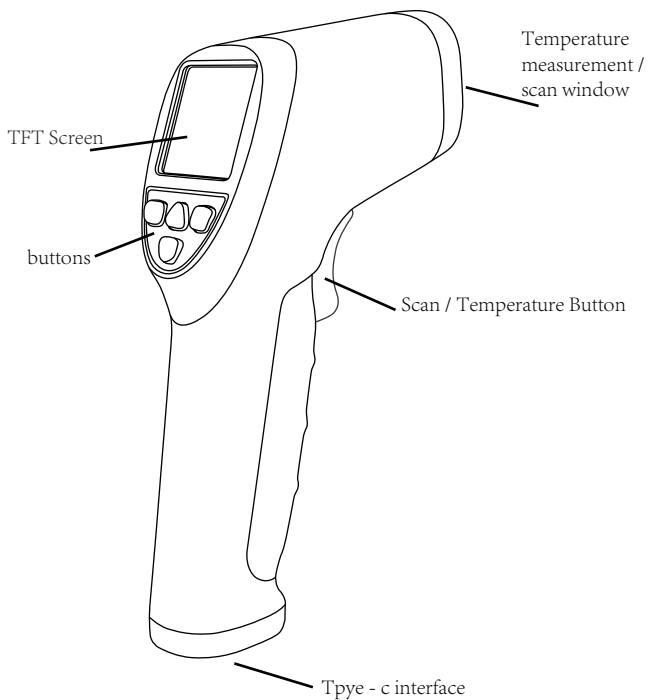

TFT Screen Introduction

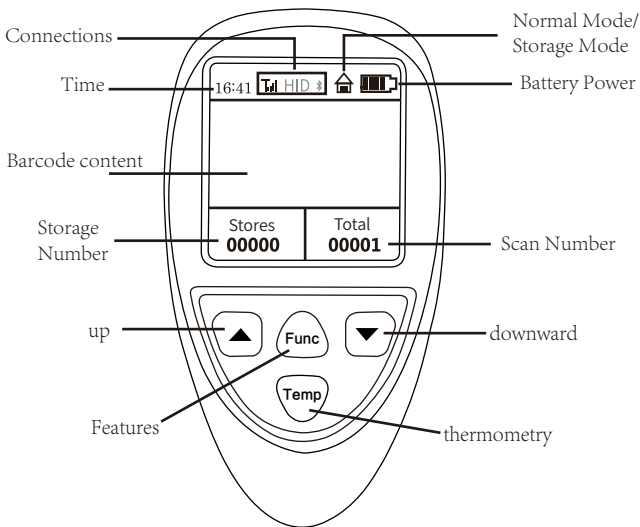

Up: View the previous temperature record

downward: View the next temperature record

Features: switch the main button to scan mode or temperature measurement mode

thermometry: test human body temperature

Connections Introductions


Using scanner without base

A: 2.4G Wireless Mode: Can work with PC and PC terminal. Support Windows XP, Windows 7, Windows 8, Windows 10 etc operating systems.


(Please refer to page 11 for detailed pairing steps)

B: Bluetooth Mode: Can work with mobile devices, like smart phone (Android & IOS), tablets, PC terminal which with bluetooth function.

(Please refer to page 9 for detailed pairing steps)

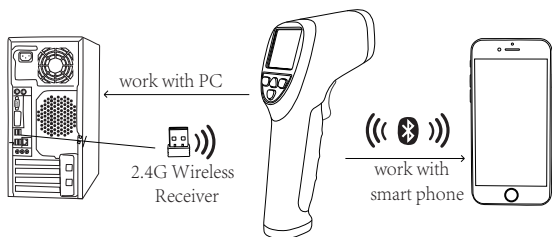

A: USB Wired Mode: USB charging and USB transfer can be performed simultaneously

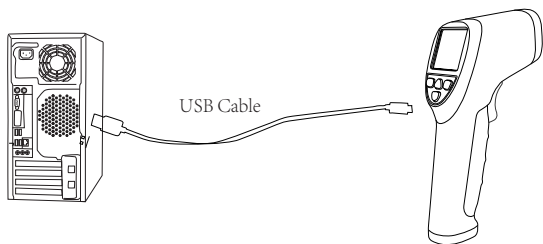

Initialization Settings & Version Information

A: You can scan the setting code “Initialization Settings” to make the scanner back to factory default settings

B: If you have after-sales problems and need to contact our customer service staff, please provide version information by scanning setting code “Version Information”



Initialization Settings



Version Information

Bluetooth Pairing Method

1st. Pressing the trigger for 8 seconds or scanning following setting code to make the scanner to enter bluetooth searching mode



Bluetooth Pairing Setup Code

2nd. Turn on the bluetooth of your device and searching bluetooth device

3rd. Click “BarcodeScannerHID” when it comes out. One beep show that scanner and your device connected.

Notes: When the scanner is entered bluetooth pairing status and it does not get connected with your device within 1 minutes, it will beep twice lowly and longly. You need to repeat above-mentioned 3 steps to make it connect with you device. (When the scanner is in the bluetooth pairing status, double-click can make it exit the pairing mode).

Pull up/Hide keyboard(IOS system)&Caps Lock Switch



Pull up/Hide IOS keyboard



Double-Click to Pull up IOS keyboard



Double-Click to Hide IOS keyboard

Caps Lock Switch



All Lowercase



All Uppercase



Do not convert case



Case Interchange

2.4G Wireless Pairing Method:

1st:Scanning following setting code



2nd:Scanning following setting code



3rd:Insert the 2.4G wireless receiver into USB port in your device.
One beep show that scanner and receiver connected.

Notes: When the scanner is entered 2.4G pairing status and it does not get connected with your device within 1 minutes,it will beep twice lowly and longly.You need to repeat above-mentioned 3 steps to make it connect with you device.(When the scanner is in the 2.4G pairing status, double-click can make it exit the pairing mode).

Sound/Vibration Setting



Sound OFF



Sound ON



Vibration OFF(optional)



Vibration ON(optional)

Sleep Time Setting



1 min



5 min



10 min



30 min



Never Sleep



Sleep Immediately

Ending Character Setting



Add CR(Carriage Return)



Add LF(Linefeed)



Add CR+LF



Cancel CR+LF



Add TAB

Keyboard Language Setting



English(USA)



French



Italian



International Universal Keyboard



Portuguese



Portuguese(Brazil)



German



Spanish



Japanese



Belgian



English(UK)



French(Switzerland)



Russian



Czech



French(Canada)



Hungarian



Polish



Sweden / Finland



Spanish(Mexico)



Argentine(Latin America)



Norwegian



German(Switzerland)

Transmission Speed Setting

Choosing the transmission speed according to the receiving speed of the device



Fast



Middle



Slow



Super Slow

Bluetooth Protocol



Bluetooth HID



Bluetooth SPP



Bluetooth BLE

Notes: Scanning any one of above 3 setting codes can make the scanner enter bluetooth pairing status.

Working Modes

Under “Normal Mode” ,the data of the code you scanned will be transferred to your device via bluetooth,2.4G or USB.A short and low beep show the data is transferred successfully.If not,the scanner will beep 3 times shortly and lowly.

Under “Normal Mode” ,if scans failure,the data you just scanned will lost.



Normal Mode

Under “Storage Mode” ,the data of the code you just scanned will be stored in the scanner.And scanner beep once shortly and slowly after each scanning. Scanner will beep 3 times after scanning a code if its storage space is full.



Storage Mode

You can check the storage data amount by scanning following setting code



Storage Data Amount

Scanning following setting code to upload the data you have scanned to your device via bluetooth,2.4G wireless or USB.

Notes: Making sure that scanner is got connected with your device.
After uploading data,the data which have been stored in the scanner will not be deleted from the scanner



Upload Data

Scanning following setting code to clear all the data which is stored in the scanner.All data will be deleted after scanning setting code” Clear Data” , so please confirm that you have uploaded those data to your device if you need them.



Clear Data

Clear Total Number Setting



Clear Total Number of Scans



Clear Total Number of Stores

Change Bluetooth Name

1st: Scanning following setting code” Change BT Name”



Change BT Name

2nd: Scanning a customized codes which its data is the name you want. You can generate a customized code via barcode generator,like label shop. Or you also can contact with us to generate a code for you. For example: Folowing barcode’ s data is “Scanner123” ,after you scanned it,the bluetooth name of your scanner will be changed to “Scanner123” .



Scanner123

3rd: Scanning following setting code to set the name as default.



Save Setting

Hide Pre-characters/Post-characters

1st: Scanning following setting code “Hide Pre-characters” or “Hide Post-characters”



Hide Pre-characters



Hide Post-characters

2nd: Choosing how many characters you need to hide.



1



3



5



7



2



4



6



8



9



11



13



15



10



12



14



16

Notes: If you need to cancel hiding characters setting, you can scan following setting code



Cancel Hiding Pre-characters



Cancel Hiding Post-characters

Add Time As Prefix or Suffix

A.Scanning setting code “Add Time as Prefix” ,then there is scanning time in front of barcode data.



Add Time as Prefix

B.Scanning setting code “Add Time as Suffix” , then there is scanning time behind barcode data.



Add Time as Suffix

C.If you do not need scanning time as prefix or suffix,you can scan following setting code “Cancel Setting” .




Cancel Setting

Update Time

1st: Making scanner and computer connected via USB cable, and turning on the scanner.

2nd: Finding “Update_Time_V1.1.exe” program in the computer and open it. As following picture show.

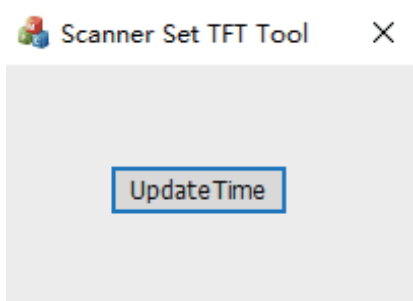

3rd: Click “Update Time”

Notes: “Update_time_V1.1.exe” program can be downloaded in website: <https://share.weiyun.com/508OXFZ>, or scanning following QR-code.



Screen Show Products Information Settings.

A.This scanner can store 2000 goods information(Including goods' barcode data,goods' price and goods' specification)

B.This scanner only supports to store goods which barcode characters number within13.If goods' barcode characters number beyond 13,scanner won' t extract product information.


Step1: Creating a excel file,first line fill in goods' barcode data;second line fill in goods' specification;third line fill in goods' price.

	A	B	C
1	Barcode	Commodity Name	Price
2	9556089885201	Faber Castell dust free eraser 1pc	1
3	9556939290124	DOL-S10 Staples 1pc	2
4	2112345678917	Pantene Shanpoo 300ml	3

Step2: .After filling all goods' information,saving excel table as text document format (separated by Tabs).

Step3: Making scanner and computer connected via USB cable,and turning on the scanner.

Step4: Finding “DataToolsV1.4.exe” in the computer and open it.As following picture show:

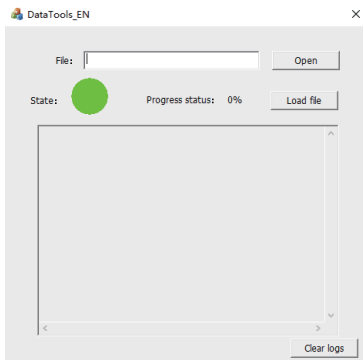

Step5: Clicking “Open” and choosing the Text files you just created, then clicking “Load file”. Do not press the trigger and make sure scanner is got connected with computer via USB cable.

Step6: There is a status light in the DataTool program. It’s yellow after you press the “Open”. It will be turned to Green if loading file successfully, or Red if failed.

Notes: “DataToolsV1.1.exe” program can be downloaded in website: <https://share.weiyun.com/508OXFZ>, or scanning following QR-code.



Goods Information Display Setting



Enable



Disable

Screen Language Setting



Chinese



English

Prefix/Suffix Setting

The setting prefix and suffix is divided into two parts, displayable characters and controlled characters

1st Part: Displayable characters

Step1: Scanning following setting code “Add Prefix” or “Add Suffix”



Add Prefix



Add Suffix

Step2 : Finding the character which you need to add as prefix or suffix in appendix B, and scanning the barcode corresponding to the character.

2nd Part: Controlled Characters

Step1: Finding the character which you need to add as prefix or suffix in appendix A, and scanning the barcode corresponding to the character set.



Character Set 0



Character Set 1



Character Set 2



Character Set 3

Step2: Scanning following setting code “Add Prefix” or “Add Suffix”



Add Prefix



Add Suffix

Step3: Finding the character which you need to add as prefix or suffix in appendix A, and scanning the barcode corresponding to the character.

Notes: Scanning following setting code if you need to cancel prefix and suffix setting



Cancel Prefix Setting



Cancel Suffix Setting

2.4G Wireless COM-Port Mode Setting

Step1: Scanning setting code “COM-Port Mode”



COM-Port Mode

Step2: Scanning setting code “Enter Pairing Mode”



Enter Pairing Mode

Step3: Insert the 2.4G wireless receiver into USB port in your device. One beep show that scanner and receiver connected. And it will generate a COM port in your device.

Notes: When the scanner is entered 2.4G COM-Port Mode pairing status and it does not get connected with your device within 1 minutes, it will beep twice lowly and longly. You need to repeat above-mentioned 3 steps to make it connect with your device. (When the scanner is in the 2.4G COM-Port pairing status, double-click can make it exit the pairing mode).

Enable/Disable HID Searching by Pressing Scan Button 8S Settings



Enable



Disable

Temperature test setting:



open



shut down

Body temperature temperature upload settings

The test of human body temperature is not uploaded by default, if you need to upload, please scan to open the setup code





open

















shut down



























Appendix A: Controlled Characters

Decimal	ASCII	Character Set 0	Character Set 1	Character Set 2	Character Set 3	Setting Code
1	SOH	NULL	Home	Ctrl+A	Alt+001	
2	STX	Ctrl+B	End	Ctrl+B	Alt+002	
3	ETX	Ctrl+C	Up Arrow	Ctrl+C	Alt+003	
4	EOT	NULL	Down Arrow	Ctrl+D	Alt+004	
5	ENQ	NULL	Left Arrow	Ctrl+E	Alt+005	
6	ACK	NULL	Right Arrow	Ctrl+F	Alt+006	
7	BEL	NULL	Shift+Tab	Ctrl+G	Alt+007	
8	BS	Back Space	Back Space	Back Space	Alt+008	
9	HT	Tab	Tab	Tab	Alt+009	
10	LF	Enter	Enter	Ctrl+P	Alt+010	
11	VT	NULL	NULL	Ctrl+Q	Alt+011	
12	FF	NULL	NULL	Ctrl+R	Alt+012	
13	CR	Enter	Enter	Enter	Alt+013	















Temperature + Barcode 2 in 1 Wireless Scanner

Decimal	ASCII	Character Set 0	Character Set 1	Character Set 2	Character Set 3	Setting Code
14	S0	F1	Page Up	Ctrl+N	Alt+014	
15	S1	F2	Page Down	Ctrl+O	Alt+015	
16	DLE	F3	F11	Ctrl+P	Alt+016	
17	DC1	F4	NULL	Ctrl+Q	Alt+017	
18	DC2	F5	NULL	Ctrl+R	Alt+018	
19	DC3	F6	NULL	Ctrl+S	Alt+019	
20	DC4	F7	NULL	Ctrl+T	Alt+020	
21	NAK	F8	F12	Ctrl+U	Alt+021	
22	SYN	F9	F1	Ctrl+V	Alt+022	
23	TB	F10	F2	Ctrl+W	Alt+023	
24	CAN	F11	F3	Ctrl+X	Alt+024	
25	EM	F12	F4	Ctrl+Y	Alt+025	
26	SUB	NULL	F5	Ctrl+Z	Alt+026	
27	Esc	Esc	F6	Ctrl+[Alt+027	















Appendix B: Displayable Characters















Decimal	ASCII	Setting Code	Decimal	ASCII	Setting Code
32	空格		45	-	
33	!		46	.	
34	"		47	/	
35	#		48	0	
36	\$		49	1	
37	%		50	2	
38	&		51	3	
39	'		52	4	
40	(	53	5	
41)		54	6	
42	*		55	7	
43	+		56	8	
44	,		57	9	















Decimal	ASCII	Setting Code
---------	-------	--------------

58	:	
59	;	
60	<	
61	=	
62	>	
63	?	
64	@	
65	A	
66	B	
67	C	
68	D	
69	E	
70	F	
71	G	

Decimal	ASCII	Setting Code
---------	-------	--------------

72	H	
73	I	
74	J	
75	K	
76	L	
77	M	
78	N	
79	O	
80	P	
81	Q	
82	R	
83	S	
84	T	
85	U	

Decimal	ASCII	Setting Code
86	V	
87	W	
88	X	
89	Y	
90	Z	
91	[
92	\	
93]	
94	^	
95	_	
96	`	
97	a	
98	b	
99	c	

Decimal	ASCII	Setting Code
100	d	
101	e	
102	f	
103	g	
104	h	
105	i	
106	j	
107	k	
108	l	
109	m	
110	n	
111	o	
112	p	
113	q	

FAQ (Frequently Asked Questions)

- ▶ What should I do if the scanner can not pair with my bluetooth device?
 - A. Making sure the scanner is in the pairing state under the required Bluetooth protocol
 - B. If the device has connected successfully with other barcode scanner via bluetooth, or other devices. Please delete the bluetooth connection record before connecting
 - C. The wireless module has been damaged

- ▶ Why can not the scanner read some codes?
 - A. The scan engine does not support that code type or disabled defaultly. You can contact with us to enable it.

- ▶ Why can not the scanner transfer data to my device when they are connected?
 - A. Please confirm if the scanner is under “Storage Mode”, you need to turn it to “Normal Mode” or scanning setting code “Upload Data” to transfer data to your device.
 - B. The wireless module may have been damaged.

- ▶ Why does the data which show in my device is not the same as code?
 - A. Please confirm that if the keyboard language of the scanner is the same as your devices’.

- ▶ Why can not the scanner charge?
 - A. Please choose the correct charge head and charge cable.
 - B. Charging circuit or battery may have been damaged.

- ▶ How to make more settings?
 - Please contact with us for more settings.

Buzzer Proformance	Introduction
one/long beep low to high frequency	power on
one/long beep high to low frequency	power off
one/short beep low frequency	read a code under normal mode
one/short beep low to high frequency	read a code under storage mode
one/short beep high to high frequency	read a setting mode
three/short beeps low frequency	transfer failure or storage space is full

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment