

Carrier frequency	(13,56 MHz /)
Compatible standard	ISO 1/569,3
Maximum transmission speed /	26.5 kbit/s
Read-write distance max.	62.5 mm with RTP-0502-022
\sim	
2	

INTERFACE	
Data transfer rate	38 400 baud
LED green on	RWM live
LED green blinking	IO-Link communication

Transponder detected

Transponder + IO-Link communication

		IO-Link	\checkmark		
ELECTRICAL DATA		MECHANICAL DATA			
Supply voltage range (Ub)	1132 VDC	Protection degree	IP67		
No-load supply current (field off)	20 mA	Ambient temperature range TA**	-25+80 °C		
Max. current consumption (no load)	50 mA	Storage temperature range TS***	-25+80 °C		
Polling current	30 mA	Sensing face material	PBTP		
Short-circuit protection	\checkmark	Housing material	Chrome-plated brass		
Voltage reversal protection	\checkmark	Connector type	M12 4-pin		
Max. output current	≤ 200 mA	Weight (incl. nuts)	87 g		

LED yellow on


LED yellow blinking

** Read/write operations possible


*** Data retention and mechanical stability limit

CLEARANCE

Read/write modules must not mutually influence each other. For this reason, a minimum distance of 2 x D between the devices must be observed.

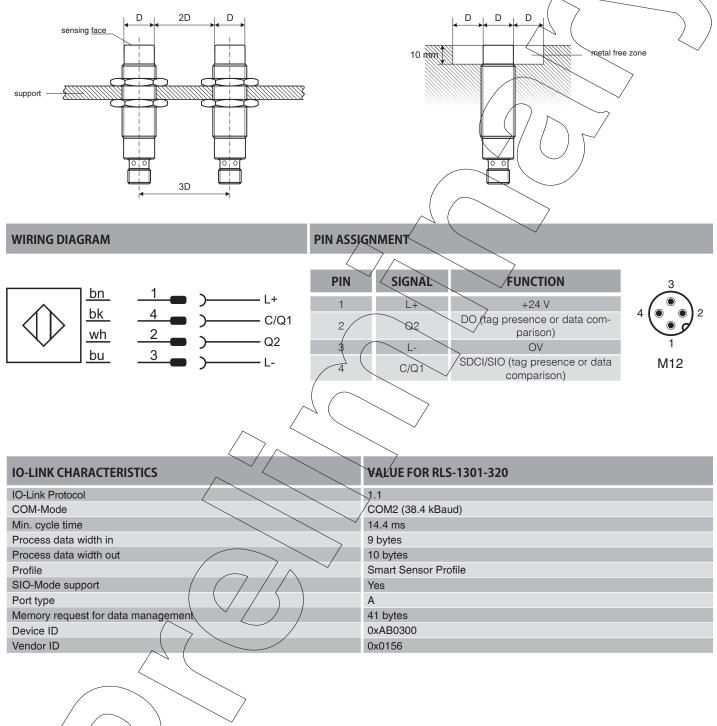

ndex	Sub Hex	Name	Access	Data Type	Value	Default
			I	DENTIFICATIO	N	
10 _b		Vendor Name	R	char []	"Contrinex"	\rightarrow /
11 _h		Vendor Text	R	char []	"www.contrinex.com"	
12 _h		Product Name	R	char []	"RLS-1301-320"	
13 ["]		Product ID	R	char []	"00000000"	
14 _h		Product Text	R	char []	"IO-Link RFID reader"	
15 _h		Serial Number	R	char []	"0000001"	
17 _h		Firmware Revision	R	char []	"01.09.01"	
18 _h		Application Specific Tag	R/W	char []	<user (variable="" 16="" byte="" length)="" string,=""></user>	<vendor sp<br="">cific></vendor>
			READER PA	RAMETER PRO	DCESS DATA	
						1
40 _h	01 _h	Operating Mode	R/W	uint8	00_h : Scan User Data 01_h : Read / Write Command	FF _h
	02 _h	Data Hold Time	R/W	uint8	$\begin{array}{c} FE_{h}: \text{No Hold Time} \\ O0_{h}: \text{Hold Time 100 ms} \\ O1_{h}: \text{Hold Time 200 ms} \\ O2_{h}: \text{Hold Time 500 ms} \\ O3_{h}: \text{Hold Time 1000 ms} \\ O4_{h}: \text{Hold Time 2000 ms} \end{array}$	FF _h
	03 _h	Scan Address	R/W	uint8 <	Address to scan	FF _h
			READ	ER PARAMETE	ER SIQ	
41 _h	01 _h	C/Q1 PIN SIO Operating Mode	R/W	uint8	FF_{h} : Presence Transponder 00_{h} : Compare Data 01_{h} : No SIO	FF _h
	02 _h	C/Q1 SIO Data to compare H	R/W	uint32	Comparison value Byte 7 to 4	FF _h , FF _h , FF _h , FF _h ,
	03 _h	C/Q1 SIO Data to compare L	R/W	uint32	Comparison value Byte 3 to 0	FF _h , FF _h ; FF _h , FF _h ;
	04 _h	SIO Compare Data Address (C/Q1 & Q2)	R/W	uint8	Comparison address for C/Q1 and Q2 (A valid address must be chosen)	FF _h
	05 _h	Data Hold Time Output (C/Q1 & Q2)	R/W	uint8	FF _h : No Hold Time 00_h : Hold Time 100 ms 01_h : Hold Time 200 ms 02_h : Hold Time 500 ms 03_h : Hold Time 1000 ms 04_h : Hold Time 2000 ms	FF _h
	06 _h	C/Q1 PIN SIO Polarity	R/W	uint8	FF_h : Output "close" if condition = true 00_h : Output "open" if condition = true	FF_{h}
	07 _h	Q2 PIN SIO Operating Mode	R/W	uint8	FF_h : Presence Transponder 00_h : Compare data (C/Q1 must be also in com- pare data) 01_h : No SIO	FF _h
	08 _h	Q2 SIO Data to compare H	R/W	uint32	Comparison value Byte 7 to 4	FF _h , FF _h FF _h , FF _h
	09 _h	Q2 StQ Data to compare L	R/W	uint32	Comparison value Byte 3 to 0	FF _h , FF FF _h , FF _h
	0A _h	Q2 PIN SIO Polarity	R/W	uint8	FF_h : Output "close" if condition = true 00_h : Output "open" if condition = true	FF_{h}
_						

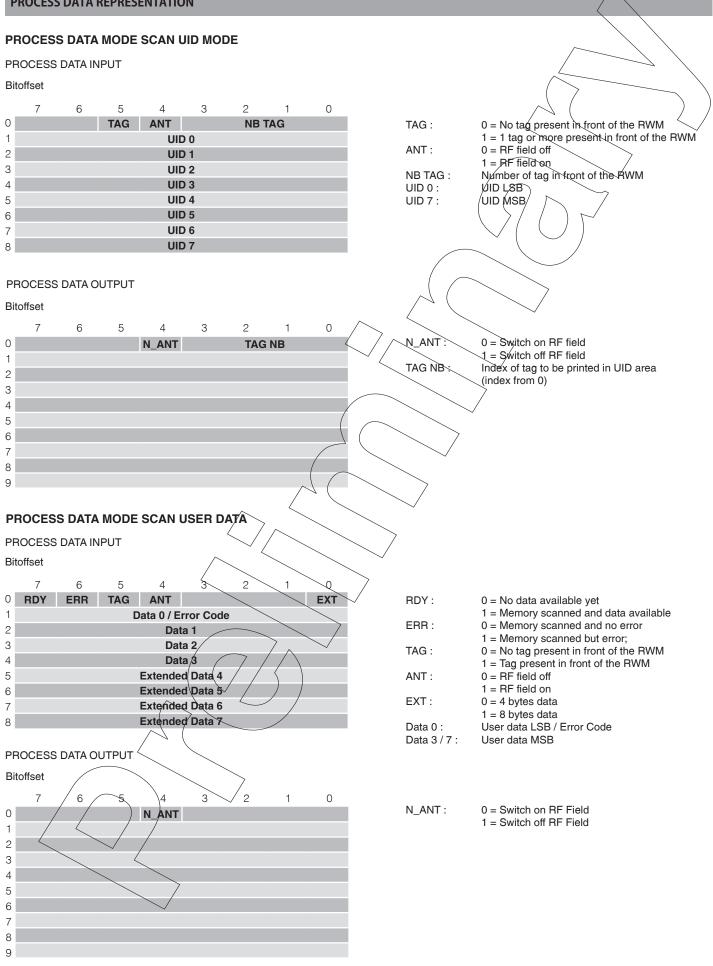

4

PROCESS DATA MODE READ/WRITE

PROCESS DATA INPUT

Bitoffset

	7	6	5	4	3	2	1	0	
0	RDY	ERR	TAG	ANT				EXT	RDY :
1			D	ata 0 / Er	ror Cod	е			
2				Data	a 1				ERR :
3				Data	a 2				TAG :
4				Data	a 3				inter :
5				Extended	d Data 4				ANT :
6				Extended	d Data 5				
7				Extended	d Data 6				EXT :
8				Extended	d Data 7				Data 0 :
									Data 3 / 7
									Error Coo Command FormatEr OptionNo Command

3

4

N_ANT

ADD

Data 0

Data 1

Data 2

Data 3

Extended Data 4

Extended Data 5

Extended Data 6

Extended Data 7

2

CMD

EXT

0 = No data available yet 1 = Command executed and data available 0 = Command executed and no error 1 = Command executed but error 0 = No tag present in front of the RWM 1 = Tag present in front of the RWM 0 = RF field off 1 = RF field on 0/= 4 bytes data 1 = 8 bytes data Read data L\$B≻Ęrror Cøde 7: Read data MSB de Definition ndNotSupported =1 rror ₹2, otSupported =/3, dProblem /= 5, 6qmmTagError = 6, TagError = 15, NoMomoryBloc = 16, BlocRrotected = 18, START : 0 = Do not execute the command 1 = Execute the command N_ANT : 0 = Switch on RF Field 1 = Switch off RF Field CMD : 0 = No command 1 = Read 2 = Write EXT : 0 = 4 bytes data 1 = 8 bytes data ADD : Block address Data 0 : Write data LSB Data 3 / 7 : Write data MSB

PROCESS DATA OUTPUT

6

5

Bitoffset

0 START

1

2

З

4

5

6

7

8

9

Value hex Value dec Function 05n 5 ParamDownloadStore 80n 128 Device Reset 82n 130 Restore factory settings*

*always do a reset after the restore of factory settings

MASTER TAG CONFIGURATION

For the RLS-1301-320, the IO-Link mode or the SIO (standard I/O mode) can be configured via IO-Link or via a Master /ag.

For the configuration via a Master Tag, a transponder (called Master Tag) will contain all the data used for the configuration.

There is a simple procedure to configure the RWM. Once all the data are written in the Master Tag, you need to put it in front of the RWM sensing face, to switch off the RWM power supply and to switch on again. The RWM will detect that it's a Master Tag and read all the data and configure the outputs accordingly.

On the Contrinex RFID product finder page (https://www.contrinex.com/product-finder/rfid/) of any ContriNET RWM USB, it is possible to download a software to setup the Master Tag using a ContriNET RWM USB. This program is called "IO-Link Master Tag Programmer" and its it is included in the "Softwares" zip file.

SIO MODE POSSIBILITIES

If you use the RLS-1301-320 in an SIO mode, you will have two main possibilities:


- 1. Presence Transponder: In this mode, the output will switch if a transponder is in the field of the RWM.
- Compare Data: In this mode, the output will switch if the data red in the defined block/memory of the transponder matches with the data stocked in the RWM.

MASTER TAG

To build a Master Tag it's possible to use any ISO15693 chip with at least eight memory blocks with 32 bits each. Two screenshots of the "IO-Link Master Tag Programmer" are placed below to serve as an example of one possible Master Tag contiguration

O - UNK Master tag configurator □	
	Read/Write Module used
SIO Mode O-Link Mode	
SIO Output configuration	
C/Q1 PIN SIO Operating Mode	Qutput switch condition selection for C/Q1 (Compare data)
C/Q1 SIO Data to compare H Q C/Q1 SIO Data to compare L 1150	Compare data value (DEC) to switch output C/Q1
C/Q1 PIN SIO Polghy Output closed if constition = true	
Q2	
Q2 PIN SIO Operating Mode	Output switch condition selection for Q2 (Tag presence)
Q2 SIO Data to compare H Q2 SIO Data to compare L 0	
Q2 PIN SIO Polarity Output closed if condition = true	
SIO Compare Data address (C/Q/ Q2)	Tag memory address value (DEC) where to perform the compare data operation
Data Hold Time output C/Q1 Q2) No hold time	Timer value during which the switching state is maintained after the transponder left the
Programm Master TAG	RWM detection range
Read Alaster TAG	
	J
O-LINK Master tag configurator □ ■ ×	
CONTRINES USB RWM Selection: RL5-1301-220-120	
SID Mode O'Dek Mode	
O IO-Link process data configuration	
	Selection box for the IO-Link operation mode (Scan UID, Scan User Data and Scan Read/
Operating Mode Scan UID ▼	Write Command)
Scan address	Scan address where to read the RFID data (only available when Scan User Data mode is selected)
Programm Master TAG	When Tag Master data (SIO & IO-Link Mode) is successfully programmed in to the tag memory, the "Program Master TAG" button turns green , otherwise it turns red
Read Master TAG	memory, are riogram master AG button turns green, otherwise it turns fed

POSSIBLE COMBINATION AND TYP			
Transponder type	S _{max}	S _o	D _o
Ø 9 RTP-0090-020	16	5	22
Ø 16 RTP-0160-020	36	17	38
Ø 20 RTP-0201-020	26	10.5	31
Ø 26 RTP-0263-020	34	15.5	37
Ø 30 RTP-0301-020	36	15.5	A (41))
Ø 50 RTP-0501-020	47	20 /	54
Ø 50 RTP-0502-022	62.5	29.5	66
Ø 50 RTP-0502-062	61	28.5	65,
Ø 50 RTP-0502-082	59	27.5	63

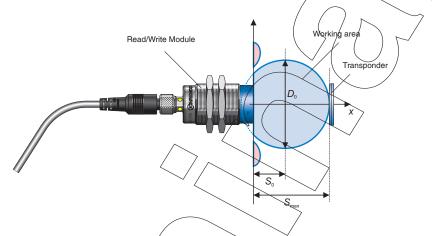

AVAILABLE TYPES

Part number	Part reference	Ø	Mounting	Connection
720 100 207	RLS-1301-320	M30	Non-embeddable	M12 4-pin
	\wedge	λ (

DISCLAIMERS

FCC information

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

IC information

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :/

(1) L'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Contrinex information

Operators of the products we supply are responsible for compliance with measures for the protection of persons. The use of our equipment in applications where the safety of persons might be at risk is only authorized if the operator observes and implements separate, appropriate and necessary measures for the protection of persons and machines. Terms of delivery and rights to change design reserved.

CONTRINEX AG Industrial Electronics

route du Pâqui 5 - P.O. Box - CH 1720 Corminboeuf - Switzerland - **Tel:** +41 26 460 46 46 -**Fax:** +41 26 460 46 40 - **Internet:** www.contrinex.com - **E-mail:** info@contrinex.com

7