

User Manual

For the model for WMPB-02

Prepared By: Joel Giles Cheang

Dated:

Approved By:

Pankaj Sharma

CTO

Whizpace Pte. Ltd.

Singapore

Date:

COPYRIGHT NOTICE

Copyright by Whizpace Pte. Ltd., Singapore. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without the written permission of Whizpace.

Role	Name	Designation	Signature
Owner			
Reviewer			
Approver			
Version			

WARNING

Check document control system for the latest version before using or copying.

REVISION HISTORY

Version	Date	Authors	Comments	Reasons for Change
0.1				

CONTRIBUTORS

- Benjamin Lim Zheng Jie
- Boonyang Tan
- Chiu Ying Lay
- Hong Feng
- Joel Giles Cheang
- Oh Ser Wah
- Pankaj Sharma
- Alger Goh
- Swe Zin



DEFINITIONS, ACRONYMS & ABBREVIATIONS

AC	Alternating Current
BPSK	Binary Phase-Shift Keying
CPU	Central Processing Unit
dB	Decibel
F/B Ratio	Front-to-Back Ratio
FCC	Federal Communications Commission
GUI	Graphics User Interface
IMDA	Info-Communications Media Development Authority
IP Address	Internet Protocol Address
KM	Kilometre (Unit of Measurement)
Mbps	Megabits per second
MHz	Megahertz
No.	Number
OFDM	Orthogonal Frequency-Division Multiplexing
PoE	Power over Ethernet
QAM	Quadrature Amplitude Modulation
QPSK	Quadrature Phase-Shift Keying
RF	Radio Frequency
RX Rate	Receiving Rate
SDRAM	Synchronous Dynamic Random Access Memory
SMA Antenna	SubMiniature A Antenna
SSID	Service Set Identification
TCP	Transmission Control Protocol
TVWS	Television White Spaces
TX Rate	Transmitting Rate
UDP	User Datagram Protocol
WEP	Wired Equivalent Privacy
WPA	Wi-Fi Protected Access
WPA2	Wi-Fi Protected Access 2

FCC Regulatory Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Part 15 TV Band Device Notice

This equipment has been tested and found to comply with the rules for white space devices, pursuant to part 15 of the FCC rules. These rules are designed to provide reasonable protection against harmful interference. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- (1) Reorient or relocate the receiving antenna.
- (2) Increase the separation between the equipment and receiver.
- (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- (4) Consult the manufacturer, dealer or an experienced radio/TV technician for help.

Caution: Exposure to Radio Frequency Radiation.

To comply with FCC RF exposure compliance requirements, for fixed configurations, a separation distance of at least 40 cm must be maintained between the antenna of this device and all persons.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

HQ Contact:

Whizpace Pte. Ltd.
77 Ayer Rajah Crescent,
#02-30,
Singapore-139954

US Contact:

Virtual Gateway Labs.
1732 North First Street, Suite 220,
San Jose, California 95112
USA
Phone: +1 408 453 4557
Fax: +1 408 453 4046
Website: <http://www.vg-labs.com/>

SUPPLIER'S DECLARATION OF CONFORMITY

47 CFR § 2.1077 Compliance Information

Unique Identifier: WhizMesh- External Antenna

Model: WMPB-02

Responsible Party –

HQ Contact:

Whizpace Pte. Ltd.
77 Ayer Rajah Crescent,
#02-30,
Singapore-139954
Phone: +65-62089672
Website: www.whizpace.com

U.S. Contact Information

Virtual Gateway Labs.
1732 North First Street, Suite 220,
San Jose, California 95112
USA
Phone: +1 408 453 4557
Fax: +1 408 453 4046
Website: <http://www.vg-labs.com/>

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Table of Contents

- COPYRIGHT NOTICE 1
- WARNING 2
- REVISION HISTORY 2
- CONTRIBUTORS 3
- DEFINITIONS, ACRONYMS & ABBREVIATIONS 4
- SUPPLIER'S DECLARATION OF CONFORMITY 6
- 1. INTRODUCTION 8
 - 1.1. PURPOSE 8
 - 1.2. PRODUCT OVERVIEW 8
- 2. SYSTEM BLOCK DIAGRAM 9
- 3. HARDWARE SETUP AND CONFIGURATION 10
 - 3.1. SETUP (TP-LINK POE) 10
 - 3.2. SETUP (TP-LINK SWITCH) 10
 - 3.3. ANTENNA CONNECTION 11
 - 3.4. FERRITE BEAD 11
 - 3.5. LED INDICATORS ON WHIZMESH 11
- 4. GUI CONTROL INTERFACE 12
- 5. SPECIFICATIONS 21
 - 5.1. WHIZMESH KEY FEATURES 21
 - 5.2. WHIZMESH HARDWARE SPECIFICATIONS 22
- 6. MODES OF OPERATION 23
 - 6.1. POINT TO POINT OPERATION 23
 - 6.2. OPERATION IN STAR TOPOLOGY 23
 - 6.3. WHIZMESH NODES FORMING A MESH TOPOLOGY 24

1. Introduction

1.1. Purpose

The purpose of the manual is to provide a quick guide with appropriate information and procedures on how to setup and operate the WhizMesh radio to establish a TV White Space (TVWS) radio link.

1.2. Product Overview

WhizMesh is a wireless communication solution based on dynamic sharing technology that make use of the underutilized TV Band, also known as TVWS. WhizMesh are designed to provide long range and good penetration characteristic which can lower down the cost of network and increase the speed of deployment. It supports mesh topology on top of the traditional point-to-point and point-to-multi-point (star) topologies.



Figure 1: Whizmesh

2. System Block Diagram

This part will show the basic block diagram of WhizMesh installation for different applications.

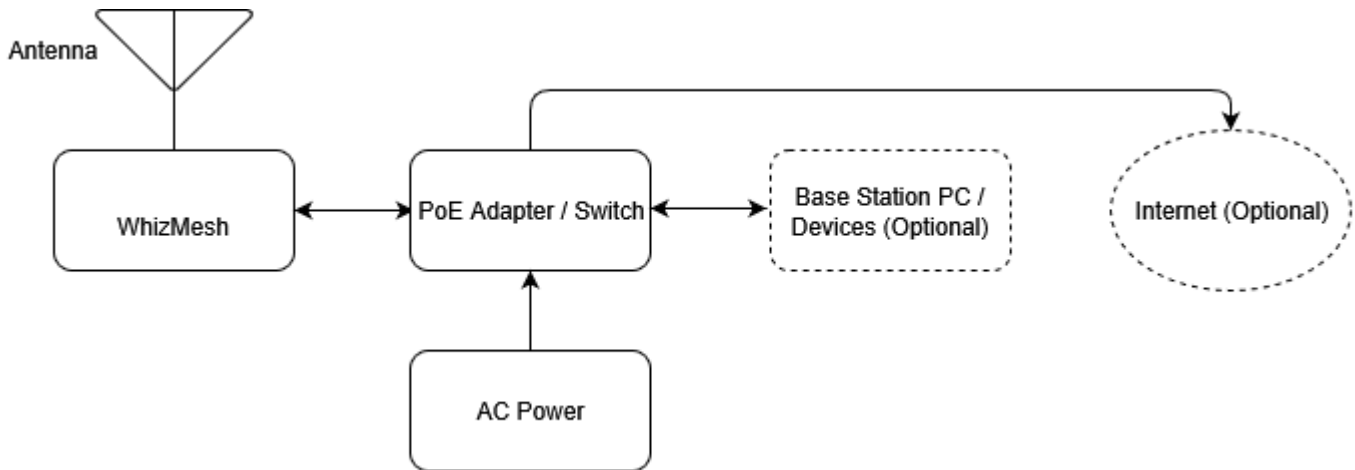


Figure 2: Base station installation diagram.

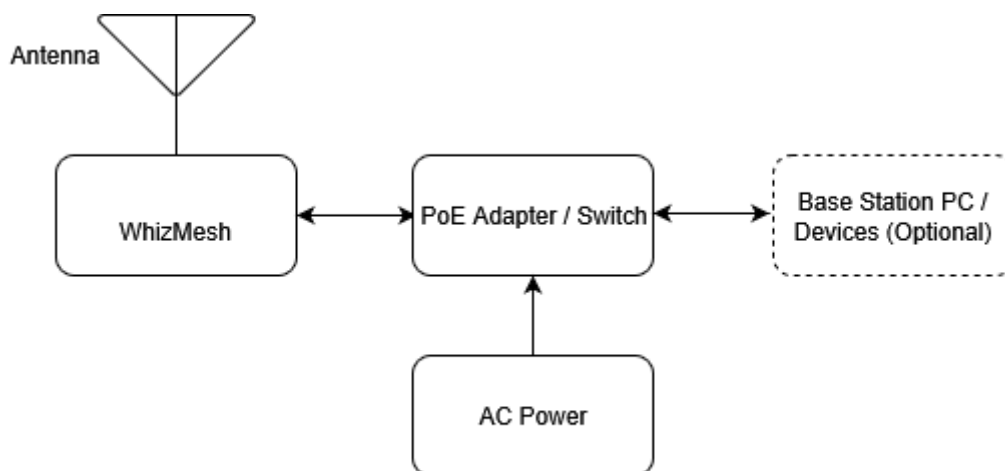


Figure 3: Client station installation diagram.

The TVWS radio link is established between both the base station and client station for different applications

3. Hardware setup and configuration

3.1. Setup (TP-Link PoE)

1. Connect AC power cord to PoE Adapter
2. PoE Ethernet OUT to WhizMesh
3. PoE Ethernet IN to Base Station PC

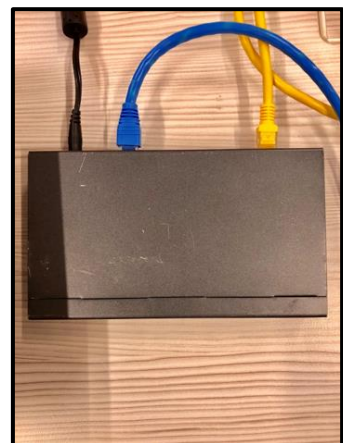
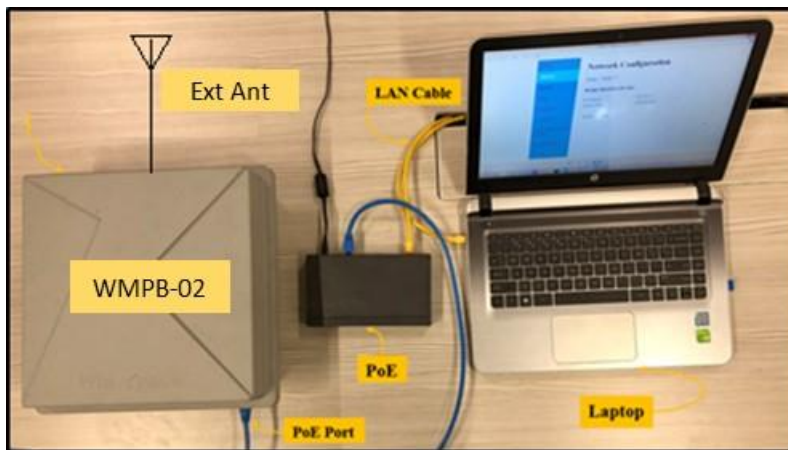


Figure 4: Connection between Whizpace device with laptop

Figure 5: Connection of POE

3.2. Setup (TP-Link Switch)

1. Connect AC power cord to TP-Link Switch
2. TP-Link Ethernet ports 1 - 4 to WhizMesh
3. TP-Link Ethernet port 5 – 8 to Base Station PC

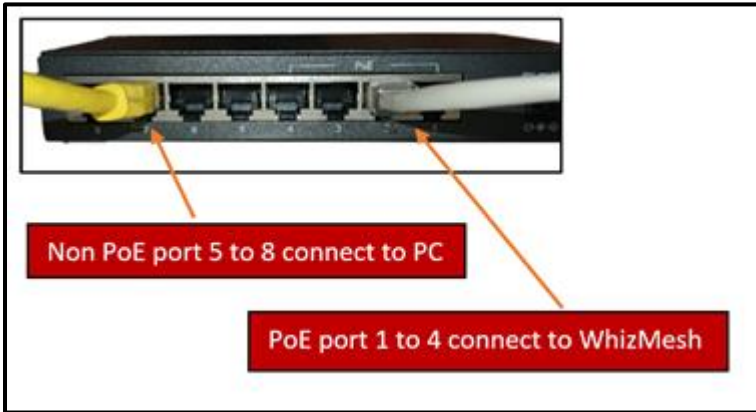


Figure 6: Connection between Whizpace products and laptop using TP-Link Switch

3.3. Antenna connection

4. Connect Antenna WA585 with N(M) to N(M) Coaxial cable to N(F) connector of WMPB-02

3.4. Ferrite Bead

5. The following Ferrite was used during all tests on DC input cable of PoE Switch:
Part Number: GRFC-8, Manufacturer: KE KITAGAWA.
 1. This Ferrite can be placed anywhere on the DC input cable with 2 rounds.

3.5. LED Indicators on WhizMesh

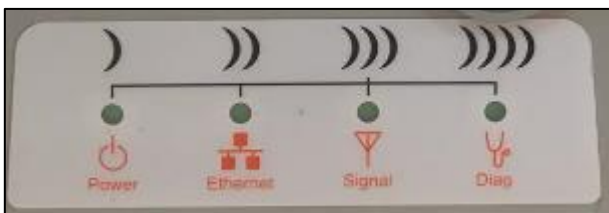


Figure 7: LED Indicators on Whizpace Products

6. POWER – Display the ON/OFF Status of WhizMesh
7. ETHERNET – Display if the Ethernet Port is active and functioning
8. SINGNAL – Not applicable



9. DIAG. – Not applicable

4. GUI control interface



<ul style="list-style-type: none"> Status Network Wireless Route Diagnostics Commands System Change Password Log Out 	<h3>General Status</h3> <p>br-lan</p> <p>IP Address : 192.168.1.12 Subnet Mask : 255.255.255.0</p> <p>eth0</p> <p>IP Address : Subnet Mask :</p> <p>eth1</p> <p>IP Address : Subnet Mask :</p> <p>wlan0</p> <p>IP Address : Subnet Mask :</p> <p>ESSID : Mode : Client Channel : Scanning... Tx Power : 29 Link Quality : 0/70 Signal Level : 0 Noise Level : -65 dBm</p> <p>Access Point :</p>	<p>All General Status of the WhizMesh is displayed on the first page of the GUI</p> <p>Eth0:</p> <p>ESSID: Network Name</p> <p>Mode: Base Station/Client Station</p> <p>Channel: Current Network Channel</p> <p>TX Power: Transmission Power in dBm</p> <p>Link Quality: Quality of the connection between the two devices</p> <p>Signal Level: Strength of connection in dBm</p> <p>Noise Level: Channel Noise Level in dBm</p> <p>*For simple link setup, users could use the default values and skip the other pages of the GUI</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Figure 8: General Status of the products



Enabling the bridge let users wirelessly connect two interfaces together.



Status

Network

Wireless

Route

Diagnostics

Commands

System

Change Password

Log Out

Network Configuration

Bridge :

Bridge Interface (br-lan)

IP Address	:	<input type="text" value="192.168.1.12"/>
Subnet Mask	:	<input type="text" value="255.255.255.0"/>
Default Gateway	:	<input type="text"/>

Figure 9: Enabling Bridge Interfaces in Network Configuration



Status

Network

Wireless

Route

Diagnostics

Commands

System

Change Password

Log Out

Network Configuration

Bridge :

Ethernet Interface (eth0)

IP Address :

Subnet Mask :

Wireless Interface (ath0)

IP Address :

Subnet Mask :

Default Gateway

Default Gateway :

Figure 10: Disabling the Bridge Interfaces in Network Configuration



Wireless Configuration

Enable Disable

Mode : ▼

Channel Switch : On Off

ESSID :

FCC IMDA

FCC Channel : ▼

IMDA Channel : ▼

Count : ▼

Distance :

Tx Power : ▼

Encryption : ▼

Key :

Figure 11: Enable Wireless Configuration

- Select your suitable ESSID, Operating Channel, Mode and TX power



Routing

Kernel IP routing table

Destination	Gateway	Genmask	Flags	Metric	Ref	Use	Iface
192.168.1.0	*	255.255.255.0	U	0	0	0	br-lan DELETE

Add Route

Router Address :

Gateway :

Subnet Mask :

Edit Default Gateway

Default Gateway :

Figure 12: Routing

- Select your routing.
- (Optional) Use options Add Route & Edit Default Gateway if you require customized routing.



- Status
- Network
- Wireless
- Route
- Diagnostics**
- Commands
- System
- Change Password
- Log Out

Diagnostic Testing

Ping an IP Address

IP Address :

Ping Count : (1-50)

Ping Packet Size : (4-1472 Bytes)

Ping Timeout : (10-120 Seconds)

Display the Routing Table

Reboot the Router

Throughput Tester

Figure 13: Diagnostic Testing of the products

- Run tests to find out your ping and bandwidth details
- Display the routing table
- Reboot the device



- Status
- Network
- Wireless
- Route
- Diagnostics
- Commands**
- System
- Change Password
- Log Out

Router Information

You can run command lines via the web interface.
Fill the text area with your command and click *Submit*.

* Continuous output will not be displayed

Command

Figure 14: Running command lines through the web interface

- Run command Lines on the GUI

Check with Whizpace for supported command lines



System Configuration

- Status
- Network
- Wireless
- Route
- Diagnostics
- Commands
- System
- Change Password
- Log Out

Save Configuration

Reset to Default Configuration

Figure 15: System Configuration

- Save the current configuration
- Reset the WhizMesh device



Status	Old Password : <input type="text"/>
Network	New Password : <input type="text"/>
Wireless	Confirm New Password : <input type="text"/>
Route	<input type="button" value="Change Password"/>
Diagnostics	
Commands	
System	
Change Password	
Log Out	

Figure 16: Changing password for the GUI

5. Specifications

5.1. WhizMesh Key Features

- No need line-of-sight communication
- Long range communication up to 10 km (line-of-sight)
- Data rates from 1.5 to 16.25Mbps
- Supports point-to-point, point-to-multipoint and mesh topologies
- Supports up to 2,000 connection associations
- Supports various networking protocols such as TCP/IP & UDP
- Supports traffic prioritization queues for video, voice and data applications
- Secured communication with WEP, WPA or WPA2 security
- External antenna
- Supports 24V/48V Power-over-Ethernet for ease of deployment
- Operation in license-exempt TV White Space bands
- P65 ratings for outdoor deployment



5.2. WhizMesh Hardware Specifications

System Specifications	
Product	WMPB-02
Mesh Topology	Yes
Occupied Channel Bandwidth	5MHz
Channel Spacing	6/8MHz (configurable to 5,6 or 7 MHz)
Data Rates (For a Single Channel)	16.25, 13.5, 12, 9, 6, 5.5, 4.5, 3, 2.5, 2.25, 1.5, 1.25, 0.25 Mbps
Step size	1MHz
Modulation	OFDM, QAM, QPSK, BPSK
Range	Up to 5 km
Number of Nodes	Up to 2,000 associations
Transmit Power	Up to +17dBm (Operational) exclude Antenna
Receiver Sensitivity	-96dBm @ 1.5Mbps (Typical)
Maximum System Gain	113dB (Without Antenna)
Back End Interface	IP
Processor	Atheros CPU 533MHz
Flash	8MB Strata Flash
SDRAM	32MB SDRAM
RF Port	N/A
Mechanical Specifications	
Dimension	30x30x15 cm
Weight	2kg
Enclosure	Plastic Casing IP67
Mounting	Pole Mount
Environment Specifications	
Operating Temperature	-30 to +70°C
Operating Humidity	Up to 95% non-condensing

6. Modes of Operation

6.1. Point to point operation

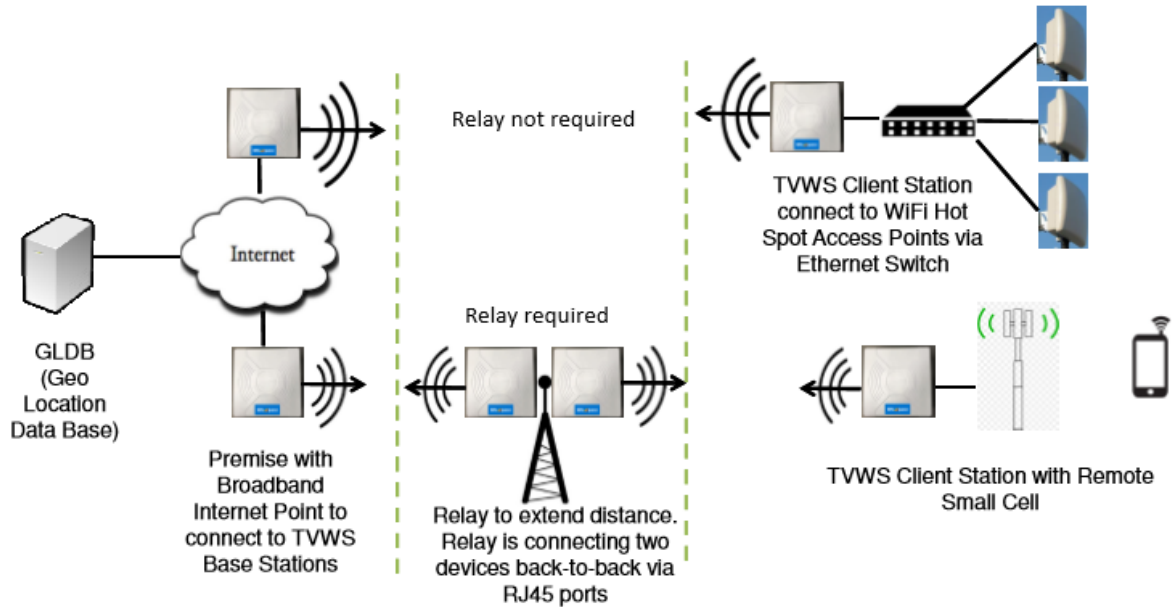


Figure 26: Point-to-point operation

6.2. Operation in Star Topology


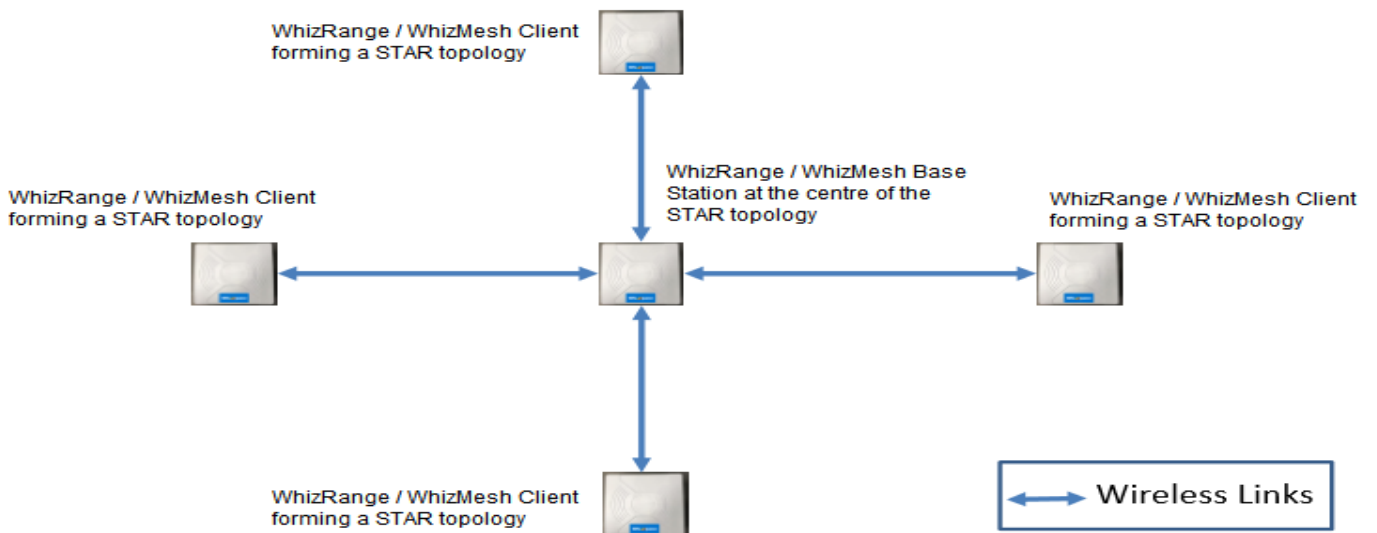


Figure 27: Whizpace product operation in Star Topology

6.3. WhizMesh Nodes forming a MESH topology

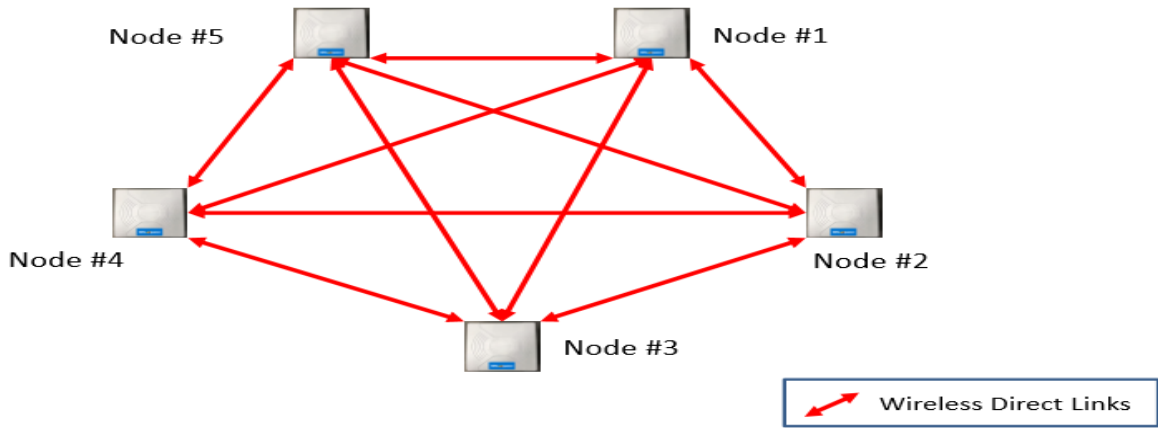

WhizMesh Nodes forming a MESH topology.

Figure 28: Whizpace product operation in MESH Topology