









Freq. Stability NVNT ac20 5700MHz Ant0

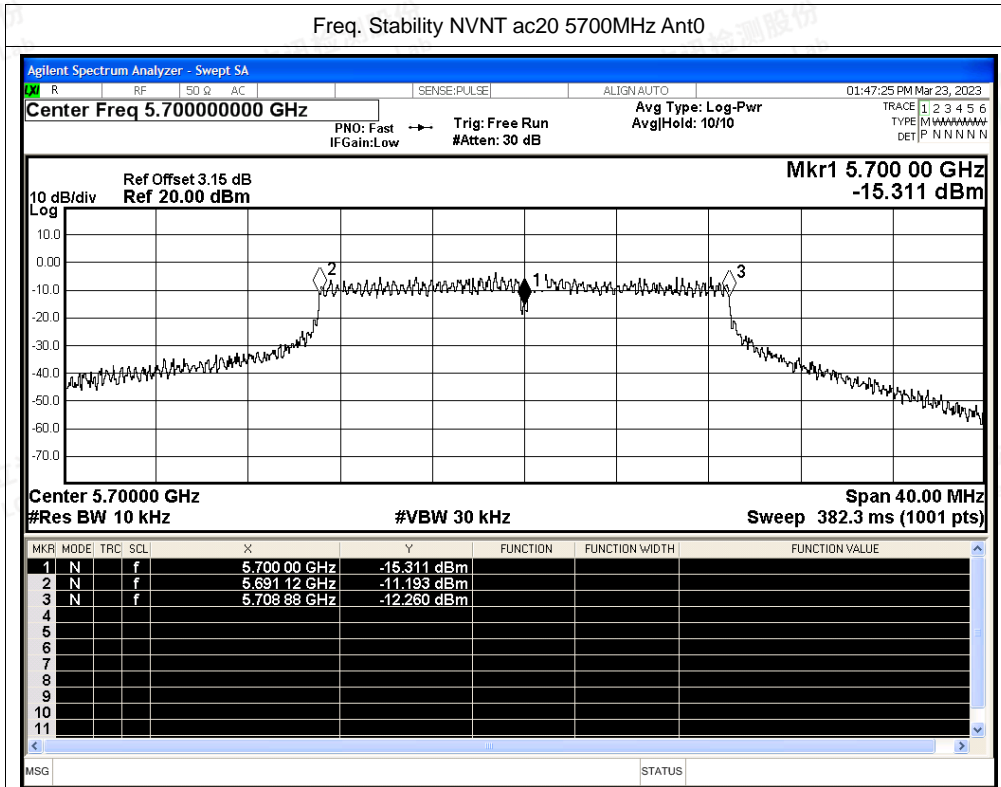

Freq. Stability NVNT ac40 5510MHz Ant0

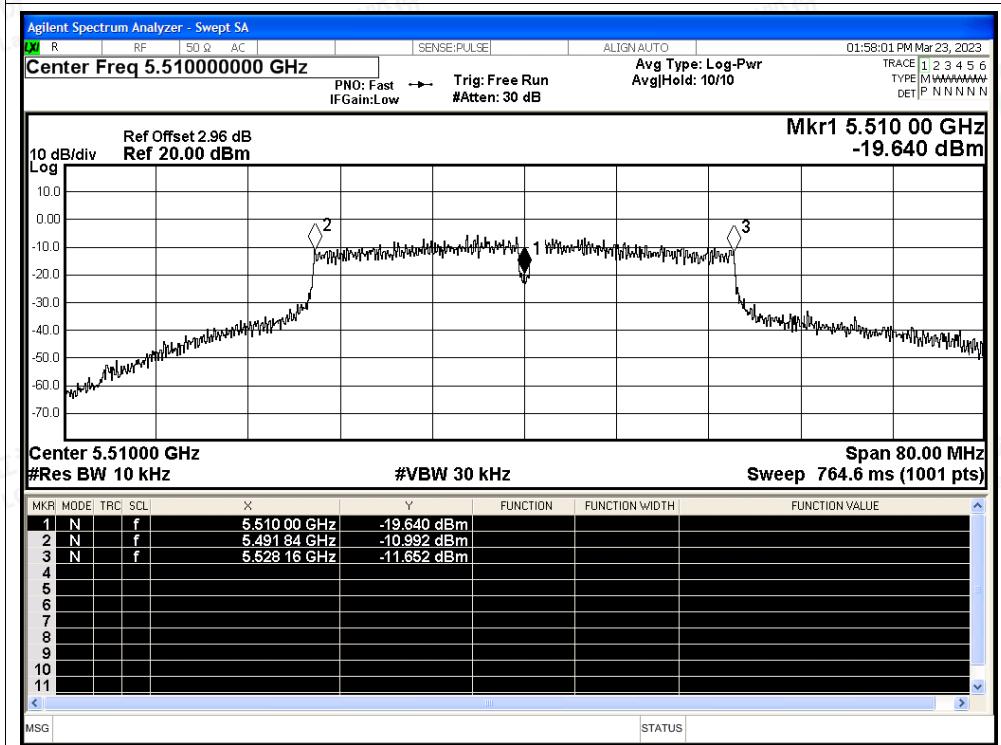


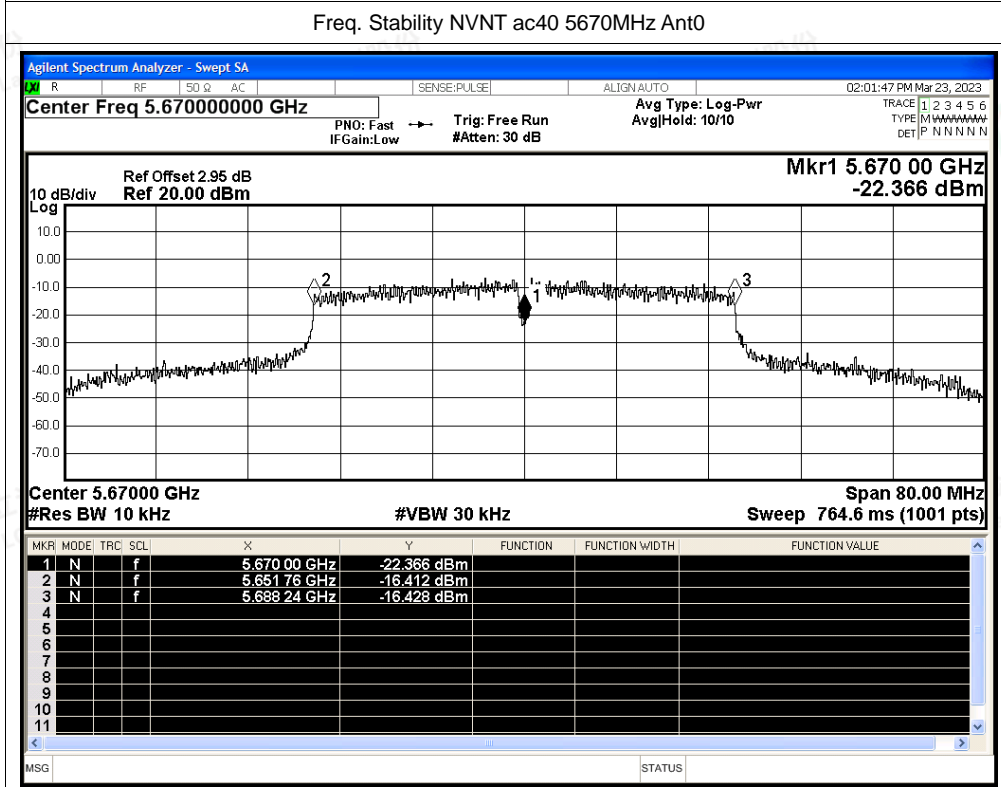
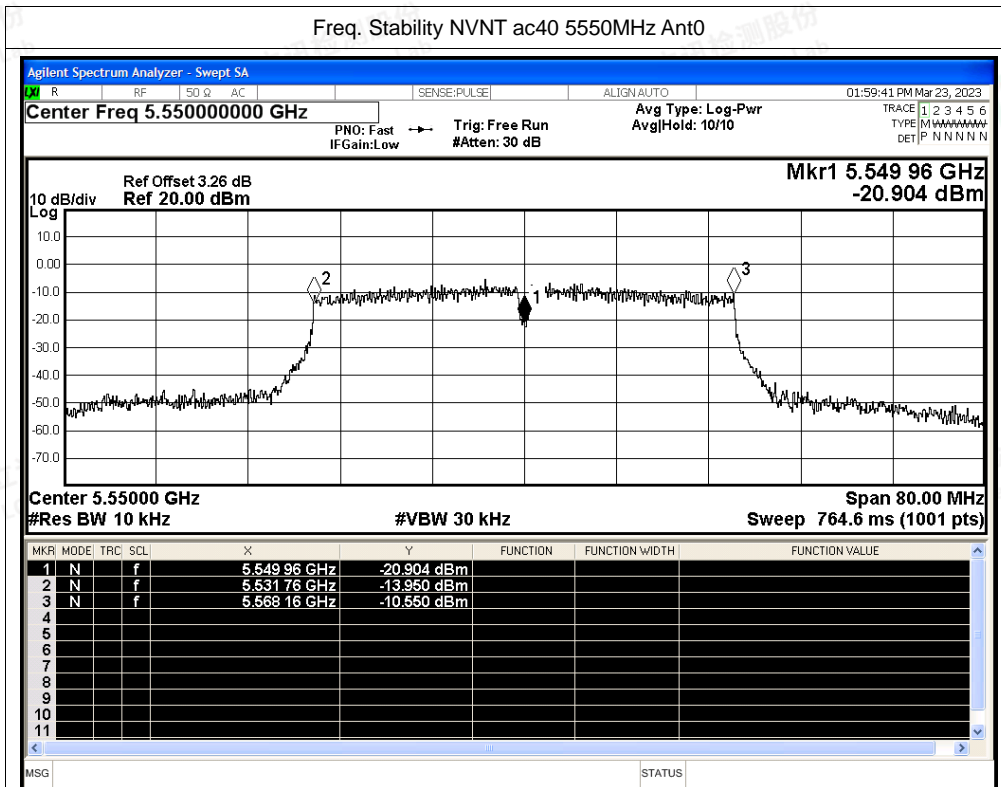


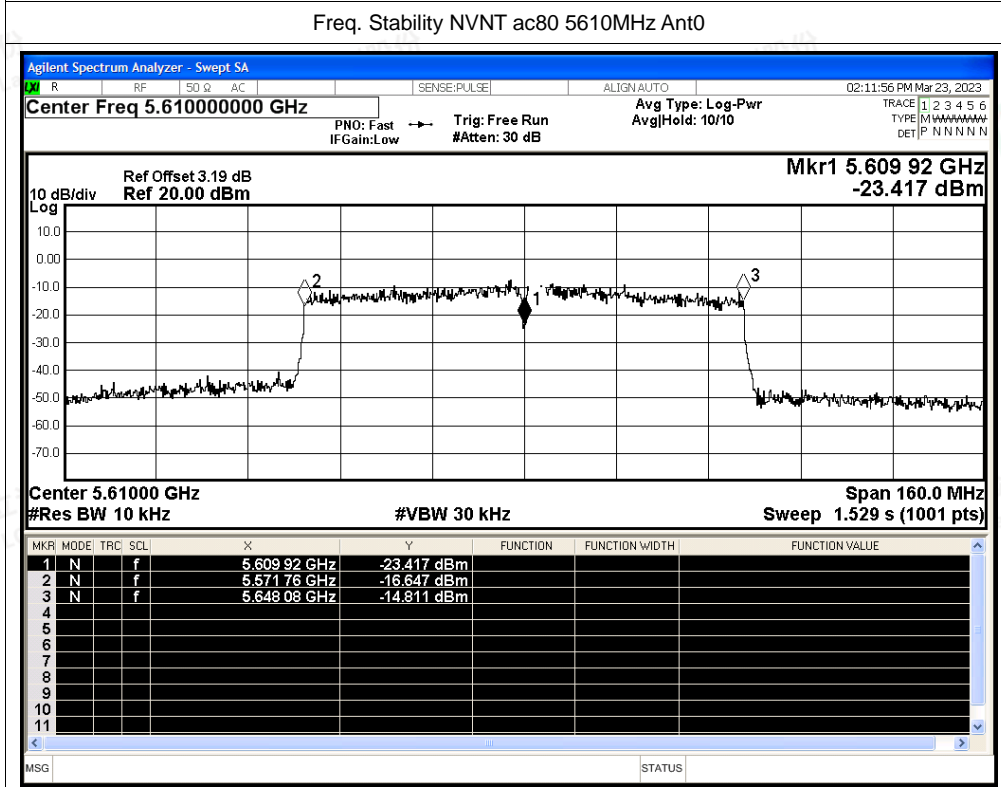
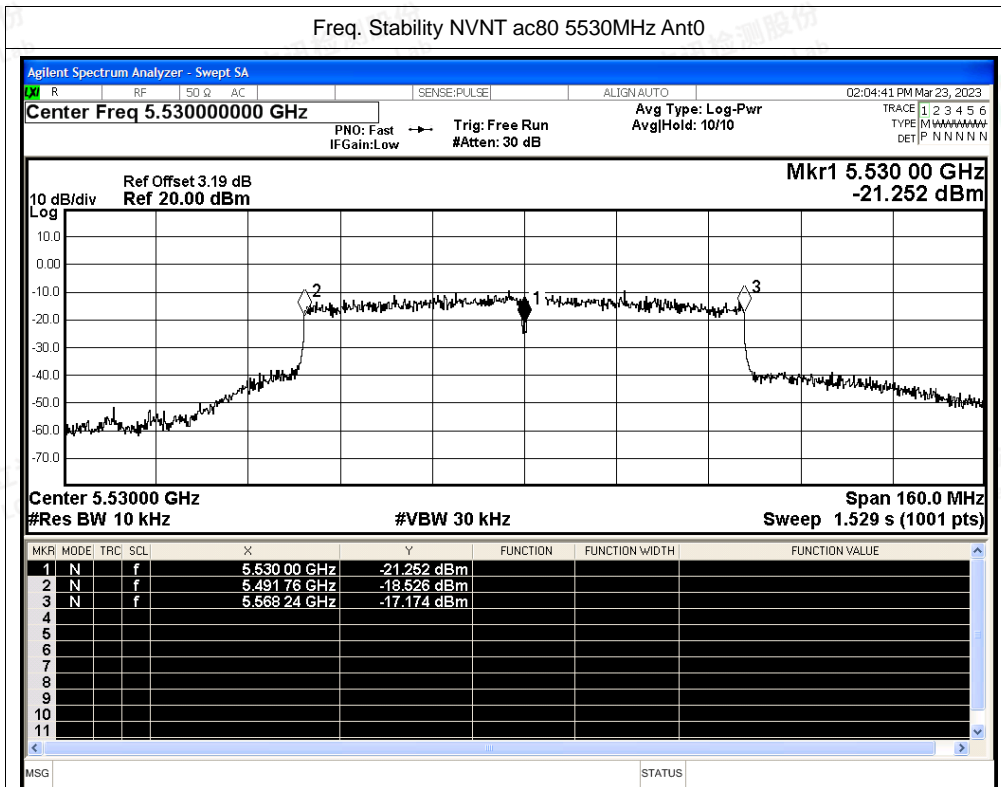




Freq. Stability NVNT ac160 5570MHz Ant0



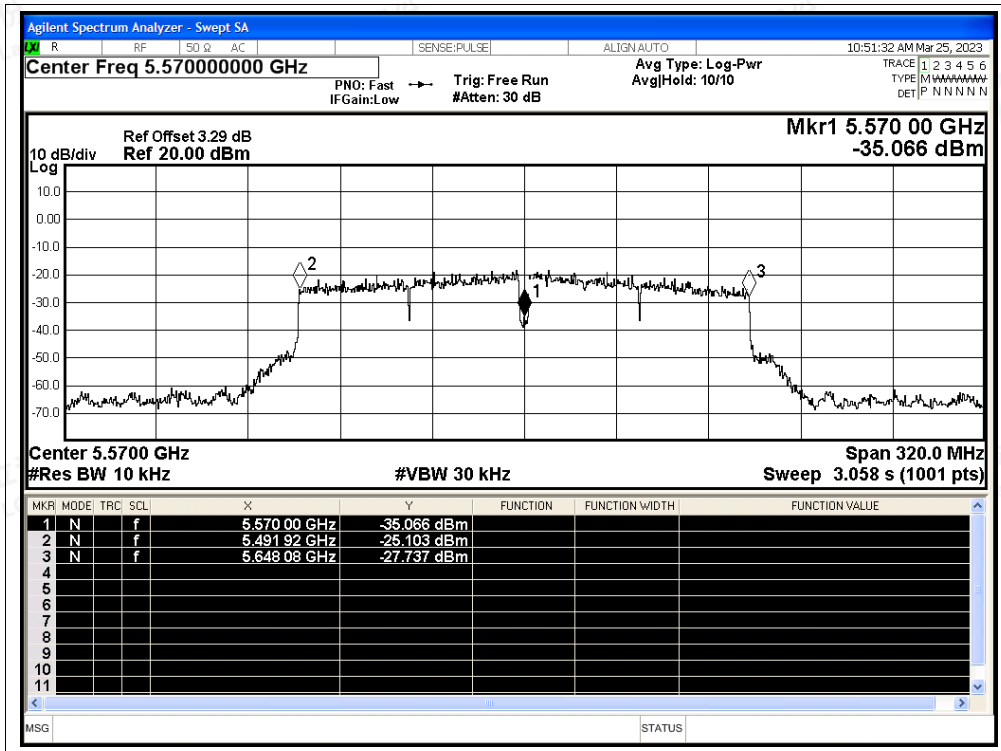

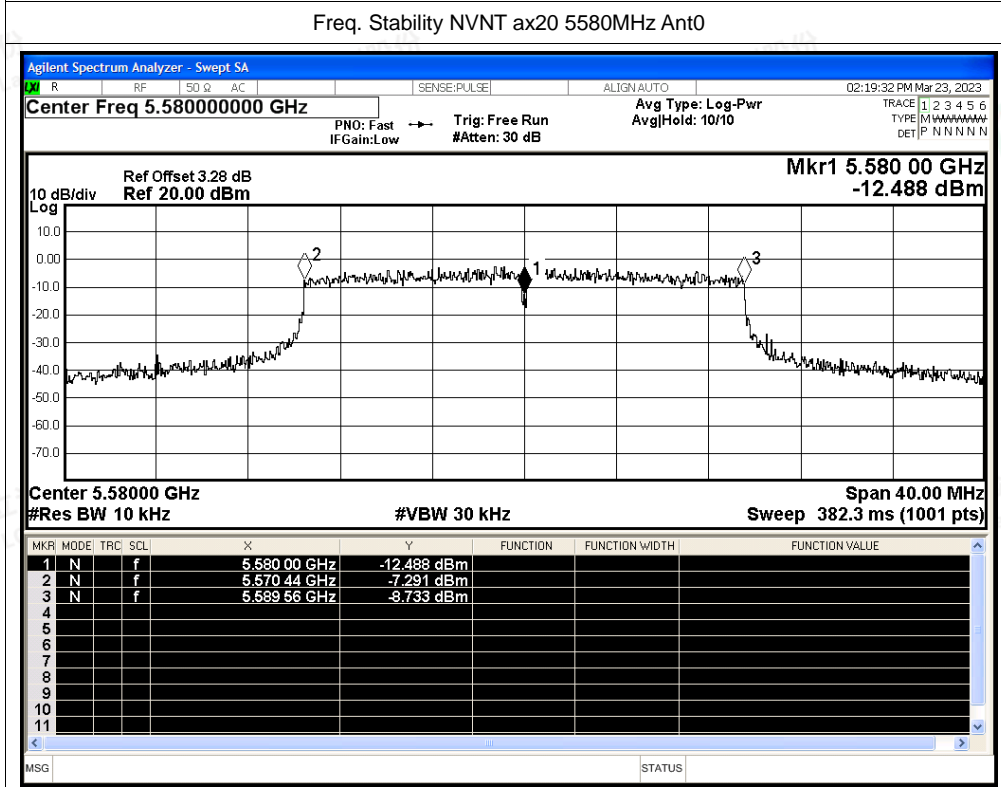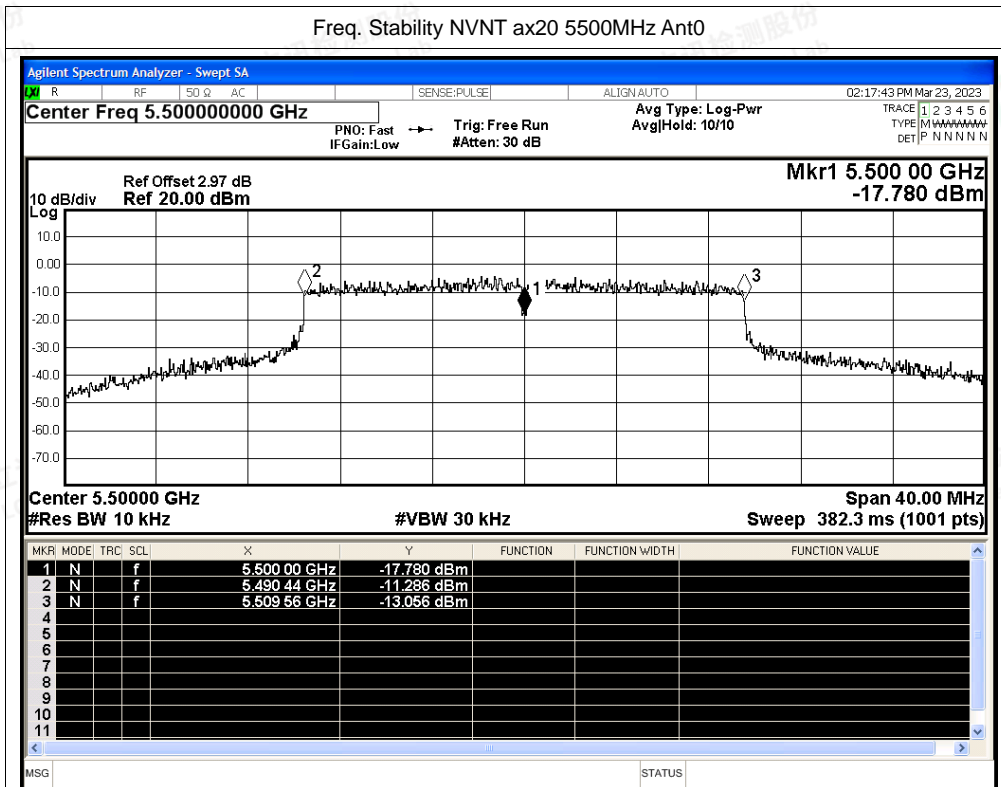


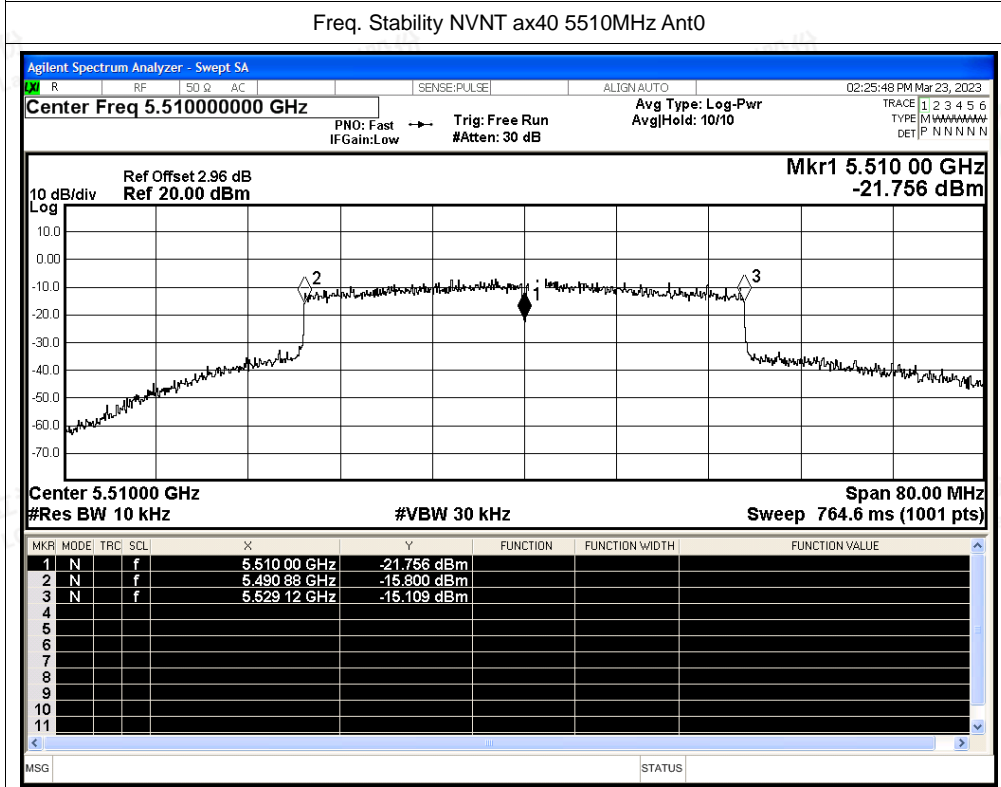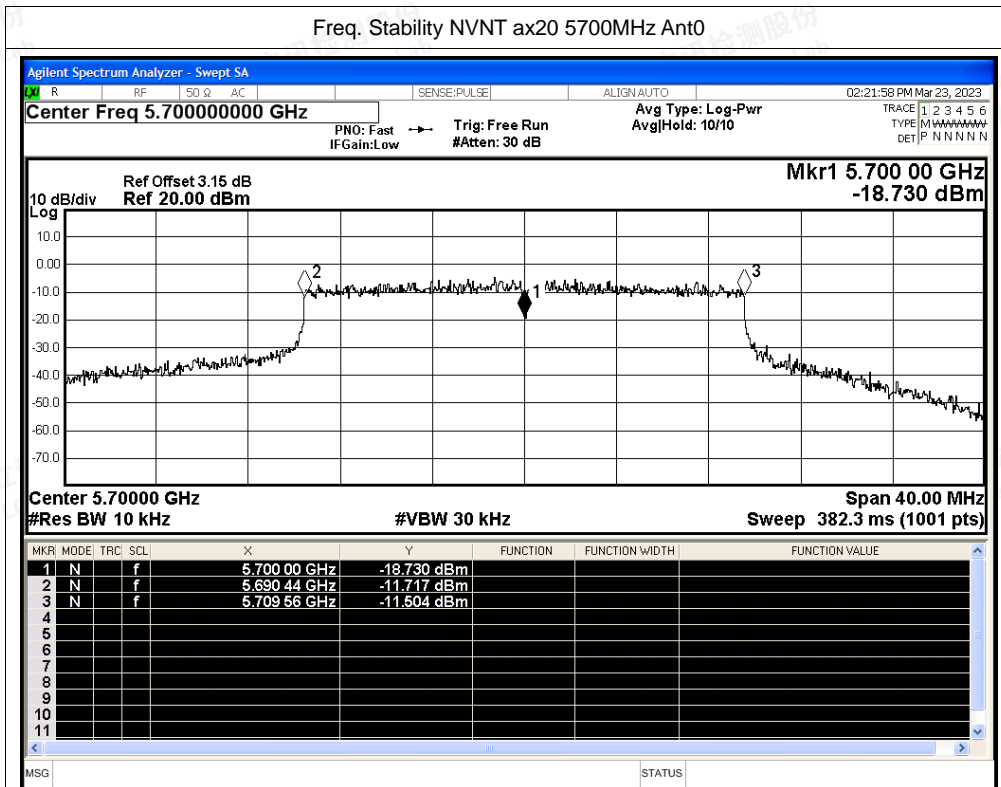

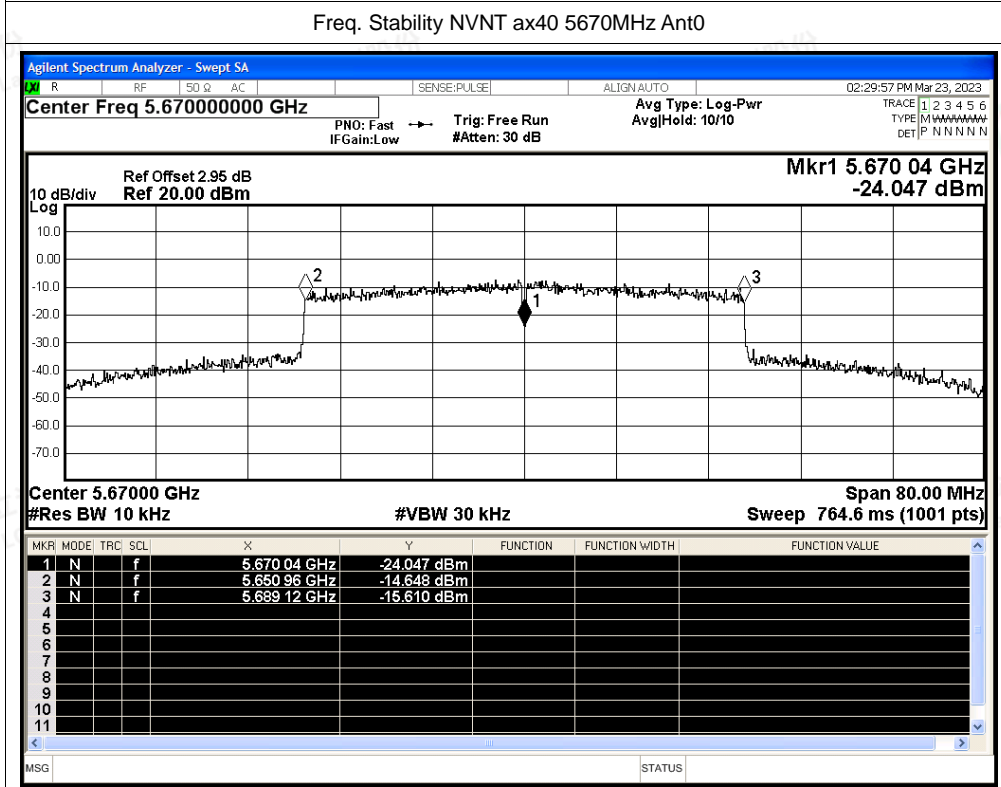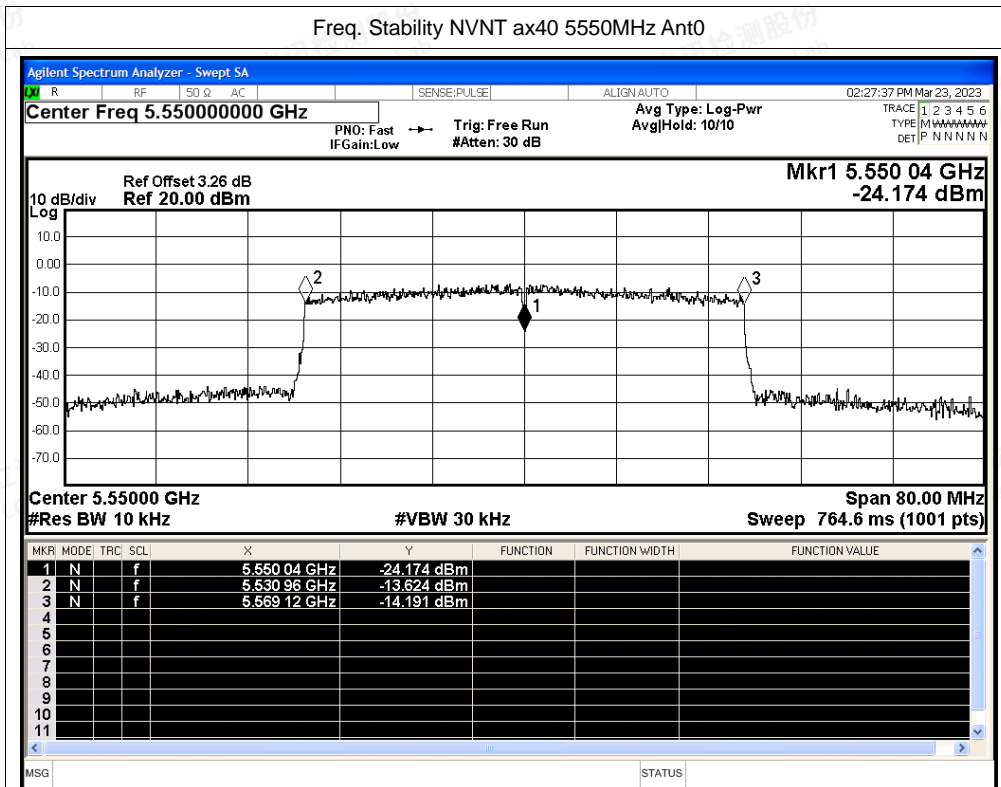




Freq. Stability NVNT ax80 5530MHz Ant0

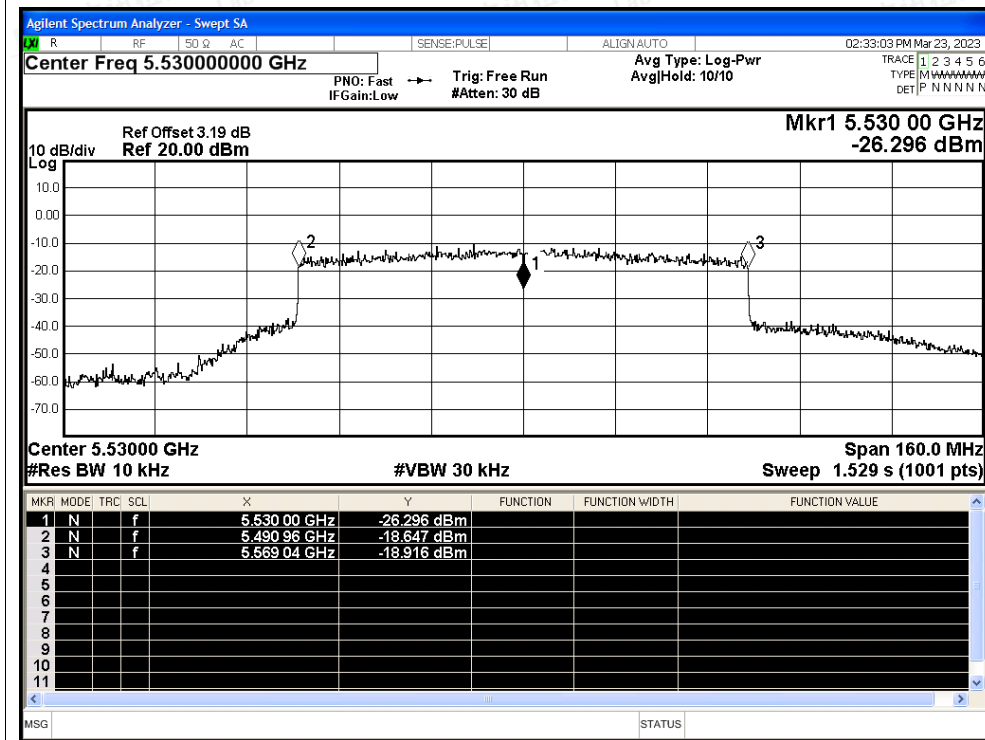


Freq. Stability NVNT ax80 5610MHz Ant0

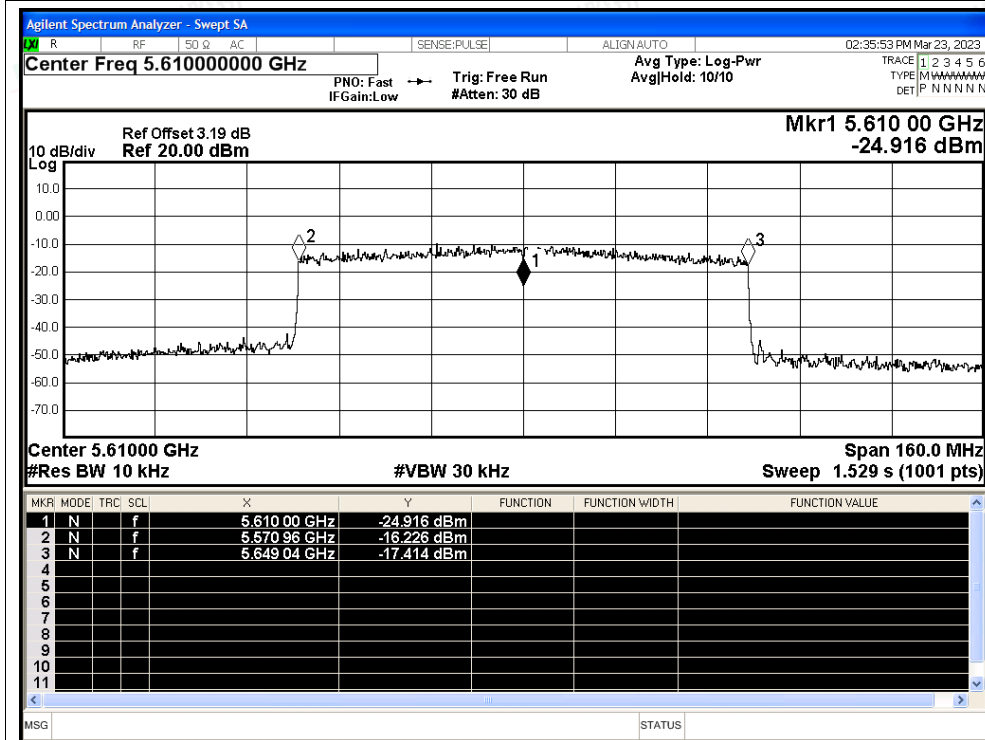

Tx. Spurious NVNT ax160 5570MHz Ant0 Emission





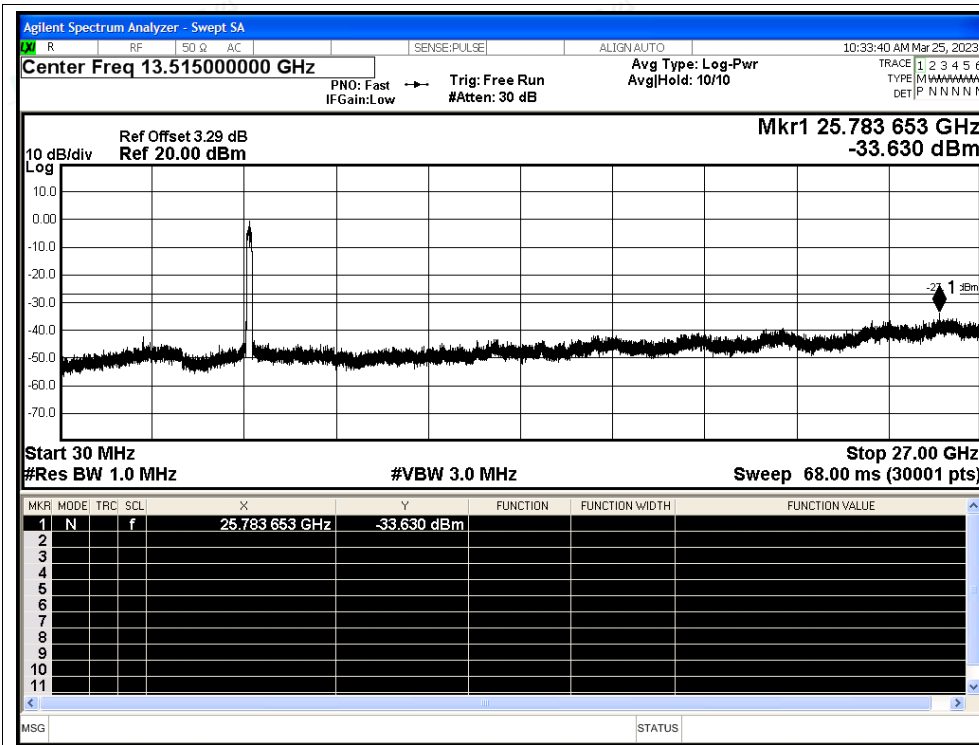


Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	ac20	5500	Ant1	5500	0	0	25	Pass
NVNT	ac20	5580	Ant1	5580	0	0	25	Pass
NVNT	ac20	5700	Ant1	5700	0	0	25	Pass
NVNT	ac40	5510	Ant1	5510	0	0	25	Pass
NVNT	ac40	5550	Ant1	5550.04	40000	7.21	25	Pass
NVNT	ac40	5670	Ant1	5670.04	40000	7.05	25	Pass
NVNT	ac80	5530	Ant1	5530	0	0	25	Pass
NVNT	ac80	5610	Ant1	5609.92	-80000	-14.26	25	Pass
NVNT	ac160	5570	Ant1	5570	0	0	25	Pass
NVNT	ax20	5500	Ant1	5500	0	0	25	Pass
NVNT	ax20	5580	Ant1	5580	0	0	25	Pass
NVNT	ax20	5700	Ant1	5700	0	0	25	Pass
NVNT	ax40	5510	Ant1	5510.04	40000	7.26	25	Pass
NVNT	ax40	5550	Ant1	5550	0	0	25	Pass
NVNT	ax40	5670	Ant1	5670.04	40000	7.05	25	Pass
NVNT	ax80	5530	Ant1	5530	0	0	25	Pass
NVNT	ax80	5610	Ant1	5610	0	0	25	Pass
NVNT	ax160	5570	Ant1	5570	0	0	25	Pass








Test Graphs

Freq. Stability NVNT ac20 5500MHz Ant1

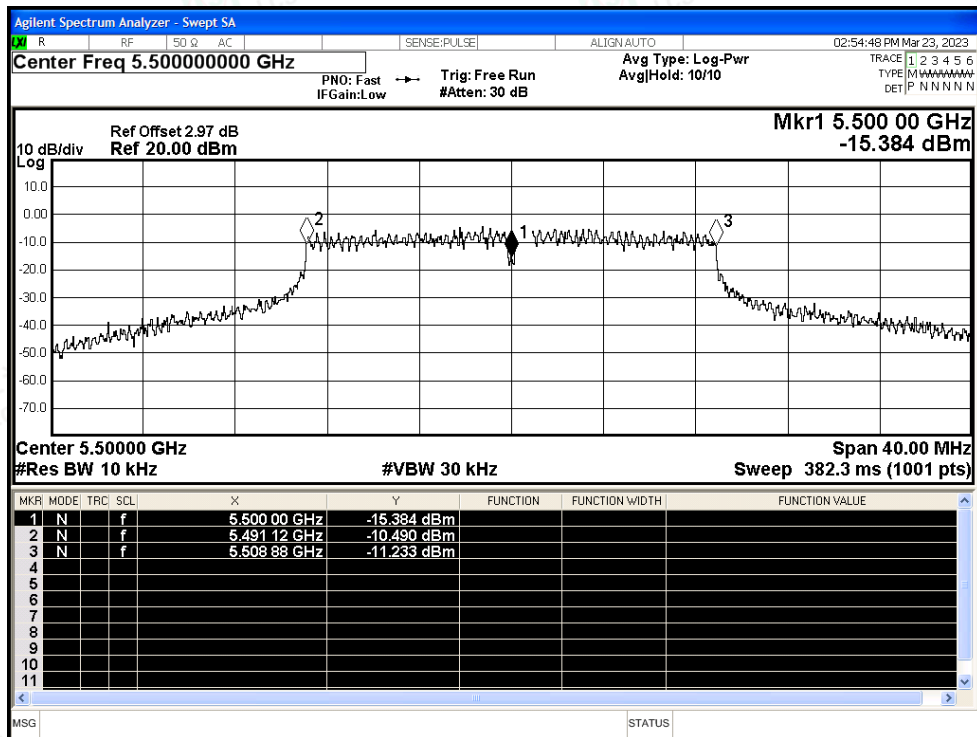


Freq. Stability NVNT ac20 5580MHz Ant1

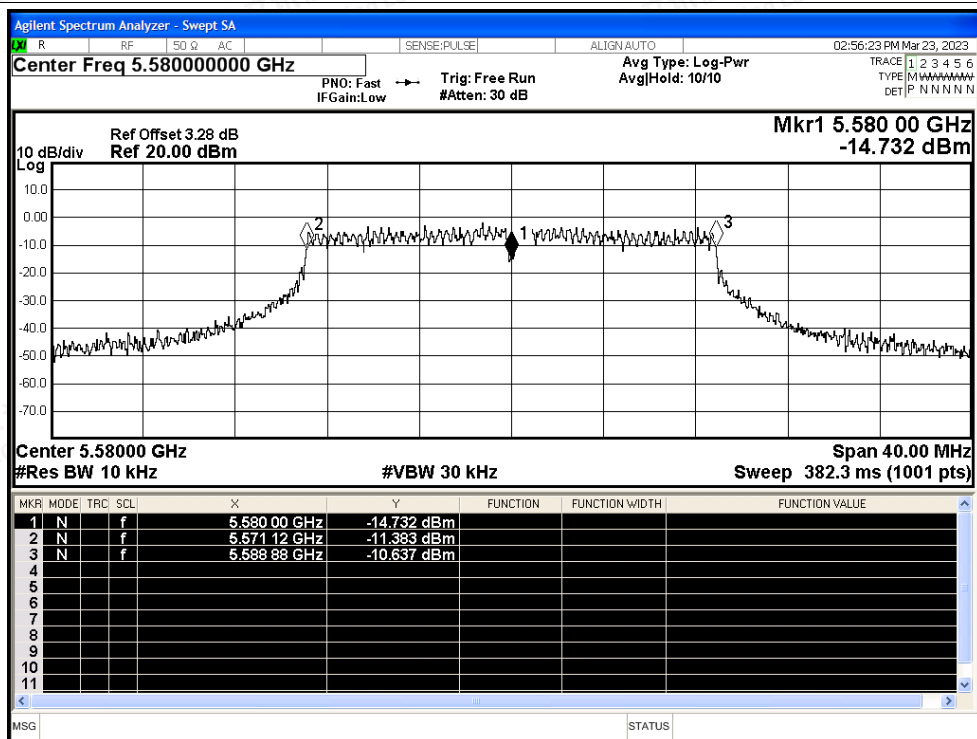

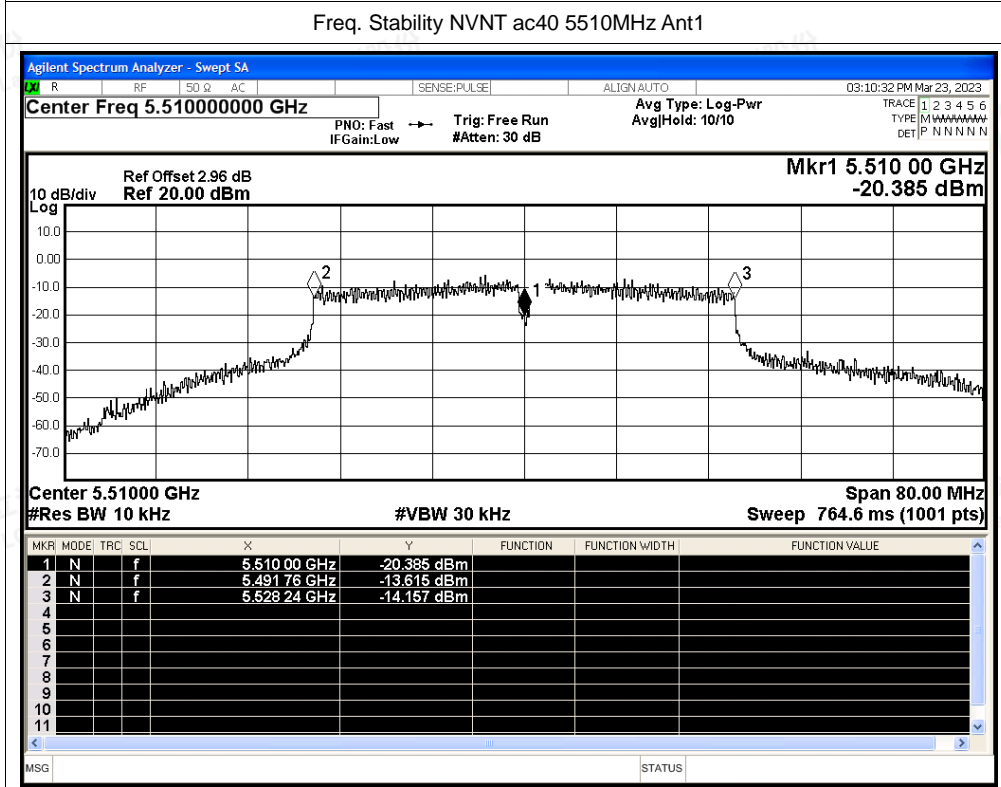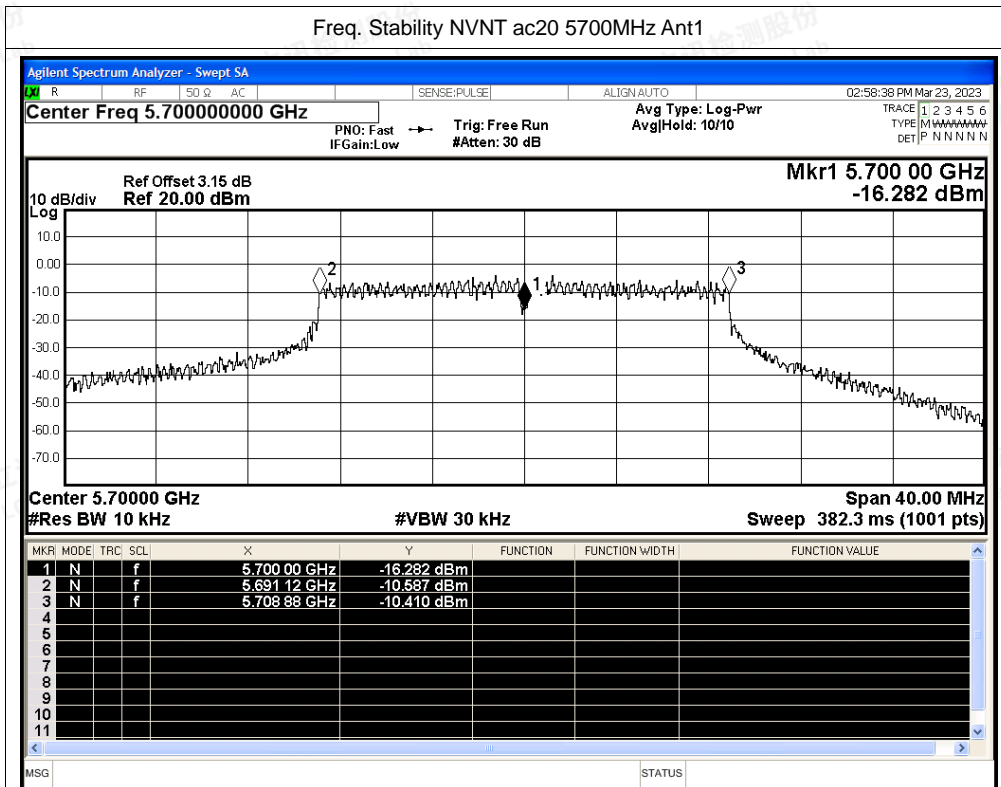




Freq. Stability NVNT ac40 5550MHz Ant1

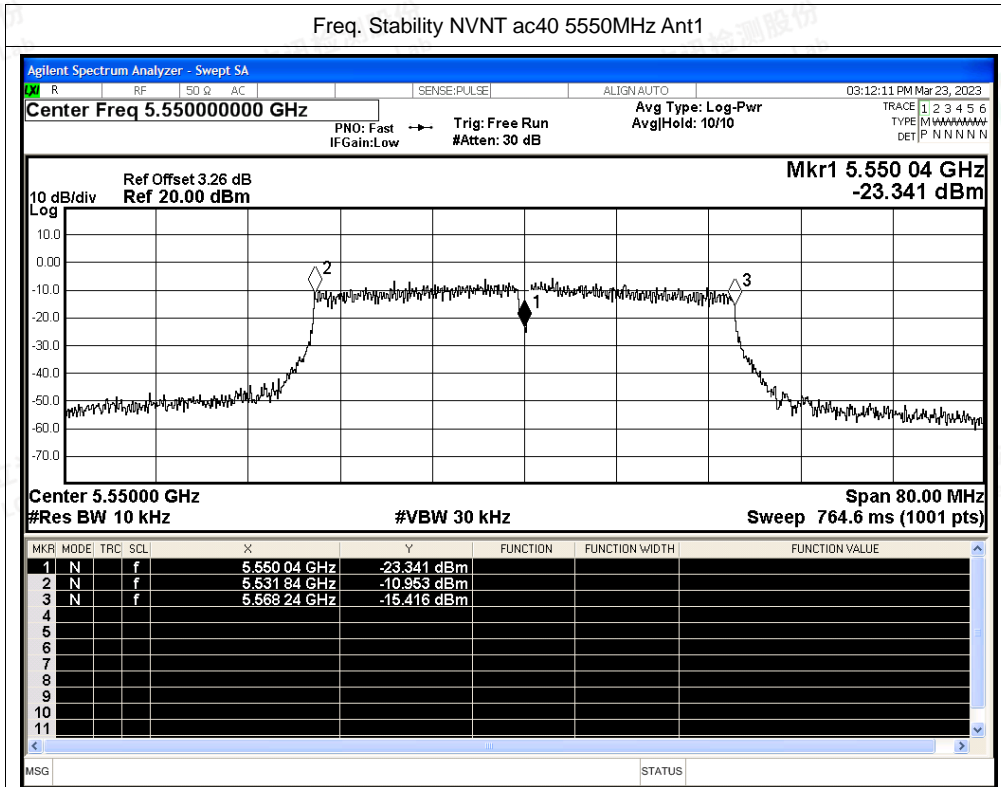


Freq. Stability NVNT ac40 5670MHz Ant1

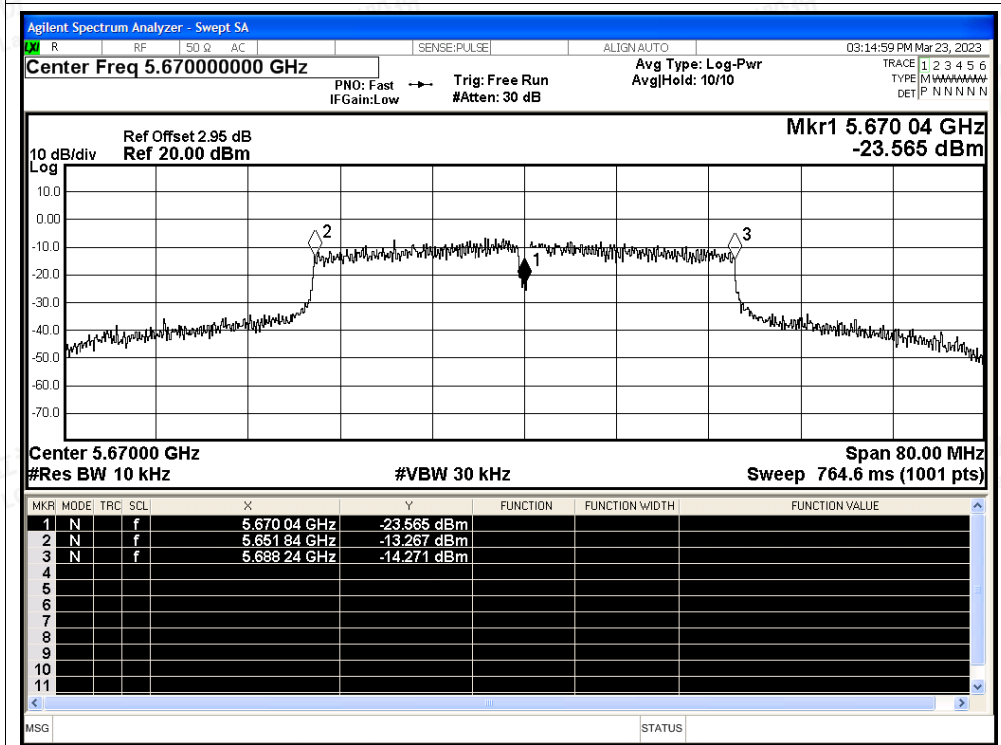




Freq. Stability NVNT ac80 5530MHz Ant1

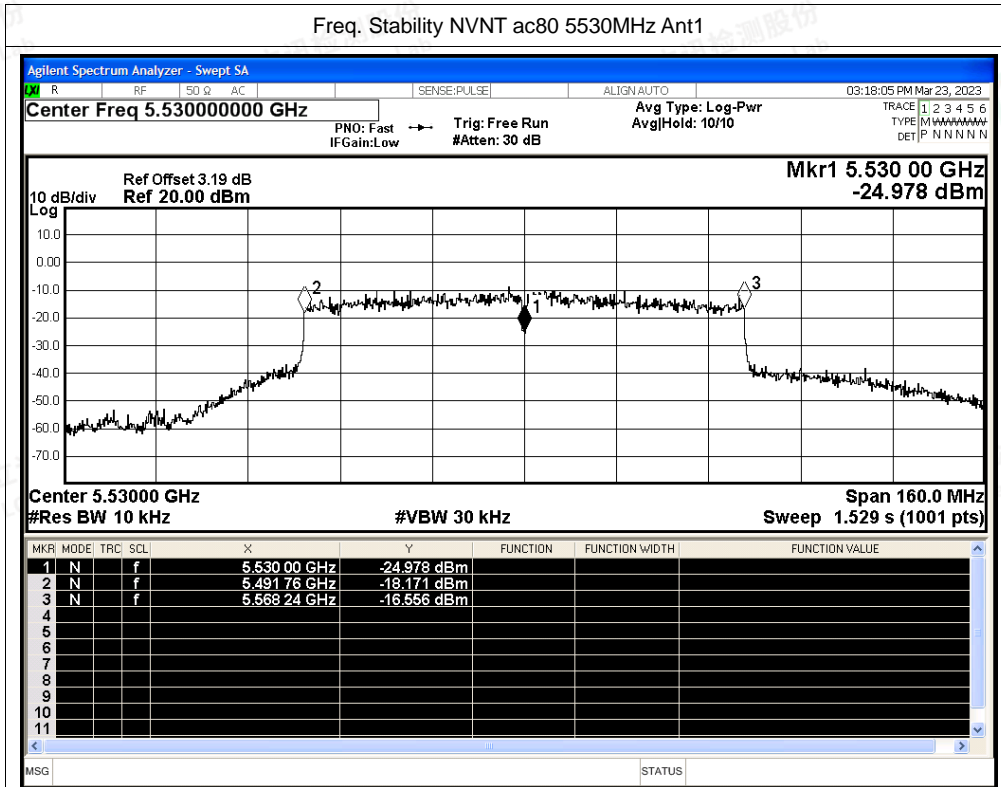




Freq. Stability NVNT ac80 5610MHz Ant1


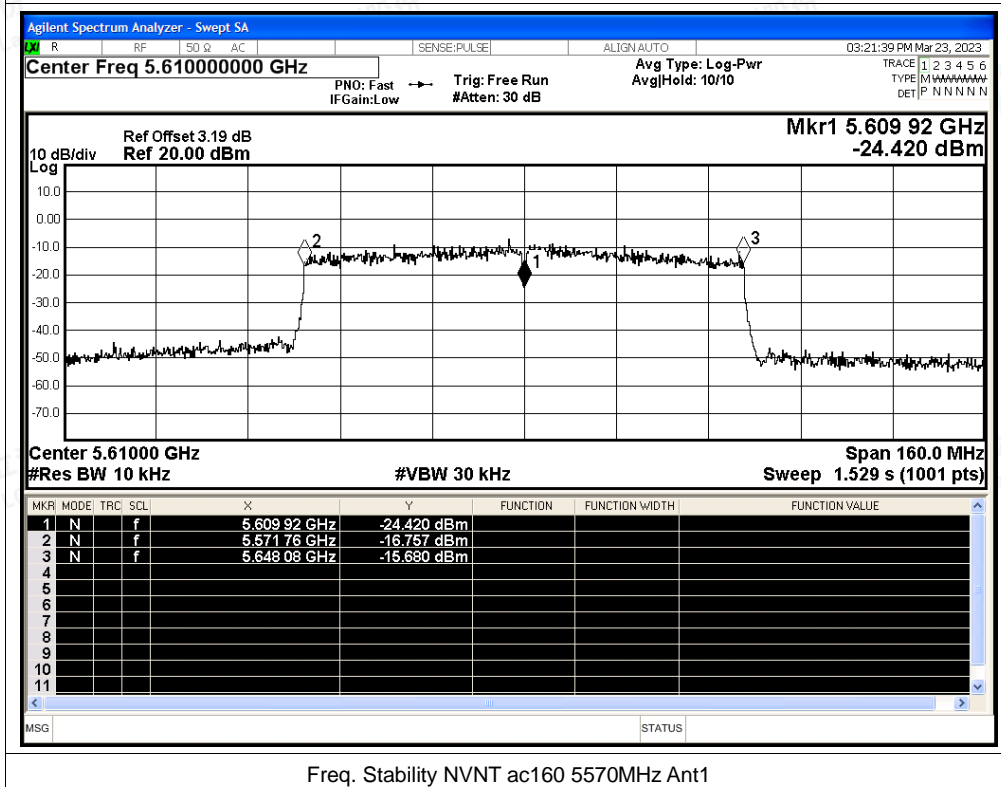


Freq. Stability NVNT ac160 5570MHz Ant1



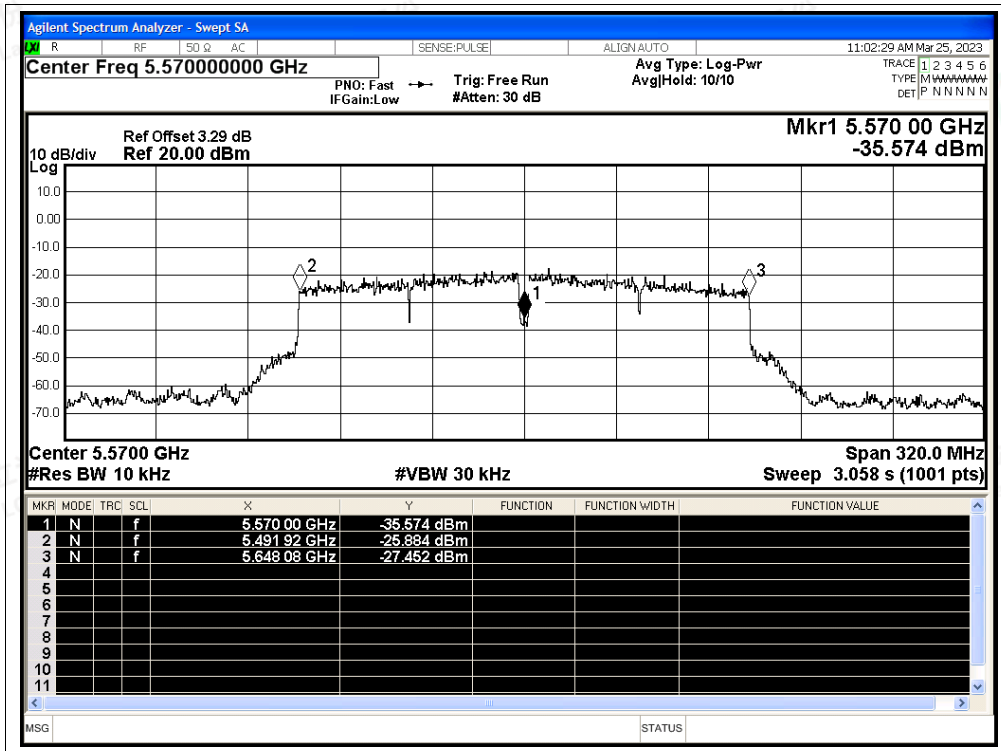

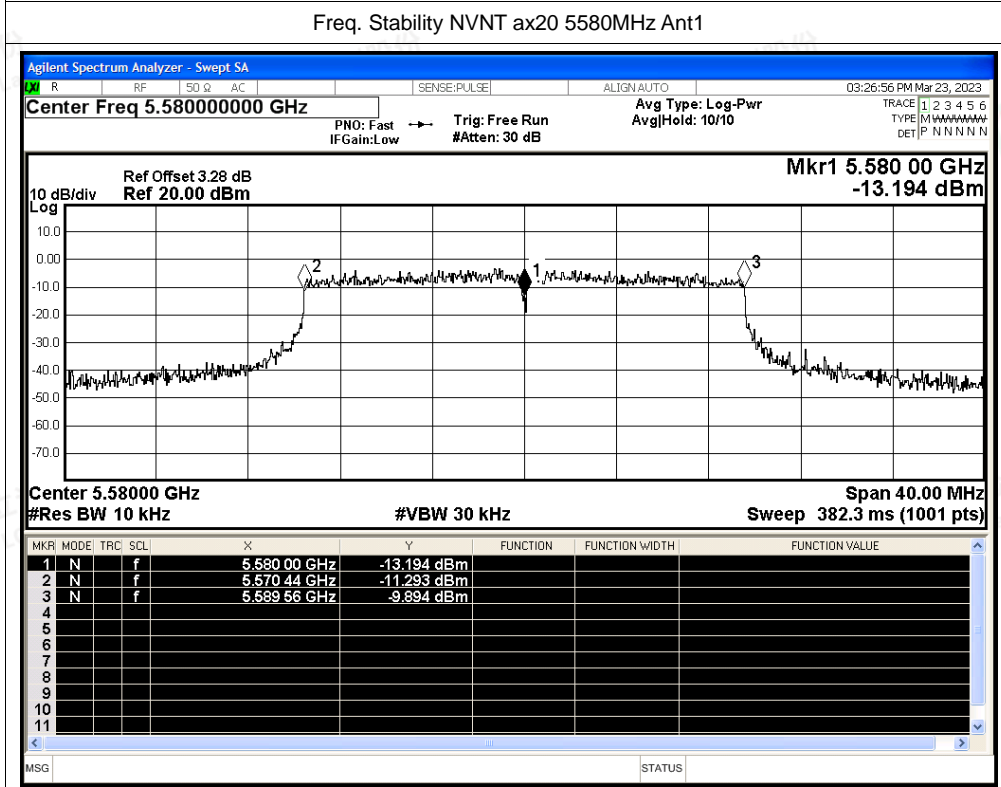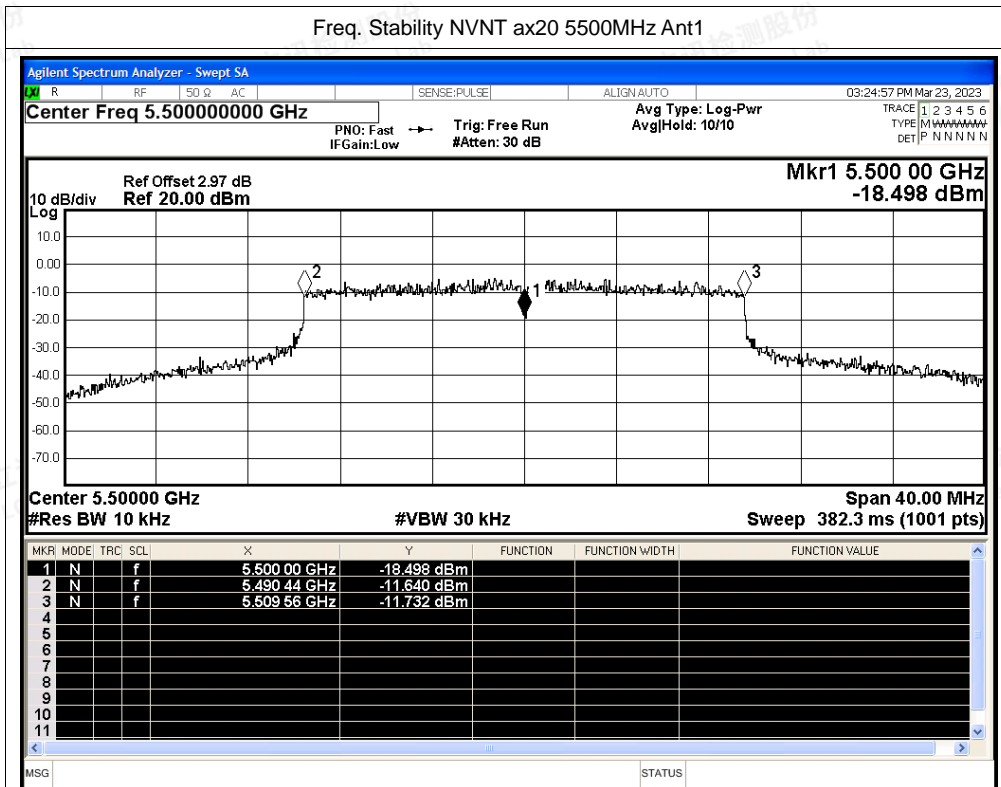


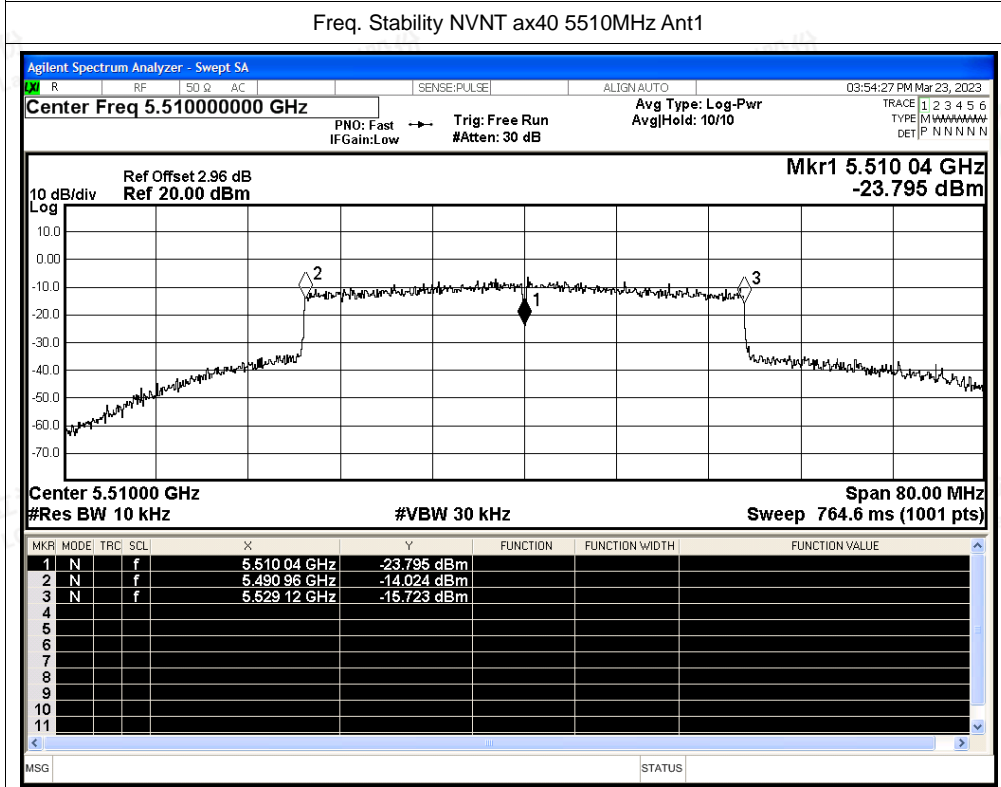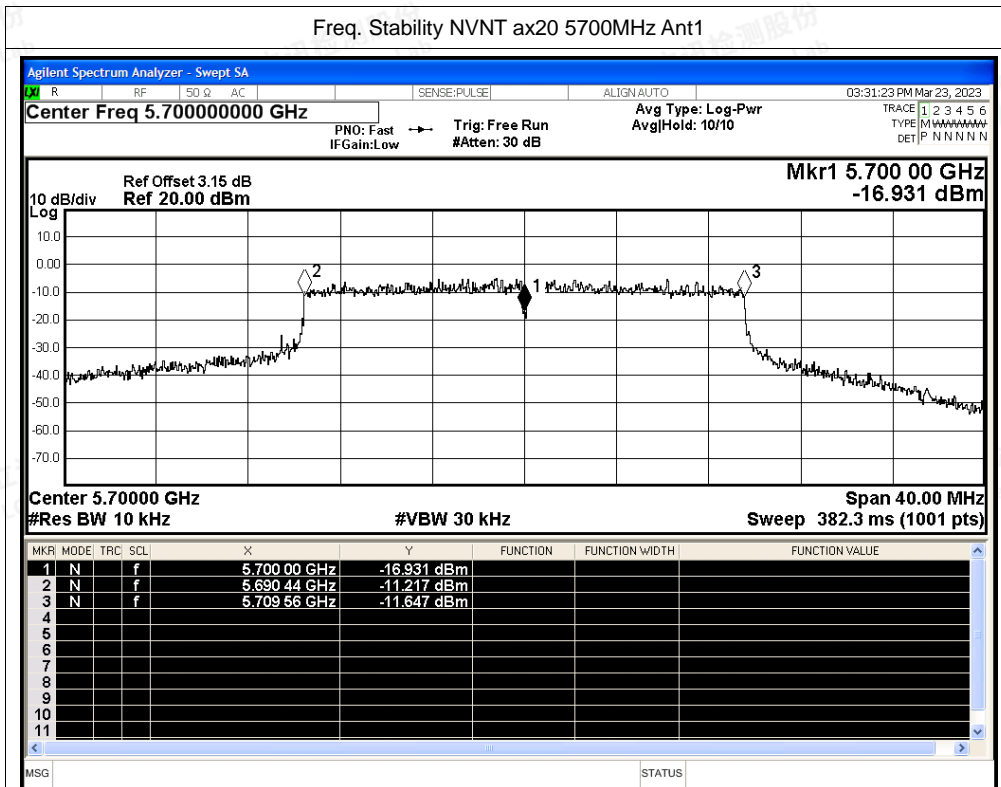






Freq. Stability NVNT ax40 5550MHz Ant1

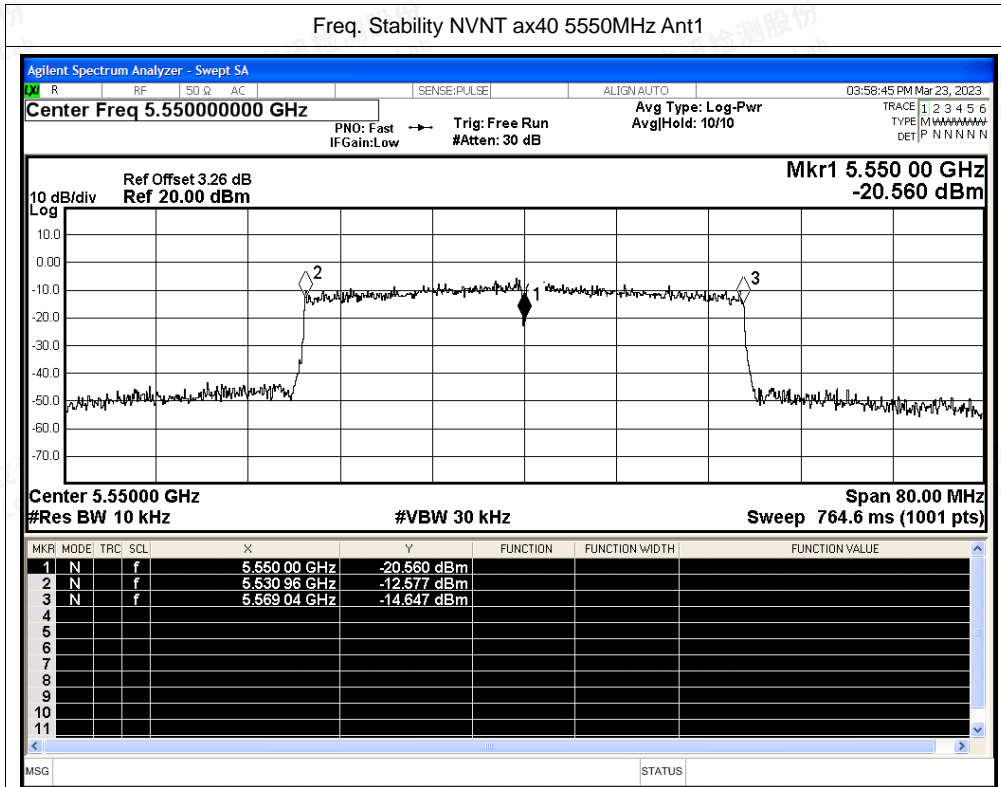


Freq. Stability NVNT ax40 5670MHz Ant1

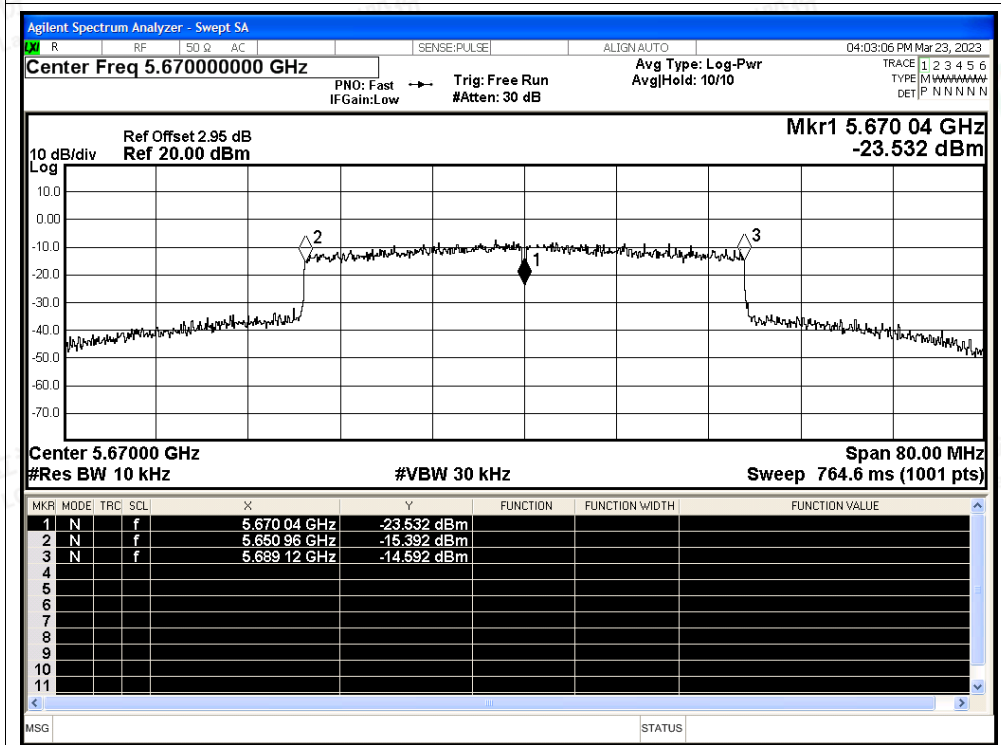




Freq. Stability NVNT ax80 5530MHz Ant1

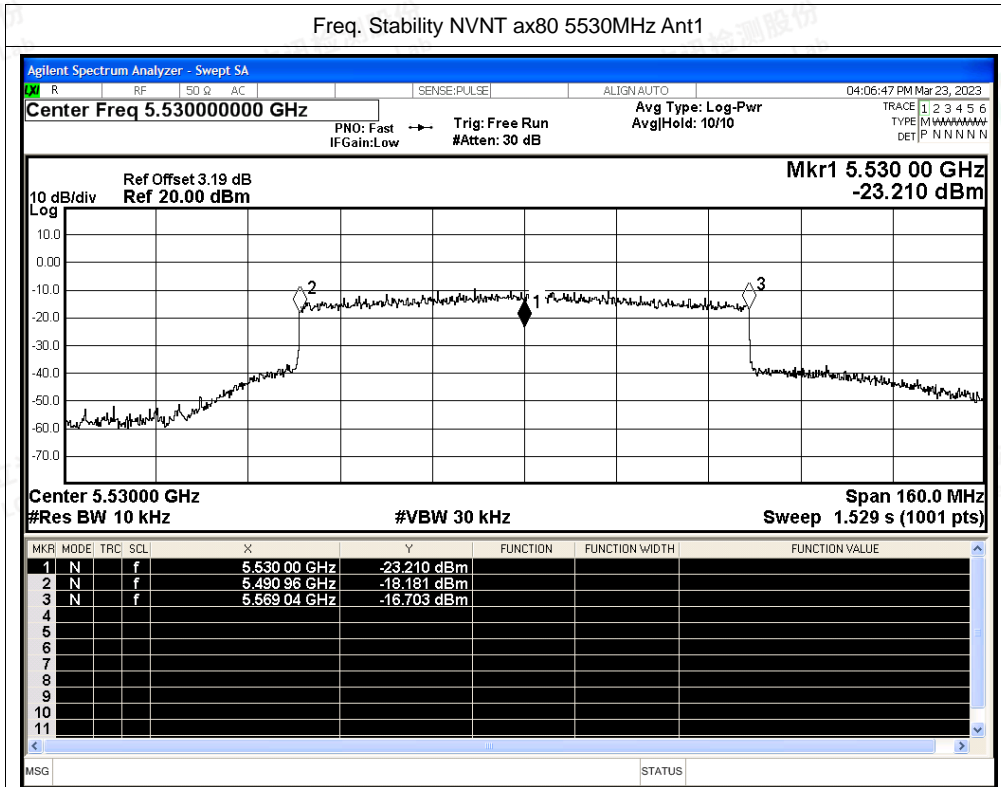


Freq. Stability NVNT ax80 5610MHz Ant1

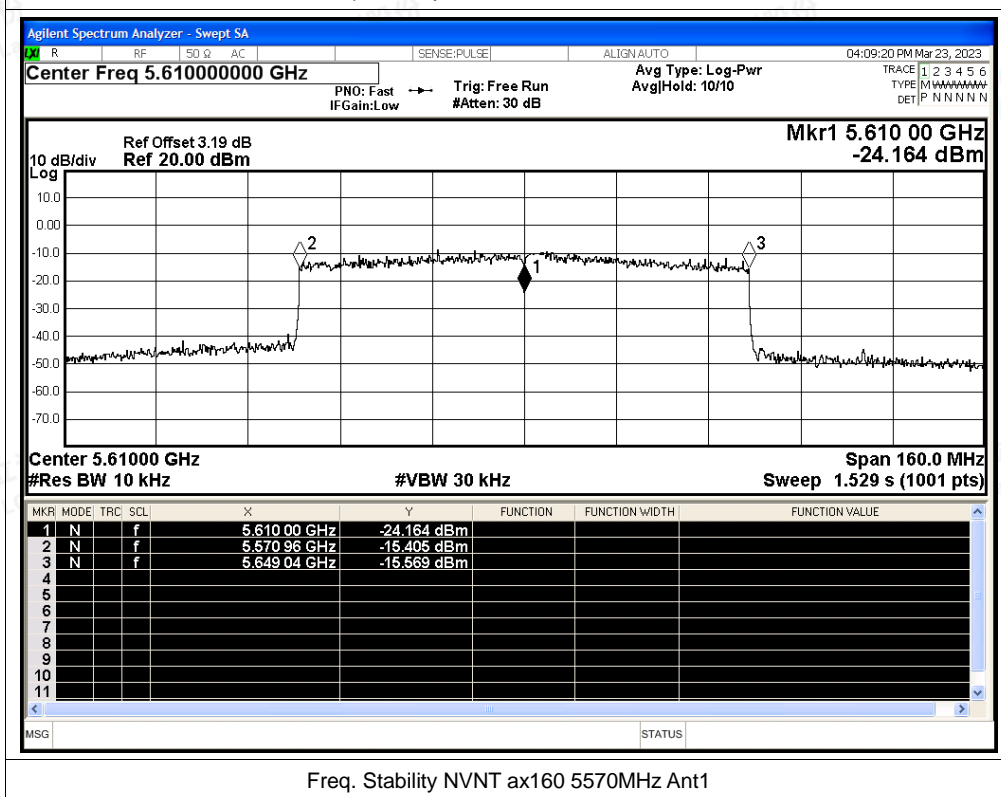

Freq. Stability NVNT ax160 5570MHz Ant1



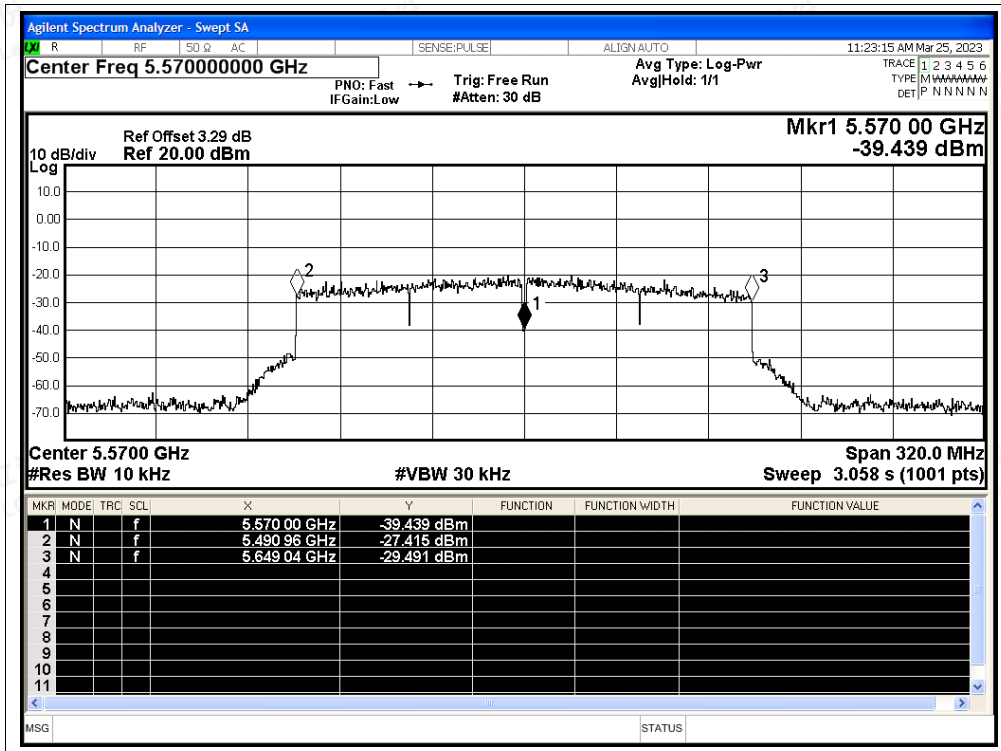

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	ac20	5500	Ant2	5500	0	0	25	Pass
NVNT	ac20	5580	Ant2	5580	0	0	25	Pass
NVNT	ac20	5700	Ant2	5700	0	0	25	Pass
NVNT	ac40	5510	Ant2	5510	0	0	25	Pass
NVNT	ac40	5550	Ant2	5550	0	0	25	Pass
NVNT	ac40	5670	Ant2	5670	0	0	25	Pass
NVNT	ac80	5530	Ant2	5530	0	0	25	Pass
NVNT	ac80	5610	Ant2	5610	0	0	25	Pass
NVNT	ac160	5570	Ant2	5570	0	0	25	Pass
NVNT	ax20	5500	Ant2	5500.02	20000	3.64	25	Pass
NVNT	ax20	5580	Ant2	5580.02	20000	3.58	25	Pass
NVNT	ax20	5700	Ant2	5700	0	0	25	Pass
NVNT	ax40	5510	Ant2	5510	0	0	25	Pass
NVNT	ax40	5550	Ant2	5550	0	0	25	Pass
NVNT	ax40	5670	Ant2	5669.96	-40000	-7.05	25	Pass
NVNT	ax80	5530	Ant2	5530	0	0	25	Pass
NVNT	ax80	5610	Ant2	5610	0	0	25	Pass
NVNT	ax160	5570	Ant2	5570	0	0	25	Pass




Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity






Test Graphs



Freq. Stability NVNT ac20 5500MHz Ant2


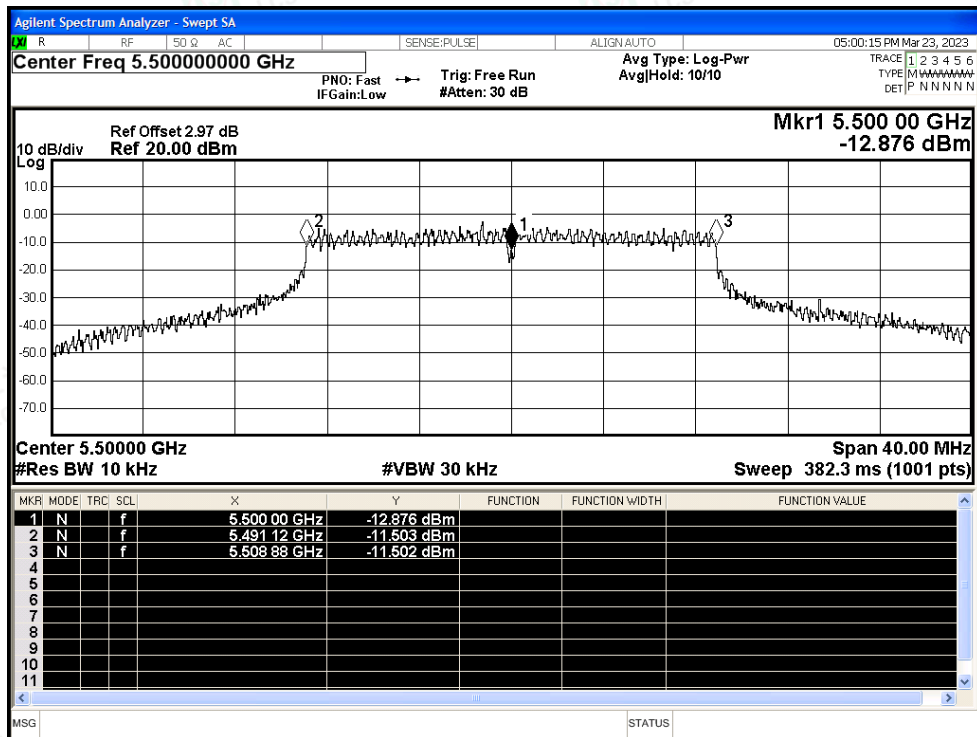


Freq. Stability NVNT ac20 5580MHz Ant2

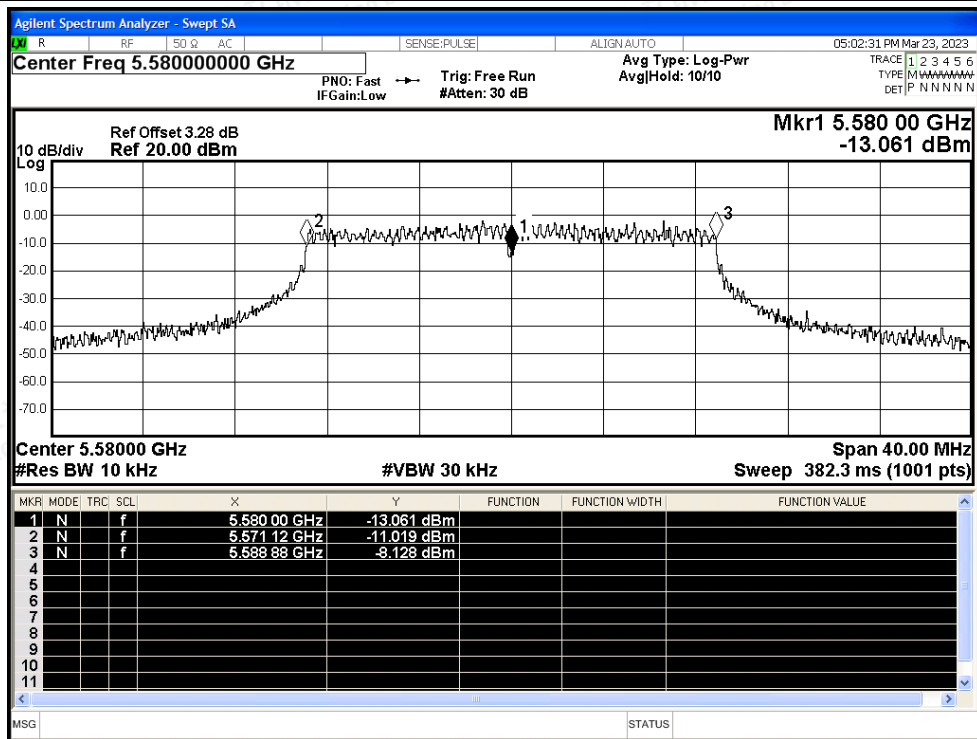

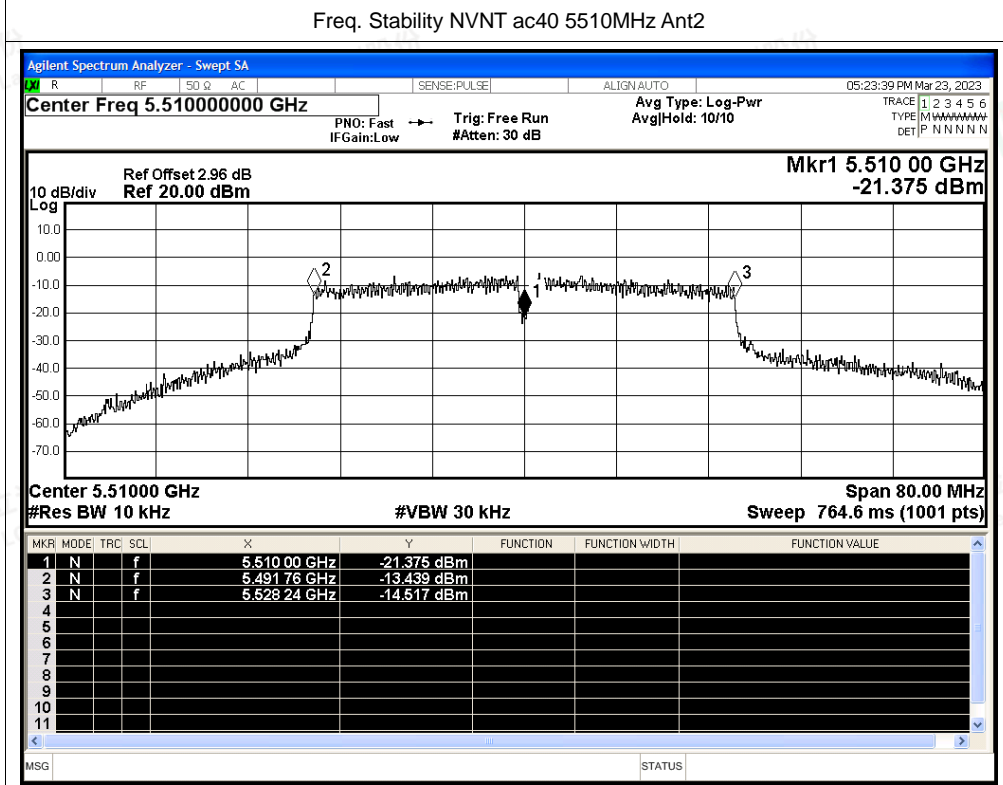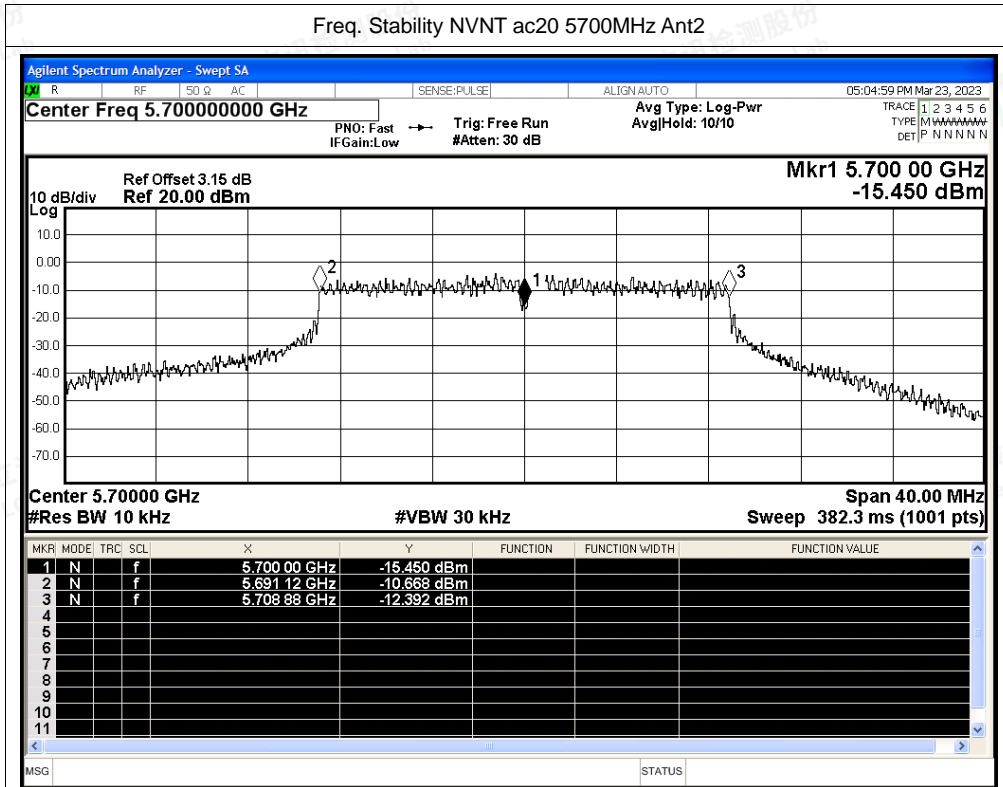


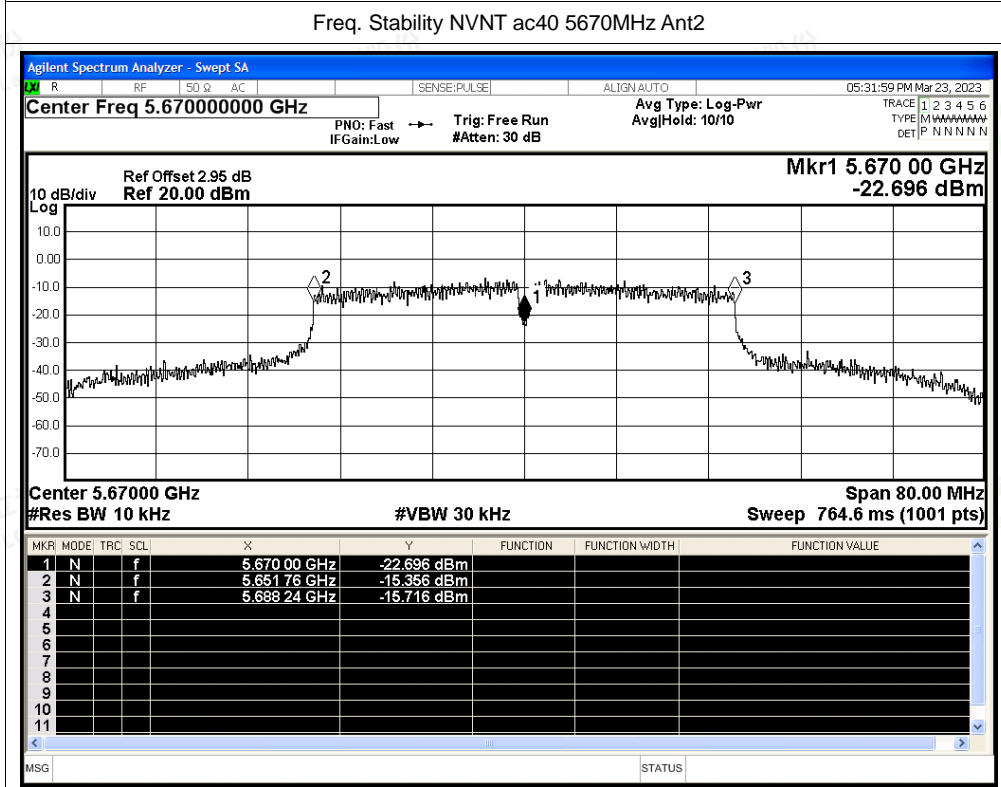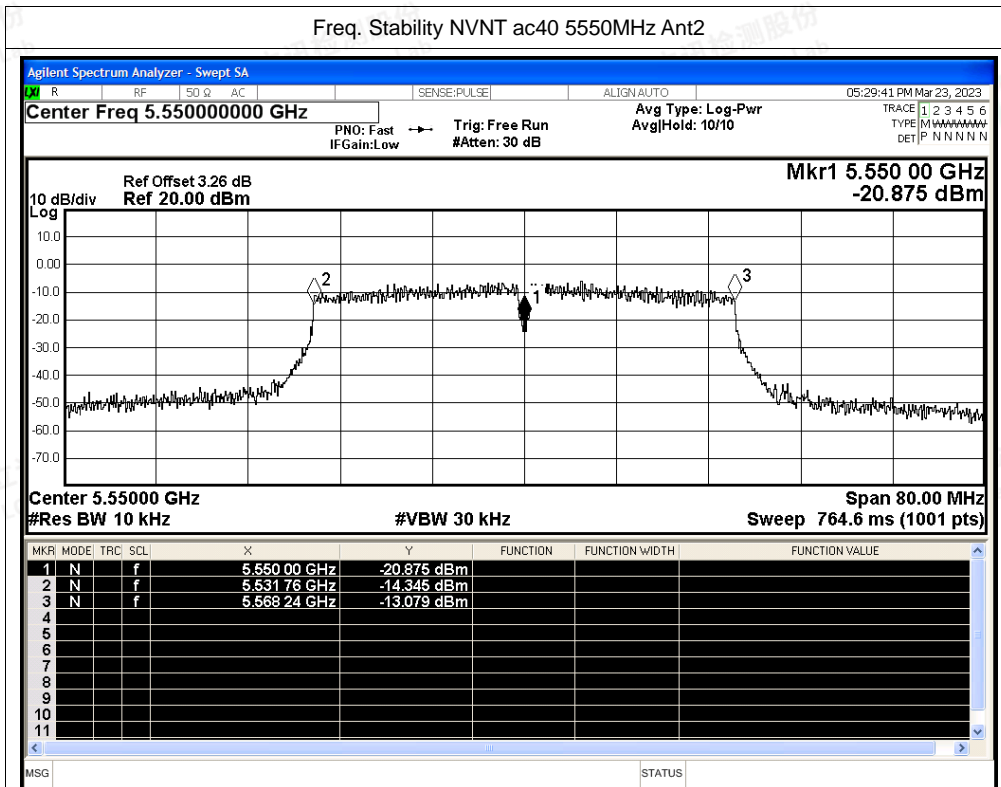

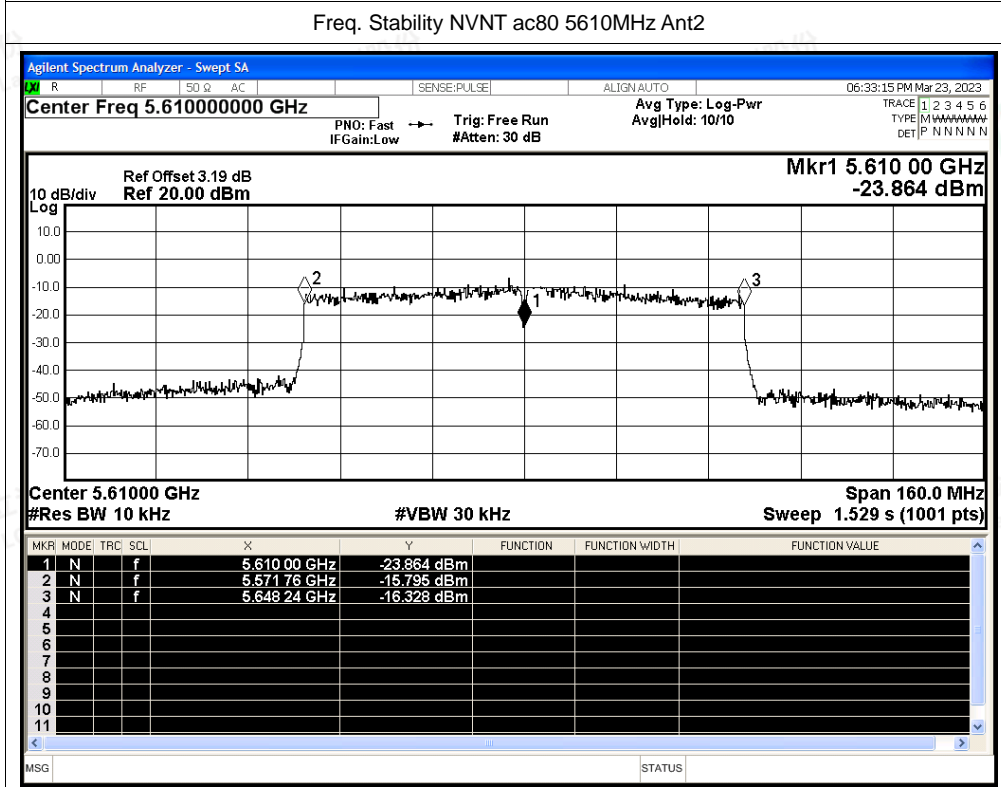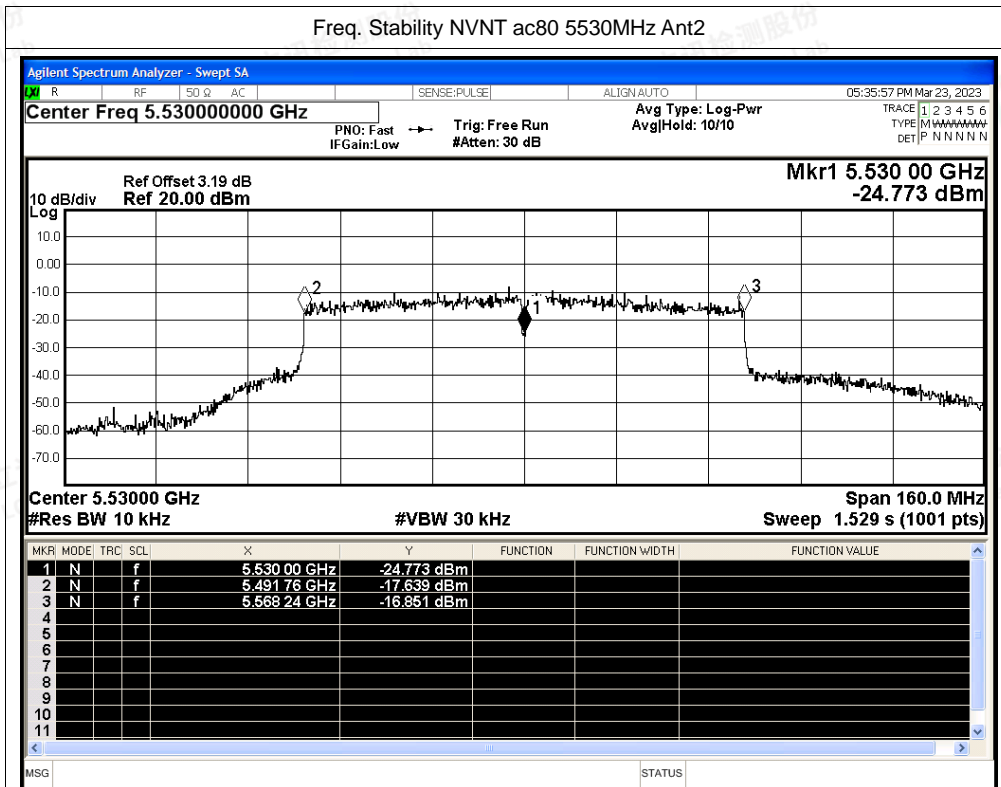




Freq. Stability NVNT ac160 5570MHz Ant2

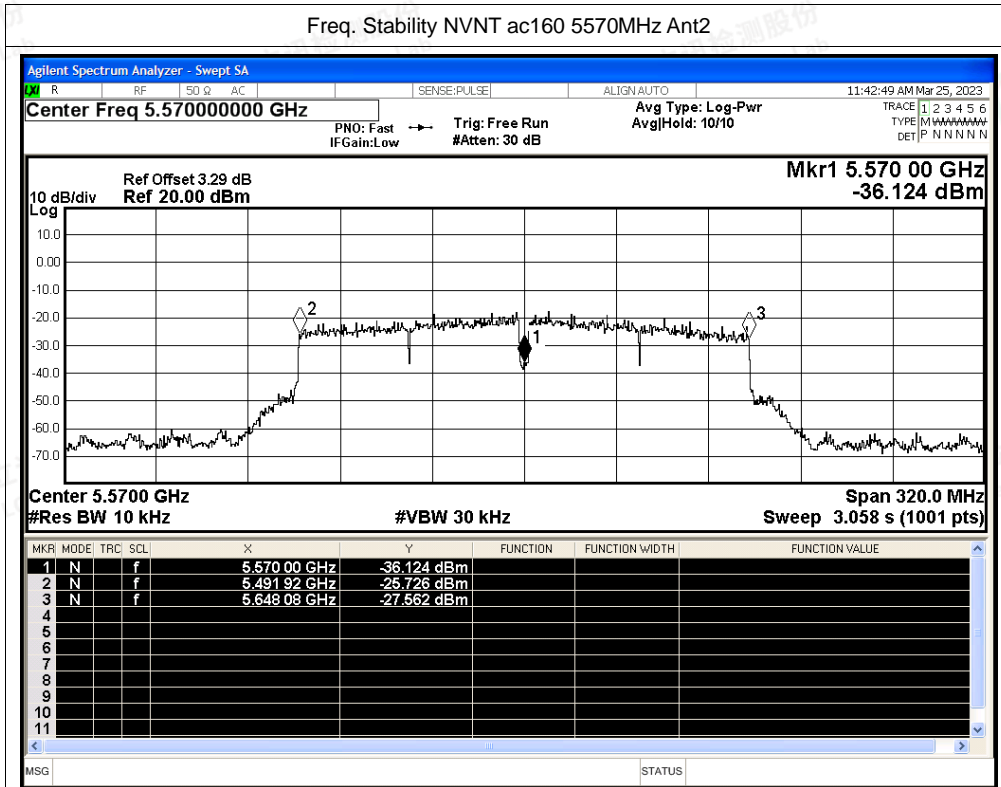


Freq. Stability NVNT ax20 5500MHz Ant2


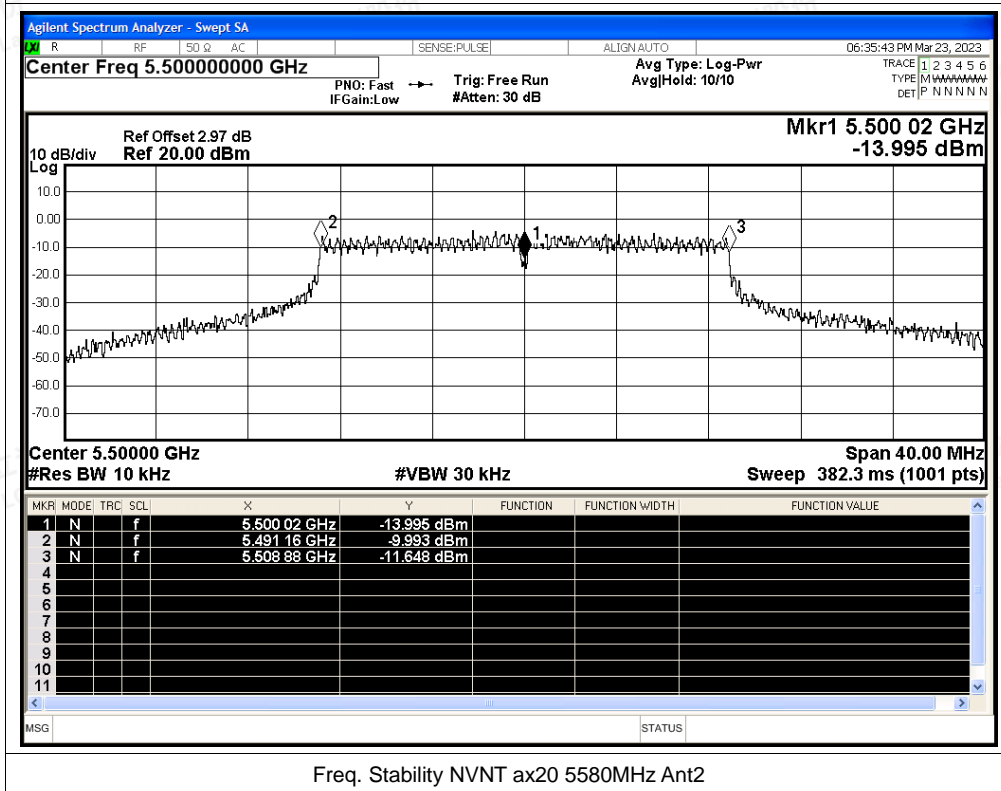




Freq. Stability NVNT ax20 5580MHz Ant2







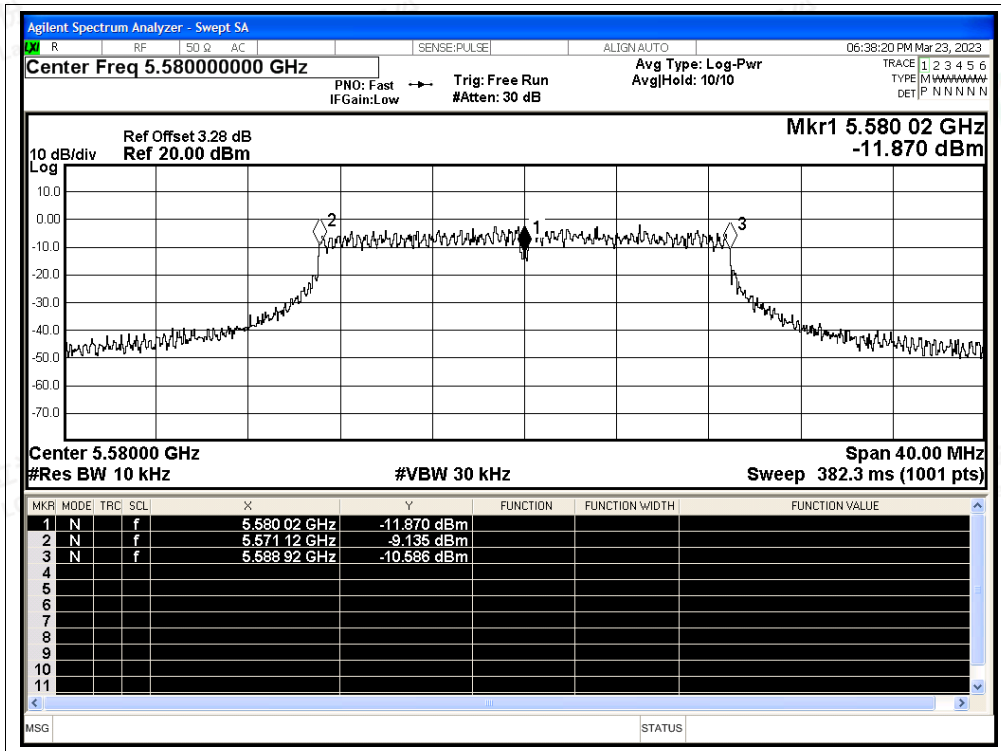

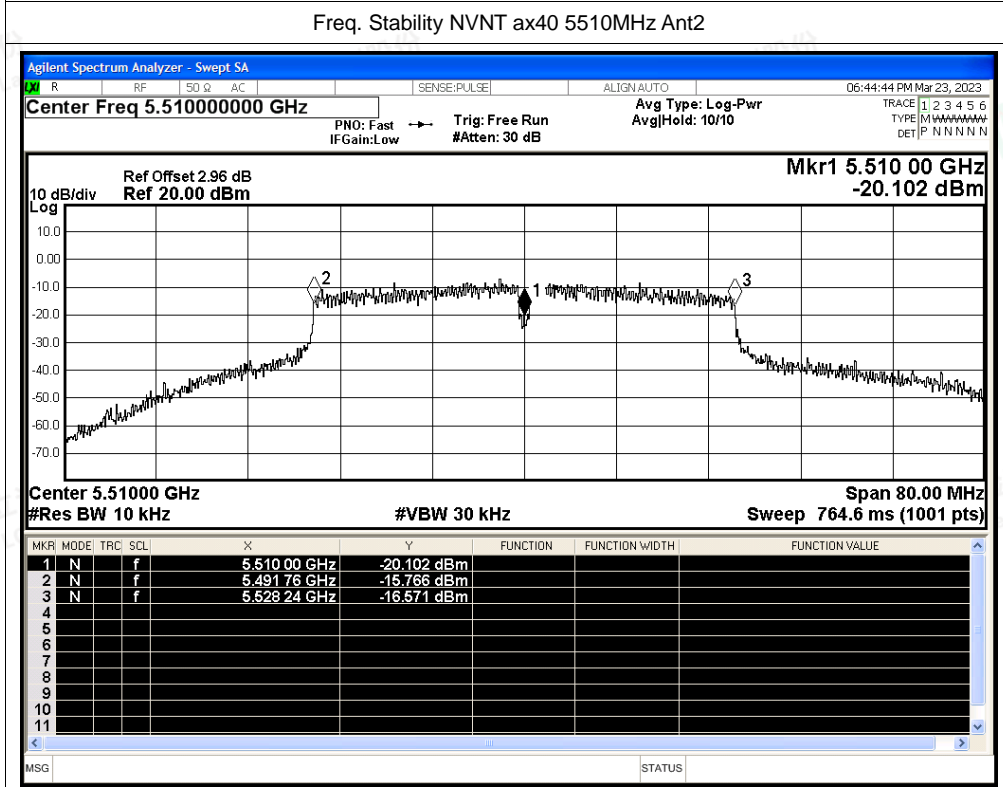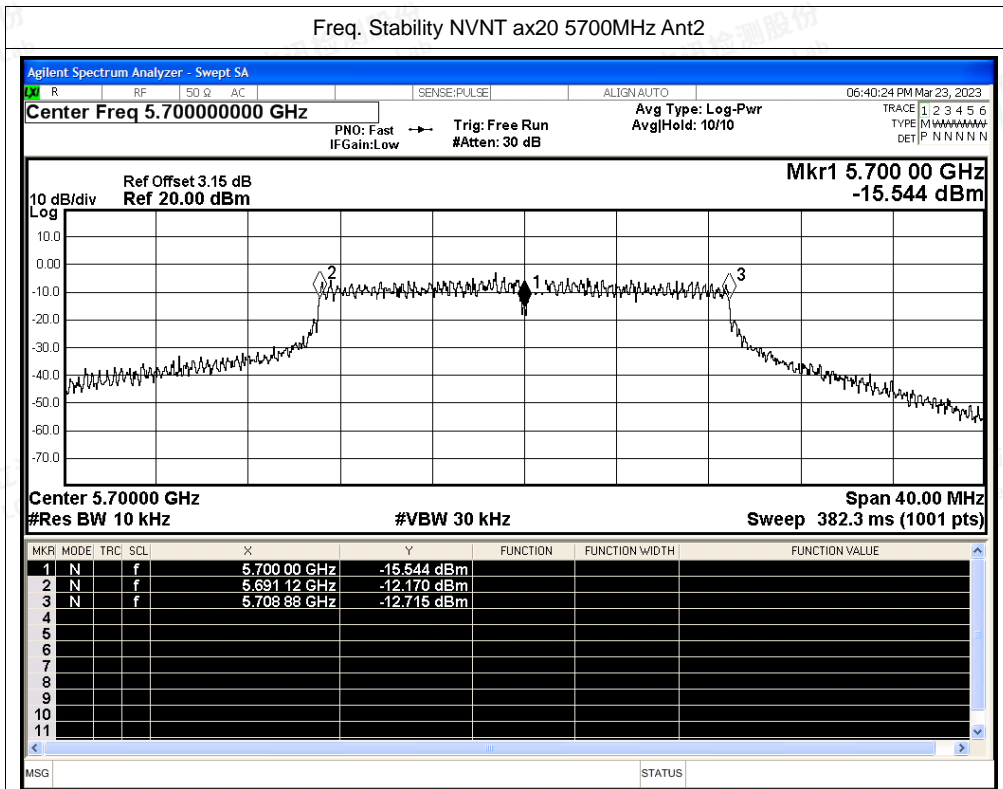


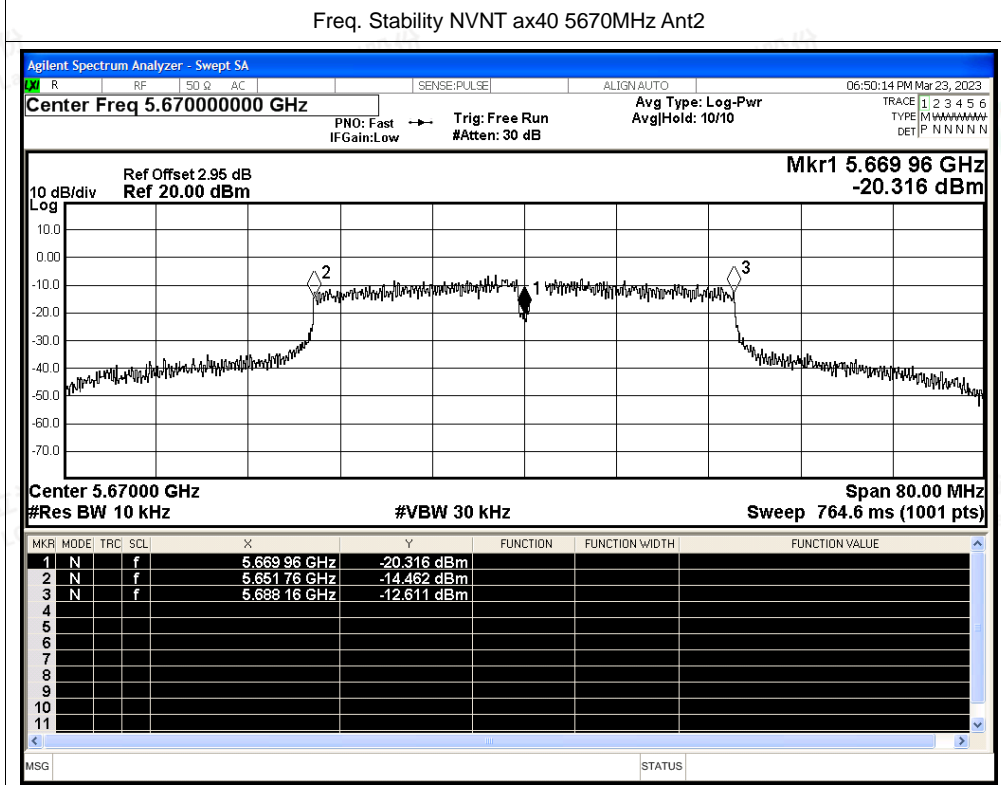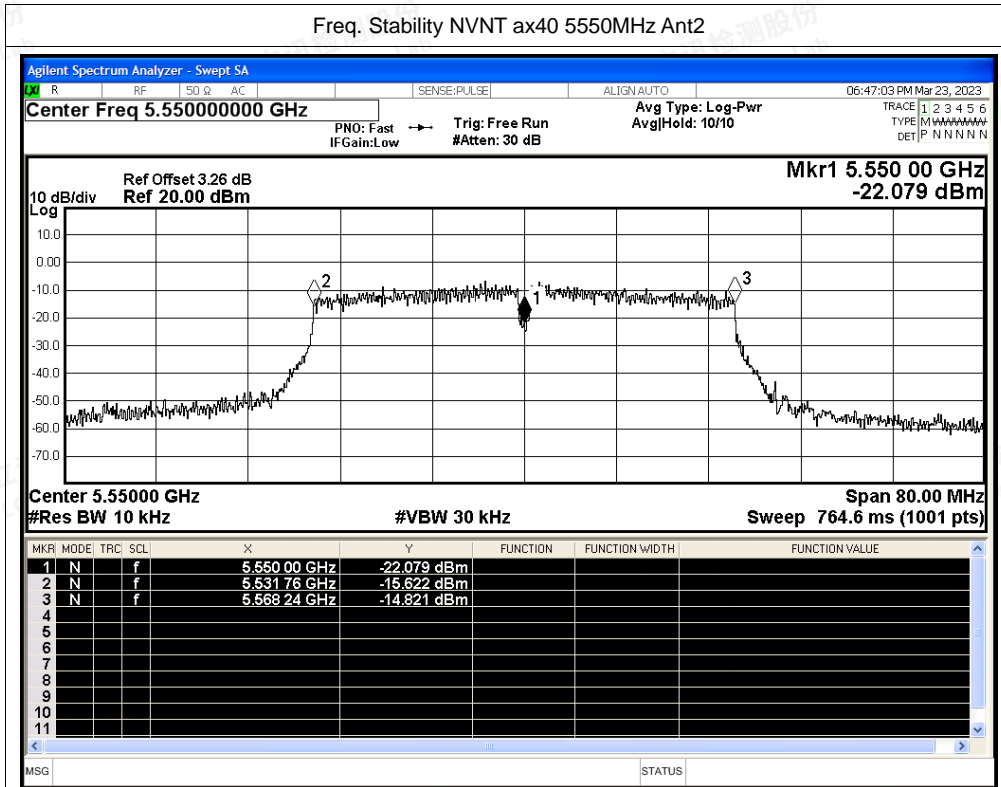

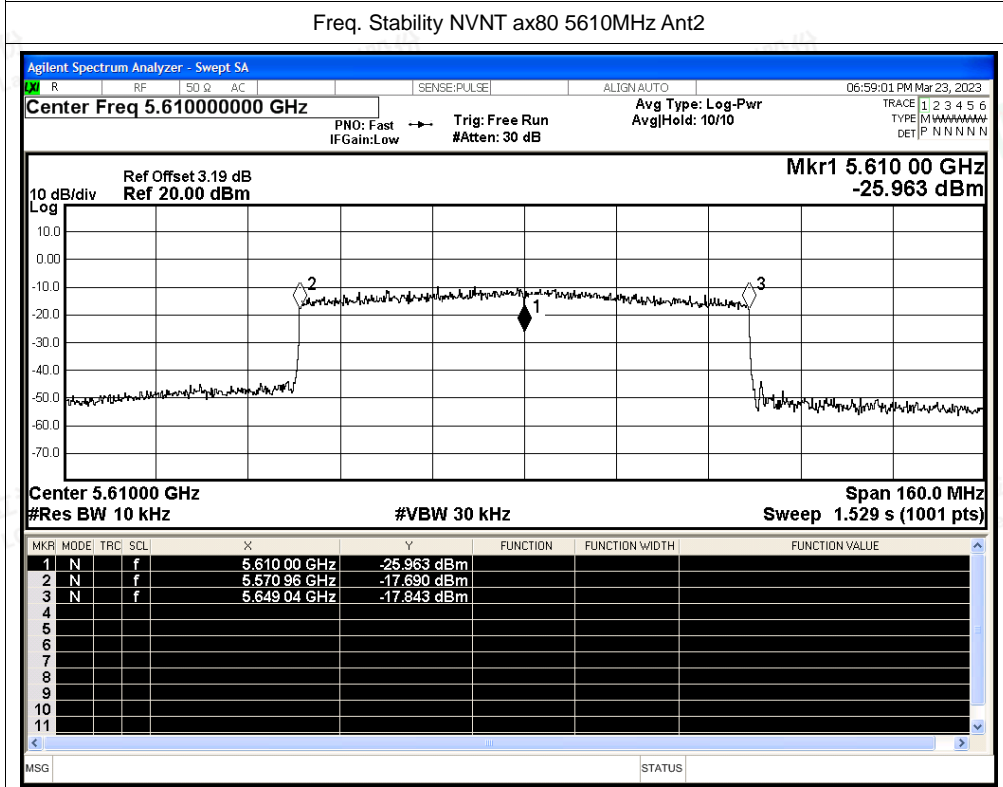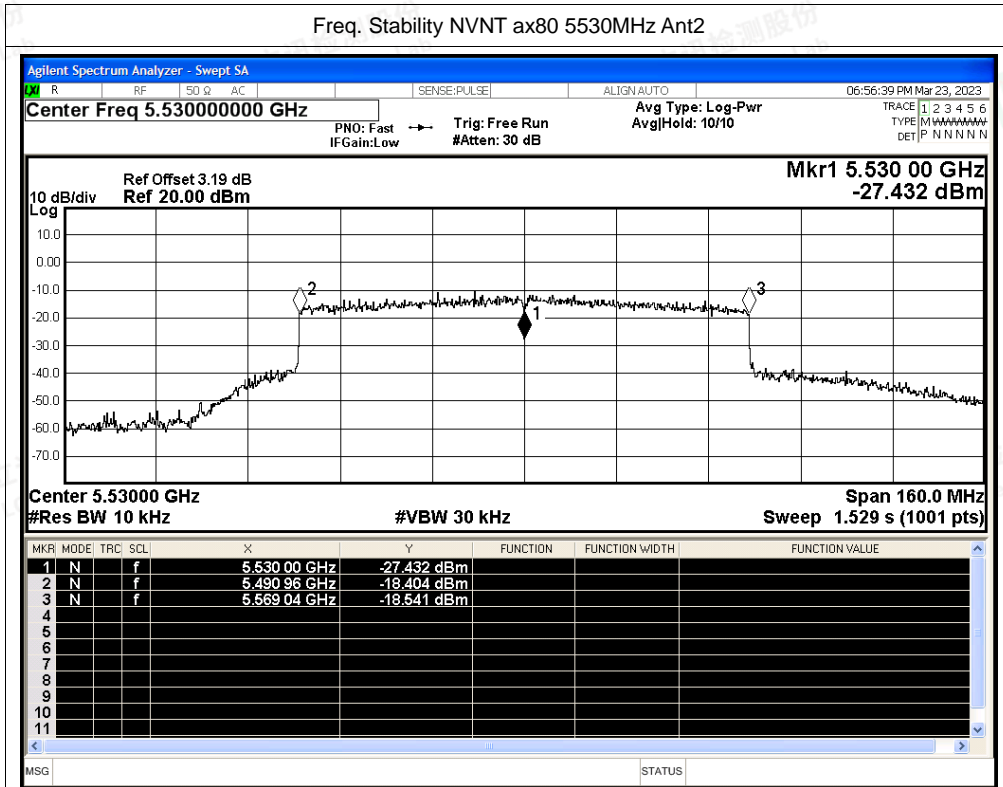

Freq. Stability NVNT ax160 5570MHz Ant2



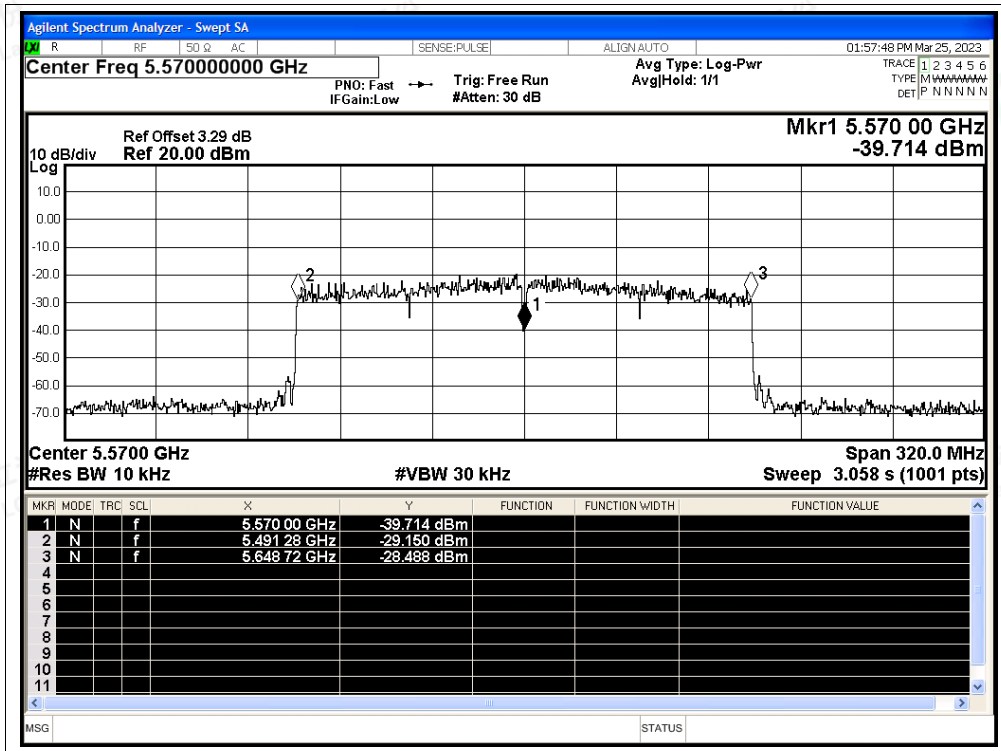



### D.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant0	96.15	0.17	0.72
NVNT	a	5580	Ant0	96.15	0.17	0.72
NVNT	a	5700	Ant0	96.14	0.17	0.72
NVNT	n20	5500	Ant0	95.89	0.18	0.77
NVNT	n20	5580	Ant0	95.88	0.18	0.77
NVNT	n20	5700	Ant0	95.86	0.18	0.77
NVNT	n40	5510	Ant0	92.06	0.36	1.54
NVNT	n40	5550	Ant0	91.91	0.37	1.54
NVNT	n40	5670	Ant0	92.06	0.36	1.54
NVNT	ac20	5500	Ant0	89.39	0.49	2.08
NVNT	ac20	5580	Ant0	89.57	0.48	2.08
NVNT	ac20	5700	Ant0	89.39	0.49	2.08
NVNT	ac40	5510	Ant0	82.33	0.84	3.83
NVNT	ac40	5550	Ant0	82.02	0.86	3.85
NVNT	ac40	5670	Ant0	82.02	0.86	3.85
NVNT	ac80	5530	Ant0	72.2	1.41	6.76
NVNT	ac80	5610	Ant0	72.2	1.41	6.76
NVNT	ac160	5570	Ant0	66.23	1.79	10
NVNT	ax20	5500	Ant0	88.27	0.54	2.33
NVNT	ax20	5580	Ant0	88.27	0.54	2.33
NVNT	ax20	5700	Ant0	88.48	0.53	2.33
NVNT	ax40	5510	Ant0	88.17	0.55	2.35
NVNT	ax40	5550	Ant0	88.38	0.54	2.35
NVNT	ax40	5670	Ant0	88.17	0.55	2.35
NVNT	ax80	5530	Ant0	88.03	0.55	2.43
NVNT	ax80	5610	Ant0	88.03	0.55	2.43
NVNT	ax160	5570	Ant0	74.75	1.26	6.76




Shenzhen LCS Compliance Testing Laboratory Ltd.  
 Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China  
 Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com  
 Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5500MHz Ant0

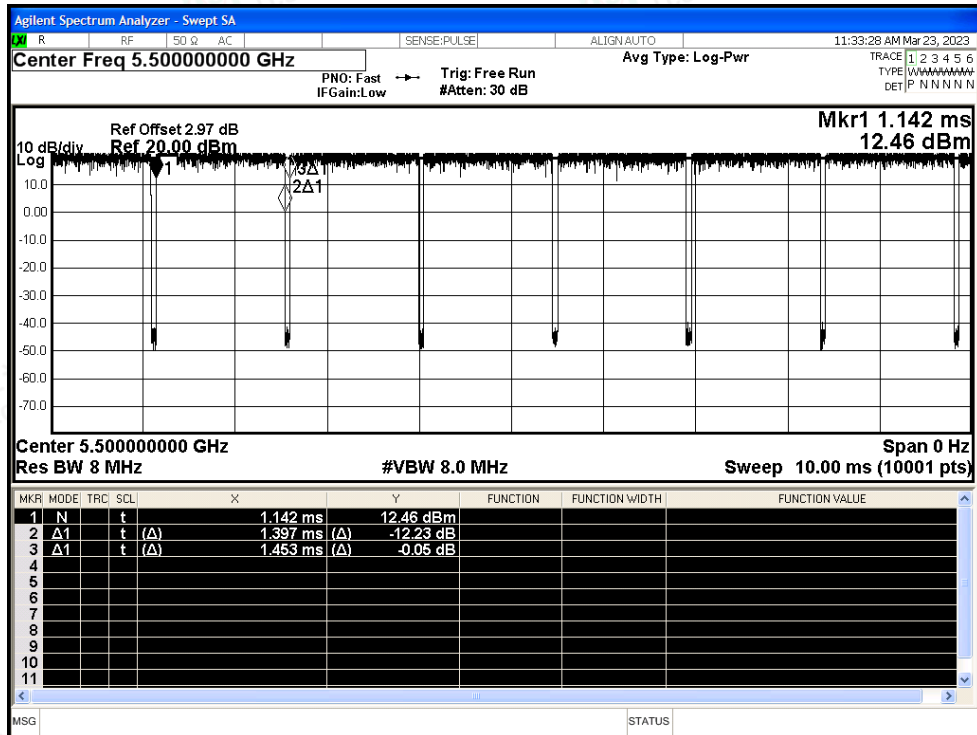


Duty Cycle NVNT a 5580MHz Ant0

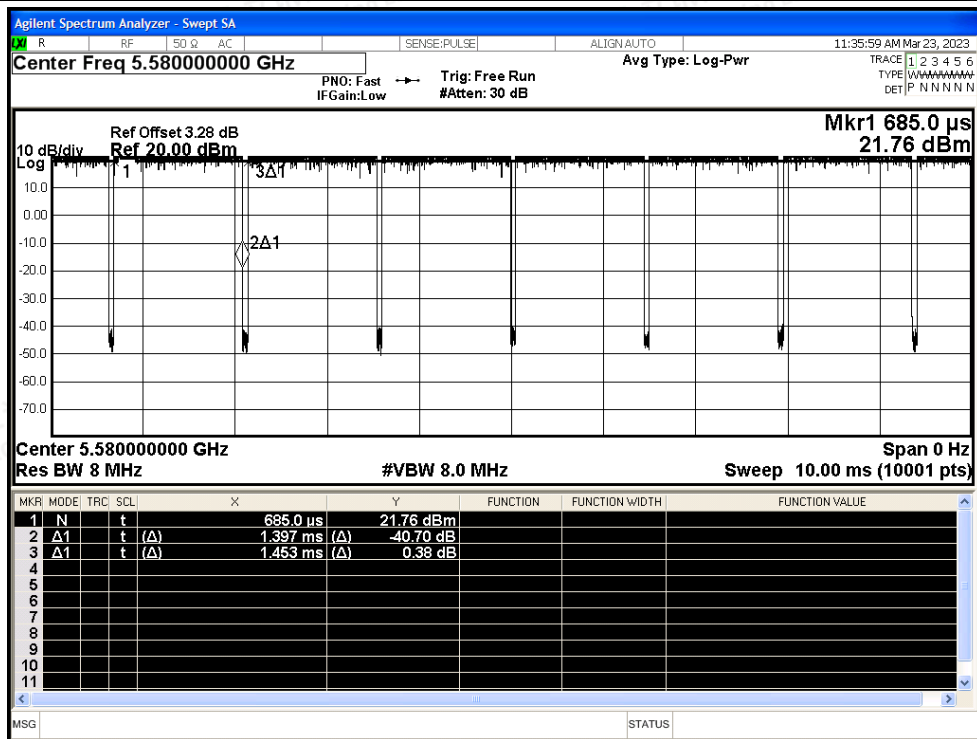






Duty Cycle NVNT a 5700MHz Ant0

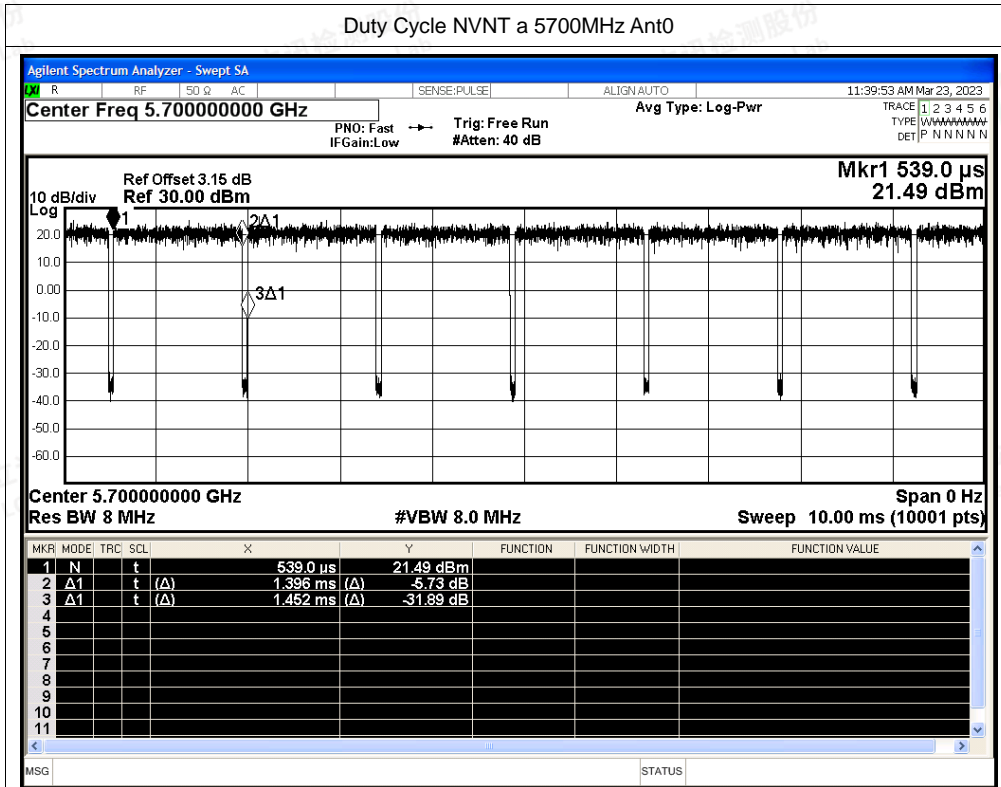

Duty Cycle NVNT n20 5500MHz Ant0

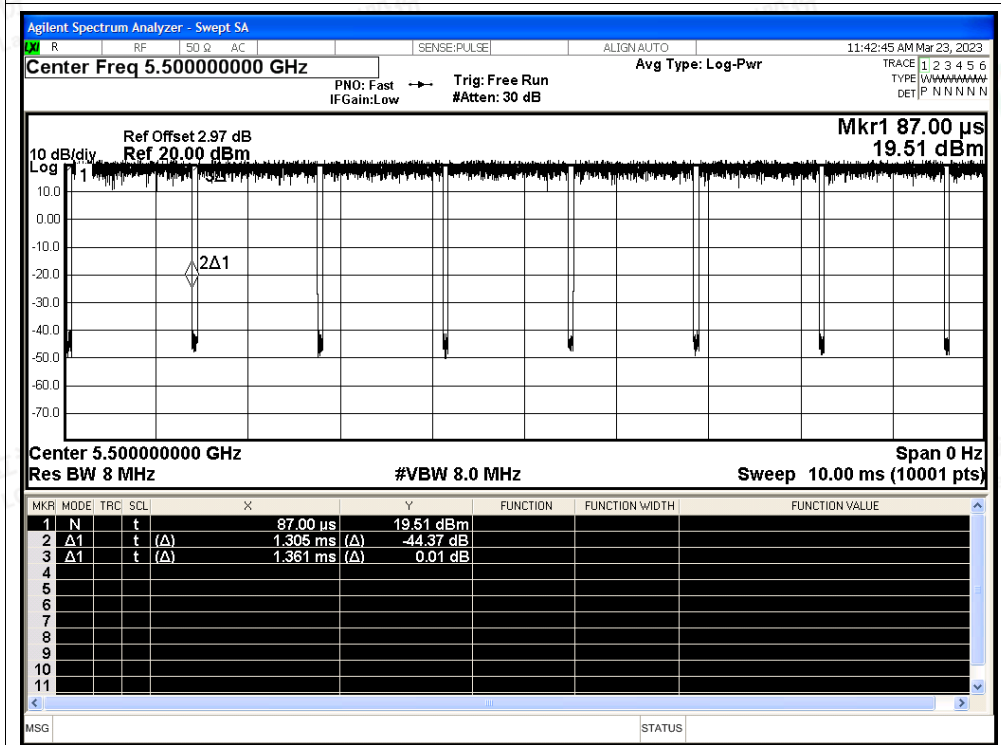




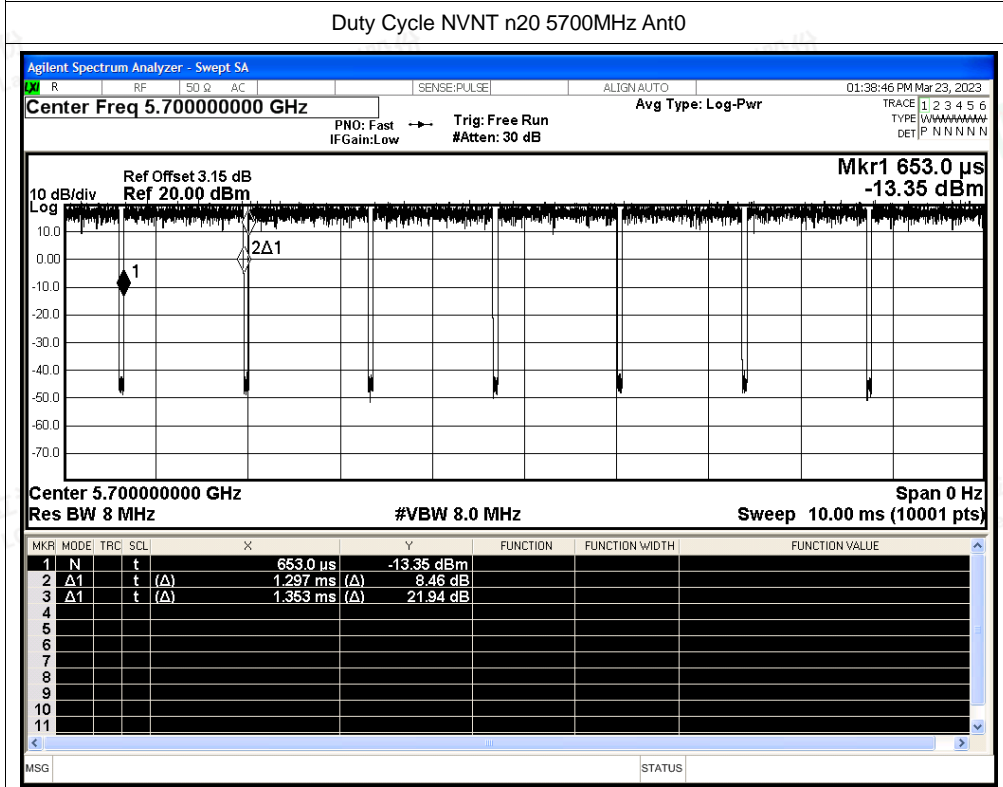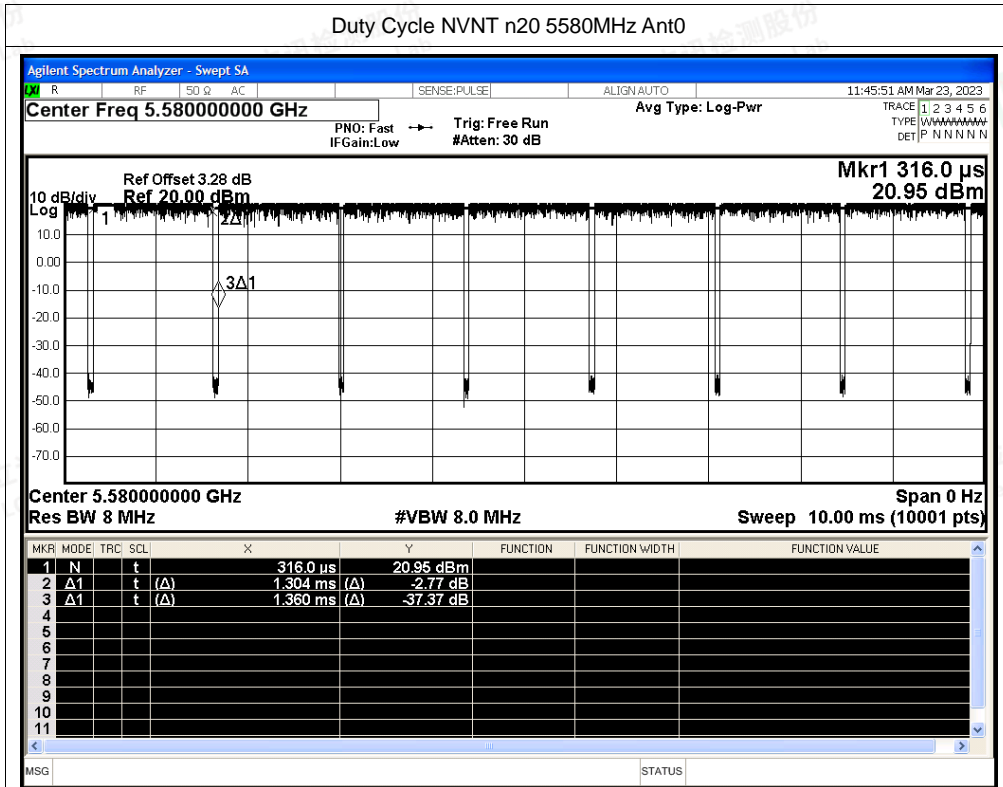








Duty Cycle NVNT n40 5510MHz Ant0

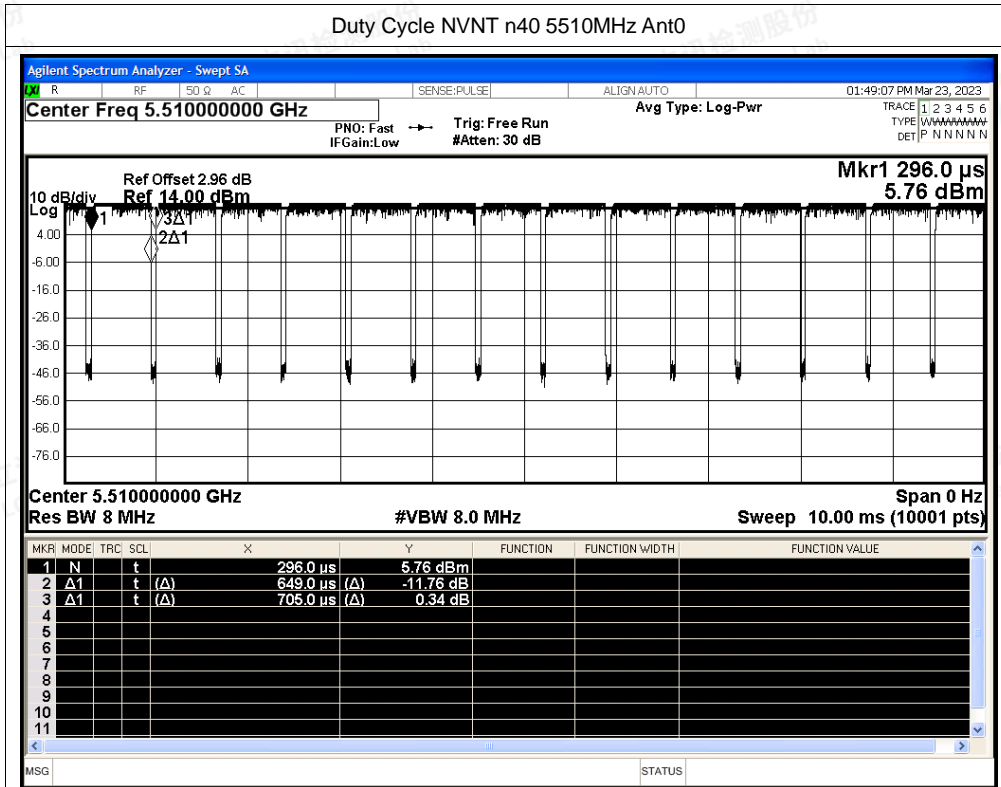

Duty Cycle NVNT n40 5550MHz Ant0

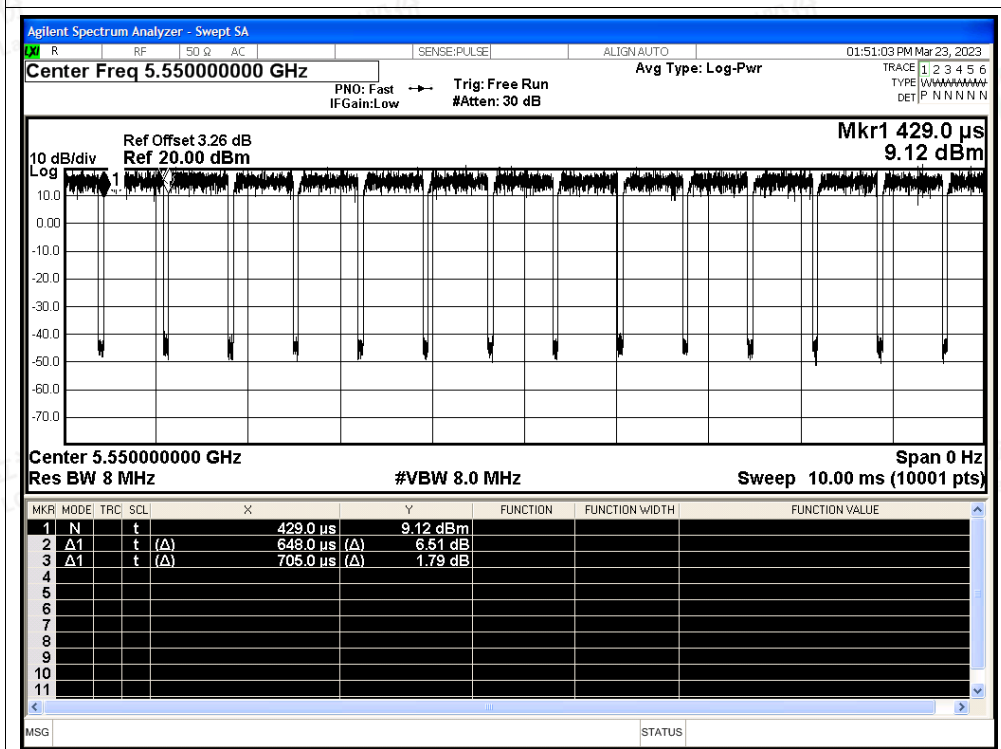


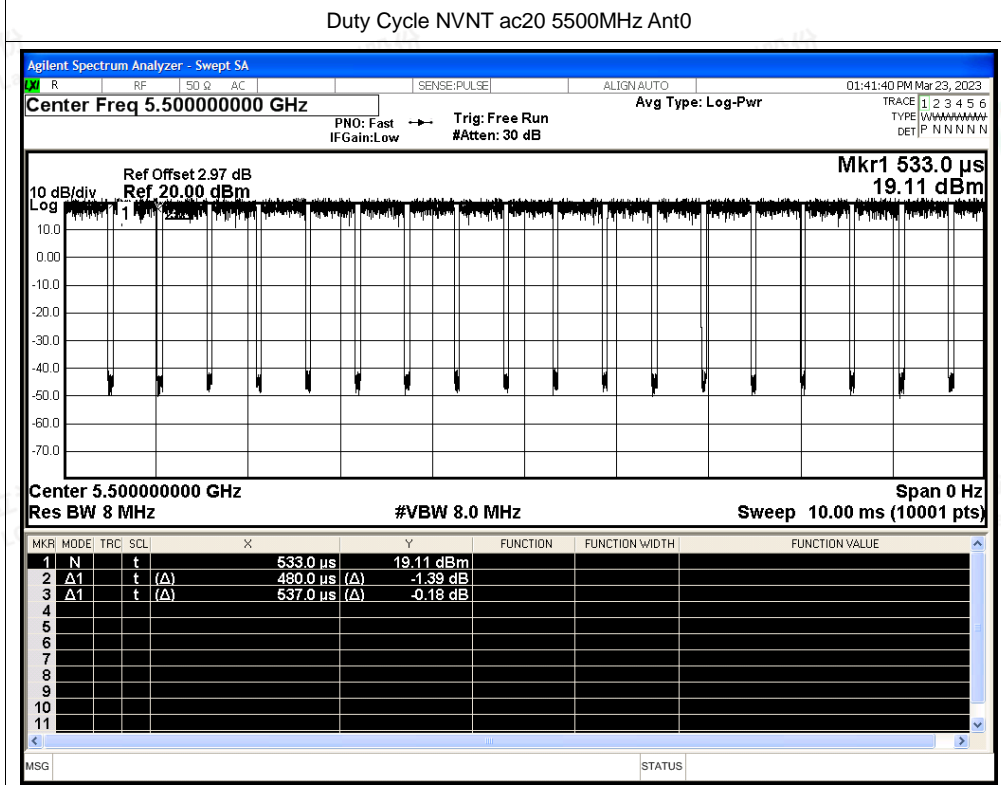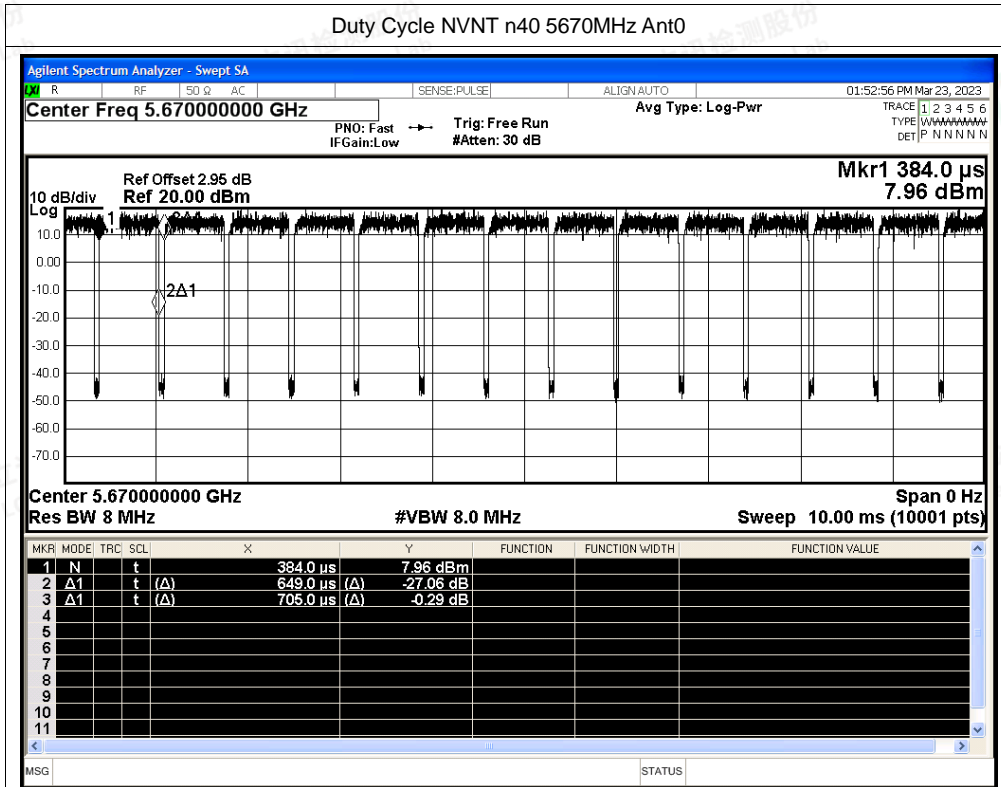

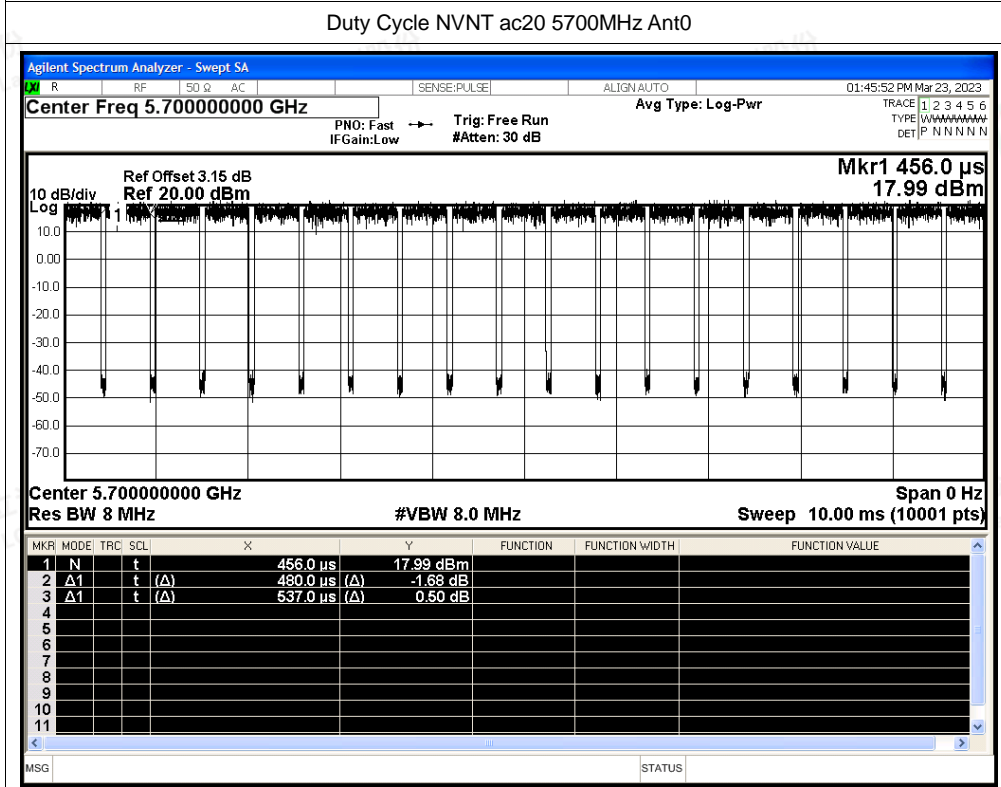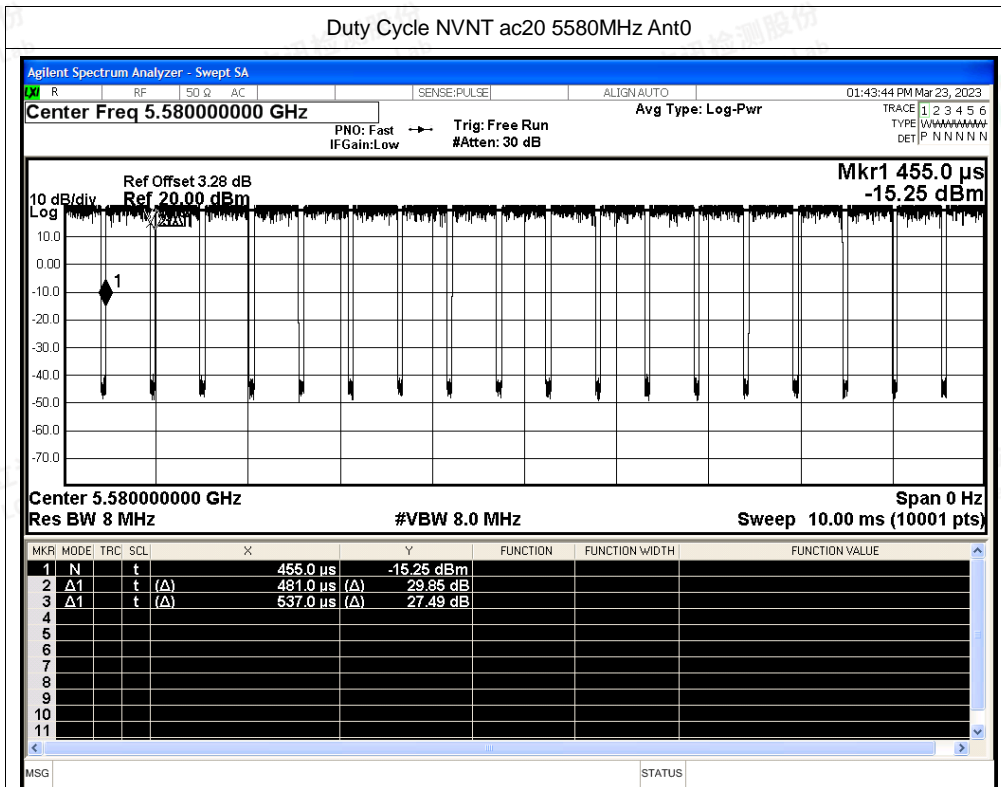




Duty Cycle NVNT ac40 5510MHz Ant0

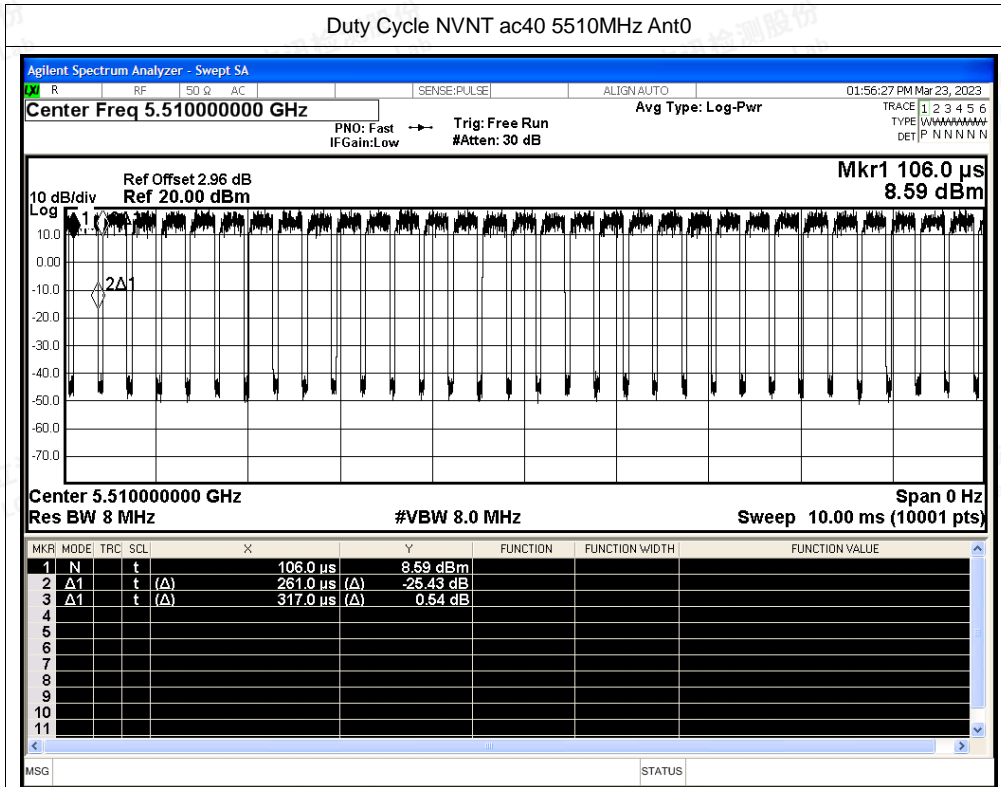


Duty Cycle NVNT ac40 5550MHz Ant0

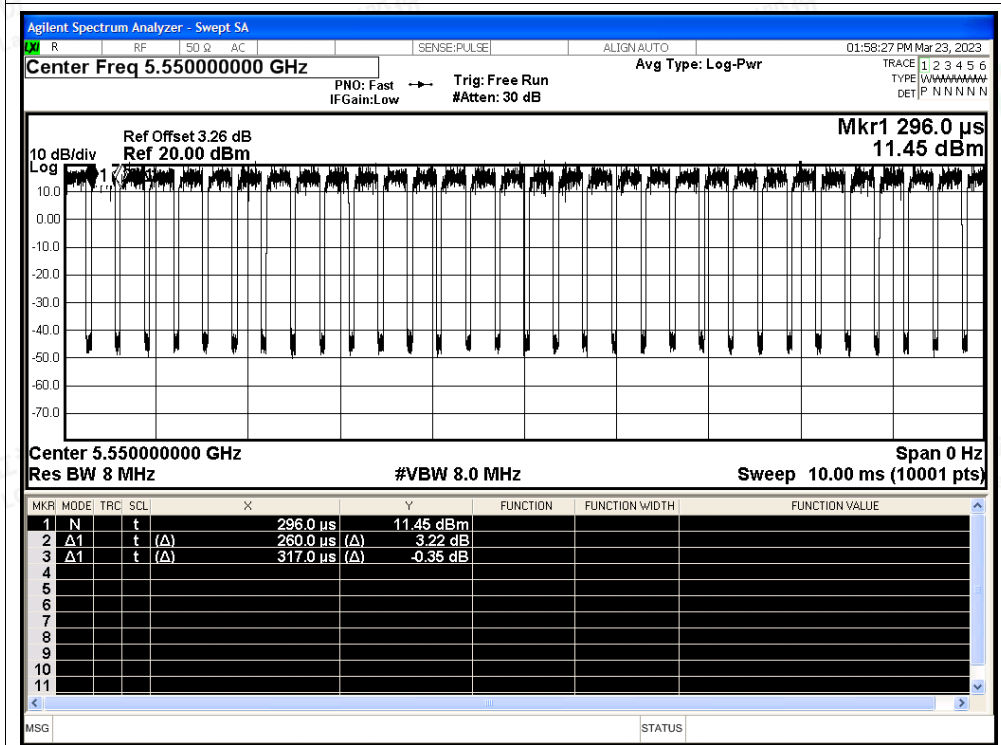




Duty Cycle NVNT ac40 5670MHz Ant0

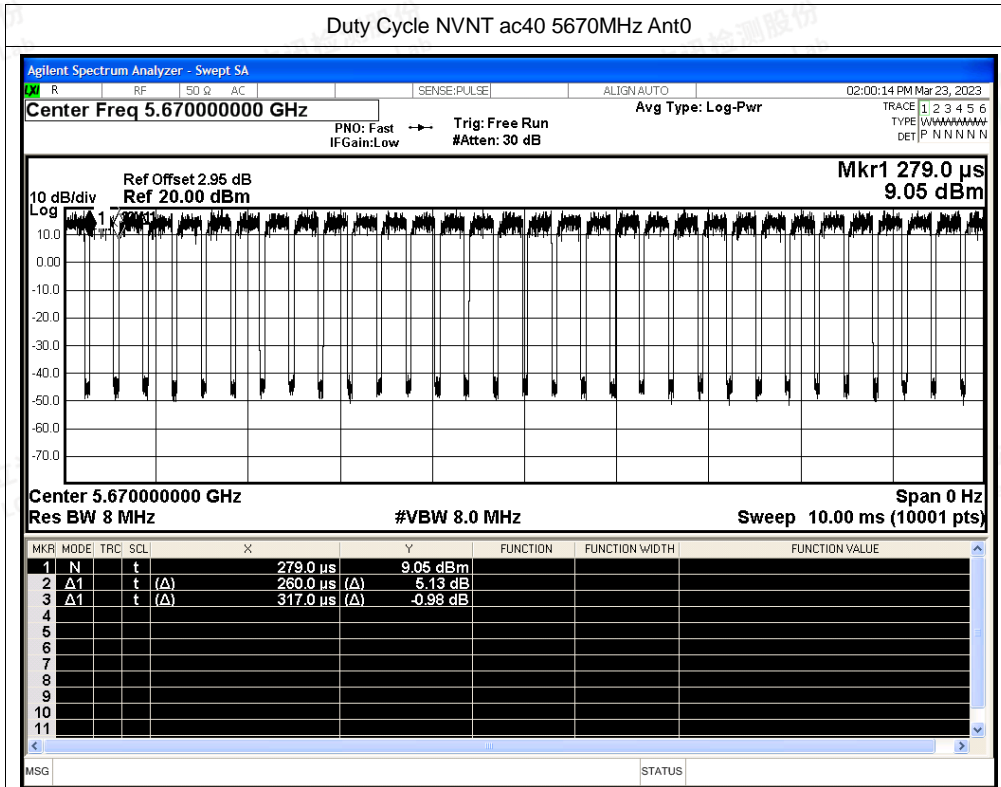


Duty Cycle NVNT ac80 5530MHz Ant0

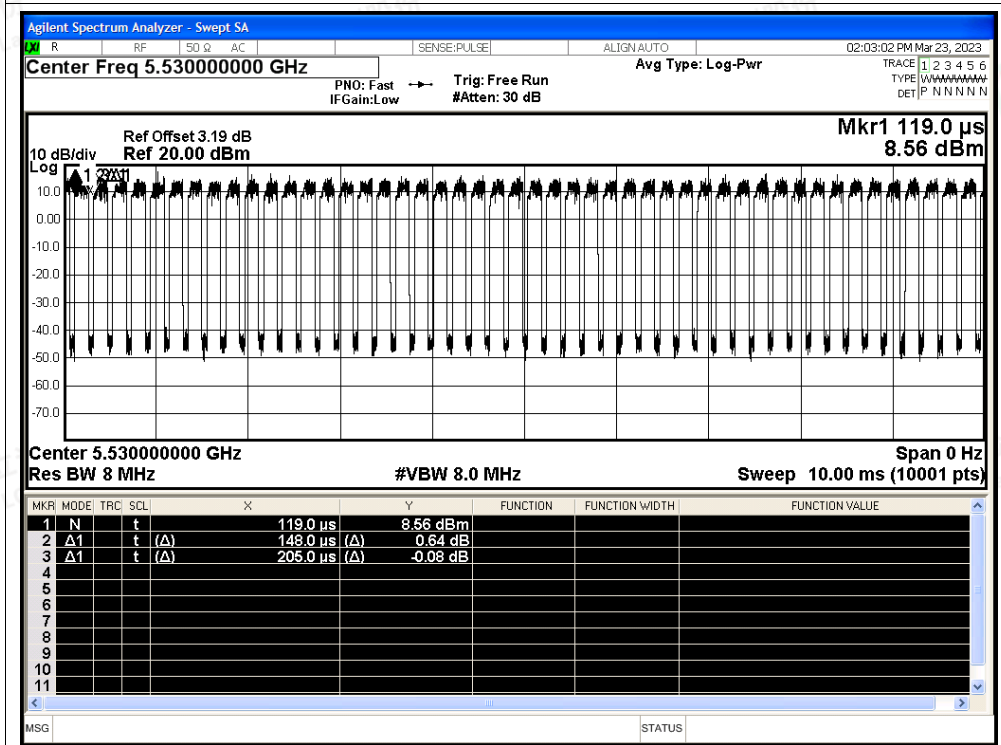




Duty Cycle NVNT ac80 5610MHz Ant0

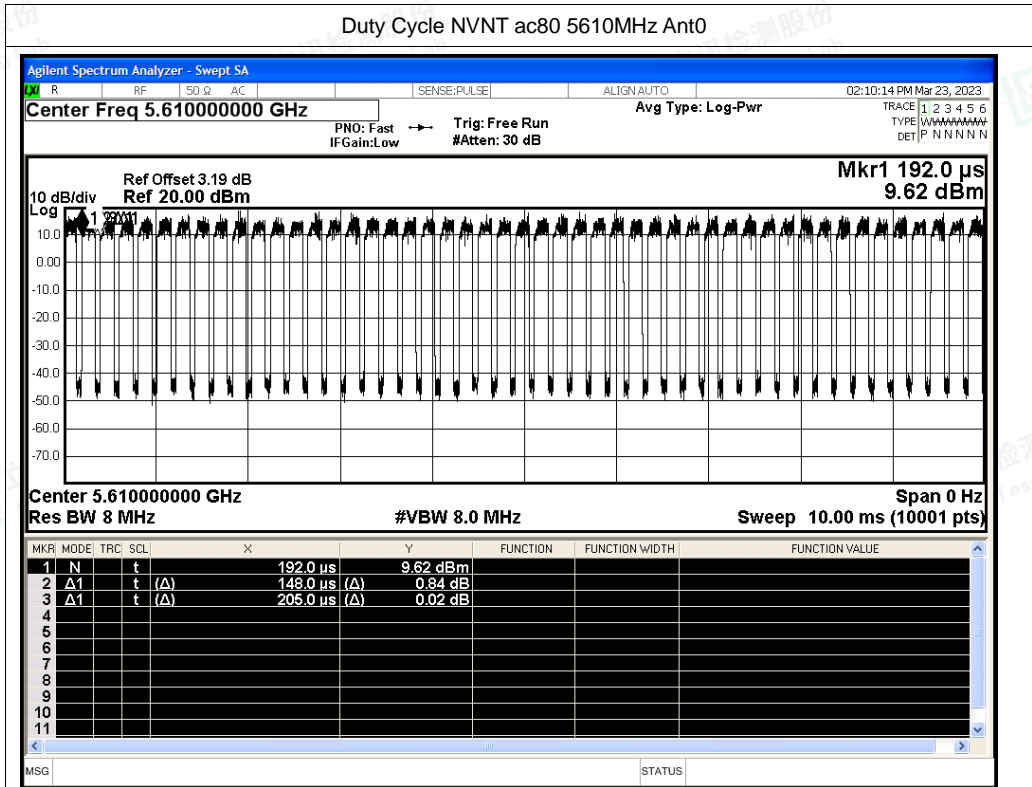


Duty Cycle NVNT ac160 5570MHz Ant0

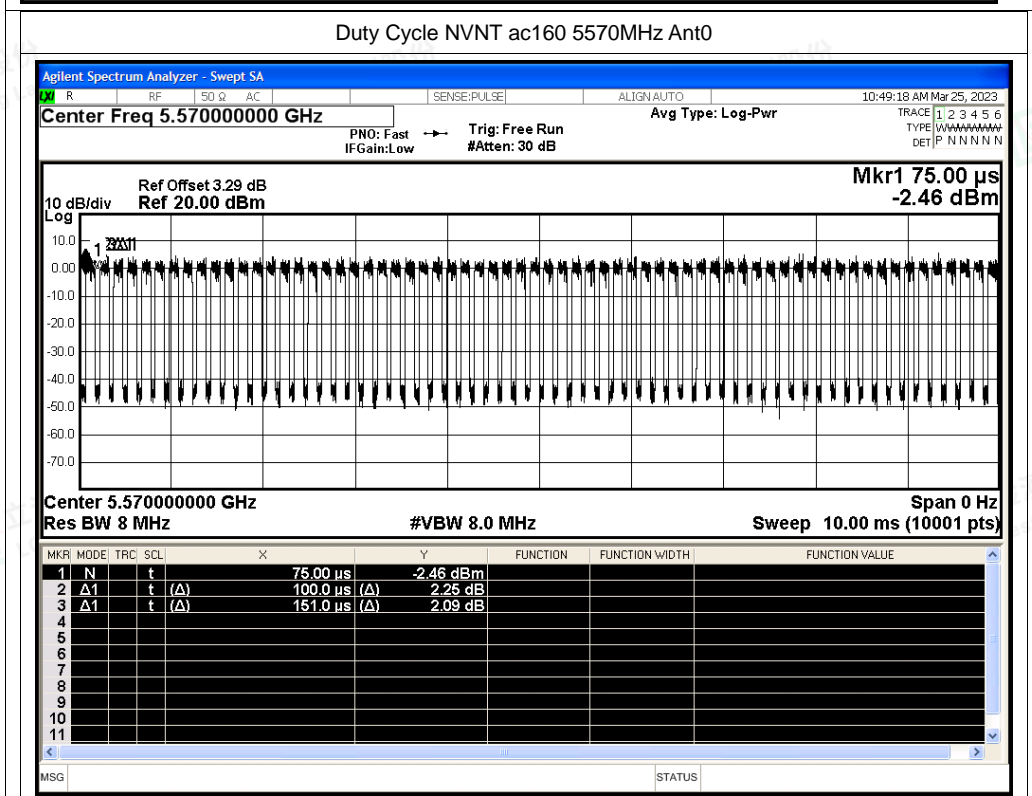

Duty Cycle NVNT ax20 5500MHz Ant0




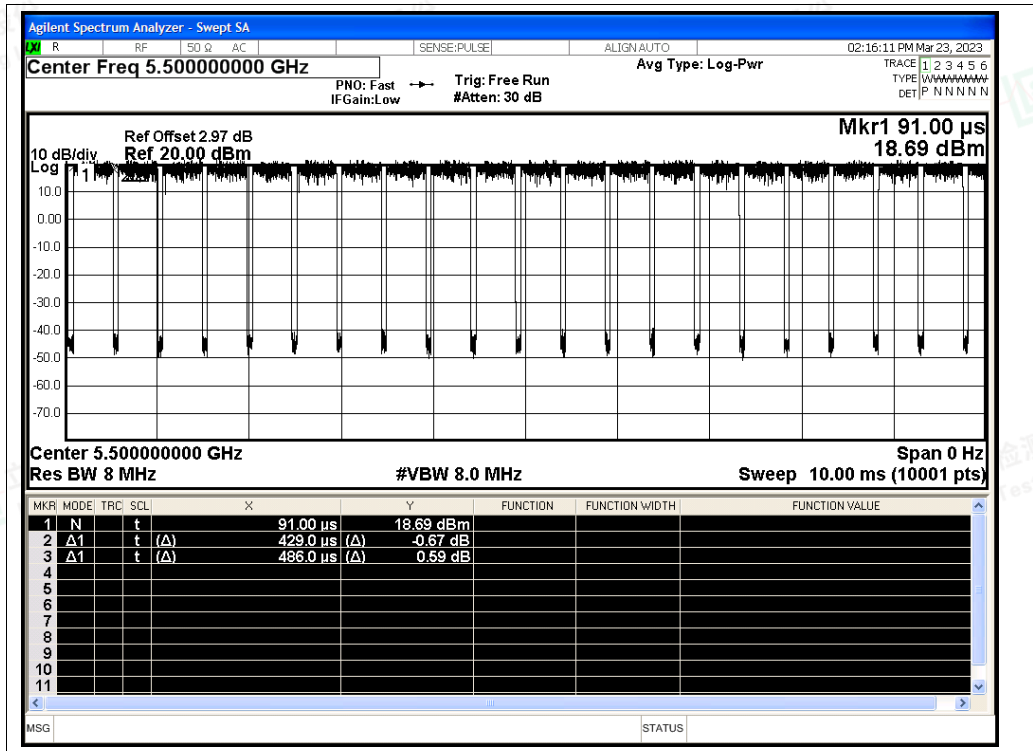






Duty Cycle NVNT ax20 5580MHz Ant0

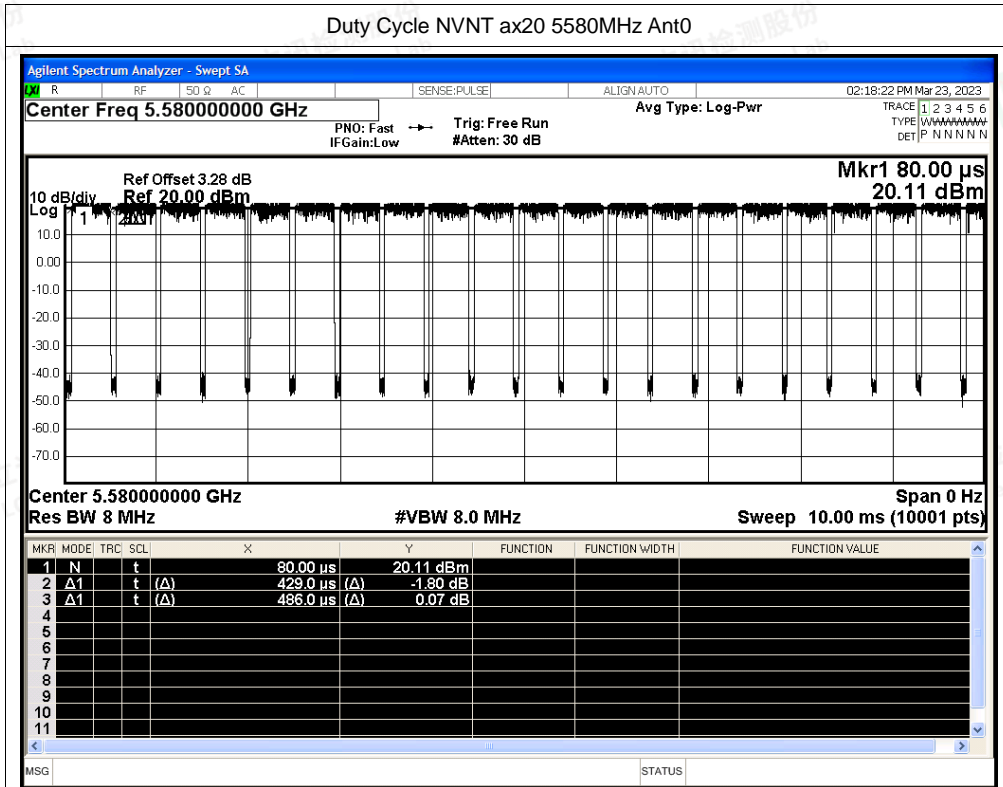


Duty Cycle NVNT ax20 5700MHz Ant0

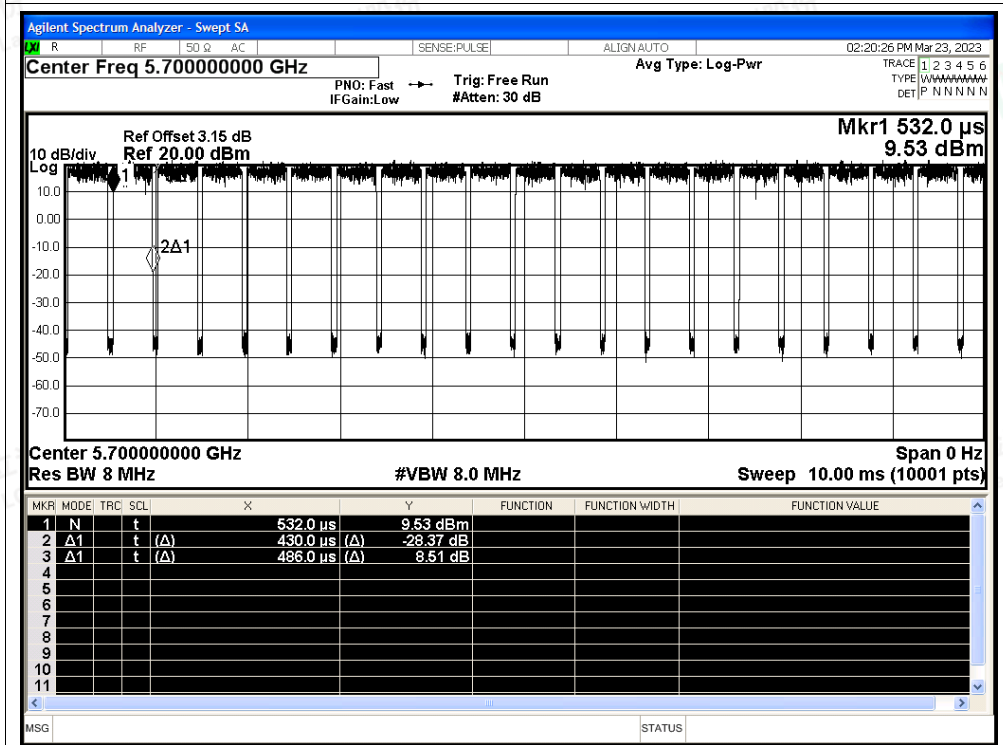




Duty Cycle NVNT ax40 5510MHz Ant0

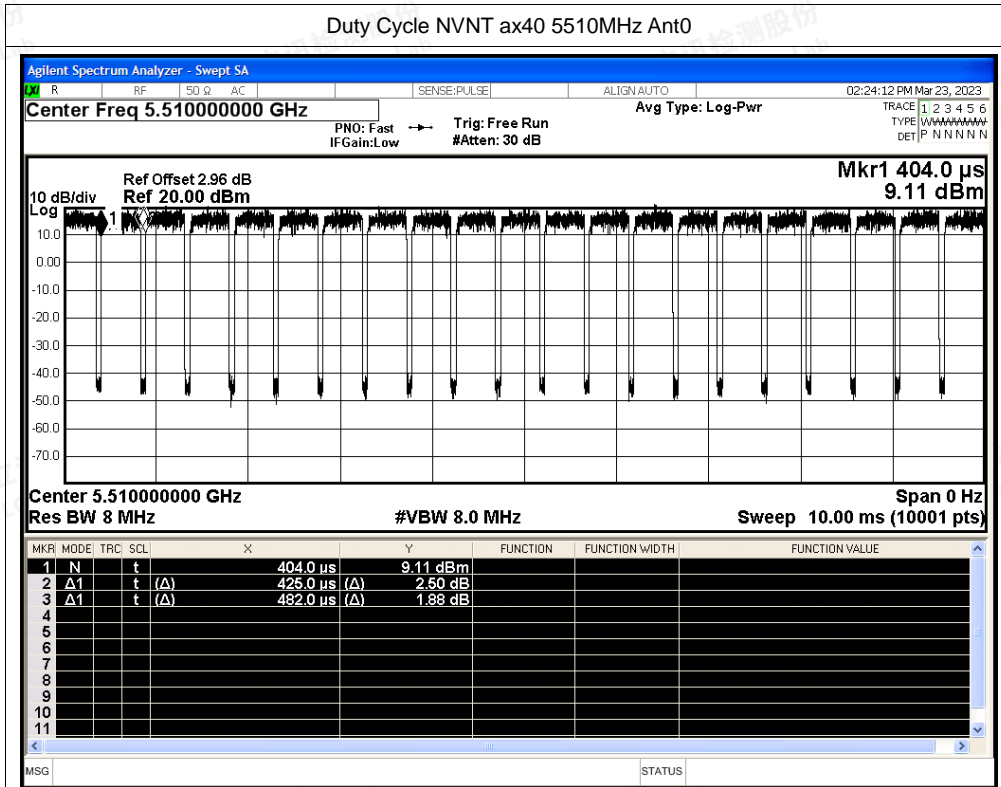


Duty Cycle NVNT ax40 5550MHz Ant0

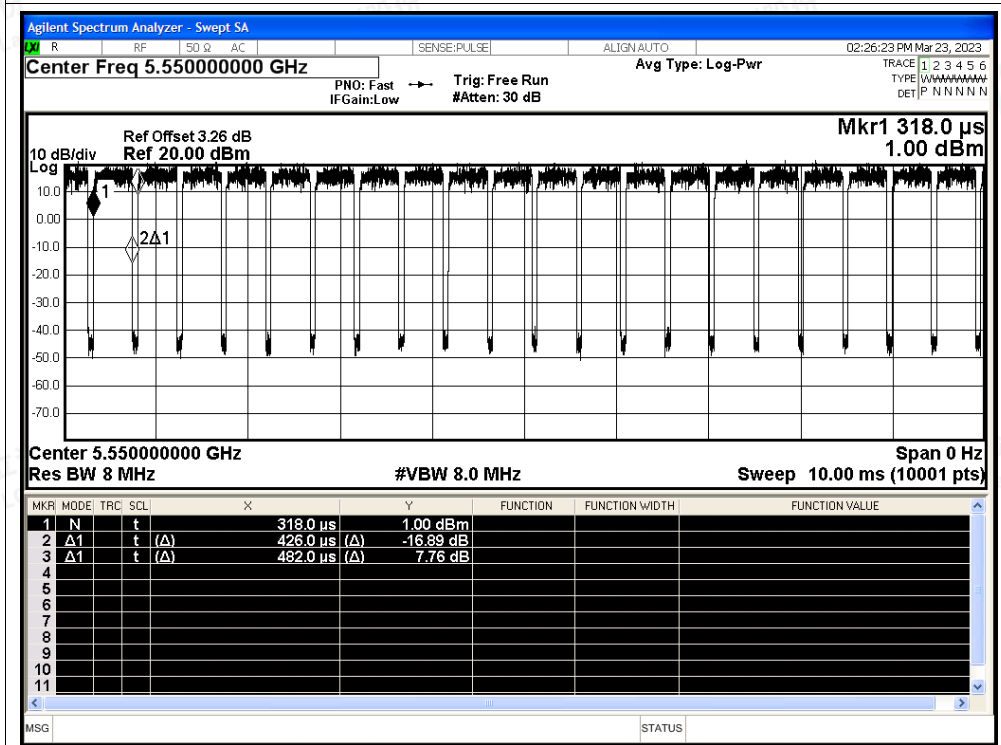




Duty Cycle NVNT ax40 5670MHz Ant0

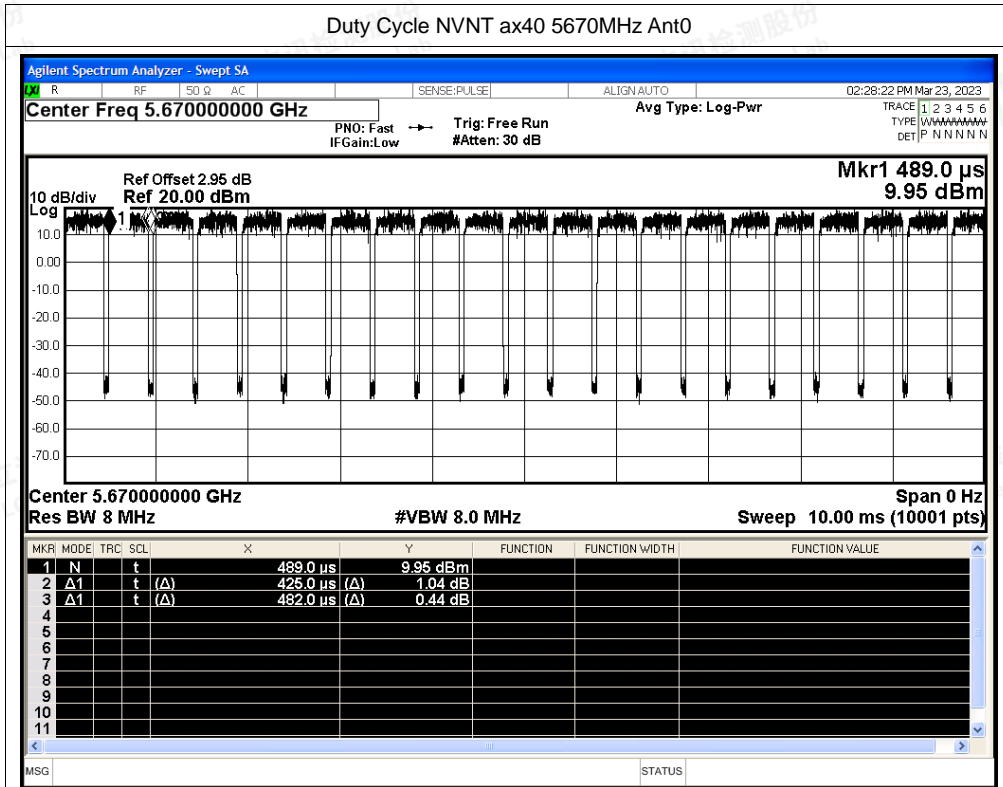


Duty Cycle NVNT ax80 5530MHz Ant0

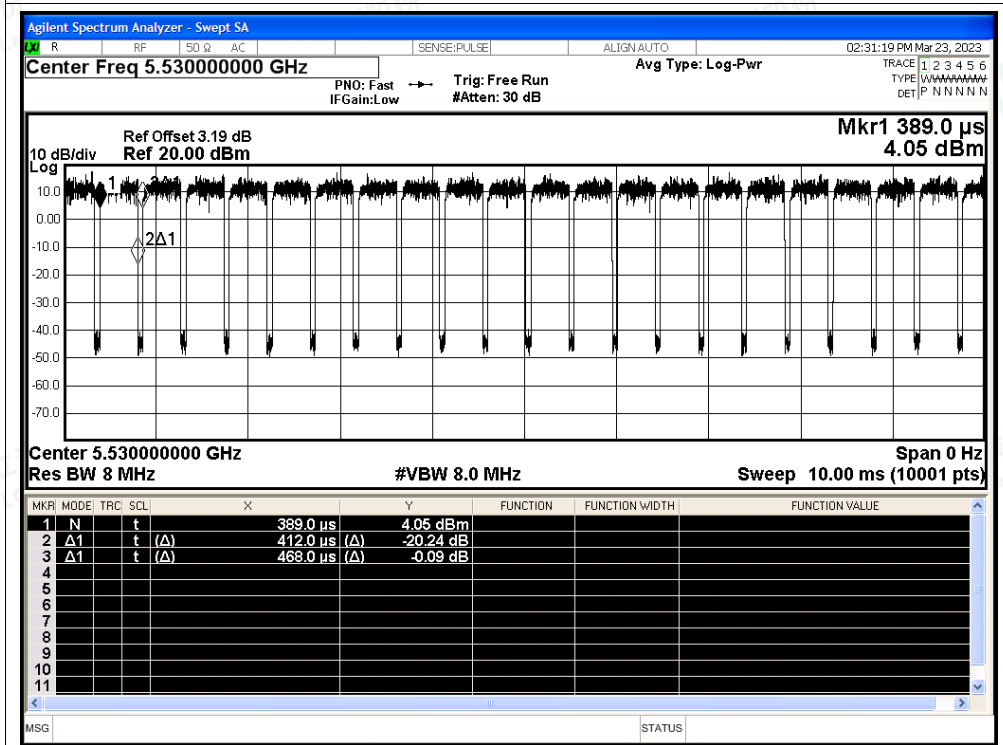




Duty Cycle NVNT ax80 5610MHz Ant0

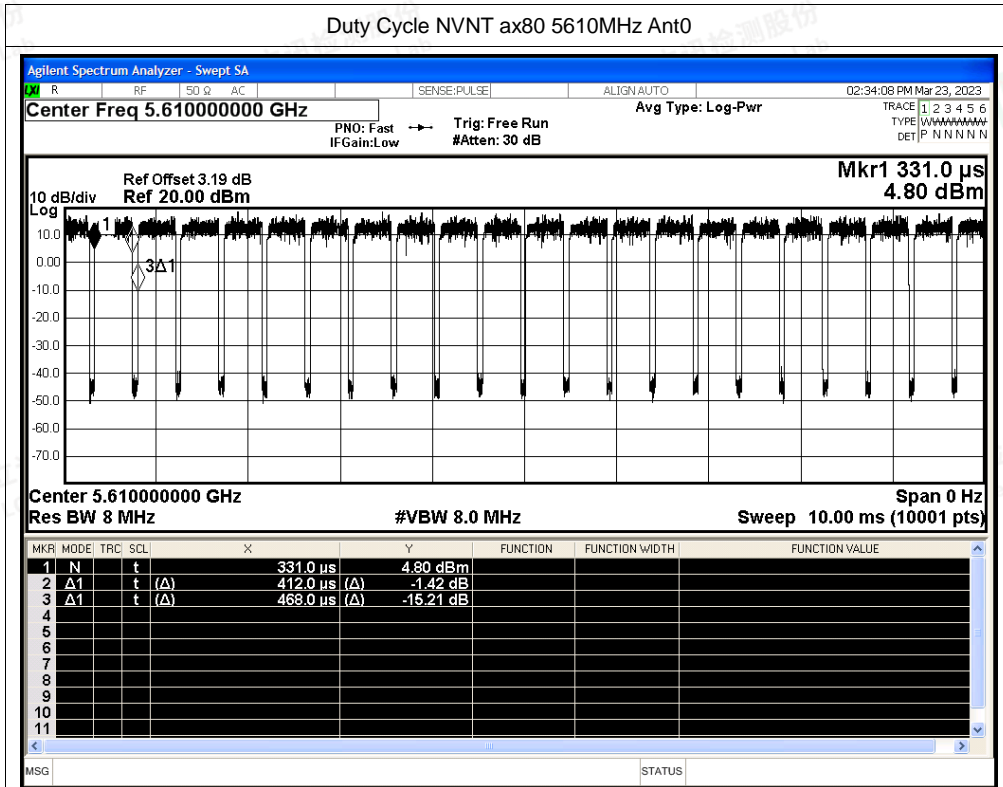

Duty Cycle NVNT ax160 5570MHz Ant0

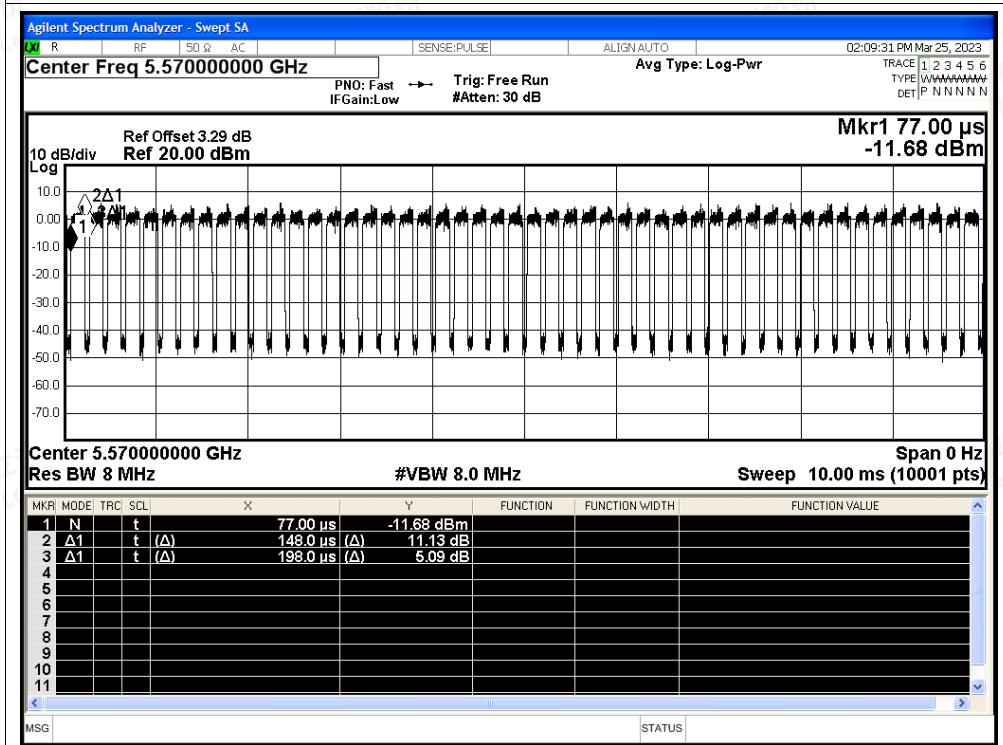




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant1	96.08	0.17	0.72
NVNT	a	5580	Ant1	96.08	0.17	0.72
NVNT	a	5700	Ant1	96.14	0.17	0.72
NVNT	n20	5500	Ant1	95.85	0.18	0.77
NVNT	n20	5580	Ant1	95.85	0.18	0.77
NVNT	n20	5700	Ant1	95.77	0.19	0.77
NVNT	n40	5510	Ant1	92.06	0.36	1.54
NVNT	n40	5550	Ant1	92.06	0.36	1.54
NVNT	n40	5670	Ant1	92.06	0.36	1.54
NVNT	ac20	5500	Ant1	89.39	0.49	2.08
NVNT	ac20	5580	Ant1	89.55	0.48	2.08
NVNT	ac20	5700	Ant1	89.55	0.48	2.08
NVNT	ac40	5510	Ant1	82.02	0.86	3.85
NVNT	ac40	5550	Ant1	82.02	0.86	3.85
NVNT	ac40	5670	Ant1	82.33	0.84	3.83
NVNT	ac80	5530	Ant1	72.55	1.39	6.76
NVNT	ac80	5610	Ant1	72.2	1.41	6.76
NVNT	ac160	5570	Ant1	66.89	1.75	9.9
NVNT	ax20	5500	Ant1	88.45	0.53	2.33
NVNT	ax20	5580	Ant1	88.27	0.54	2.33
NVNT	ax20	5700	Ant1	88.27	0.54	2.33
NVNT	ax40	5510	Ant1	88.17	0.55	2.35
NVNT	ax40	5550	Ant1	88.36	0.54	2.35
NVNT	ax40	5670	Ant1	88.17	0.55	2.35
NVNT	ax80	5530	Ant1	88.03	0.55	2.43
NVNT	ax80	5610	Ant1	88.03	0.55	2.43
NVNT	ax160	5570	Ant1	74.75	1.26	6.76






Test Graphs

Duty Cycle NVNT a 5500MHz Ant1

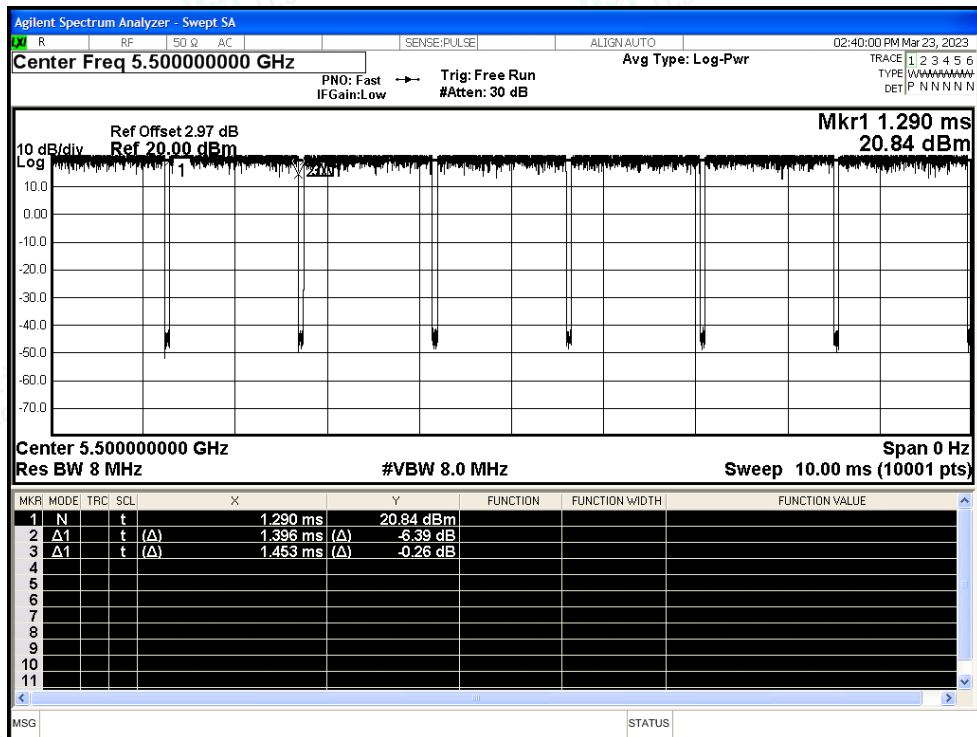


Duty Cycle NVNT a 5580MHz Ant1

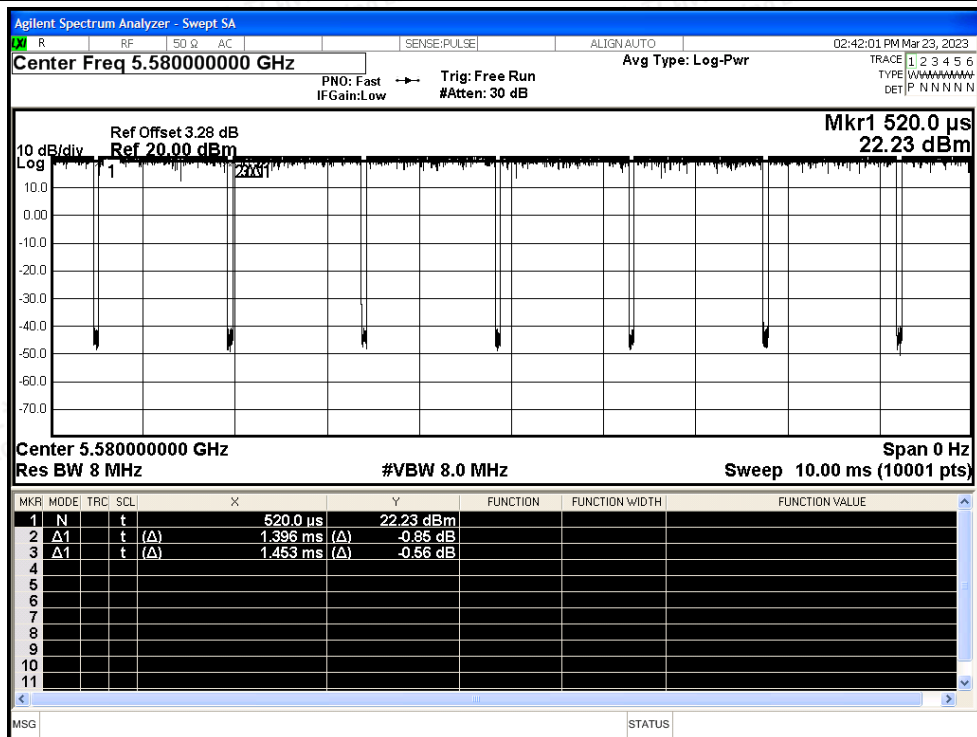




Duty Cycle NVNT a 5700MHz Ant1

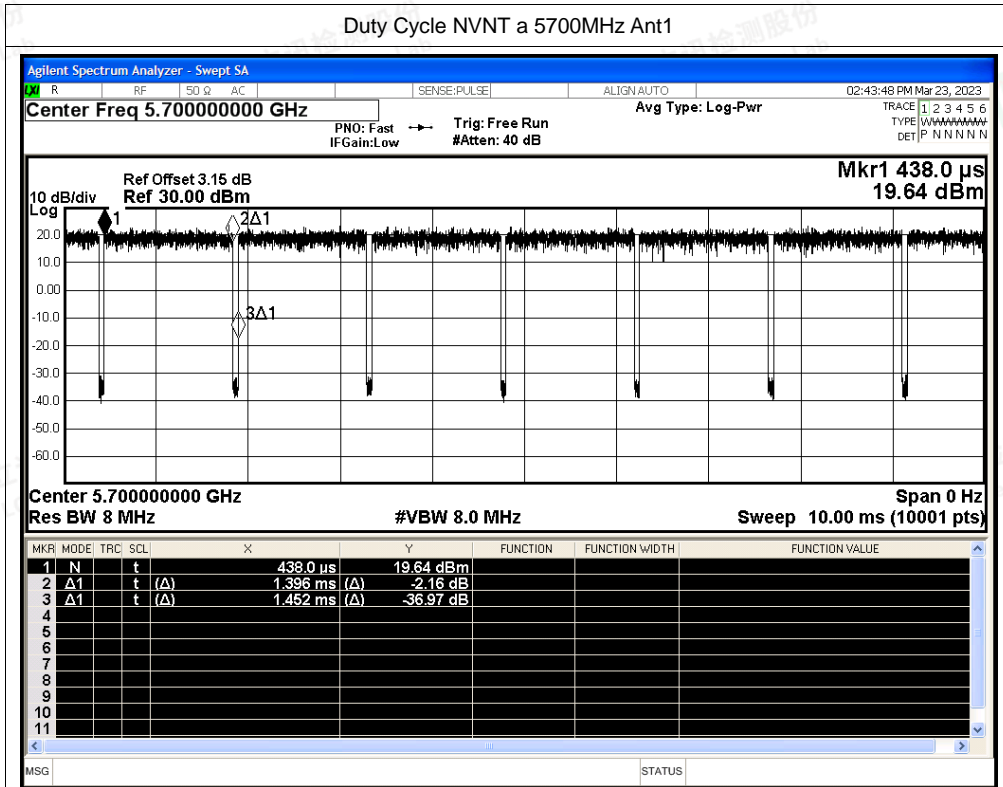


Duty Cycle NVNT n20 5500MHz Ant1

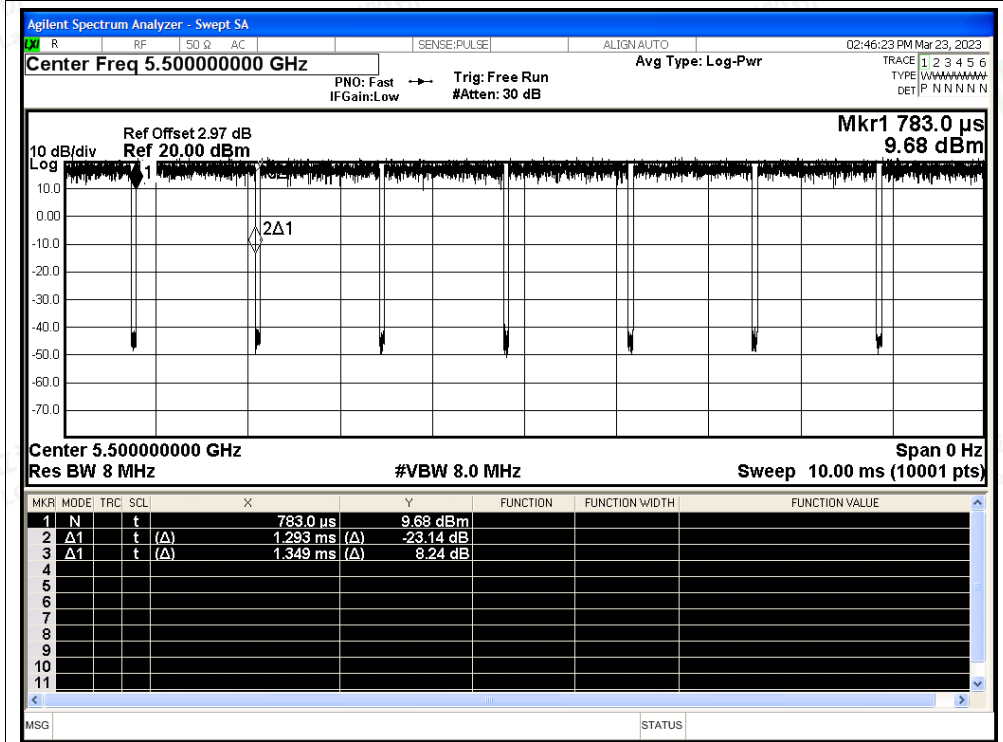




Duty Cycle NVNT n20 5580MHz Ant1

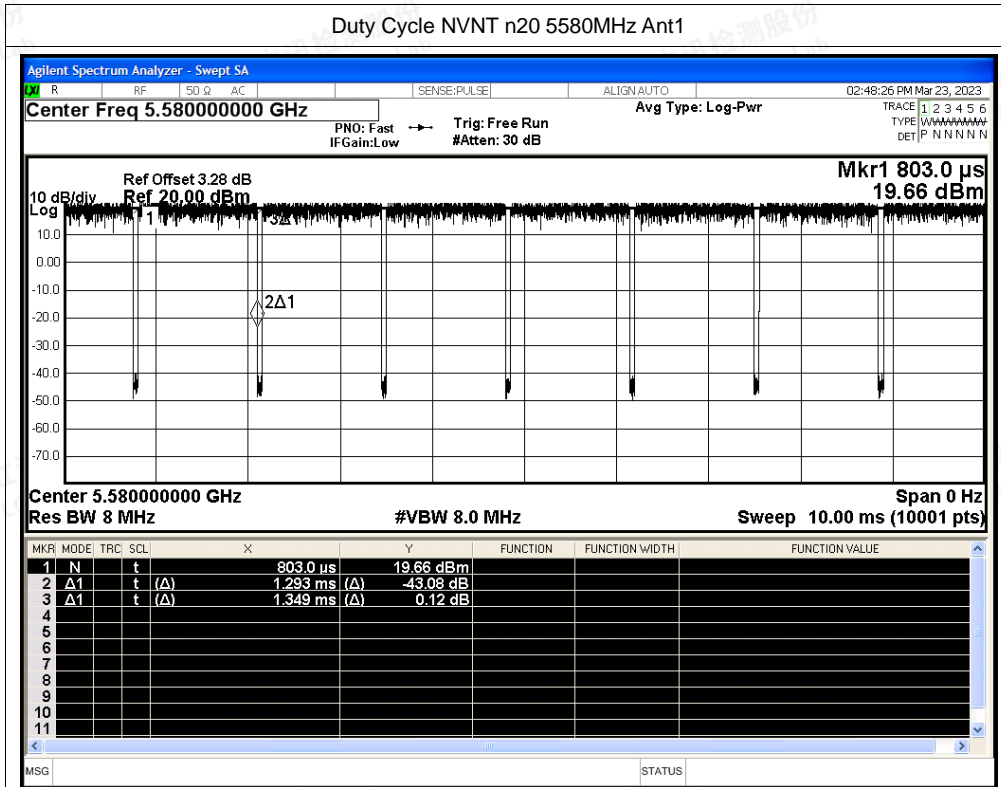


Duty Cycle NVNT n20 5700MHz Ant1

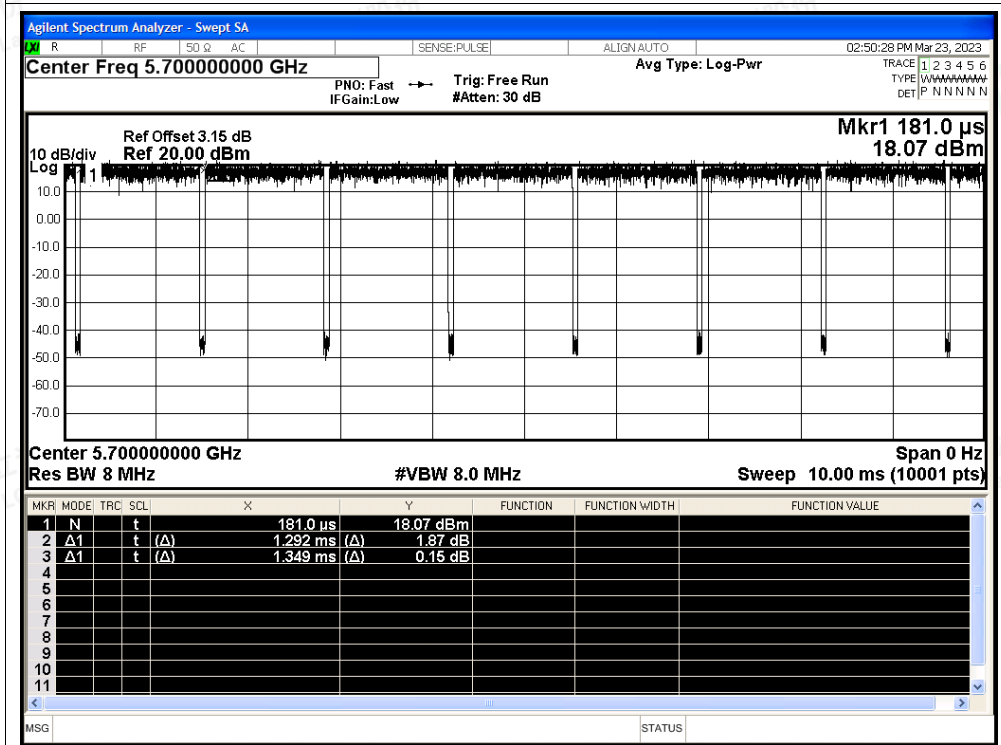






Duty Cycle NVNT n40 5510MHz Ant1

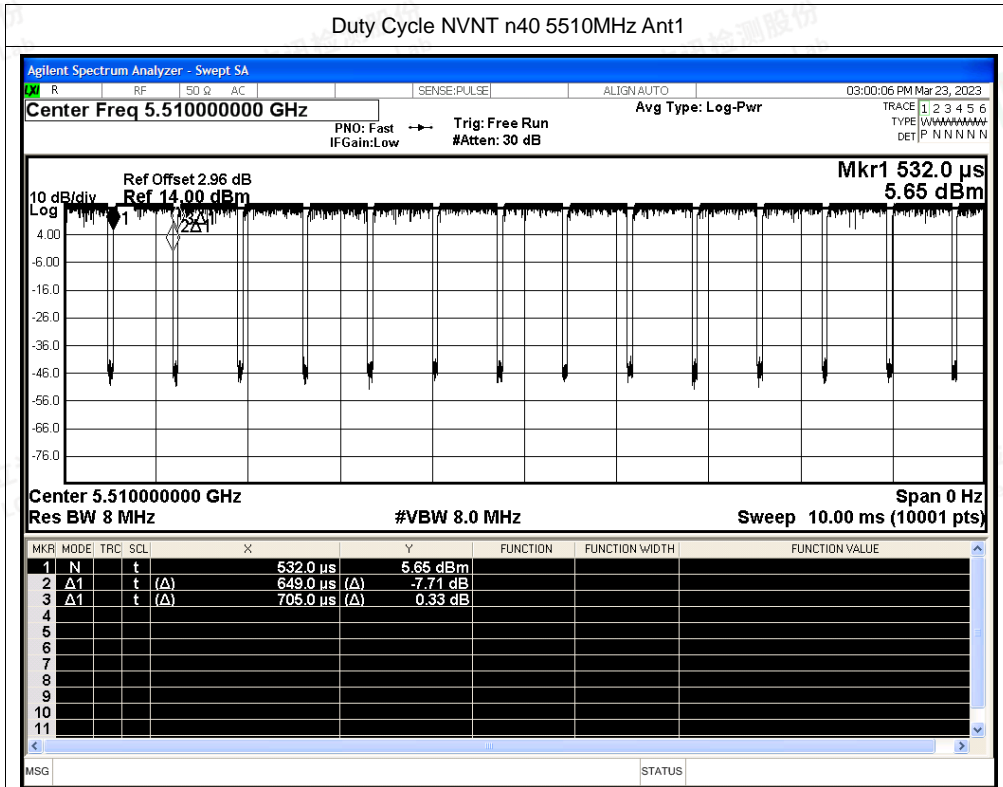


Duty Cycle NVNT n40 5550MHz Ant1

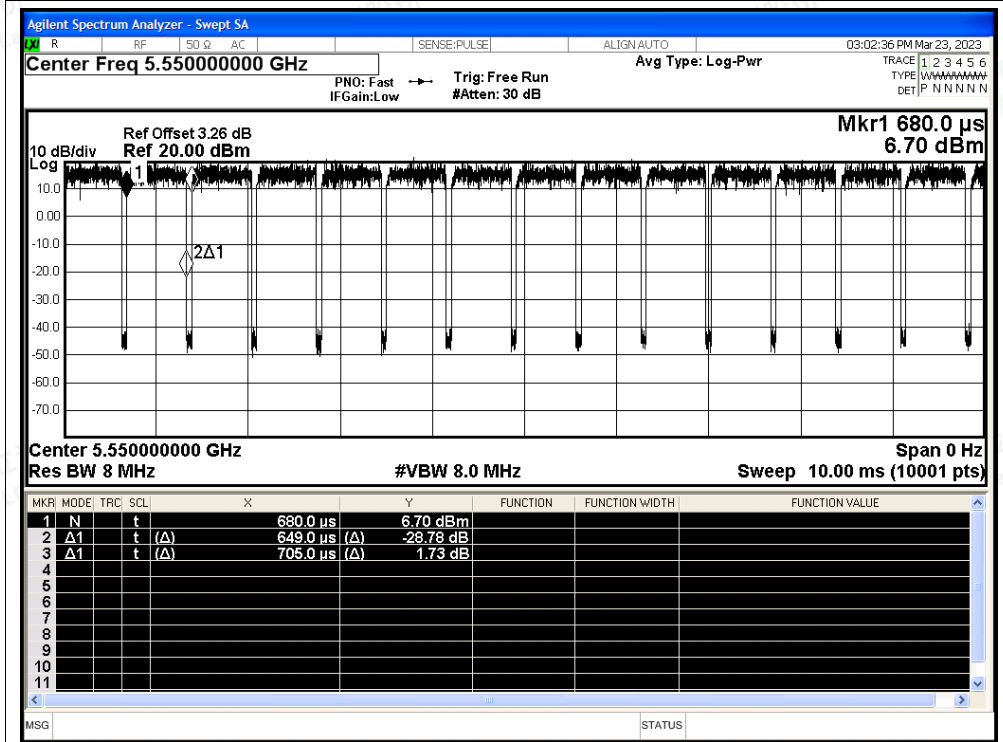




Duty Cycle NVNT n40 5670MHz Ant1

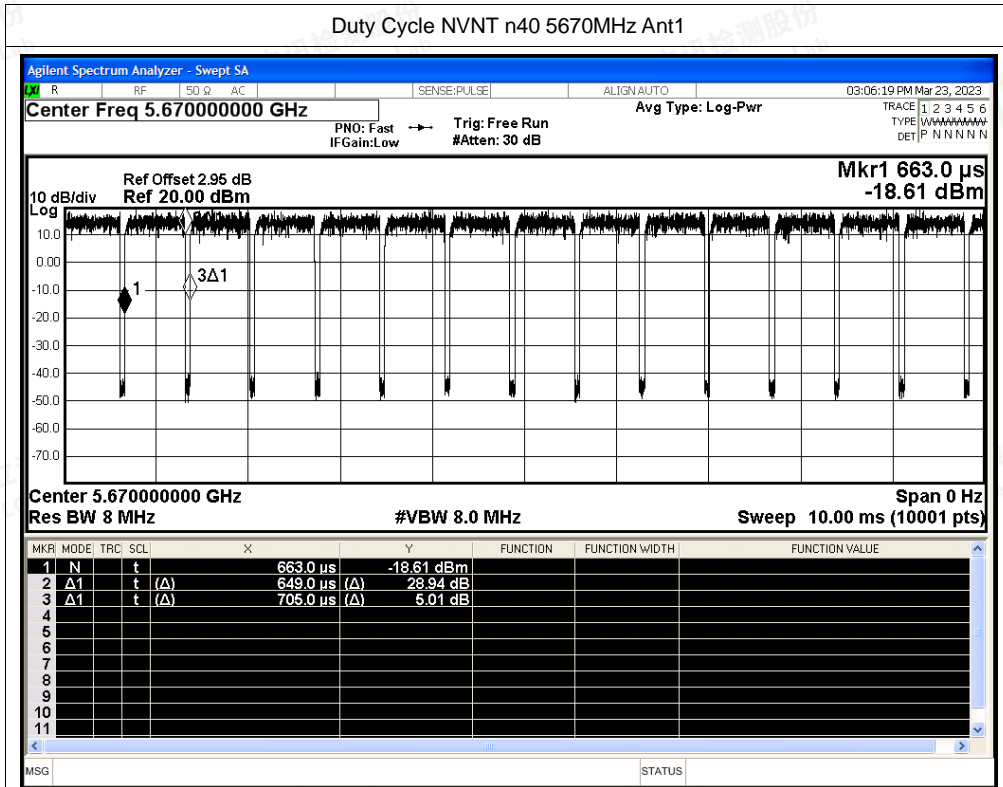


Duty Cycle NVNT ac20 5500MHz Ant1

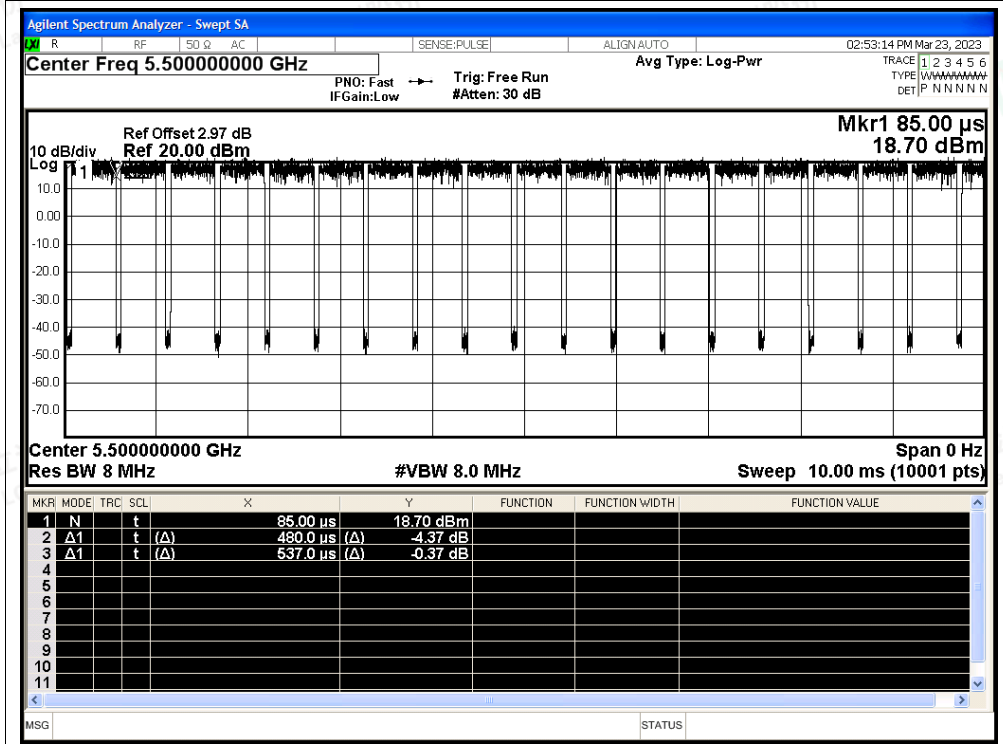






Duty Cycle NVNT ac20 5580MHz Ant1

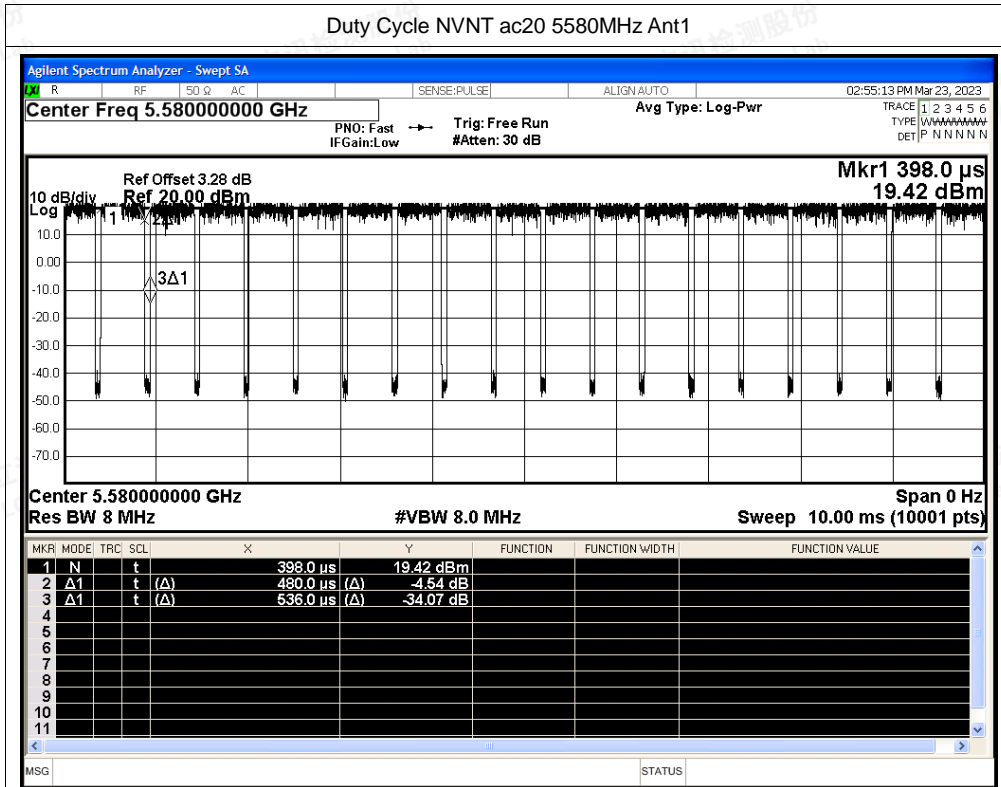


Duty Cycle NVNT ac20 5700MHz Ant1

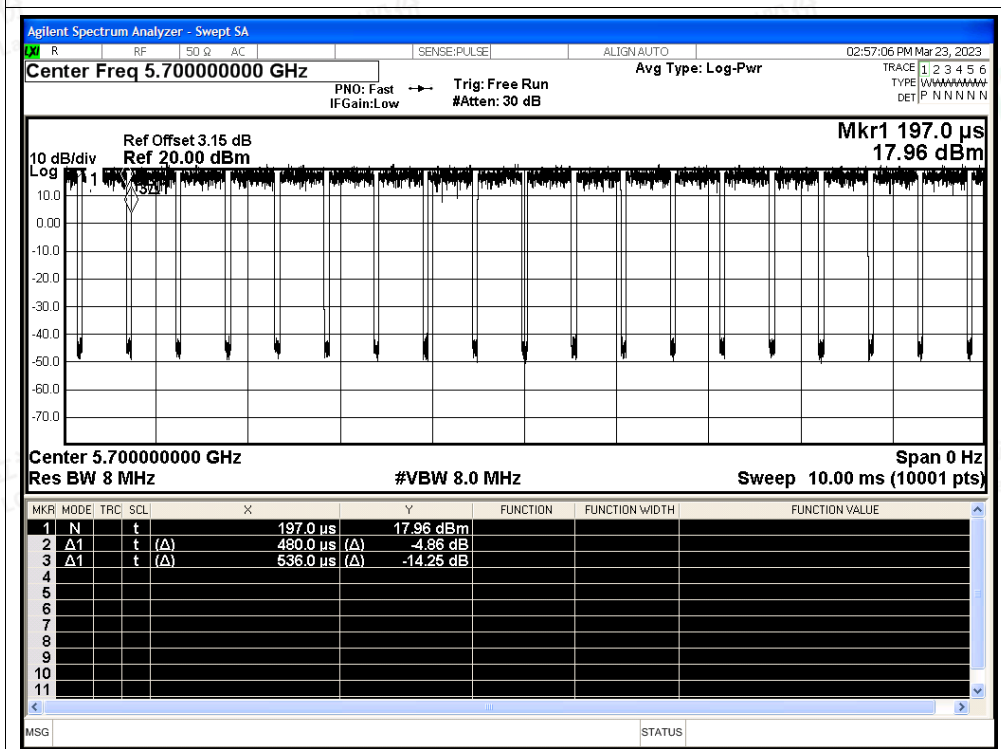

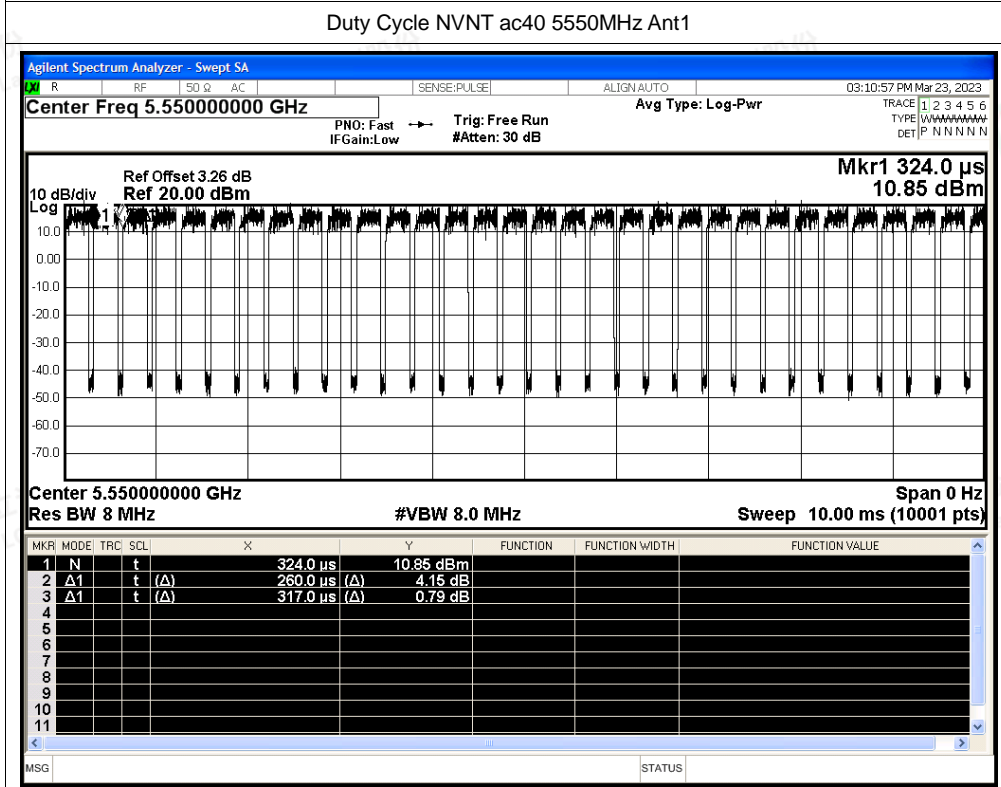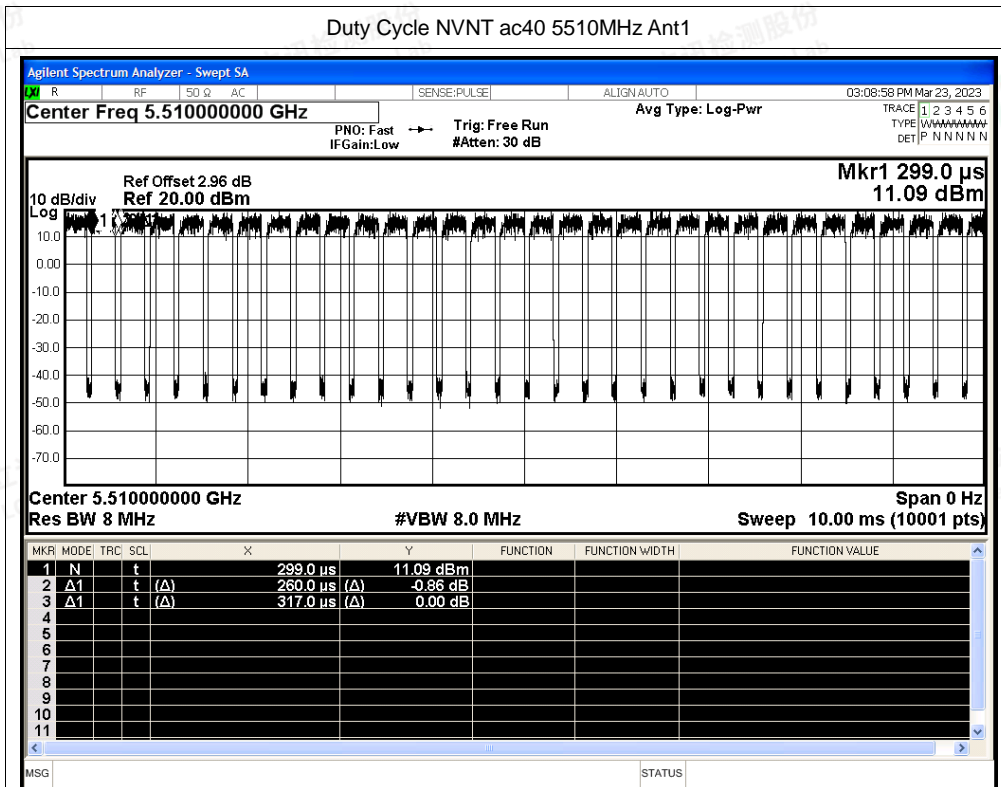




Duty Cycle NVNT ac40 5670MHz Ant1

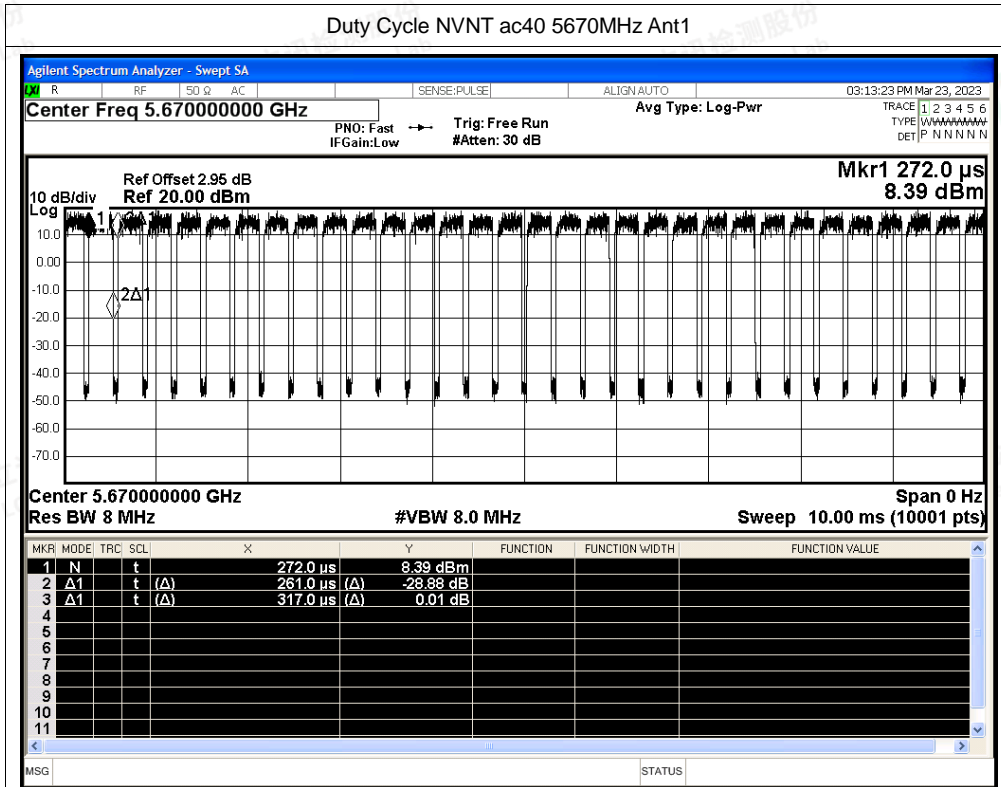


Duty Cycle NVNT ac80 5530MHz Ant1

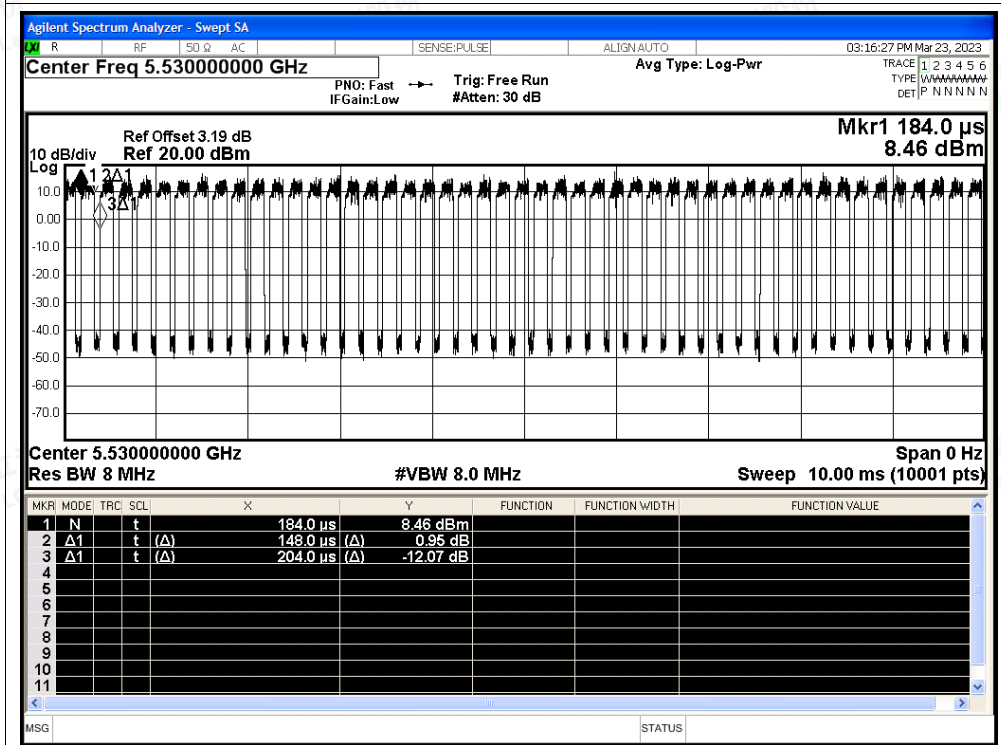




Duty Cycle NVNT ac80 5610MHz Ant1

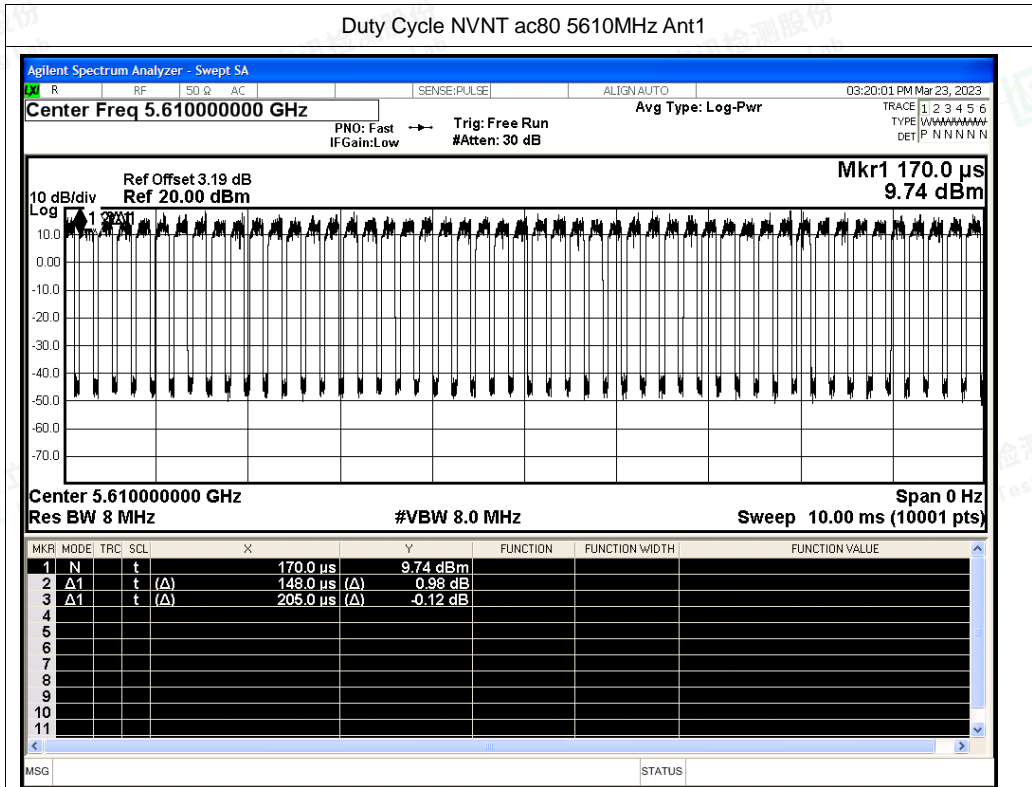


Duty Cycle NVNT ac160 5570MHz Ant1

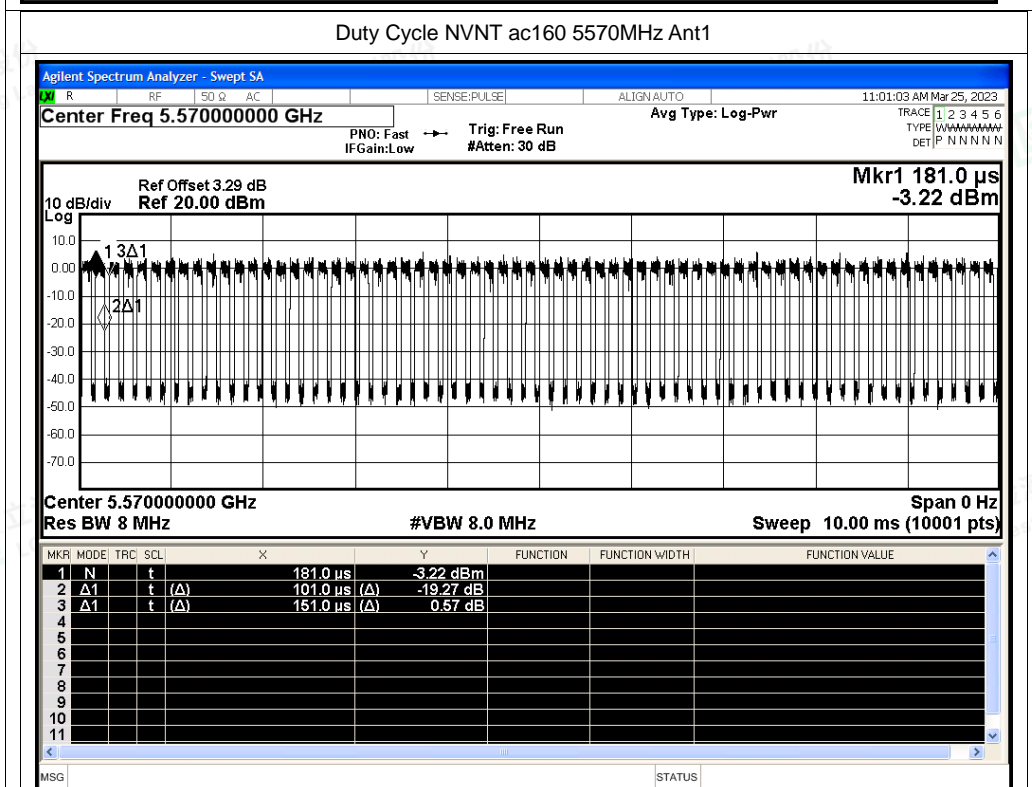


Duty Cycle NVNT ax20 5500MHz Ant1



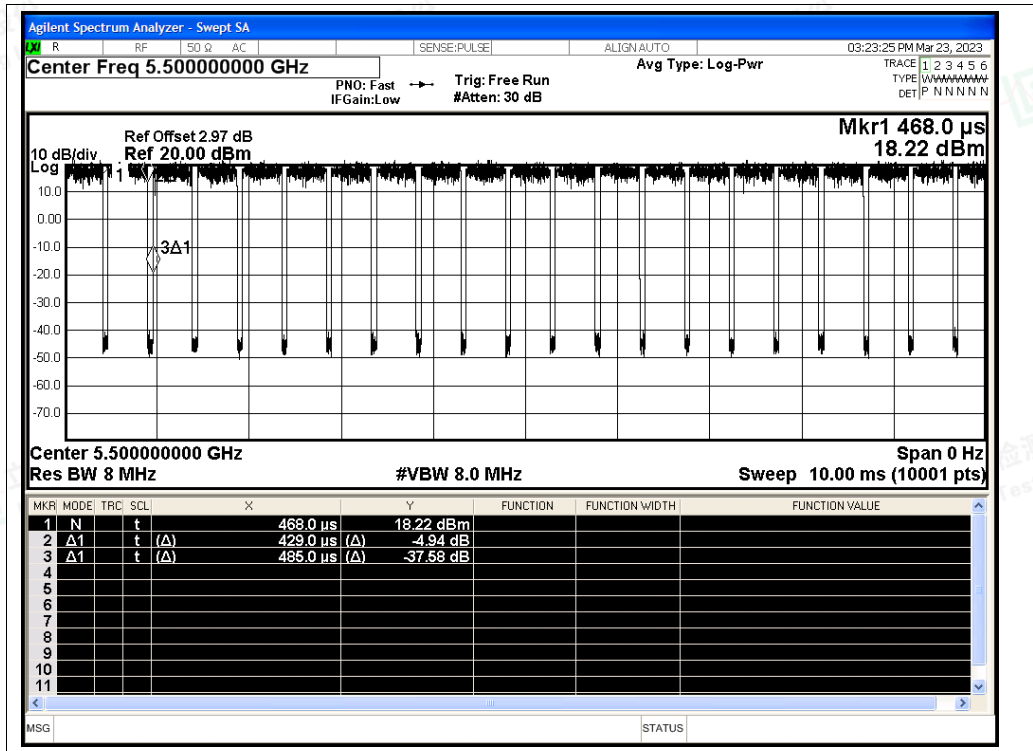




Duty Cycle NVNT ax20 5580MHz Ant1

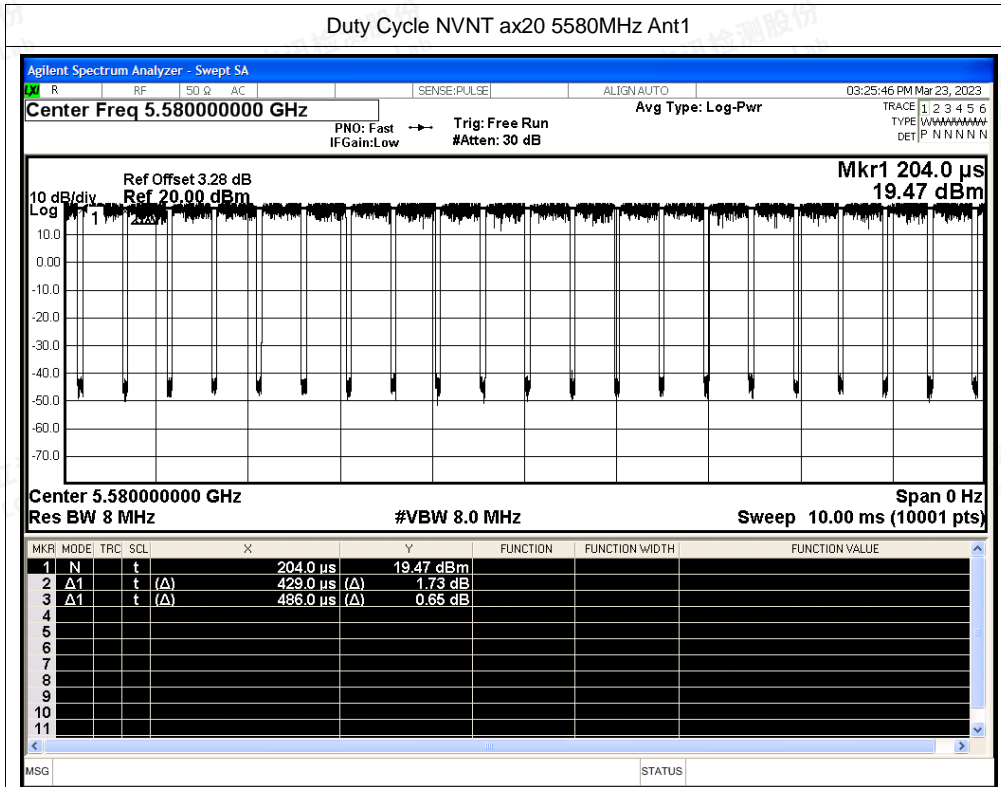


Duty Cycle NVNT ax20 5700MHz Ant1

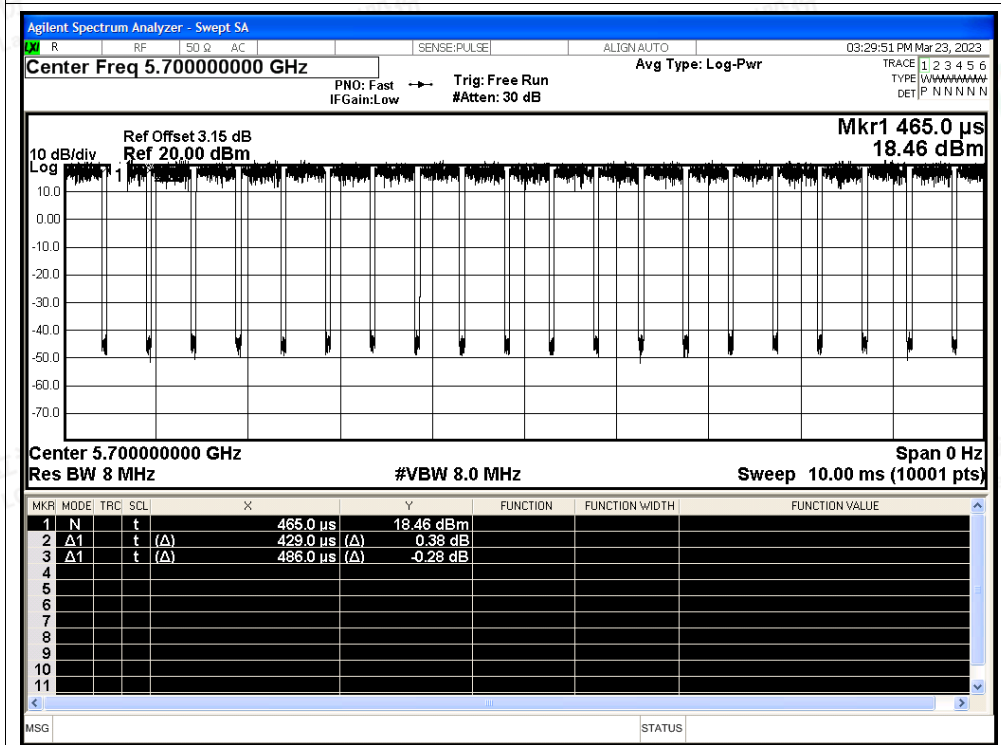






Duty Cycle NVNT ax40 5510MHz Ant1

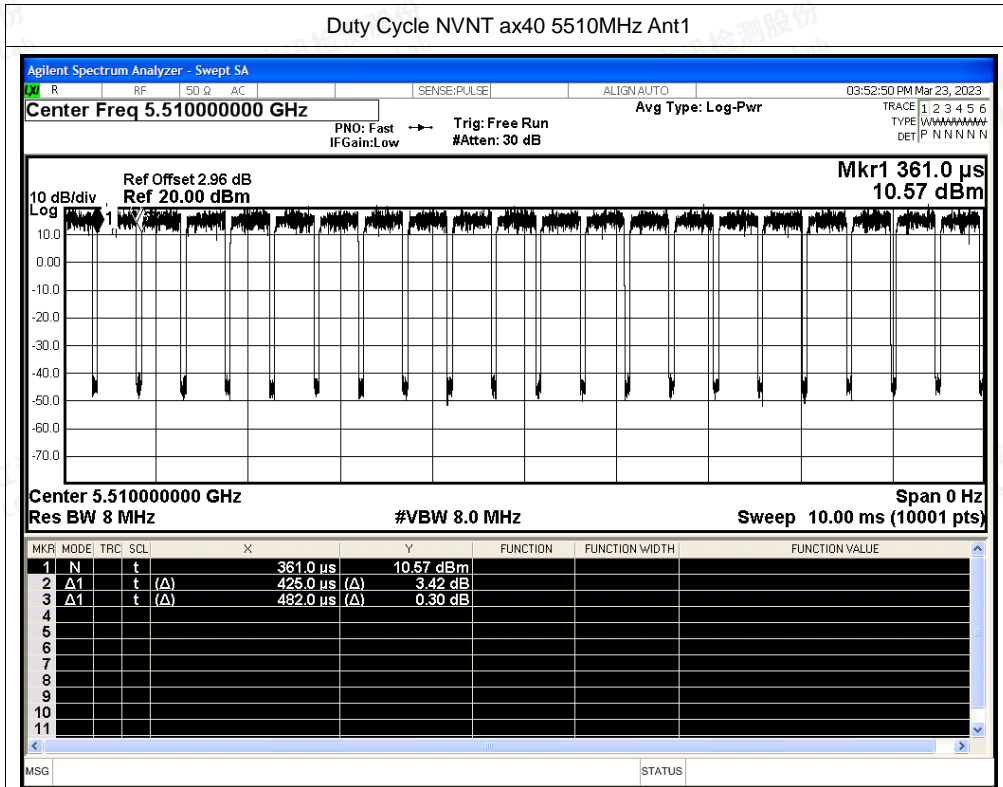


Duty Cycle NVNT ax40 5550MHz Ant1

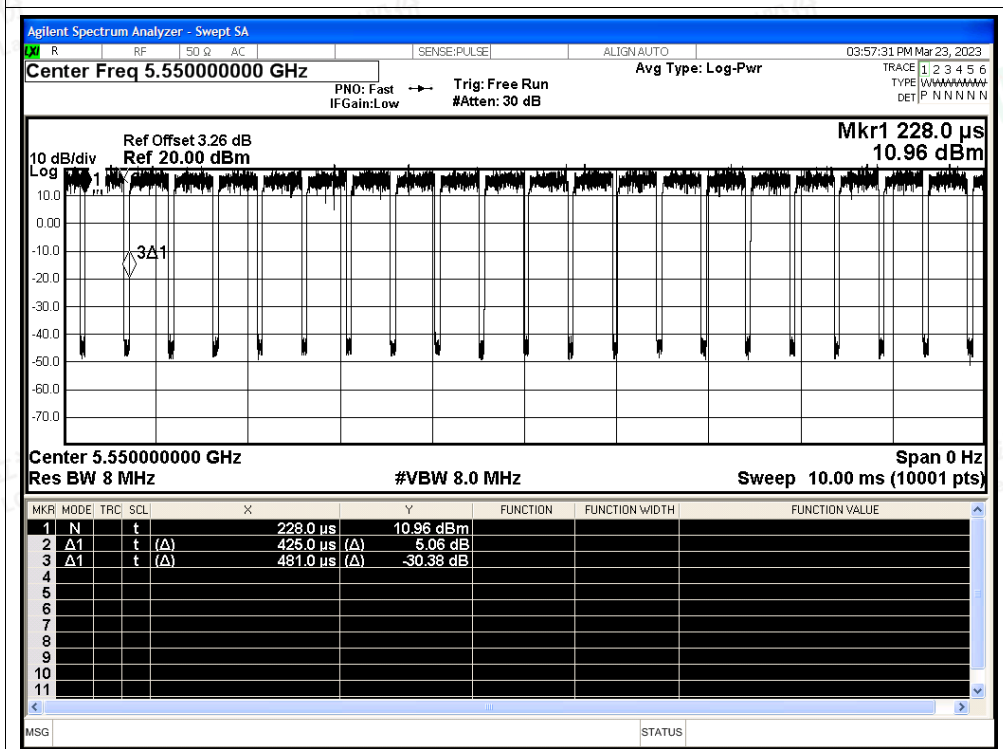




Duty Cycle NVNT ax40 5670MHz Ant1

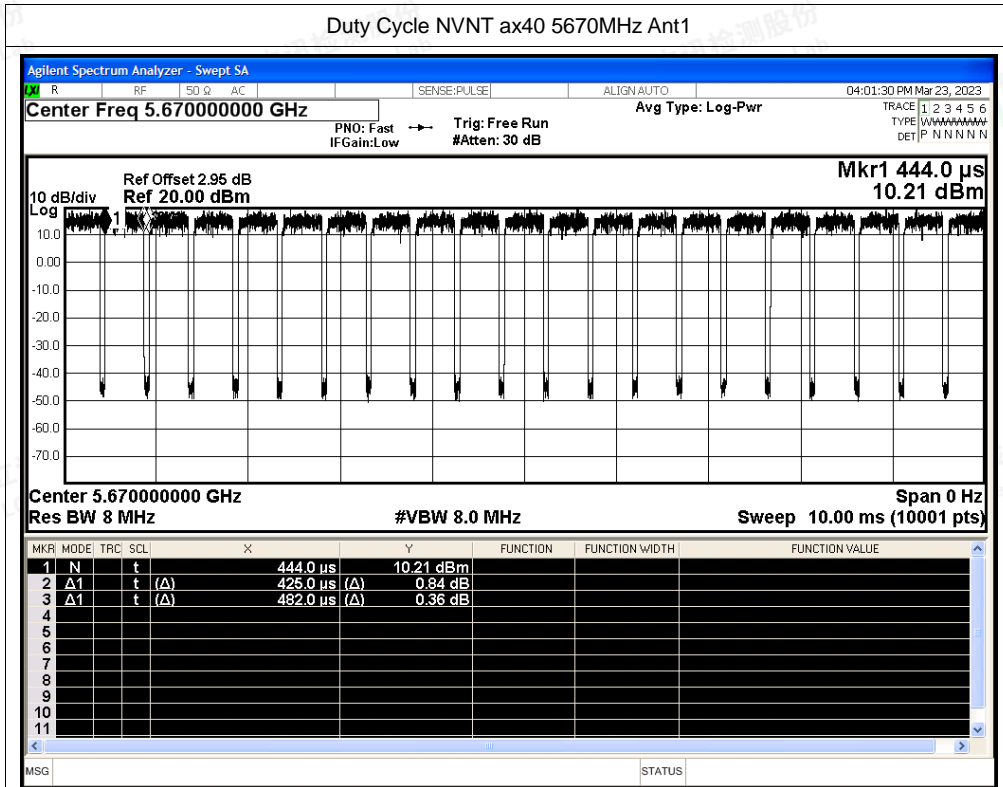


Duty Cycle NVNT ax80 5530MHz Ant1

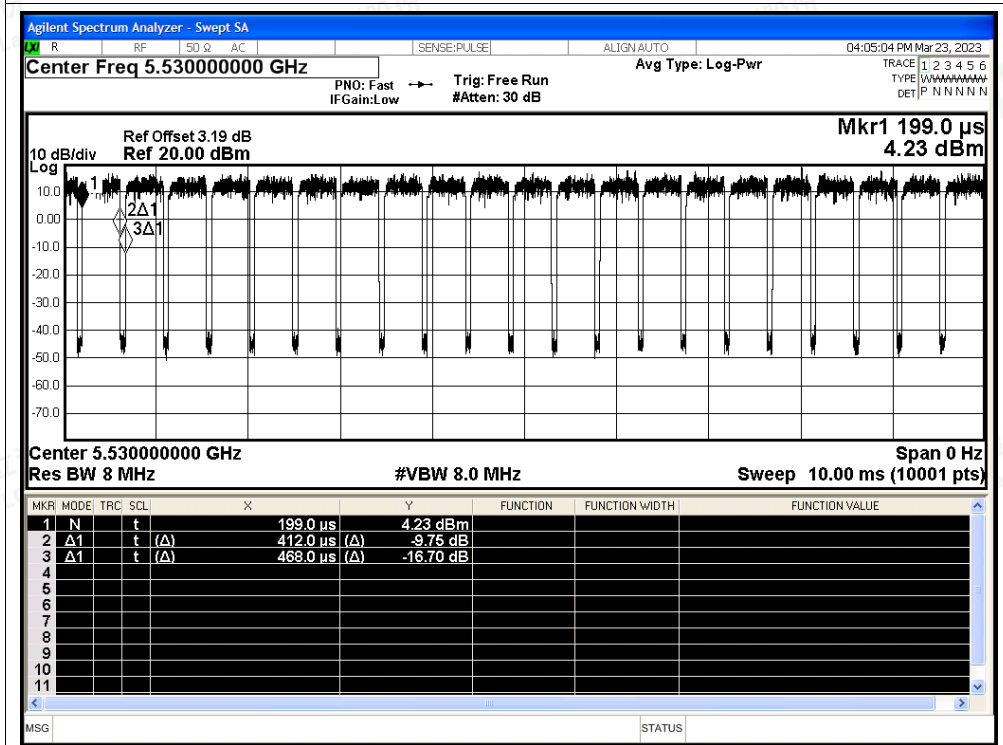




Duty Cycle NVNT ax80 5610MHz Ant1

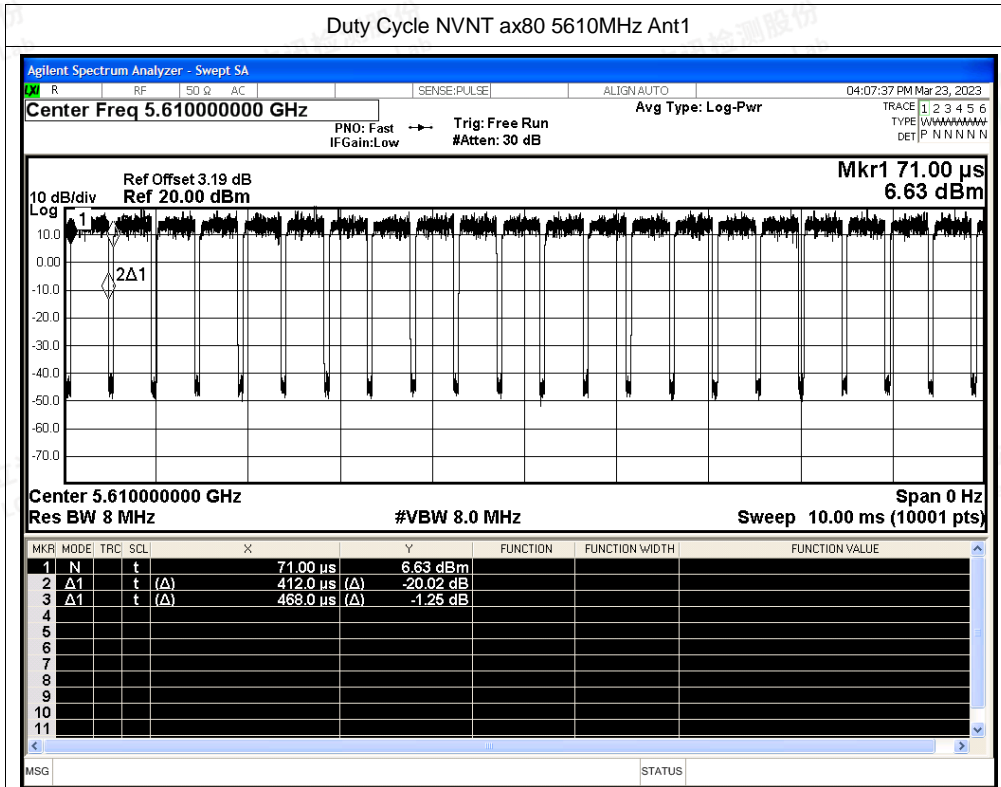

Duty Cycle NVNT ax160 5570MHz Ant1

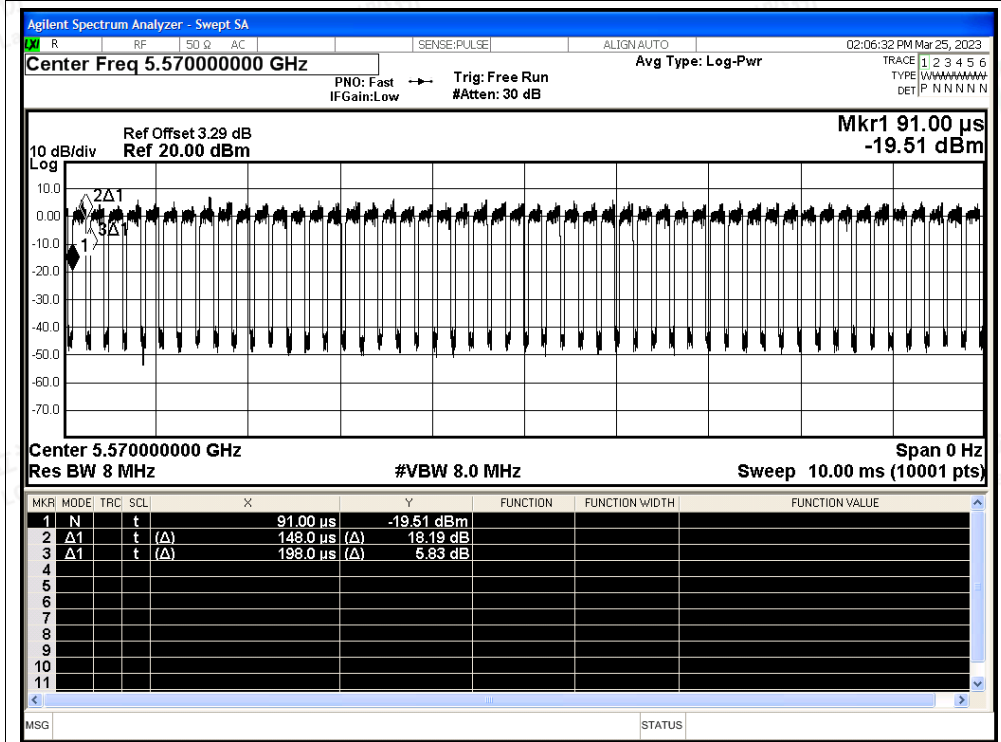




Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5500	Ant2	96.15	0.17	0.72
NVNT	a	5580	Ant2	96.15	0.17	0.72
NVNT	a	5700	Ant2	96.14	0.17	0.72
NVNT	n20	5500	Ant2	95.77	0.19	0.77
NVNT	n20	5580	Ant2	95.77	0.19	0.77
NVNT	n20	5700	Ant2	95.85	0.18	0.77
NVNT	n40	5510	Ant2	92.06	0.36	1.54
NVNT	n40	5550	Ant2	91.91	0.37	1.54
NVNT	n40	5670	Ant2	92.06	0.36	1.54
NVNT	ac20	5500	Ant2	89.55	0.48	2.08
NVNT	ac20	5580	Ant2	89.57	0.48	2.08
NVNT	ac20	5700	Ant2	89.55	0.48	2.08
NVNT	ac40	5510	Ant2	82.33	0.84	3.83
NVNT	ac40	5550	Ant2	82.33	0.84	3.83
NVNT	ac40	5670	Ant2	82.02	0.86	3.85
NVNT	ac80	5530	Ant2	72.68	1.39	6.71
NVNT	ac80	5610	Ant2	72.68	1.39	6.71
NVNT	ac160	5570	Ant2	66.67	1.76	10
NVNT	ax20	5500	Ant2	89.39	0.49	2.08
NVNT	ax20	5580	Ant2	89.55	0.48	2.08
NVNT	ax20	5700	Ant2	89.39	0.49	2.08
NVNT	ax40	5510	Ant2	82.28	0.85	3.85
NVNT	ax40	5550	Ant2	82.33	0.84	3.83
NVNT	ax40	5670	Ant2	82.33	0.84	3.83
NVNT	ax80	5530	Ant2	87.85	0.56	2.43
NVNT	ax80	5610	Ant2	88.03	0.55	2.43
NVNT	ax160	5570	Ant2	74.49	1.28	6.78






Test Graphs

Duty Cycle NVNT a 5500MHz Ant2

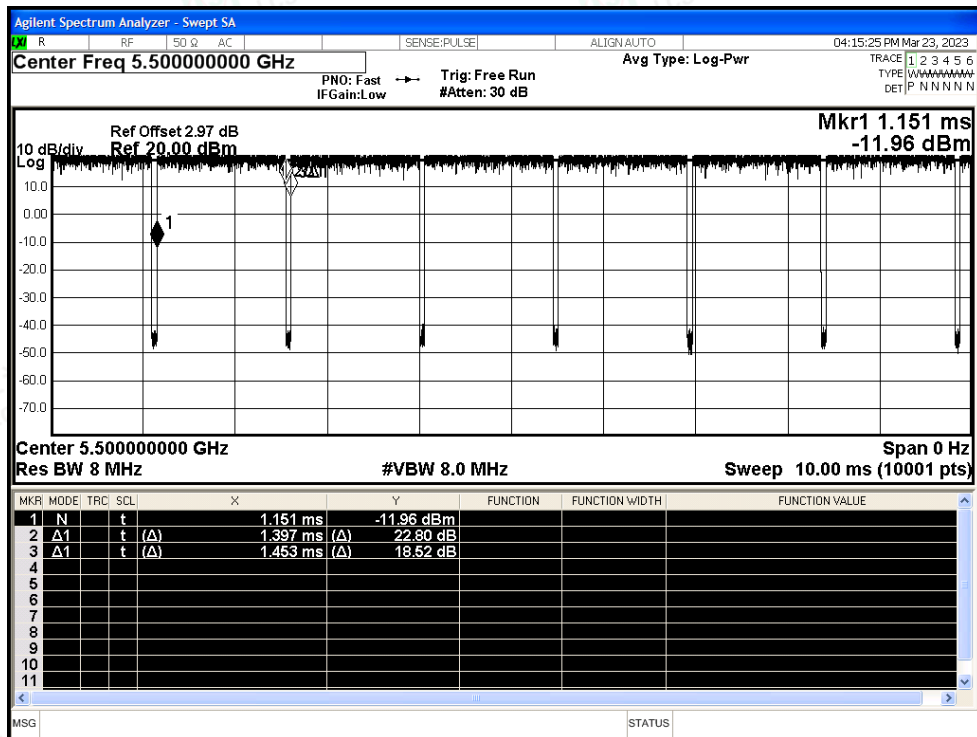


Duty Cycle NVNT a 5580MHz Ant2

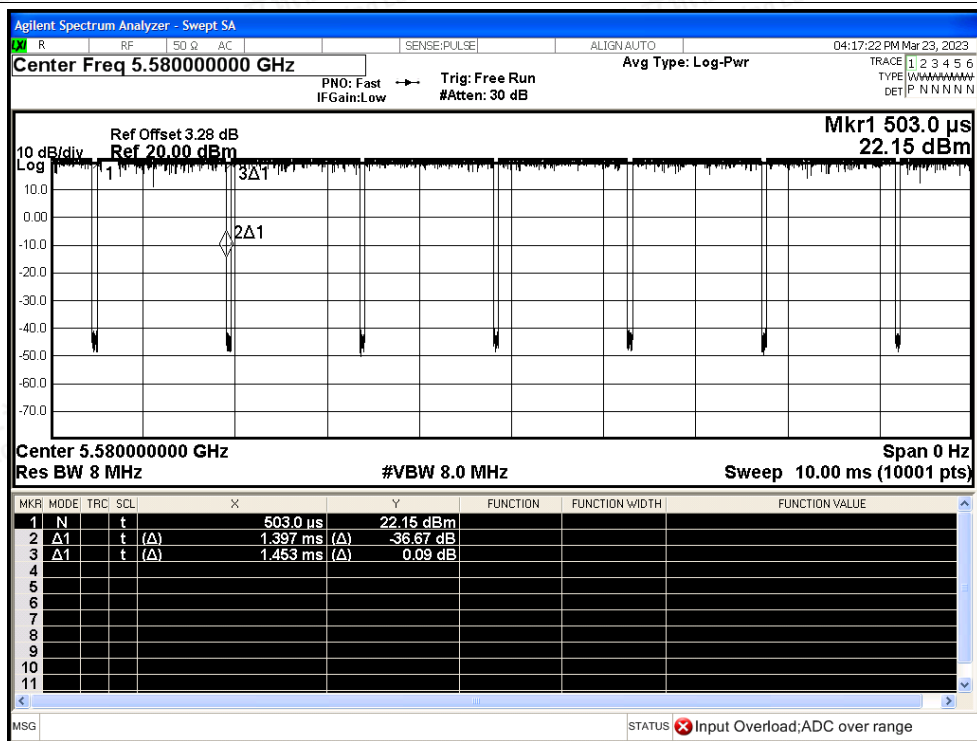








Duty Cycle NVNT a 5700MHz Ant2

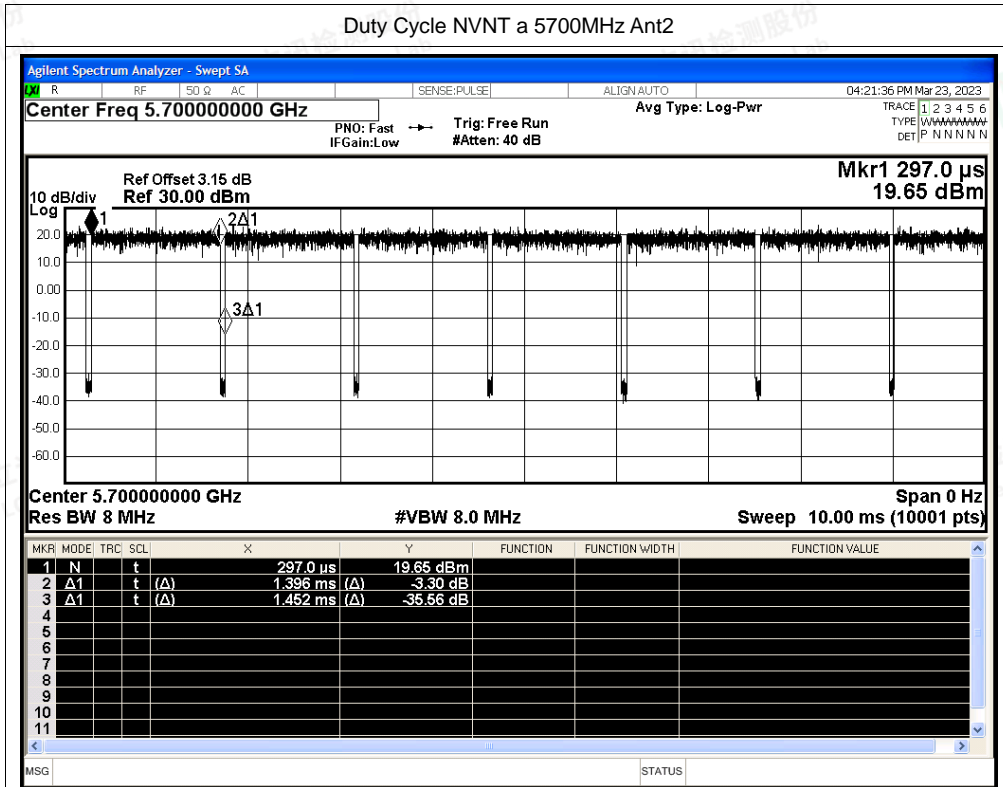

Duty Cycle NVNT n20 5500MHz Ant2

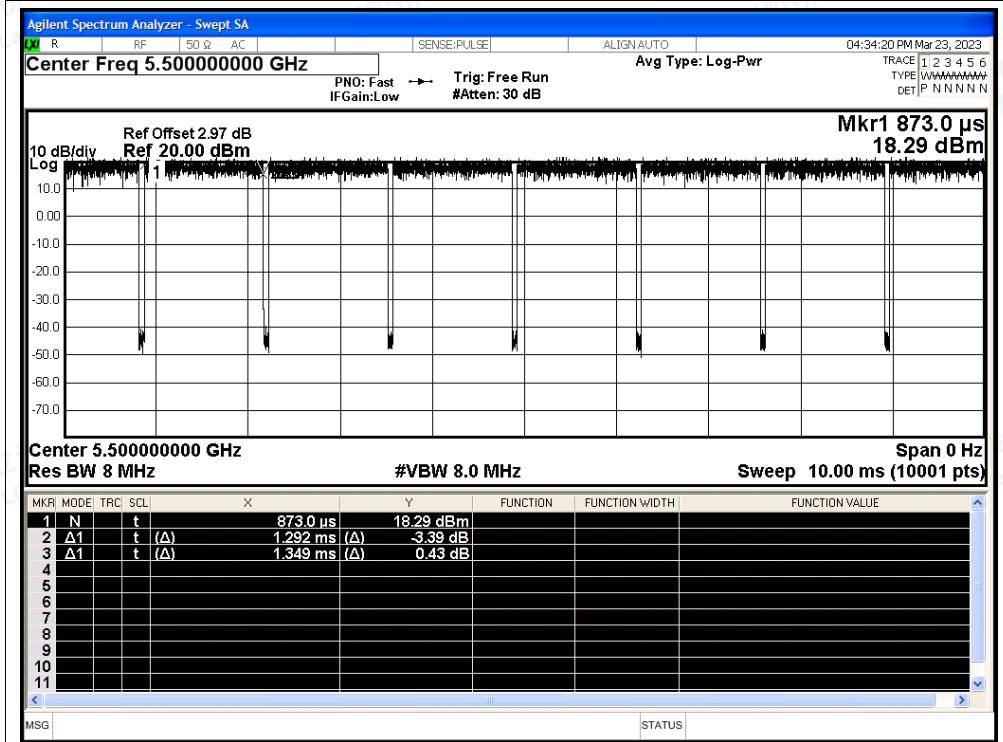

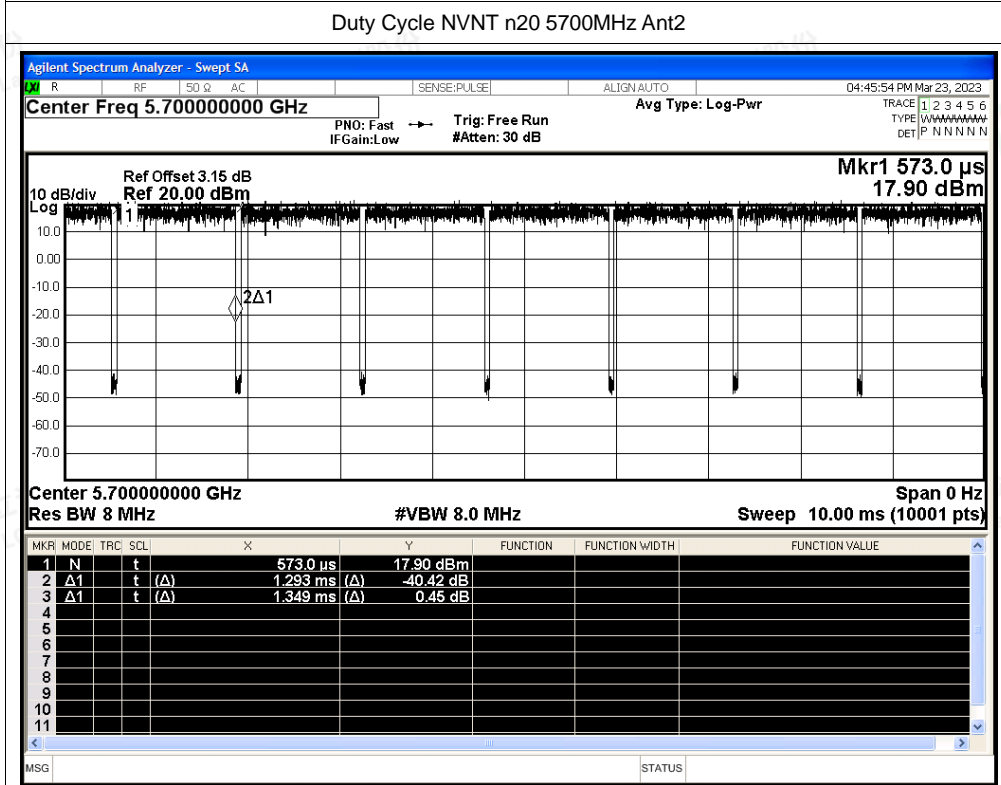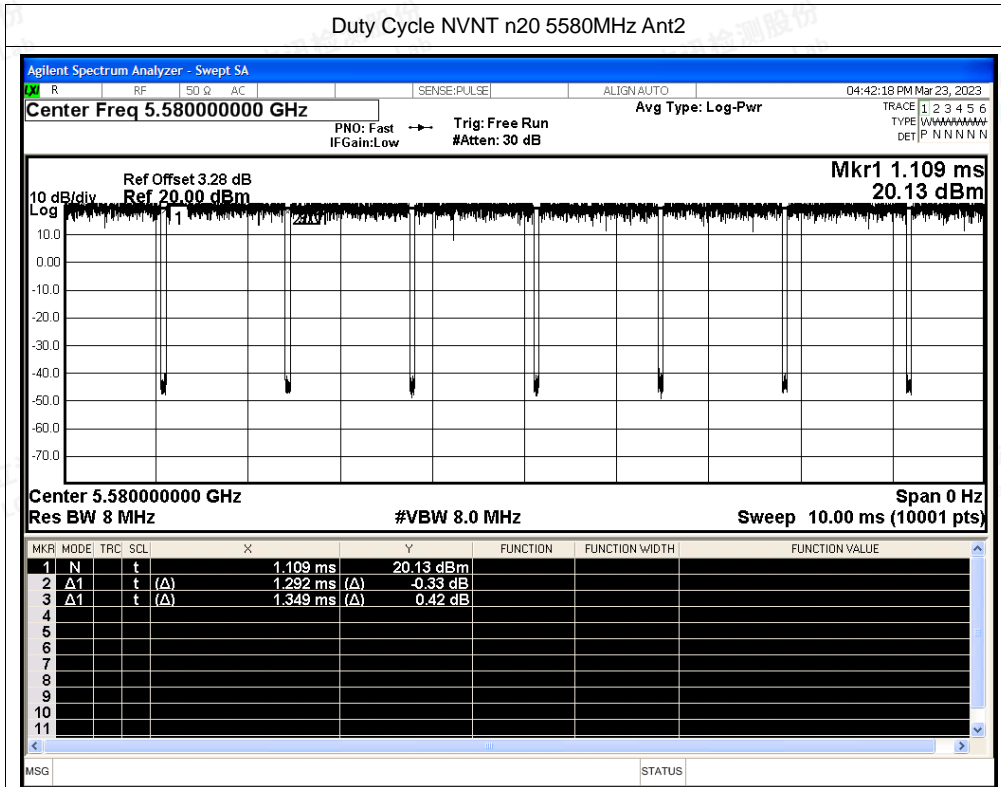


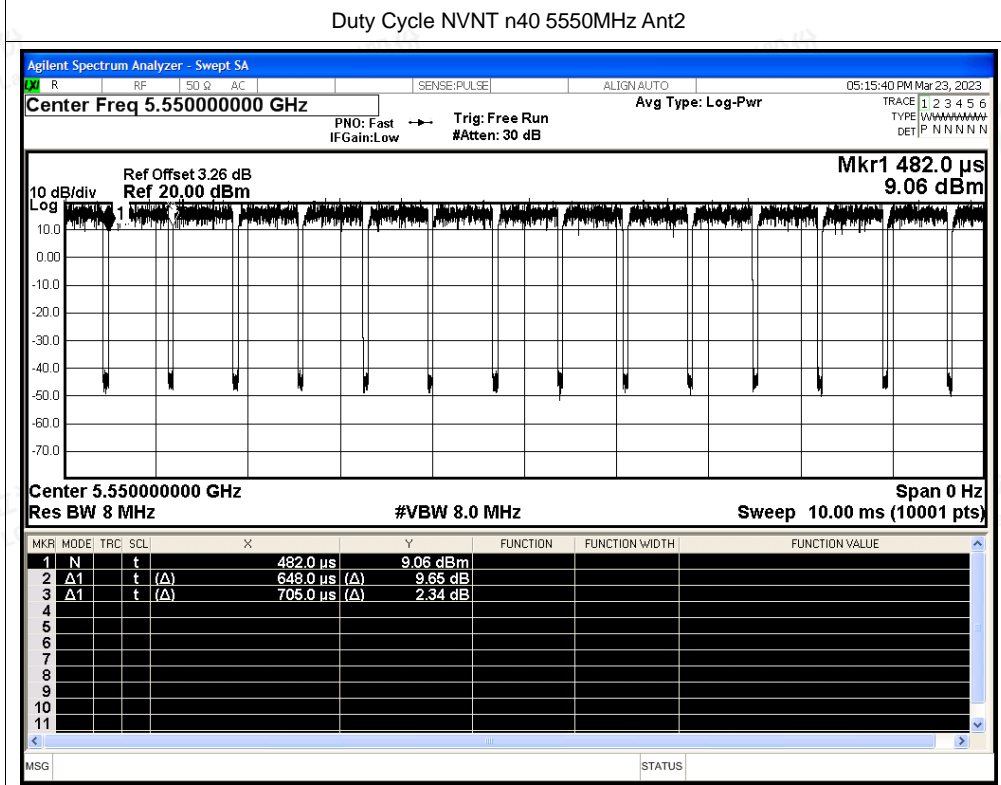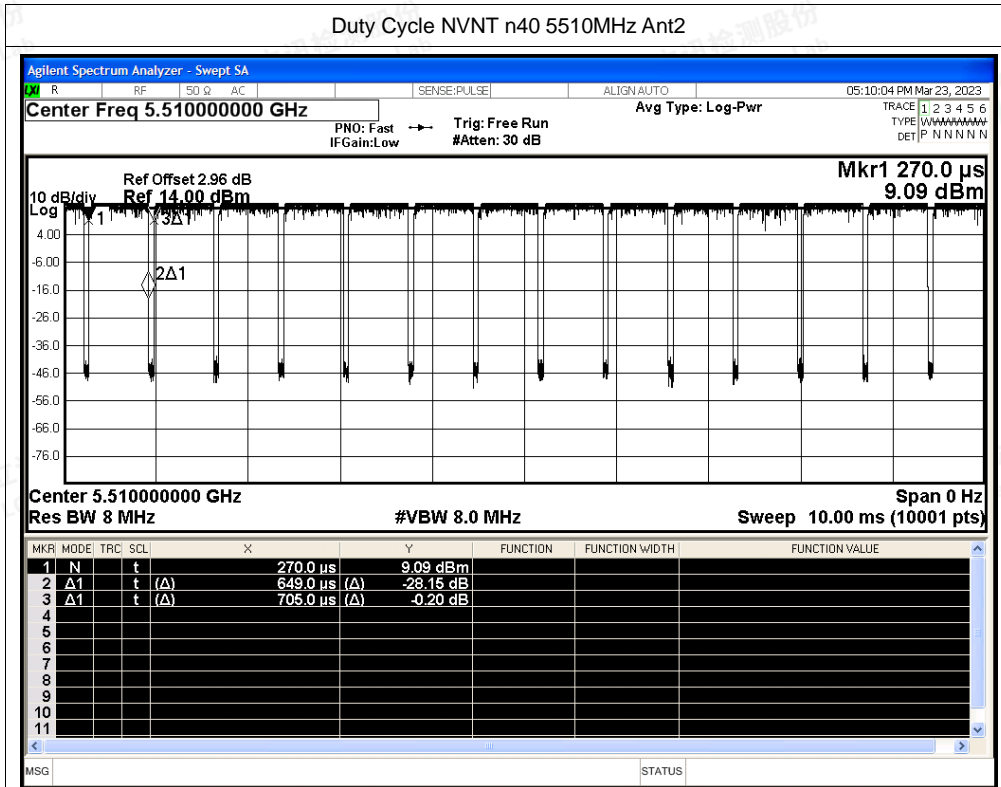






Duty Cycle NVNT n40 5670MHz Ant2

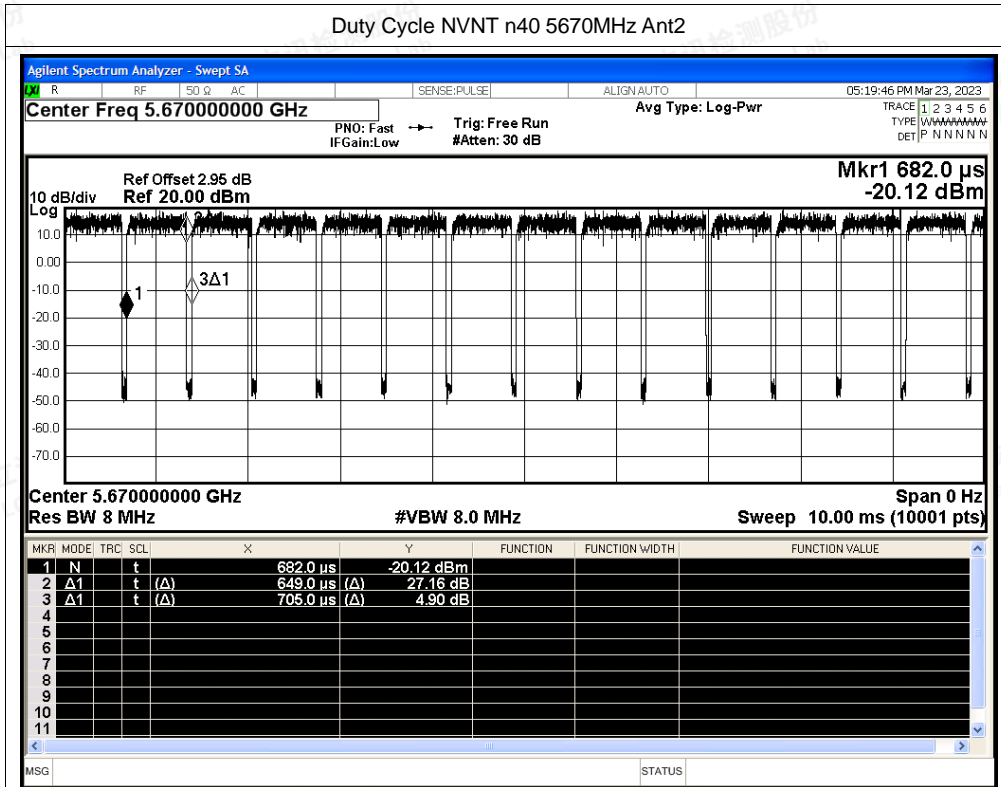


Duty Cycle NVNT ac20 5500MHz Ant2

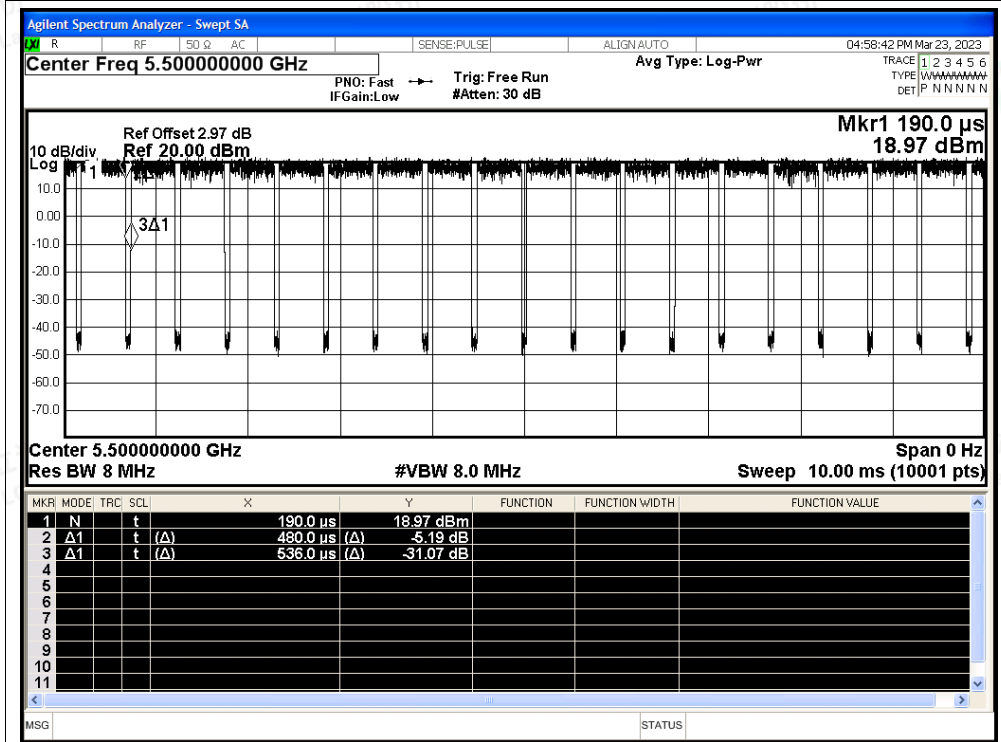




Duty Cycle NVNT ac20 5580MHz Ant2

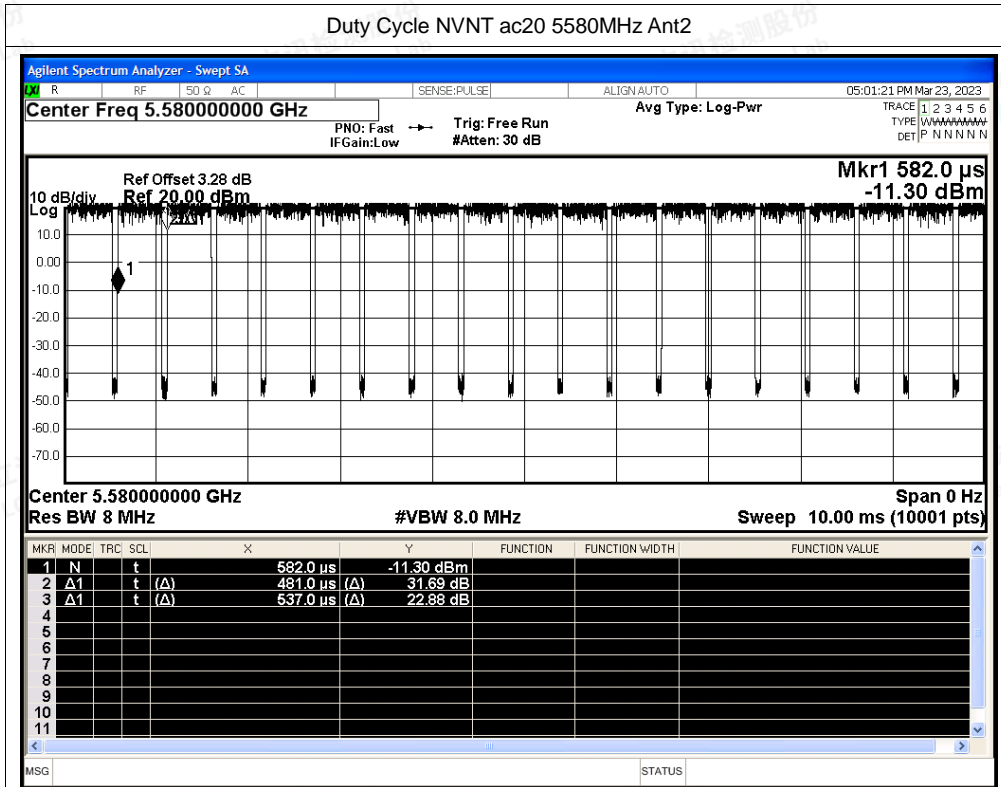


Duty Cycle NVNT ac20 5700MHz Ant2

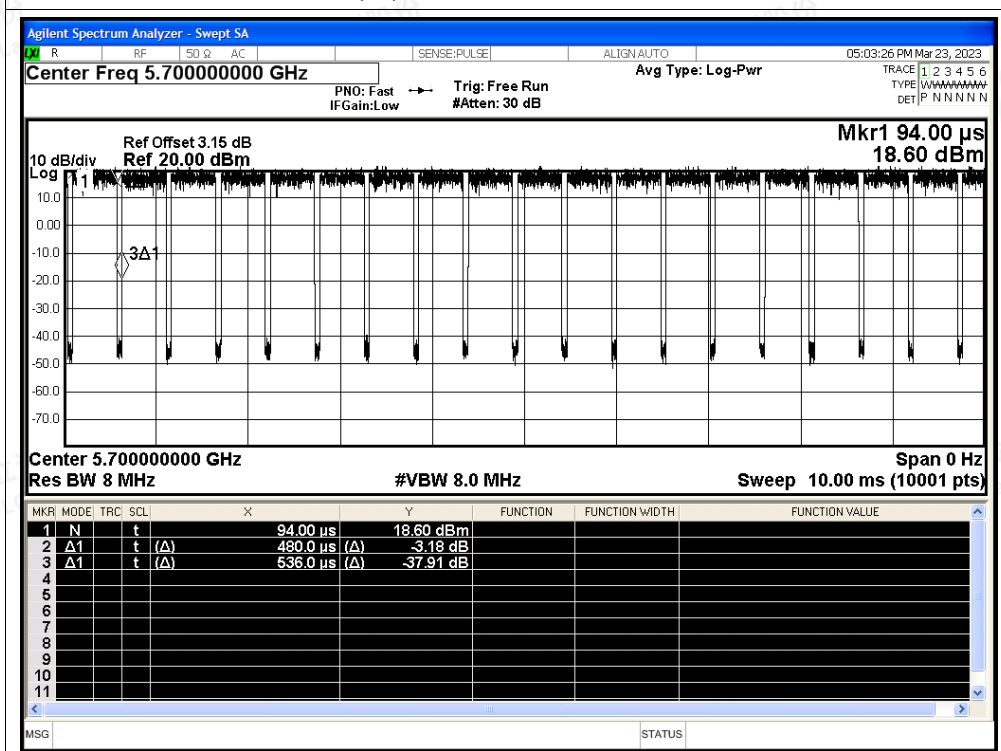




Duty Cycle NVNT ac40 5510MHz Ant2

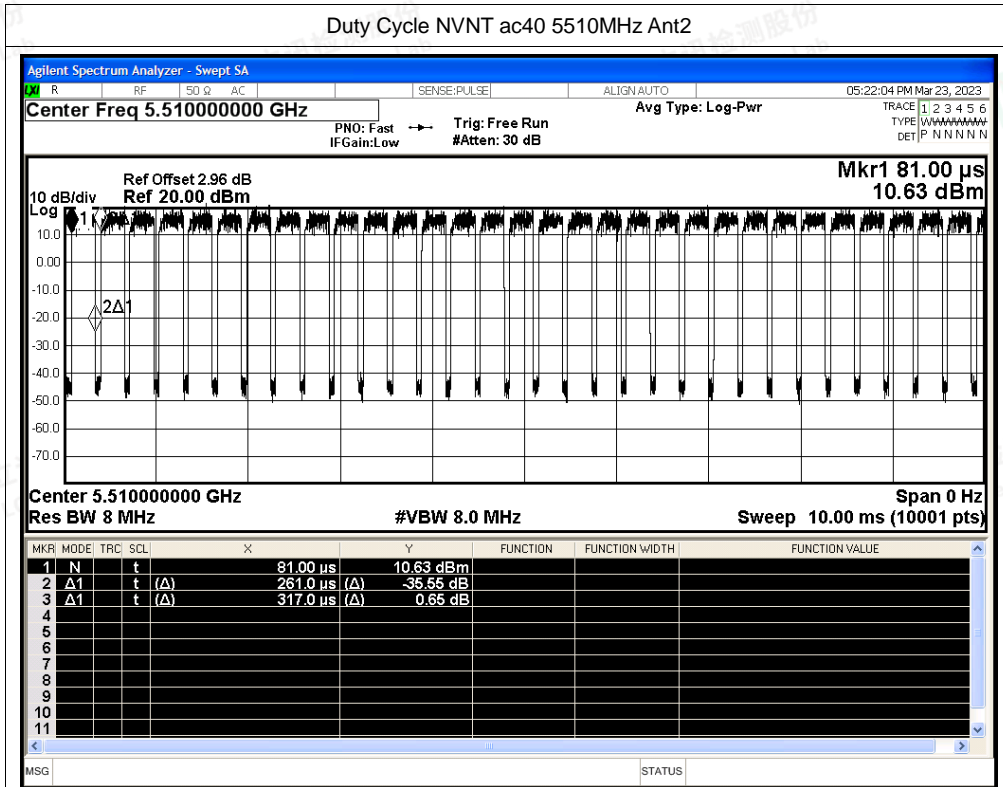


Duty Cycle NVNT ac40 5550MHz Ant2

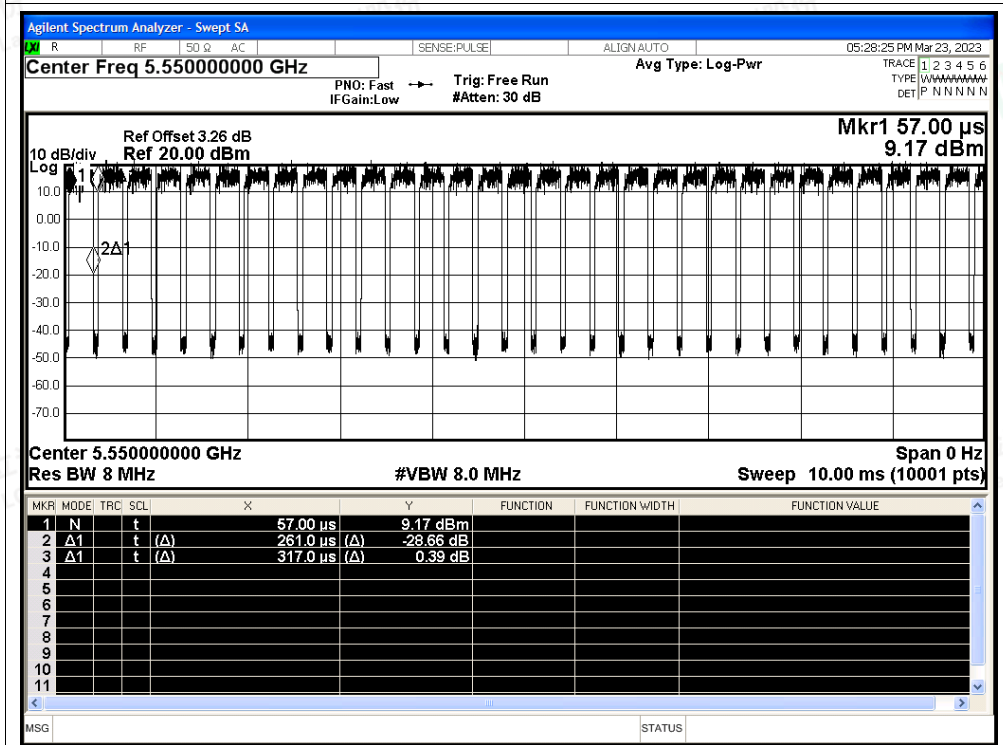




Duty Cycle NVNT ac40 5670MHz Ant2

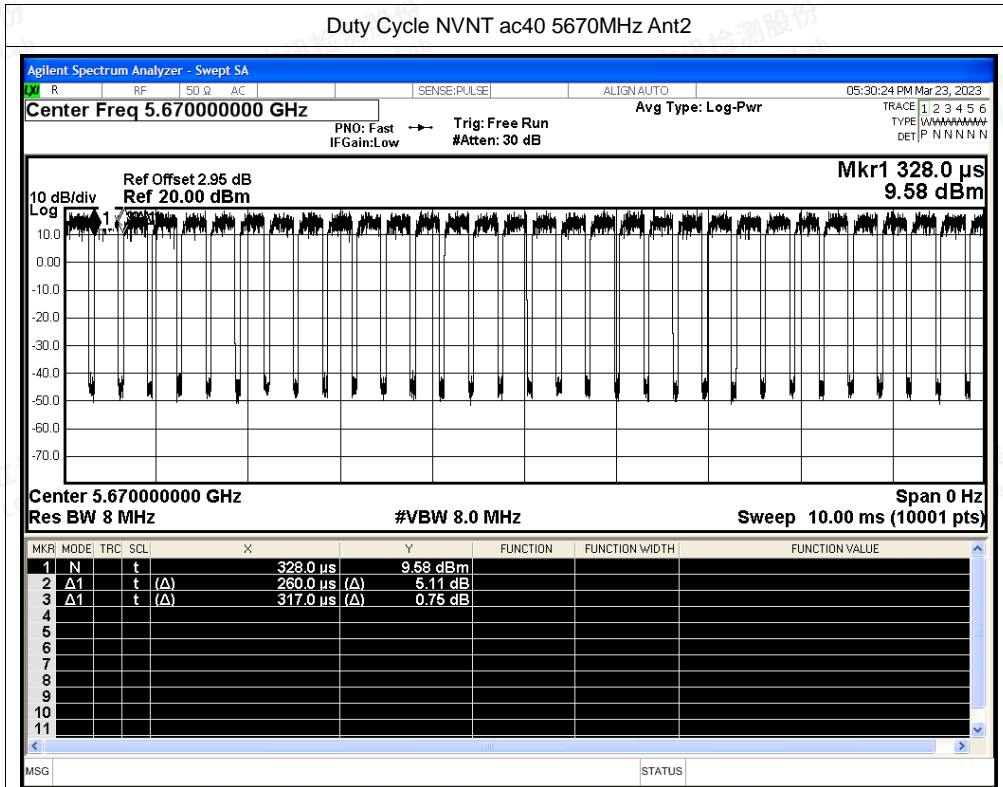


Duty Cycle NVNT ac80 5530MHz Ant2

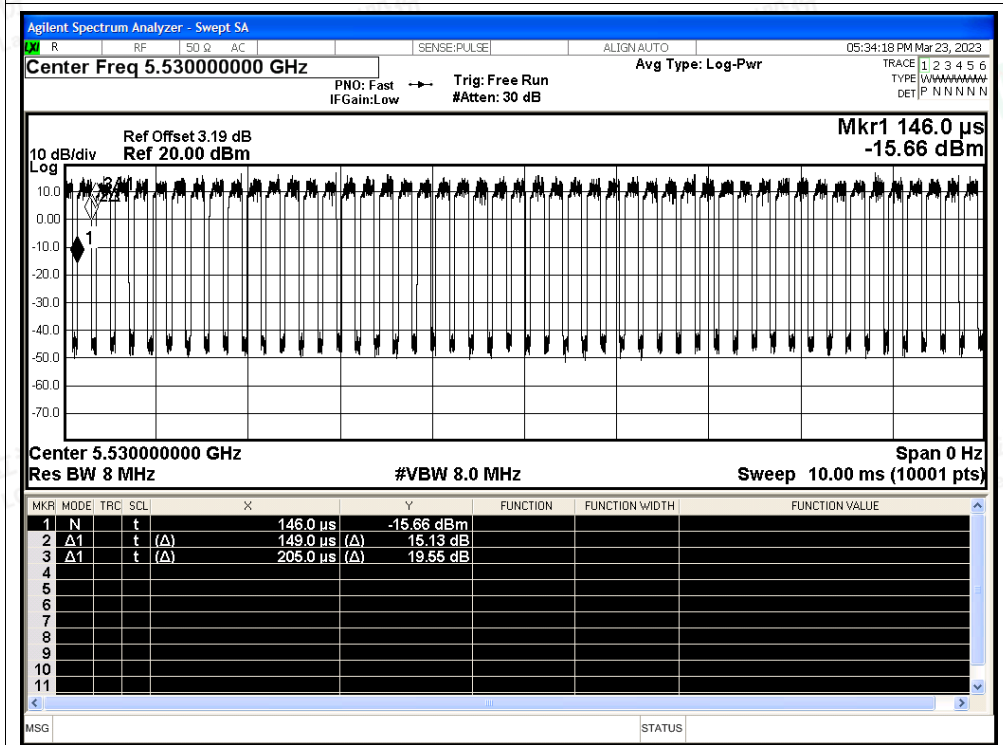




Duty Cycle NVNT ac80 5610MHz Ant2

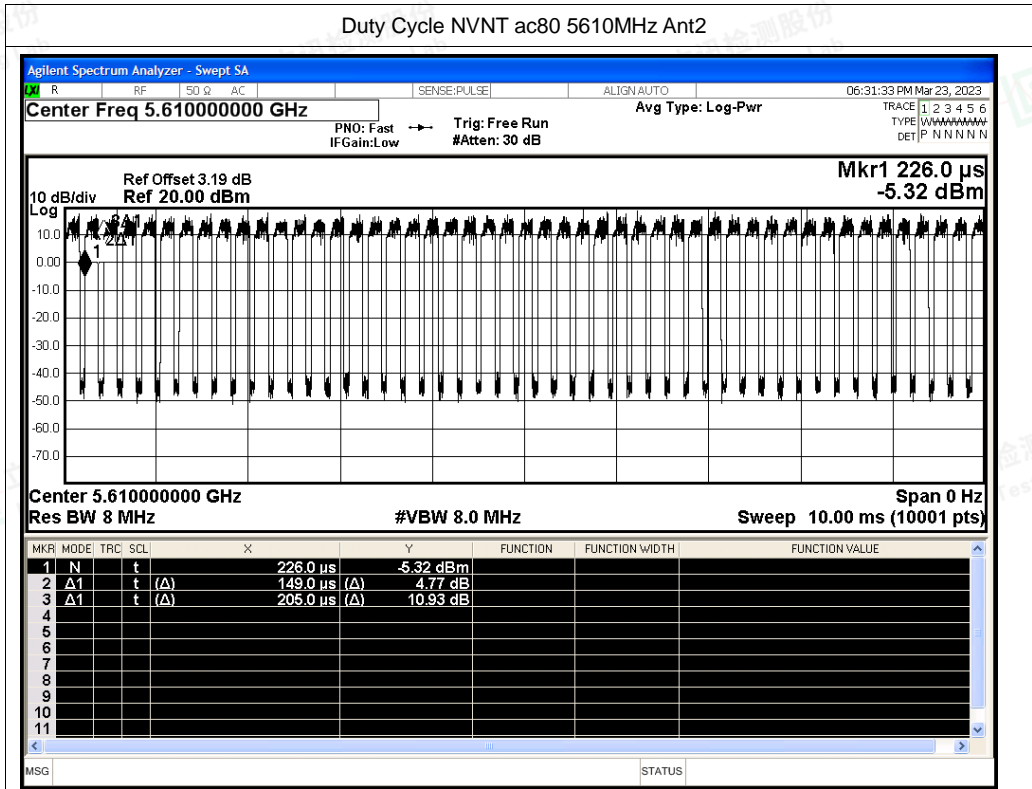


Duty Cycle NVNT ac160 5570MHz Ant2

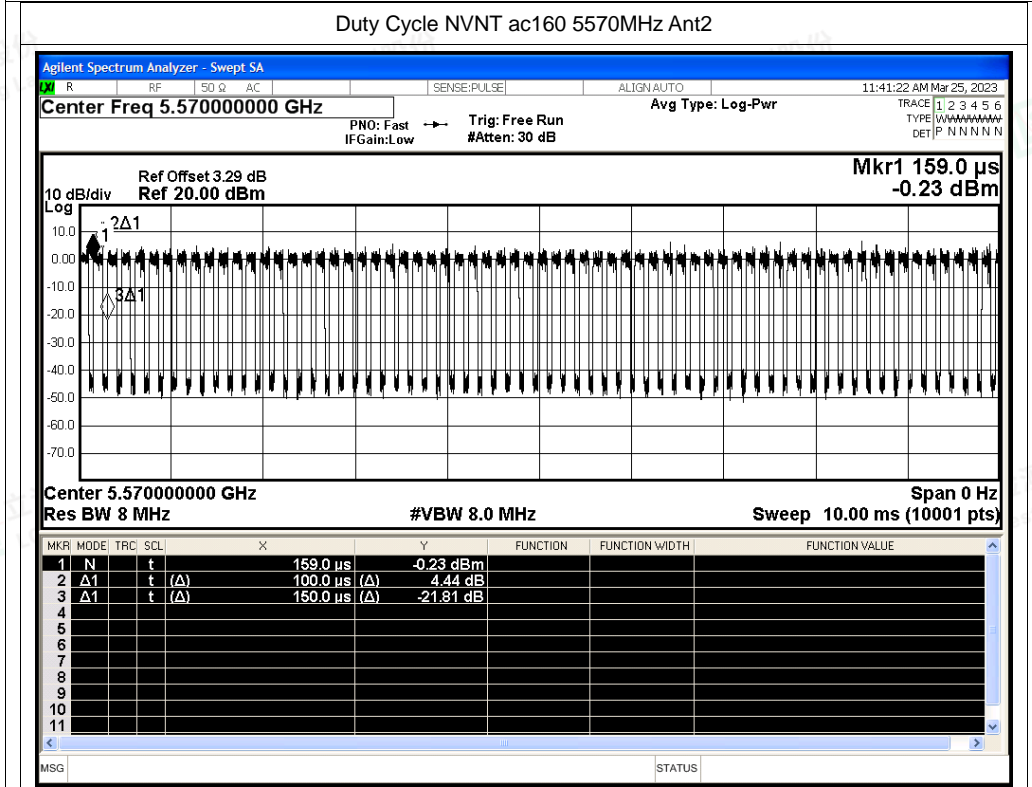


Duty Cycle NVNT ax20 5500MHz Ant2



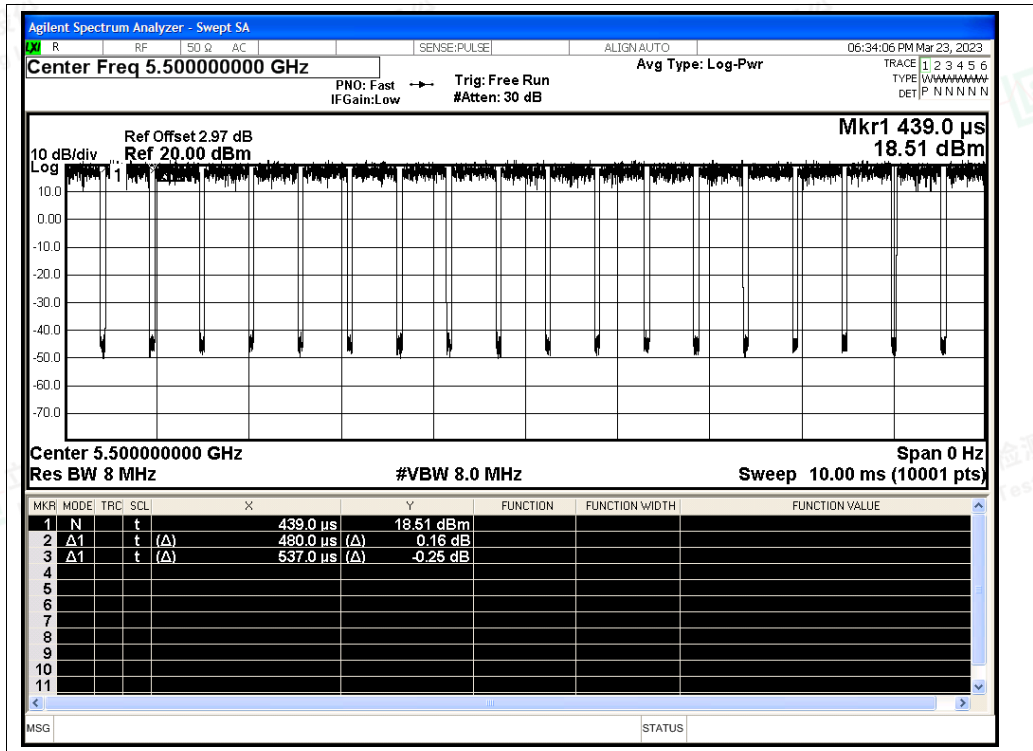




Duty Cycle NVNT ax20 5580MHz Ant2

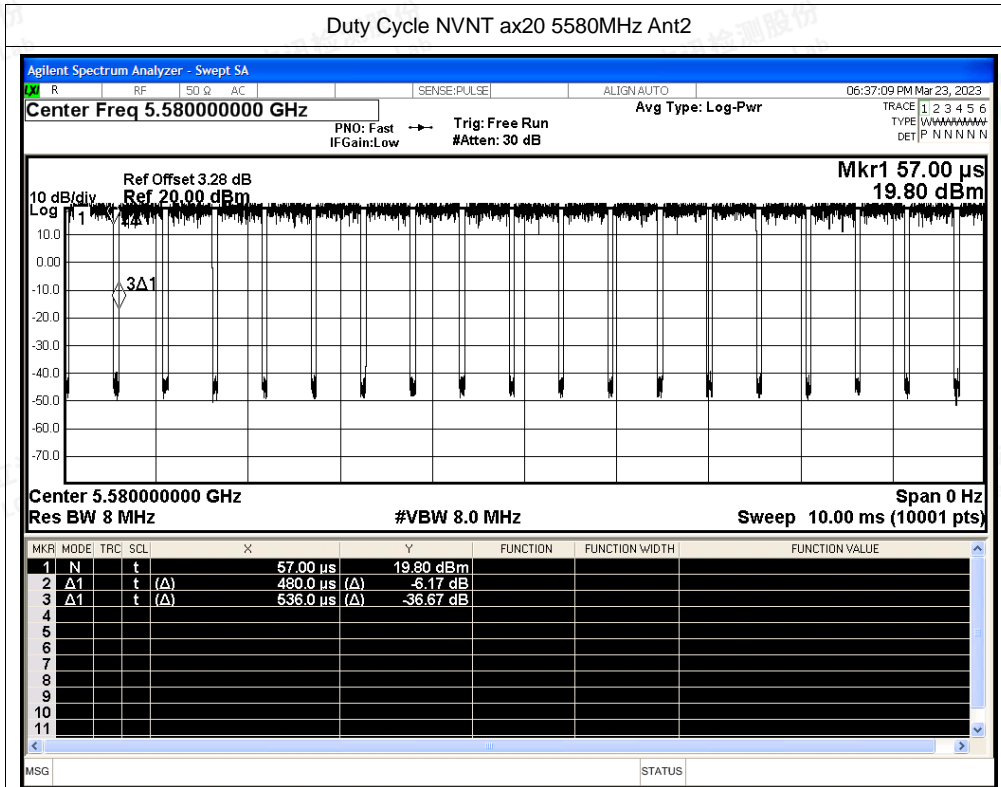


Duty Cycle NVNT ax20 5700MHz Ant2

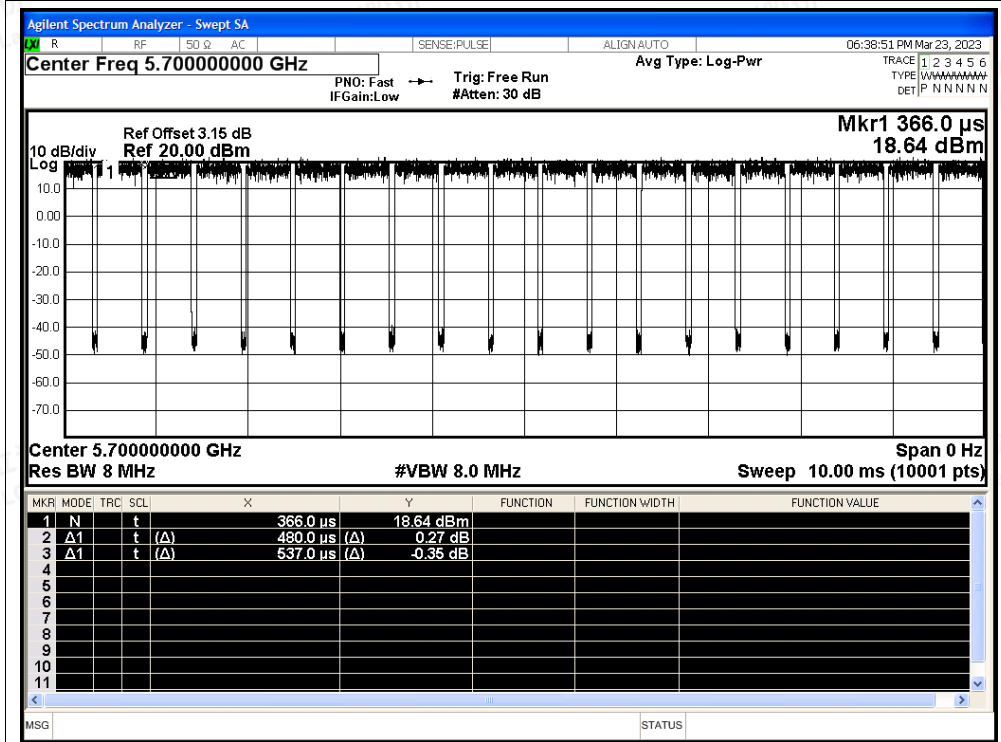




Duty Cycle NVNT ax40 5510MHz Ant2

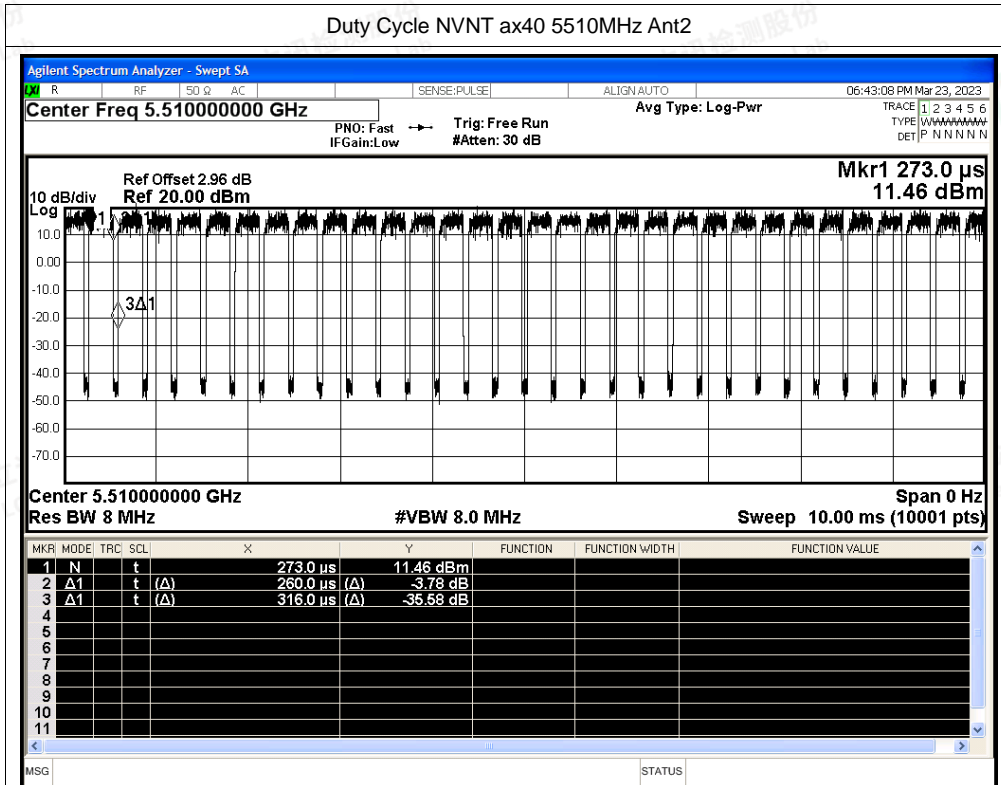


Duty Cycle NVNT ax40 5550MHz Ant2

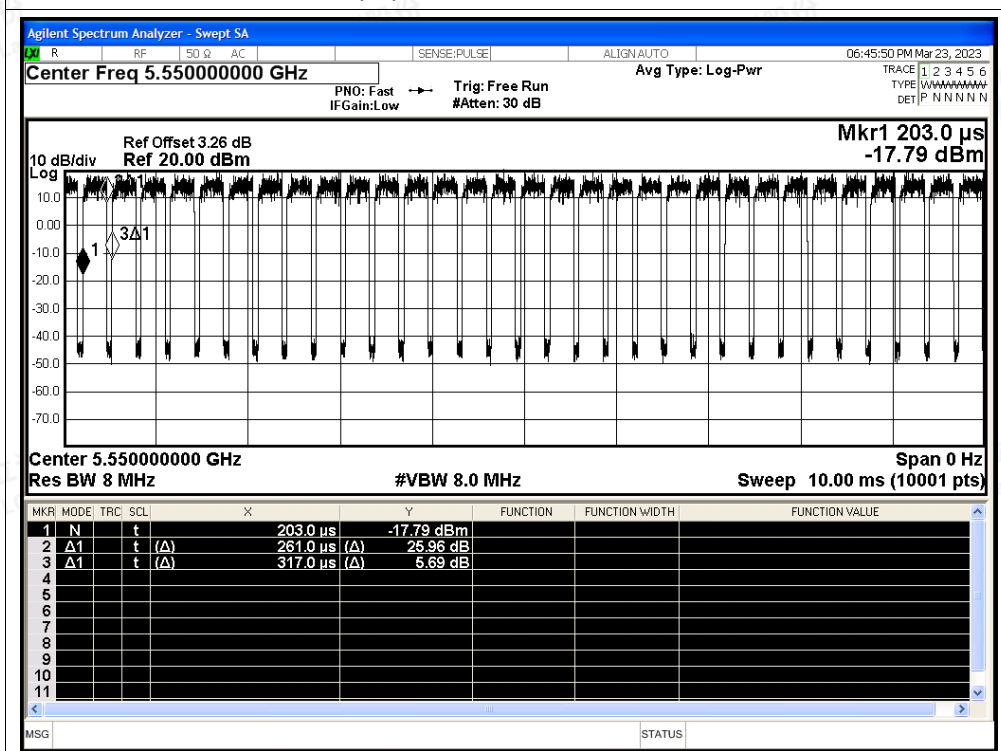






Duty Cycle NVNT ax40 5670MHz Ant2

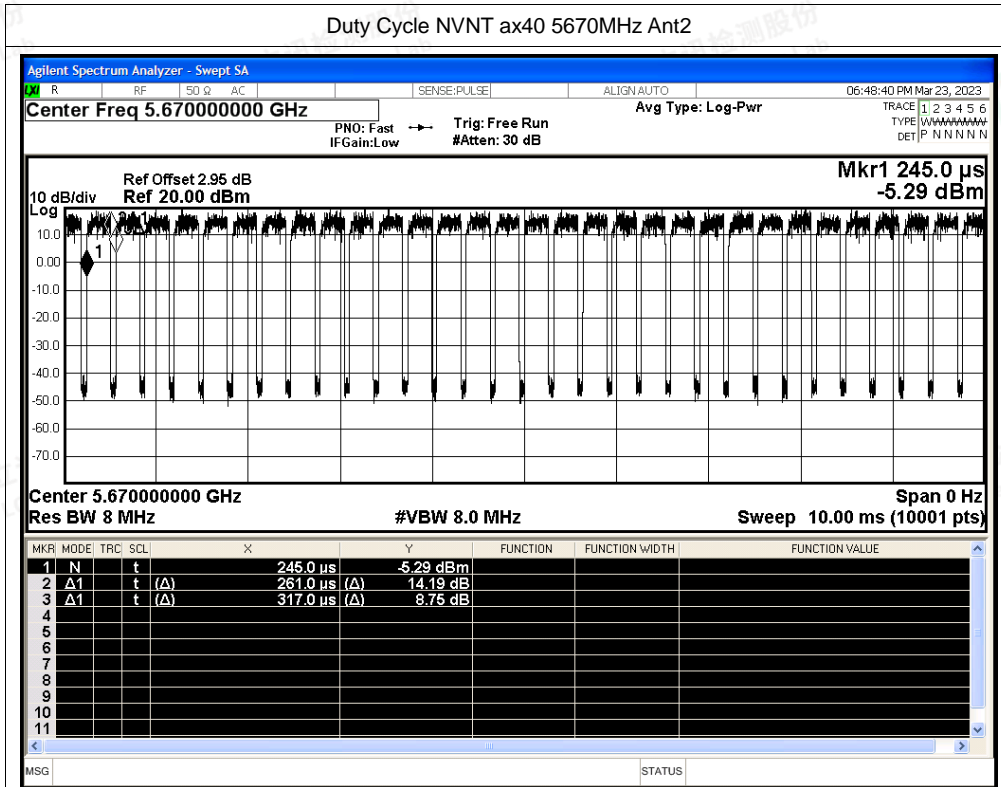


Duty Cycle NVNT ax80 5530MHz Ant2

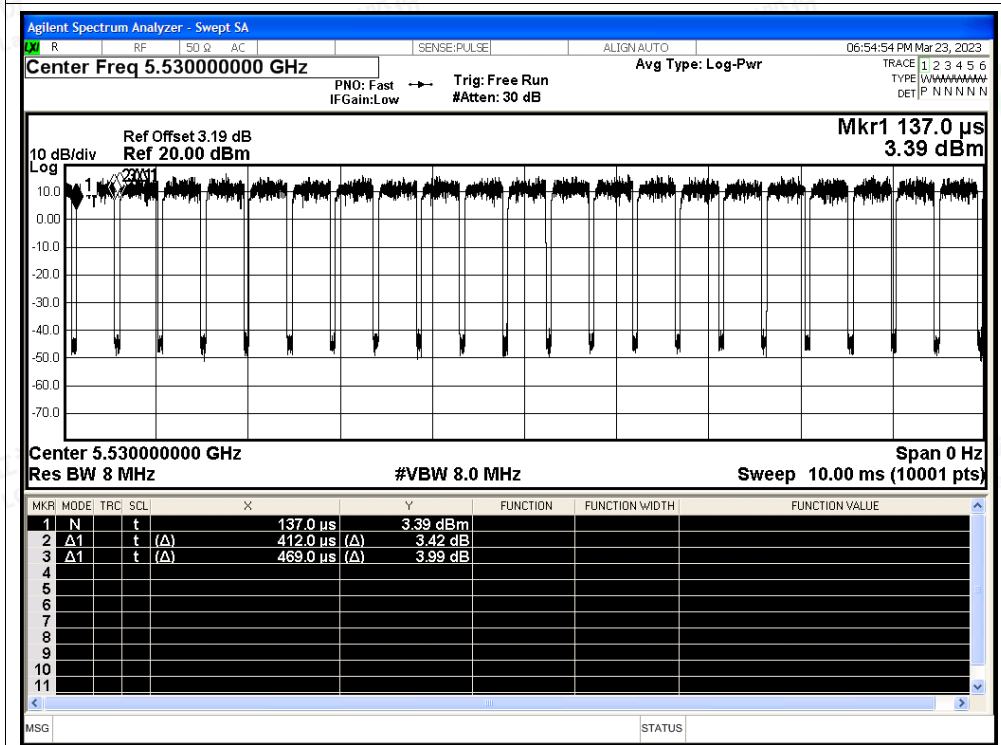



Duty Cycle NVNT ax80 5610MHz Ant2

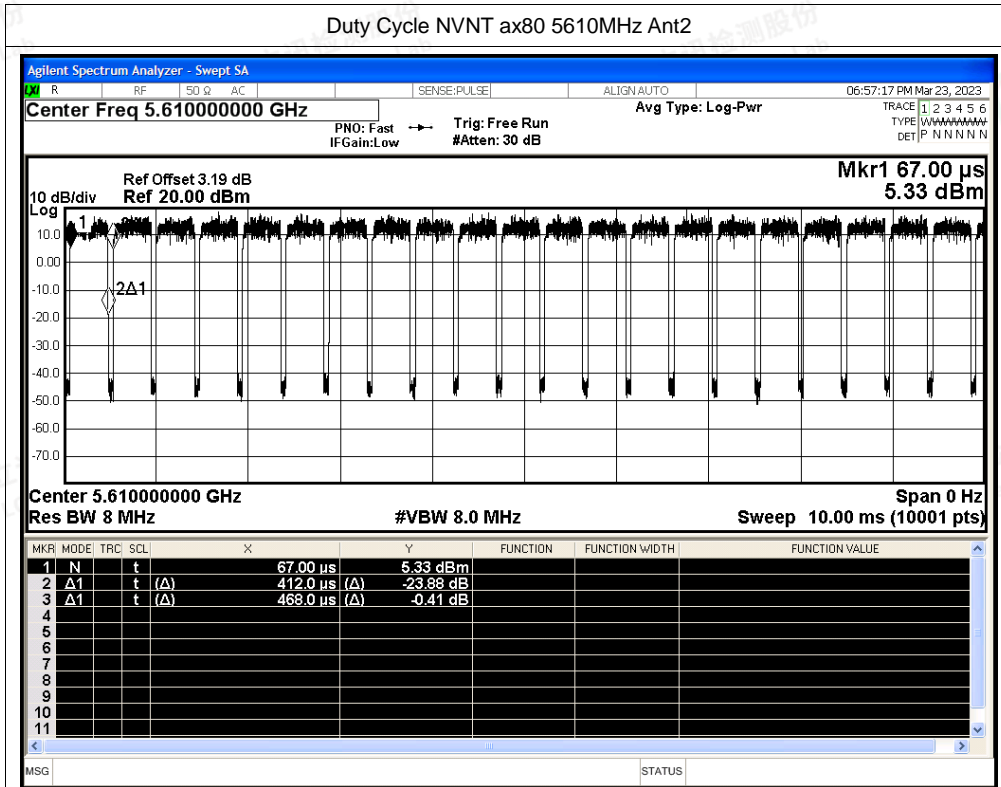

Duty Cycle NVNT ax160 5570MHz Ant2

