



**Wireless module/WiFi product
VM300/VM5G/VBG1200**

Quick Setting Guide

Declaration

Copyright © 2019 Shenzhen HouTian Network Communication Technology Co.,Ltd

All rights reserved, with retained ownership Without Shenzhen HouTian Network communication Technology Co.,Ltd written authorization, any company or personal can't copy, writer or translation part or all contents. Can't do commodity distribution for any commercial or profitable purposes by any ways(electricity, mechanical, photoprint, record or other methods).

VONETS is the registered trademark of Shenzhen HouTian Network Communication Technology Co.,Ltd. The other all trademarks or registered trademarks mentioned in this documents are belong to the individual owners. The product specifications and information technology mentioned in this manual are just for reference, if any updates, without other notice. Except for special agreements, this manual is just for user guidance, any statements, information and so on in this manual can't constitute the warranty of any forms.

Form 1

Transmission Distance Parameters Form			
Model	No-barrier point to point Transmission Distance	Transmission Rate (Mbps)	Band
VM300	80m--100m	300	
VM5G/VBG1200	600m--700m	300+900	5G

Form2

Power Supply Parameters List			
Model	Power Supply Voltage	Input Power	Typical Power Supply
VM300	DC5--15V	≥5W	5V/1A
VM5G/VBG1200	DC5--15V	≥10W	5V/2A

[在此处键入]

Contents

Chapter 1 Application Mode.....	1
1.1 Bridge + Repeater Mode.....	1
1.2 Router Mode.....	2
Chapter 2 Bridge+Repeater Mode Configuration Instruction.....	3
2.1 Device Connection.....	3
2.2 Bridge+Repeater Application Configuration.....	4
2.3 AP Application Configuration.....	7
Chapter 3 Router Mode Configuration Instruction.....	9
3.1 Change device mode.....	9
3.2 WAN port setting.....	11
3.2.1 WAN/LAN exchange.....	11
3.2.2 WAN Port connection method.....	12
3.2.3 WAN port wired connect network——DHCP.....	12
3.2.4 WAN port wired connect network——PPPoE.....	13
3.2.5 WAN port wireless connect network---- WiFi.....	13
3.3 Set WiFi hotspot parameters.....	15
Appendix Frequently Asked Questions.....	17


Chapter 1 Application Mode

1.1 Bridge + Repeater Mode

There are three application modes for the bridge mode of VONETS module/WiFi product: WiFi repeater, WiFi bridge and WiFi AP.


- **WiFi Repeater:**

VONETS module/WiFi product as WiFi Repeater, it must be configured to source WiFi hotspot parameters, can be used to extend the wireless signal coverage of existing APs or wifi router .

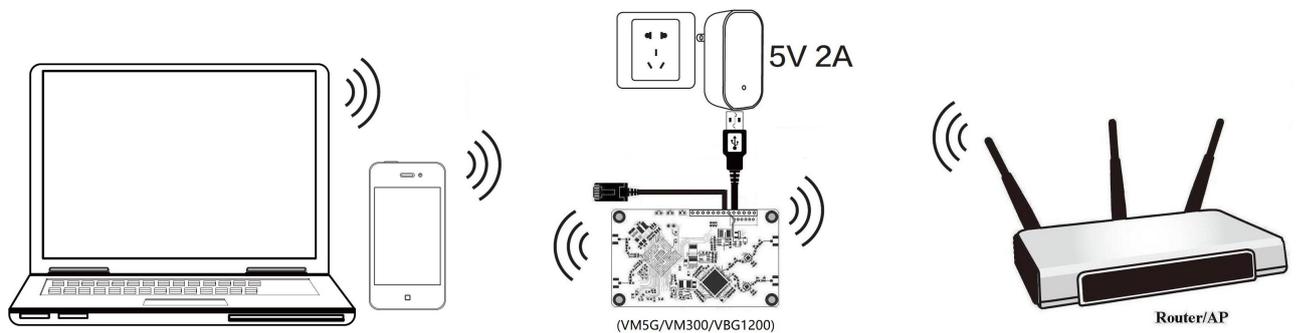


- **WiFi Bridge:**

VONETS module/WiFi product as WiFi bridge, it must be configured to source WiFi hotspot parameters, can be used for devices only with Ethernet ports to access wireless networks.

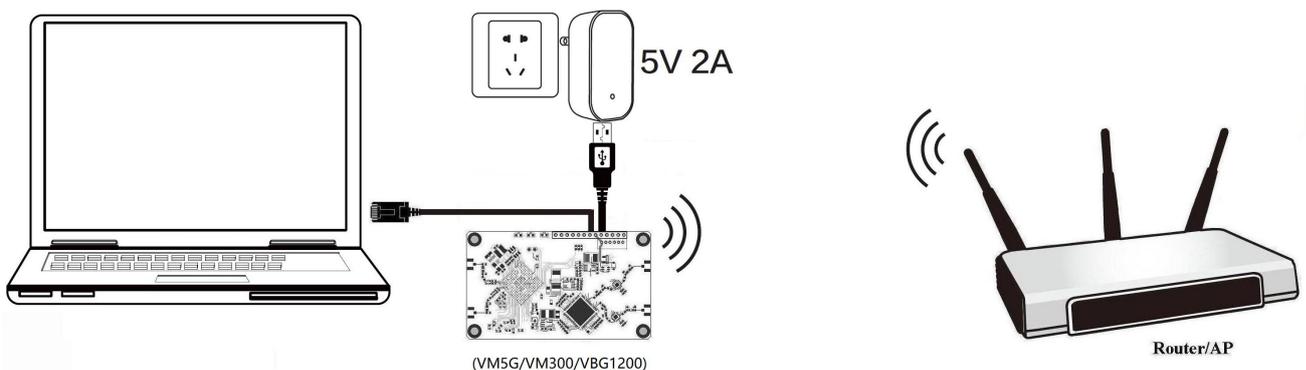

- **WiFi AP:**


VONETS module/WiFi product as WiFi AP, it can achieve wireless access to wired LAN, no configuration required, plug and play.

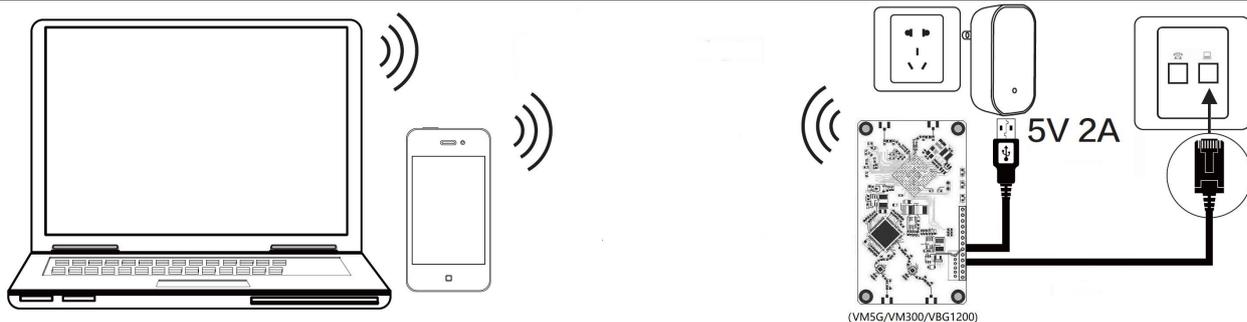


1.2 Router Mode

- VONETS module/WiFi product as WiFi router


The Ethernet port of **VM300** module defaults to WAN port. The Ethernet cable defaults to the LAN port. WAN and LAN ports are interchangeable.

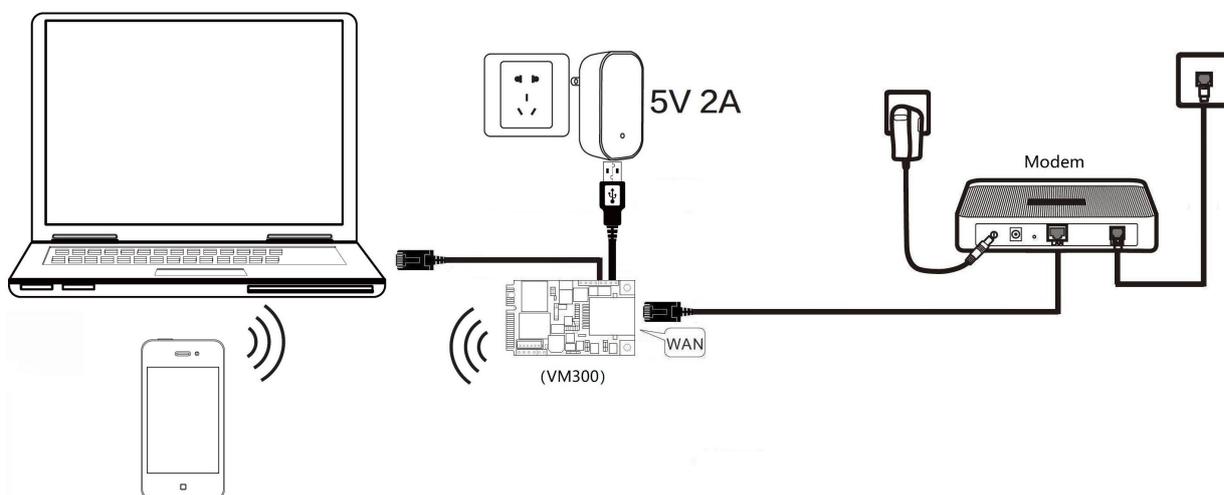

The Ethernet cable of **VM5G** module/**VBG1200** WiFi product defaults to LAN port, you must set “WAN/LAN interchange” so that the Ethernet cable is WAN port to use the broadband dialing function.

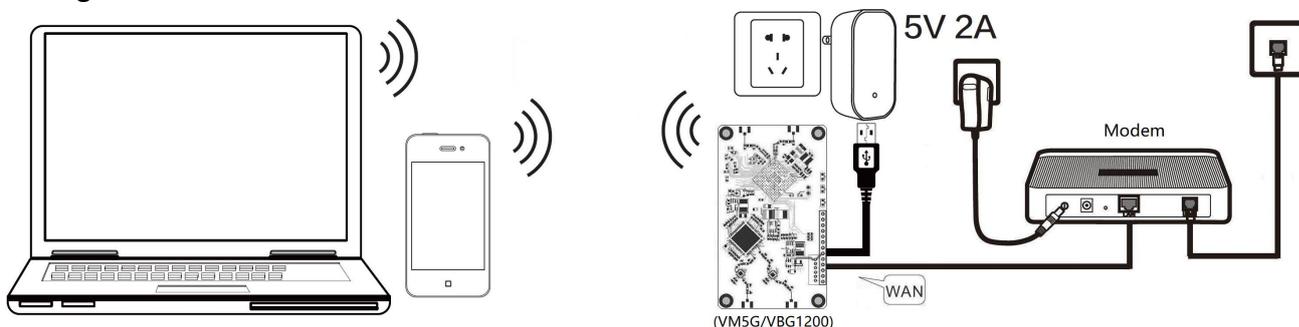

- VONETS module/WiFi product is used as a wireless router. WAN port can be set to connect to the WiFi hotspot for use as a secondary router.

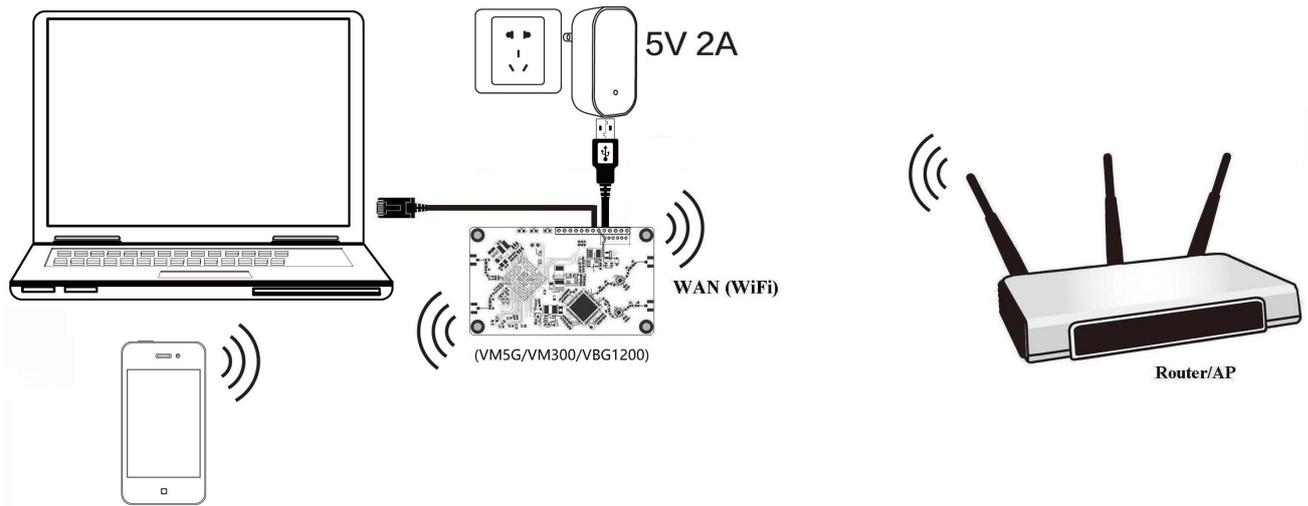

Chapter 2 Bridge+Repeater Mode Configuration Instruction

2.1 Method 1: Use the mobile phone APP VCC configuration

Use the Android system (IOS system is not supported temporarily) mobile browser to scan the QR code below to download the VCC configuration software, and then enter the VCC interface to scan the QR code on the back of the bridge for code scanning connection and configuration (the software version of the bridge shall not be less than 3.2.21.7.13);




2.2 Method 2: Log in to the device's Web configuration page to configure

2.2.1 Device Connection

Power on VONETS module/WiFi product by 5V/2A power supply, then connect to PC, there are two connection ways as below:

- A. Computer is wired connected to LAN port of VONETS module/WiFi product;

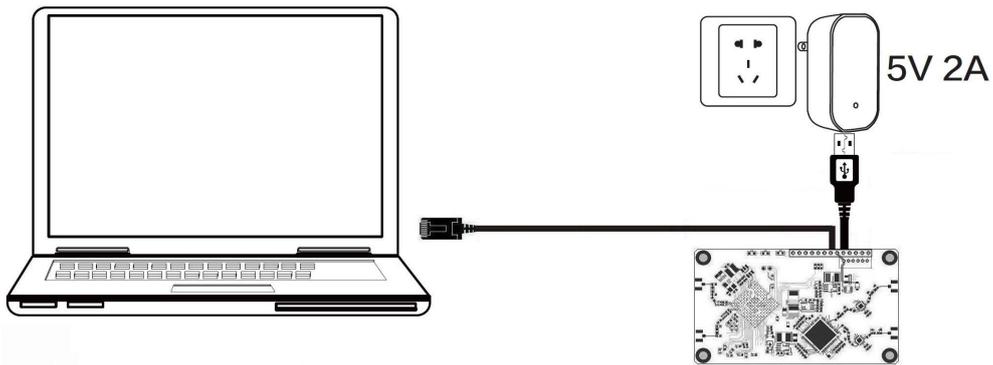


(Recommend Method)

- B. The computer wirelessly connects to the WiFi signal of VONETS module/WiFi product, its default hotspot parameters are as follows:

WiFi SSID: VONETS_***** (corresponding to VONETS device MAC address)

WiFi password: 12345678

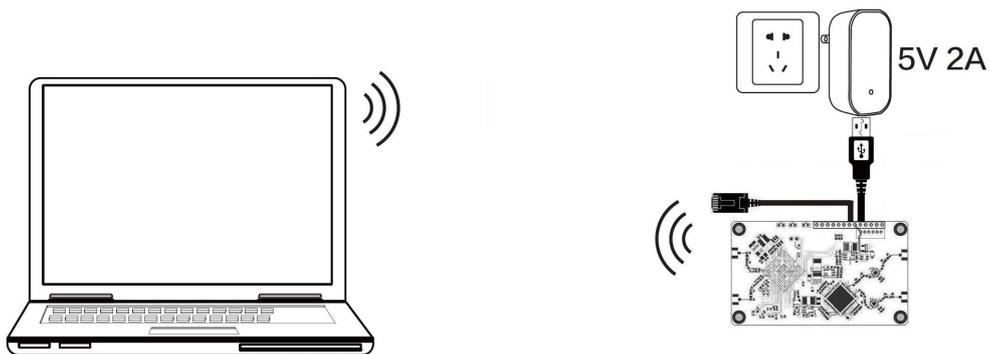


(After the WiFi parameters are configured, the WiFi will be disconnected, that is normal.)


2.2 Bridge+Repeater Application Configuration

The configuration steps of VONETS module/WiFi product for WiFi repeater and WiFi bridge are basically the same, so this manual combines the configuration instructions of the two application modes.


1. After computer is connected to VONETS module/WiFi product, open browser, input configured page: <http://vonets.cfg> (or IP: 192.168.254.254), then press Enter;

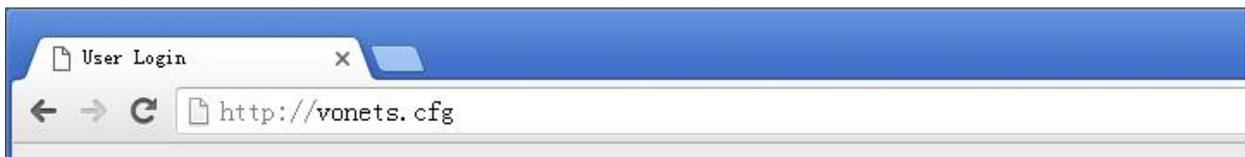

2. Input User name and Password in login page (both are “admin”), click “Login” button to enter configured page;

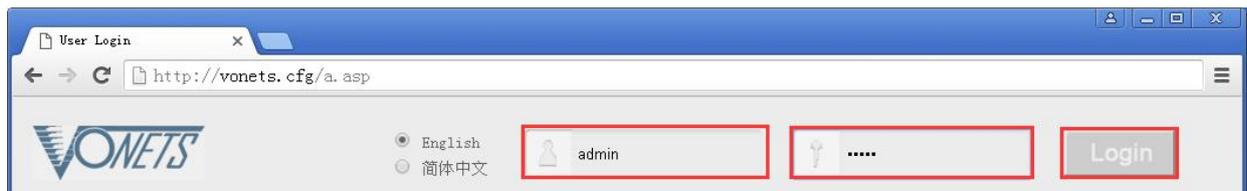

3. “Scan Hotspots” , choose the source hotspots, click “Next” ;

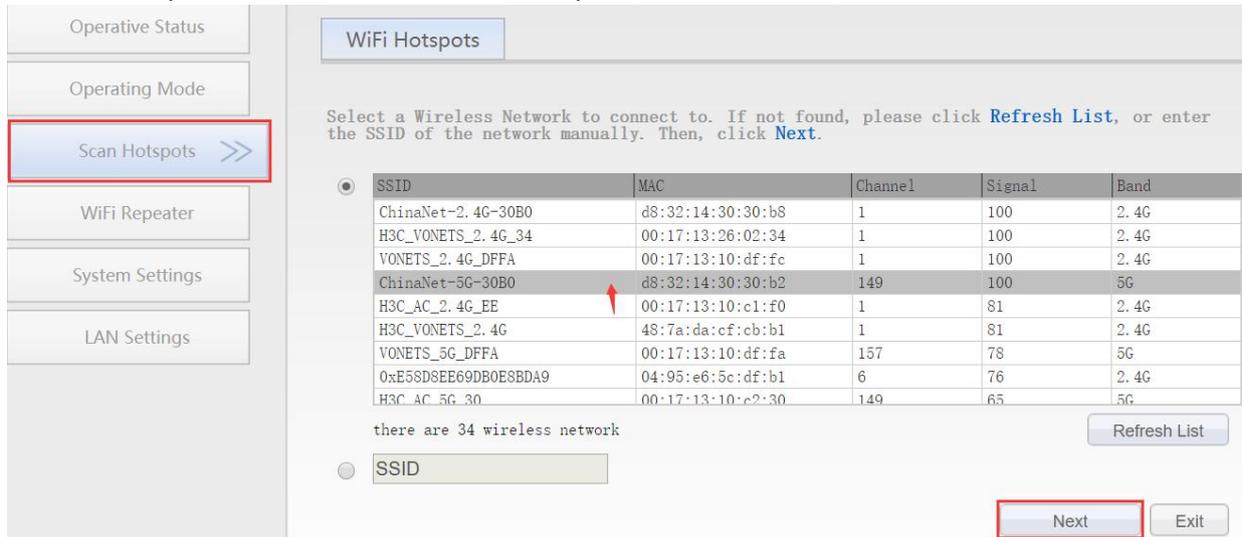

4. Input “Source wireless hotspot password” , click “Apply” ;

- **IP layer transparent transmission** (factory default), transparent transmission of IP layer data, can meet most of WiFi bridge applications;
- **MAC layer transparent transmission**, transparent transmission of all data above the MAC layer (link layer) and MAC layer, including IP layer data. MAC transparent transmission can solve some special applications for MAC layer encryption, such as GoPro camera, Cisco AP, Hikvision monitoring system, etc;
- The option “**The configuration parameters of WiFi repeater security is synchronized with source hotspot**” is default ticked, it means the SSID of VONETS repeater is associated with the SSID of the source hotspot, and the WiFi password is the same as the password of the source hotspot;
- **Disable hotspot**, if you select “Disable hotspot” on the right side of the SSID, the device will not transmit the corresponding hotspot and can only be used as a bridge application;
- **Advanced Setting**, include Hot spot authentication match mode, WiFi Signal Motion Detection and SSA Signal strength alarm threshold, these options here can be kept unchanged, for instructions on this option, go to www.vonets.com and download the “V Series WiFi Bridge Advanced Features Instruction” ;

Operative Status
Operating Mode
Scan Hotspots >>
WiFi Repeater
System Settings
LAN Settings

WiFi Hotspots

Security Settings

SSID	ChinaNet-5G-30B0
Source WiFi hotspot password	
Transmission mode	<input checked="" type="radio"/> IP layer transparent <input type="radio"/> MAC layer transparent
<input checked="" type="checkbox"/> The configuration parameters of WiFi repeater security is synchronized with source hotspot	
2.4G WiFi Repeater SSID	ChinaNet-5G-30B0_2.4G_CA <input type="checkbox"/> Disable Hotspot <input checked="" type="checkbox"/> Disable WiFi Hardware
5G WiFi Repeater SSID	ChinaNet-5G-30B0_5G_CA <input type="checkbox"/> Disable Hotspot

DHCP Server Settings

DHCP Server	<input checked="" type="radio"/> Disable (Recommended configuration) <input type="radio"/> Enable
-------------	---

Advanced Setting (For specific applications only) >>

In order to prevent network conflicts, after parameters are configured, please disable DHCP server. Logging in page again will be failed because of 'Disable DHCP server', so please make sure the hotspot parameters are correct.

- Click “Reboot” , VONETS module will connect to the configured WiFi hotspot automatically, if connection is successful, the WiFi LED light will flash quickly;

Operative Status
Operating Mode
Scan Hotspots >>
WiFi Repeater
System Settings
LAN Settings

WiFi Hotspots

Security Settings

SSID	ChinaNet-5G-30B0
Source WiFi hotspot password	Abc.12345
Transmission mode	<input checked="" type="radio"/> IP layer transparent <input type="radio"/> MAC layer transparent
<input checked="" type="checkbox"/> The configuration parameters of WiFi repeater security is synchronized with source hotspot	
2.4G WiFi Repeater SSID	ChinaNet-5G-30B0_2.4G_CA <input type="checkbox"/> Disable Hotspot <input checked="" type="checkbox"/> Disable WiFi Hardware
5G WiFi Repeater SSID	ChinaNet-5G-30B0_5G_CA <input type="checkbox"/> Disable Hotspot

DHCP Server Settings

DHCP Server	<input checked="" type="radio"/> Disable (Recommended configuration) <input type="radio"/> Enable
-------------	---

Advanced Setting (For specific applications only) >>

If you want to add one more hotspot, please click “Continue Add” button.

To make the new parameters effective, after parameters are configured, please click “Reboot” button.

Remark 1:

LED Light Form			
Model	Blue Light	Green Light	Yellow Light
VM300	WiFi Connection Status Light	Ethernet Cable Connection Status Light	/
VM5G/VBG1200	WiFi Connection Status Light	5G WiFi Connection Status Light	Ethernet Cable Connection Status Light

① VONETS module/WiFi product is not connected to any hotspot, WiFi connection status light will flash quickly;

② VONETS module/WiFi product is connected to hotspot successfully, WiFi connection status light will quick flash;


③ VONETS module/WiFi product is connected to hotspot successfully, but hotspot signal strength is less than 50% greater than 10%, WiFi status light will pause flash and flash;

④ VONETS module/WiFi product is connected to hotspot failed, WiFi connection status light will flash slowly.

2.3 AP Application Configuration

VONETS module/WiFi product can be configured as an AP application. The wireless terminal device can connect to VONETS module/finished product hotspot to connect to the network; however, it is best to change its WiFi name and password for network security.

1. Log in to the configuration page <http://vonets.cfg> (or IP: 192.168.254.254) in your computer browser, both user name and password are “admin”

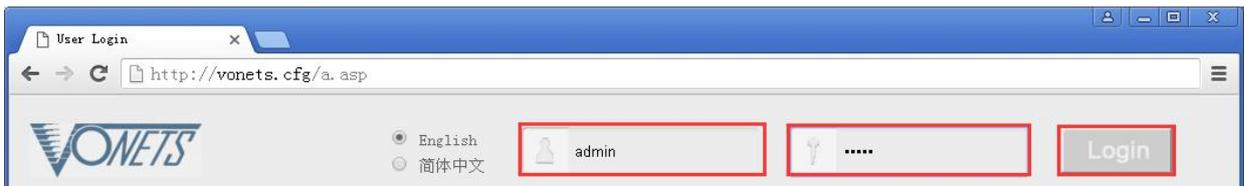


2. Revise WiFi name: Jump to “WiFi Repeater” ---- “Basic Settings” , enter new WiFi name in “WiFi Repeater (SSID)” , click “Apply” ;

Operative Status	Basic Settings	WiFi Security	WiFi Client
Operating Mode	2.4G Wireless Network		
Scan Hotspots	WiFi Hardware Module	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
WiFi Repeater >>	General Hotspot SSID	VONETS_2.4G_B5CA	Hidden <input type="checkbox"/> Disable Hotspot <input type="checkbox"/>
System Settings	Network Mode	11B/G/N	
LAN Settings	Channel	2442MHz (Channel 7)	<input type="checkbox"/> Auto select the best channel
	MAC Address	00:17:13:10:B5:CC	
	5G Wireless Network		
	WiFi Hardware Module	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
	General Hotspot SSID	VONETS_5G_B5CA	Hidden <input type="checkbox"/> Disable Hotspot <input type="checkbox"/>
	Network Mode	11N	
	Channel	5745MHz (Channel 149)	<input type="checkbox"/> Auto select the best channel
	MAC Address	00:17:13:10:B5:CA	
	Modify the parameters, restart the device to take effect.		
		Apply	Cancel


3. Revise WiFi password, in “WiFi Repeater” ---- “WiFi Security” , enter new WiFi password in “Pass Phrase” , click “Apply” ;

Operative Status	Basic Settings	WiFi Security	WiFi Client
Operating Mode	[2.4G] WiFi Security		
Scan Hotspots	Repeater SSID	VONETS_2.4G_B5CA	
WiFi Repeater >>	Security Mode	WPA2PSK-WPA2PSK	
System Settings	WPA Algorithms	<input type="radio"/> TKIP <input checked="" type="radio"/> AES <input type="radio"/> TKIP-AES	
LAN Settings	Pass Phrase	12345678	(8-63 characters or 64 hex numbers)
	[5G] WiFi Security		
	Repeater SSID	VONETS_5G_B5CA	
	Security Mode	WPA2PSK-WPA2PSK	
	WPA Algorithms	<input type="radio"/> TKIP <input checked="" type="radio"/> AES <input type="radio"/> TKIP-AES	
	Pass Phrase	12345678	(8-63 characters or 64 hex numbers)
	Modify the parameters, restart the device to take effect.		
		Apply	Cancel

4. “WiFi Tx Power” of VONETS module/WiFi product can be changed, jump to “System Settings” ---- “Advance Settings” , choose suitable transmit power, then click “Apply” ;

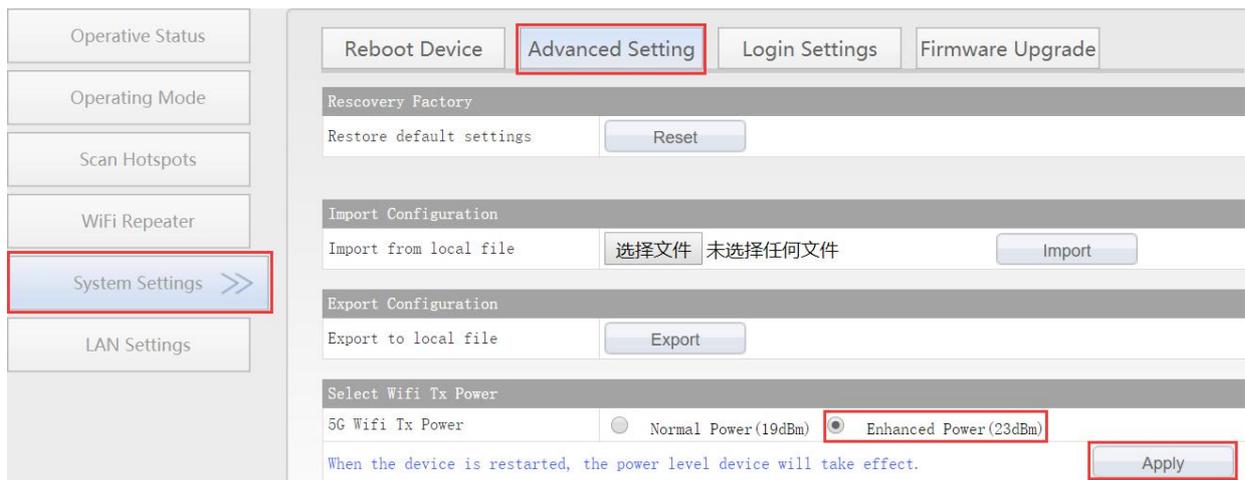

5. Reboot device, jump to “System Settings” ---- “Reboot Device” , click “Reboot” , when it is finished, all revised options will take effect.

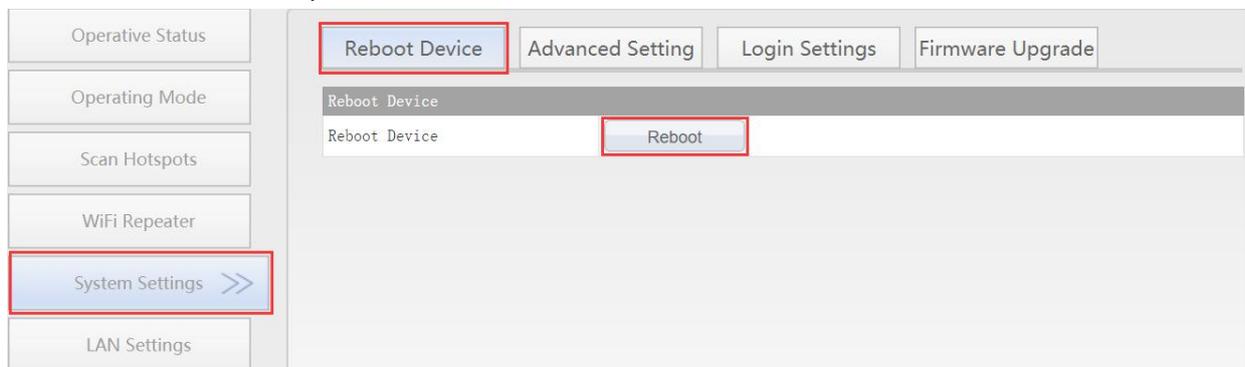


Remark 2: When VONETS module/WiFi product connect to external network, its IP address will be changed. At this time, when log in configured page, we suggest you enter configured domain name: <http://vonets.cfg>. Or in Windows command window, enter the command: `ping vonets.cfg`, to get the IP address of the device, then log in configuration page by this IP address.

Chapter 3 Router Mode Configuration Instruction

3.1 Change device mode

1. Power on VONETS module/WiFi product by 5V/2A power supply, then connect to PC, there are two connection ways as below:
 - A. Computer is wired connected to LAN port of VONETS module/WiFi product;

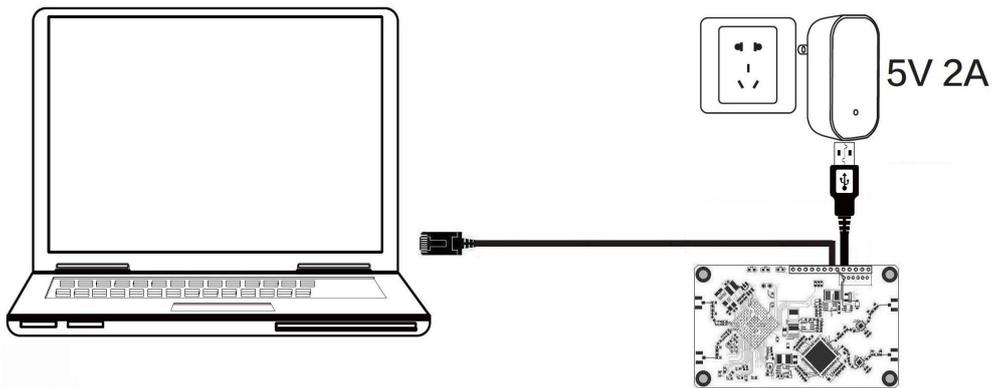


(Recommend Method)

- B. Computer wirelessly connects to the WiFi signal of VONETS module/WiFi product, its default hotspot parameters are as follows:


WiFi SSID: VONETS_***** (corresponding to VONETS device MAC address)

WiFi password: 12345678

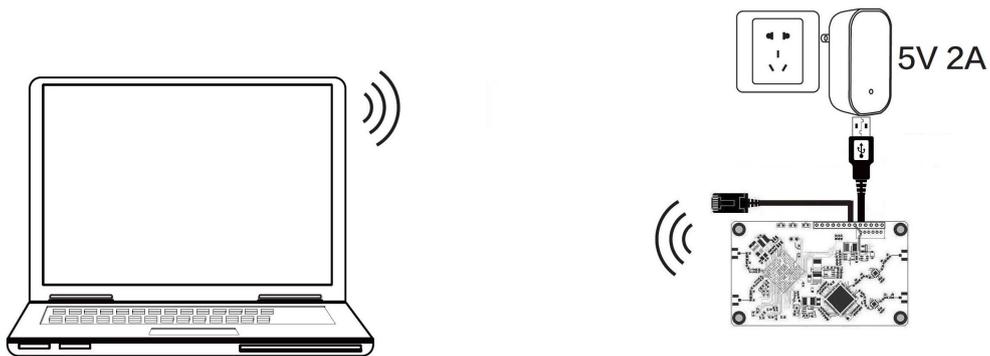


(After the WiFi parameters are configured, the WiFi will be disconnected, that is normal.)


2. After computer is connected to VONETS module/WiFi product, open browser, input configured page domain name: <http://vonets.cfg> (or IP: 192.168.254.254), then press Enter;

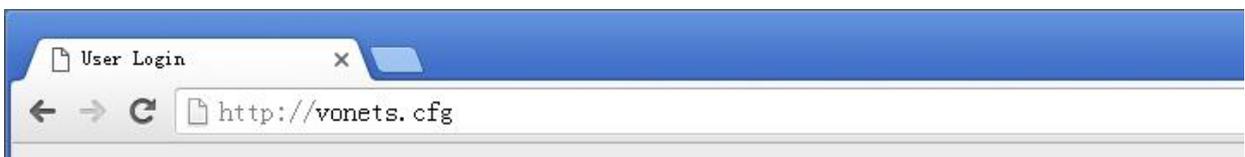


3. Enter User name and Password in login page (both are “admin”), click “Login” button to enter configured page;

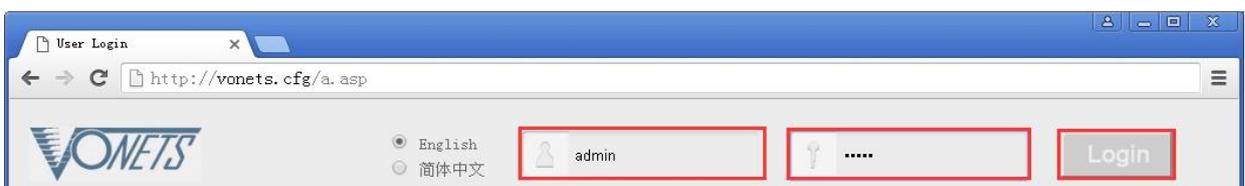

4. In “Operating Mode” , change Device mode to “Router” mode, click “Apply” button;

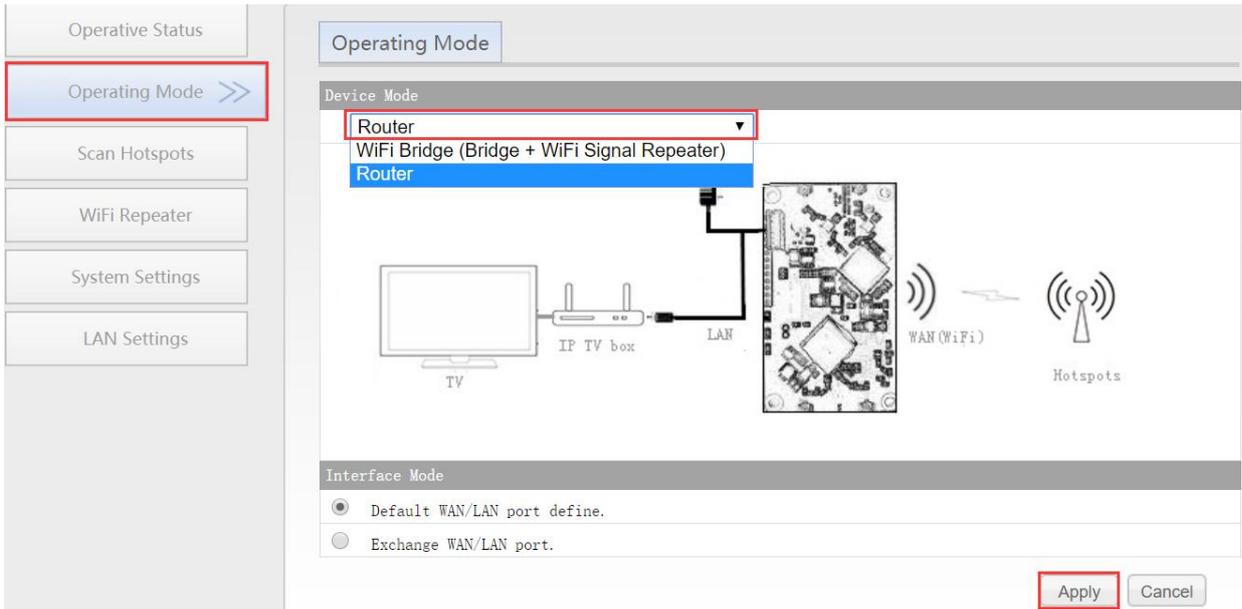

5. Reboot device: go to “System Settings” -- “Reboot device” , click “Reboot” button, VONETS module/WiFi product will automatically switch to router mode.

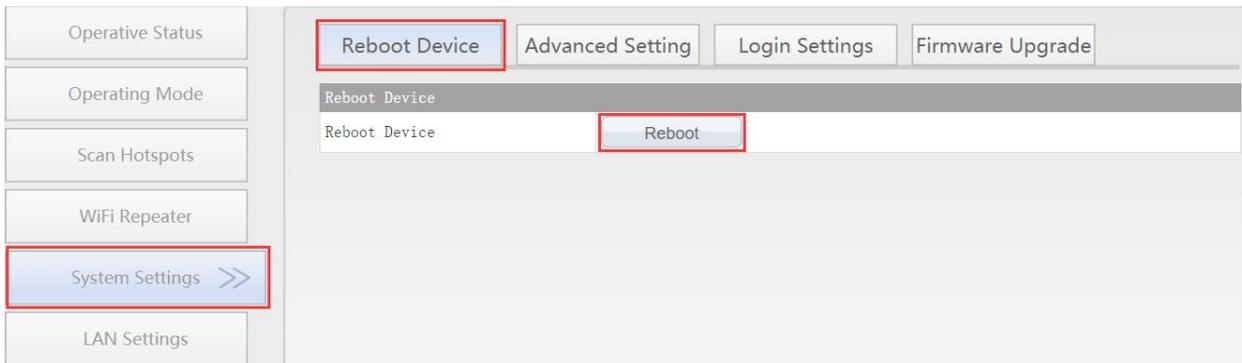


3.2 WAN port setting

3.2.1 WAN/LAN exchange

In routing mode, the Ethernet port of VONETS module/WiFi product is divided into a WAN port and a LAN port, and WAN/LAN can be interchanged.

The Ethernet port of **VM300** module defaults to WAN port. The Ethernet cable defaults to LAN port. If the interface mode is changed to “WAN/LAN exchange” , the Ethernet cable will be WAN port and the Ethernet port will be LAN port.(This option can keep unchanged);

The Ethernet cable of **VM5G/VBG1200** WiFi product defaults to LAN port, the interface mode must be changed to “WAN/LAN interchange” to make Ethernet cable to WAN port, click “Apply” , then reboot VONETS module/WiFi product.

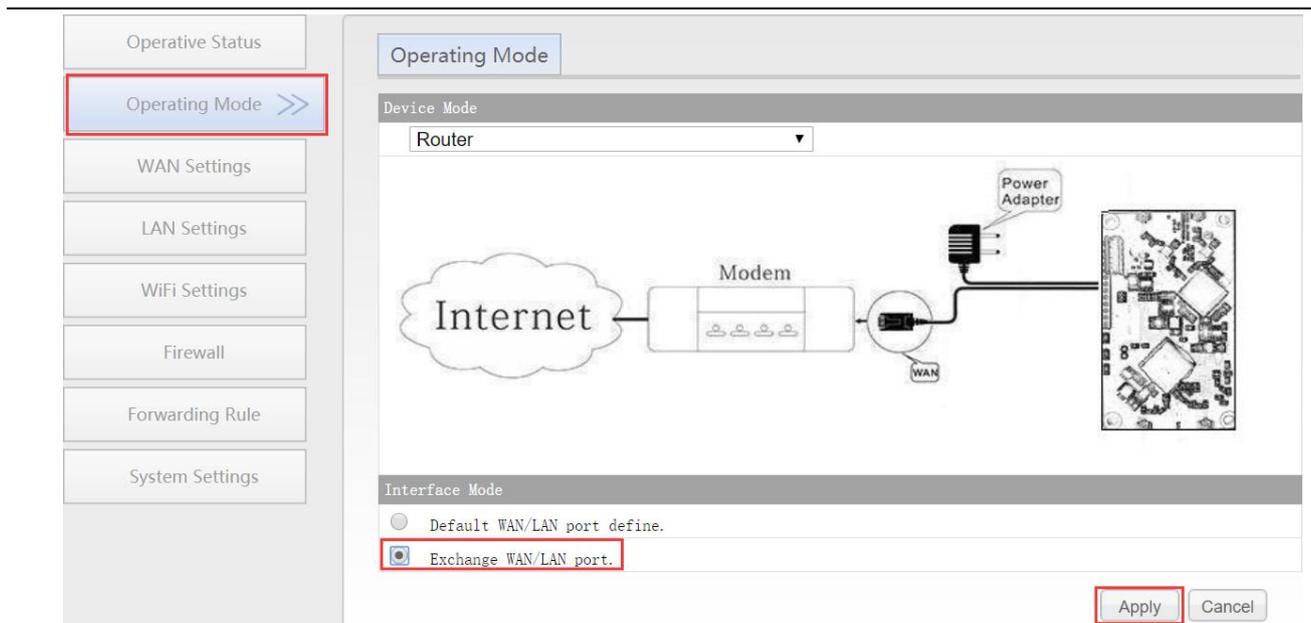

3.2.2 WAN Port connection method

By setting the WAN port of the router, you can change the network connection type according to the actual needs of the individual, there are three types of WAN port connections commonly used in the routing mode of the VONETS module/WiFi product: DHCP(Auto Config), PPPoE(ADSL) and WiFi. DHCP and PPPoE are wired connections, and the WAN port needs to be connected to the source network through a wired connection:

- DHCP(Auto Config): WAN port connection type is selected as “**DHCP(Auto Config)**”, VONETS module/WiFi product will automatically obtain IP address from source network;
- PPPoE(ADSL): WAN port connection type is selected as “**PPPoE**”, that is, ADSL virtual dialing mode requires ISP (Internet Service Provider) to provide Internet account and password.
- WiFi: WAN port connection type is selected as “**WiFi**”, VONETS module/WiFi product uses a built-in WiFi network card (used to connect to the source hotspot) as a WAN port, and all Ethernet ports as LAN ports, while providing WiFi hotspot functions.

3.2.3 WAN port wired connect network——DHCP

The default WAN port connection mode of VONETS is DHCP. The WAN port can automatically obtain an IP address after connecting with the source network.

The screenshot shows the WAN Settings page with the following configuration:

- WAN Connection Type:** DHCP (Auto config)
- Remote Management:** Disable Enable
- DHCP Mode:**
 - Hostname: VONETS.COM
 - MAC Clone:

Buttons: Apply, Cancel

3.2.4 WAN port wired connect network——PPPoE

In “WAN settings” , select “Basic settings” , change the connection type to “PPPoE (ADSL)” , then enter the Internet account and password provided by the ISP (Internet Service Provider), click the “Apply” button, and then reboot VONETS module/WiFi product, then can access to network.


The screenshot shows the WAN Settings page with the following configuration:

- WAN Connection Type:** PPPoE (ADSL)
- Remote Management:** Disable Enable
- PPPoE Mode:**
 - User Name: 15278511540@163.sz.com
 - Password:
 - Operation Mode: Always on
 - Always on mode: Redial Period: 60 seconds
 - Dial on Demand mode: Idle Time: 5 minutes
- MAC Clone:**
 - MAC Address:

Buttons: Apply, Cancel

3.2.5 WAN port wireless connect network---- WiFi

1. In “WAN Settings” , select “Basic Settings” , change Connection type to “WiFi” , then click “Scan Hotspots” to enter the scanning hotspot list.

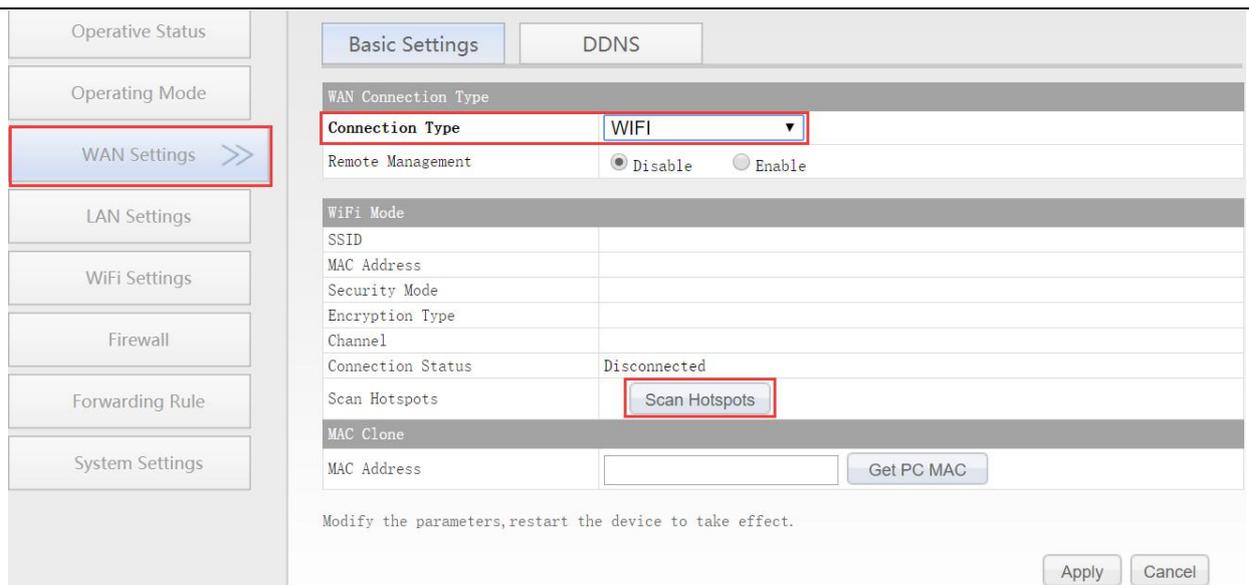


2. Choose the source hotspots, click “Next” ;




3. Input “Source wireless hotspot password” , click “Apply”

- The option “**The configuration parameters of WiFi repeater security is synchronized with source hotspot**” is default ticked, it means the SSID of VONETS repeater is associated with the SSID of the source hotspot, and the WiFi password is the same as the password of the source hotspot;
- **Disable hotspot**, if you select “Disable hotspot” on the right side of the SSID, the device will not transmit the corresponding hotspot and can only be used as a bridge application;
- **Advanced Setting**, include Hot spot authentication match mode, WiFi Signal Motion Detection and SSA Signal strength alarm threshold, these options here can be kept unchanged, for instructions on this option, go to www.vonets.com and download the “V Series WiFi Bridge Advanced Features Instruction” ;

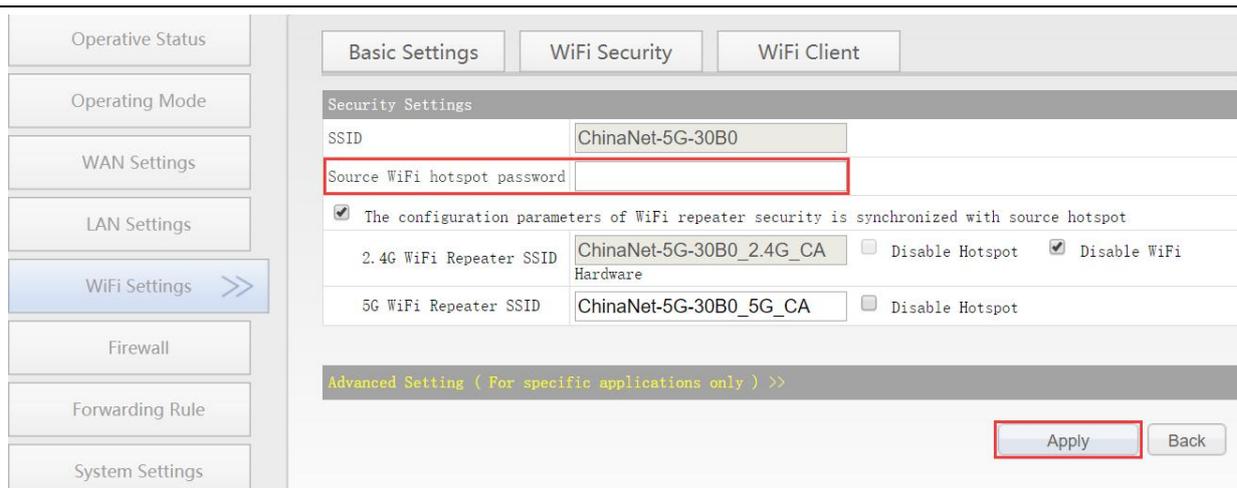

- Click “Reboot” , VONETS module/WiFi product will connect to the configured WiFi hotspot automatically, if connection is successful, the WiFi LED light will flash quickly;(Please refer to Remark 1 for the description of the LED light.)

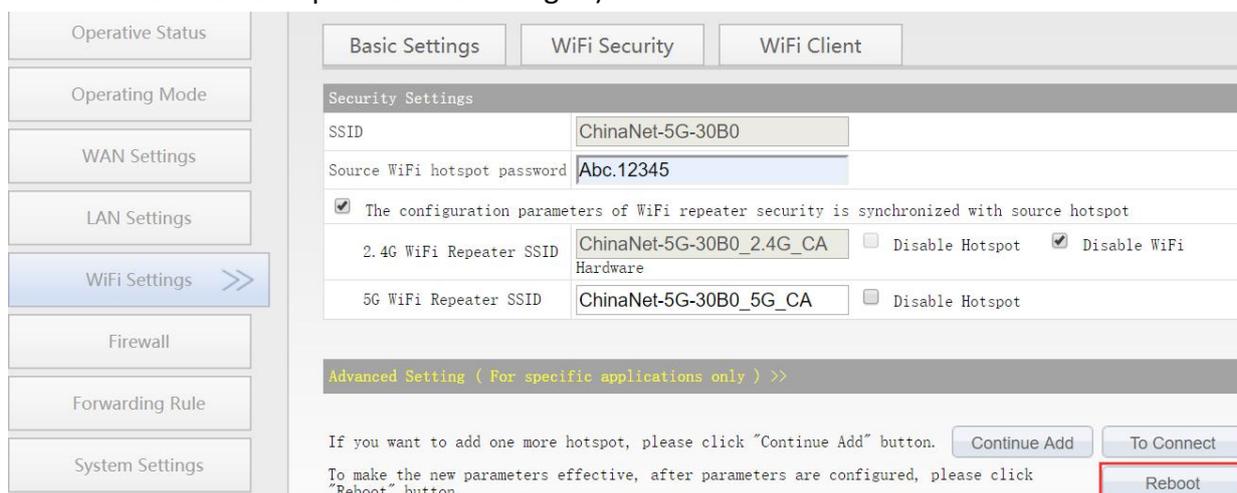

Remark 3: After VONETS module/WiFi product sets the WAN port to access the WiFi hotspot in the routing mode, its LAN port IP is still 192.168.254.254, and the terminal device also obtains the IP address of the same network segment, can login configuration page by 192.168.254.254 or <http://vonets.cfg>.

3.3 Set WiFi hotspot parameters

- Revise WiFi name: Jump to “WiFi Repeater” ---- “Basic Settings” , enter new WiFi name in “WiFi Repeater (SSID)” , click “Apply” ;

Operative Status	Basic Settings	WiFi Security	WiFi Client
Operating Mode	2.4G Wireless Network		
WAN Settings	WiFi Hardware Module	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
LAN Settings	General Hotspot SSID	VONETS_2.4G_B5CA	Hidden <input type="checkbox"/> Disable Hotspot <input type="checkbox"/>
WiFi Settings >>	Network Mode	11B/G/N	
Firewall	Channel	2442MHz (Channel 7)	<input type="checkbox"/> Auto select the best channel
Forwarding Rule	MAC Address	00:17:13:10:B5:CC	
System Settings	5G Wireless Network		
	WiFi Hardware Module	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
	General Hotspot SSID	VONETS_5G_B5CA	Hidden <input type="checkbox"/> Disable Hotspot <input type="checkbox"/>
	Network Mode	11N	
	Channel	5745MHz (Channel 149)	<input type="checkbox"/> Auto select the best channel
	MAC Address	00:17:13:10:B5:CA	
	Modify the parameters, restart the device to take effect.		
		Apply	Cancel

2. Revise WiFi password, in “WiFi Repeater” ---- “WiFi Security” , enter new WiFi password in “Pass Phrase” , click “Apply” ;

Operative Status	Basic Settings	WiFi Security	WiFi Client
Operating Mode	[2.4G] WiFi Security		
WAN Settings	Repeater SSID	VONETS_2.4G_B5CA	
LAN Settings	Security Mode	WPA2PSK-WPA2PSK	
WiFi Settings >>	WPA Algorithms	<input type="radio"/> TKIP <input checked="" type="radio"/> AES <input type="radio"/> TKIP-AES	
Firewall	Pass Phrase	12345678	(8-63 characters or 64 hex numbers)
Forwarding Rule	[5G] WiFi Security		
System Settings	Repeater SSID	VONETS_5G_B5CA	
	Security Mode	WPA2PSK-WPA2PSK	
	WPA Algorithms	<input type="radio"/> TKIP <input checked="" type="radio"/> AES <input type="radio"/> TKIP-AES	
	Pass Phrase	12345678	(8-63 characters or 64 hex numbers)
	Modify the parameters, restart the device to take effect.		
		Apply	Cancel

3. Reboot device, jump to “System Settings” ---- “Reboot Device” , click “Reboot” , when it is finished, all revised options will take effort.

Operative Status	Reboot Device	Advanced Setting	Login Settings	Firmware Upgrade
Operating Mode	Reboot Device			
WAN Settings	Reboot Device	Reboot		
LAN Settings				
WiFi Settings				
Firewall				
Forwarding Rule				
System Settings >>				

Appendix Frequently Asked Questions

1. How to restore the factory default parameters of the VONETS module/WiFi product?
Please refer to the information below to reset the factory default parameters of the VONETS module/WiFi product:
VM300: http://www.vonets.com/serviceView.asp?D_ID=213
VM5G: http://www.vonets.com/serviceView.asp?D_ID=306
VBG1200: After the device is powered on for about 60 seconds, press and hold the Reset button for 5 seconds and then release, the blue indicator light will flash a few times, and then the device will automatically restore the factory default parameters (the restoring process takes about 80 seconds). During operation, the product cannot be powered down, otherwise it may cause damage to the product.
2. Does VONETS module/WiFi product support firmware upgrade, how to upgrade?
VONETS module/WiFi product t supports firmware upgrade, and support online upgrade, please visit website: www.vonets.com to refer to the related documents.
3. The device WiFi hot spot can be found, but the smart phone or PC can't connect to this device hotspot?
 - Reason 1. Due to some unexpected operation or power down, caused the destroy of device parameters. At this time, just need to reset the device to factory default parameters;
 - Reason 2. The device WiFi doesn't work at the best channel, make the performance worse. At this time, you can try to change the source WiFi hot spot and this device WiFi channel to make the performance better;
 - Reason 3. The smart phone or PC haven't been configured the correct WiFi password.
4. The device has been configured the source WiFi hot spot parameters, the smart phone or PC has connected to the device WiFi hot spot, but still doesn't get internet?
 - First, check the status light to know the current state of the device, then according to the state of the device to analyze the fault reasons;
 - Reason 1. The distance between the device and source WiFi hot spot is too long, cause the communication performance degradation, finally effect the user's access to the Internet. At this time, just need shorten the distance between the device and source WiFi hot spot to solve this problem;
 - Reason 2. Due to some unexpected operation or power down, caused the destroy of device parameters. At this time, just need to reset the device to factory default parameters;

-
- Reason 3. The device WiFi doesn't work at the best channel, make the performance worse. At this time, you can try to change the source WiFi hot spot WiFi channel to make it the same as the default channel of the device, the reboot the device, the device will automatically exchange to the same channel as the source WiFi hotspot, to make the performance better;
 - Reason 4. There are several WiFi hot spot around the device, WiFi channel mutual interference, make the performance worse. At this time, you can try to change the source WiFi hot spot and this device WiFi channel to make the performance better;
 - Reason 5. The configured source WiFi hot spot parameters are not correct. At this time, just need to configure the correct parameters then reboot the device;
5. The smart phone or PC has been connected the device by WiFi or Ethernet cable, but user can't log in the device WEB page, or after log in the WEB it shows error?
- Reason 1. The users don't use the browser recommended by VONETS(IE,Google Chrome, Safari, the mobile phone browser);
 - Reason 2. The smart phone or PC installed the firewall, the security level is set too high, caused the above problem. At this time, only need to close the firewall;
 - Reason 3. The security level of browser is too high, it will also cause the above problem. At this time, just need to reduce the browser's security level, then log in again;
 - Reason 4. The IP address of the device input error. For the new device from the factory, user only need input the correct IP address according to the instruction guide; for the device that has connected the source hot spot, user only operate according to <Remark 2>.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Operation of this device in the band 5150-5250 MHz is restricted to indoor use only