

# **TB-05** Specification

Version V1.0.0

Copyright ©2022



# **Document resume**

Version	Date	Develop/revise content	Edition	Approve
V1.0.0	2022.11.8	First Edition	Jingran Xiao	Ning Guan



# Content

1.	Produ	act overview	4
	1.1.	Characteristics	5
2.	Main	parameters	6
	2.1.	Static electricity requirements	6
	2.2.	Electrical characteristics	7
	2.3.	BLE RF performance	8
	2.4.	Power consumption	8
3.	Appe	arance dimensions	9
4.	Pin d	efinition	10
5.	Schei	natic	12
6.	Antei	nna parameters	13
	6.1.	Schematic of Antenna Test Prototype	13
	6.2.	Antenna S parameter	14
	6.3.	Antenna Gain and Efficiency	14
	6.4.	Antenna field type diagram	15
7.	Desig	gn guidance	16
	7.1.	Application guidance circuit	16
	7.2.	Recommended PCB package size	16
	7.3.	Antenna layout requirements	17
	7.4.	Power supply	17
	7.5.	GPIO	18
8.	Stora	ge conditions	19
9.	Reflo	w Welding Curve	19
10.	Proc	luct packaging information	20
11.	Con	tact us	20
Dis	claime	er and Copyright Notice	21
Not	ice		21



#### 1. Product overview

TB-05 is a BLE5.0 low-power consumption Tmall Genie Mesh Bluetooth module based on TLSR8250 chip. The Bluetooth module supports the direct control of Tmall Genie and has the function of Bluetooth mesh networking. The devices communicate through peer-to-peer star network and Bluetooth broadcast, which can ensure timely response in case of multiple devices. It is mainly used in intelligent light control, which can meet the requirements of low power consumption, low delay and short-range wireless data communication.



### 1.1. Characteristics

- It can be directly controlled by the Tmall Genie without a gateway
- 1.1mm pitch SMD-20 package
- 6 PWM outputs
- Onboard antenna, compatible with half-hole pad/through-hole pad
- Brightness (duty cycle) adjustment range 5%-100%
- Factory default cold color warm color duty cycle 50%
- PWM output frequency 1KHz
- With night light function
- Color temperature switching function with wall switch



# 2. Main parameters

**Table 1 Description of Main Parameters** 

Model	TB-05				
Size	12.2*18.6*2.8(±0.2)MM				
Package	SMD-20				
Wireless standard	Bluetooth 5.0				
Frequency	2400~2483.5MHz				
Maximum Tx power	Maximum 10.5dBm				
Receiving Sensitivity	-93dBm				
Interface	GPIO/PWM/SPI/ADC				
Operating temperature	-40 °C ~ 85 °C				
Storage environment	-40 °C ~ 125 °C , < 90%RH				
Power supply	The power supply voltage is $2.7V \sim 3.6V$ , and the power supply current is $\geq 50 \text{mA}$				
	Deep sleep pattern: 0.8 μA				
Power consumption	Sleep mode: 1.8 μA				
	TX:21.56mA				
Transmission distance	Outdoor open sight distance: ≥ 100 m				

### 2.1. Static electricity requirements

TB-05 is an electrostatic sensitive equipment and requires special precautions during handling



Figure 2 ESD anti-static diagram



### 2.2. Electrical characteristics

**Table 2 Table of Electrical Characteristics** 

Parameters		Condition	Min.	Typical value	Max.	Unit
Supply voltage		VDD	2.7	3.3	3.6	V
I/O supply voltage		VCCIO	-0.3	-	3.6	V
I /O	VIL	-	-	-	0.3*VDDIO	V
	VIH	-	0.7*VDDIO	-	VDDIO	V
	VOL	-	-	-	0.1*VDDIO	V
	VOH	-	0.9*VDDIO	-	VDDIO	V
Operating			-40	-	+85	°C
Storage			-40	-	+125	°C



### 2.3. BLE RF performance

**Table 3 BLE RF Performance Table** 

Description		Unit						
Spectrum range		2400~2483.5MHz		MHz				
Output power								
Rate mode	Min.	Typical value	Max.	Unit				
1Mbps	7.1	8.5	10.5	dBm				
Rec	Receiving sensitivity							
Rate mode	Min. Typical value		Max.	Unit				
1Mbps sensitivity @ 30.8% PER	-	-93	-	dBm				

### 2.4. Power consumption

The following power consumption data is based on a 3.3V power supply, ambient temperature of 25°C, and measured using an internal voltage regulator.

- All measurements are completed at the antenna interface with a filter.
- All transmission data are measured in the continuous transmission mode based on the duty cycle of the 100%.


**Table 4 Power consumption table** 

Mode	Min.	Average	Max.	Unit
Tx power consumption (10.5dBm)	-	21.56	-	mA
Rx consumption	-	6.4	-	mA
Standby power consumption	-	3	-	mA
Superficial sleep	-	1.8	-	μΑ
Deep sleep	-	0.8	-	μΑ



# 3. Appearance dimensions



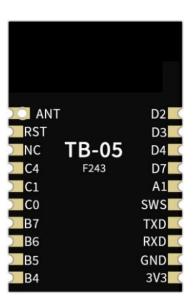

Front Back

Figure 3 (for reference only)

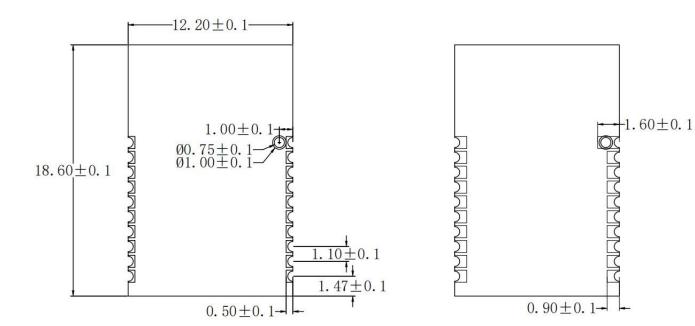


Figure 4 dimension diagram (unit: mm)



### 4. Pin definition

TB-05 module has a total of 20 interfaces. As shown in below pin diagram, the pin function definition table is the interface definition.

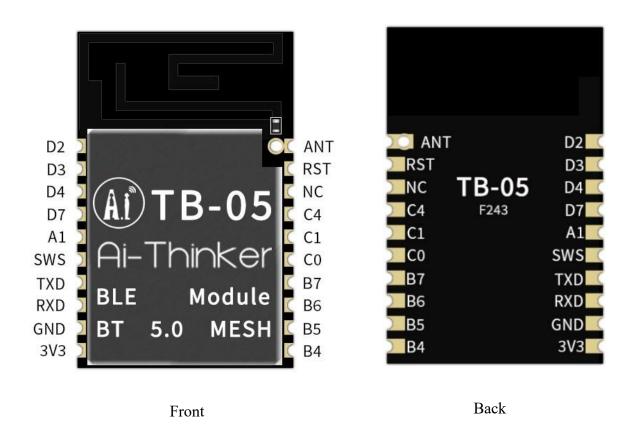


Figure 5 Pin Top View



### **Table 5 Pin Function Definition Table**

No.	Name	Function
1	D2	SPI chip selection (active low)/PWM3 output/GPIO PD2
2	D3	PWM1 reverse output/GPIO PD3
3	D4	GPIO PD4/single-wire host/PWM2 reverse output
4	D7	GPIO PD7/SPI clock (I2C_SCK)
5	A1	GPIO PA1
6	SWS	Single-wire slave
7	TXD	PWM4 output/UART_TX/SAR ADC input/GPIO PB1
8	RXD	PWM0 reverse output/UART_RX/GPIO PA0
9	GND	Ground
10	3V3	3.3V power supply
11	B4	PWM4 output/SAR ADC input/GPIO PB4
12	В5	PWM5 output/SAR ADC input/GPIO PB5
13	В6	SPI data input (I2C_SDA)/UART_RTS/SAR ADC input/GPIO PB6
14	В7	SPI data output/UART_RX/SAR ADC input/GPIO PB7
15	C0	I2C serial data/PWM4 reverse output/UART_RTS / GPIO PC0
16	C1	I2C serial clock/PWM1 reverse output/pwm0 output/GPIO PC1
17	C4	PWM2 output/UART_CTS/PWM0 reverse output/SAR ADC input
18	NC	NOT CONNECTED
19	RST	Reset pin
20	ANT	Antenna interface



# 5. Schematic

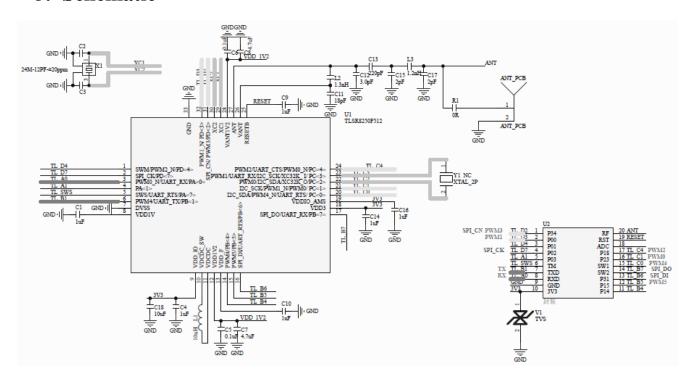


Figure 6 Schematic diagram



# 6. Antenna parameters

# **6.1.** Schematic of Antenna Test Prototype



Figure 7 schematic diagram of antenna test prototype



### **6.2.** Antenna S parameter

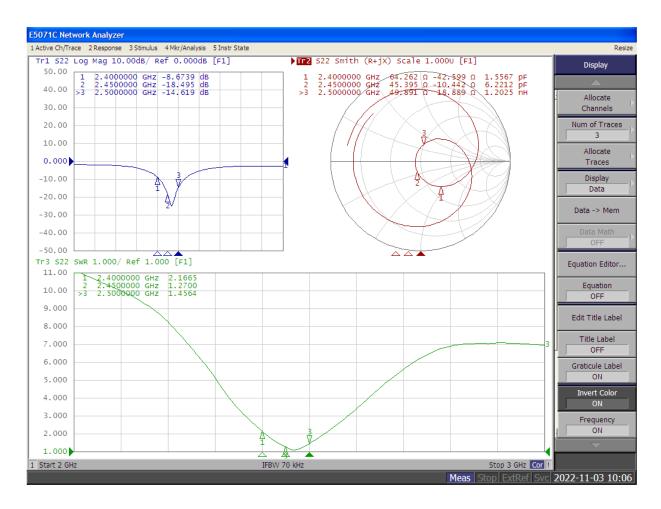


Figure 8 Antenna S parameters

### 6.3. Antenna Gain and Efficiency

Table 6 Antenna Gain and Efficiency

Frequency ID	1	2	3	4	5	6	7	8	9	10	11
Frequency(MHz)	2400	2410	2420	2430	2440	2450	2460	2470	2480	2490	2500
Gain(dBi)	0.11	0.19	0.53	0.66	0.90	1.31	1.52	1.60	1.64	1.51	1.28
Efficiency(%)	27.64	28.55	31.13	32.06	33.47	36.26	36.85	37.13	36.93	36.74	35.69



# 6.4. Antenna field type diagram

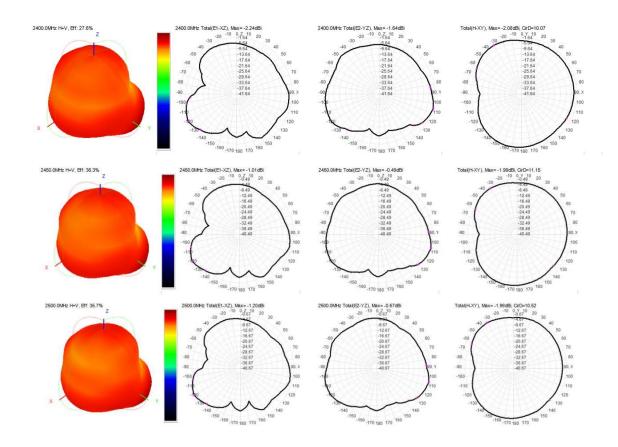


Figure 9 antenna field type diagram



# 7. Design guidance

### 7.1. Application guidance circuit

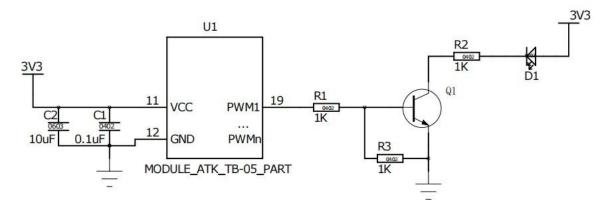


Figure 10 Application Guidance Circuit

### 7.2. Recommended PCB package size

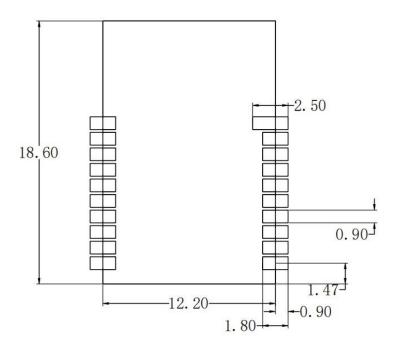


Figure 11 Recommended PCB Package Size (Unit: mm)



### 7.3. Antenna layout requirements

■ In the installation position on the motherboard, the following 2 methods are recommended:

Scheme 1: Place the module on the edge of the main board, and the antenna area extends out of the edge of the main board

Scheme 2: Place the module on the edge of the motherboard, and the edge of the motherboard hollowed out an area at the antenna position

■ In order to meet the performance of the on-board antenna, it is forbidden to place metal parts around the antenna, away from high-frequency devices

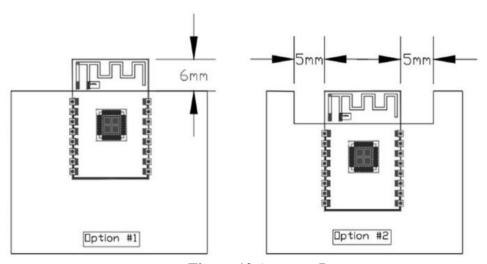


Figure 12 Antenna Layout

### 7.4. Power supply

- Recommended 3.3V voltage, peak current above 50mA
- LDO is recommended for power supply; If DC-DC is used, it is recommended that the ripple be controlled within 30mV
- The DC-DC power supply circuit suggests to reserve the position of the dynamic response capacitor, which can optimize the output ripple when the load changes greatly
- It is recommended to add ESD devices to the 3.3V power interface



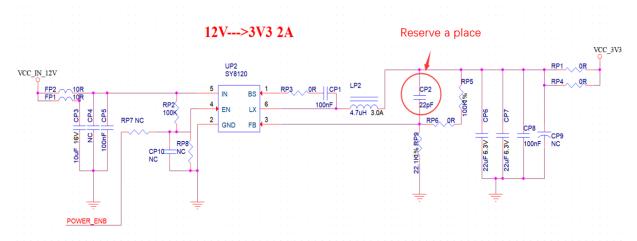
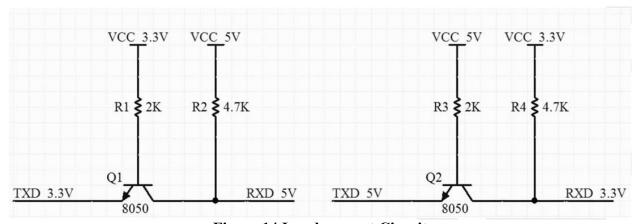


Figure 13 DC-DC Buck Circuit Diagram

#### **7.5. GPIO**

- Some IO ports are led out from the periphery of the module. If you need to use a resistor of 10-100 ohms in series on the IO port. This can suppress overshoot and make the level on both sides more stable. It is helpful for both EMI and ESD
- For the up and down of the special IO port, please refer to the instructions in the specification, which will affect the startup configuration of the module
- The IO port of the module is 3.3V. If the level of the IO port of the main control and the module does not match, a level conversion circuit needs to be added
- If the IO port is directly connected to the peripheral interface or terminals such as pins, it is recommended to reserve ESD devices at the IO port wiring close to the terminals



**Figure 14 Level convert Circuit** 



### 8. Storage conditions

- The product sealed in the moisture-proof bag should be stored in a non-condensing atmosphere of <40°C/90% RH.
- The moisture sensitivity level MSL of the module is level 3.
- After the vacuum bag is unpacked, it must be used within 168 hours at 25±5°C/60% RH, otherwise it needs to be baked before it can be put on line again.

### 9. Reflow Welding Curve

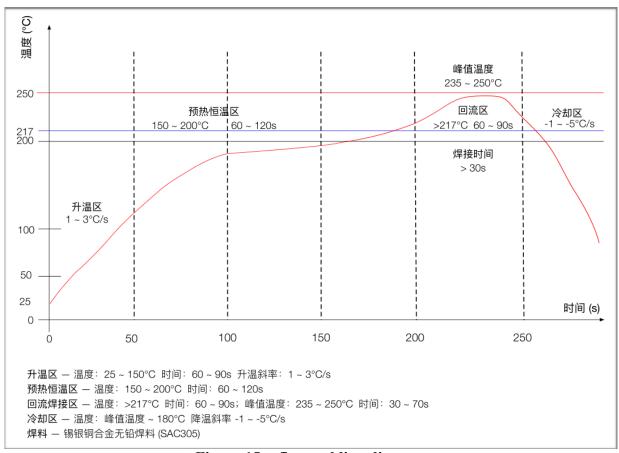


Figure 15 reflow welding diagram



### 10. Product packaging information

TB-05 module is packaged in a tape, 1350pcs/reel. As shown in the below image



Figure 16 Package and packing diagram

### 11. Contact us

Ai-Thinker offical website Office forum Develop DOCS

<u>LinkedIn</u> <u>Tmall shop</u> <u>Taobao shop</u> <u>Alibaba shop</u>

Technic support email: support@aithinker.com

Domestic business cooperation: sales@aithinker.com

Overseas business cooperation: overseas@aithinker.com

Company Address: Room 403,408-410, Block C, Huafeng Smart Innovation Port, Gushu 2nd Road, Xixiang, Baoan District, Shenzhen.

Tel: 0755-29162996



Wechat mini program



WeChat offical account



### **Disclaimer and Copyright Notice**

The information in this article, including the URL address for reference, is subject to change without notice.

The document is provided "as is" without any warranty, including any warranty of merchantability, suitability for a particular purpose or non-infringement, and any warranty mentioned elsewhere in any proposal, specification or sample. This document is not responsible for any infringement of any patent rights arising from the use of the information in this document. This document does not hereby grant any license for the use of intellectual property, whether express or implied, by estoppel or otherwise.

The test data obtained in this paper are all obtained by the laboratory test of Ai-Thinker, and the actual results may be slightly different.

It is hereby declared that all trade names, trademarks and registered trademarks mentioned in this article are the property of their respective owners.

The final interpretation right belongs to Shenzhen Ai-Thinker Technology Co., Ltd.

#### **Notice**

The contents of this manual may change due to product version upgrades or other reasons.

Shenzhen Ai-Thinker Technology Co., Ltd. reserves the right to modify the contents of this manual without any notice or prompt.

This manual is only used as a guide. Shenzhen Ai-Thinker Technology Co., Ltd. makes every effort to provide accurate information in this manual. However, Shenzhen Ai-Thinker Technology Co., Ltd. does not ensure that the contents of the manual are completely error-free, and all statements, information and suggestions in this manual do not constitute any express or implied guarantee.



#### Integration instructions for host product manufacturers according to KDB 996369 D03 OEM Manual v01

#### 2.2 List of applicable FCC rules

The TB-05 is an BT Module with GFSK modulation. It operates on the 2402MHz~2480MHz band and, therefore, is within U.S.

FCC part 15.247 standard

#### 2.3 Specific operational use conditions

The EUT is a BT Module

BLE:

Operation Frequency: 2402-2480MHz for BLE;

Modulation Type: GFSK

Number Of Channel: 40 channels

Antenna Designation: PCB Antenna

Antenna Gain: 1.64dBi

Support BLE5.1,rate support: 1Mbps,2Mbps Own 64KB SRAM, 256KB flash,96 KB ROM, 256bit efuse

Support UART/GPIO/ADC/PWM/I2C/SPI/PDM/DMA interface Adopt SMD-22 package,

Support multiple sleep modes, deep sleep current is less than  $1 \mathrm{uA}\ ,$ 

Support for serial local upgrade and remote Firmware upgrade(FOTA)

Universal AT instructions can be used easy and quickly,

Support for secondary development, with an integrated Windows development environment

#### 2.4 Limited module procedures

not applicable; Single Modular Approval Request

#### 2.5 Trace antenna designs

Not applicable;

#### 2.6 RF exposure considerations

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure

condition without restriction

#### 2.7 Antennas

The TB-05 is an BT Module beams signals and communicates with its antenna, which is PCB



Antenna. The PCB Antenna gain is 1.64dBi. Antenna could not be in no-load state when module is working. During debugging, it is suggested to add 50 ohms load to the antenna port to avoid damage or performance degradation of the module under long-time no-load condition.

#### 2.8 Label and compliance information

The final end product must be label in a visible area with the following

Host must Contains FCC ID: 2ATPO-TB05. If the size of the end product is larger than 24x16mm, then the following FCC part 15.19 statement has to also be available on the label: This device complies with

Part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### 2.9 Information on test modes and additional testing requirements

Data transfer module demo board can control the EUT work in RF test mode at specified test channel.

#### 2.10 Additional testing, Part 15 Subpart B disclaimer

The module without unintentional-radiator digital circuit, so the module does not required an evaluation by FCC Part 15 Subpart B. The host should be evaluated by the FCC Subpart B.

#### **ATTENTION**

This device is intended only for OEM integrators under the following conditions:

- 1) The antenna must be installed such that 5 mm is maintained between the antenna and users, and
- 2) This device and its antenna(s) must not be co located with any other transmitters except in accordance with FCC multi transmitter product procedures. Referring to the multi transmitter policy, multiple transmitter(s) and module(s) can be operated simultaneously without C2P.
- 3) For all products market in US, OEM has to limit the Operating Frequency: 2402-2480MHz by supplied firmware programming tool. OEM shall not supply any tool or info to the end user regarding to

Regulatory Domain change.

USERS MANUAL OF THE END PRODUCT:

In the user manual of the end product, the end user has to be informed to keep at least 5mm separation with the antenna while this



end product is installed and operated. The end user has to be informed that the FCC radio - frequency exposure guidelines for an uncontrolled environment can be satisfied. The end user has to also be informed that any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment.

If the size of the end product is smaller than 8x10cm, then additional FCC part 15.19 statement is required to be available in the users manual: This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC WARNING**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.