





Freq. Stability NVNT a 5240MHz Ant1

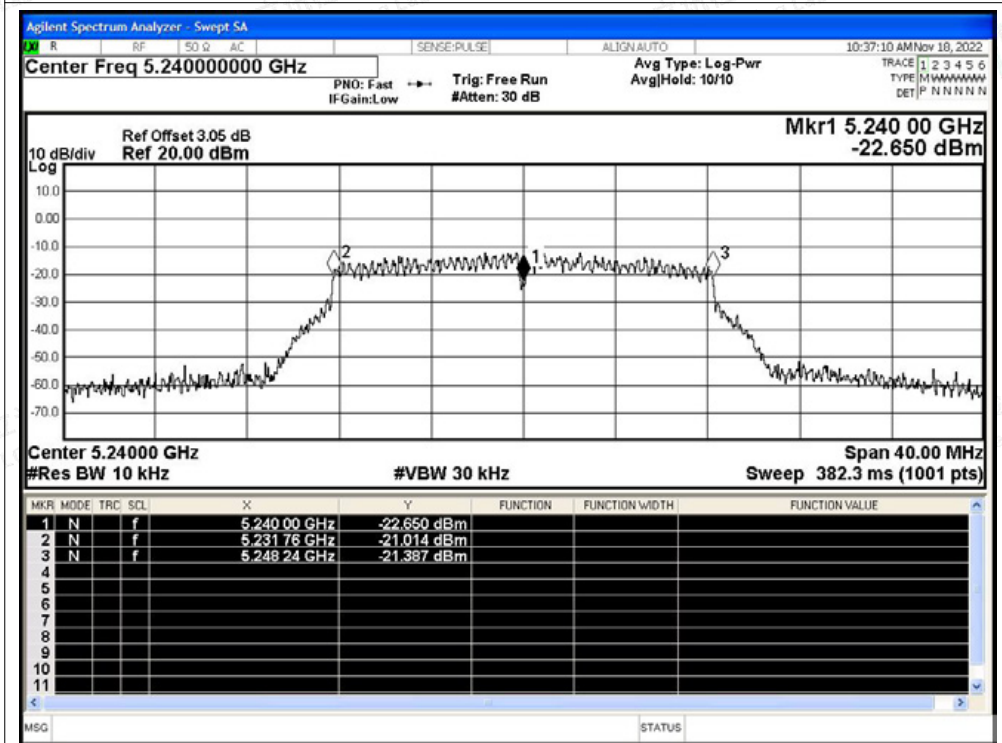


Freq. Stability NVNT n20 5180MHz Ant1

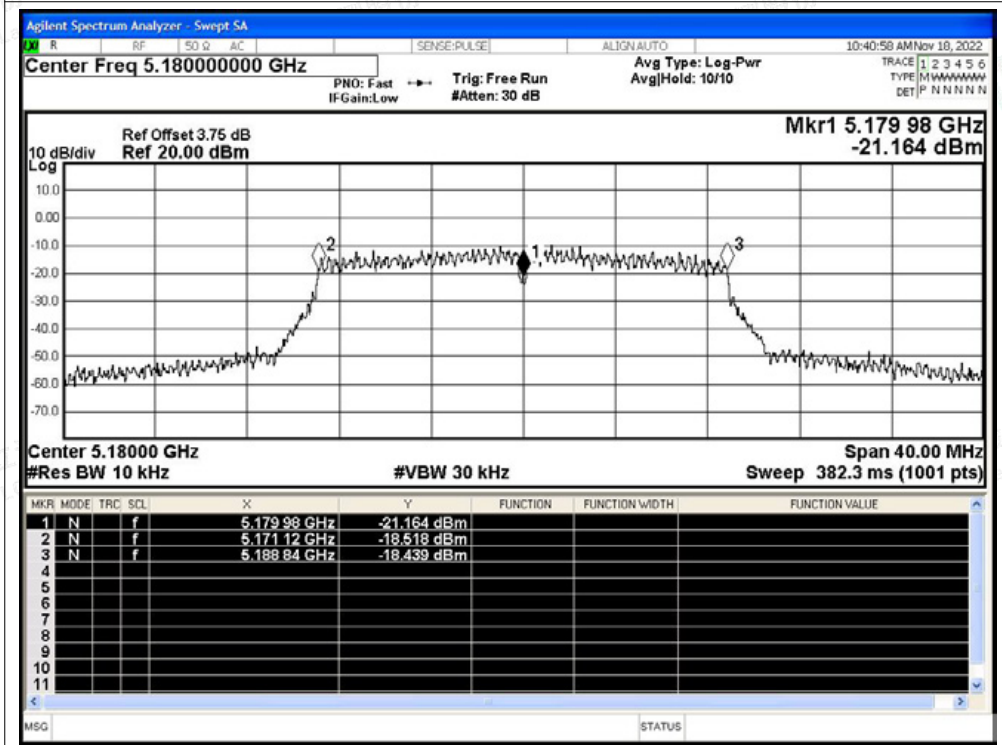




Freq. Stability NVNT n20 5200MHz Ant1

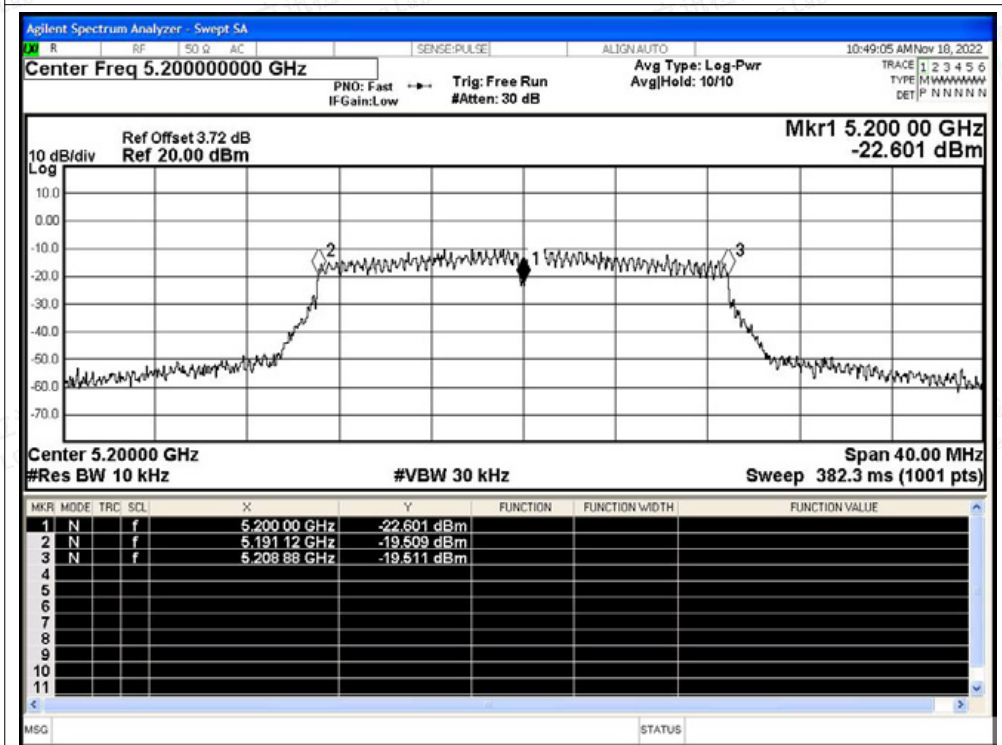


Freq. Stability NVNT n20 5240MHz Ant1

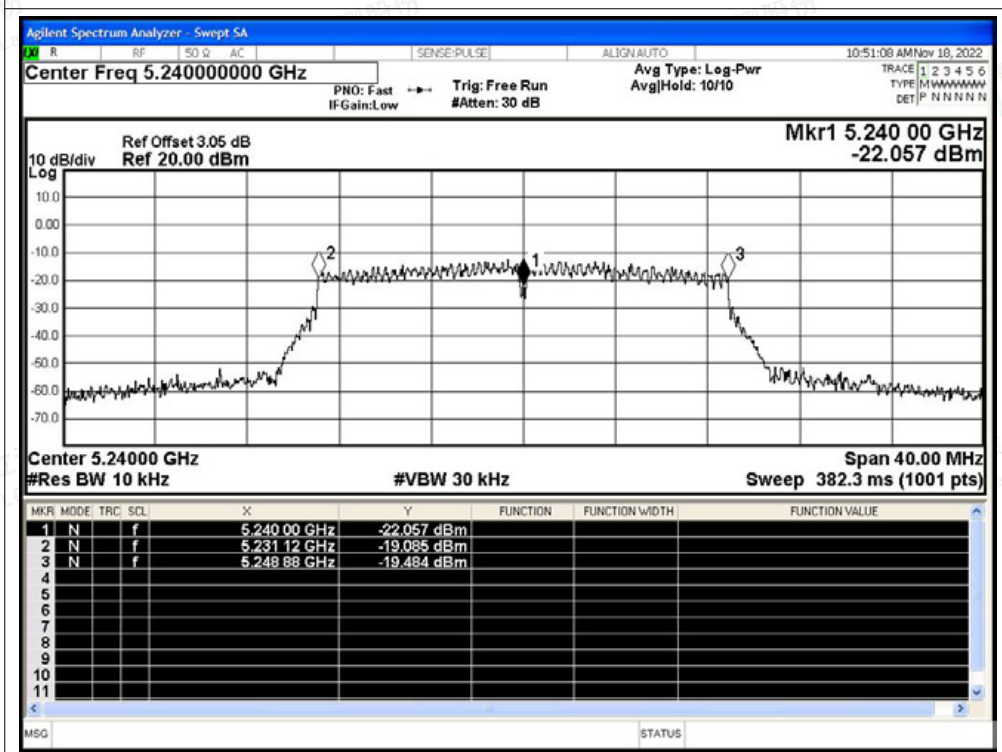




Freq. Stability NVNT n40 5190MHz Ant1

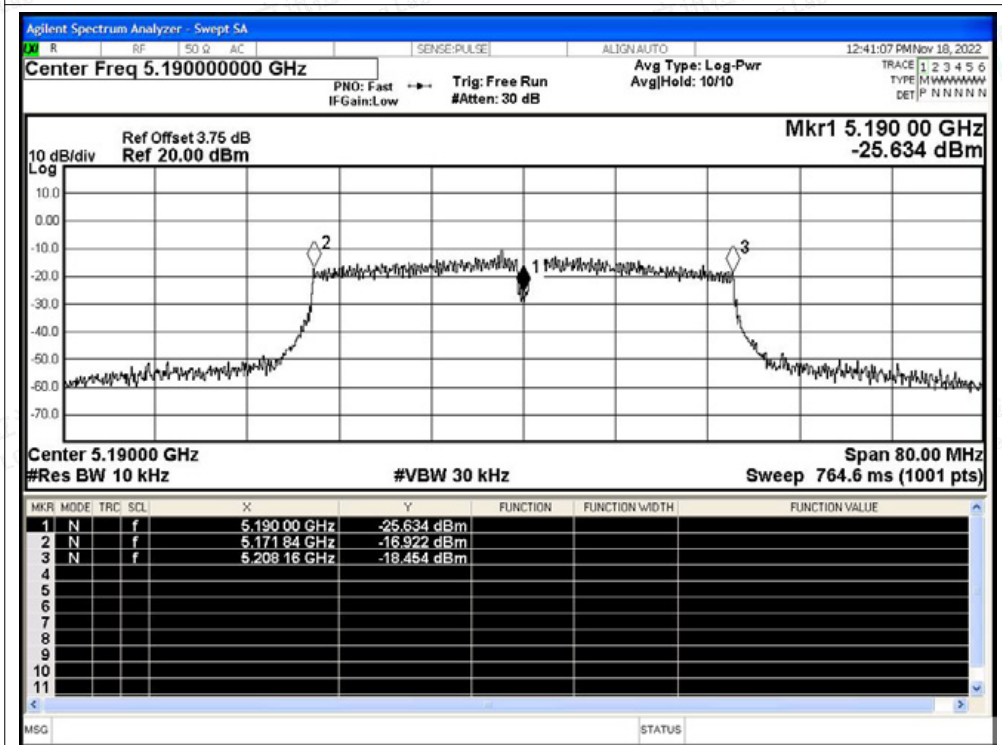


Freq. Stability NVNT n40 5230MHz Ant1

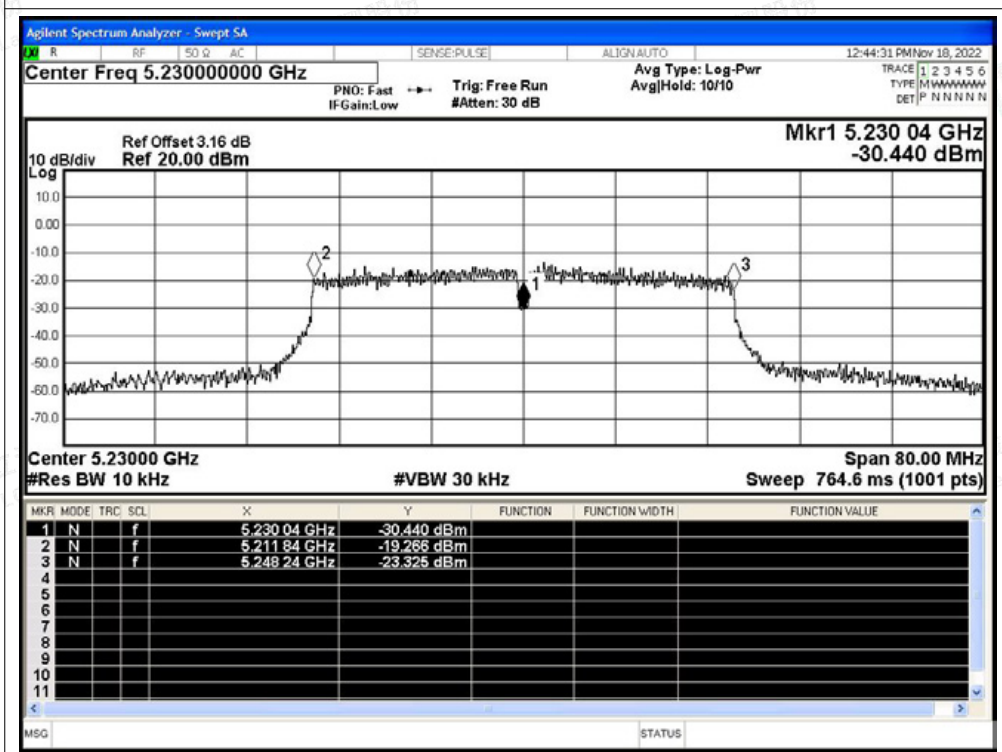




Freq. Stability NVNT ac20 5180MHz Ant1

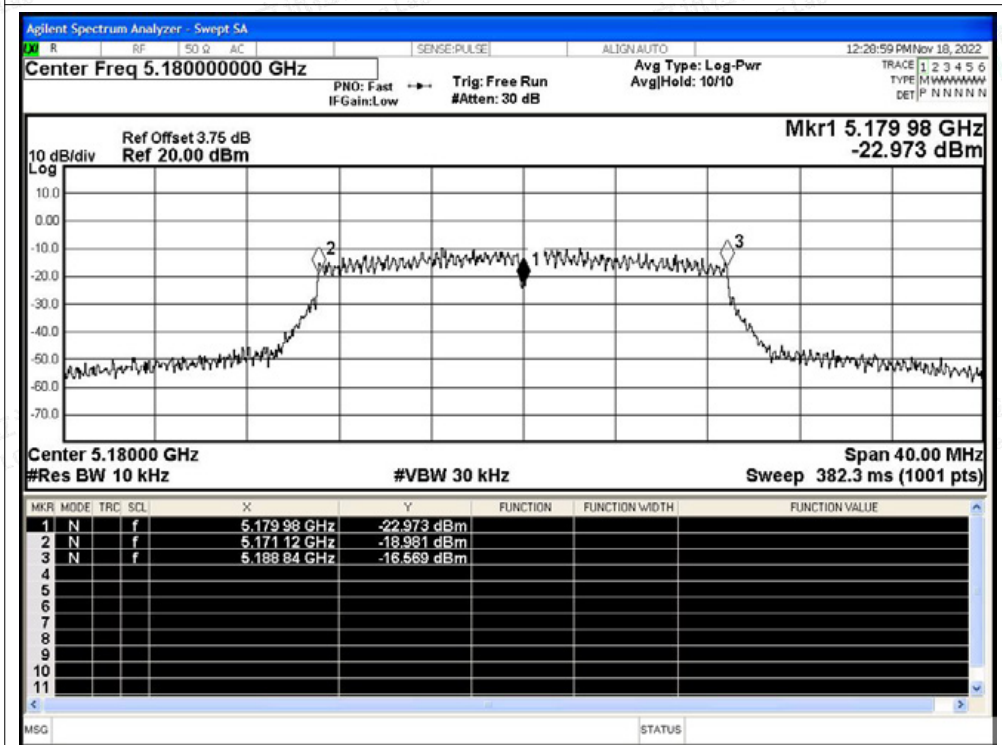


Freq. Stability NVNT ac20 5200MHz Ant1

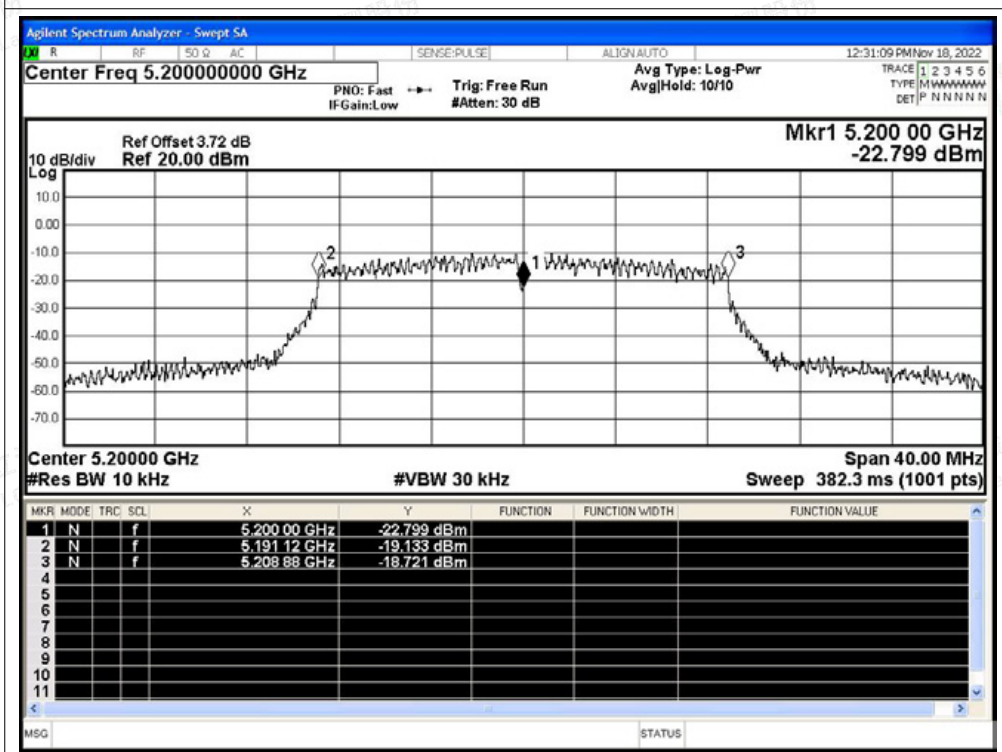




Freq. Stability NVNT ac20 5240MHz Ant1

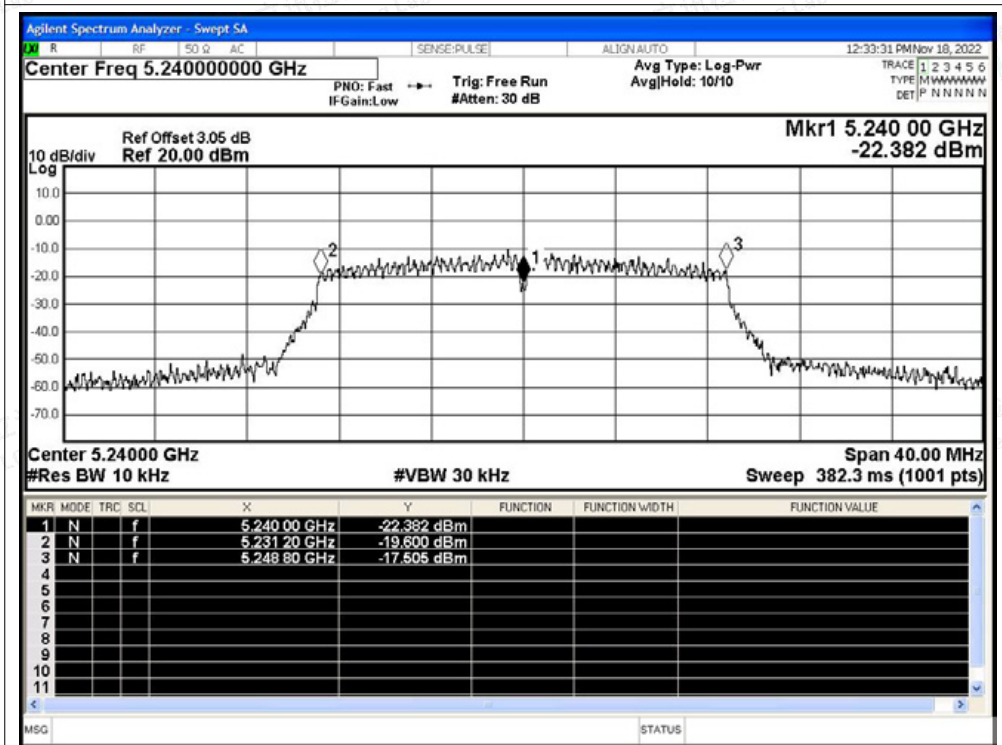


Freq. Stability NVNT ac40 5190MHz Ant1

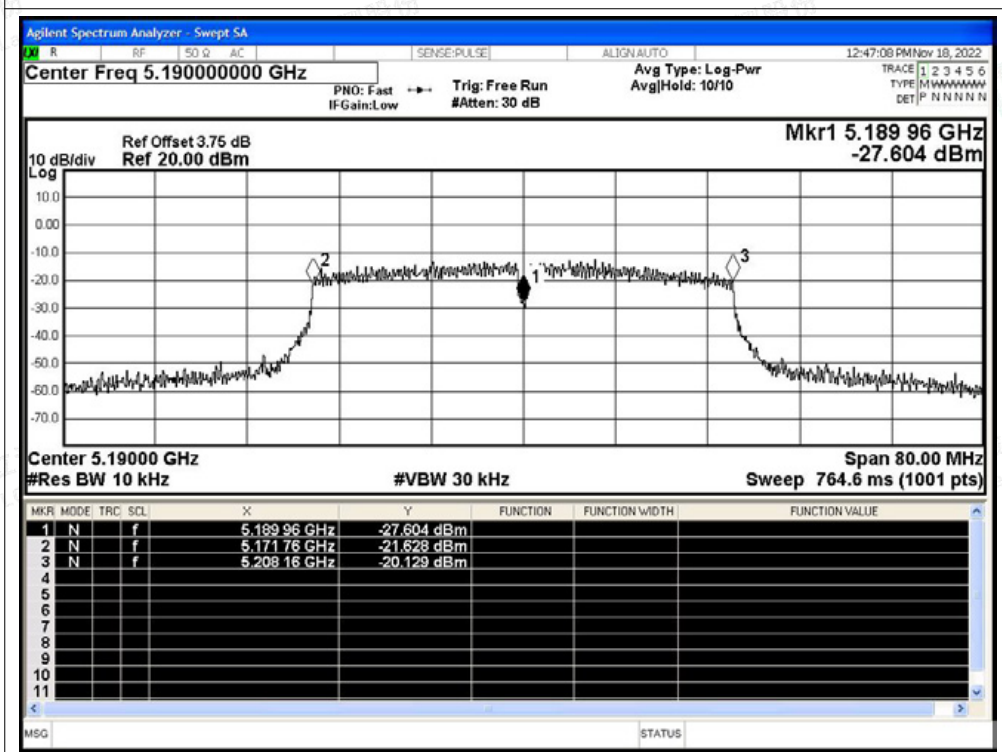




Freq. Stability NVNT ac40 5230MHz Ant1

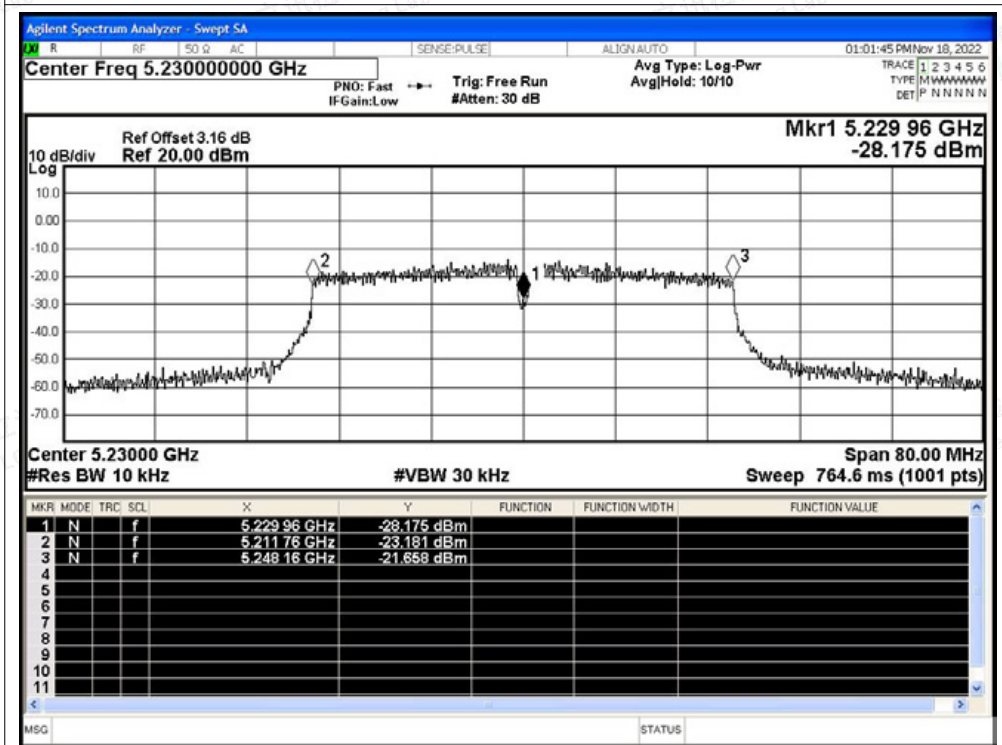

Freq. Stability NVNT ac80 5210MHz Ant1

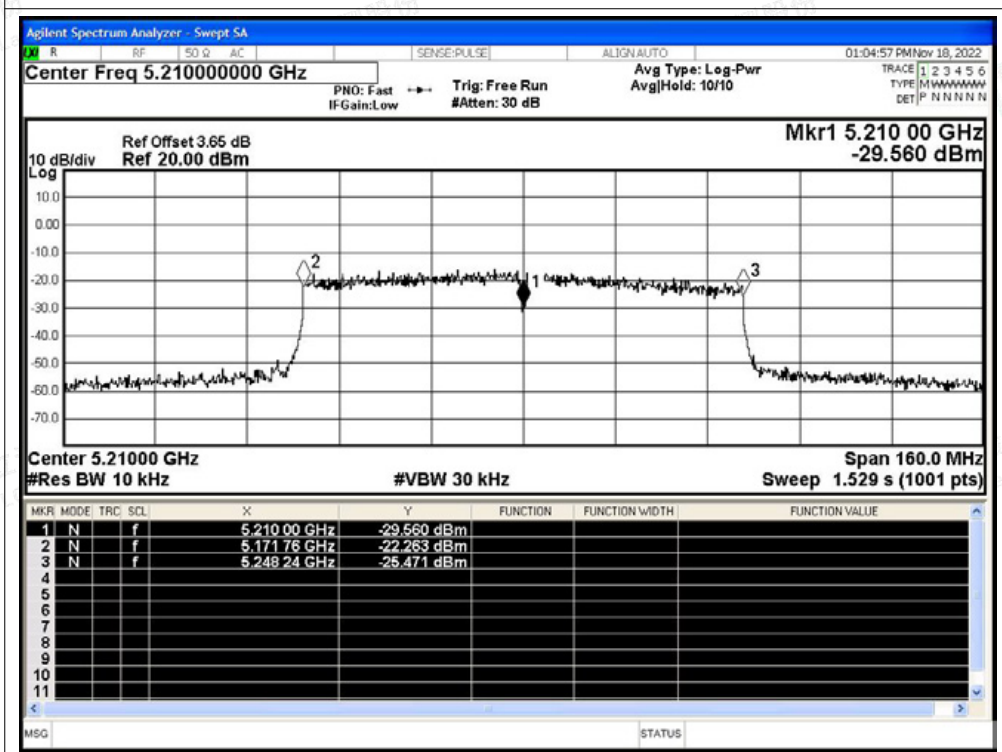



B.6 Duty Cycle


| Condition | Mode | Frequency (MHz) | Antenna | Duty Cycle (%) | Correction Factor (dB) | 1/T (kHz) |
|-----------|------|-----------------|---------|----------------|------------------------|-----------|
| NVNT | a | 5180 | Ant0 | 96.87 | 0.14 | 0.72 |
| NVNT | a | 5200 | Ant0 | 96.94 | 0.13 | 0.72 |
| NVNT | a | 5240 | Ant0 | 96.94 | 0.13 | 0.72 |
| NVNT | n20 | 5180 | Ant0 | 96.7 | 0.15 | 0.78 |
| NVNT | n20 | 5200 | Ant0 | 96.62 | 0.15 | 0.78 |
| NVNT | n20 | 5240 | Ant0 | 96.7 | 0.15 | 0.78 |
| NVNT | n40 | 5190 | Ant0 | 93.68 | 0.28 | 1.53 |
| NVNT | n40 | 5230 | Ant0 | 93.68 | 0.28 | 1.53 |
| NVNT | ac20 | 5180 | Ant0 | 96.7 | 0.15 | 0.76 |
| NVNT | ac20 | 5200 | Ant0 | 96.76 | 0.14 | 0.76 |
| NVNT | ac20 | 5240 | Ant0 | 96.76 | 0.14 | 0.76 |
| NVNT | ac40 | 5190 | Ant0 | 93.69 | 0.28 | 1.53 |
| NVNT | ac40 | 5230 | Ant0 | 93.68 | 0.28 | 1.53 |
| NVNT | ac80 | 5210 | Ant0 | 88.32 | 0.54 | 3.08 |






Test Graphs

Duty Cycle NVNT a 5180MHz Ant0

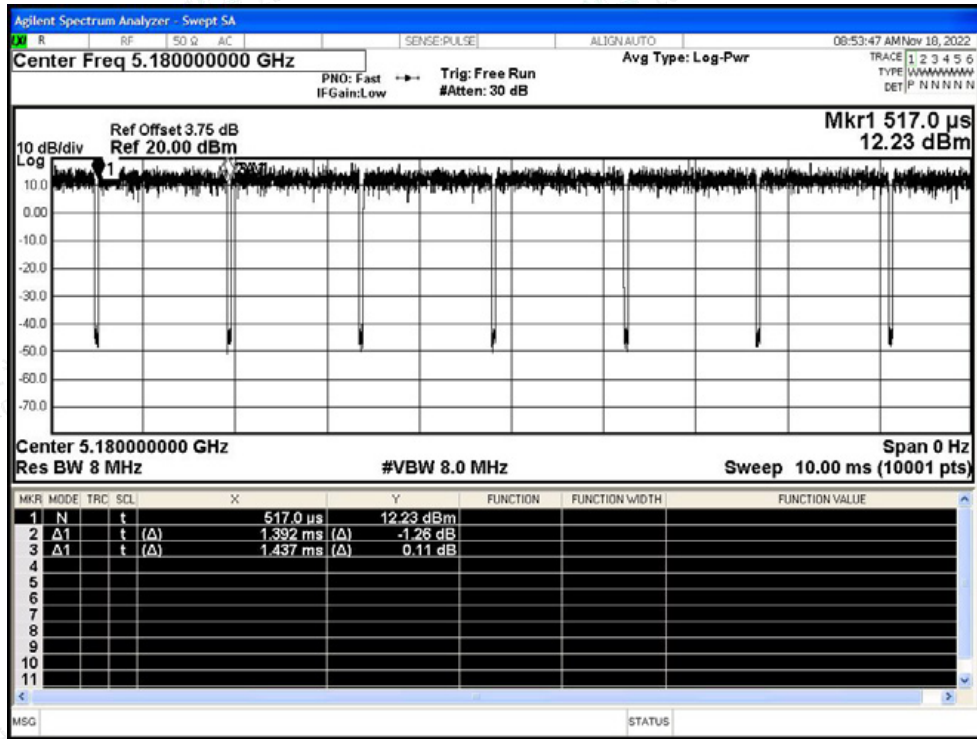


Duty Cycle NVNT a 5200MHz Ant0

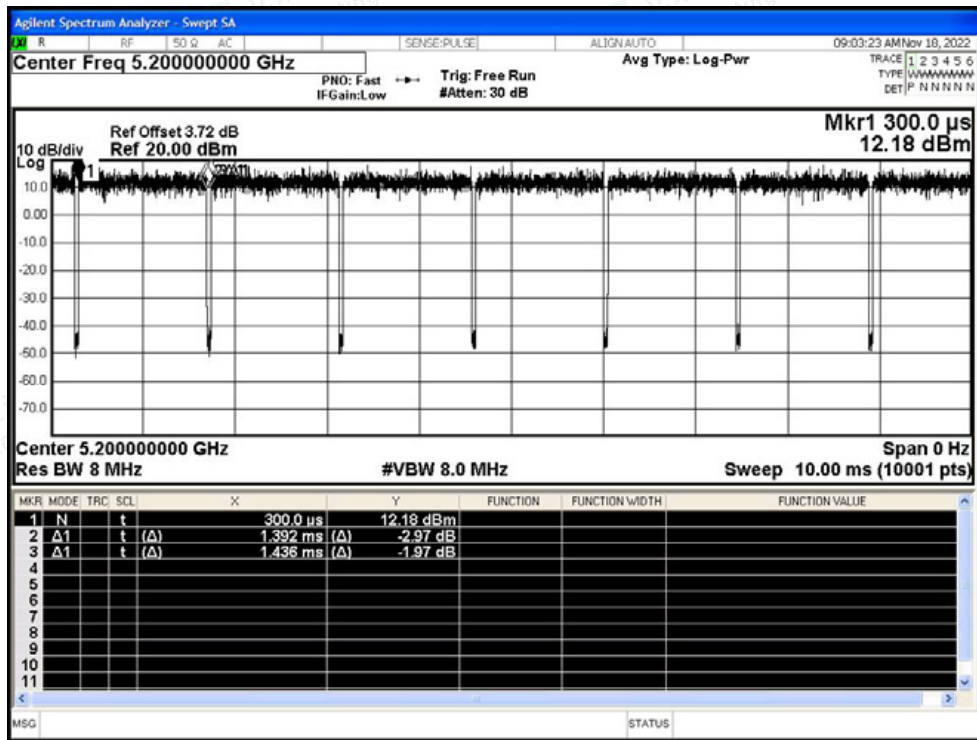




Duty Cycle NVNT a 5240MHz Ant0

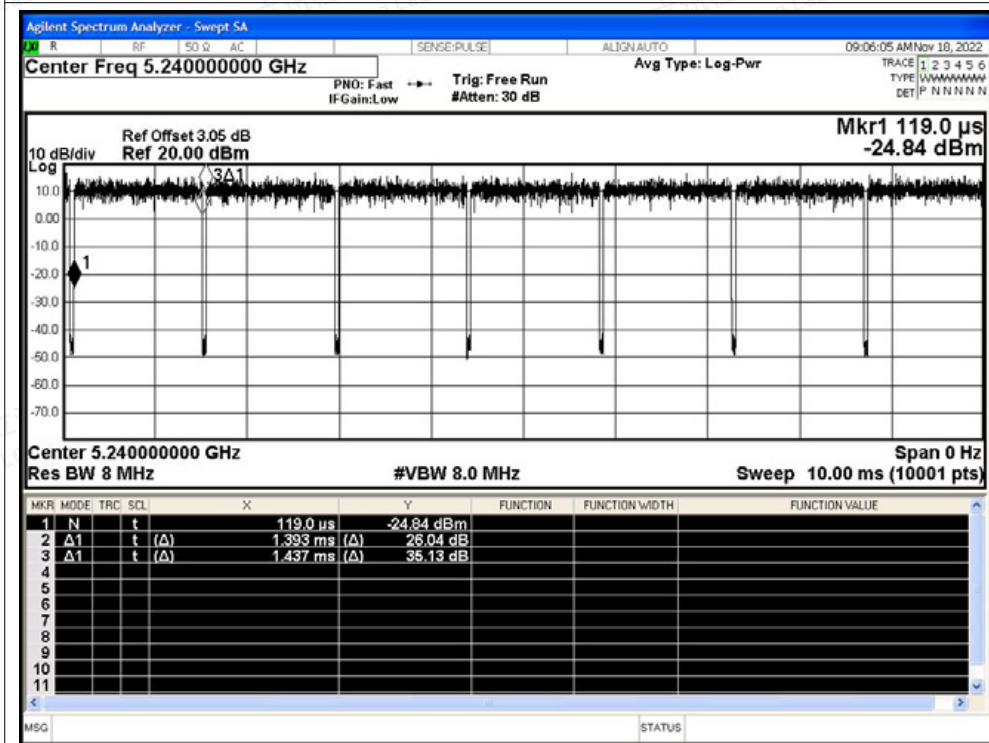


Duty Cycle NVNT n20 5180MHz Ant0

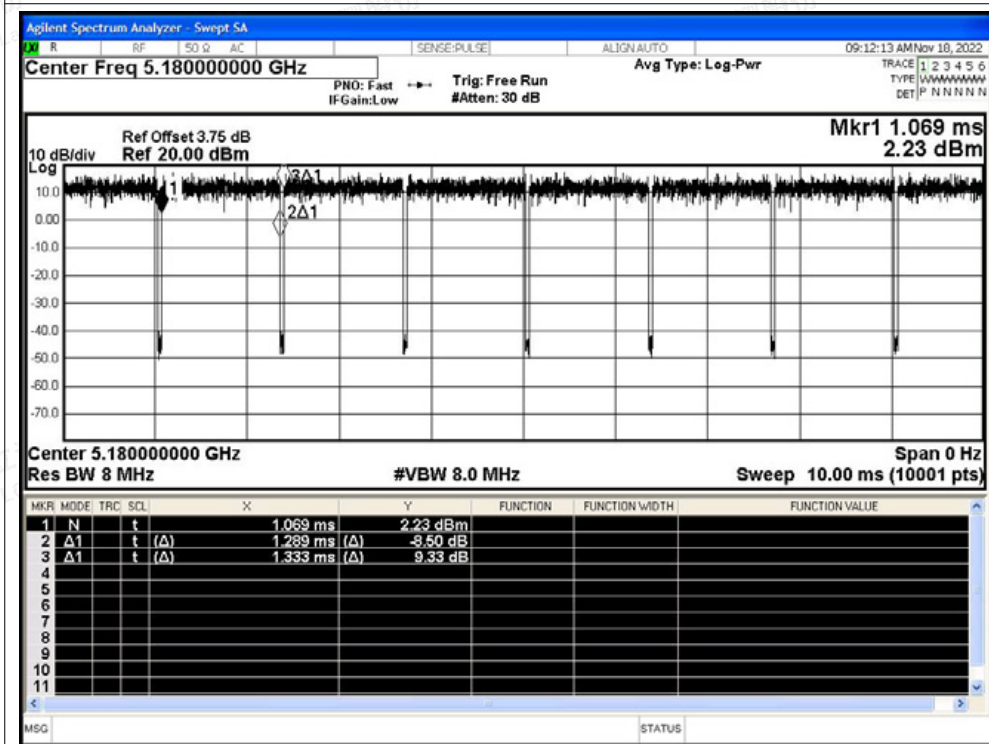




Duty Cycle NVNT n20 5200MHz Ant0

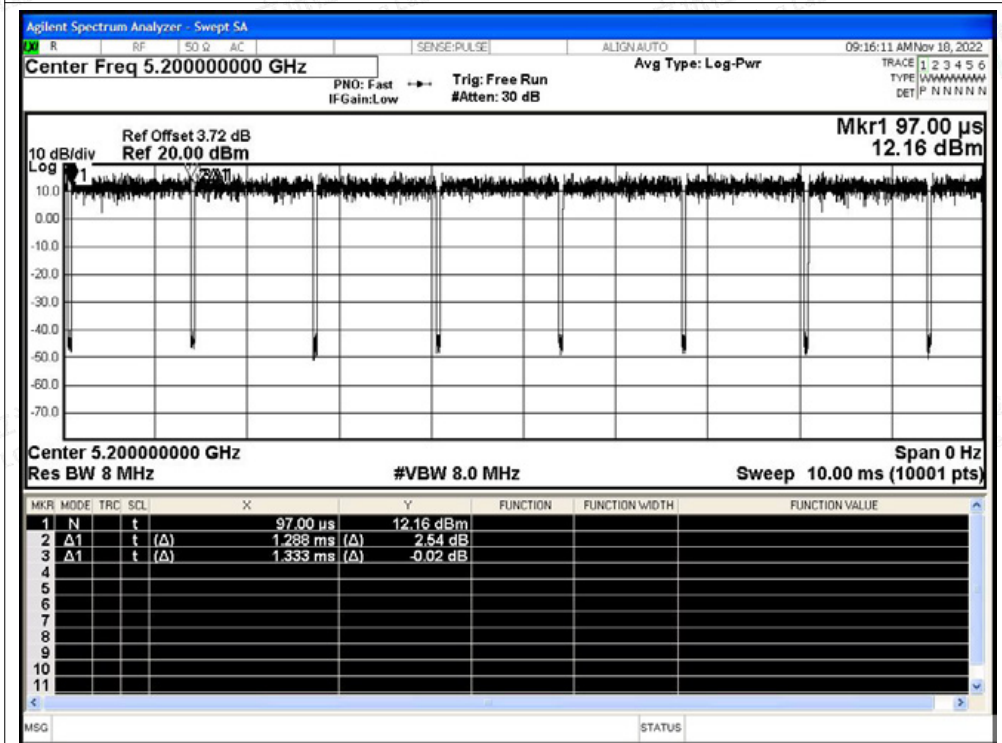


Duty Cycle NVNT n20 5240MHz Ant0

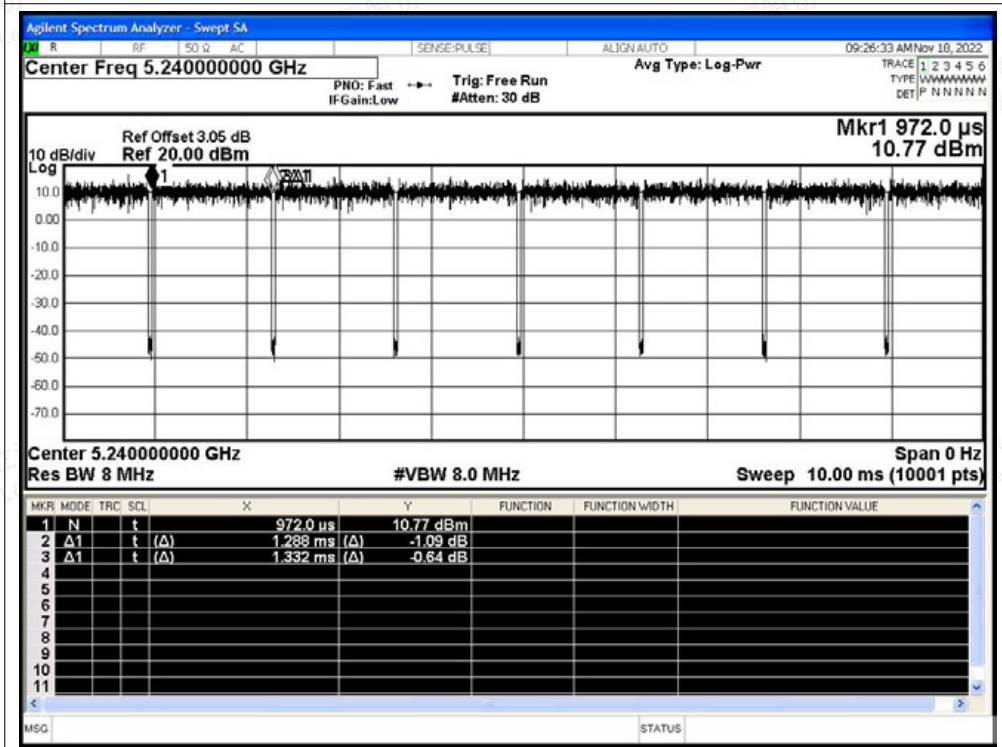




Duty Cycle NVNT n40 5190MHz Ant0

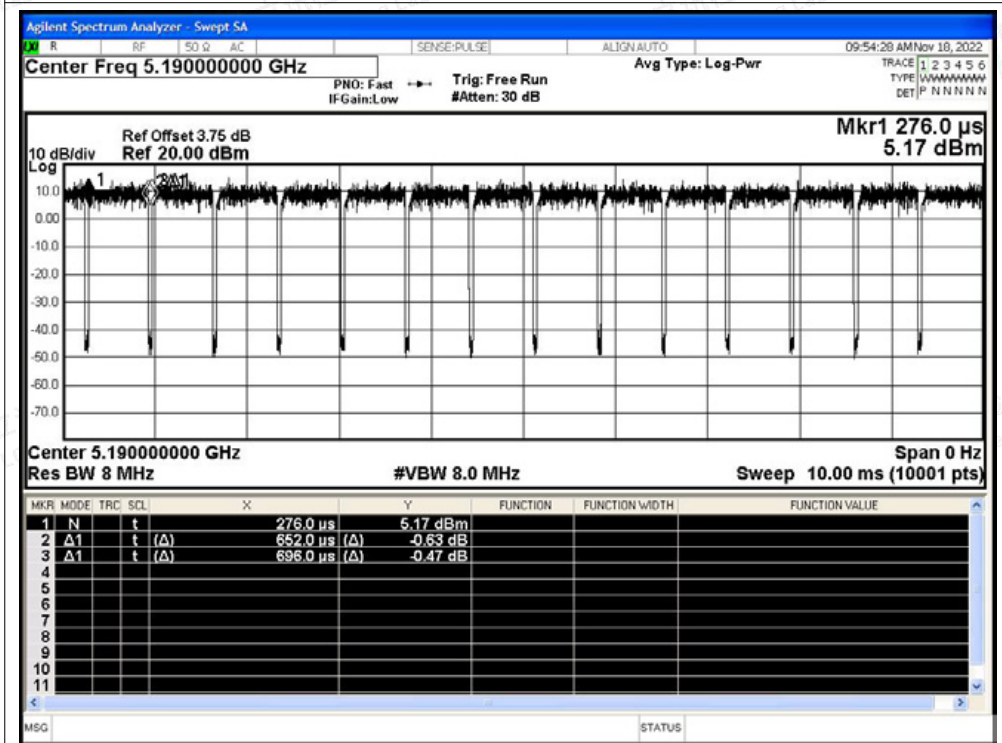


Duty Cycle NVNT n40 5230MHz Ant0

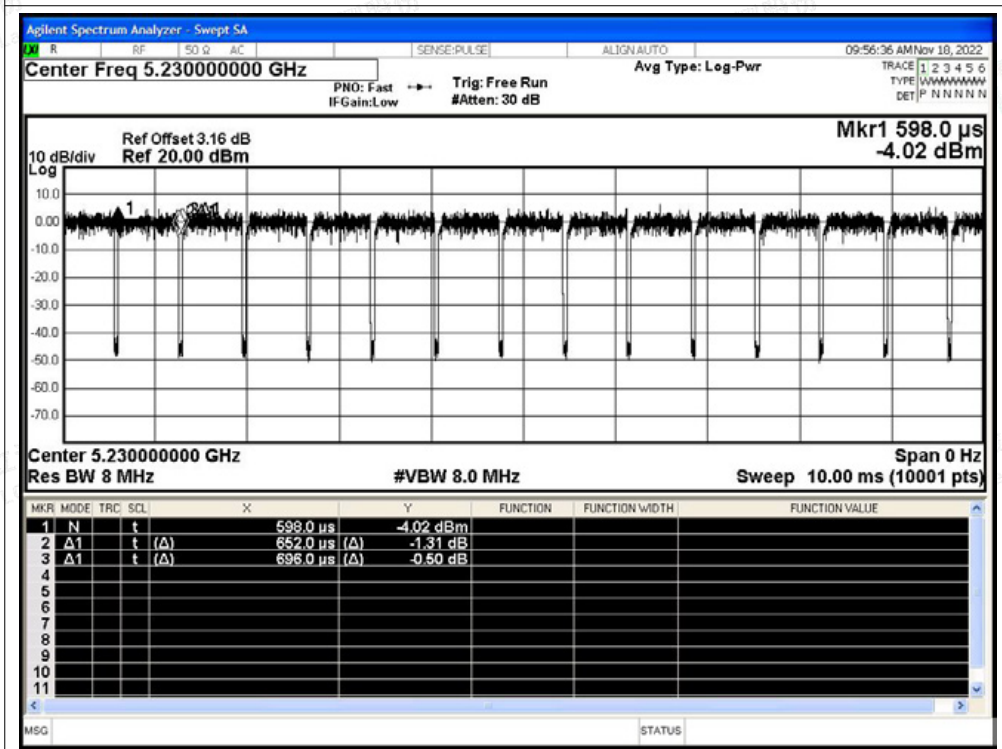




Duty Cycle NVNT ac20 5180MHz Ant0

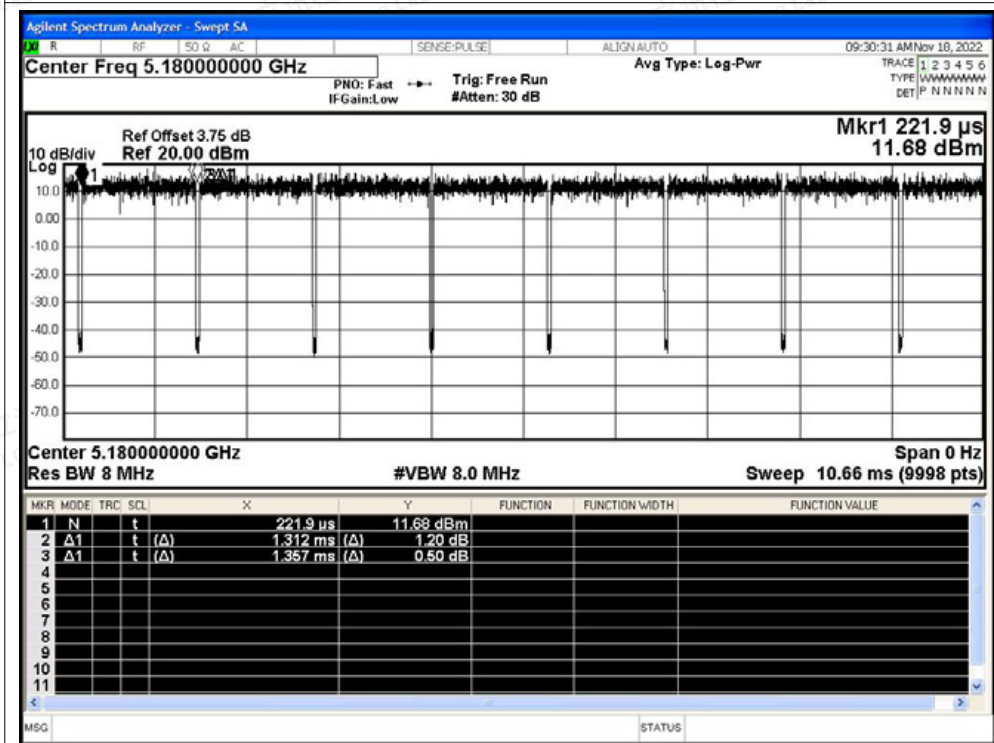


Duty Cycle NVNT ac20 5200MHz Ant0

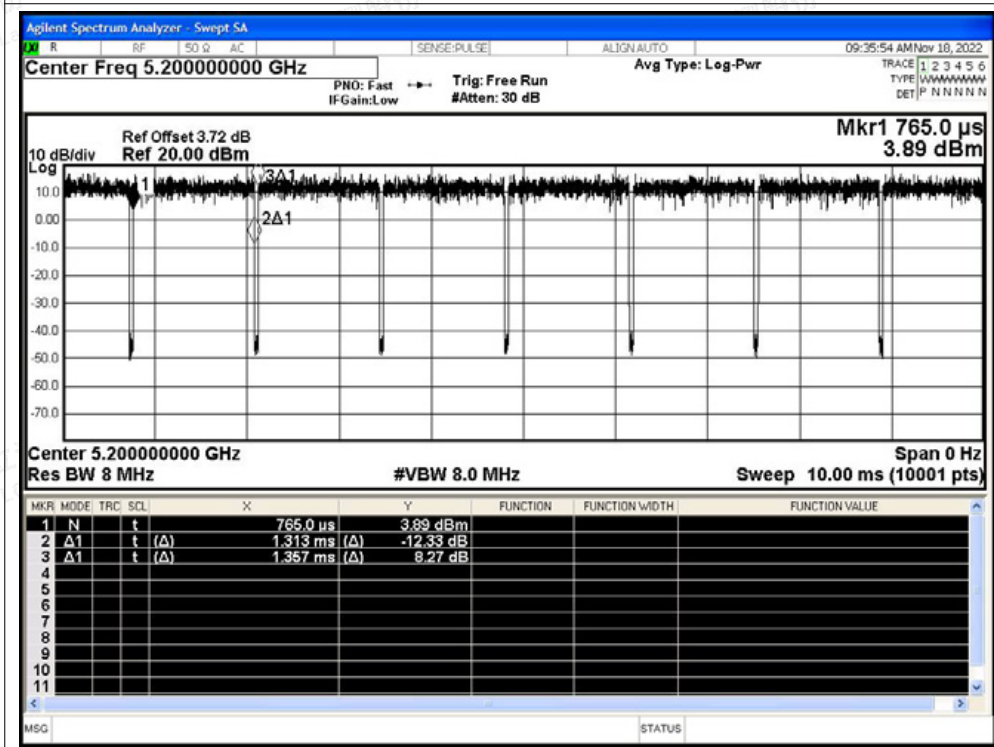




Duty Cycle NVNT ac20 5240MHz Ant0

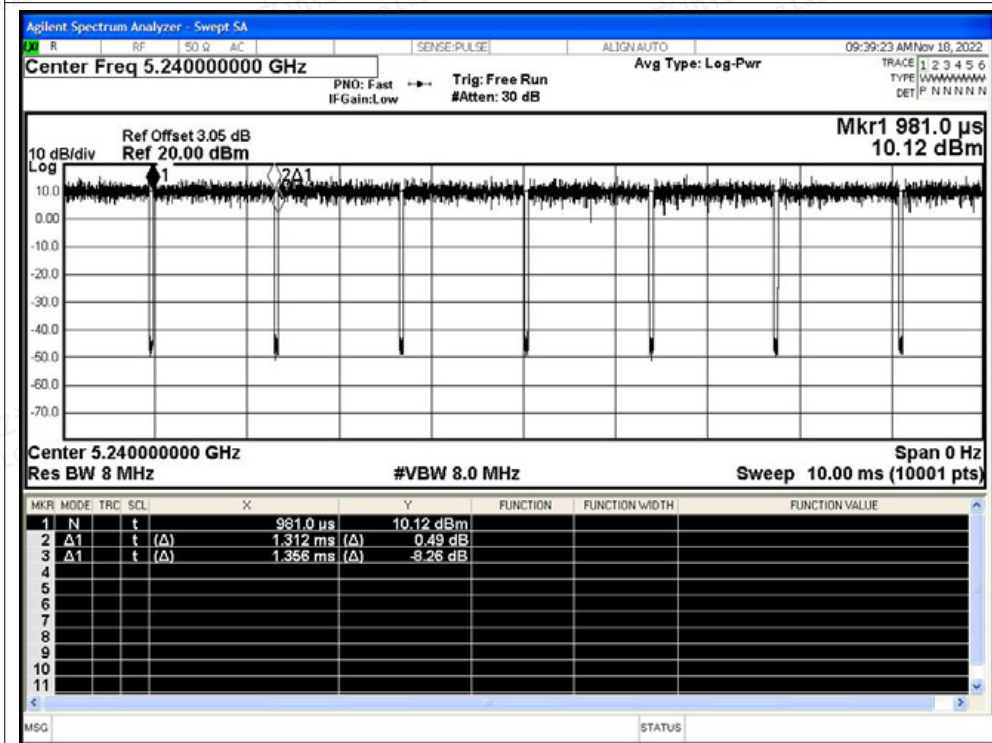


Duty Cycle NVNT ac40 5190MHz Ant0

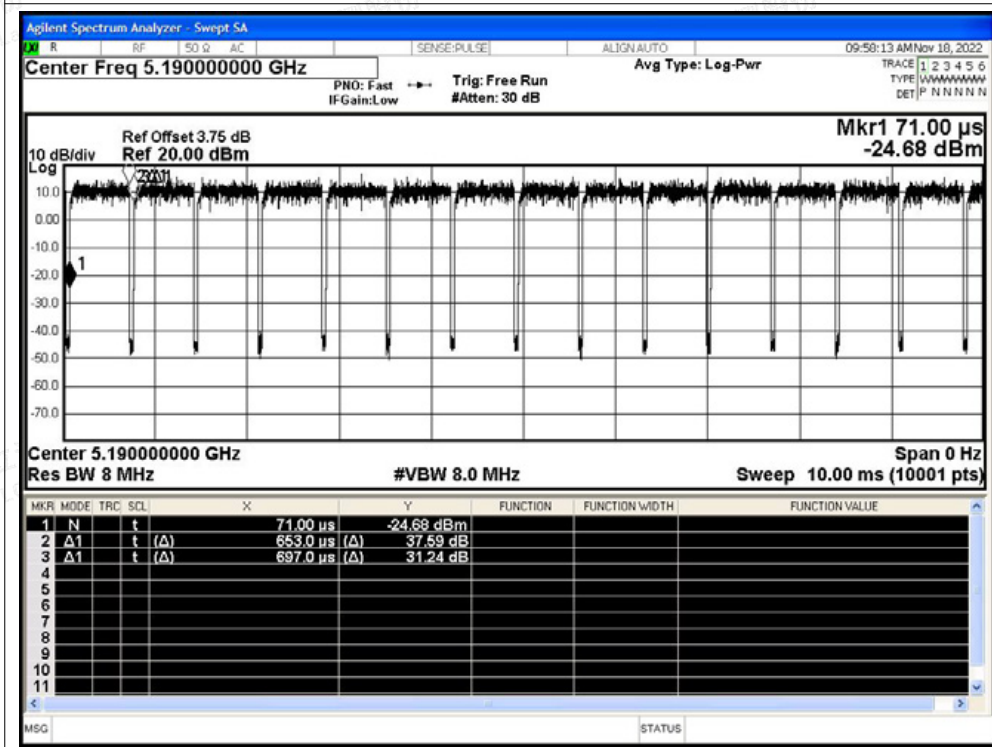




Duty Cycle NVNT ac40 5230MHz Ant0

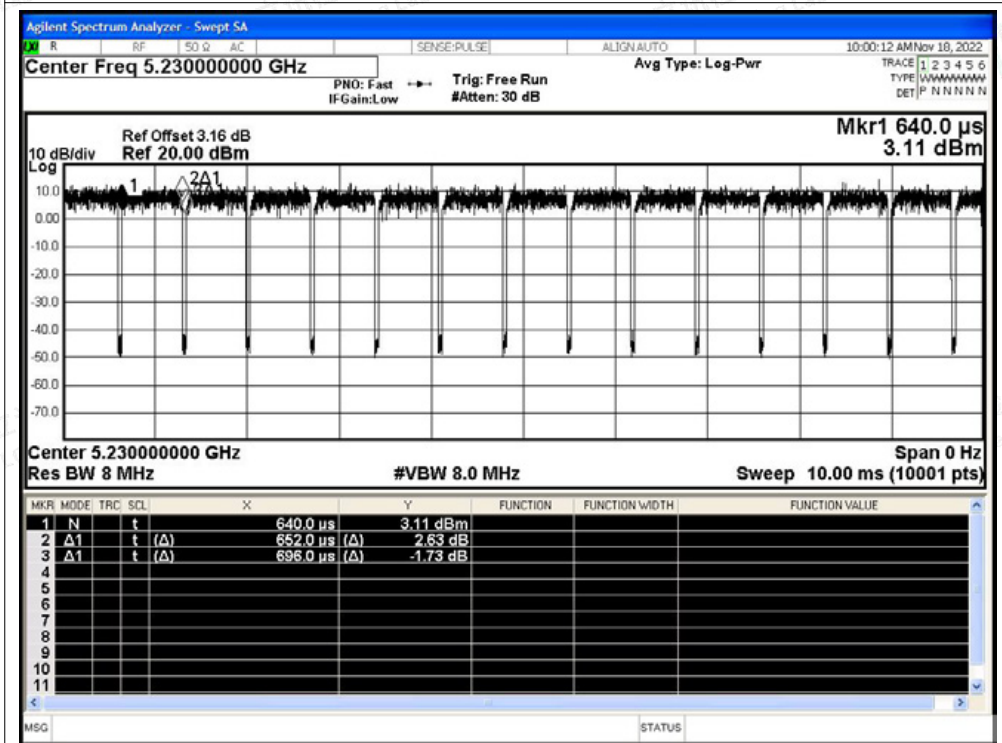

Duty Cycle NVNT ac80 5210MHz Ant0

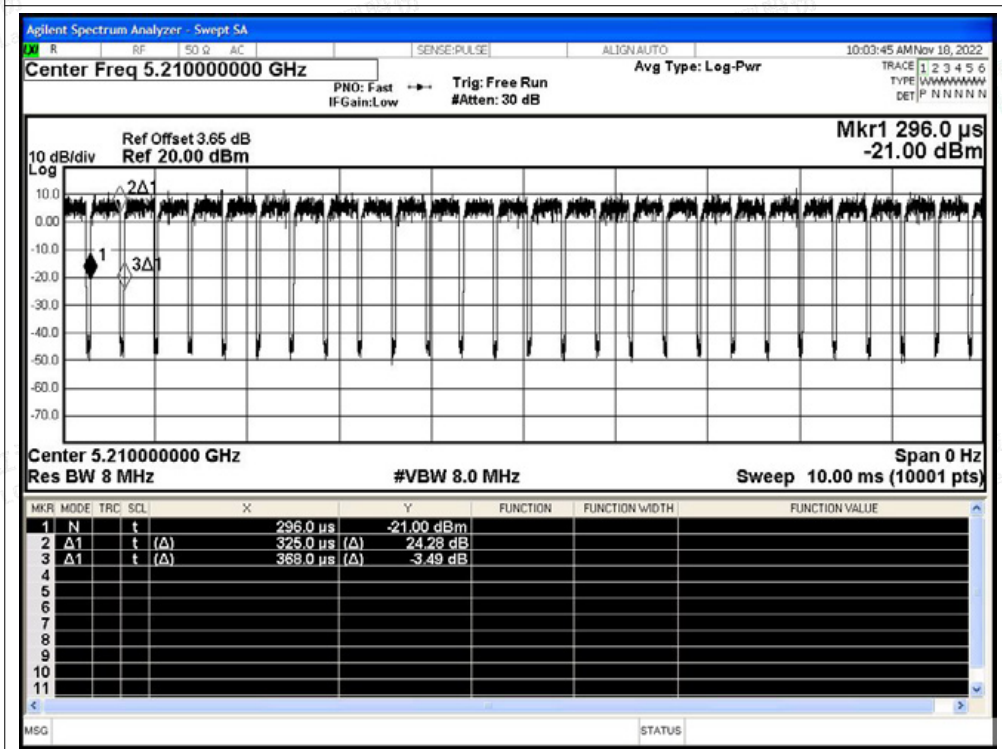



| Condition | Mode | Frequency (MHz) | Antenna | Duty Cycle (%) | Correction Factor (dB) | 1/T (kHz) |
|-----------|------|-----------------|---------|----------------|------------------------|-----------|
| NVNT | a | 5180 | Ant1 | 96.94 | 0.13 | 0.72 |
| NVNT | a | 5200 | Ant1 | 96.94 | 0.13 | 0.72 |
| NVNT | a | 5240 | Ant1 | 96.94 | 0.13 | 0.72 |
| NVNT | n20 | 5180 | Ant1 | 96.7 | 0.15 | 0.78 |
| NVNT | n20 | 5200 | Ant1 | 96.62 | 0.15 | 0.78 |
| NVNT | n20 | 5240 | Ant1 | 96.7 | 0.15 | 0.78 |
| NVNT | n40 | 5190 | Ant1 | 93.53 | 0.29 | 1.57 |
| NVNT | n40 | 5230 | Ant1 | 93.68 | 0.28 | 1.57 |
| NVNT | ac20 | 5180 | Ant1 | 96.78 | 0.14 | 0.76 |
| NVNT | ac20 | 5200 | Ant1 | 96.76 | 0.14 | 0.76 |
| NVNT | ac20 | 5240 | Ant1 | 96.76 | 0.14 | 0.76 |
| NVNT | ac40 | 5190 | Ant1 | 93.68 | 0.28 | 1.53 |
| NVNT | ac40 | 5230 | Ant1 | 93.69 | 0.28 | 1.53 |
| NVNT | ac80 | 5210 | Ant1 | 88.08 | 0.55 | 3.08 |




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Duty Cycle NVNT a 5180MHz Ant1

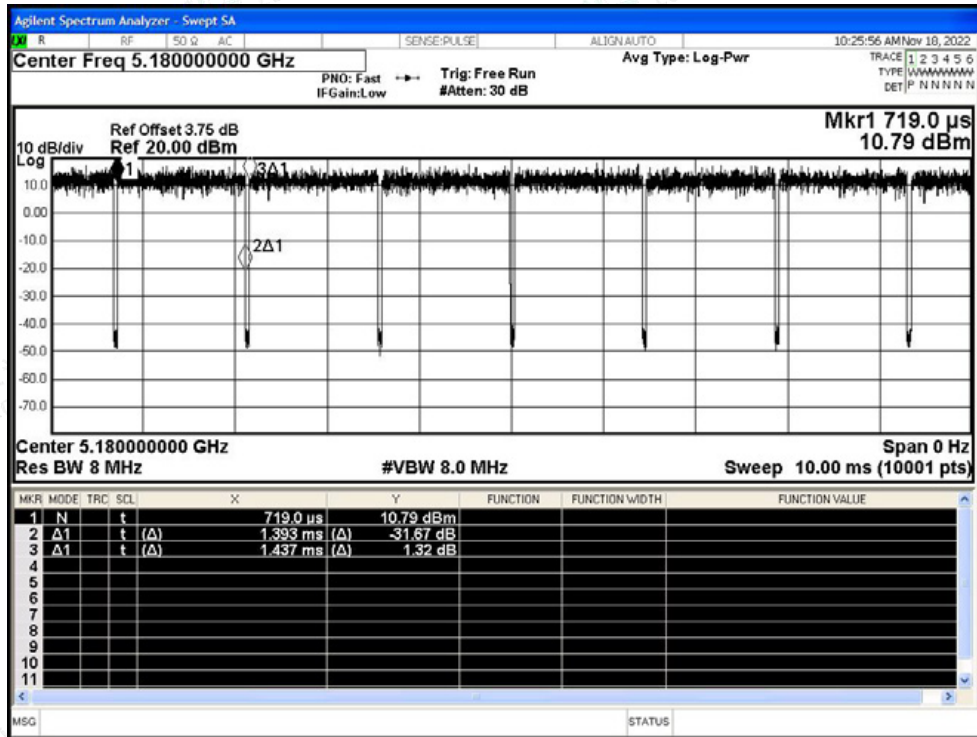


Duty Cycle NVNT a 5200MHz Ant1

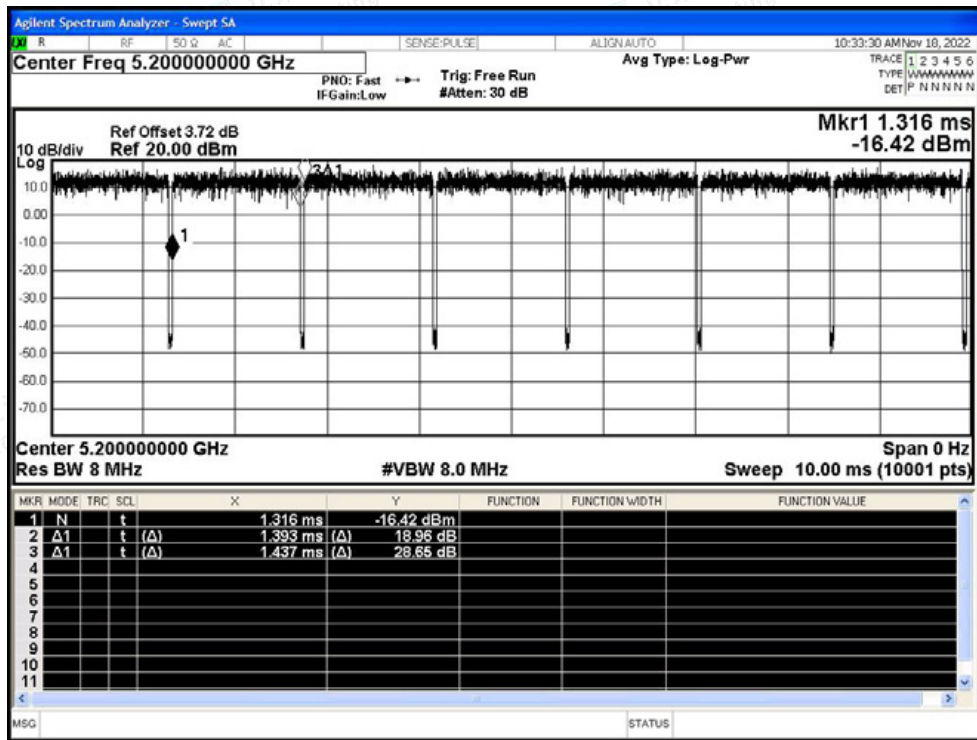




Duty Cycle NVNT a 5240MHz Ant1

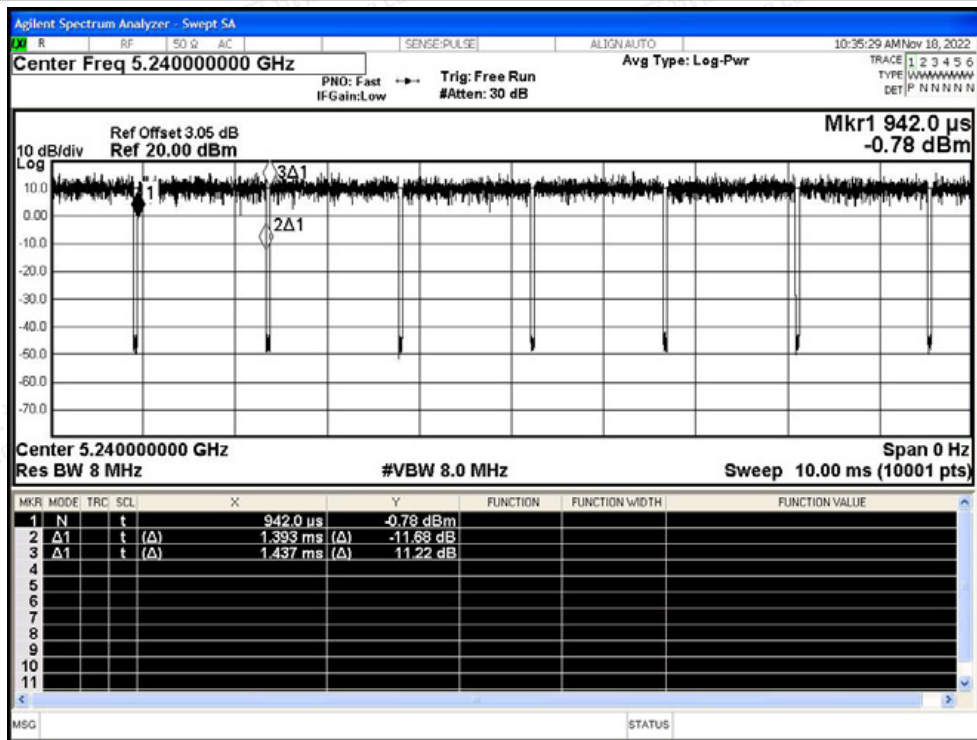


Duty Cycle NVNT n20 5180MHz Ant1

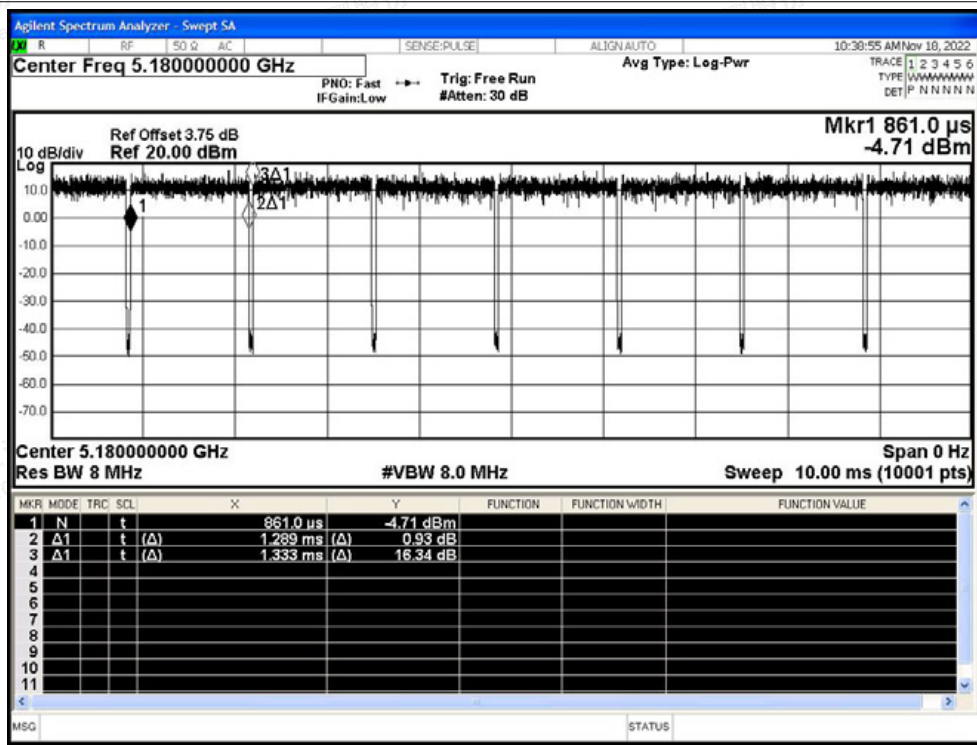




Duty Cycle NVNT n20 5200MHz Ant1

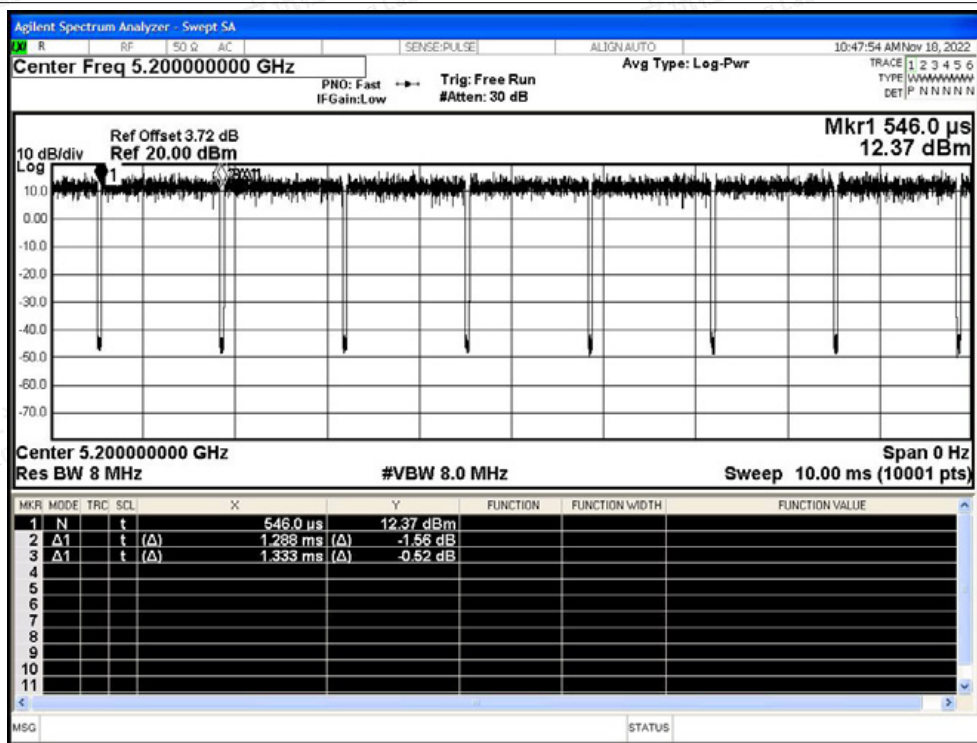


Duty Cycle NVNT n20 5240MHz Ant1

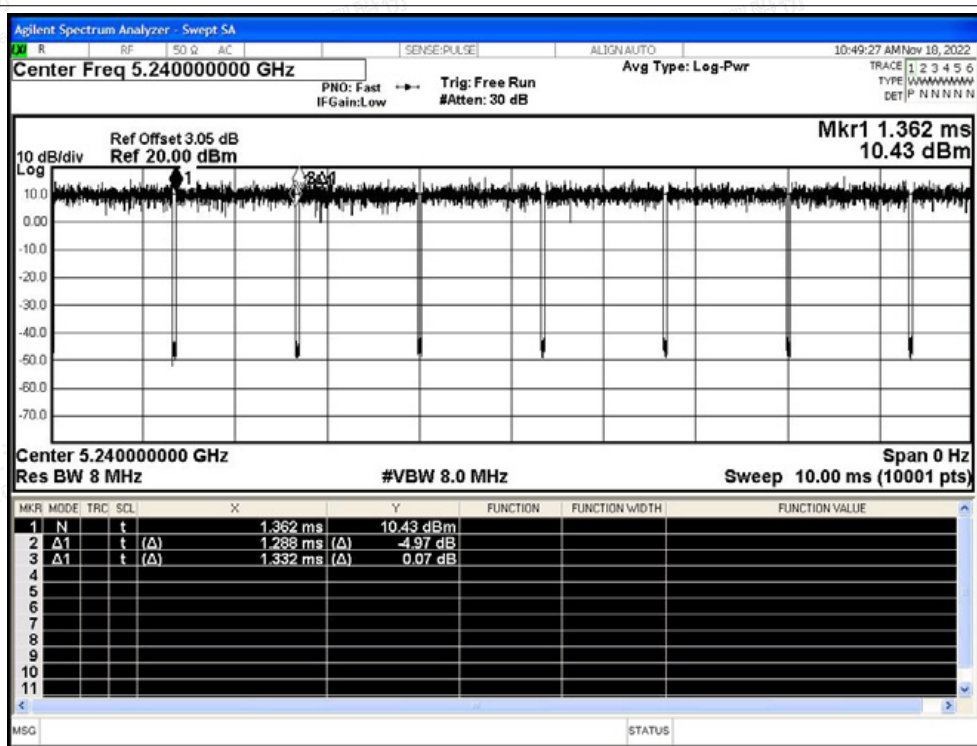




Duty Cycle NVNT n40 5190MHz Ant1

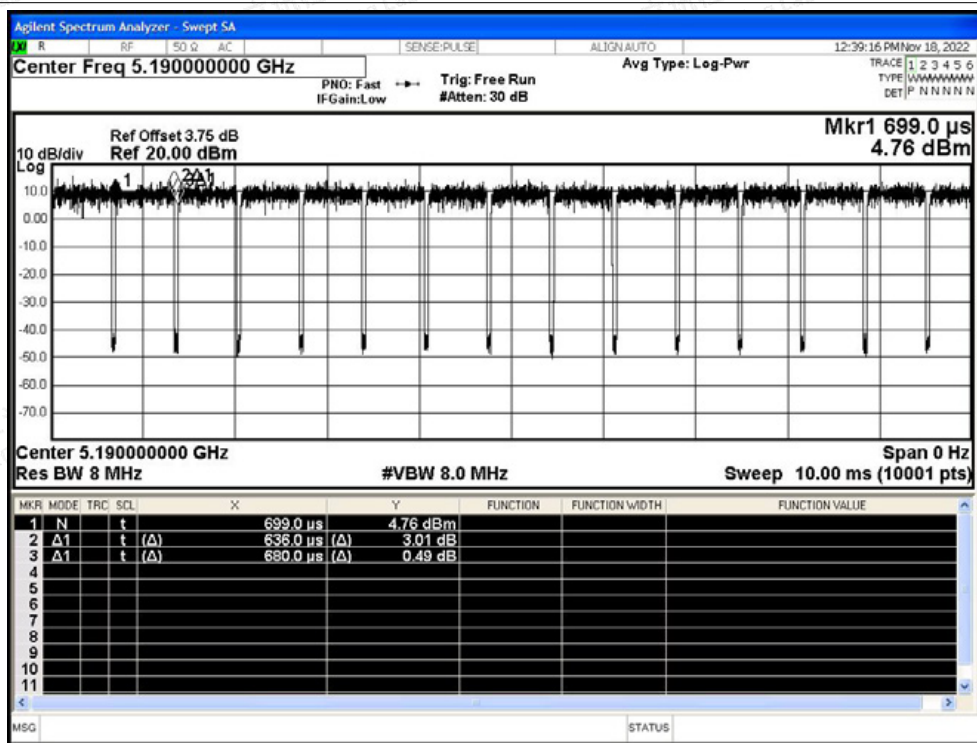


Duty Cycle NVNT n40 5230MHz Ant1

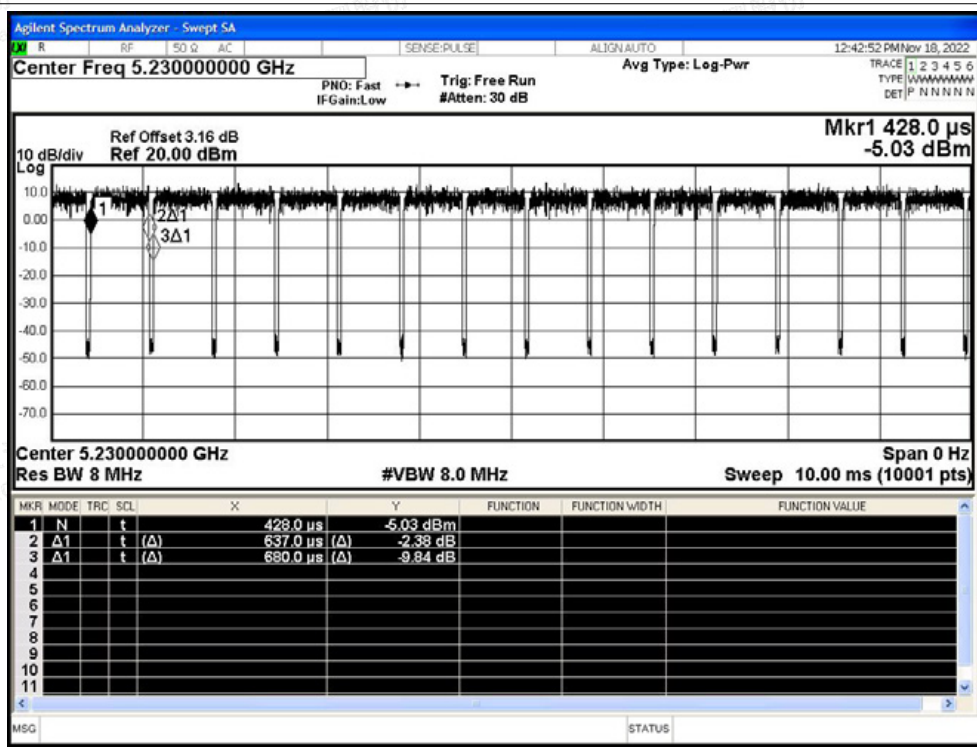




Duty Cycle NVNT ac20 5180MHz Ant1

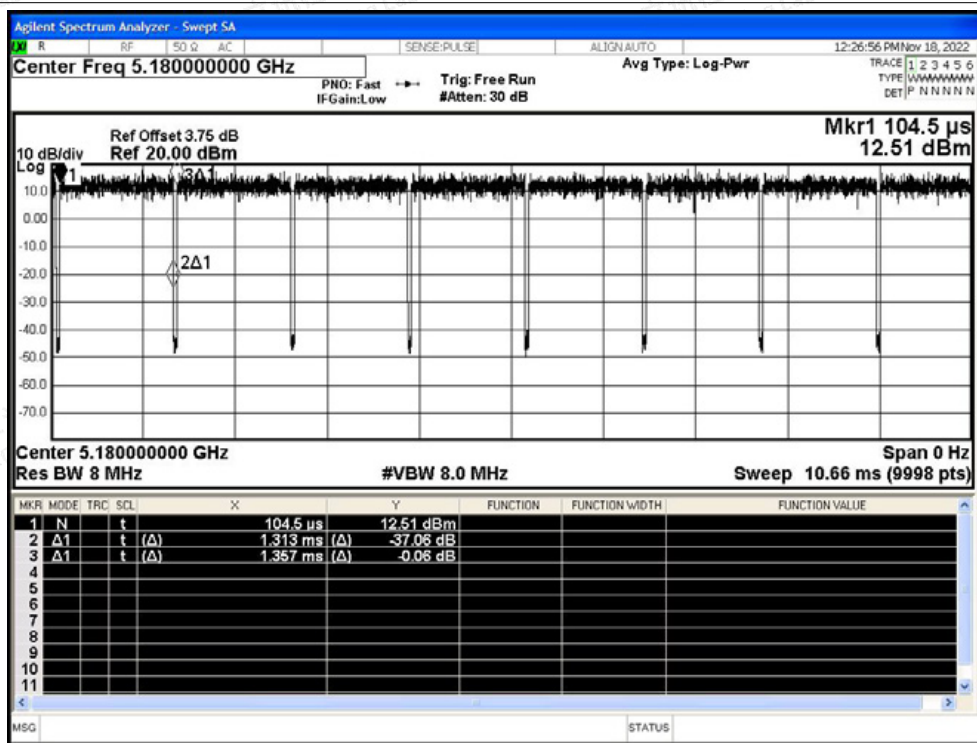


Duty Cycle NVNT ac20 5200MHz Ant1

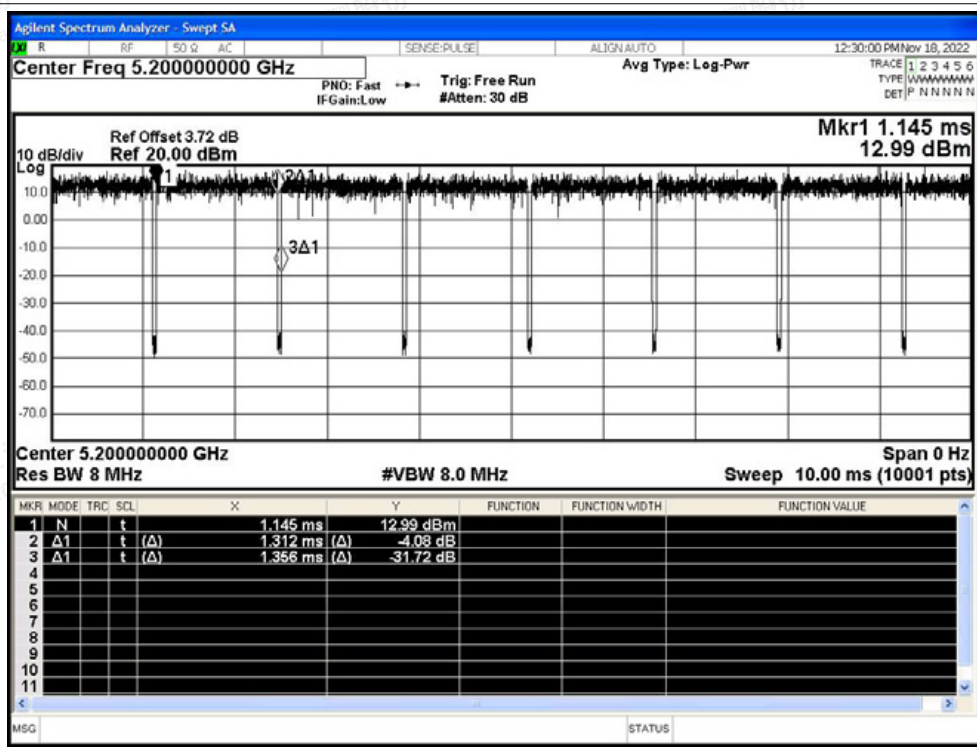




Duty Cycle NVNT ac20 5240MHz Ant1

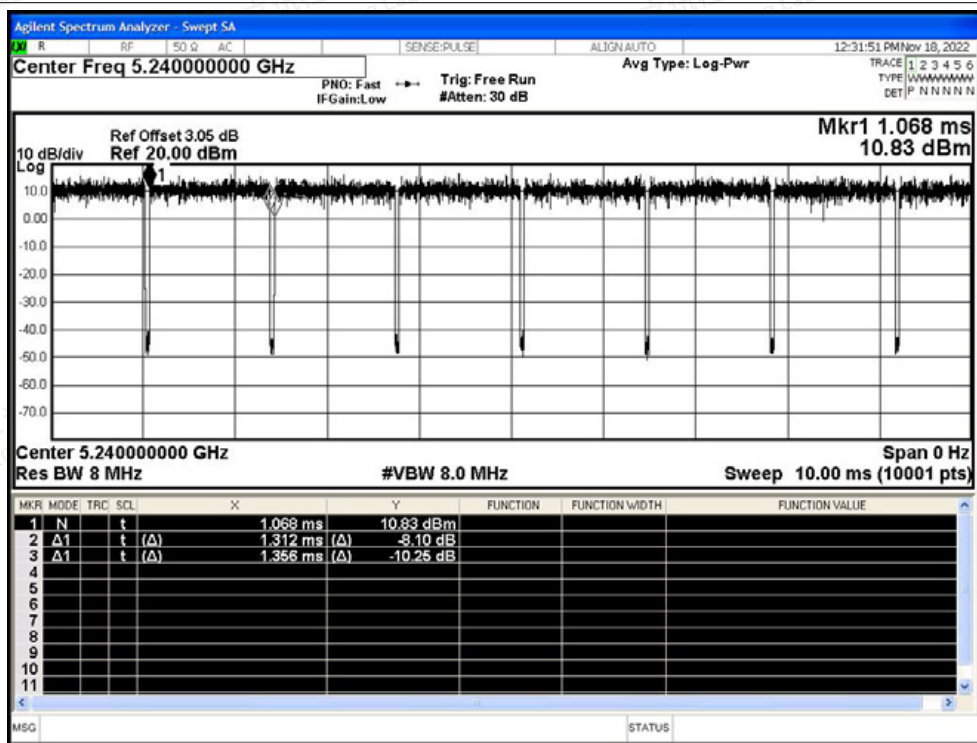


Duty Cycle NVNT ac40 5190MHz Ant1

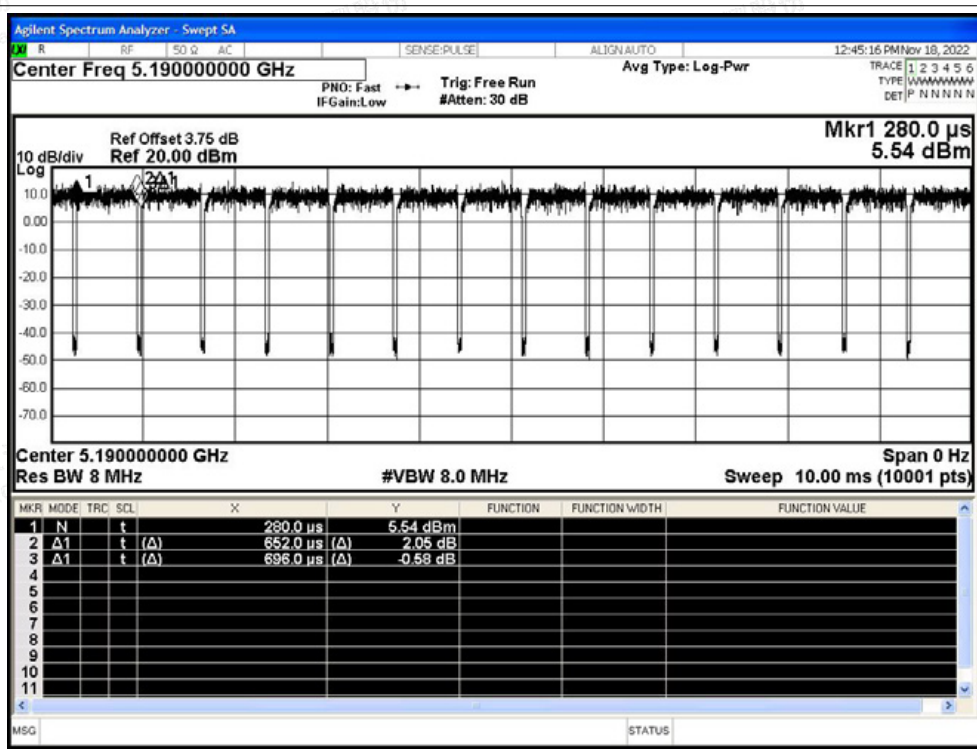



Duty Cycle NVNT ac40 5230MHz Ant1

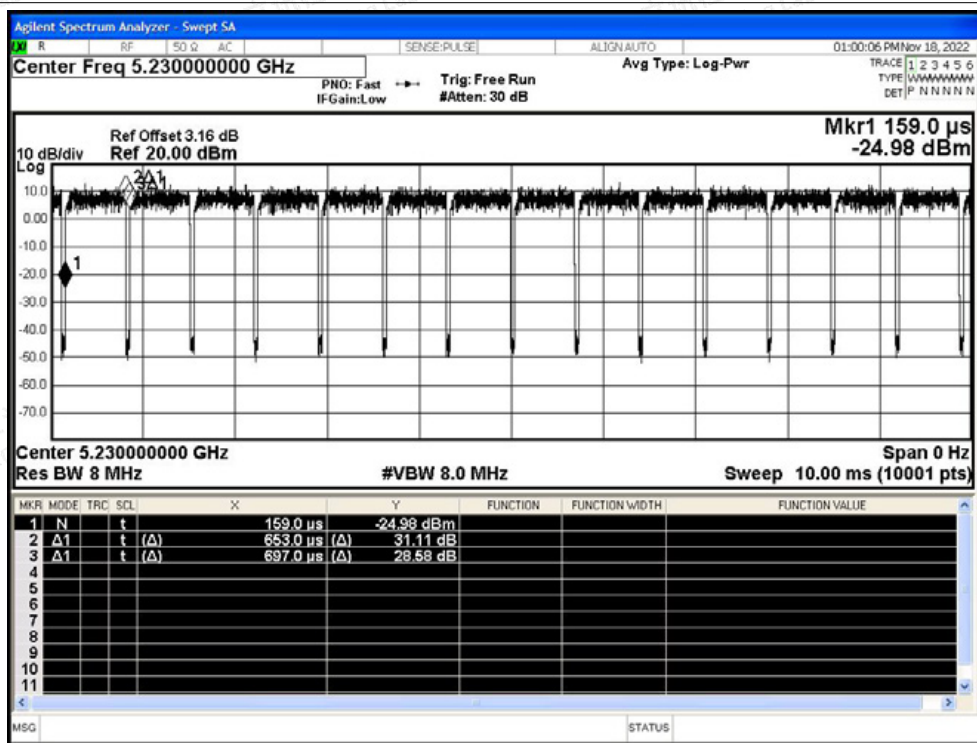

Duty Cycle NVNT ac80 5210MHz Ant1

