

12803 PARK ONE DRIVE HOME CEFE TEL: 1-888-610-2818
E-MAIL: SUPPORT@JTECHDIGITAL.COM

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future

- J-Tech Digital products are designed to make your A/V device use more convenient, comfortable and productive.
- The J-Tech Digital JTECH-WEX200 wireless HDMI extender allows the user to extend HD Audio & Video HDMI signals wirelessly up to 200 feet away to an HD capable display. The extender follows the TCP / IP standard Wireless Transport Protocol, so it has high transmission rate and strong anti-interference capability. The JTECH-WEX200 also supports HDMI mirror output and infrared remote-control extension. The JTECH-WEX200 is widely applicable to office presentations, lectures, education, conferences, residential entertainment and more.
- FEATURES:
- One TX can be paired with up to two JTECH-WEX200 receivers Transmitter features a local HDMI output port for local display Supports HDMI resolutions: 480P - 1080P@50/60Hz and SVGA - WUXGA
- Utilizes the 5G ISM frequency band for high-transmission data rate and anti-interference capabilities • Uses two external dual - gain antennas. Full HD 1080p transmits up to 200ft wirelessly in open space. (May be affected by the
- use environment) Extends wide-band infrared remote to control source device from display side Supports OSD for easy access to device status Simple Plug and Play installation, no software required

Includes web configuration interface

SPECIFICATIONS:

HDMI Audio Format.....

HDMI Max bandwidth....

HDMI Max baud rate.....

Wireless standard..

Wireless Band....

Max Data rates...

Input/Output TMDS signal.....

Input/Output DDC signal ......

Transmit Output Power(IPEX).....

Transmission distance.....

IR Carrier frequency.....

TX/RX Max working current .....

Storage Temperature range.....

Weight .....

Operating Temperature range.....

Case Dimension (L x W x H).....

Power adapter format Input.....AC 100V~240V 50HZ/60Hz, DC12A


Operating Humidity range ......10 to 90%RH (No Condensation)

Storage Humidity range......5 to 95%RH (No Condensation)

HDMI resolution ...

## PACKAGE CONTENTS:

1. HDMI Wireless Transmitter 1pc User manual 1pc 2. HDMI Wireless Receiver 1pc DC power adapter 2pcs 3. IR Transmitter cable 1pc

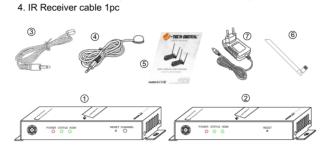

## FEATURES OF THE INTERFACE:

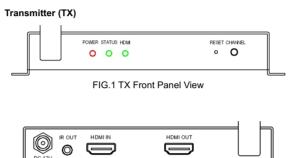


FIG.2 TX Rear Panel View

CHANNEL: Wireless channel switch button DC12V: 12V DC in jack IR OUT: Port for IR transmitter cable HDMI IN: HDMI input port

HDMI OUT: HDMI loop output port

**RESET:** Factory Reset Button

POWER: Power indicator

STATUS: System status indicator

HDMI: HDMI input/output status indicator

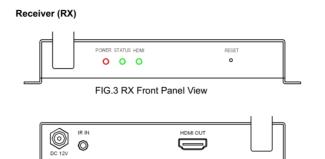


FIG.4 RX Rear Panel View

POWER: Power indicator STATUS: System status indicator HDMI: HDMI input/output status indicator **RESET:** Factory Reset Button DC12V: 12V DC in jack IR IN: Port for IR receiver cable HDMI OUT: HDMI output port

### OPERATION AND CONNECTION:

- 1. Connect one HDMI cable from the HDMI source device (set top box, DVD player, streaming device) into the HDMI input port of the HDMI wireless TX. 2. Connect one HDMI cable from TV/Monitor into the HDMI output port
- of the HDMI wireless RX. 3. Connect the IR Transmitter cable to the HDMI wireless TX's IR Out Port and the IR Transmitter cable must face the source device's infrared eye/sensor.
- 4. Connect IR Receiver cable to the HDMI wireless RX's IR In Port. 5. Connect 12V power supplies to the TX & RX, the POWER indicator will be illuminated when done successfully.
- STATUS indicator of TX and RX will be illuminated when the connection is successful. If the HDMI input or output signal is normal, the HDMI indicator light will also be illuminated. The STATUS

6. The extenders will automatically pair after being powered on. The

indicator flashes continuously during normal transmission. 7. If you are using multiple receivers, all receivers will be connected

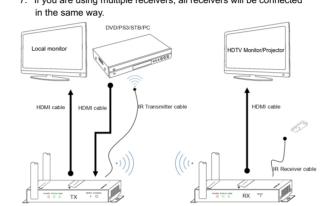


FIG.5 CONNECTION DIAGRAM

### Panel key operation instructions:

- 1. Changing Wireless Channel: Press the "CHANNEL" key on the front panel of TX to cycle through multiple 5GHz wireless channels. If the product works unsteadily or the picture is intermittent, please
- try a different channel. 2. Restore Factory Setting: Press and hold the RESET button for three seconds. The HDMI Status LED will flash three times and the device will restart. The OSD will show that Restore Factory Set is
- The Factory Reset Button is located at the bottom of the RESET hole found on the transmitter and receiver. Perform factory reset while the
- device is powered on. User will need to use a long and slim stick like a paper clip to press the RESET button.

### Note: You must reset transmitter and all receiversbefore they can be used again.


To prevent interference caused by a device using the same frequency, the Wireless HDMI Extender supports the set-up and adjustment of the operating channel and SSID via the WEB. For safety, the user should change the SSID and the password during the first login. Please follow the below steps:

1. Connect 12V power supplies to the transmitter and all receivers, and

- let them finish the pairing sequence. 2. Enable WiFi on the mobile phone / PC, search for and connect to
- SSID: JTD\_HDMI\_Wireless\_1 Enter the default password: 00000000. 3. Modify the IP address type of the mobile phone / PC to Auto (DHCP).
- segment range, e.g. 192.168.1.100. 4. Open the browser and scan the QR code or enter "192.168.1.10" in the

address bar to enterthe web GUI

as shown below:

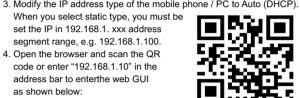



5. Enter the default login password: admin, click "Login" to open the settings interface. If you want to modify the login password, please click on the " Modify " button. After the password has been modified click "save" to save your changes and



6. If you have made an incorrect setting adjustment or forgot the set password, you can restore factory settings on both transmitter and

.....6.75Gbps

... 5Volts p-p (TTL)

....IEEE 802.11a/n

....5GHz ISM Band

.....20dBm Max

.....20-60KHz

....-5 to +45℃

....-20 to +60°C

.....5 x 5 x 0.98 (in)

....TX .359 lbs / RX.352lbs

.....2T2R up to 300Mbps

....up to 660m (in open space)

......0.5~1.5Volts p-p(TTL)

. External dual 3dBi gain antenna

JTECH-WEX200 up to 1080P@50/60Hz Please use the machine as instructed to preserve device longevity. 1. The machine should be placed in a location far from damp conditions, ....LPCM2.0/48KHz/16Bit high-temperatures and dust. Please also avoid erosive and oxidative ....225MHz

- 2. Avoid dropping, hitting or shaking the wireless extenders. 3. Touching the power adaptor with wet hands is prohibited. 4. Please hold the power adaptor head and do not pull the power cord when removing from an electrical socket.
- 5. Please turn the power off when the machines are not used for a prolonged period of time. 6. Please do not attempt to open or tamper with the internal components. 7. Please use the provided power adapter only.

Before power on, please check all connecting cables carefully. Please ensure that all cables are seated in their respective ports

No.	Problem Description	Solutions
1	No display	Ensure the TV is on and is connected to the extender via HDMI.     Please check the TX power supply     Make sure the TV is working regularly
2	Displays "Connecting"	Please check the RX power supply     Please ensure the WEB settings are set correctly (if customized)     Co-channel interference. Please select a new channel     Please power cycle both the transmitter and receiver

1. Check the signal source is powered on and output is normal.

2. Check the signal source output resolution Displays "No signal" (ensure it is supported)
3. Make sure the HDMI cable is properly 1. Please adjust the angle of the antenna or

	4	Transmission distance is short	2. Concrete walls, Brick, Wallpaper, Metal, Bulletproof glass will shorten the signal cover range or cause significant signal loss 3. Co-channel interference. Please select a new channel
	5	Image is not fluid	Please adjust the angle of the antenna or adjust the placement     Co-channel interference. Please select a new channel
	6	Can't find the SSID	Please check the RX and TX power supply     Please check whether the Phone/PC supports     G band     Factory default or turn off the power restart
		Can't login to	Please check the RX and TX power supply     Please check the IP type of mobile phone/PC

add the last page here (last page was provided in the Wechat group)

the Web settings 3. Please check the PC's IP is in 192.168.1.

XXX address range
4. Please try logging in with a different web browser



# 制作要求:

产品型号	KDEX0002M1说明书
材质	铜版纸
料号	A.5.MANUAL963
尺寸	90X130MM
颜色	黑白色
备注	
制作人和日期	2021.03.05

#### **FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.