



# ZETA<sup>®</sup> Low-Power Wide Area Networks

**ZETA Water Leak Sensor**

**Copyright Statement**

**ZiFiSense owns the copyright on this specification. No part of this specification may be reproduced in any form or means, without the prior written consent of ZiFiSense.**

**Disclaimer**

**This specification is preliminary and is subject to change at any time without prior notice. ZiFiSense assumes no responsibility for any errors contained herein. ZiFiSense is not responsible for any patent infringement of third party on its use or as a result of its uses. Other products/services not certified by the patent license, shall be deemed within patent ownership of ZiFiSense.**

**Table of Contents**

- 1. Product Description..... 4**
- 2. Applications..... 4**
- 3. Appearance..... 4**
- 4. Features..... 4**
- 5. Product parameters..... 5**
- 6. Packing List.....5**
- 7. Installation..... 6**
  - 7.1. Screw..... 6
  - 7.2. Adhesive 3M..... 8
  - 7.3. Cable Ties..... 9
- 8. Use of Device..... 12**
  - 8.1. Power on..... 12
  - 8.2. Support function..... 12
- 9. Common faults and handling..... 12**

## 1. Product Description

ZETA Water Leak Sensor is a low power dry contact sensor which uses electrodes to detect the leak water and generate dry contact signal, report immediately once it detects the leak water.

## 2. Applications

Water leak detection, such as elevator pit water alarm, water collection overflow of air conditioner, overflow of sewage wells

## 3. Features

- ✓ Wireless transmission
- ✓ Battery-powered, low power consumption
- ✓ Easy to install, high sensitivity
- ✓ Reliable detection
- ✓ Real-time transmission

**4. Product parameters**

Product No.	WDZ3ZT92/ WDZ1ZT92/ WDZ2ZT92	
Wireless Features	Transmission protocol	ZETA
	Frequency band	Sub-GHz, adjustable according to local regulations
	Output power	20dBm max, adjustable according to local regulations
Electrical Features	Power supply	Battery, 2*ER14505
	Battery capacity	2*2700 mAh
	Stand-by current	≤ 10 μA
	Working current	≤ 70 mA
Physical Features	Size	66*55*36 mm
	Sense cable	Customisable cable length
	Enclosure material	ABS
	Waterproof level	IP30
	Antenna	Monopole antenna
Working Environment	Operating temperature	-20℃ ~+60℃
	Storage temperature	-30℃ ~+85℃

**5. Packing List**

Motion Sensor	1
Probe sensor /Sense cable	1
Battery (ER14505)	2

## **6. Installation**

There are three installation methods: Screw, 3M Adhesive and cable ties.

### **6.1. Screw**


#### **6.1.1. Auxiliary material**

No.	Materials	Quantity
1	self tapping screw (M3*20)	2/device
2	#4 expanded plastic pipe	2
3	Percussion drill, #4 drill bit, hammer	1
4	slotted screwdriver, cross screwdriver	1

#### **6.1.2. Installation instructions**

- Open the device case

Use a slotted screwdriver to open the top cover from the bottom edge.

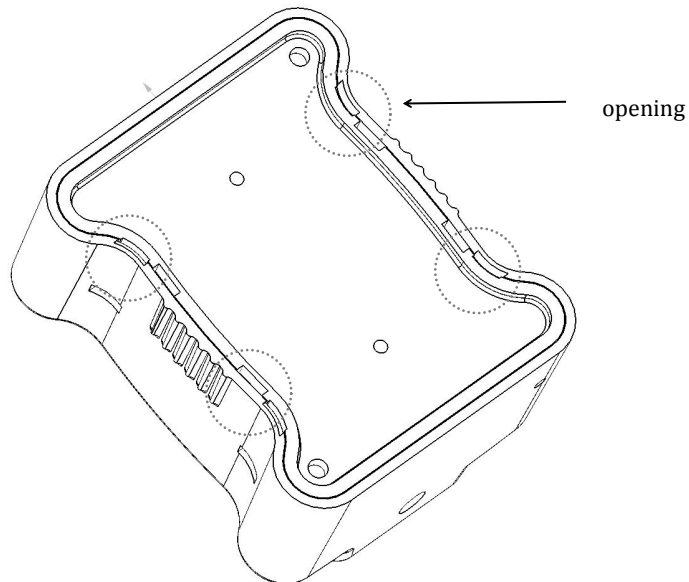


- Punching

Place the device in the mounting position, punch and insert the expanded plastic pipe.

- Fixation


## WDZ3ZT92

Use the self-tapping screws to secure the device in the mounting position.

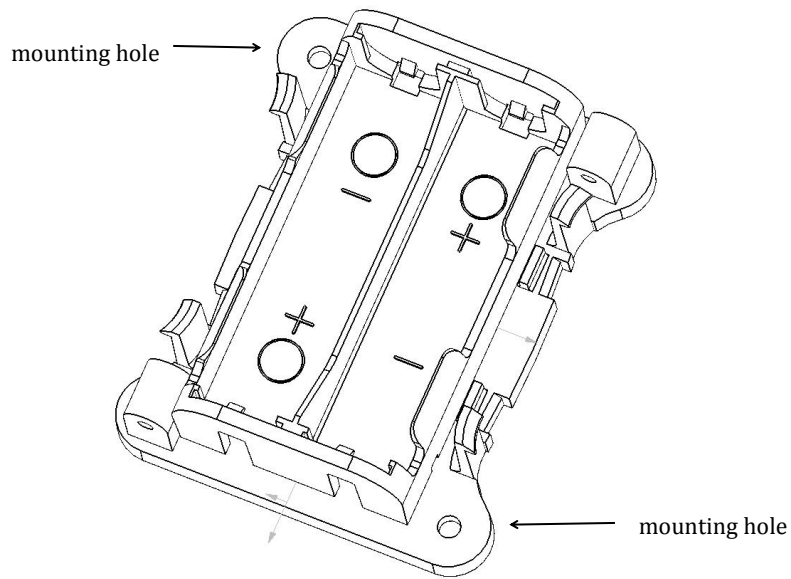

### ➤ Power on

Insert the power plug into the upper power socket, install two 14505 batteries (remove the insulation sheet for the existing battery), and close the upper cover.

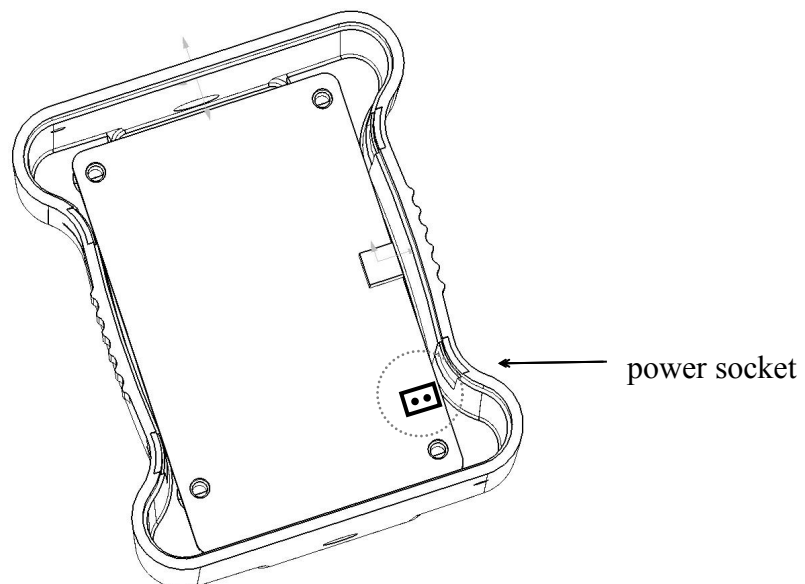

## 6.2. Adhesive 3M

### 6.2.1. Auxiliary material

No.	Materials	Quantity
1	3M seamless thickened double-sided adhesive	5CM
2	Slotted screwdriver, utility knife	2


### 6.2.2. Installation instructions

➤ Installation position

Select a flat mounting position, and clean it up.

➤ Open the device case


Use a slotted screwdriver to open the top cover from the bottom edge.

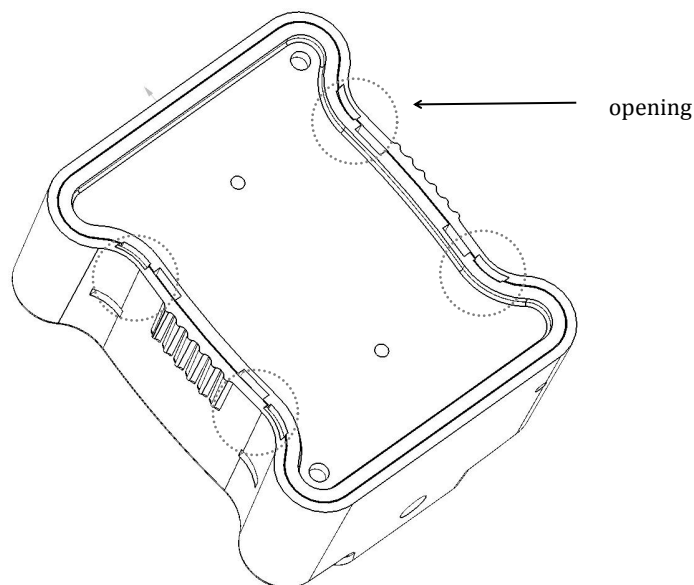

➤ Power on

Insert the power plug into the upper power socket, install two 14505 batteries (remove the insulation sheet for the existing battery), and close the upper cover.



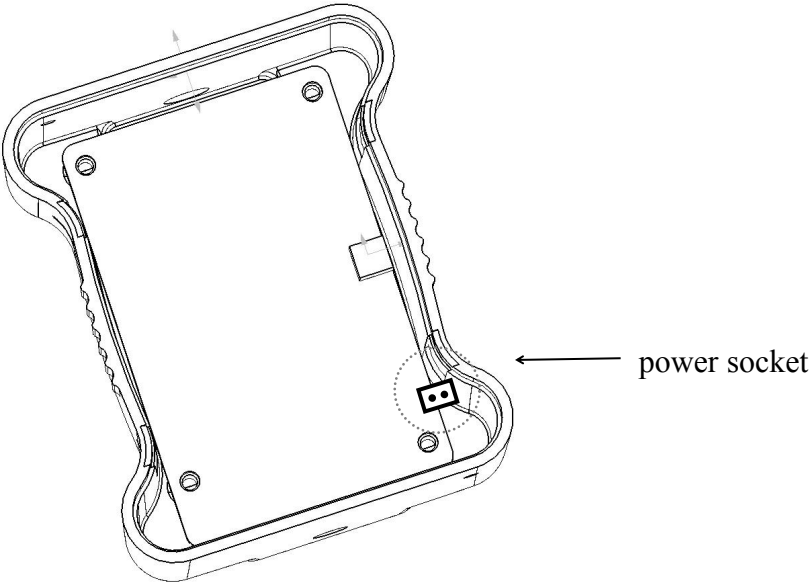

➤ Adhesive device

Take the appropriate amount of 3M adhesive, attach it to the back of the sensor, remove the protective film of the 3M adhesive, and install the device to the specified position.

**6.3. Cable Ties**

6.3.1.Auxiliary material


No.	Materials	Quantity
1	Metal cable ties (5*300mm)	2
2	Slotted screwdriver, utility knife	

6.3.2.Installation instructions

➤ Open the device case


Use a slotted screwdriver to open the top cover from the bottom edge.


**WDZ3ZT92**

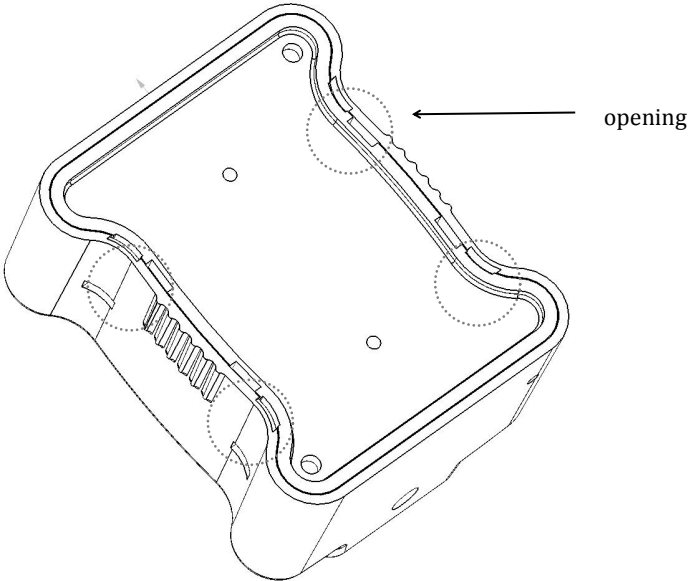

➤ **Fixation**


Pass the 2 cable ties through the device and secure to the installation rod

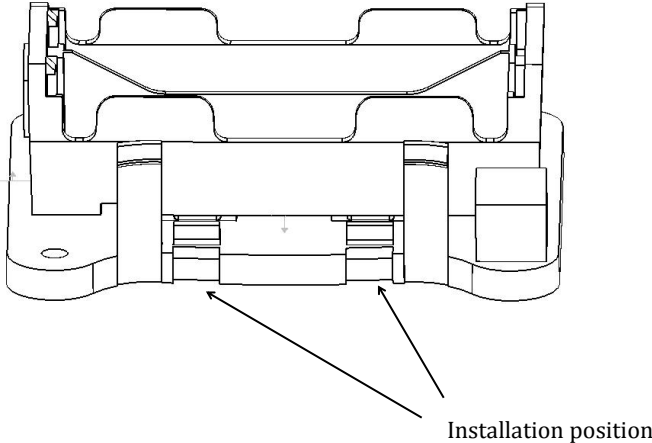

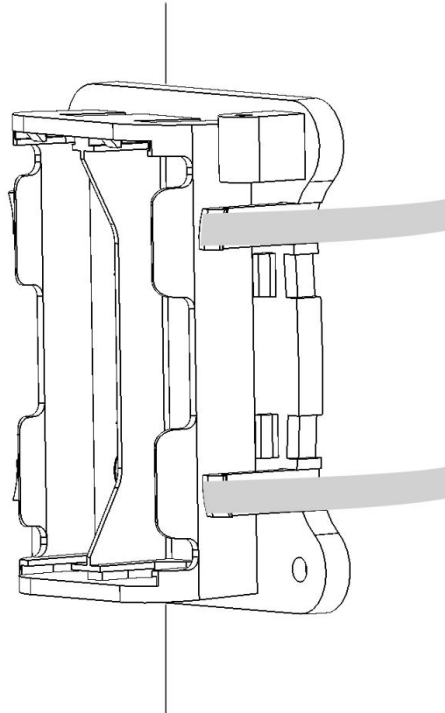

➤ Power on

Insert the power plug into the upper power socket, install two 14505 batteries (remove the insulation sheet for the existing battery), and close the upper cover.

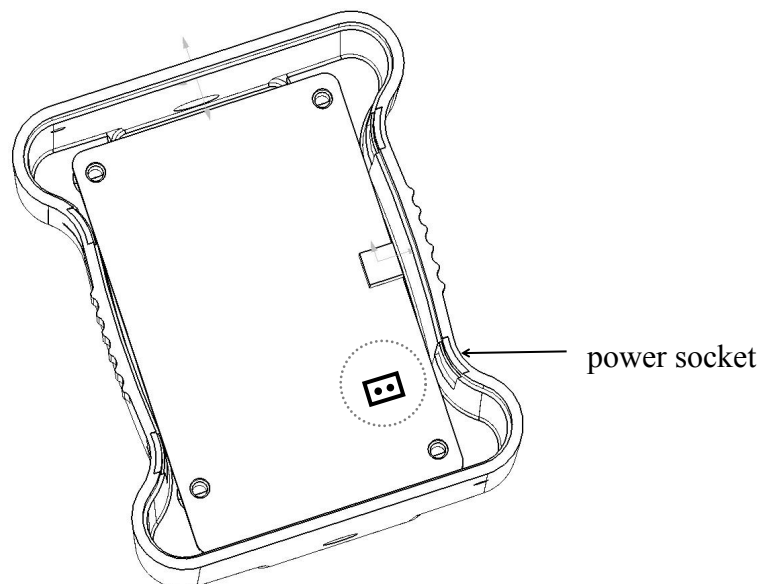

## 6.4. Installation of sense cable

If it is the model of WDZ3ZT, it is necessary to standardize the installation of the sense cable.

### 6.4.1. Auxiliary material

Material	No.
Wire nail	few
Hammer	1
Screwdriver	1

### 6.4.2. installation steps

- Plan the installation and routing position of the sense cable before installation.
- The two ends of the sense cable have their own interface plugs, and the plugs can be connected with the plugs connected to the sensors.
- The part of the sense cable is fixedly installed according to the planned line, and it is neat and tidy.

Note:

- Any one of the sense cable will trigger an alarm.
- The two black wires of the cable are conductive adhesives. If the resistance between the black wires is less than  $50M\Omega$ , the alarm will be triggered regardless of whether the wire is stripped.
- During the installation or post-maintenance process, if you need to re-wire the wiring.
- Avoid the two black wires to be contact too close.



## **7. Use of Device**

### **7.1. Power on**

Place the device within the coverage of the ZETA network, install the battery, and wait for the device to go online. After the device is online, the current sensor status is reported once.

## **7.2. Support function**

- Report/Query version number: After the power is turned on, the version number information is reported by default. After that, the query can be sent.
- Status report: Reports the heartbeat/alarm/de-alarm status, and reports a heartbeat status after power-on.
- Set/Query the alarm report period: The time when the sensor detects the periodic report when it is flooded (range: 0-255 minutes, default value: 0, 0 means the alarm is only reported once, no periodic report is required.)
- Set/Query Report Heartbeat Period: You can set or query the currently set heartbeat reporting period by minute. (Range: 1~65535 min, default: 24\*60 min)
- Set/Query Alarm Enable: Enable ON means that the alarm status needs to be reported when the threshold is exceeded. Enable Off means no alarm is required even if the threshold is exceeded.
- Set/Query Acquisition Period: The period during which the device collects sensor information (range: 0-65535 seconds, when the value is 0, it means real-time acquisition, default value: 5s).
- Query device status: Actively query the current status of the device, including whether it is flooded, and alarm enable information.

## **8. Common faults and handling**

- Ensure ZETA signal coverage
- Ensure that the device is powered on, and the ZETA network device management platform can observe that the ZETA module is on line
- Check the battery usage of the device. When the battery is low, replace the battery in time.

**FCC WARNING**

Any Changes expressly or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference,  
and (2) this device must accept any interference received, including interference that may cause undesired operation.

---

Shanghai, China

Room B, 20th Floor, No. 1098  
Dongdaming Road (Pujiang  
International Financial Plaza),  
Hongkou District, Shanghai  
+86 (0) 21-61320820

Xiamen, China

Room 803, Building A-05,  
Software Park Phase III, Jimei  
Distric, Xiamen, P.R. China  
+86 (0) 592 6070310

Cambridge, UK

3 Charles Babbage Road,  
Cambridge, CB3 0GT  
United Kingdom  
+44(0) 1223 491 099