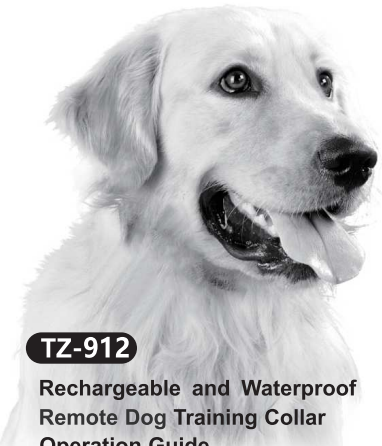
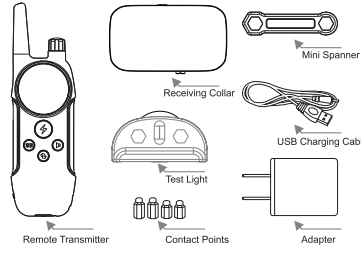

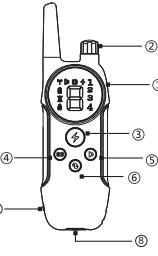
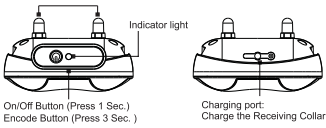
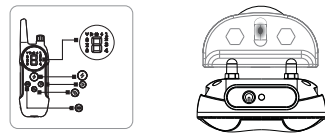


# 尺寸: 80\*105mm

 <p><b>TZ-912</b></p> <p><b>Rechargeable and Waterproof Remote Dog Training Collar Operation Guide</b></p> <p>Please read the entire guide before using</p>	<p><b>Thanks for choosing the Rechargeable and Waterproof Remote Dog Training Collar. Our mission is to provide you with the safe tools and techniques to train your dog.</b></p> <p><b>Contents</b></p> <ol style="list-style-type: none"> <li>Features</li> <li>How Does the Rechargeable and Waterproof Training Collar Work</li> <li>Precautions</li> <li>Components</li> <li>Key Definition</li> <li>Operation Guide             <ol style="list-style-type: none"> <li>Step 1 Preparing the Remote Transmitter</li> <li>Step 2 Preparing the Receiving Collar</li> <li>Step 3 Encoding the Remote Transmitter and Receiving Collar</li> <li>Step 4 Testing the Rechargeable and Waterproof Training Collar</li> <li>Step 5 Fitting the Receiving Collar to your dog</li> </ol> </li> <li>Frequently Asked Questions</li> <li>General Tips for Training Your Dog</li> <li>Common Weights of Different Dog Breeds</li> <li>Indicator &amp; Display</li> </ol>	<p><b>Features</b></p> <ol style="list-style-type: none"> <li>Rechargeable Remote Transmitter</li> <li>Rechargeable and Waterproof Receiving Collar</li> <li>2000 feet remote control range between Remote Transmitter and Receiving Collar.</li> <li>Beep Mode activates a correcting tone on the Receiving Collar</li> <li>Adjustable vibration intensity level from 1-8 level</li> <li>Adjustable static shock intensity level from 1-8 level (optional)</li> <li>Power saving modes:             <ul style="list-style-type: none"> <li>The Receiving Collar will go into Standby Mode if it's idle for more than 5 mins. Any movements will activate the Receiving Collar.</li> <li>The Transmitter will go into Standby Mode ( ) will be light off with 30s, ( ) will be light off with 1min).</li> </ul> </li> <li>Press ( ) button to re-activate it from Standby mode.</li> <li>The Remote Transmitter can be used to control up to 4 Receiving Collars.</li> <li>2 pairs of metal contacts (1 short and 1 long) are included to suit the length of your dog's hair.</li> <li>The Transmitter with lock key function.</li> </ol> <p><b>How does the Rechargeable and Waterproof Dog Training Collar Work</b></p> <p>The Rechargeable and Waterproof Training Collar has been proven to be a safe, comfortable, and effective training system for all dogs weighing over 15lbs. This system allows you to control your dog within a range up to 2000 feet. At the press of a button, the Remote Transmitter sends signal to the Receiving Collar and activates a Beep, a Vibration or a Static Shock correction output. By using the Training Collar properly, you can correct much of your dog's undesired behavior and teach basic and advanced obedience commands.</p>	<p><b>Important:</b> the Training Collar has an effective range up to 2000 feet. Hold the Remote Transmitter horizontally away from your body to achieve the optimum range. Terrain features, weather, vegetation, transmission from other radio devices and other factors may affect the range of the Remote Transmitter.</p> <p><b>Precautions</b></p> <p><b>DO NOT</b> use this product for aggressive dogs or vicious animals.</p> <p><b>Risk of skin damage.</b> It's important to fit the collar properly. A collar that is fitted too tightly or worn for too long may harm your dog's skin. This condition, which ranges from redness to pressure ulcers, is commonly known as bed sores.</p> <p><b>CAUTION</b></p> <ul style="list-style-type: none"> <li>Do not let your dog wear the collar for more than 12 hours per 24-hour period.</li> <li>If possible, gently reposition the collar on your dog's neck every 1 or 2 hours.</li> <li>Never attach a lead to the Receiver Collar, as this would cause excessive pressure on the contact points.</li> <li>When using a separate collar to connect a leash, please ensure that it does not put excessive pressure on the electronic collar.</li> <li>Examine your dog's neck daily for signs of chafing or soreness.</li> <li>If a rash or sore is found, stop using the collar till the injured skin has been healed.</li> <li>If the condition persists for more than 48 hours, consult your veterinarian.</li> <li>If possible, please use the Beep Mode or Vibration Mode at first, then can try Static Shock function.</li> </ul> <p>Please ensure that you charge both the Receiving collar and the Remote Transmitter before using! To extend the battery life of this product, please charge them per month if you do not intend to use it for a long period of time.</p>	<p><b>Components</b></p> <p><b>TZ-912</b></p>  <p><b>How to change the contact point to the Receiver Collar</b></p> 
<p><b>Key Definition</b></p>  <ol style="list-style-type: none"> <li>LED screen</li> <li>Level rotary knob</li> <li>Shock button</li> <li>Vibration button</li> <li>Beep button</li> <li>Channel button</li> <li>Lock key switch</li> <li>Charging port</li> </ol> <ul style="list-style-type: none"> <li>□ 1-8 level</li> <li>▢ Beep mode</li> <li>■ Vibration mode</li> <li>⚡ Static shock mode</li> <li>▼ Singal mark</li> <li>● Full battery</li> <li>⊗ Low battery</li> <li>🔒 Key lock</li> <li>🐕 Dog 1</li> <li>🐕 Dog 2</li> <li>🐕 Dog 3</li> <li>🐕 Dog 4</li> </ul> <ol style="list-style-type: none"> <li>LED Screen:             <ul style="list-style-type: none"> <li>Beep mode: When this symbol (▢) is displayed, press the (▢) button to activate a Beep tone on the Receiving Collar.</li> <li>Vibration Mode: when this symbol (■) is displayed, press the (■) button to activate Vibration. Use the level Up/ Down buttons to adjust the intensity of the vibration from 1 to 8.</li> <li>Static Shock Mode: when this symbol (⚡) is displayed, press the (⚡) button to activate Static Shock. Use the level Up/ Down buttons to adjust the intensity of the shock from 1 to 8.</li> <li>Signal: when this symbol display, means the transmitter is launching signal.</li> <li>Full battery: when this symbol (●) is display when charging, means the battery is in full.</li> </ul> </li> </ol>	<ul style="list-style-type: none"> <li>Low battery: when this symbol (⊗) is display, means the transmitter is in low battery and need to be recharged.</li> <li>Key lock: when this symbol (🔒) is display, mean the transmitter is under key lock.</li> </ul> <ol style="list-style-type: none"> <li>Level rotary knob: they are used to adjust the Intensity of the Vibration or Shock from the lowest level 1 to the highest level 8.</li> <li>3/4/5. Shock/Vibration/Beep button: press this button to launch the correct signal.</li> <li>Channel button: press this button to change between the 1-4 Receiving Collar (if applicable).</li> <li>Key Lock switch: push up/down the switch to lock/unlock the key function.</li> <li>Charging port: plug the USB charging cable into the port to charge the Remote Transmitter.</li> <li>Lithium battery: 3.7V 500mAh for the Remote Transmitter 3.7V 250mAh for the Receiving Collar</li> <li>Operating Frequency: RF433 MHZ</li> <li>Contact points: 2 pairs of metal contacts to be chosen to suit the length of your dog's hair.</li> <li>Mini Spanner: a tool to screw/unscrew contact points on the electrodes.</li> </ol> <p>Contact Points: Deliver vibration / safe static correction</p>  <p>On/Off Button (Press 1 Sec.) Encode Button (Press 3 Sec.)</p>	<p><b>Operation Guide</b></p> <p><b>Step 1 Preparing the Remote Transmitter: Charging the Remote Transmitter</b></p> <ol style="list-style-type: none"> <li>Plug the USB Charging Cable into the Charging port.</li> <li>Plug the Adapter into a standard outlet.</li> <li>The number ( ) in LCD screen will be lighting circularly when charging.</li> <li>The LED screen will show (■) once its fully charged with 2.5 hours. Remove the USB Charging Cable.</li> <li><b>Low battery indicator:</b> The LED screen will show (⊗) and flash 30seconds, then transmitter will be turned off automatically.</li> </ol> <p><b>How to use the Remote Transmitter</b></p> <ol style="list-style-type: none"> <li>Push down the key lock switch, the LED screen light.</li> <li>Press Shock/Vibration/Beep button, the LED screen will display (▢ ▢ ▢ ▢), which mean the corresponding mode is activated.</li> <li>Rotating to set the intensity of shock or vibration.</li> <li>Select different channels for 1 - 4 Receiving Collars.</li> </ol> <p><b>Power Saving Mode:</b> the Remote Transmitter will go into Standby Mode if it is idle for 1 min. The LED screen on the Remote Transmitter will not display anything in this case ( ) will be light off with 30s, ( ) will be light off with 1min), press any button to re-activate it.</p> <p><b>Lock Key function:</b> Push up the lock switch, the (🔒) will flash for 6 seconds, then it goes into key lock mode, and it won't be activated anymore, the (🔒) will flash for 6 seconds again if any button be pressed. Push down the lock switch, the Transmitter will on work.</p> <p><b>Step 2 Preparing the Receiving Collar: Charging the Receiving Collar</b></p> <ol style="list-style-type: none"> <li>Remove the rubber cover and plug the USB Charging Cable into the charging port.</li> <li>Plug the Adapter into a standard outlet.</li> </ol>	<ol style="list-style-type: none"> <li>The red LED will keep lighting when the Receiving Collar is charging.</li> <li>The green LED will be lighting once it's fully charged with 1.5 hours.</li> <li>Remove the Charging Cable, and put back the rubber cover.</li> </ol> <p><b>Low battery indicator:</b> The red LED will be flash with 30seconds, then Receiving Collar will be turned off automatically.</p> <p><b>How to use the Receiving Collar:</b> Press the On/off button to turn the Receiving Collar on, the green indicator light will blink.</p> <p><b>Power Saving Mode:</b> The Receiving Collar will go into Standby Mode if it is idle for more than 5 mins. Any movements will activate the Receiving Collar. If the Receiving Collar does not be activated when you press the (▢ ▢ ▢ ▢) on Transmitter, and the Green LED on receiving collar is not on, then gently shake the Receiving Collar, the Receiving Collar will be activated and the Green LED light will illuminate.</p> <p><b>Step 3 Encoding the Remote Transmitter and the Receiving Collar:</b></p> <ol style="list-style-type: none"> <li>Push down the lock switch to make sure the Transmitter in on work status.</li> <li>Press the ( ) to cho</li> <li>Press the On/off button to turn on the Receiving Collar until the red and green indicator light blink alternately, then press any button of Beep/Vibration/Shock to encode, the green indicator light will blink, they are encoded su</li> </ol>	<p><b>Note:</b> Most of the Rechargeable and Waterproof Training Collars have already been encoded before leaving the factory. If so, just press any button on the transmitter to activate, then press the ( ) with 1sec on receiving collar to turn on it, after that, you can test the function refer to step 4. (Page 9)</p> <p><b>Step 4 Testing the Rechargeable and Waterproof Training Collar: Testing the Static Shock Function</b> The static impulse generated by the Receiving Collar cannot be seen by naked eyes. Test whether the Static Shock Function works by using the following procedure:</p> <ul style="list-style-type: none"> <li>Remove the Test Light from the package and connect it to the contact points on the receiving collar.</li> <li>Press the (⚡) button on Remote Transmitter to launch Static Shock signal, if the Test Light flashes, the Static Shock Function is working correctly.</li> <li>The intensity of the Static Shock can be adjusted by rotating the rotary knob from level 1-8.</li> </ul> 



**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.